



ASSEMBLY INSTRUCTIONS

ITEM CODE: WF310555

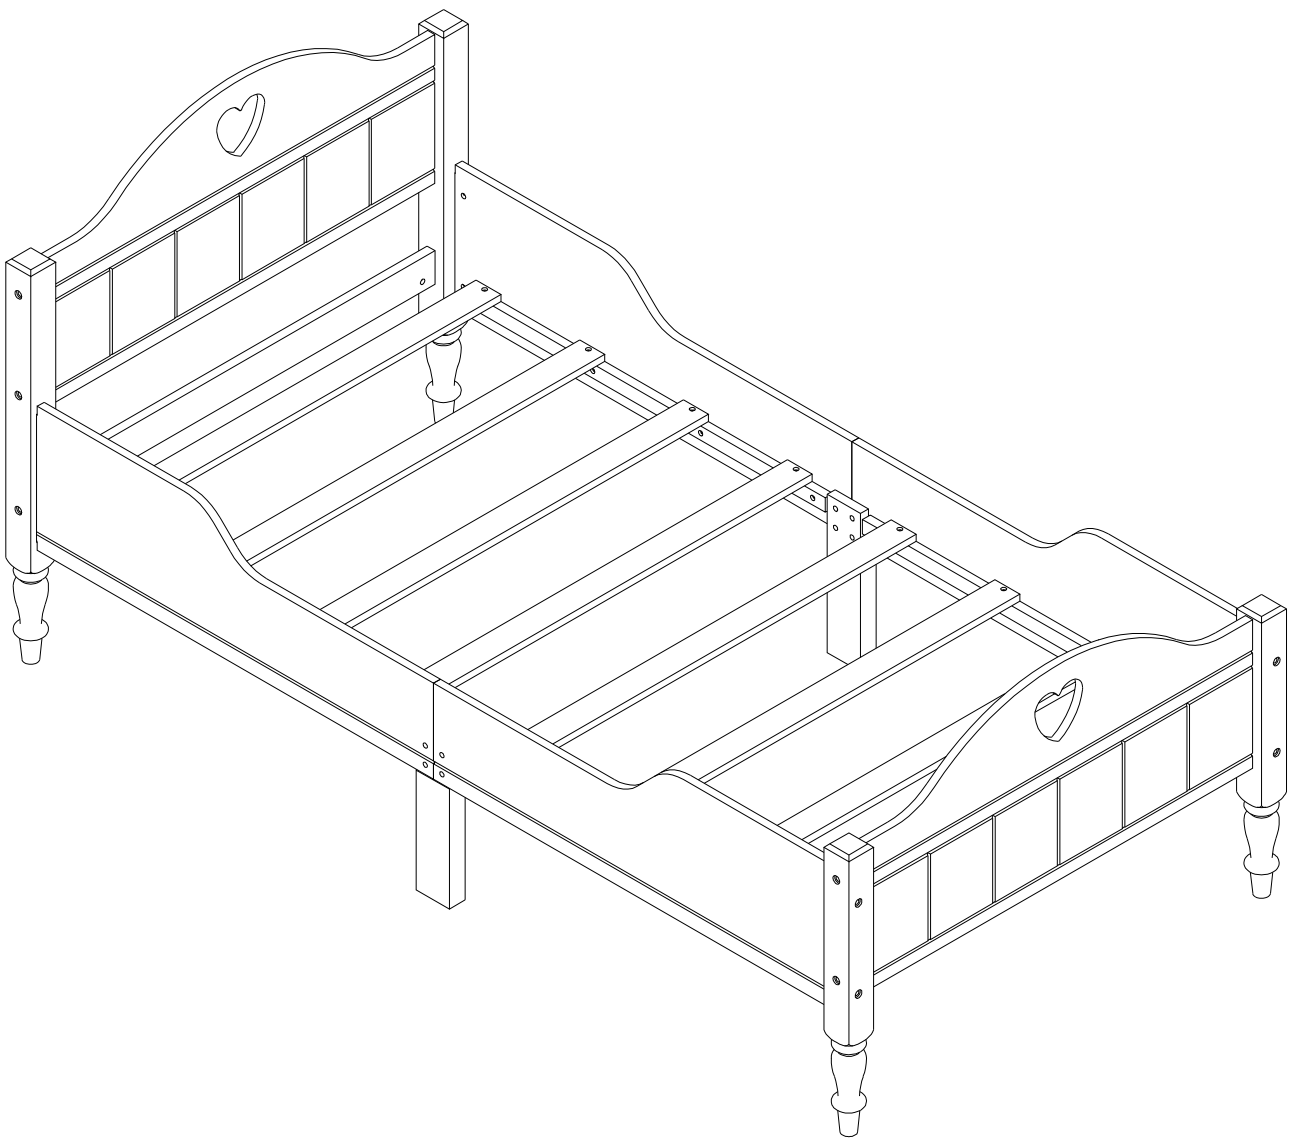

DETAIL VIEW

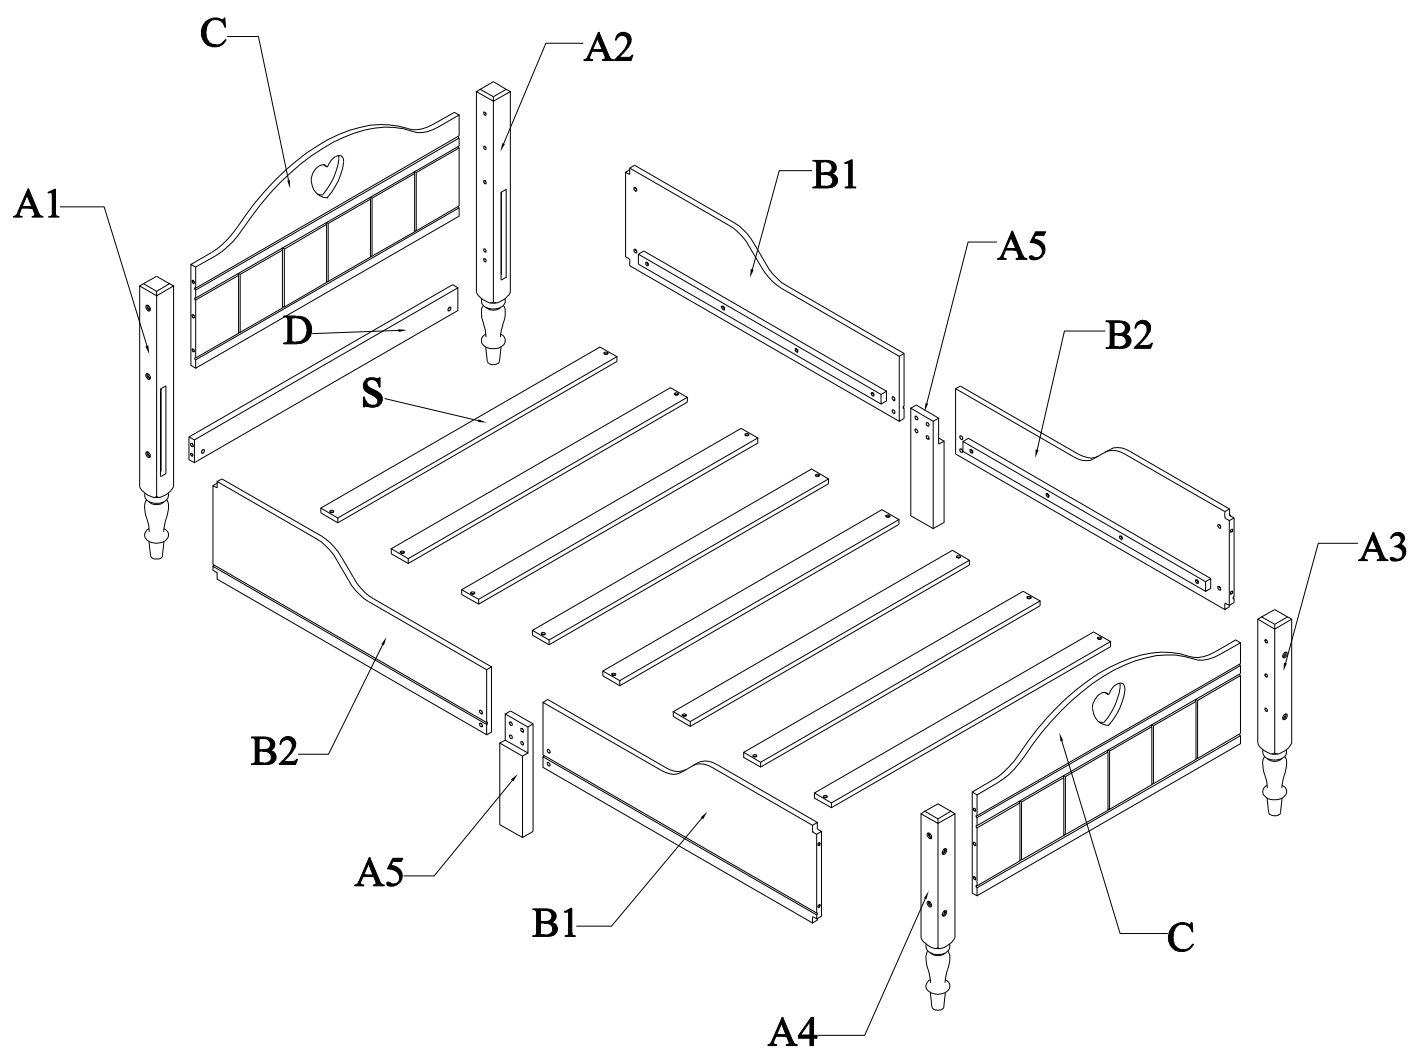

BOX 1: WF310555

A1



Front leg - left (1pc)

A2



Back leg - left (1pc)

A3



Back leg - right (1pc)

A4




Front leg - right (1pc)

A5




Middle leg (2pcs)

B1

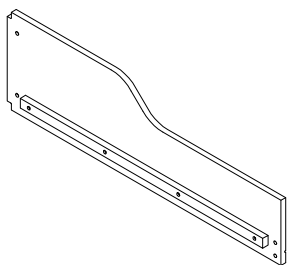


Side rail - left (2pcs)

B2

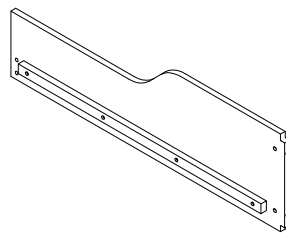


Side rail - right (2pcs)

C

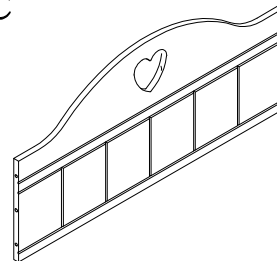


Head&Footboard panel(2pcs)

D

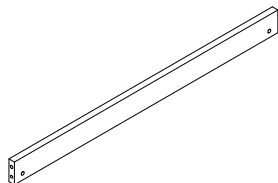






Horizontal rail (1pc)


S

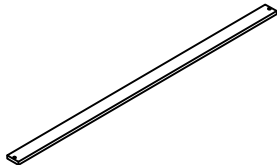

Slats (8 pcs)

HARDWARE LIST: WF310555

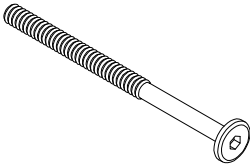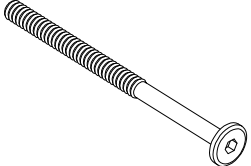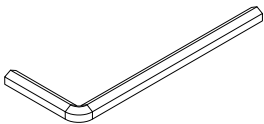
1  Hex - Head bolts Ø1/4" * 110- 10 pcs	2  Hex - Head bolts Ø1/4" * 90- 8 pcs	3  Hex - Head bolts Ø1/4" * 30- 8 pcs	4  Horizontal - Hold bolts Ø1/4" - 18 pcs
5  Canopy head though Ø1/4" - 8 pcs	6  Wood dowel Ø8 * 30 - 6 pcs	7  Allen key K4 - 2 pcs	8  Wood crews M4 * 30 - 16 pcs



Assembly Tools Required (Not Included)

STEP 1

1

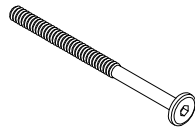

Hex - Head bolts
Ø1/4" * 110- 6 pcs

4




Horizontal - Hold bolts
Ø1/4" - 6 pcs

6




Wood dowel
Ø8 * 30 - 4 pcs

7



Allen key
K4 - 1 pcs

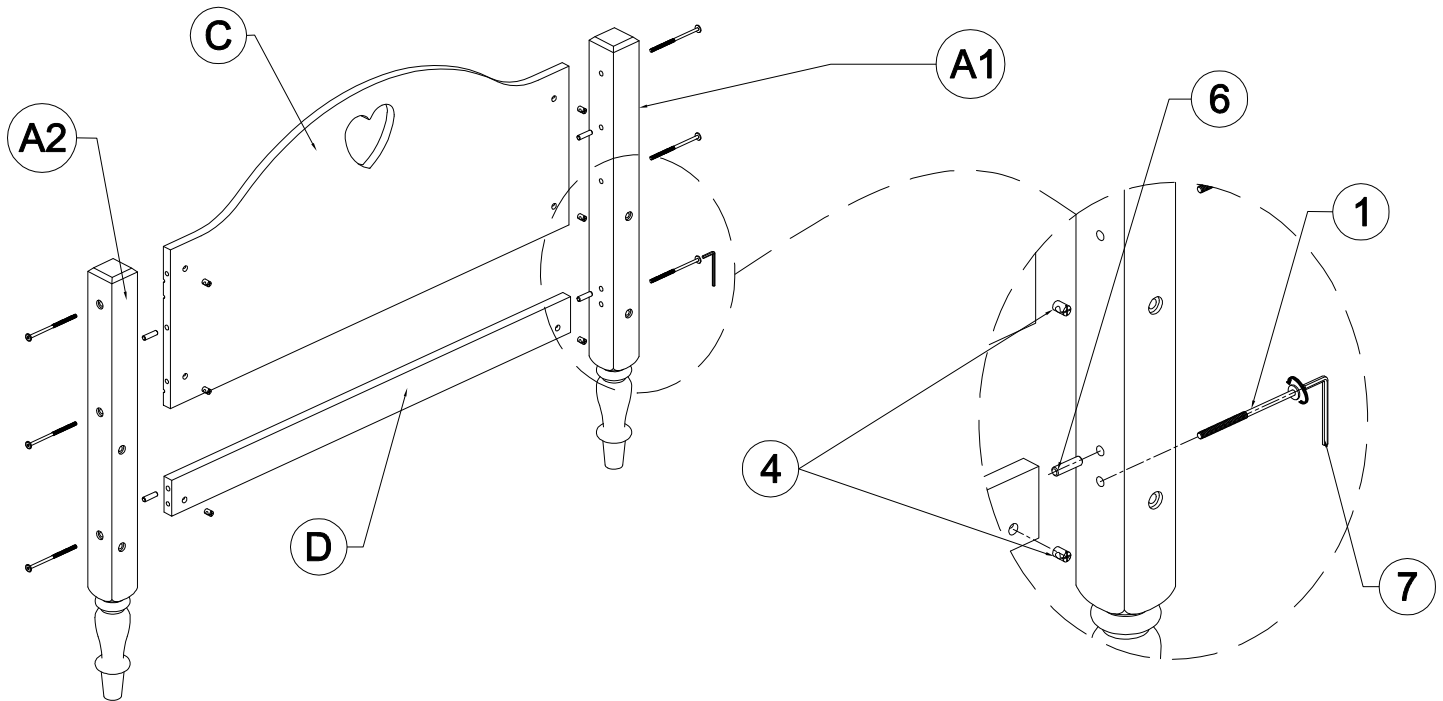

STEP 2

1



Hex - Head bolts
Ø1/4" * 110- 6 pcs

4




Horizontal - Hold bolts
Ø1/4" - 6 pcs

6




Wood dowel
Ø8 * 30 - 4 pcs

7



Allen key
K4 - 1 pcs

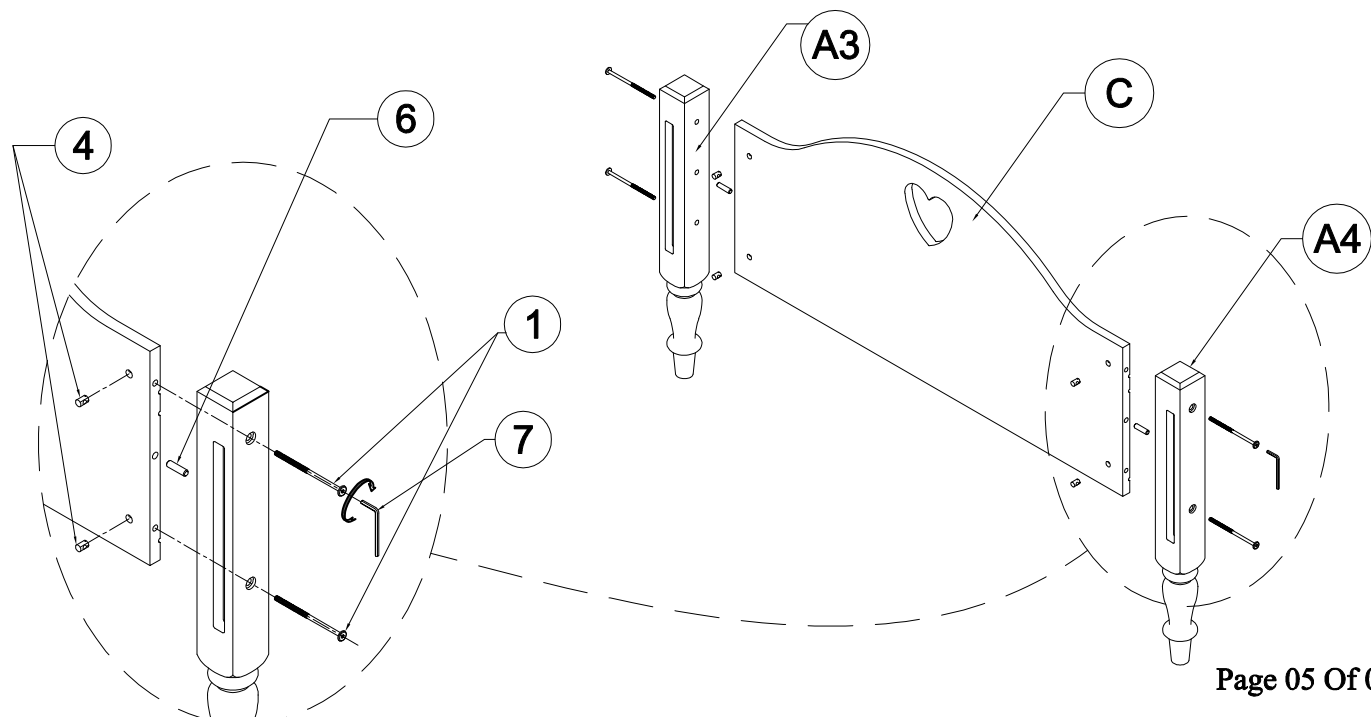

STEP 3

3




Hex - Head bolts
Ø1/4" * 30- 8 pcs

5




Canopy head though
Ø1/4" - 8 pcs

7

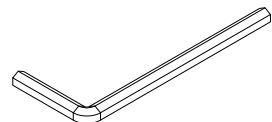


Allen key
K4 - 2 pcs

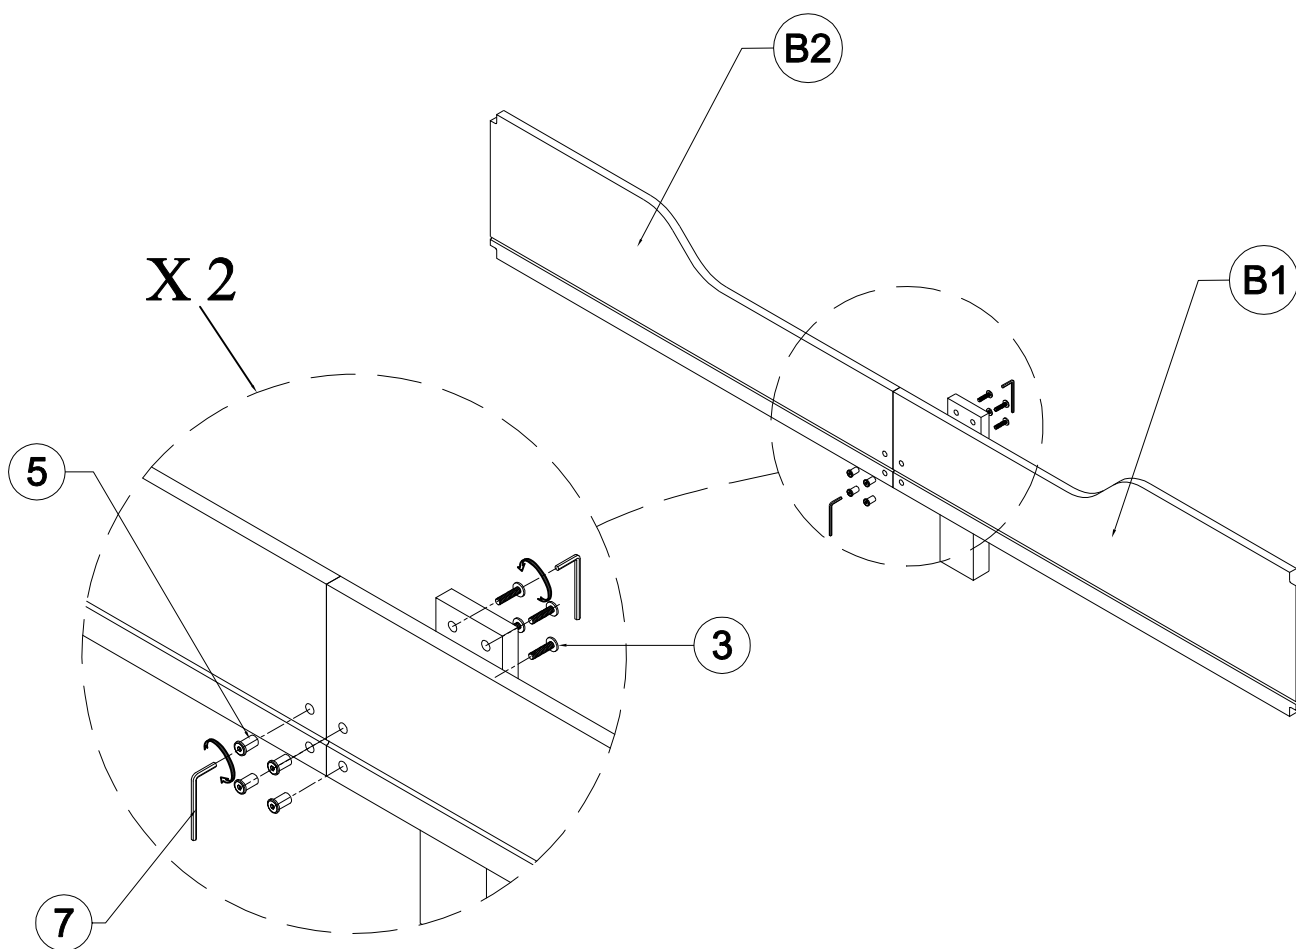

STEP 4

2

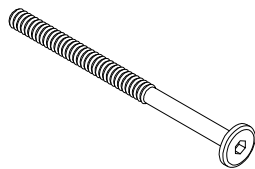


Hex - Head bolts
Ø1/4" * 90- 8 pcs

4




Horizontal - Hold bolts
Ø1/4" - 8 pcs

7

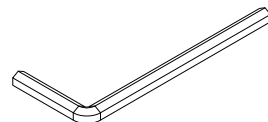

Allen key
K4 - 1 pcs

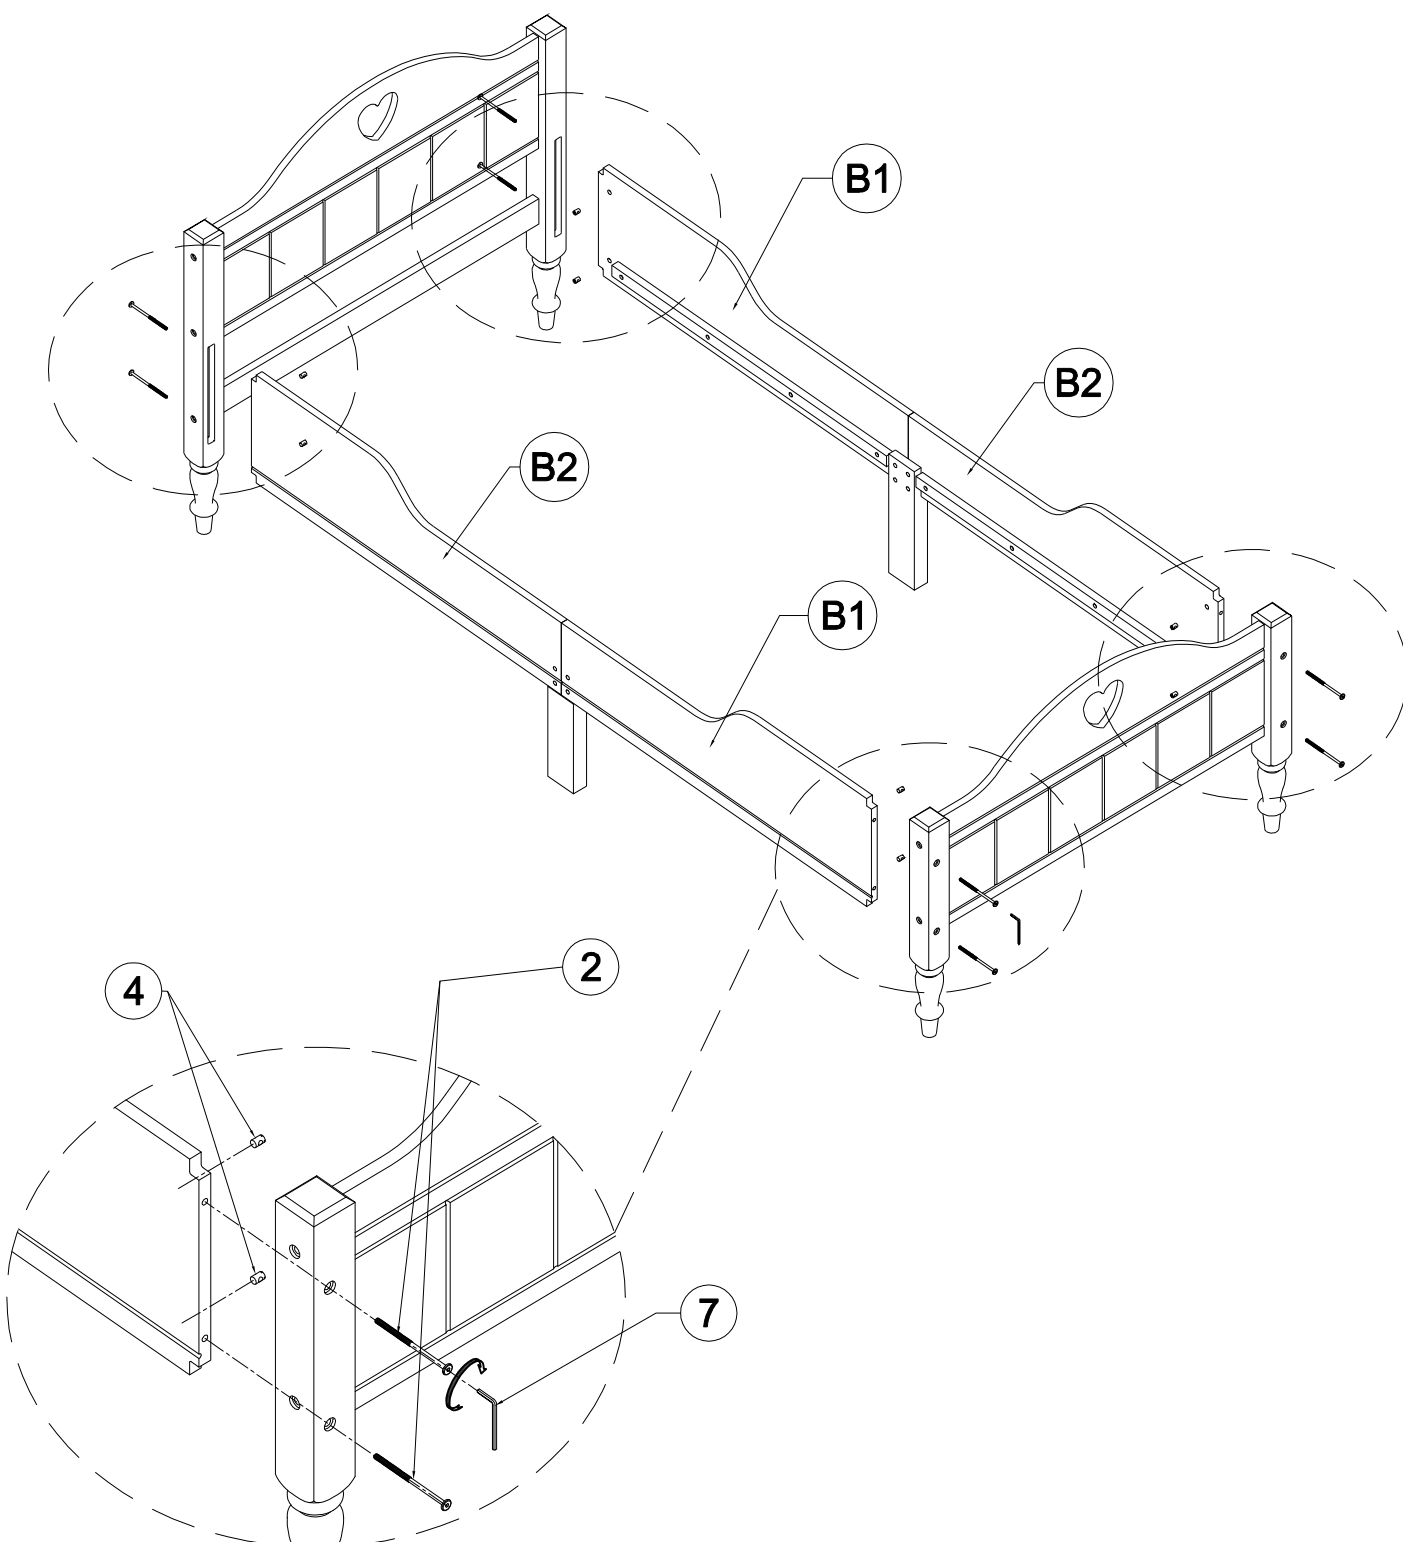

STEP 5



The distance between the slats is 7.5 inch

8



Wood crews
M4 * 30 - 16 pcs

8

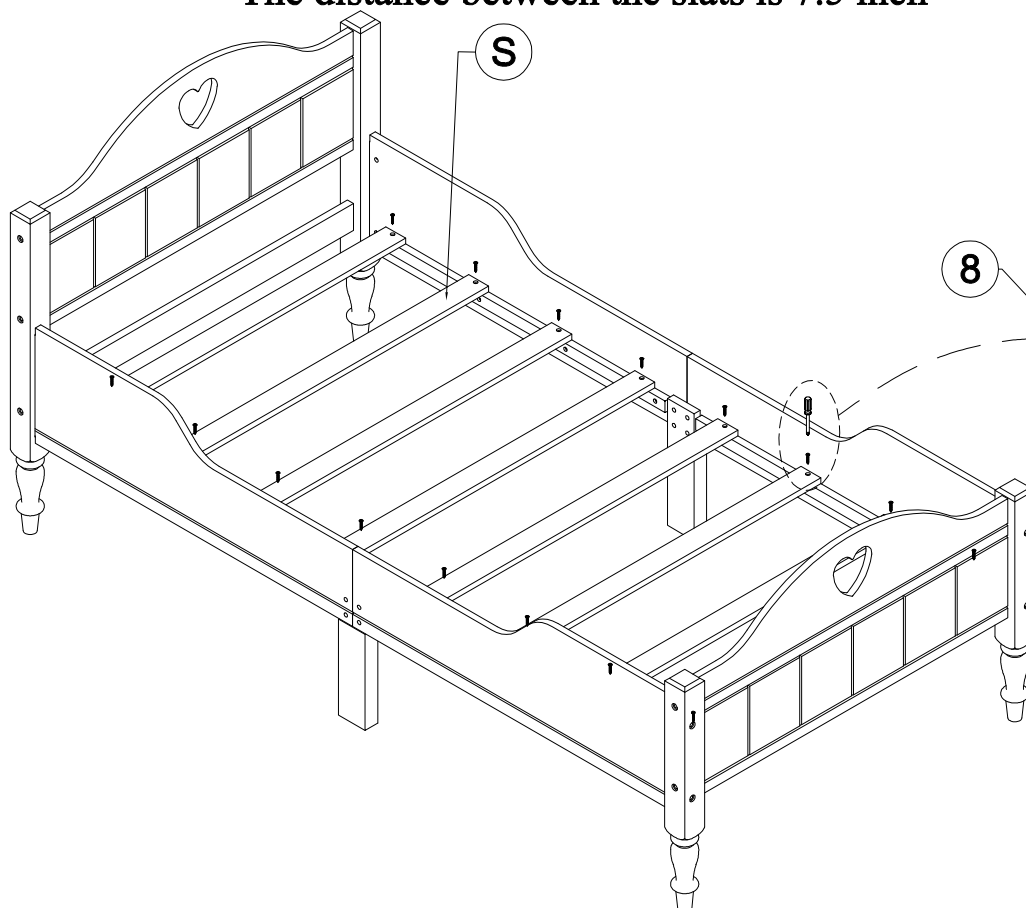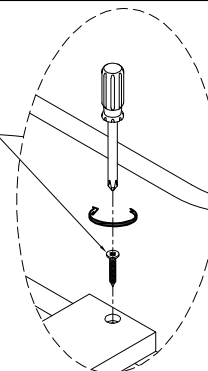

STEP 6

COMPLETED

