


Loft bed



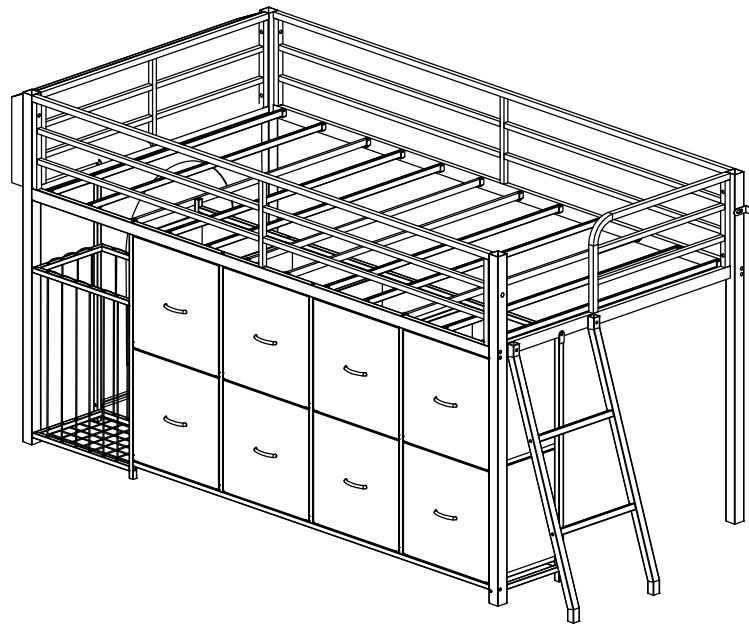


CAUTION:When tightening the screws,tighten sequentially.
Do not tighten any screws fully and then towards the next one.
When every part is OK,then tighten all the screws.



AJ-DJ504950





Version : 1.0

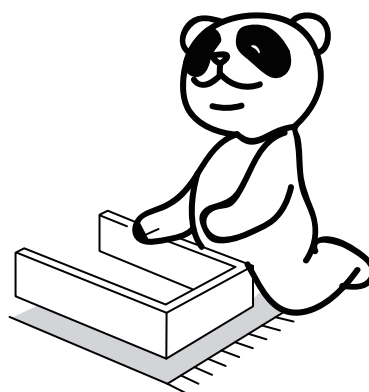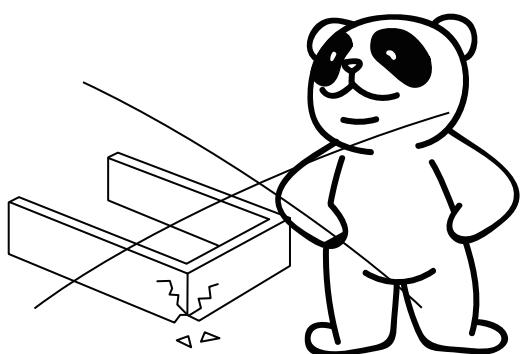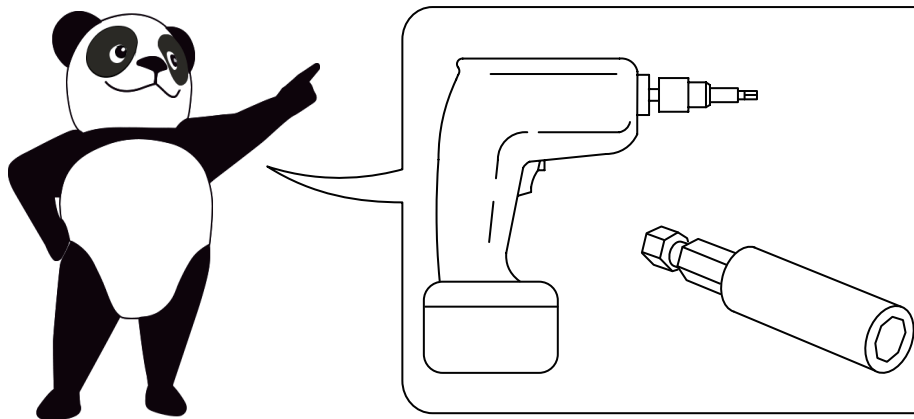

Violent installation is prohibited





















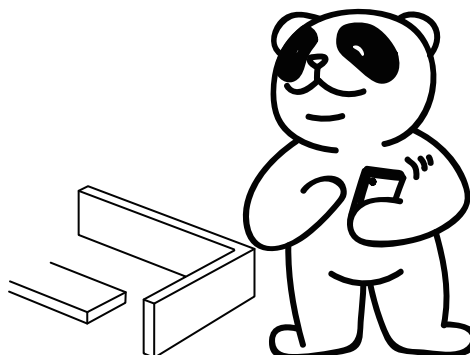
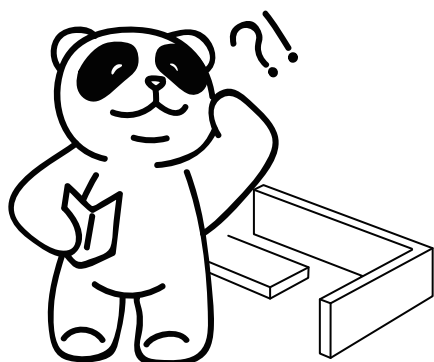


Please call if you need help

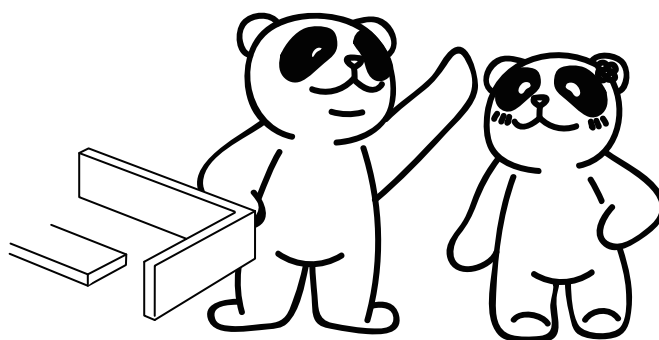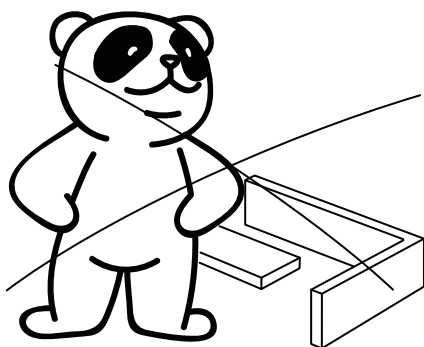


Multi-person cooperation is recommended


Assembly Instruction

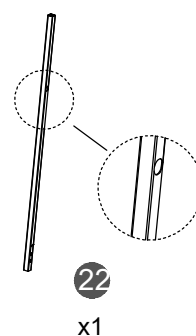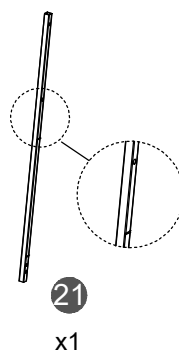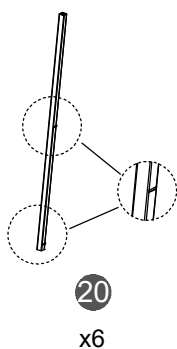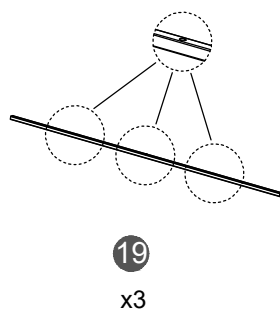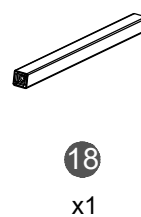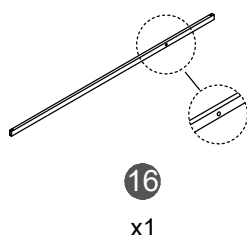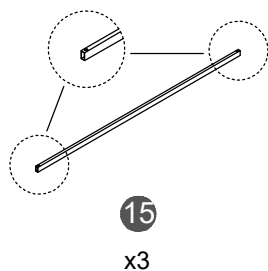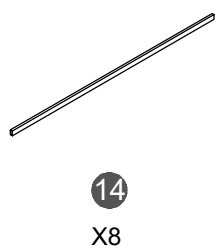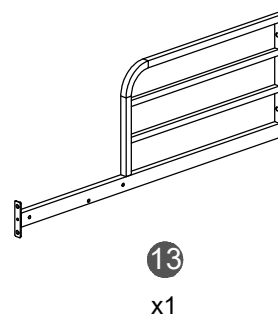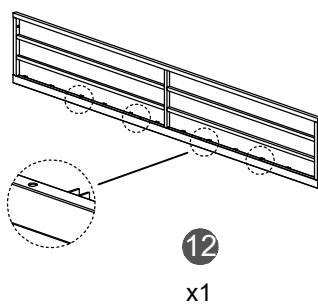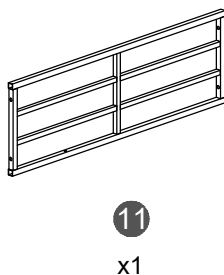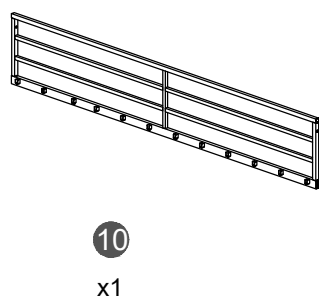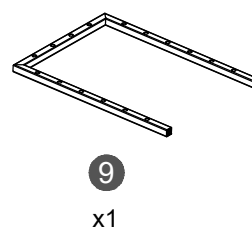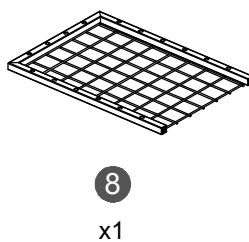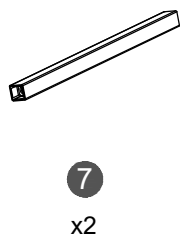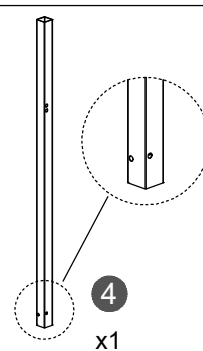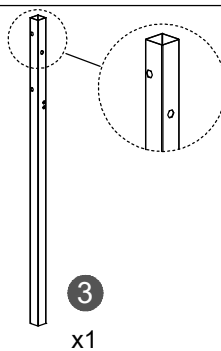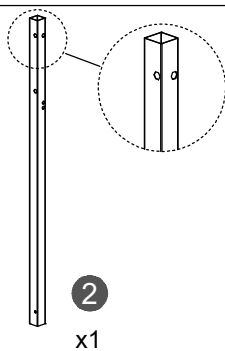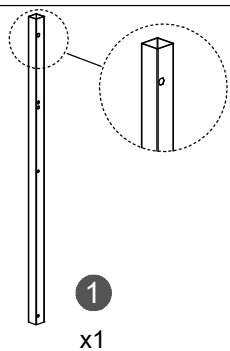


Assembly Instruction

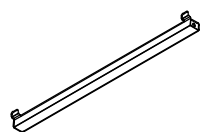


23
x8

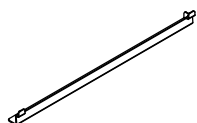

24
x8

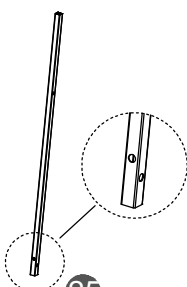

25
x1




26
x1




Longer elastic rope
27
x2




Shorter elastic rope
28
x1

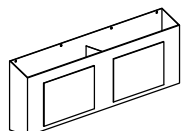


29
x1

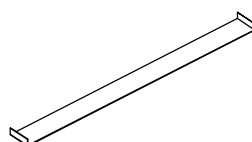

30
x1

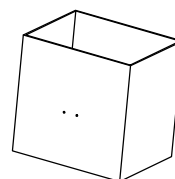

31
x8




32
x8



33
x8




34
x2



35
x1




36
x2



37
x1

Hardware parts 2



Hardware parts 1



A
M8*55
x8



B
M8*35
x10



C
M6*55
x11



D
M6*35
x23



E
M6*25
x5



F
M8*15
x4



G
M6*15
x4



H
M6
x3



I
M5*25
x8



J
x1



K
S10, S13
x1





L
S4
x1





M
M6*50
x2

Assembly Instruction


LED light strip electronic accessories list

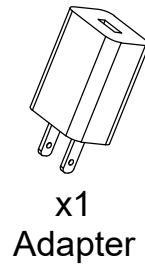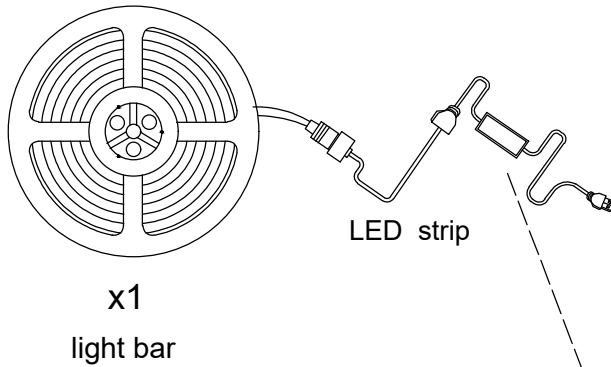


There is a two-dimensional code at the position of the power line. Scanning can download the APP for the control light

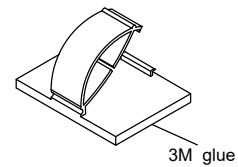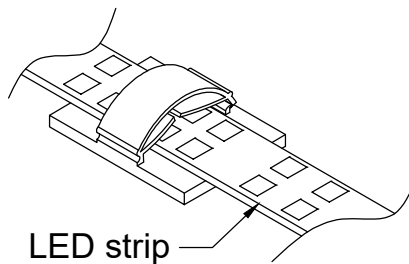

x5
LED strip with clips

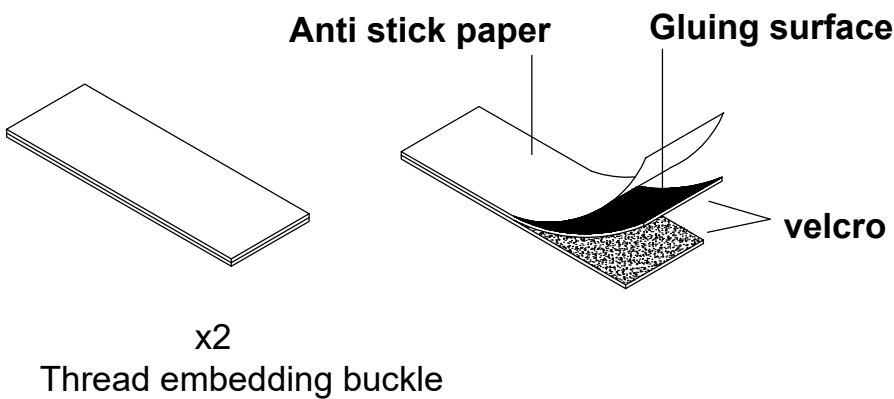


When the wires are disordered, tear off the anti stick paper, paste it on the place where the wires pass, and then bind the wires.

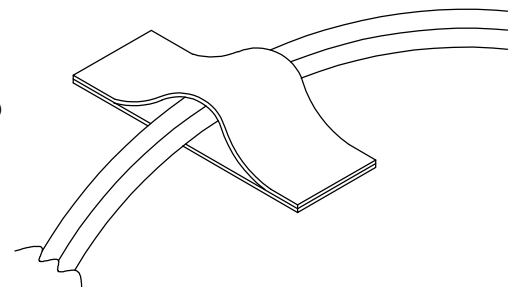


Assembly Instruction

Note:


1. should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

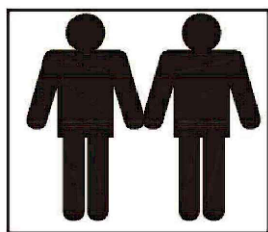

It needs at least two people to install.

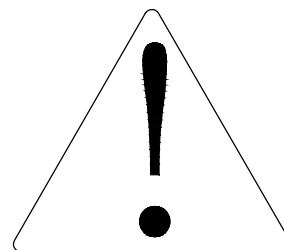

Before starting the assembly, you must read the whole manual and follow the instructions

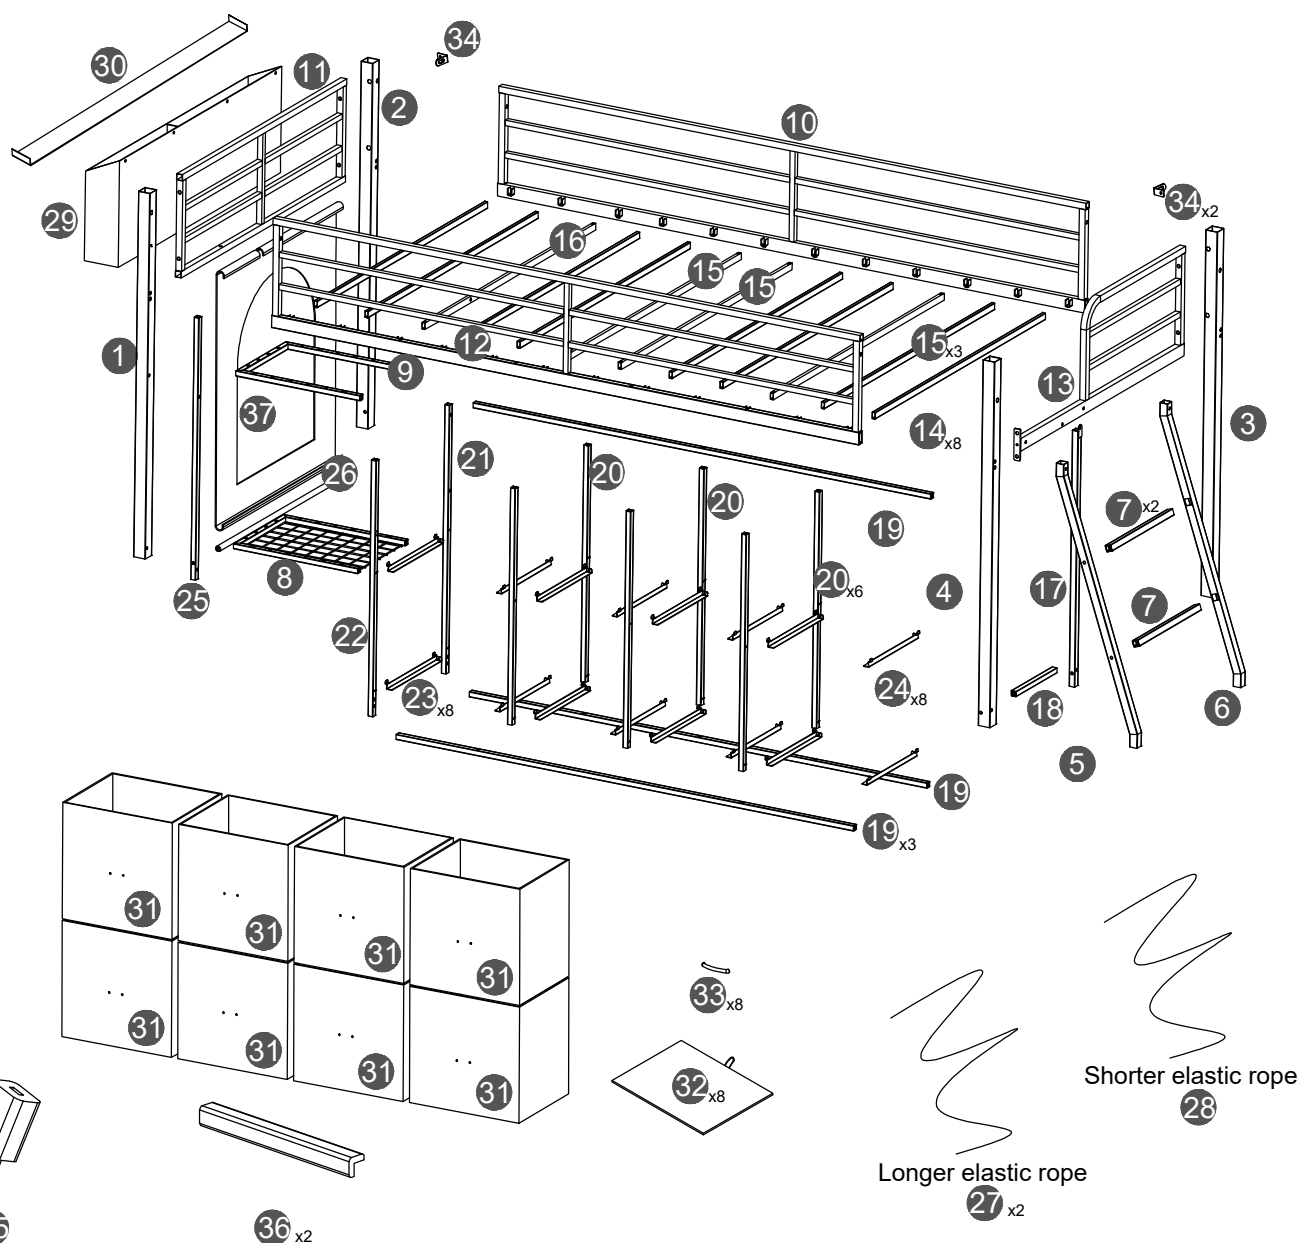


Assembly Instruction

1

B M8*35
x4

L S4
x1

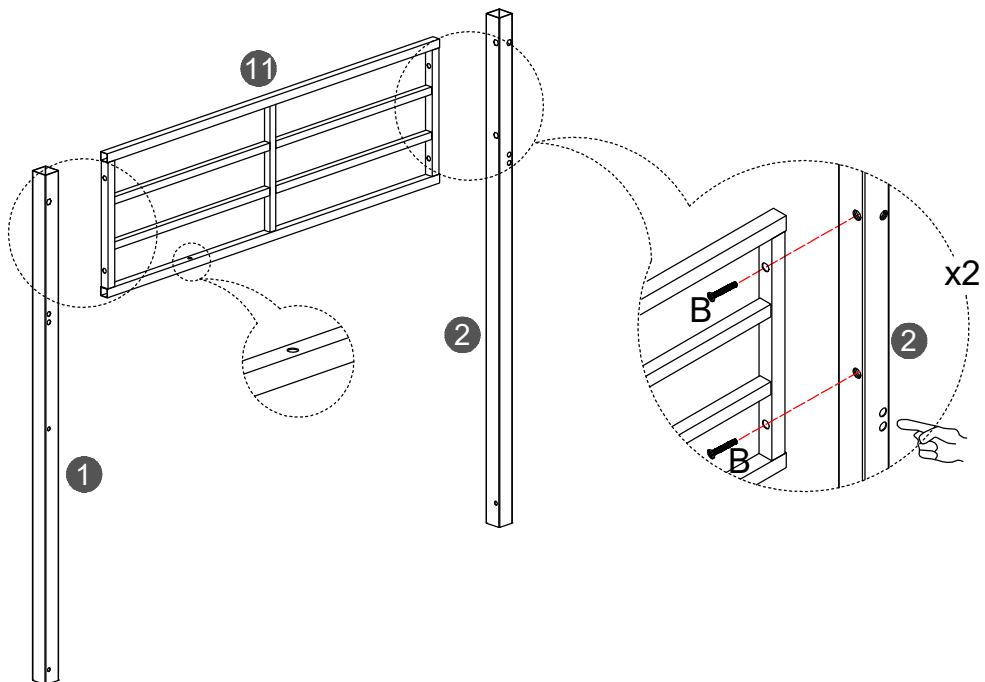


2

B M8*35
x2


F M8*15
x2

L S4
x1

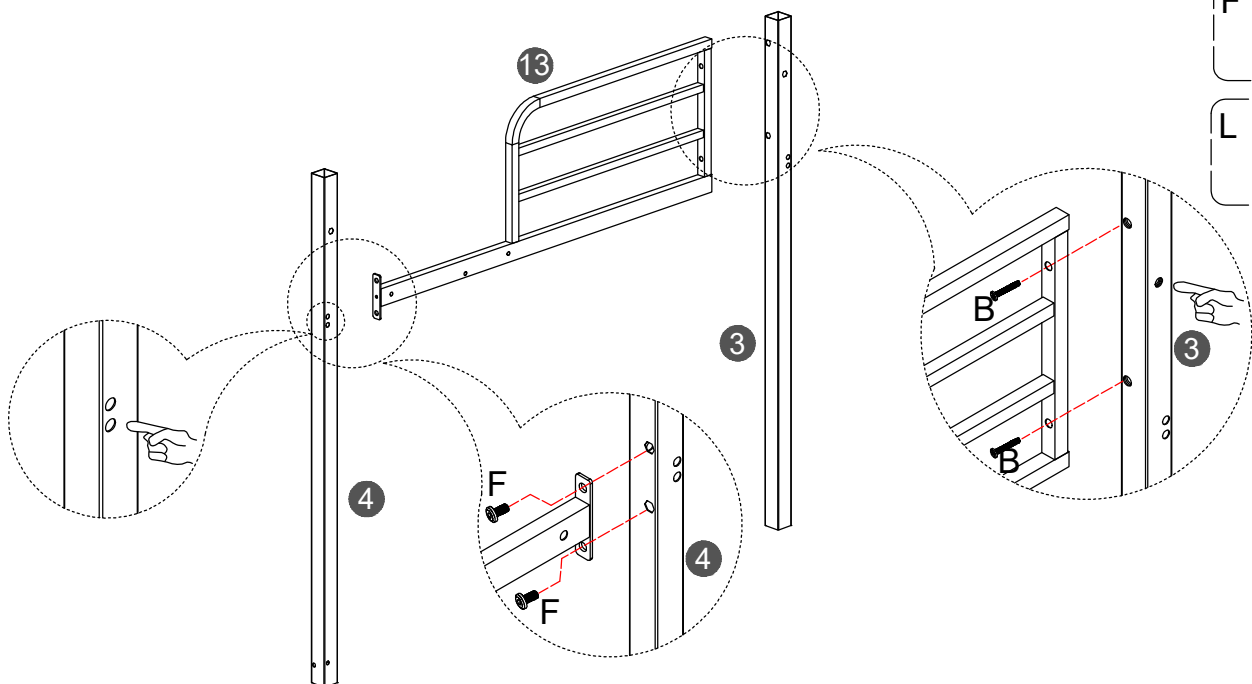

Assembly Instruction

3

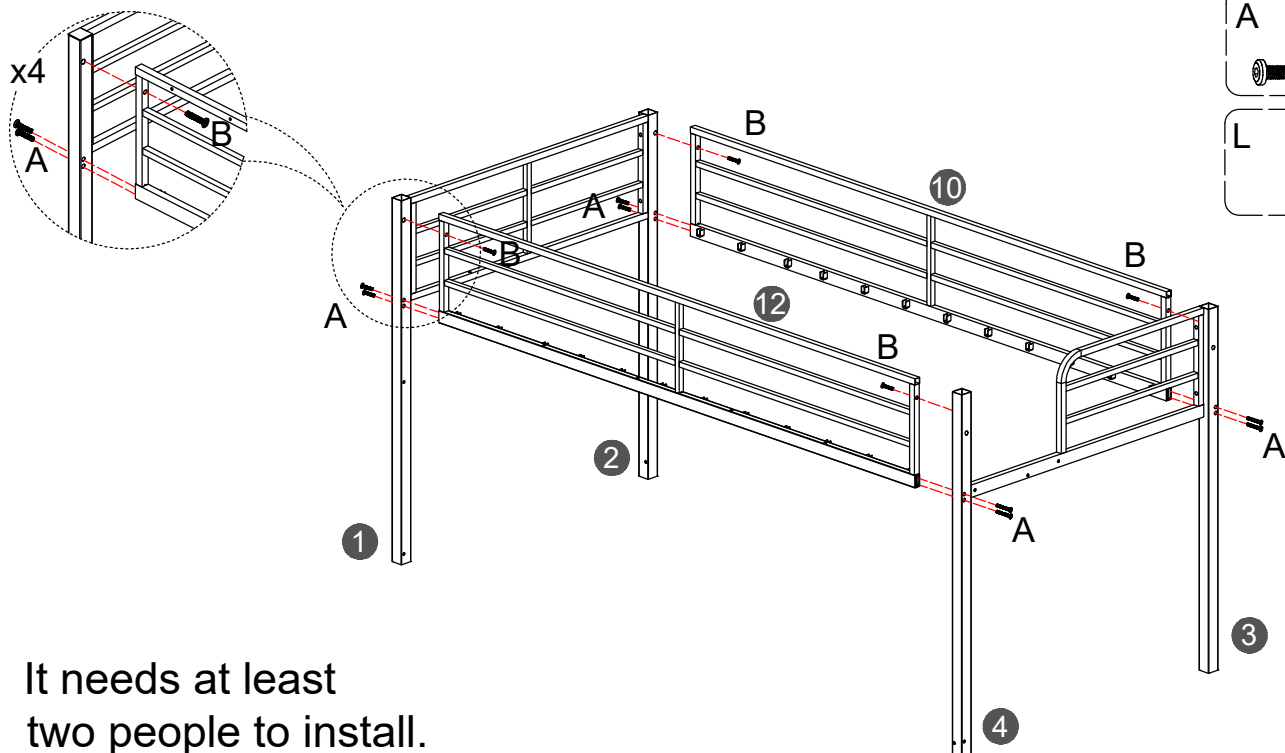


B M8*35
x4

A M8*55
x8

L S4
x1

It needs at least two people to install.

4

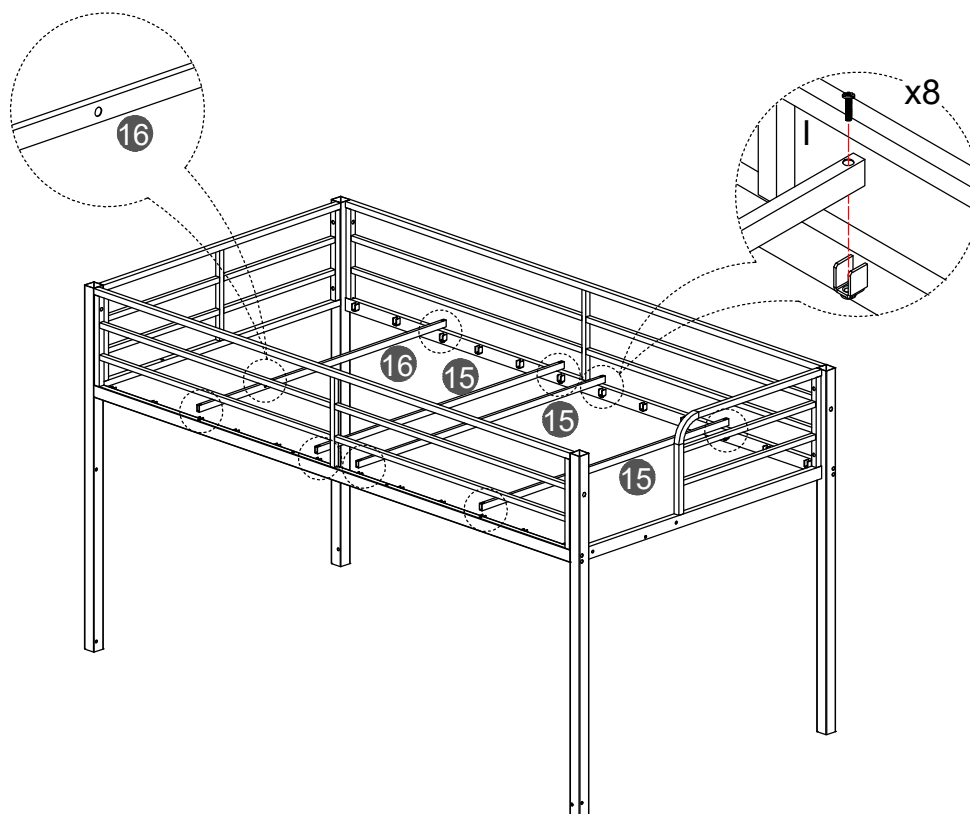


I M5*25
x8

L S4
x1

Assembly Instruction

5

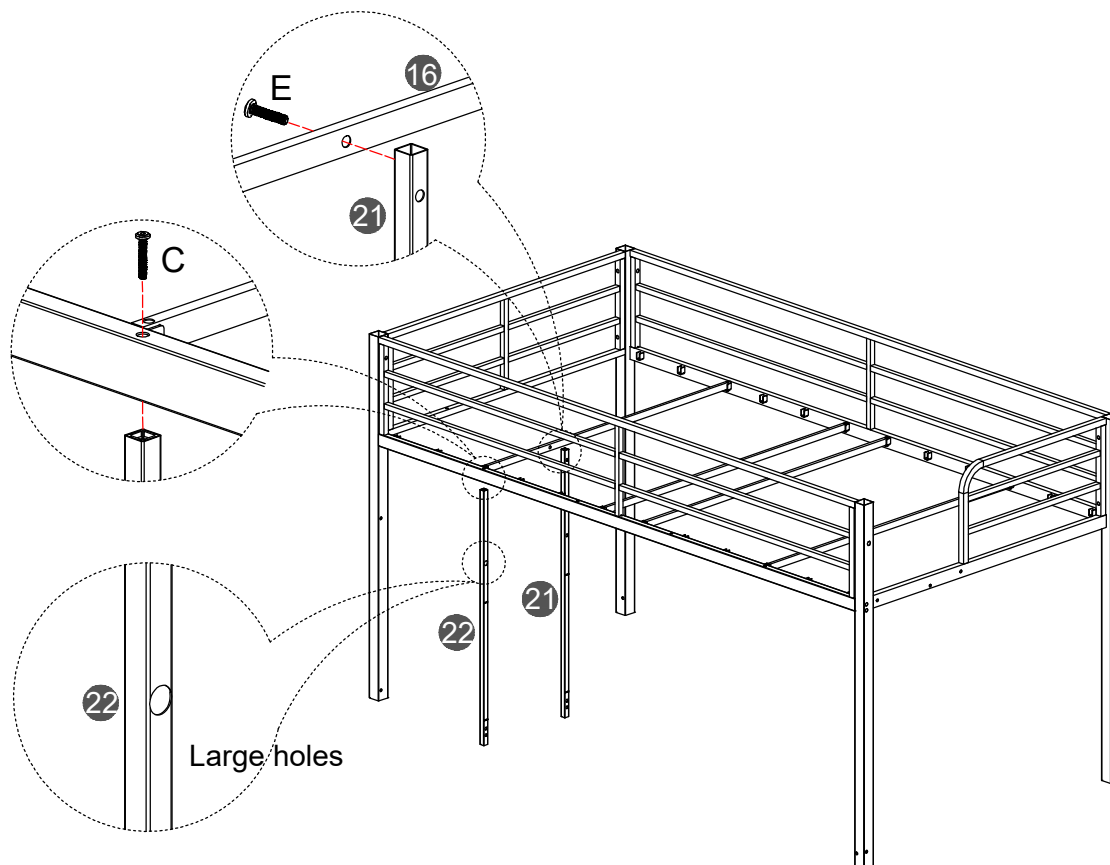


C M6*55
x1

E M6*25
x1

L S4
x1

6

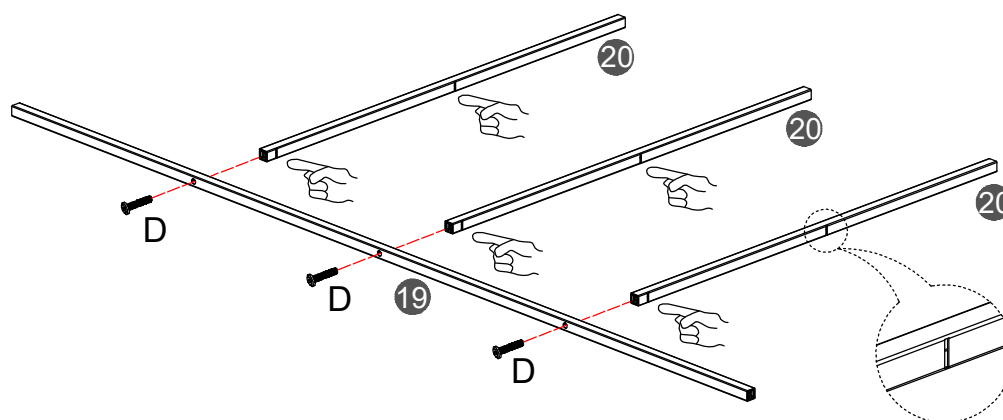


D M6*35
x6

L S4
x1


x2

Assembly Instruction

7

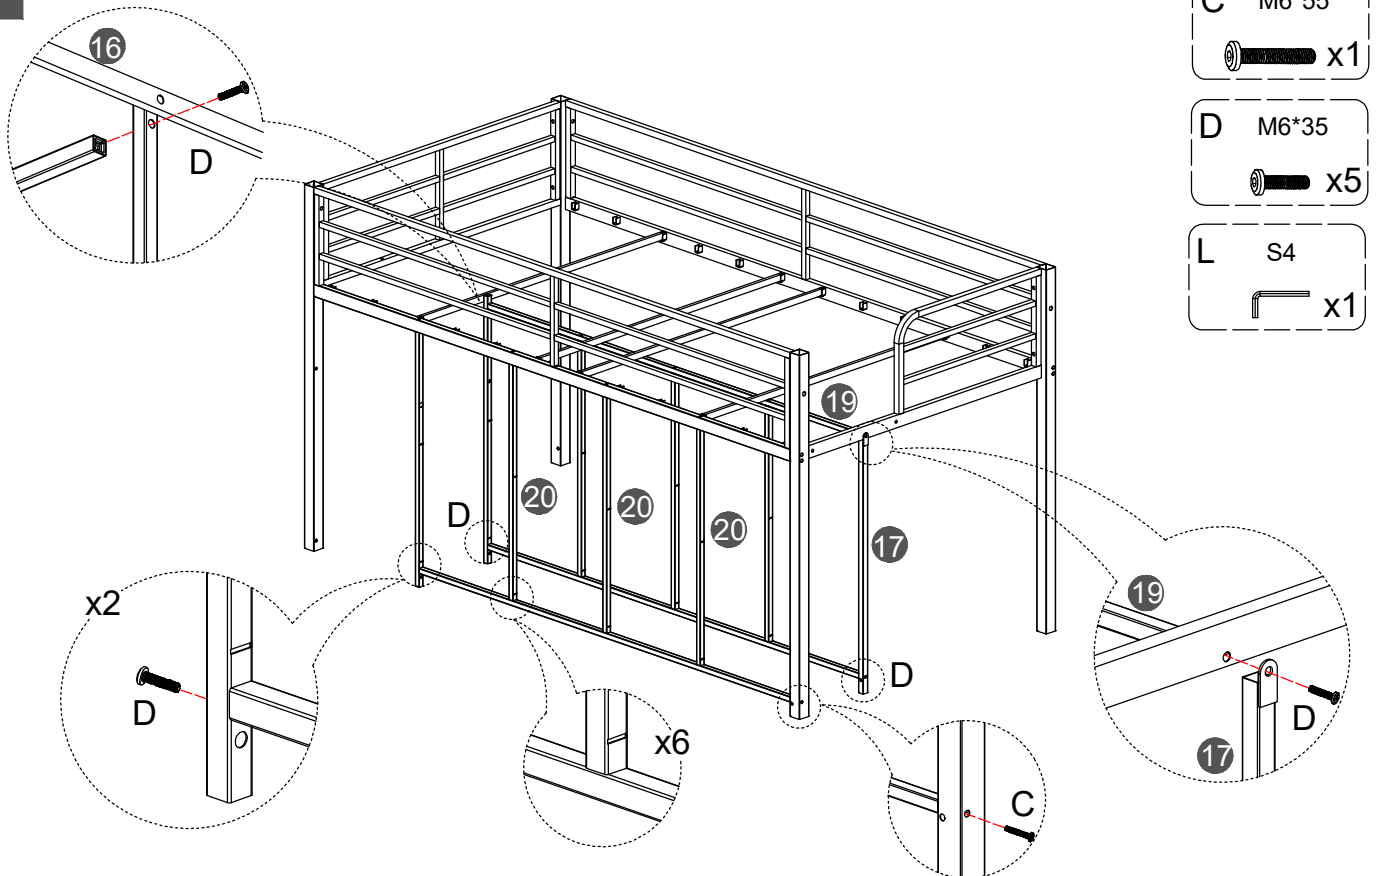


8

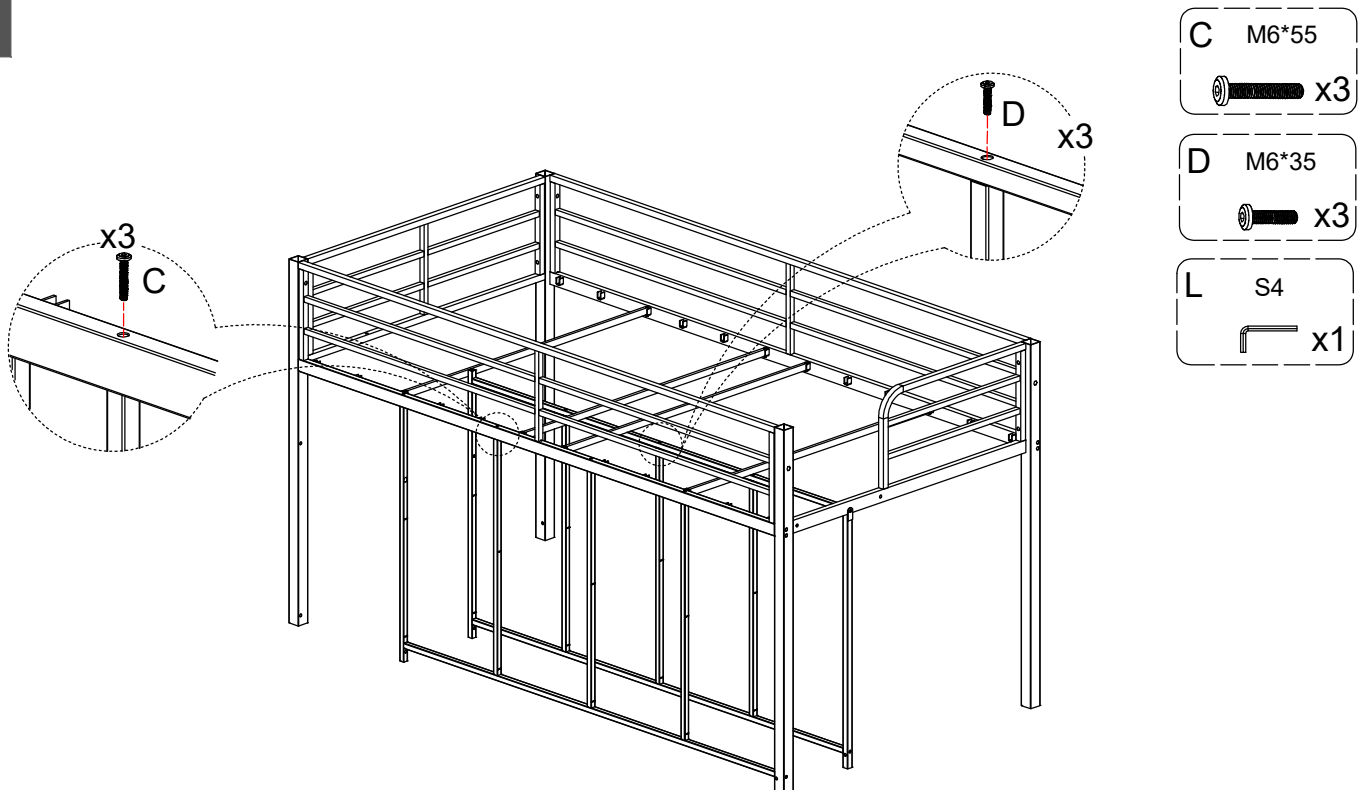


Assembly Instruction

9

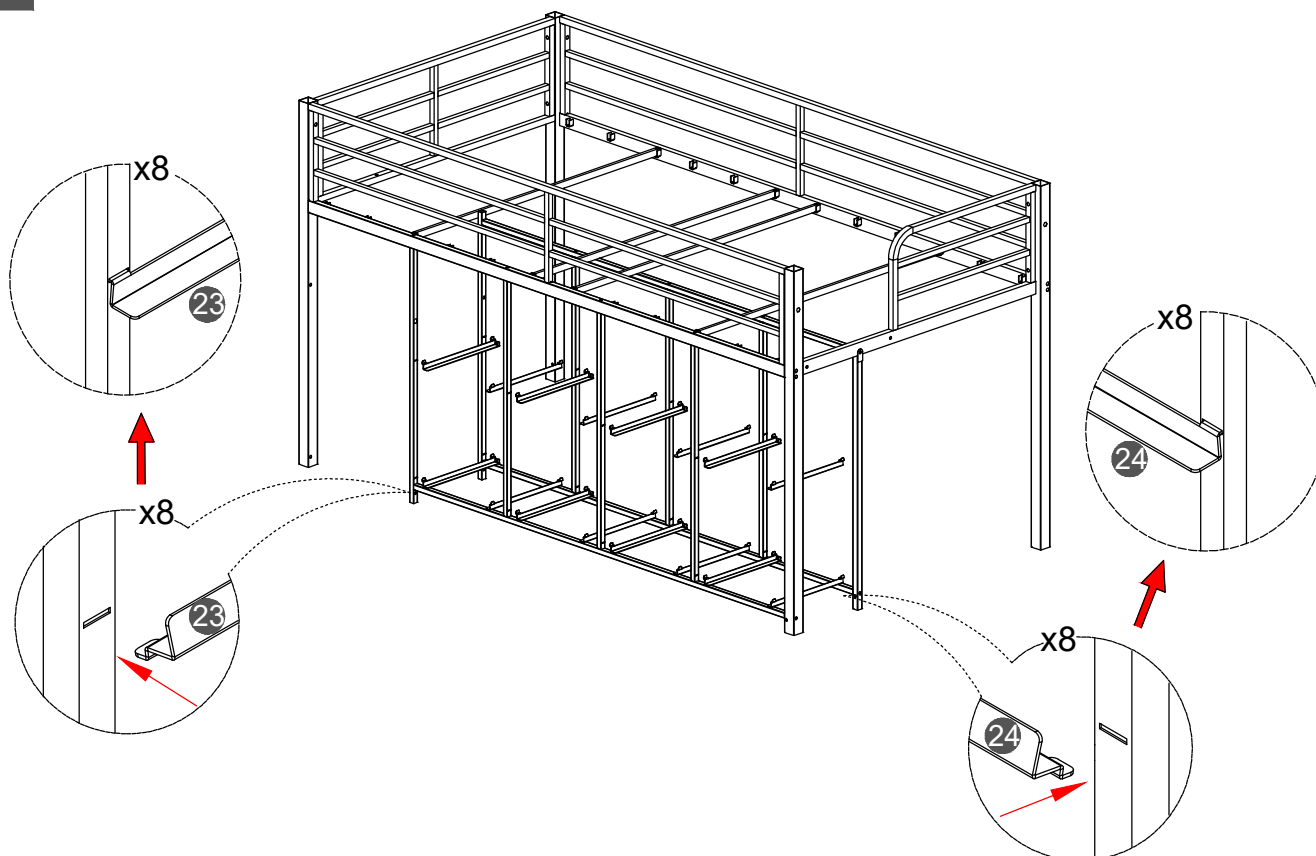

10

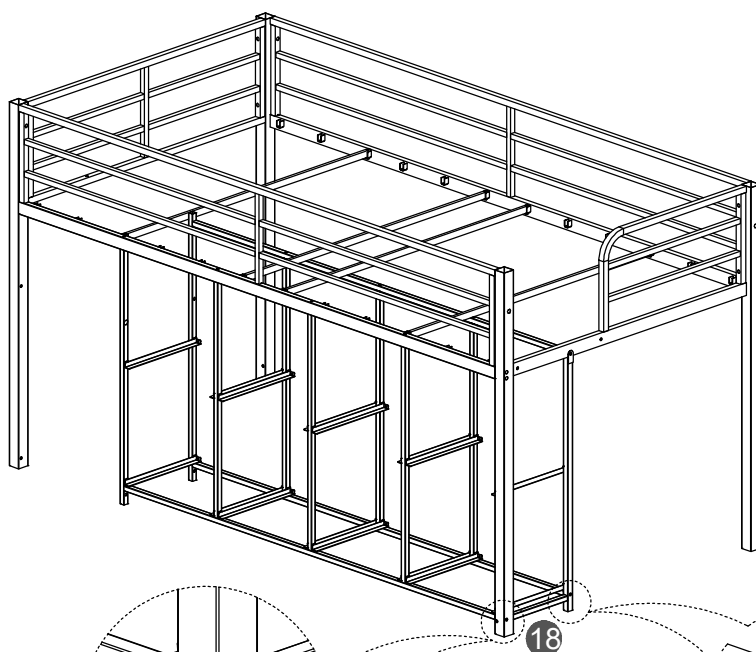

C M6*55
x1

D M6*35
x1


L S4
x1

Assembly Instruction

11

E M6*25
 x4

L S4
 x1


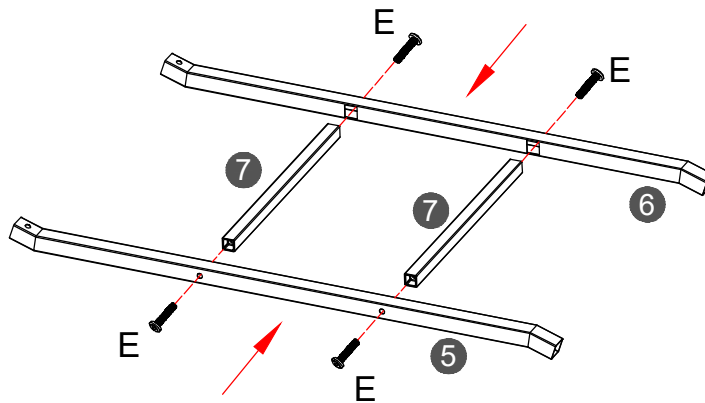


12

C M6*55
 x2


H M6
 x2

L S4
 x1

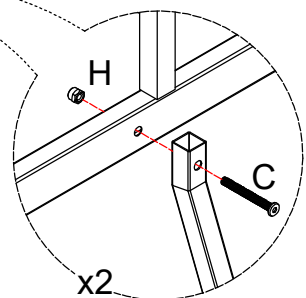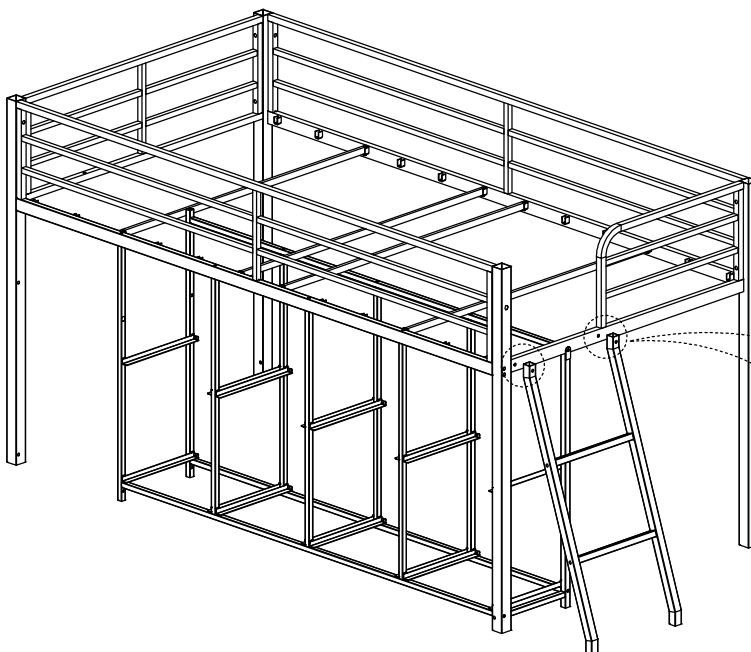


Assembly Instruction

13


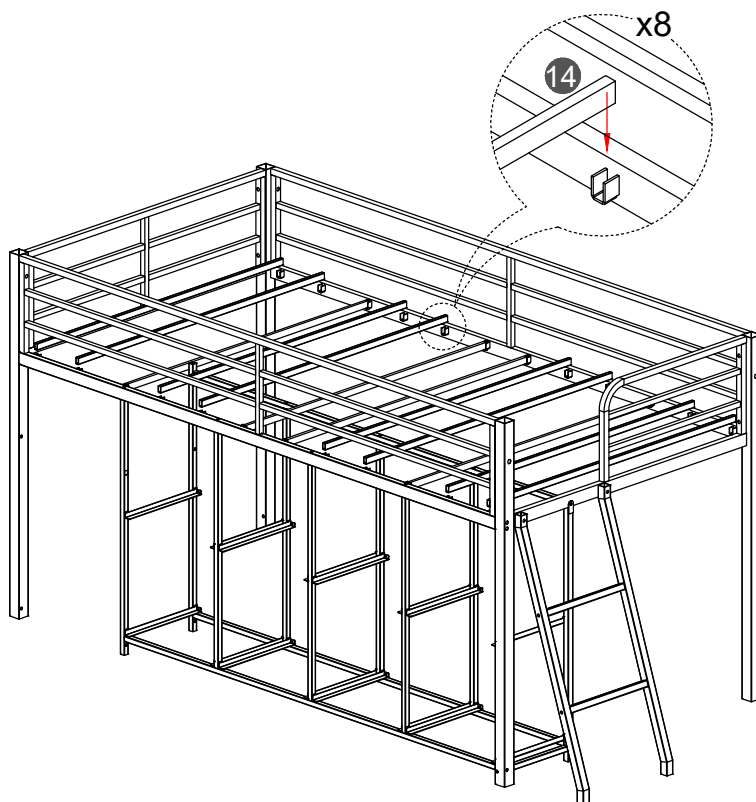


14

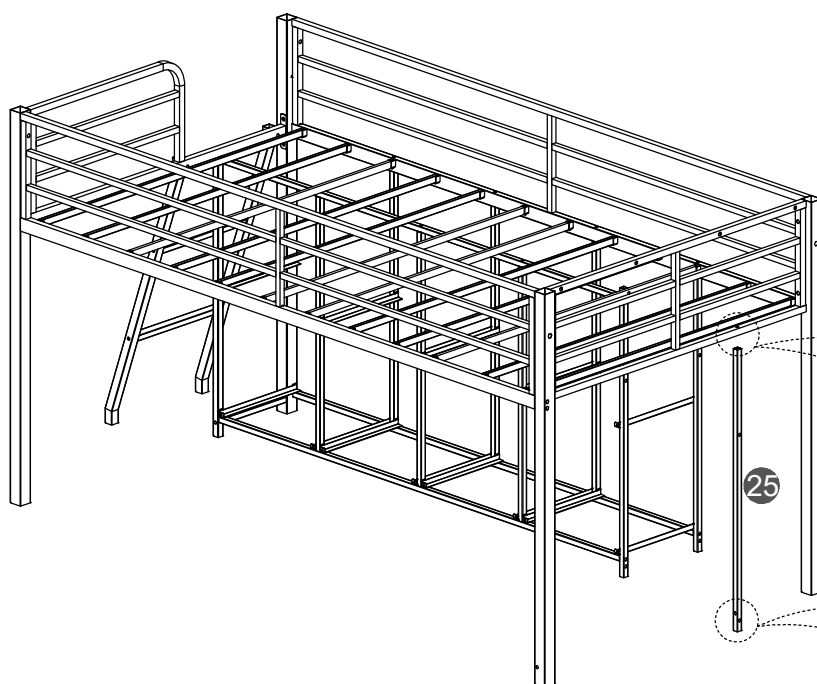


D M6*35
x1

L S4
x1

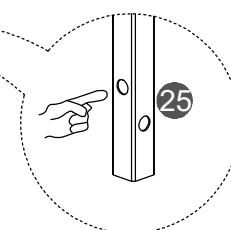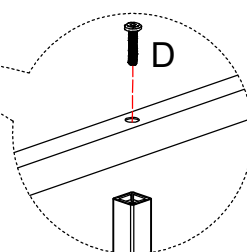


Assembly Instruction



15

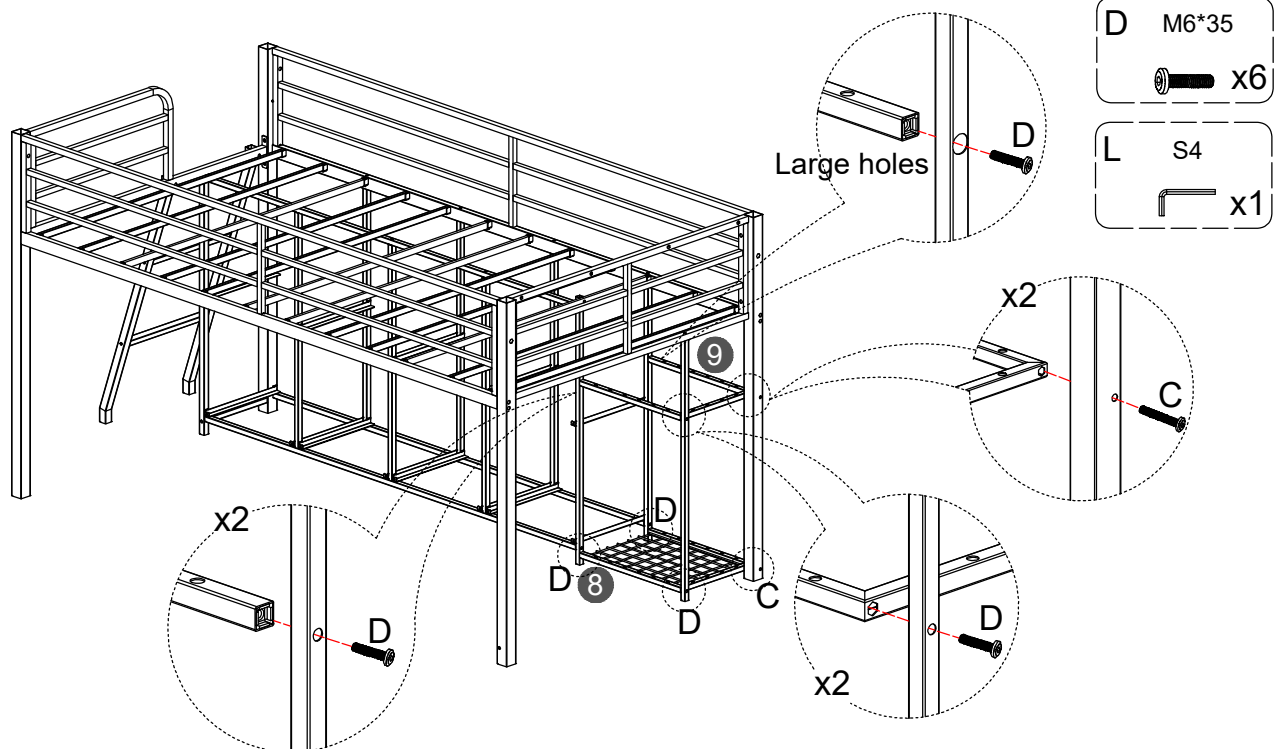



16

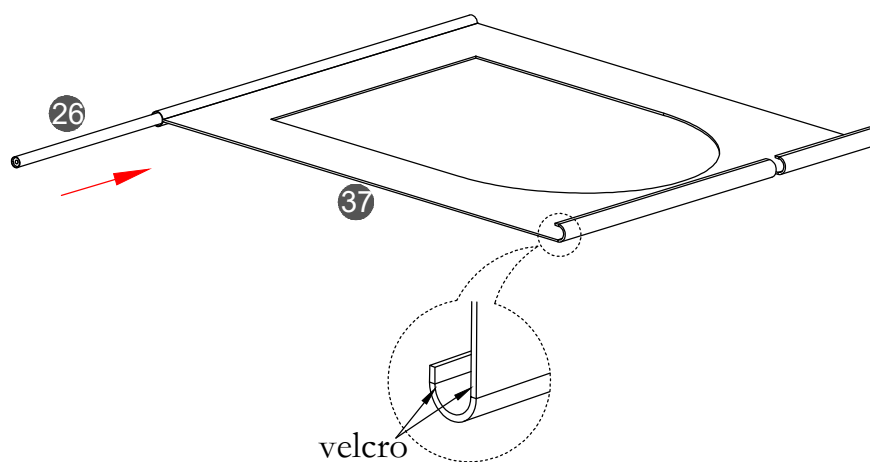

17

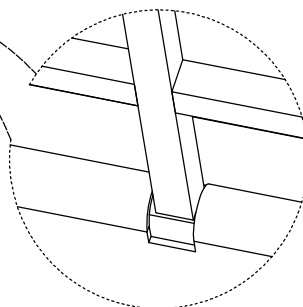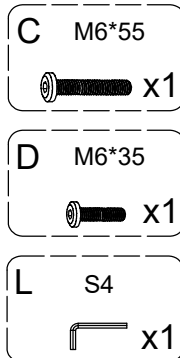

18

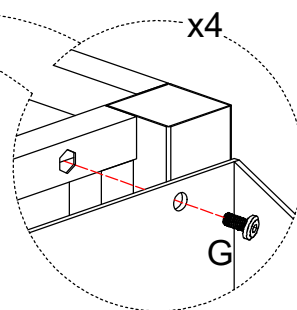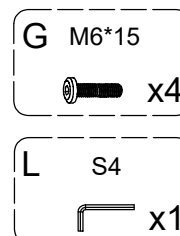

Storage box bottom plate

30


30

storage box


29

Assembly Instruction

19

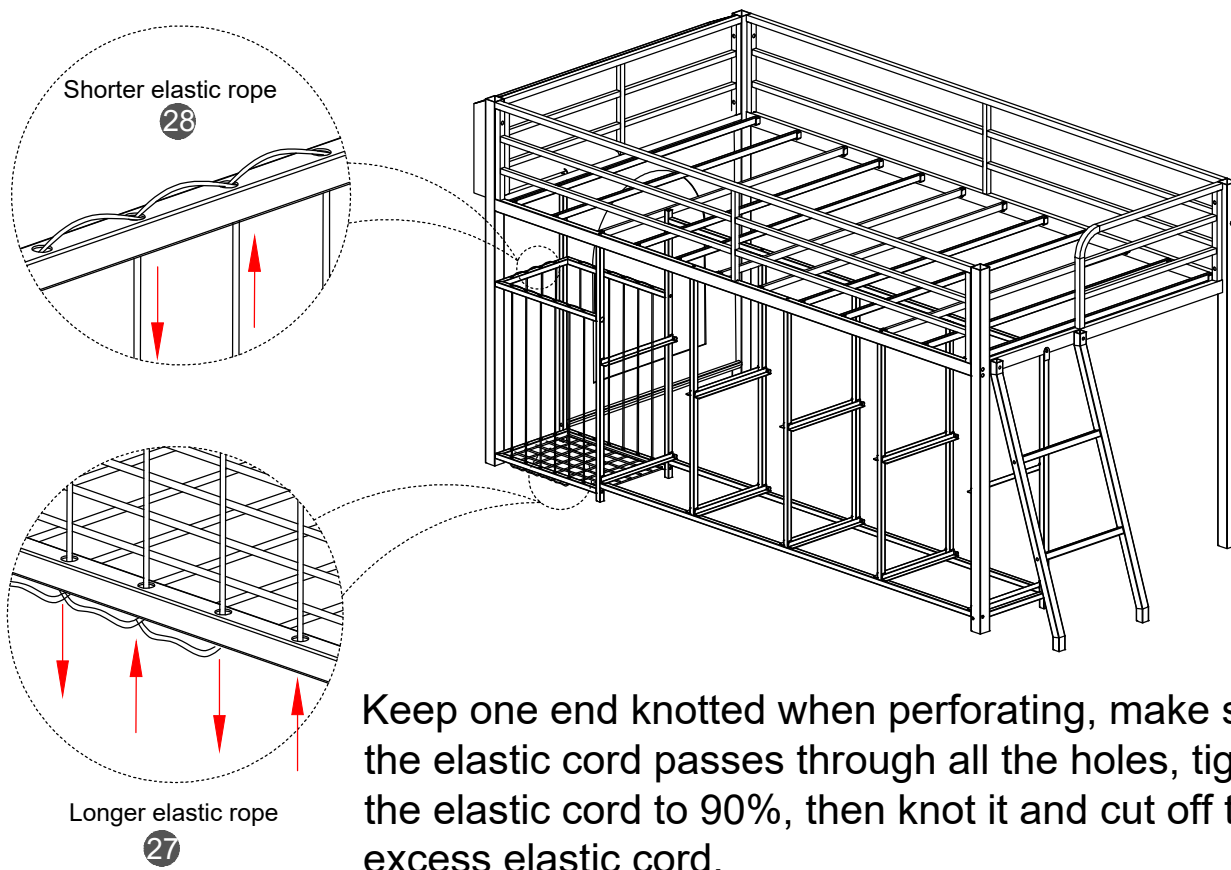


20

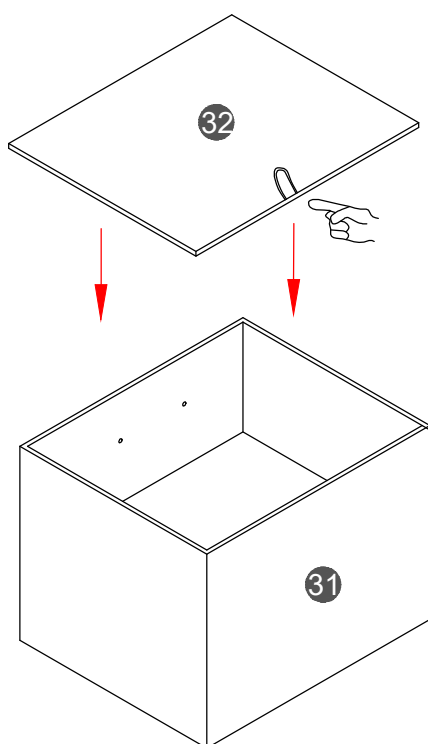


Q Ø4*10
x16

K
x1

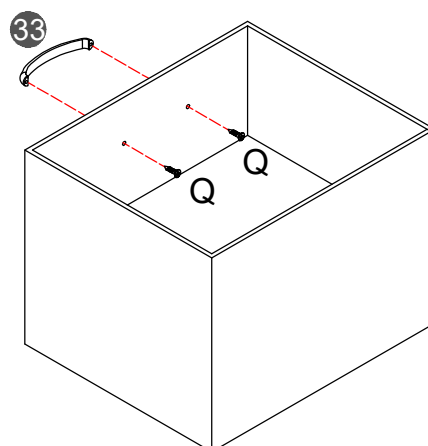


x8

21

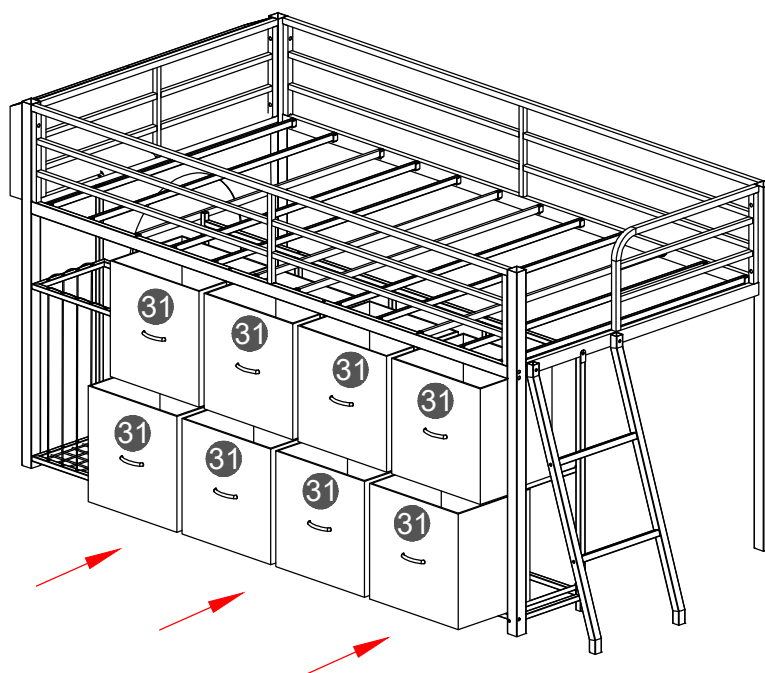


22

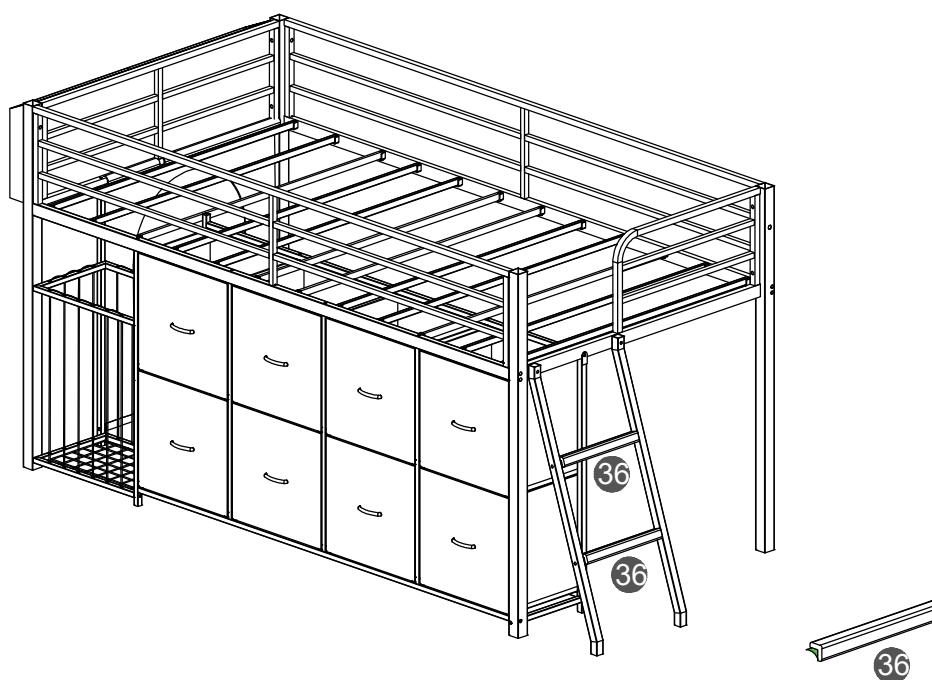


After tearing the tape off the sponge, attach the sponge to the stair tube

Assembly Instruction

23

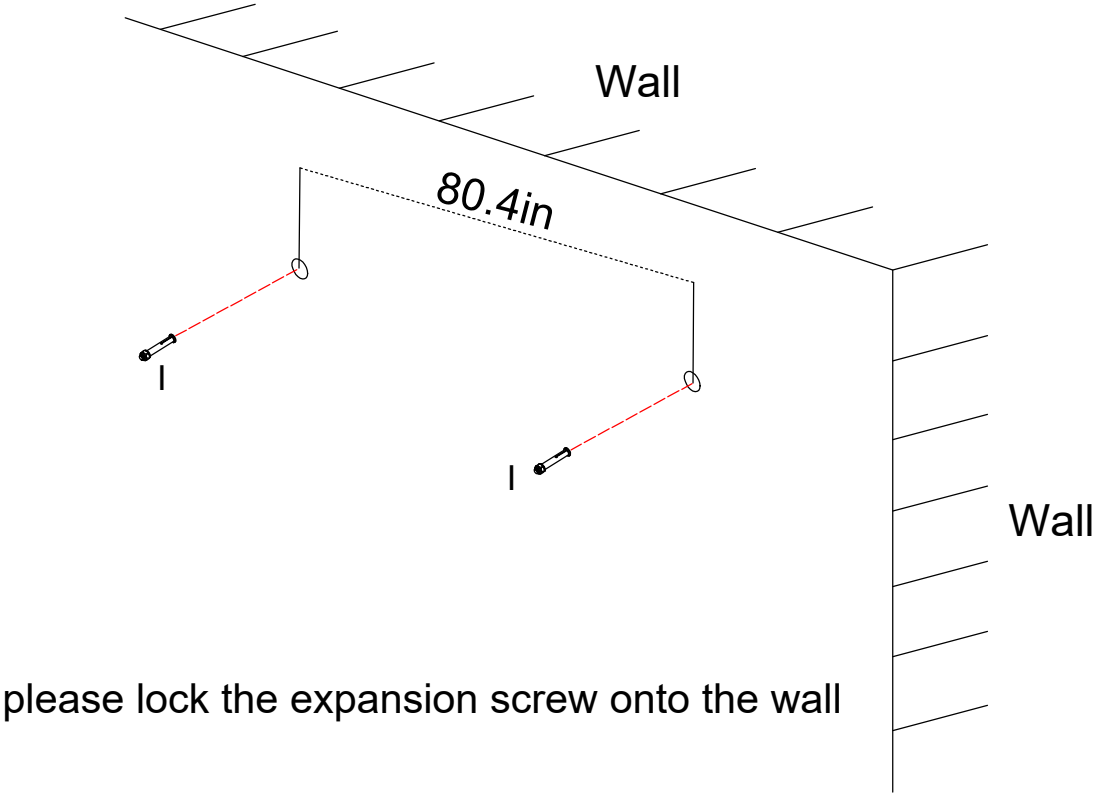


24 OPTION 1:

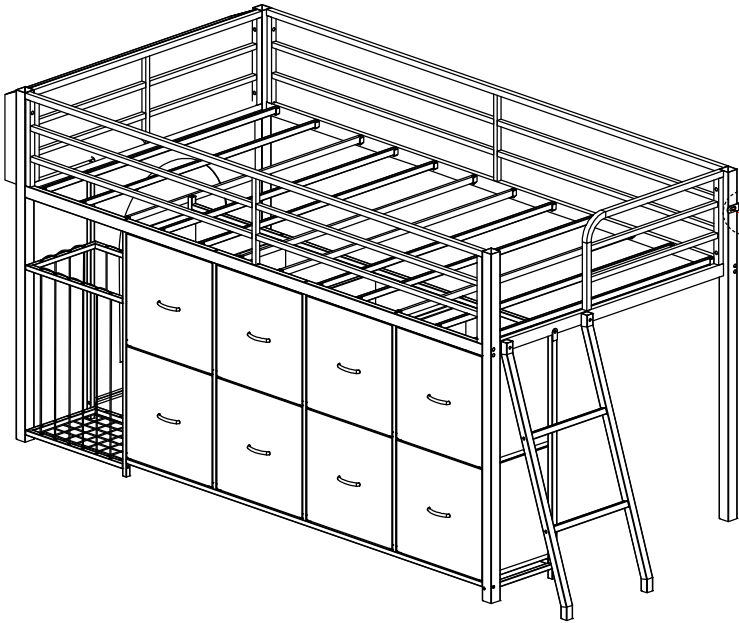


F M8*15
x2

L S4
x1

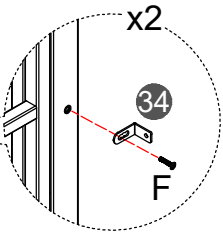


Assembly Instruction


25 OPTION 1:

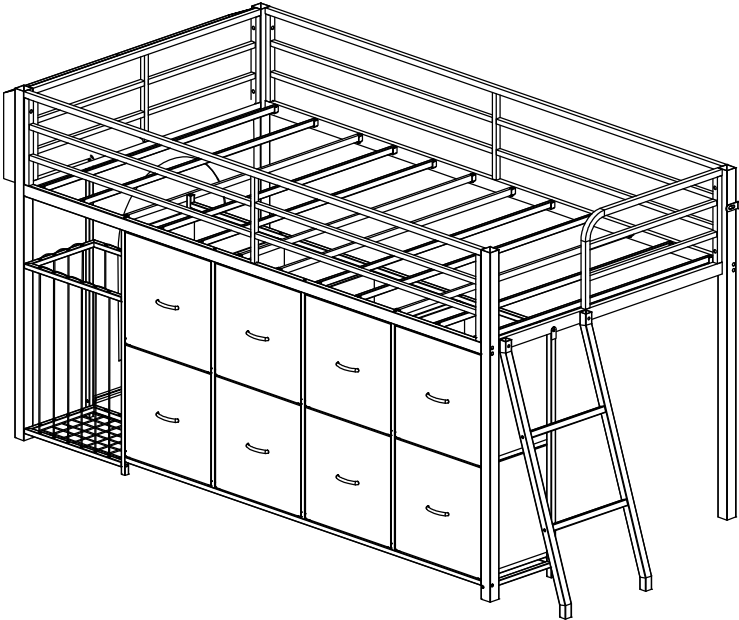

- M M6*50
x2
- J S10*S13
x1

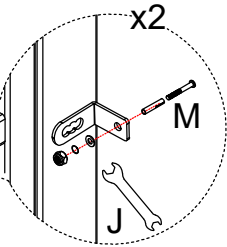


26 OPTION 1:

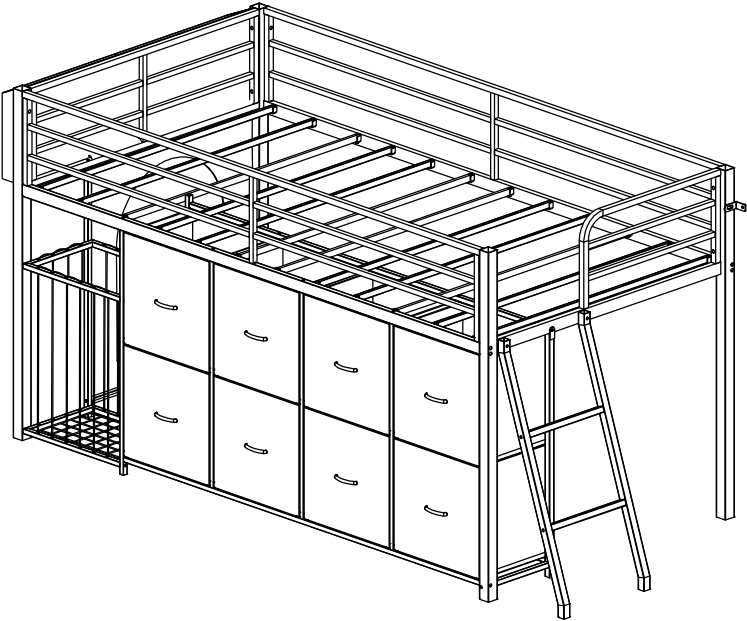


Assembly Instruction

27 OPTION 2:

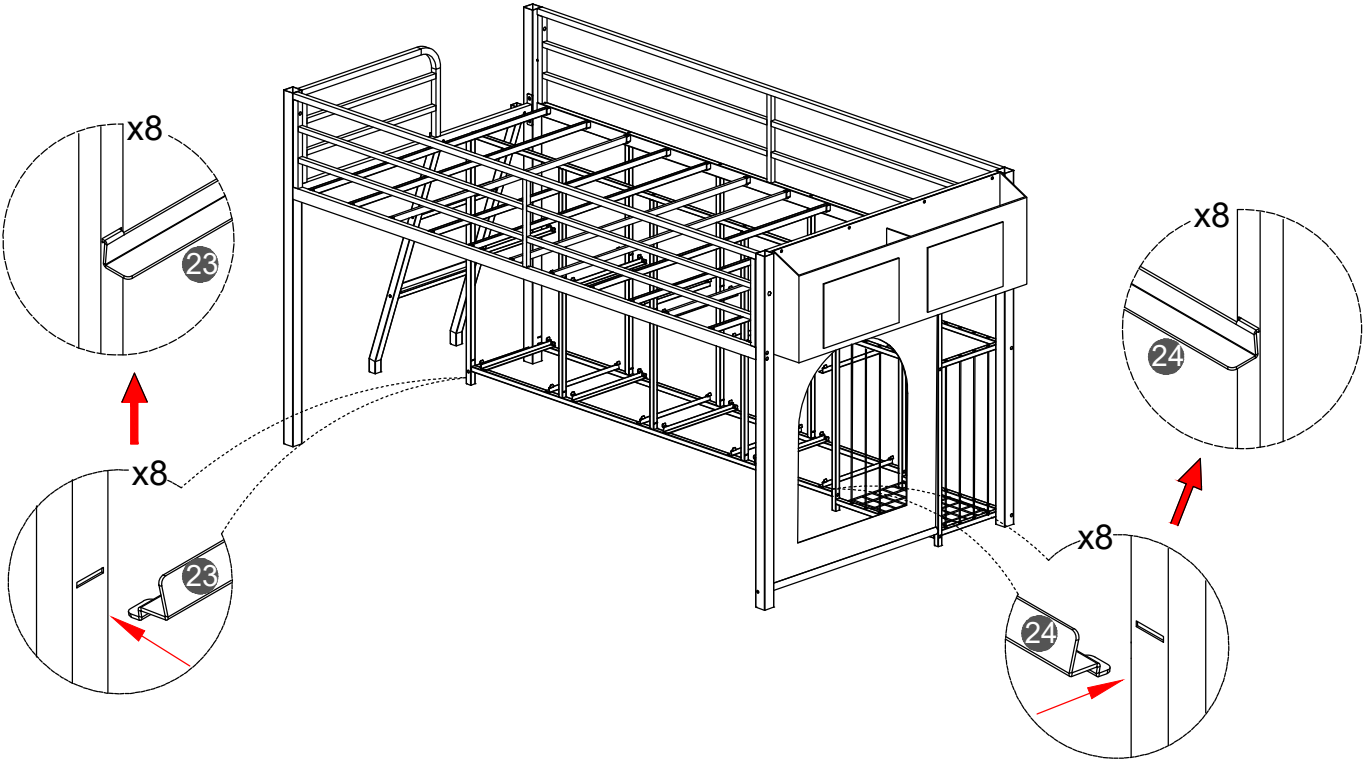


28 OPTION 2:

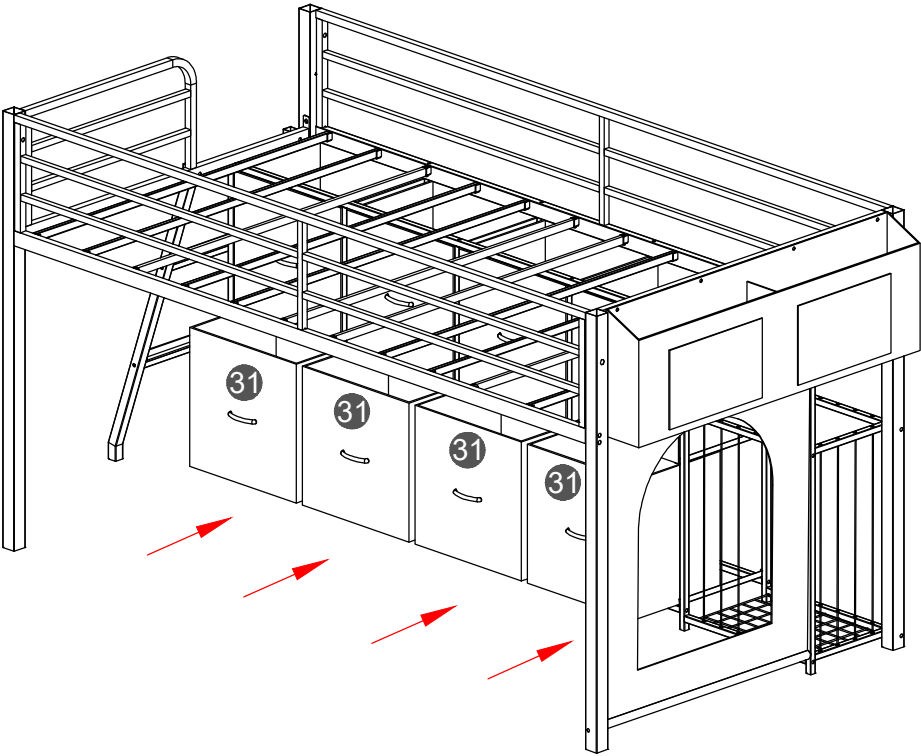


Assembly Instruction

29 OPTION 2:

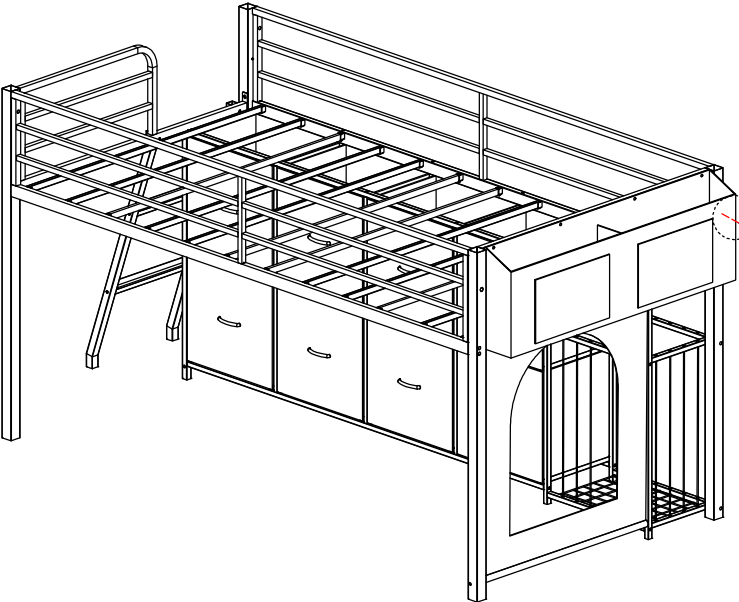


F M8*15
x2

L S4
x1

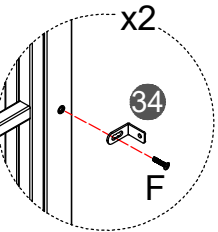


30 OPTION 2:

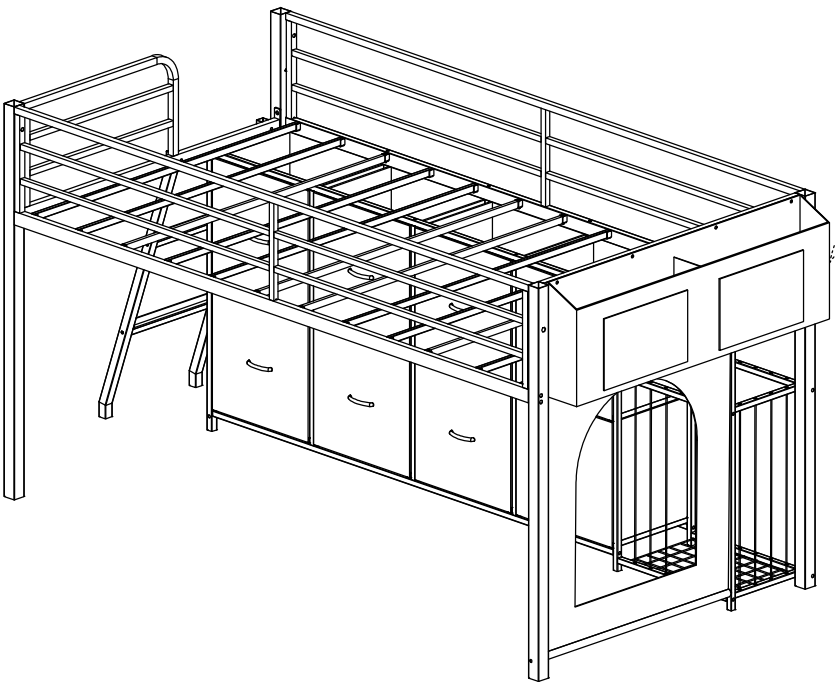

M M6*50
x2

J S10*S13
x1

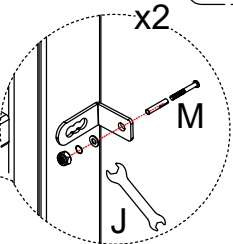

Assembly Instruction

31

DIY LED

