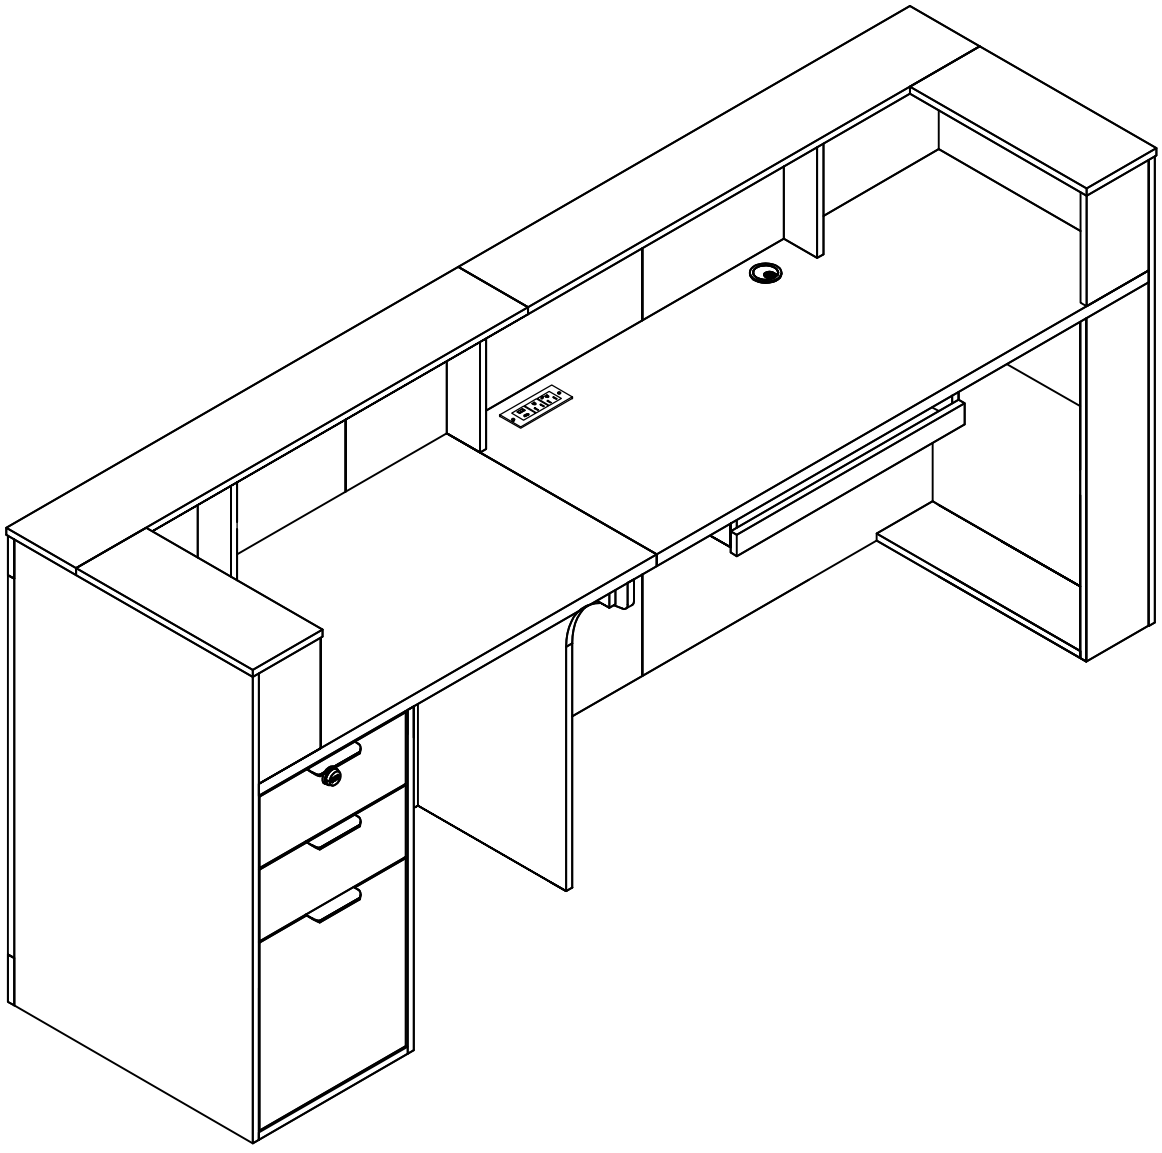
# ASSEMBLY INSTRUCTION



Send email with your question, pic and order NO. to
**support@supporthub365.com**

# Product Installation Video

After-sales official website: https://supporthub365.com

Scan the QR code with your phone to watch the installation video.

Please carefully review the following precautions before proceeding with the installation:

1、The installation process for this product is complex, and it is highly recommended to have at least two individuals working together during the installation.

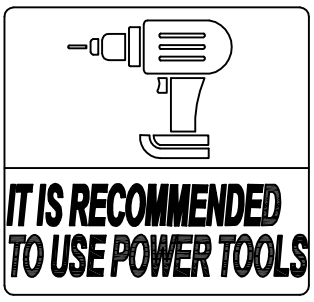
2、Prior to each step, please refer to the screw hole positions to ensure that the board is aligned correctly according to the images provided in the instruction manual. This will help prevent any errors.

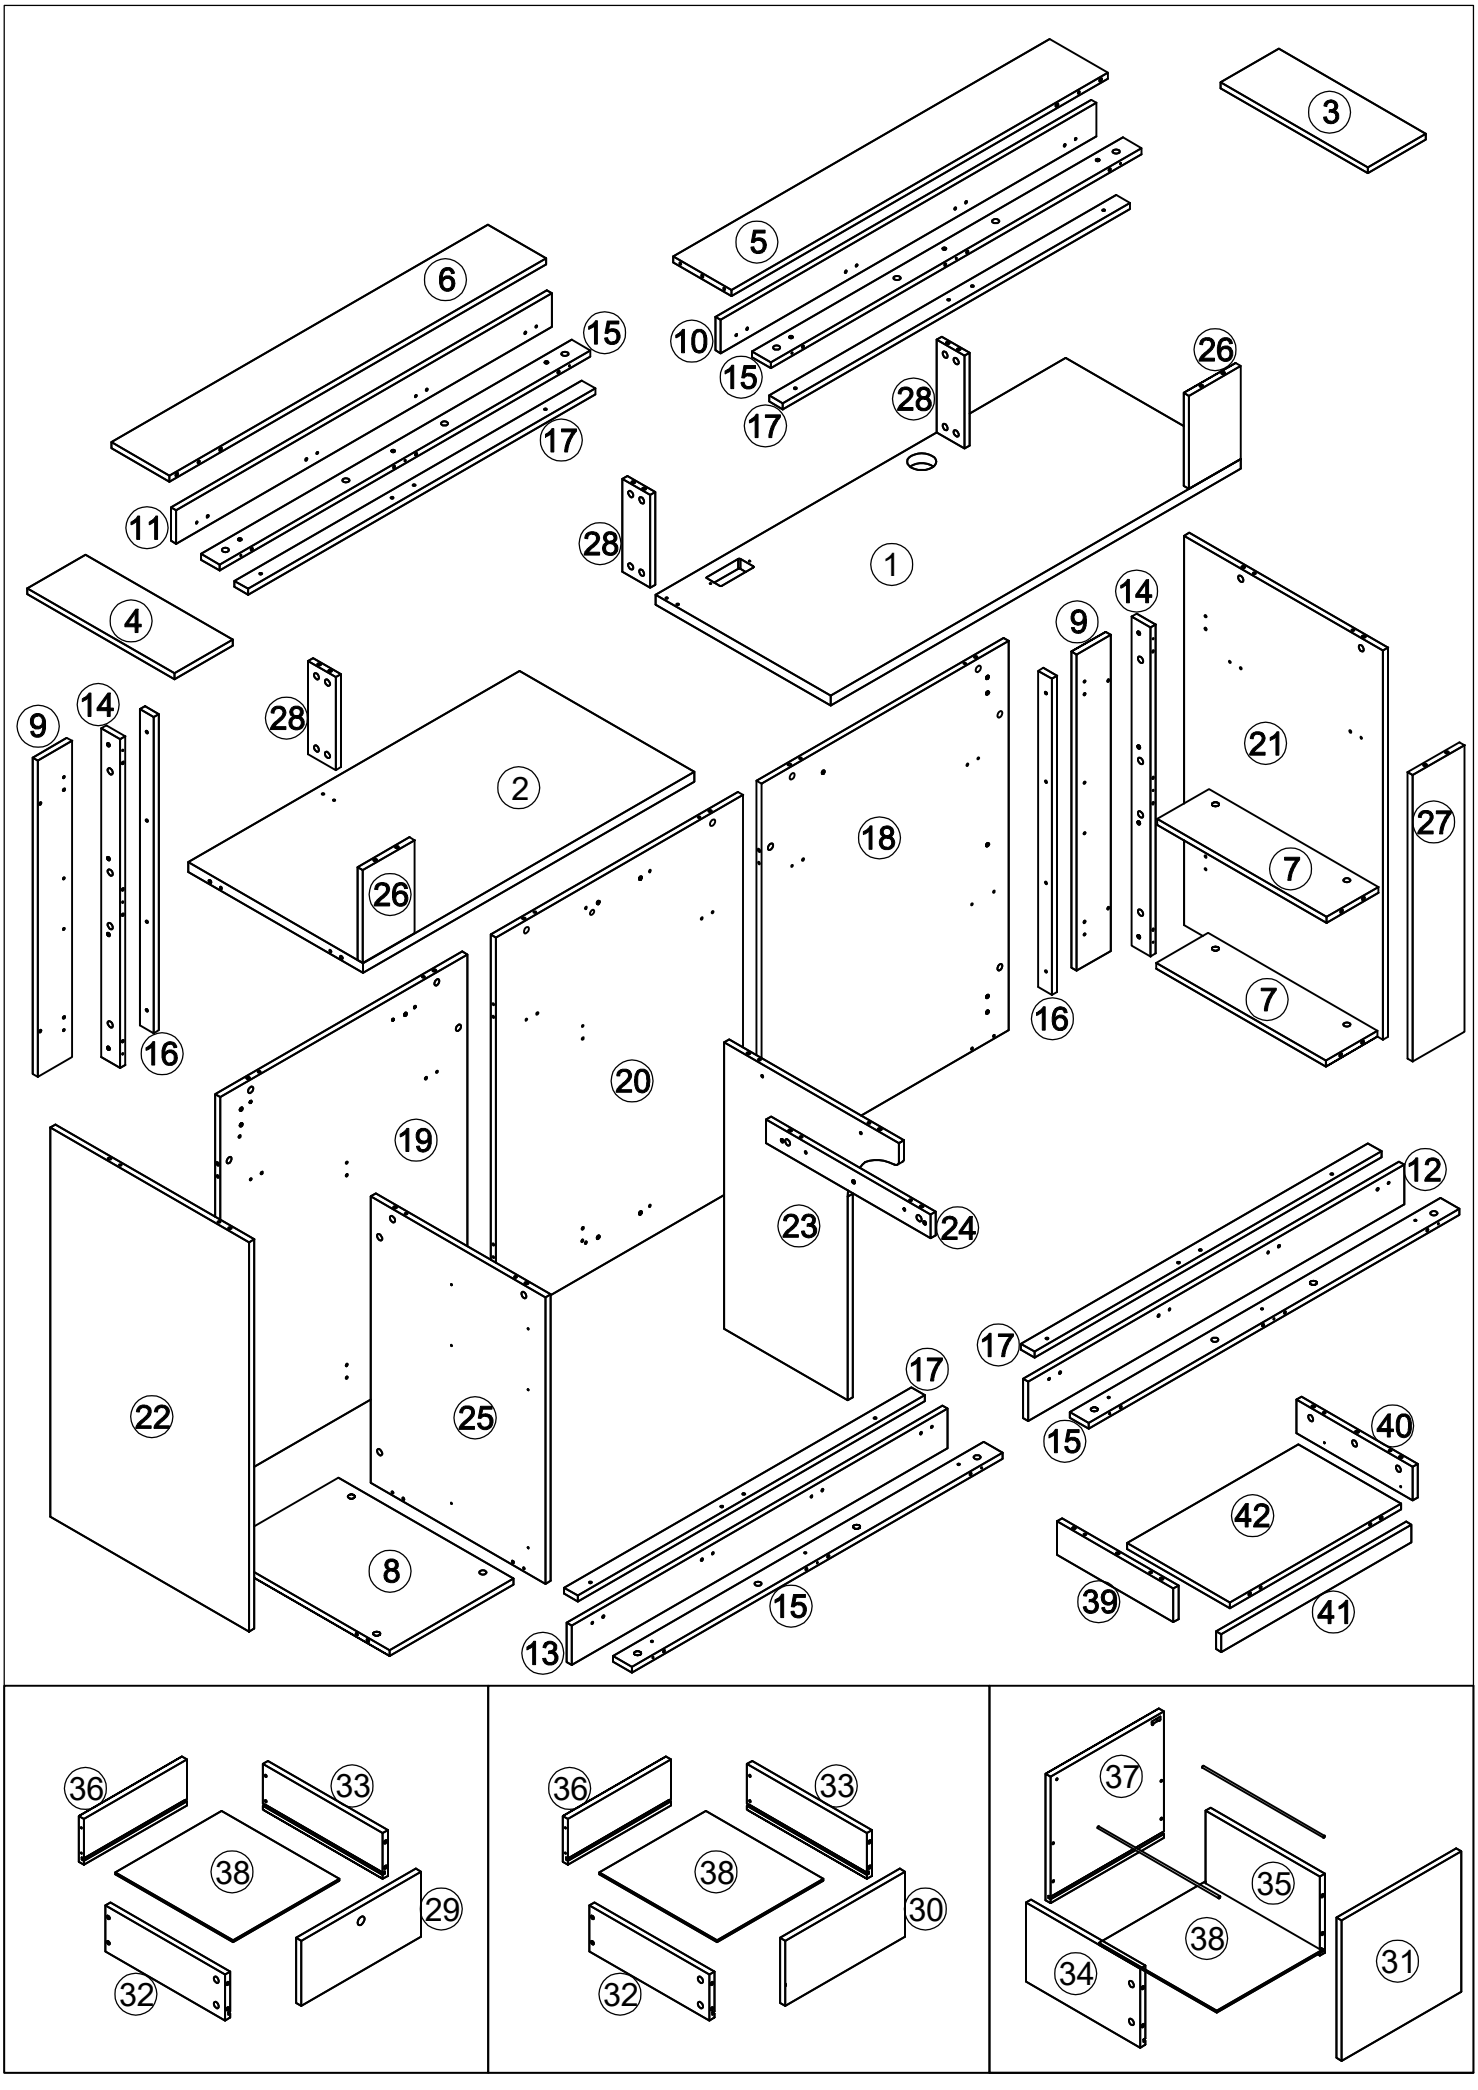
3、In case power tools are used for installation, it is important to tighten the screws intermittently rather than applying excessive force continuously. This precaution will help avoid potential cracks around the screw holes.

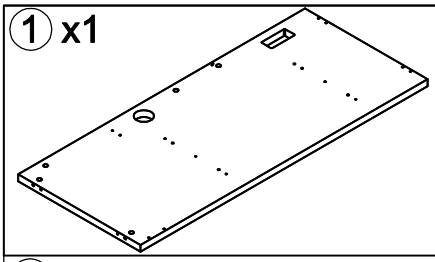
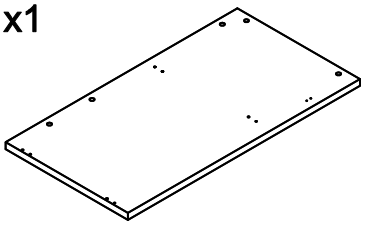
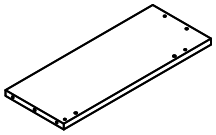
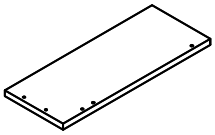
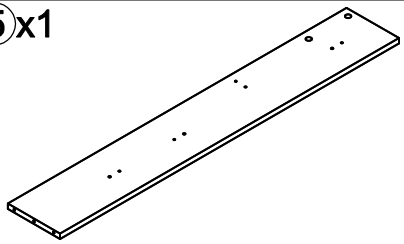
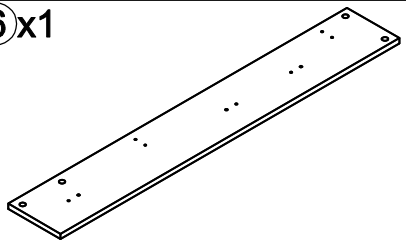
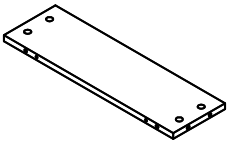
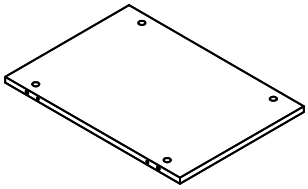
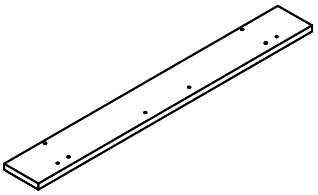
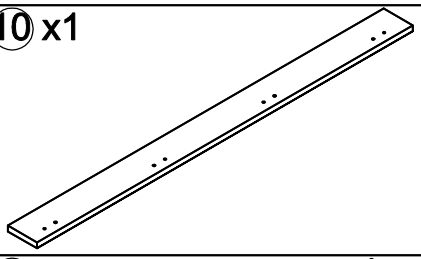
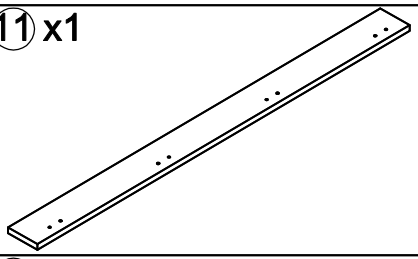
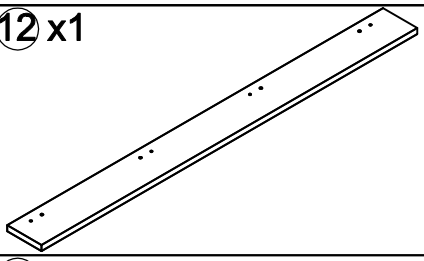
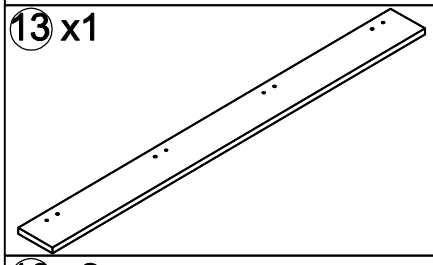
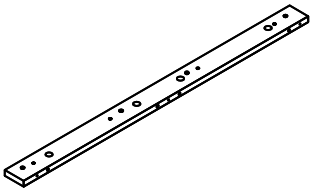
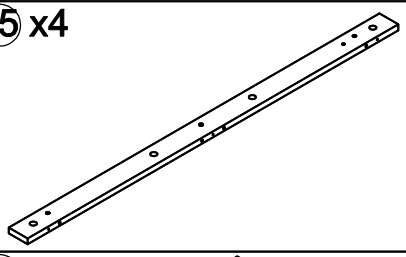
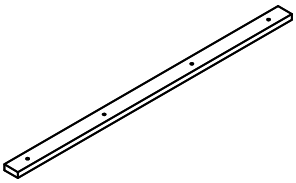
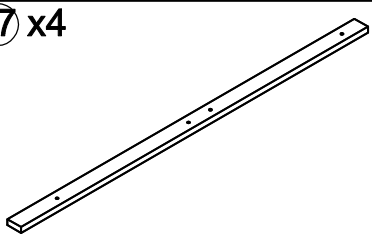
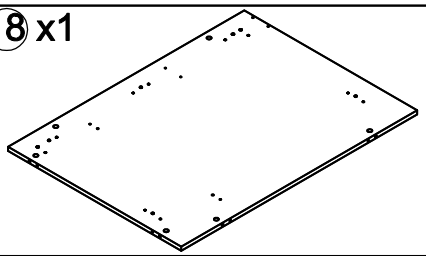
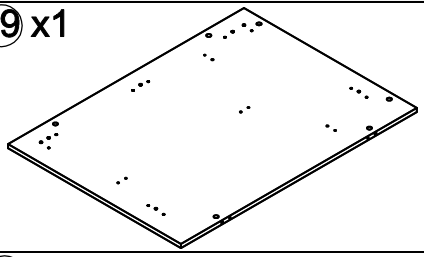
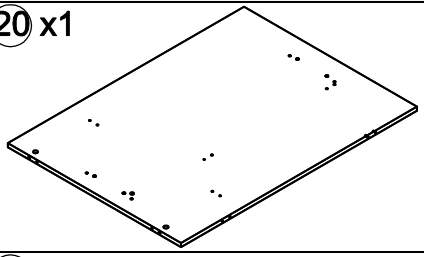
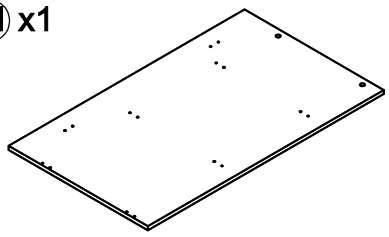
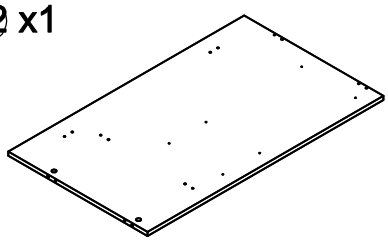
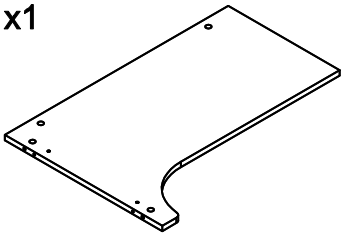
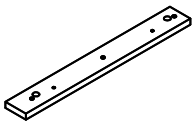
4、If you encounter any difficulties or issues during the assembly process, please don't hesitate to reach out to us via email or Amazon message. We assure you that we will address your concerns and provide a solution within 24 hours.



















Thank you for your attention to these important instructions.








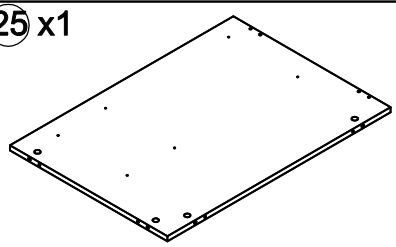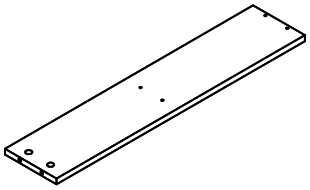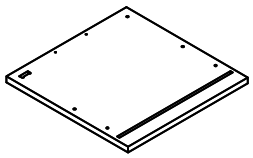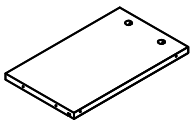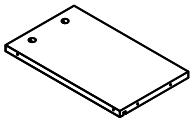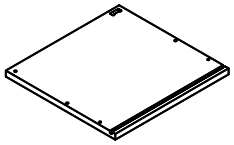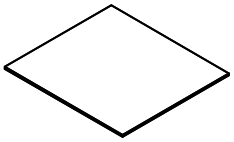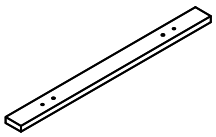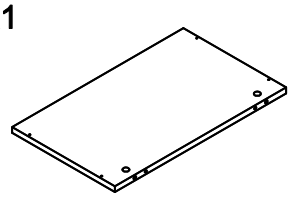1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42

| | | |
|---|---|---|
| ① x1  | ② x1  | ③ x1  |
| ④ x1  | ⑤ x1  | ⑥ x1  |
| ⑦ x2  | ⑧ x1  | ⑨ x2  |
| ⑩ x1  | ⑪ x1  | ⑫ x1  |
| ⑬ x1  | ⑭ x2  | ⑮ x4  |
| ⑯ x2  | ⑰ x4  | ⑱ x1  |
| ⑲ x1  | ⑳ x1  | ㉑ x1  |
| ㉒ x1  | ㉓ x1  | ㉔ x1  |


| | | |
|---|---|---|
| 25 x1  | 26 x2  | 27 x1  |
| 28 x3  | 29 x1  | 30 x1  |
| 31 x1  | 32 x2  | 33 x2  |
| 34 x1  | 35 x1  | 36 x2  |
| 37 x1  | 38 x3  | 39 x1  |
| 40 x1  | 41 x1  | 42 x1  |
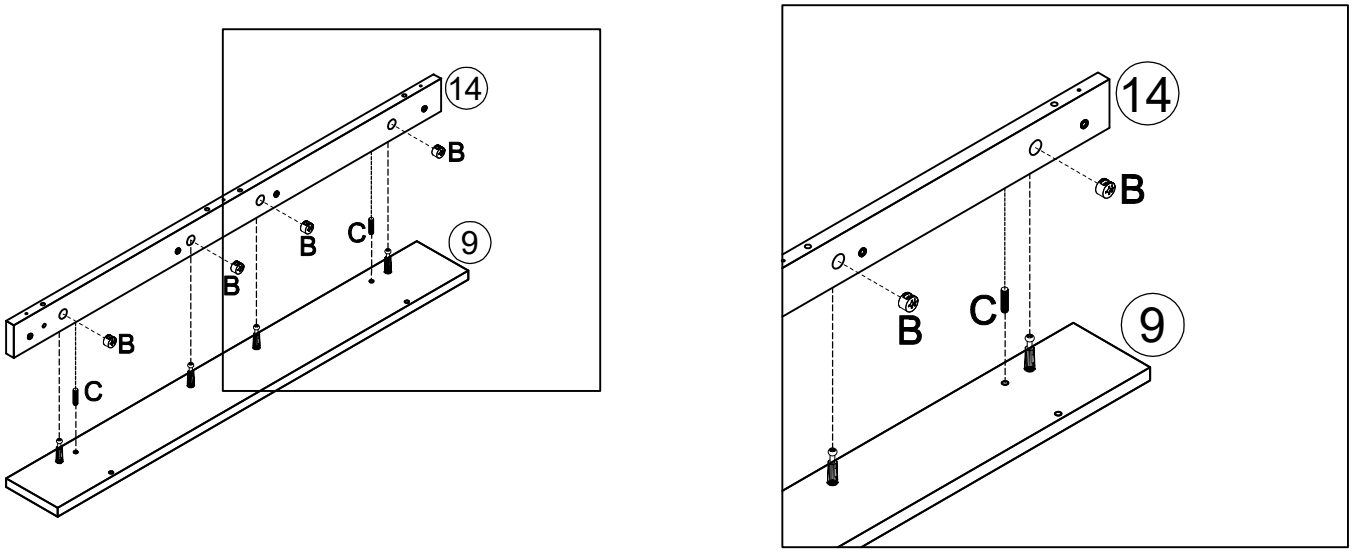
## How the knock down assembly system works





## How to Install Wood Dowel

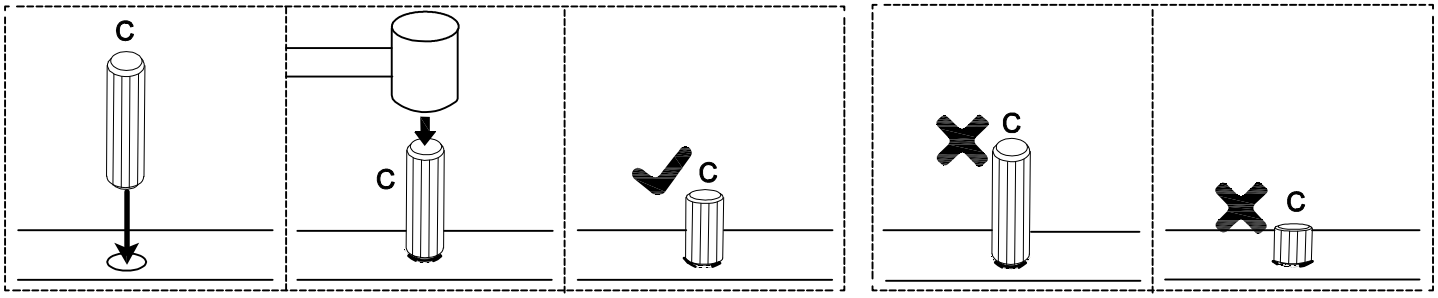
Insert the wood dowel [C ] at least half wat by tapping lightly with a rubber mallet,IF NECESSARY.





## CAM LOCK SYSTEM OPERATION

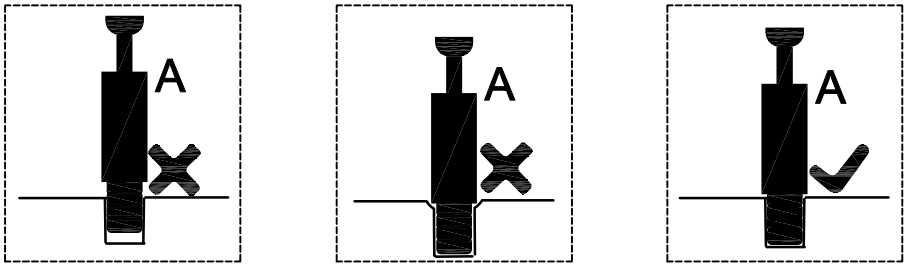

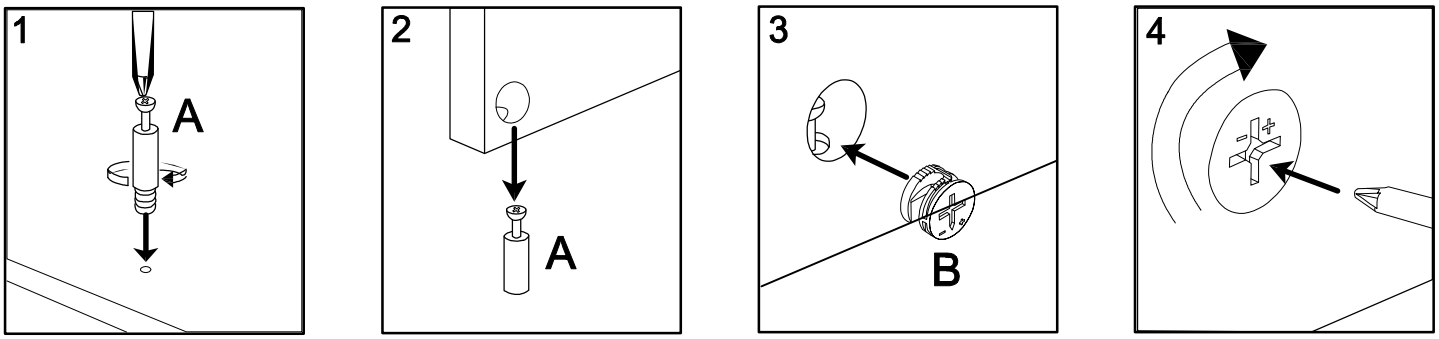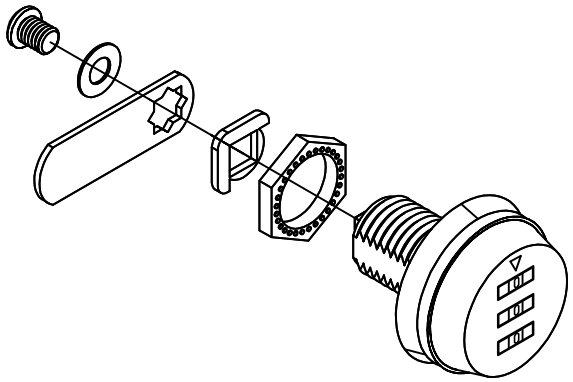

1.Screw the cam bolt [A] into the threaded insert on the panel.
2.Connect both panels together making sure cam bolt[A] goes into the pre-drilled large gole on the end of panel for cam lock[B].
3.Insert the cam lock[B] into the pro-drilled large hole on the panel.Make sure the cross slot of cam lock [B] faces out(The arrow should point towards Screw No. A).
4.Rotate the cam lock [B] clockwise with a self-supplied phillips screwdriver to lock the cam bolt [A] in place(Rotate 100-180 degrees until tight).






Easy Installation:
-Can rotate the combination dial clockwise or counterclockwise

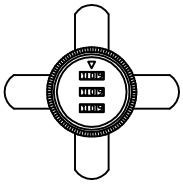Set Your Own Password
-The password can be changed instantly
-No special tools required



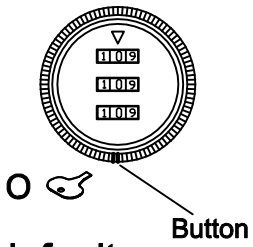1000 Combination Options
Change the password simply by pressing the button and setting the code in just a few seconds




Important Notes:
Password Setting
1、Password must be set when the lock is unlocked (default password is 0-0-0)
2、The reset position is located at the small hole on the lower edge of the outer ring; rotate the head until the internal button becomes visible
(Can be used with accessory O)
3、Insert a small cylindrical rod into the button, press it down, and rotate the combination dial to align your desired numbers in the center
4、Release the button to complete the password setting

Locking & Unlocking
Rotate to lock the device
After locking, randomly turn one or all combination dials to secure the lock
To unlock, rotate the dials to match the preset password

# Hardware

| A | x126 +5(spare) | B | x126 +5(spare) | C | x103 +5(spare) | D | x40 +4(spare) | E | x41 +3(spare) | F | x12 +1(spare) |
|---|---|---|---|---|---|---|---|---|---|---|---|
| Ø6x32mm | | | | Ø6x30mm | | Ø3.5x12mm | | Ø4x25mm | | Ø4x35mm | |

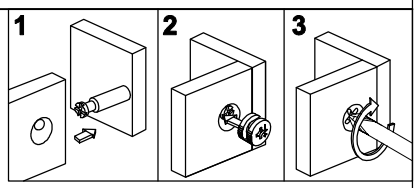
| G | x1 | H | x1 | I | x18 +2(spare) | J | x1 | K | x1 | L | x3 |
|---|---|---|---|---|---|---|---|---|---|---|---|

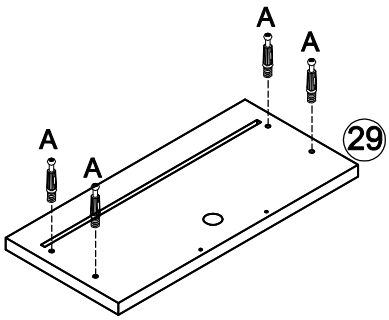
| N | x1 | M | x2 | O | x1 | P | x1 | Q | x26 +3(spare) | R | x60 |
|---|---|---|---|---|---|---|---|---|---|---|---|
| | | | | | | | | Ø6x20mm | | | |

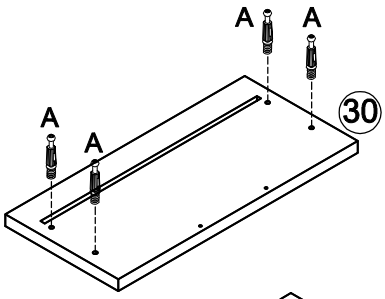
| S | x2 | T | x1 | CL | x3 | CR | x3 | DL | x3 | DR | x3 |
|---|---|---|---|---|---|---|---|---|---|---|---|
| Ø5x352mm | | | | L350mm | | L350mm | | L350mm | | L350mm | |

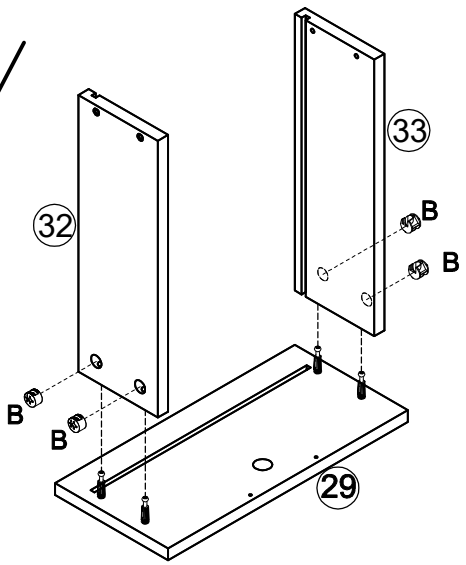
| CL | x1 | CR | x1 | DL | x1 | DR | x1 |
|---|---|---|---|---|---|---|---|
| L300mm | | L300mm | | L300mm | | L300mm | |


## STEP1








| A | x8 |
|---|---|
| Ø6x32mm | |

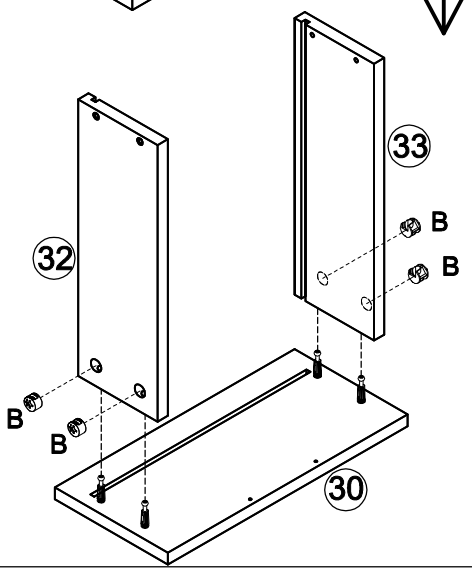
| B | x8 |
|---|---|
| | |

## STEP2

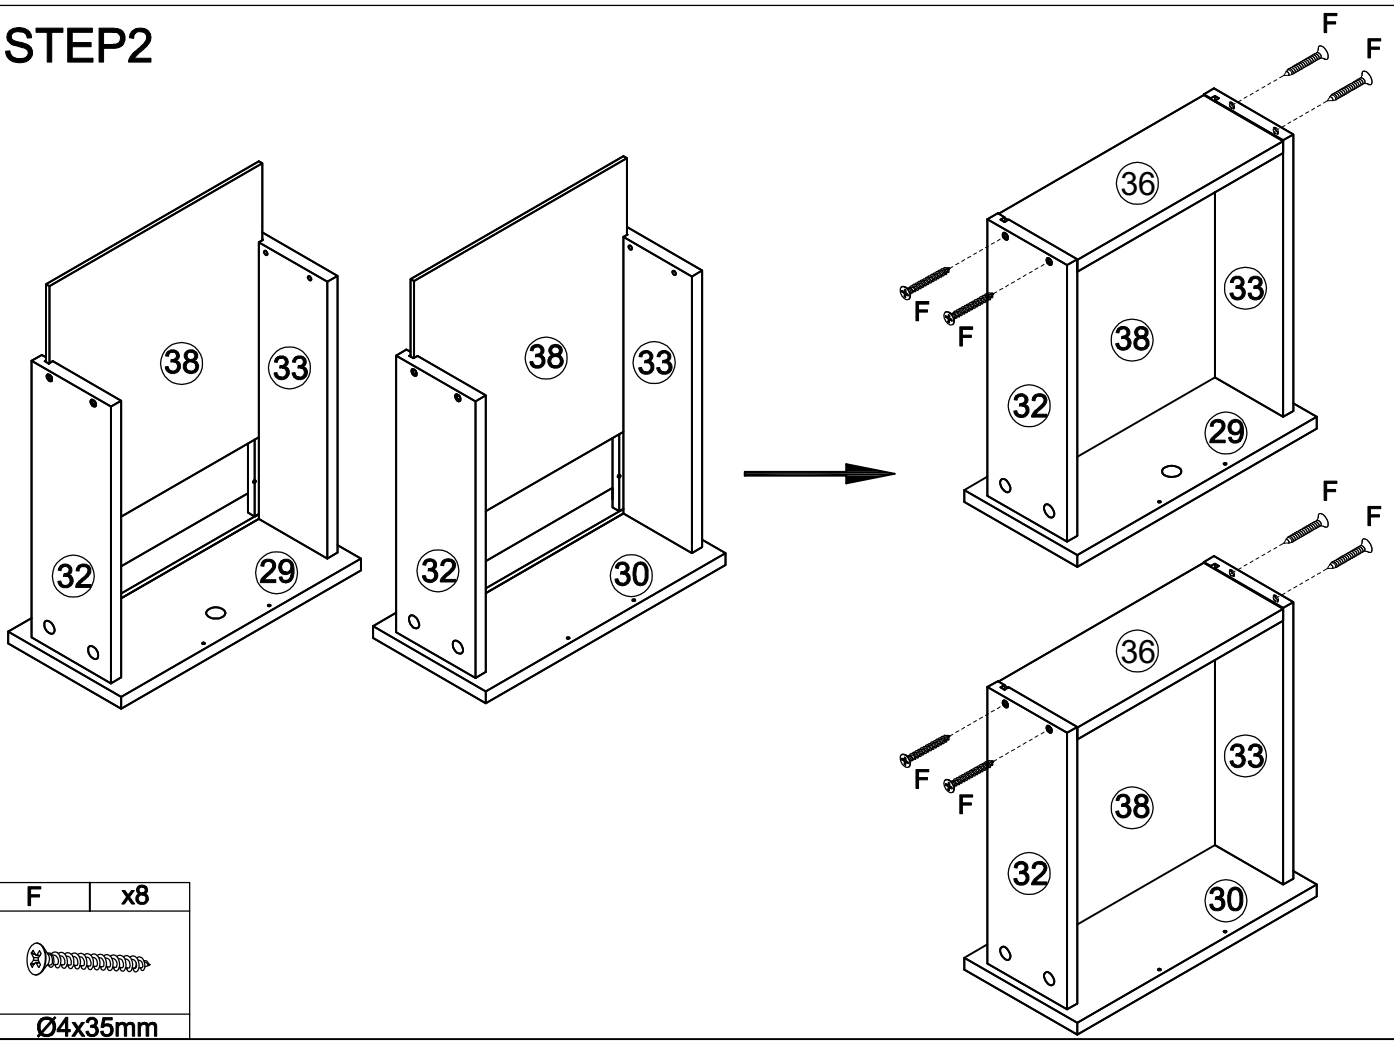



| F | x8 |
|---|---|
| Ø4x35mm | |

## STEP3

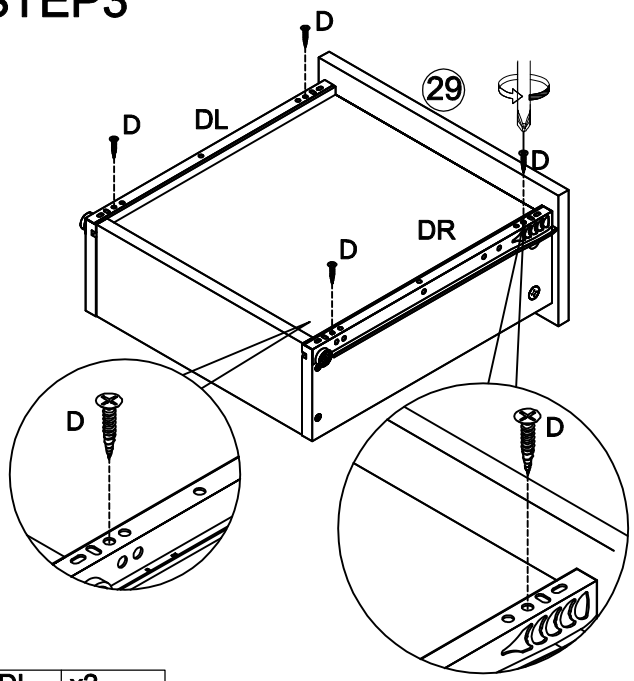


DL=350mm
DR=350mm

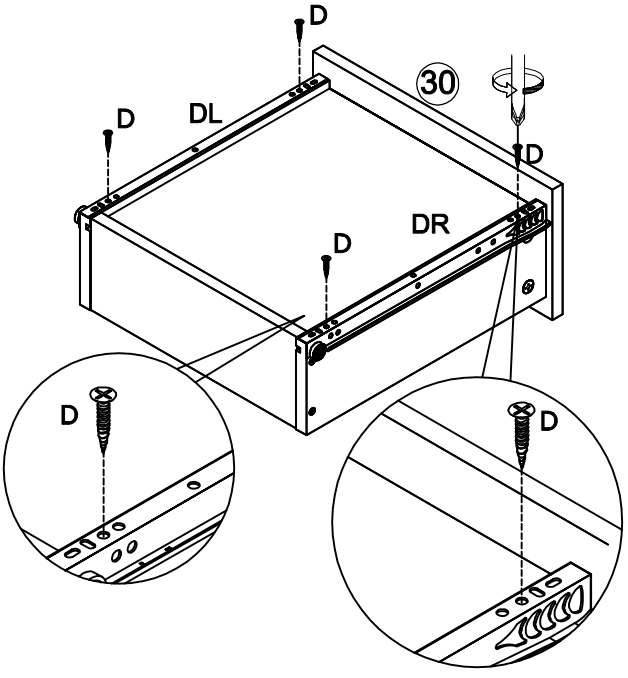



| DL | x2 |
|---|---|
| L350mm | |

| DR | x2 |
|---|---|
| L350mm | |

| D | x8 |
|---|---|
| Ø3.5x12mm | |

# STEP4

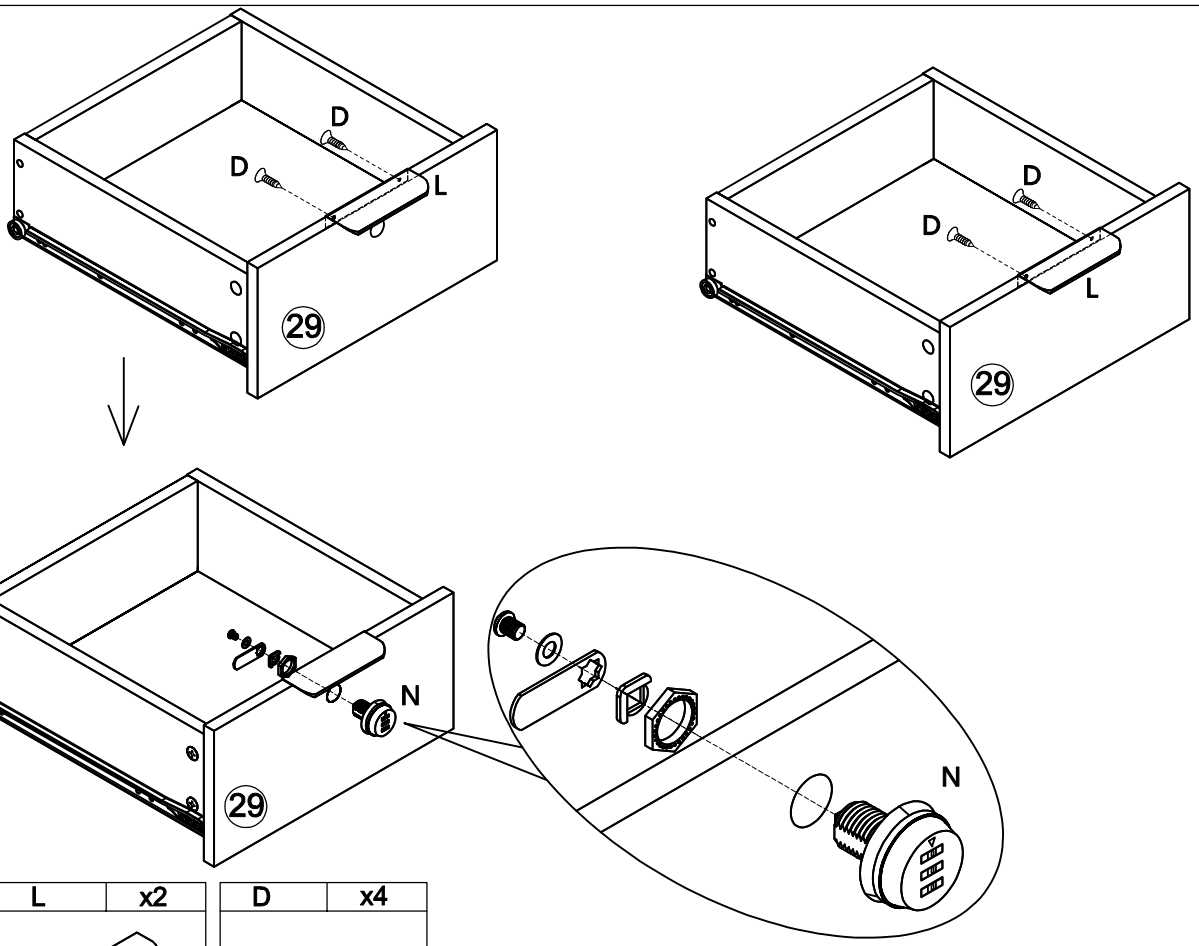




| N | x1 |
|---|---|
|  | |

| L | x2 |
|---|---|
|  | |

| D | x4 |
|---|---|
|  | Ø3.5x12mm |

# STEP5

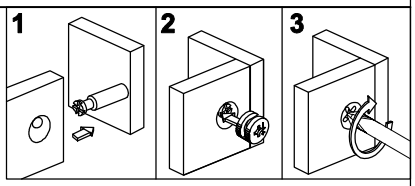

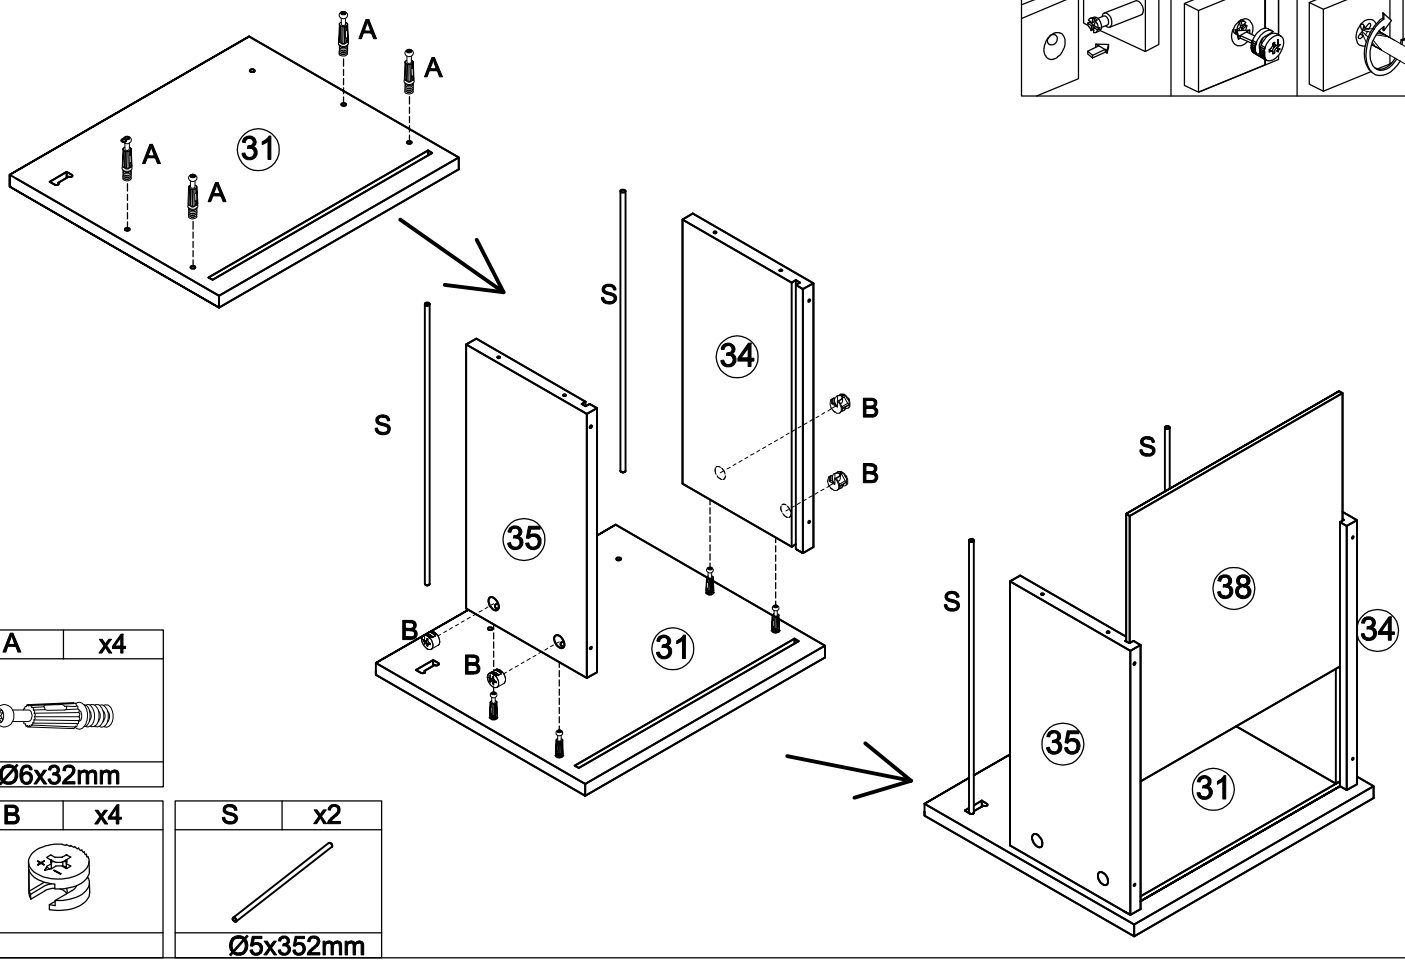




| A | x4 |
|---|---|
|  | Ø6x32mm |

| B | x4 |
|---|---|
|  | |

| S | x2 |
|---|---|
|  | Ø5x352mm |
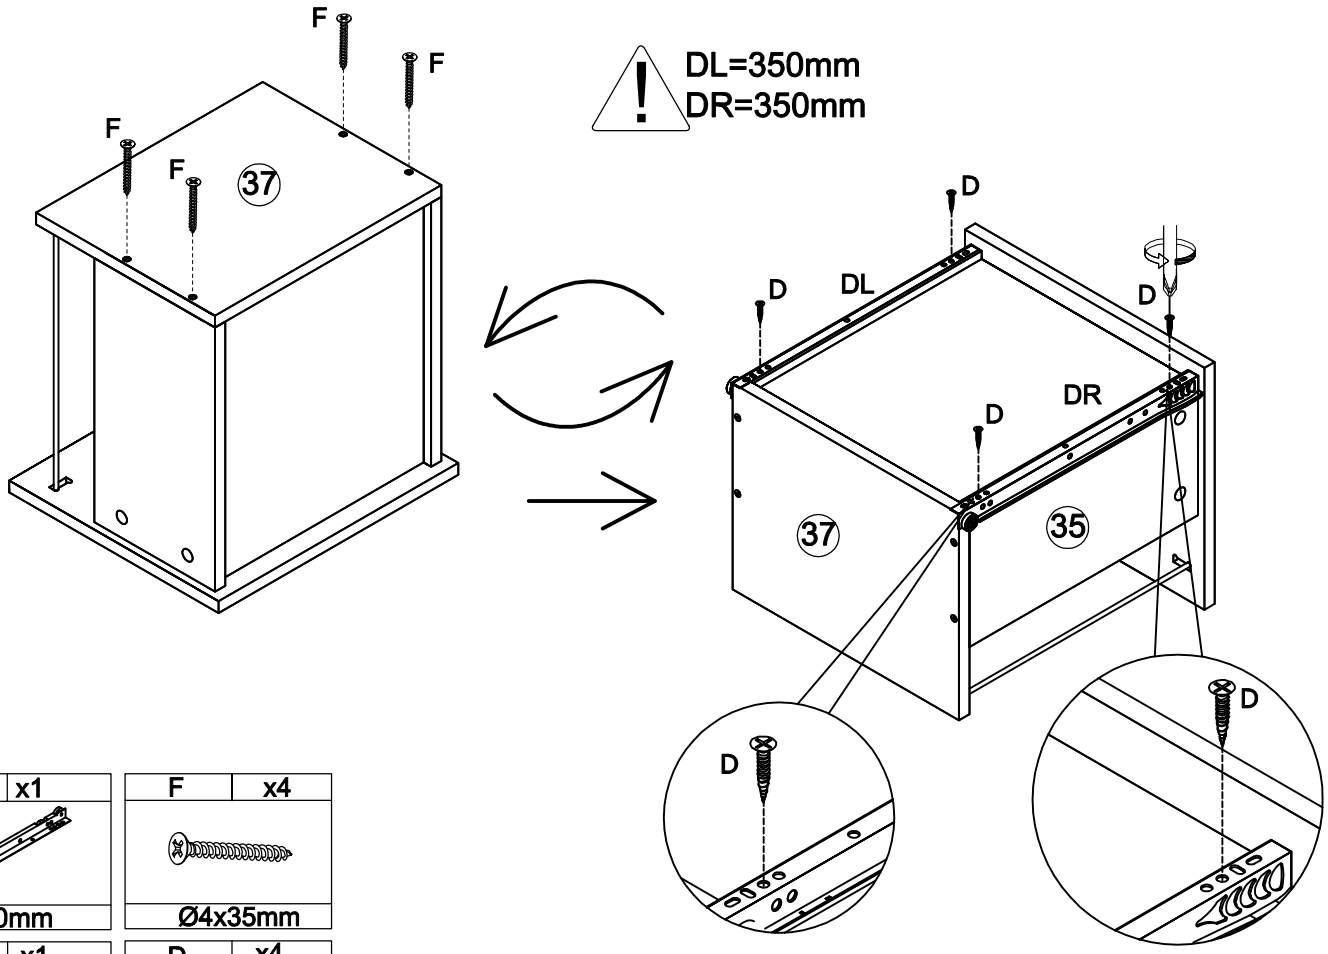
# STEP6





| DL | x1 |
|---|---|
| L350mm | |

| F | x4 |
|---|---|
| Ø4x35mm | |

| DR | x1 |
|---|---|
| L350mm | |

| D | x4 |
|---|---|
| Ø3.5x12mm | |


# STEP7

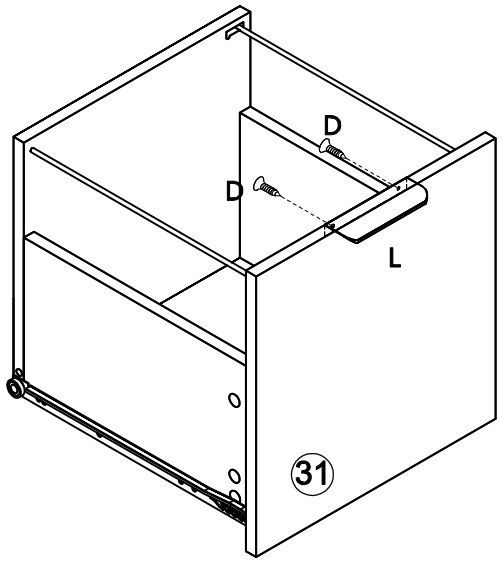


| L | x1 |
|---|---|
| | |

| D | x2 |
|---|---|
| Ø3.5x12mm | |

# STEP8

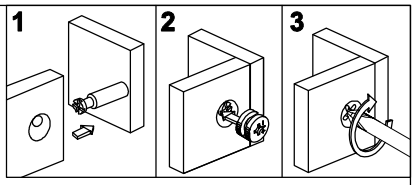





| A | x2 |
|---|---|
| Ø6x32mm | |

| C | x2 |
|---|---|
| Ø6x30mm | |


| B | x2 |
|---|---|
| | |

| D | x4 |
|---|---|
| Ø3.5x12mm | |

| DL | x1 |
|---|---|
| L300mm | |

| DR | x1 |
|---|---|
| L300mm | |

# STEP9

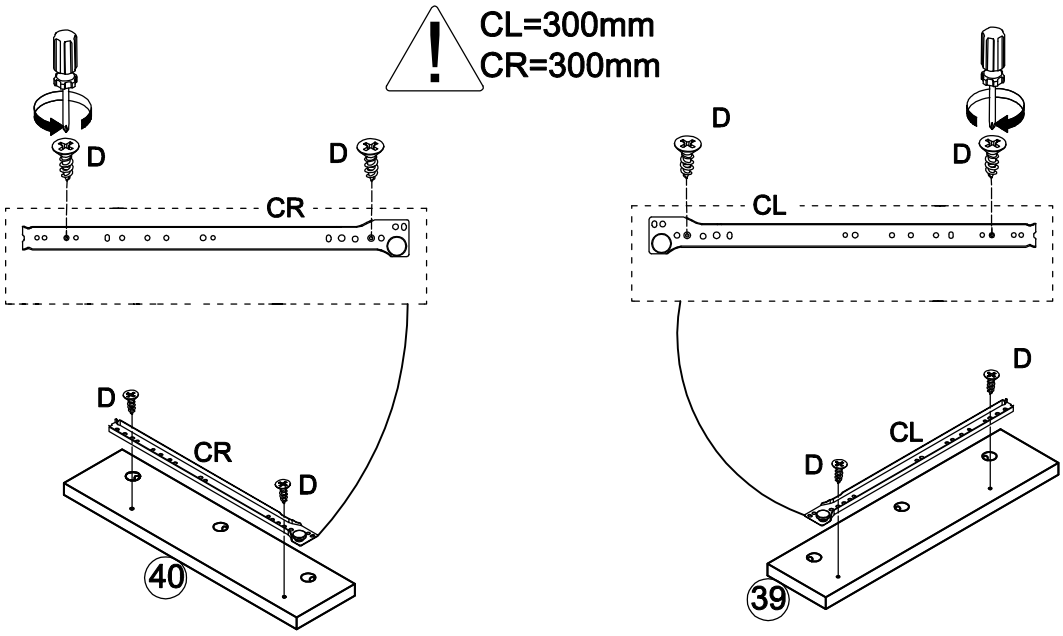



| D | x4 |
|---|---|
| Ø3.5x12mm | |

| CL | x1 |
|---|---|
| L300mm | |

| CR | x1 |
|---|---|
| L300mm | |

# STEP10

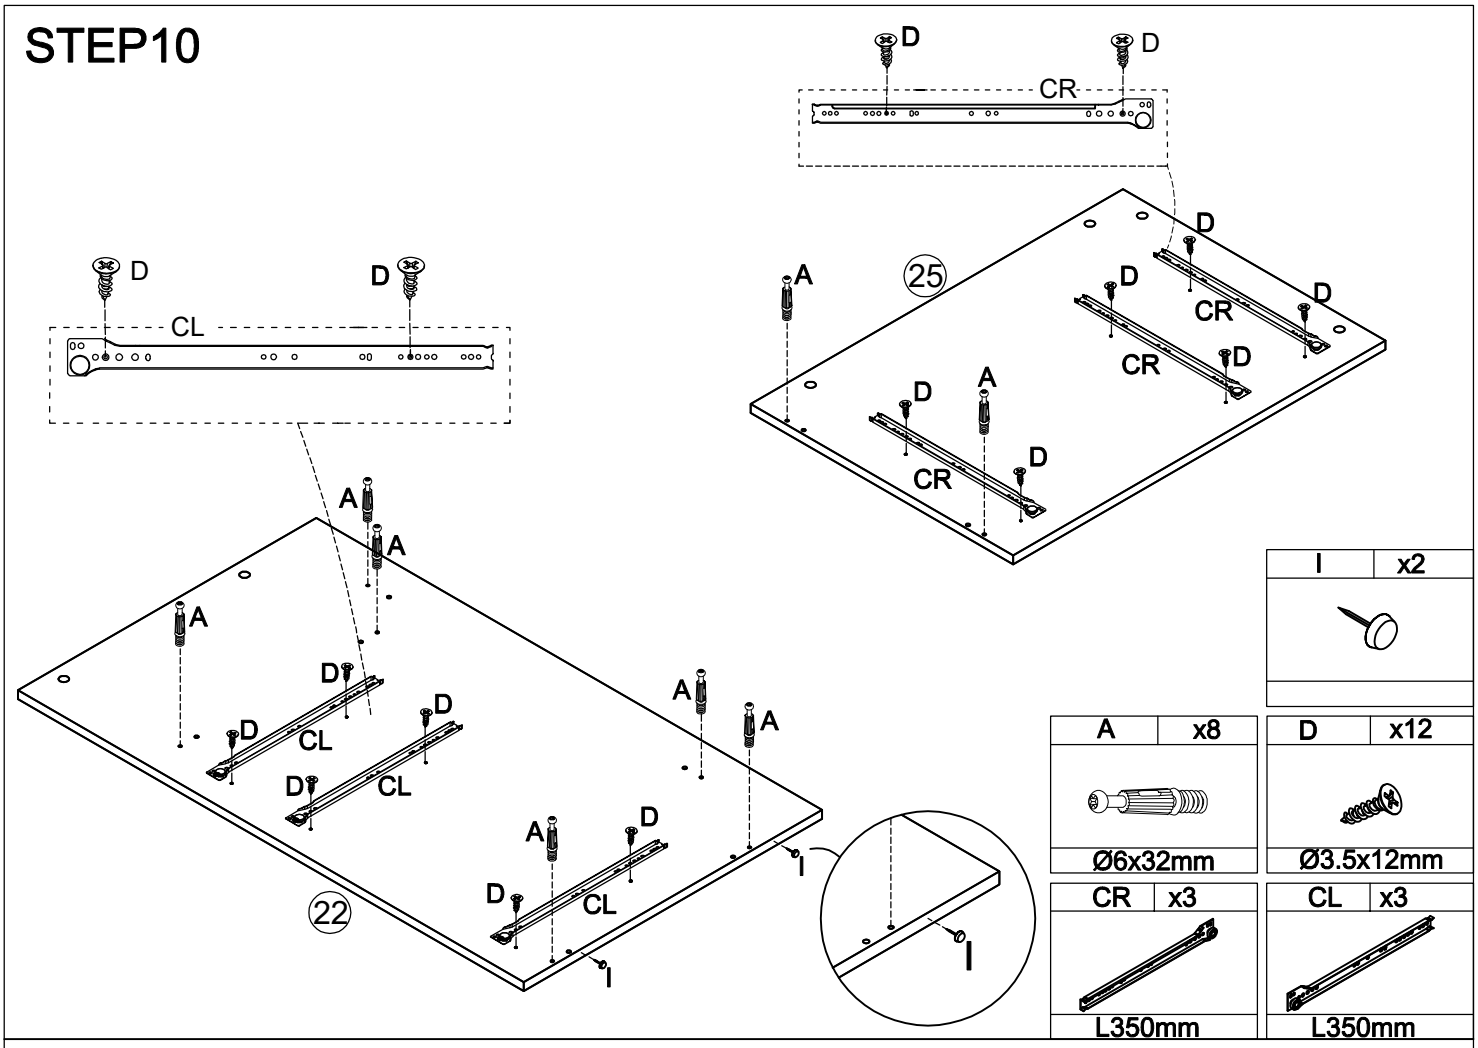


| I | x2 |
|---|---|


| A | x8 |
|---|---|
| Ø6x32mm | |

| D | x12 |
|---|---|
| Ø3.5x12mm | |

| CR | x3 |
|---|---|
| L350mm | |


| CL | x3 |
|---|---|
| L350mm | |

# STEP11

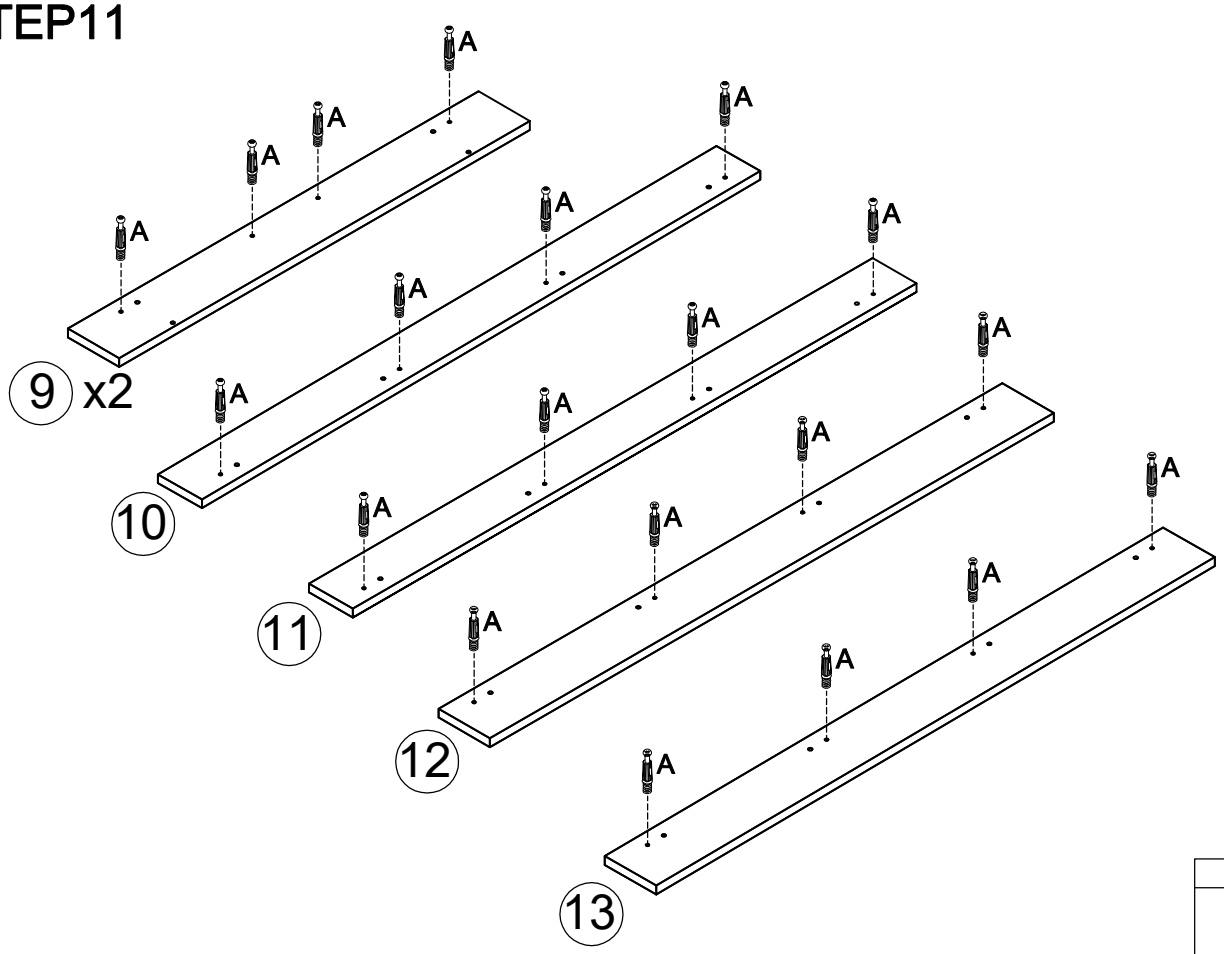


| A | x24 |
|---|---|
| Ø6x32mm | |


# STEP12

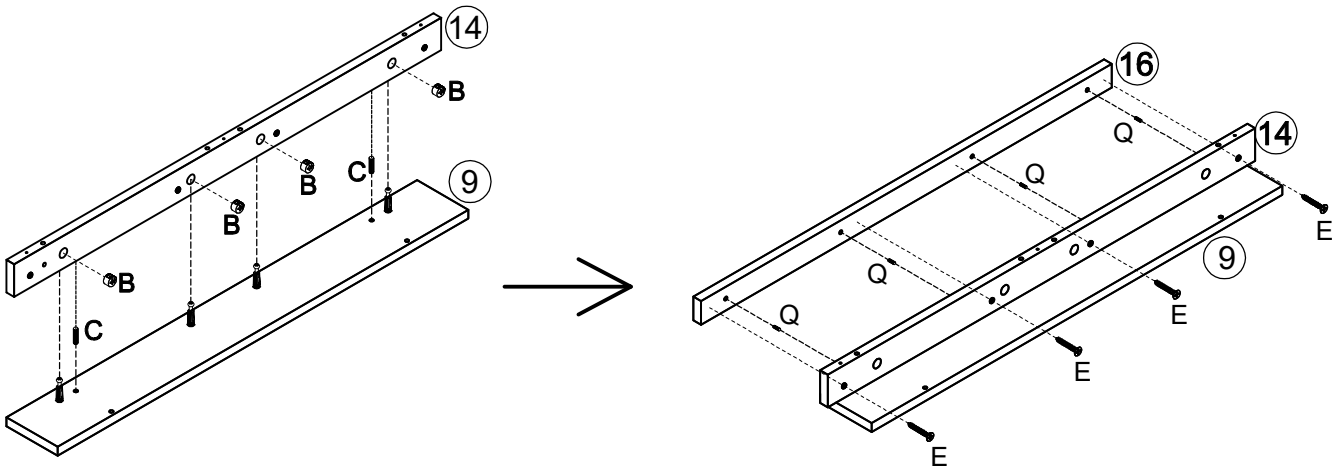


x2


| E | x8 | B | x8 | Q | x8 | C | x4 |
|---|---|---|---|---|---|---|---|
| Ø4x25mm | | | | Ø6x20mm | | Ø6x30mm | |

# STEP13

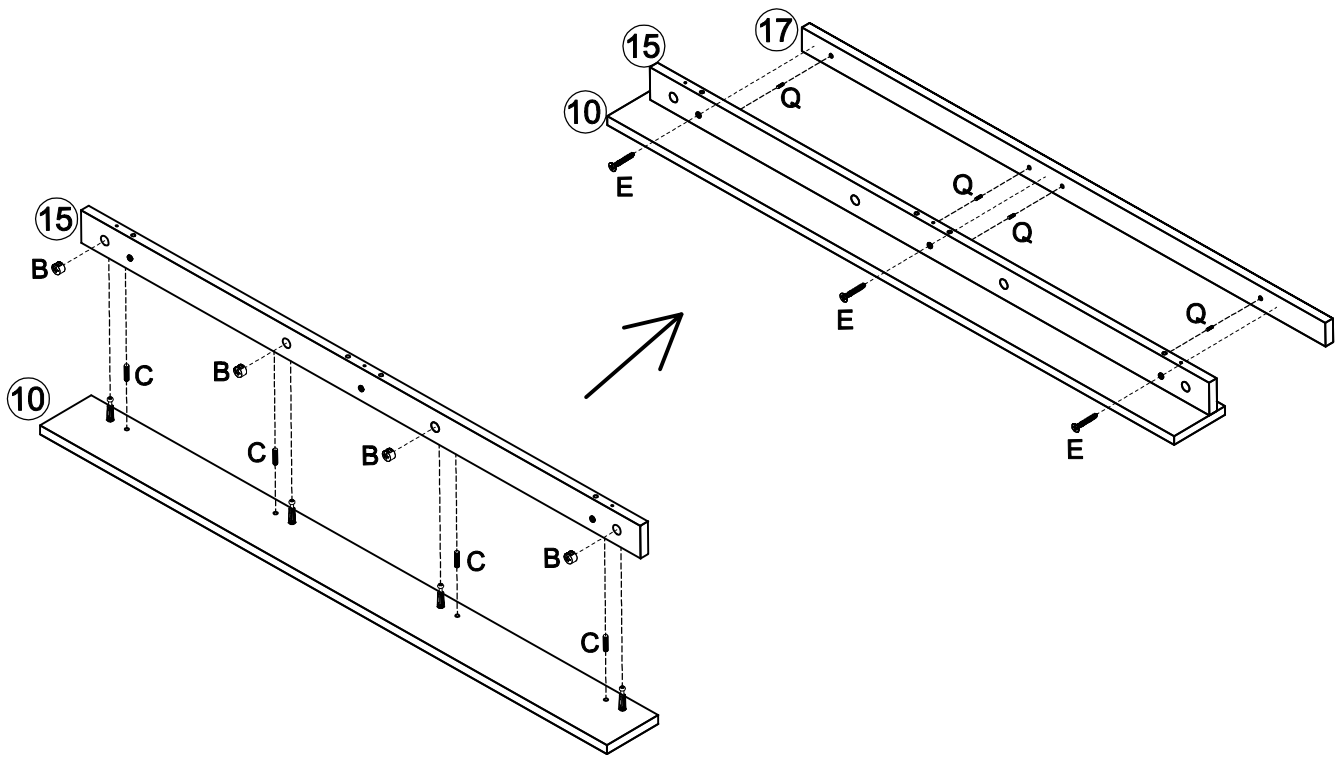



| E | x3 | B | x4 | Q | x4 | C | x4 |
|---|---|---|---|---|---|---|---|
| Ø4x25mm | | | | Ø6x20mm | | Ø6x30mm | |

# STEP14

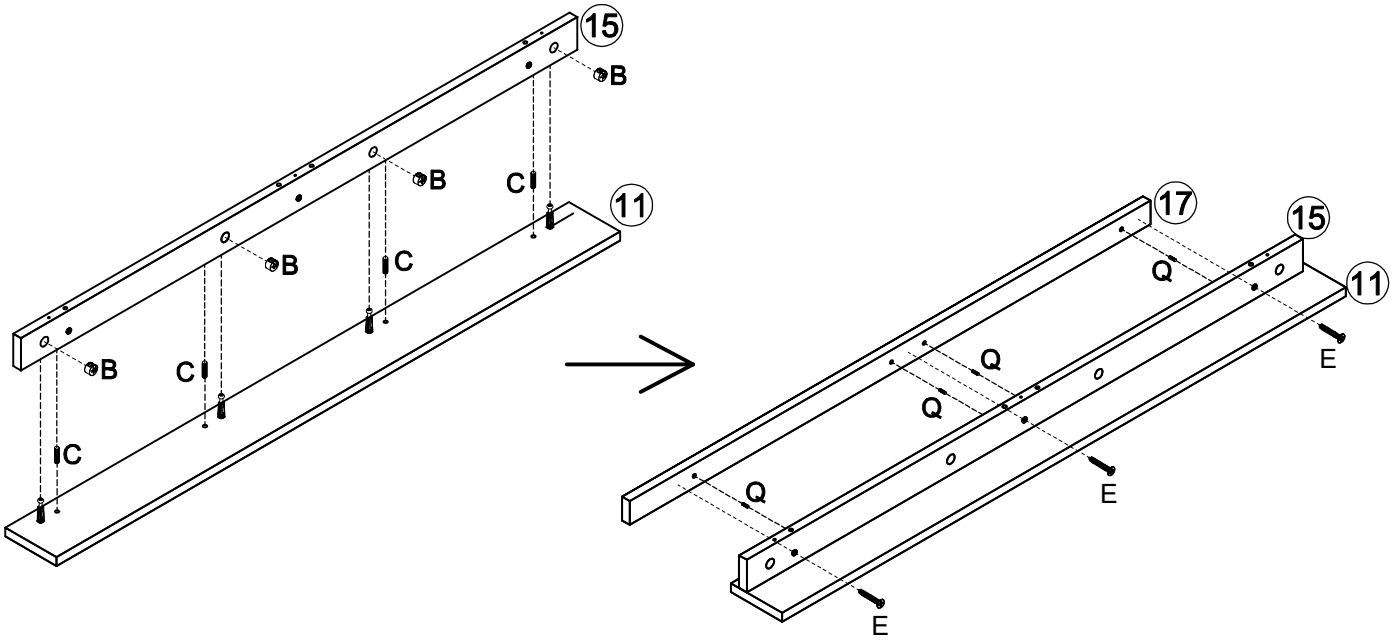



| E | x3 | B | x4 | Q | x4 | C | x4 |
|---|---|---|---|---|---|---|---|
| Ø4x25mm | | | | Ø6x20mm | | Ø6x30mm | |

# STEP15

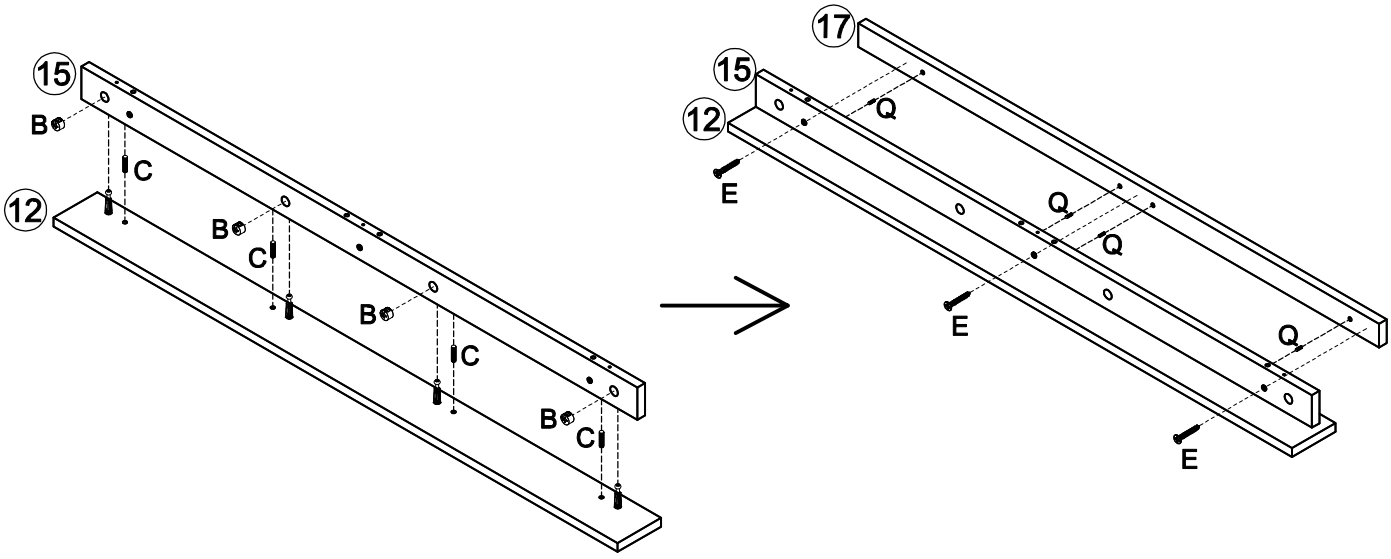



| E | x3 | B | x4 | Q | x4 | C | x4 |
|---|---|---|---|---|---|---|---|
| Ø4x25mm | | | | Ø6x20mm | | Ø6x30mm | |


# STEP16

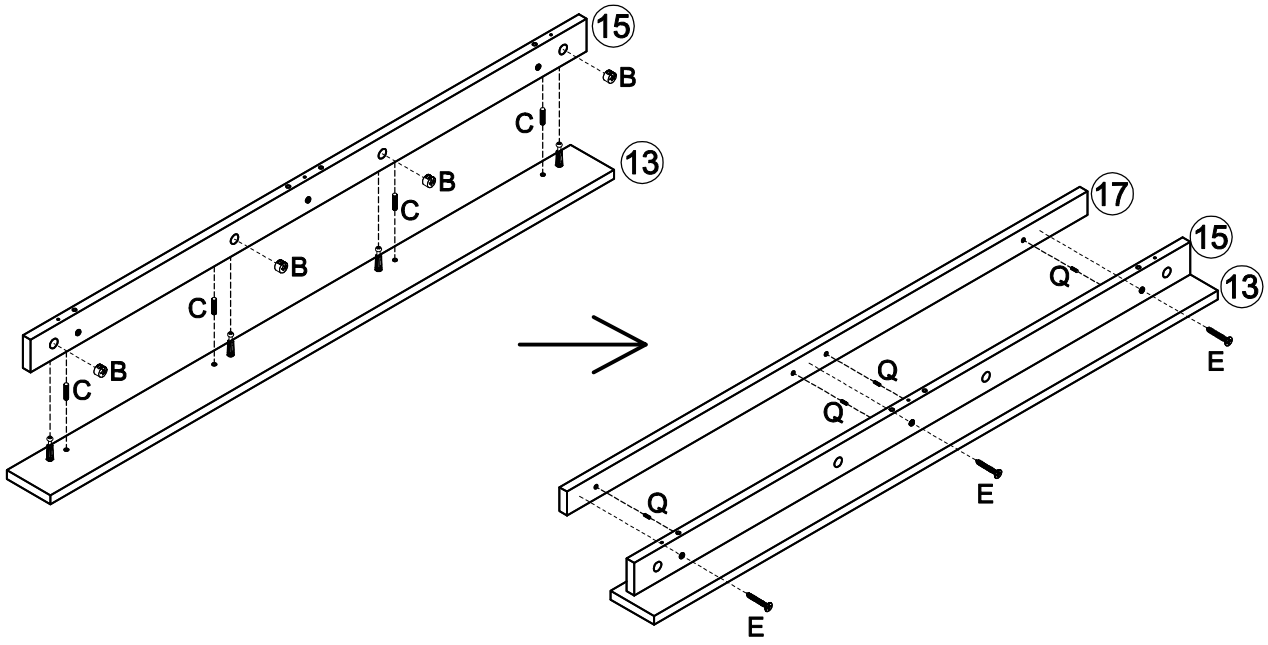



| E | x3 | B | x4 | Q | x4 | C | x4 |
|---|---|---|---|---|---|---|---|
|  | |  | |  | |  | |
| Ø4x25mm | | | | Ø6x20mm | | Ø6x30mm | |

# STEP17

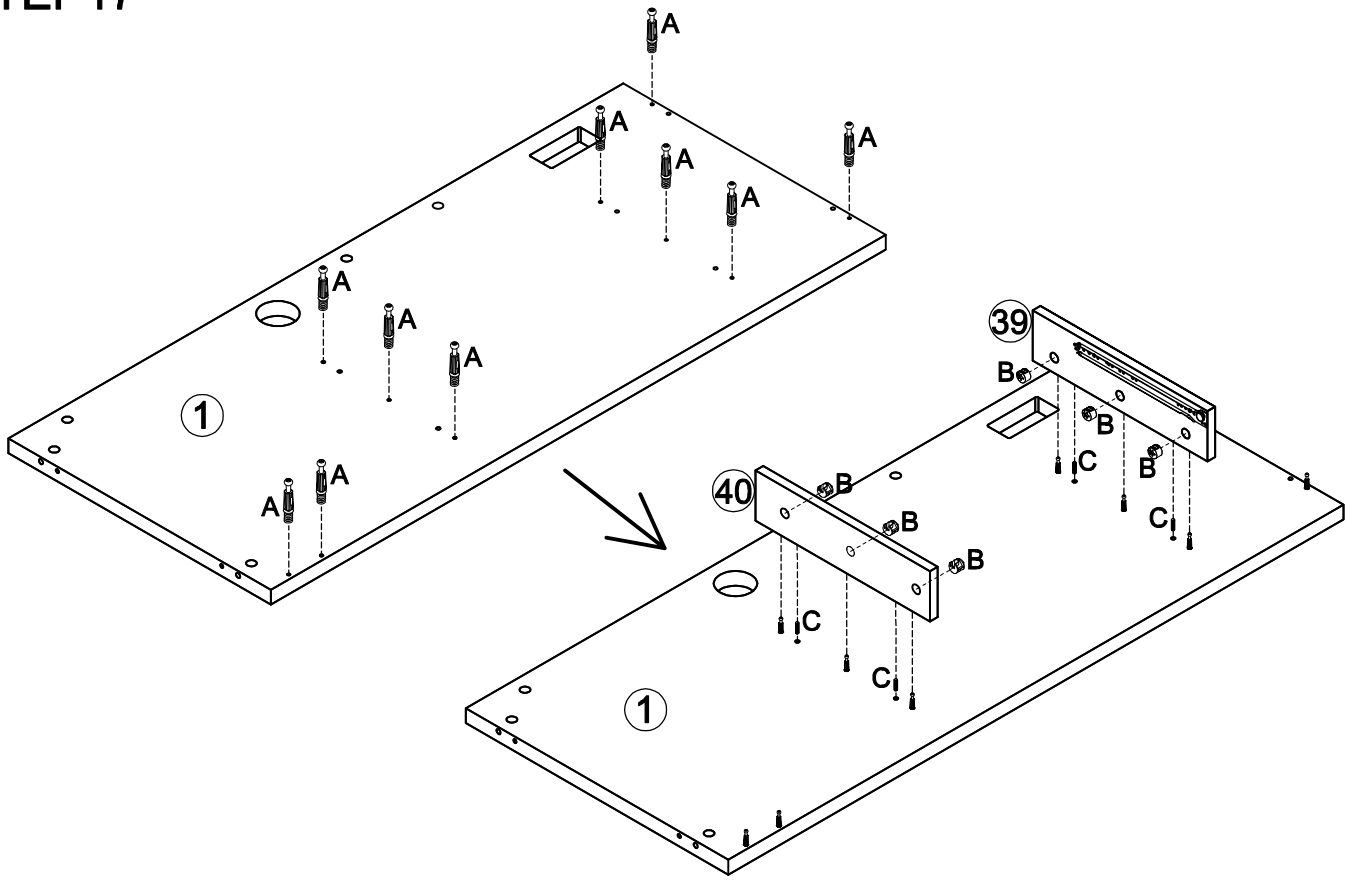



| C | x4 | A | x10 | B | x6 |
|---|---|---|---|---|---|
|  | |  | |  | |
| Ø6x30mm | | Ø6x32mm | | | |

# STEP18

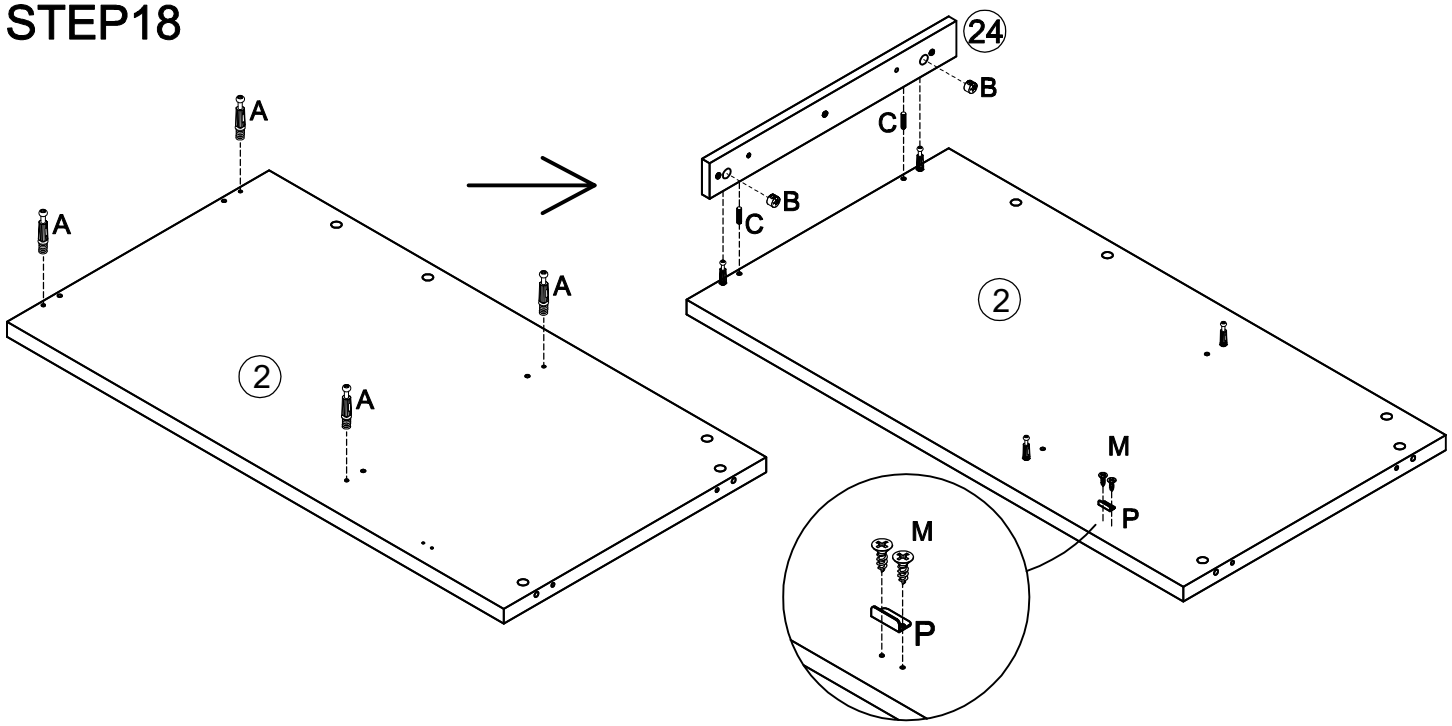



| A | x4 | B | x2 | C | x2 | M | x2 | P | x1 |
|---|---|---|---|---|---|---|---|---|---|
| Ø6x32mm | | | | Ø6x30mm | | | | | |

# STEP19

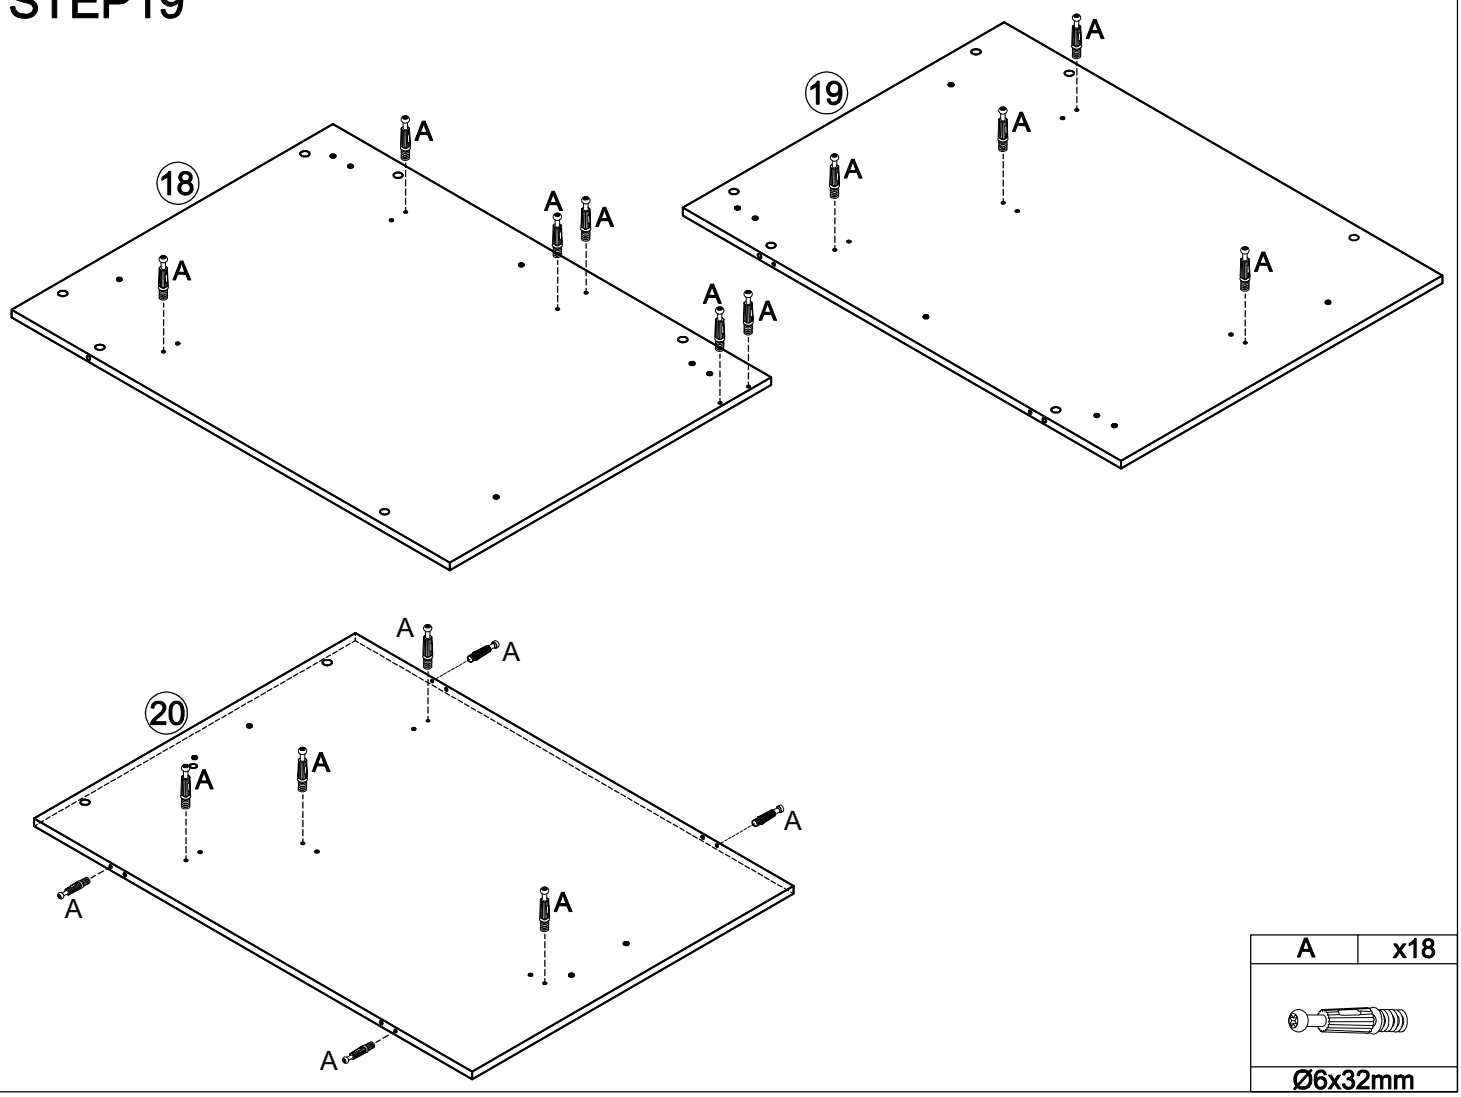



| A | x18 |
|---|---|
| Ø6x32mm | |


# STEP20

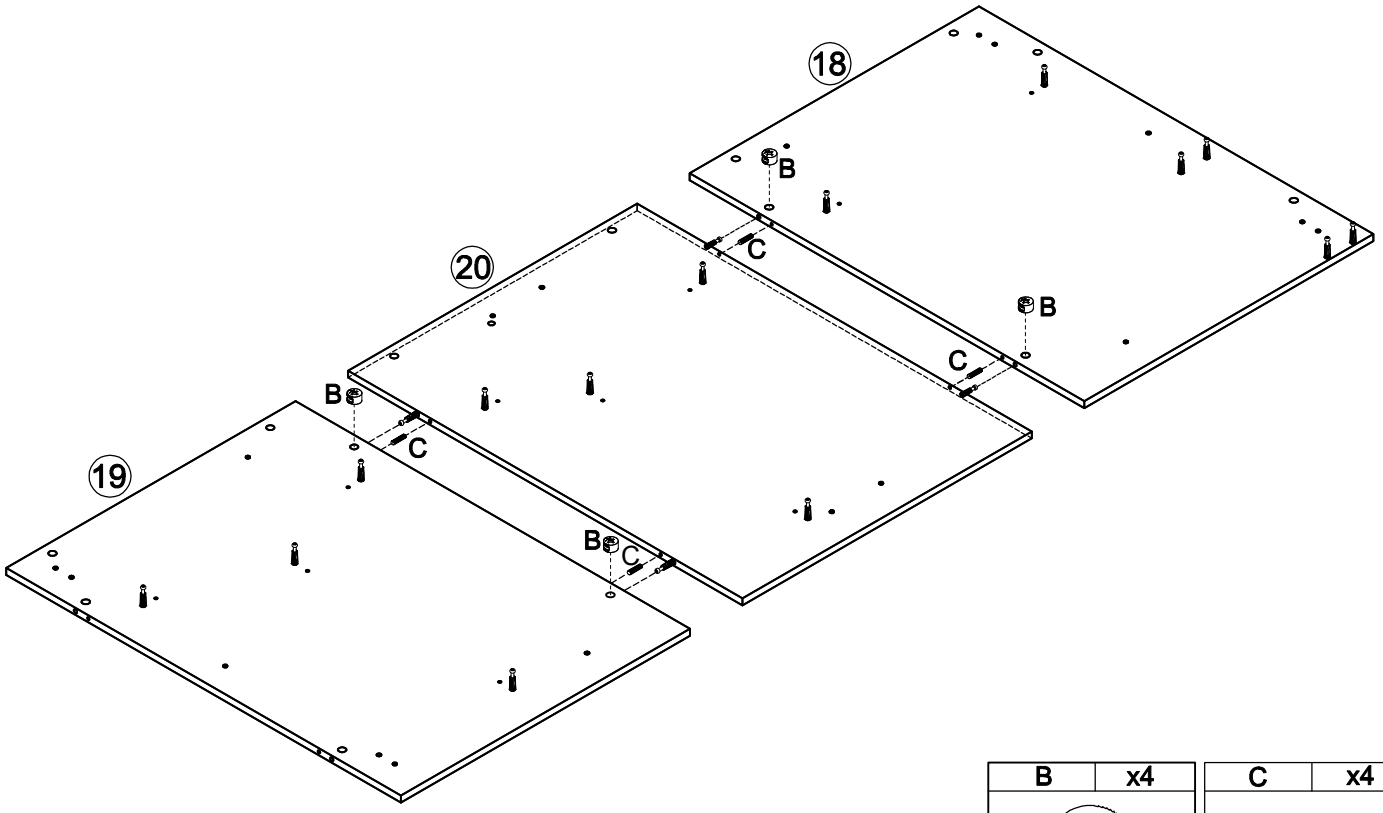


| B | x4 | C | x4 |
|---|---|---|---|
|  | |  | Ø6x30mm |


# STEP21

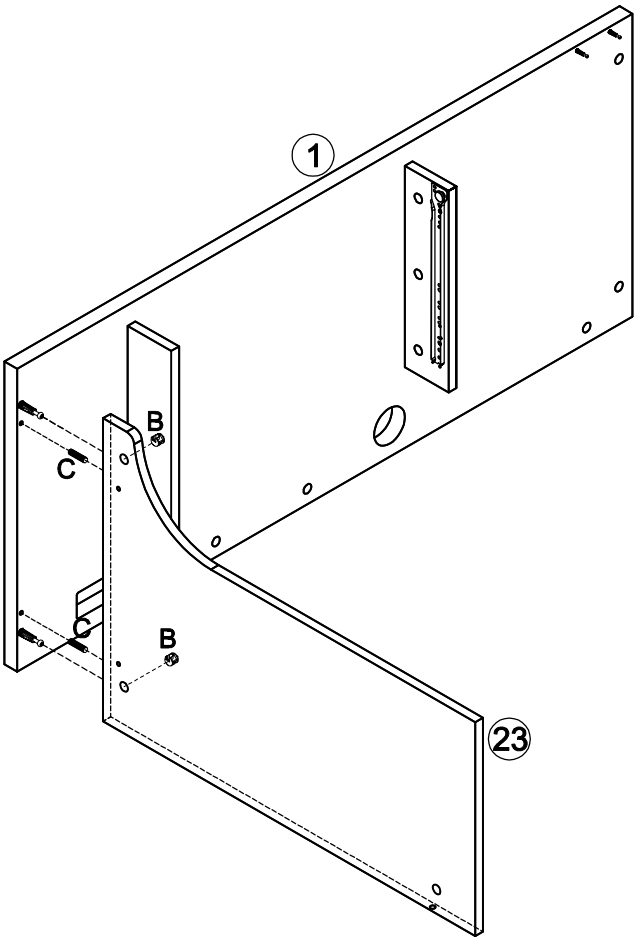

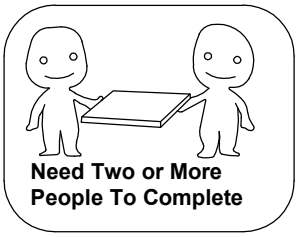
| B | x2 | C | x2 |
|---|---|---|---|
|  | |  | Ø6x30mm |


# STEP22

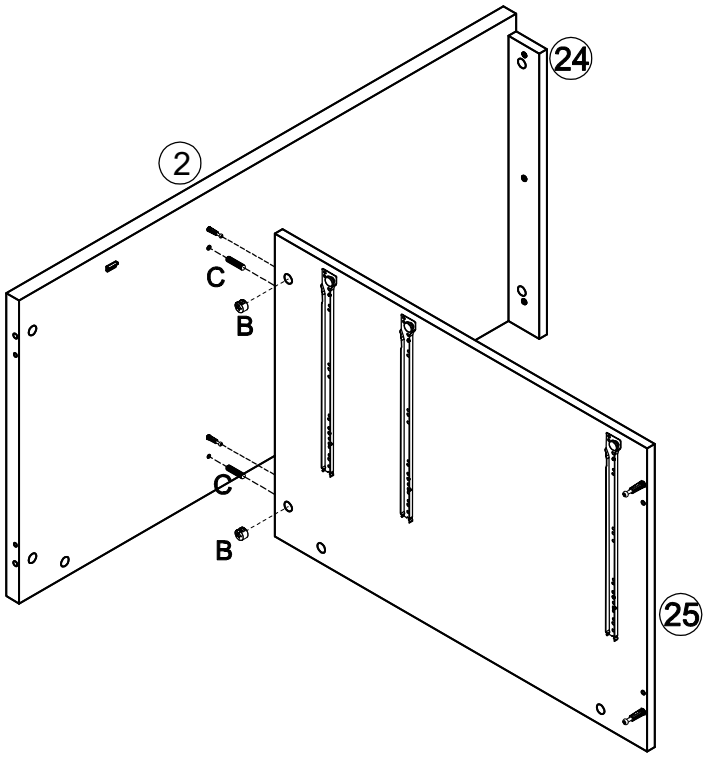


| B | x2 |
|---|---|
|  | |

| C | x2 |
|---|---|
|  | Ø6x30mm |

# STEP23

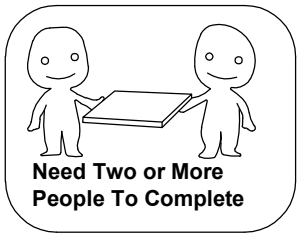







| Q | x2 |
|---|---|
|  | Ø6x20mm |

| E | x3 |
|---|---|
|  | Ø4x25mm |

# STEP24

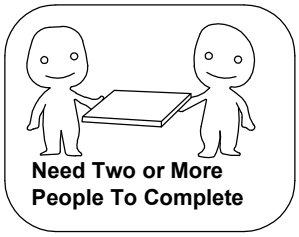


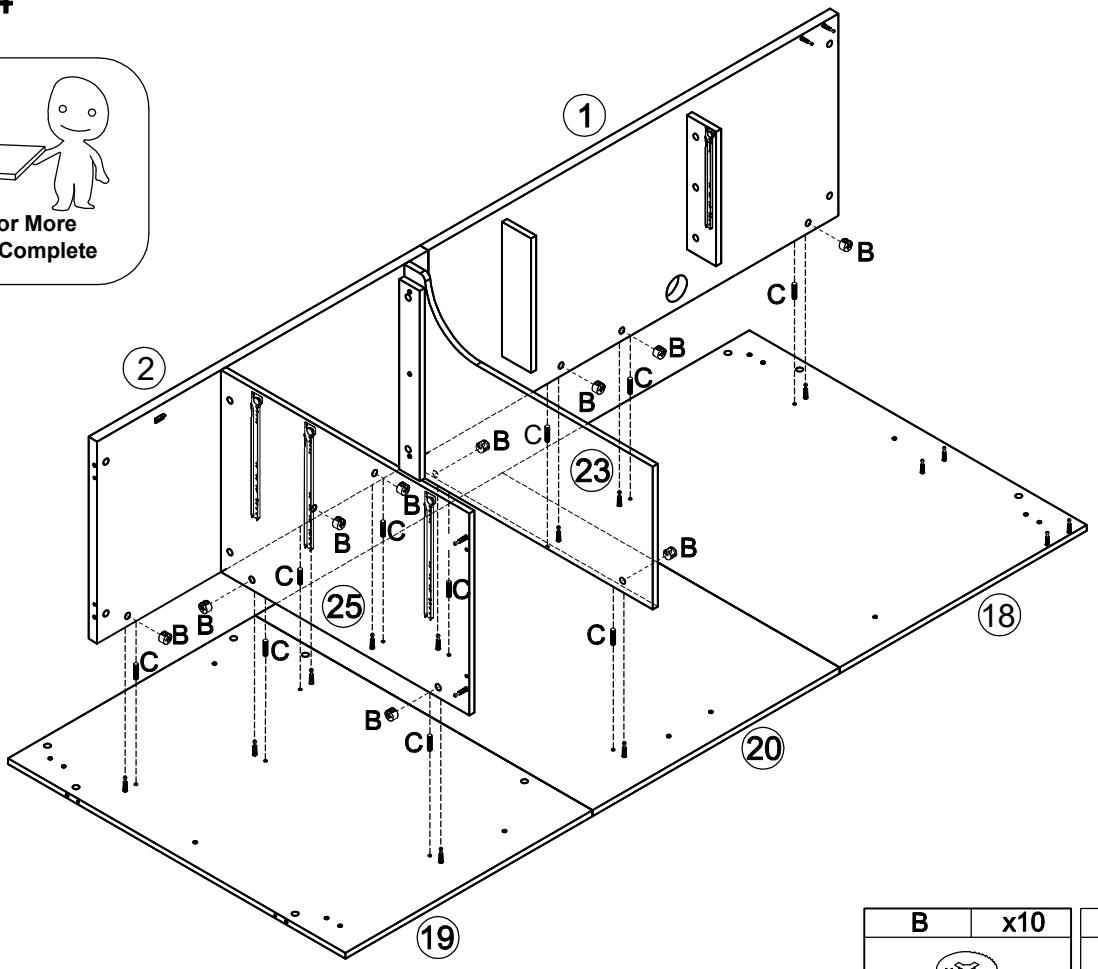
| B | x10 |
|---|---|
|  | |

| C | x10 |
|---|---|
|  | Ø6x30mm |


# STEP25

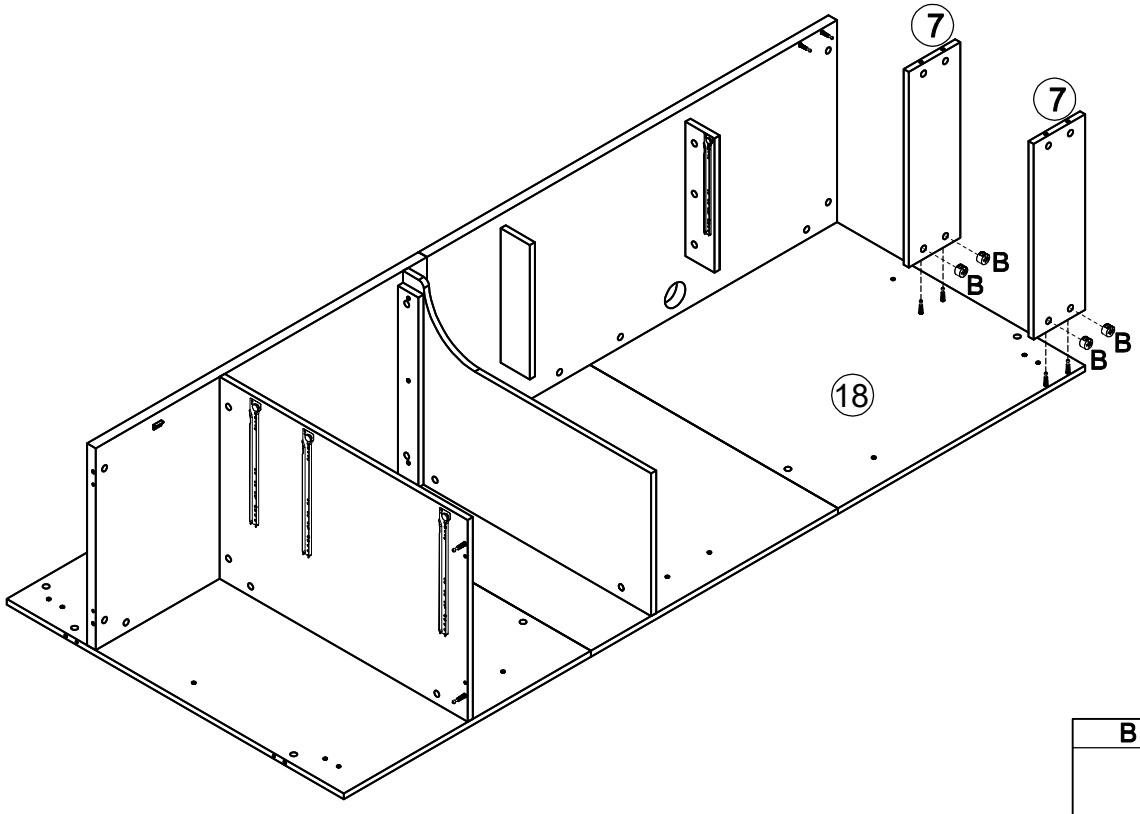


| B | x4 |
|---|---|
|  | |


# STEP26

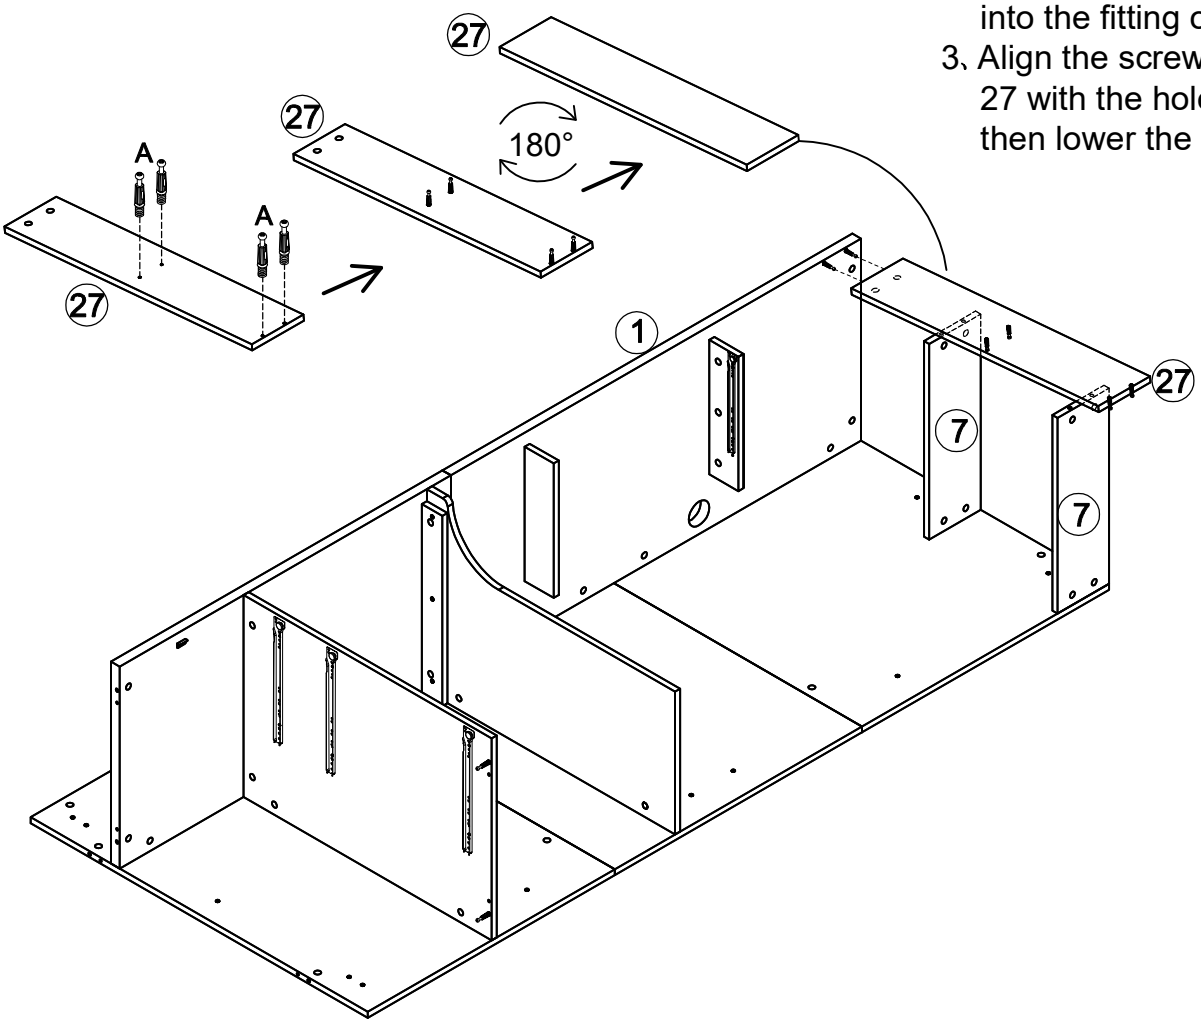1、Flip Board 27 over (180°).
2、Tilt it slightly and insert it into the fitting on Board 1.
3、Align the screws on Board 27 with the holes on Board 7, then lower the board down.




| A | x4 |
|---|---|
|  | |
| Ø6x32mm | |


# STEP27

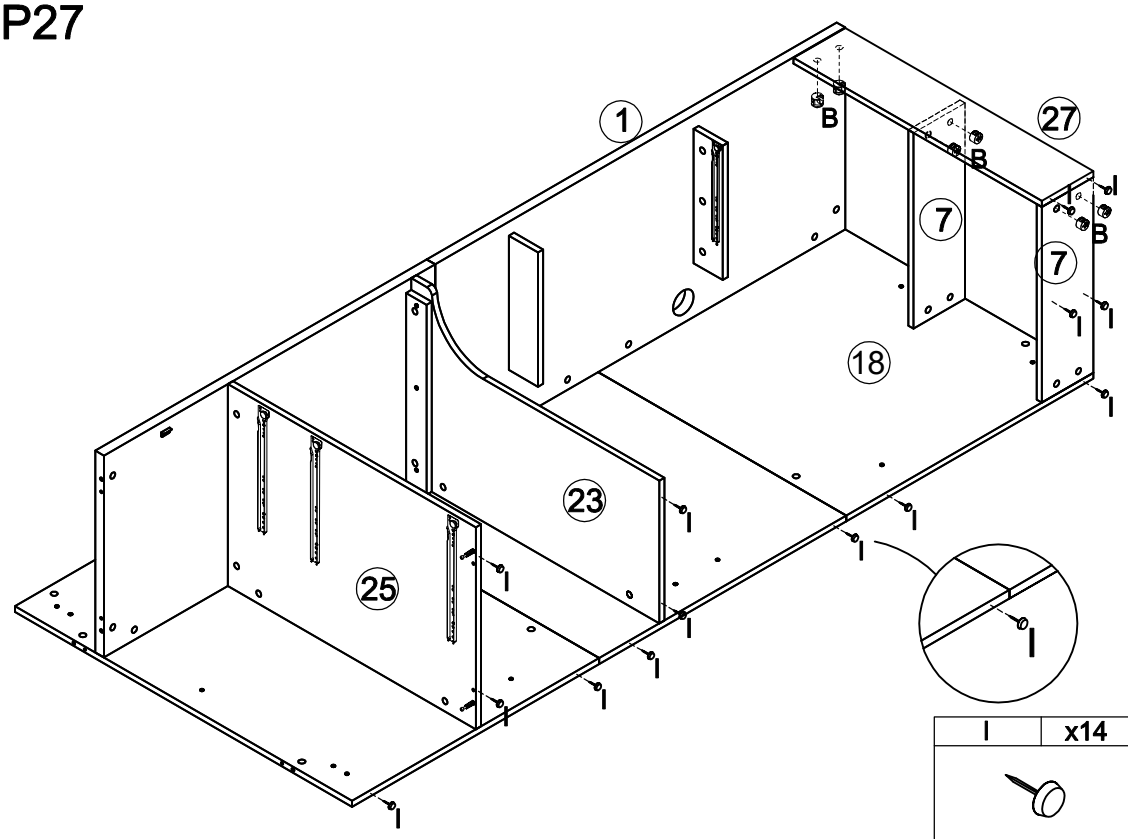


| I | x14 |
|---|---|
|  | |

| B | x6 |
|---|---|
|  | |

## STEP28

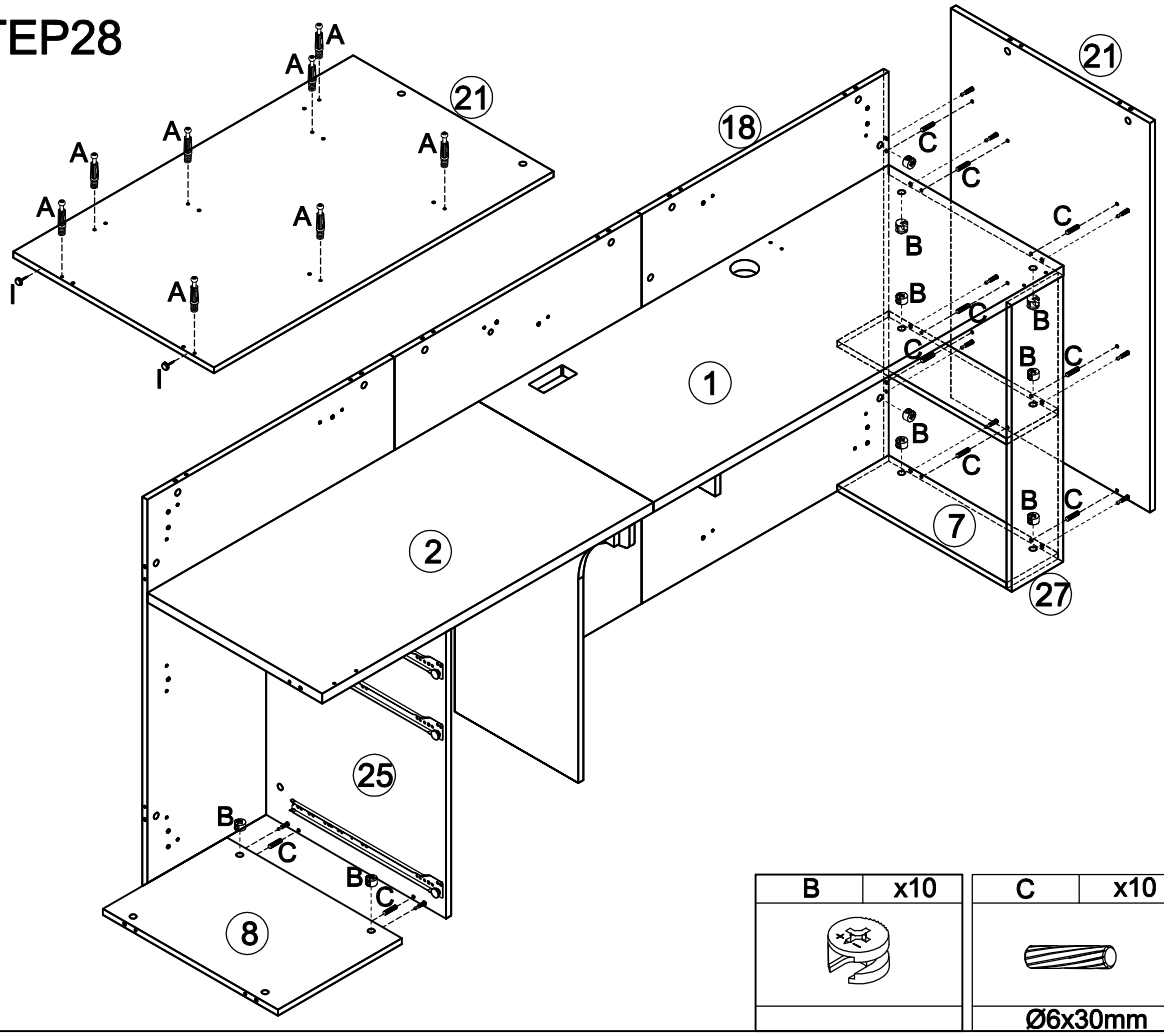



| I | x2 |
|---|---|
|  | |

| B | x10 |
|---|---|
|  | |

| C | x10 |
|---|---|
|  | Ø6x30mm |

| A | x8 |
|---|---|
|  | Ø6x32mm |


## STEP29

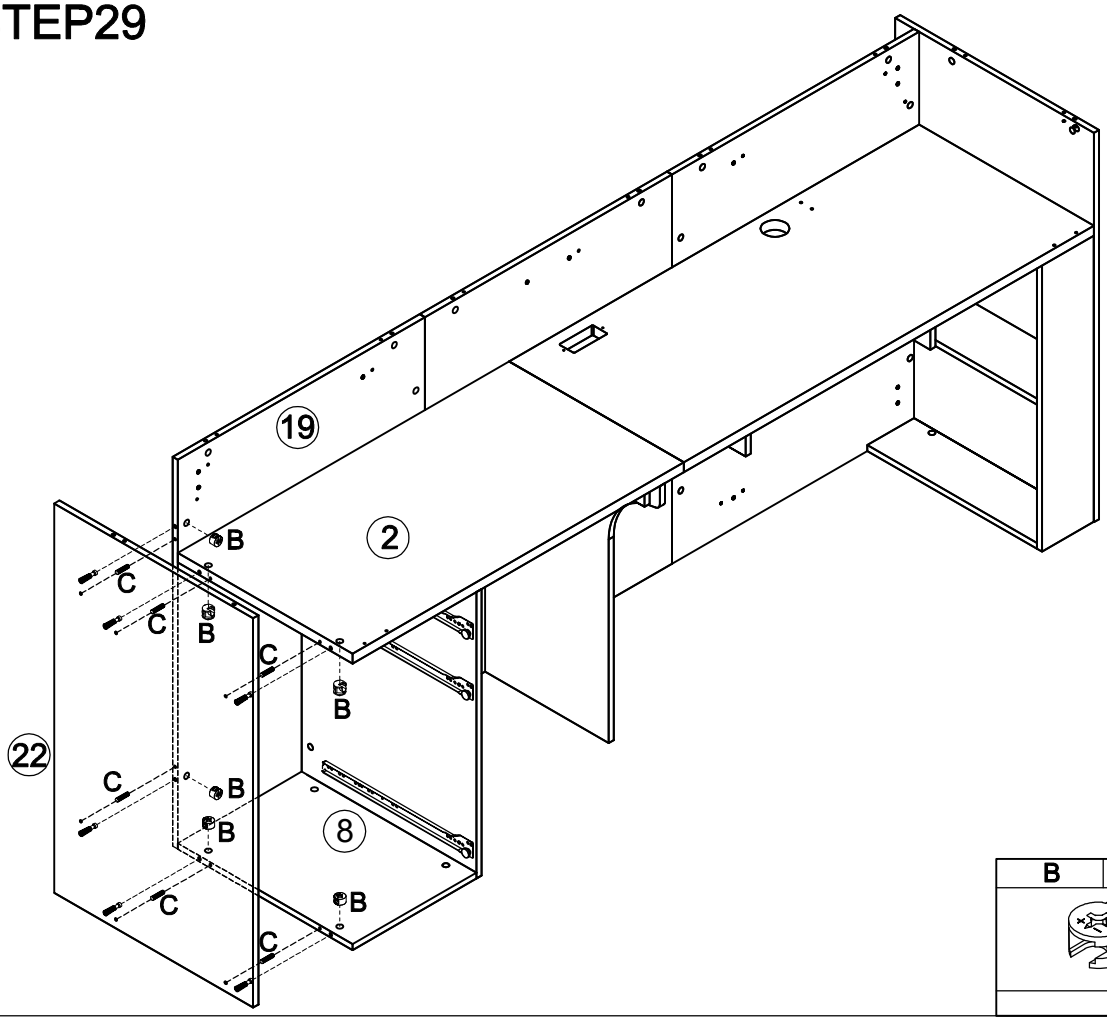



| B | x6 |
|---|---|
|  | |

| C | x6 |
|---|---|
|  | Ø6x30mm |

# STEP30

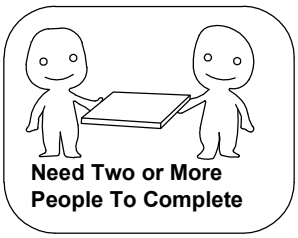


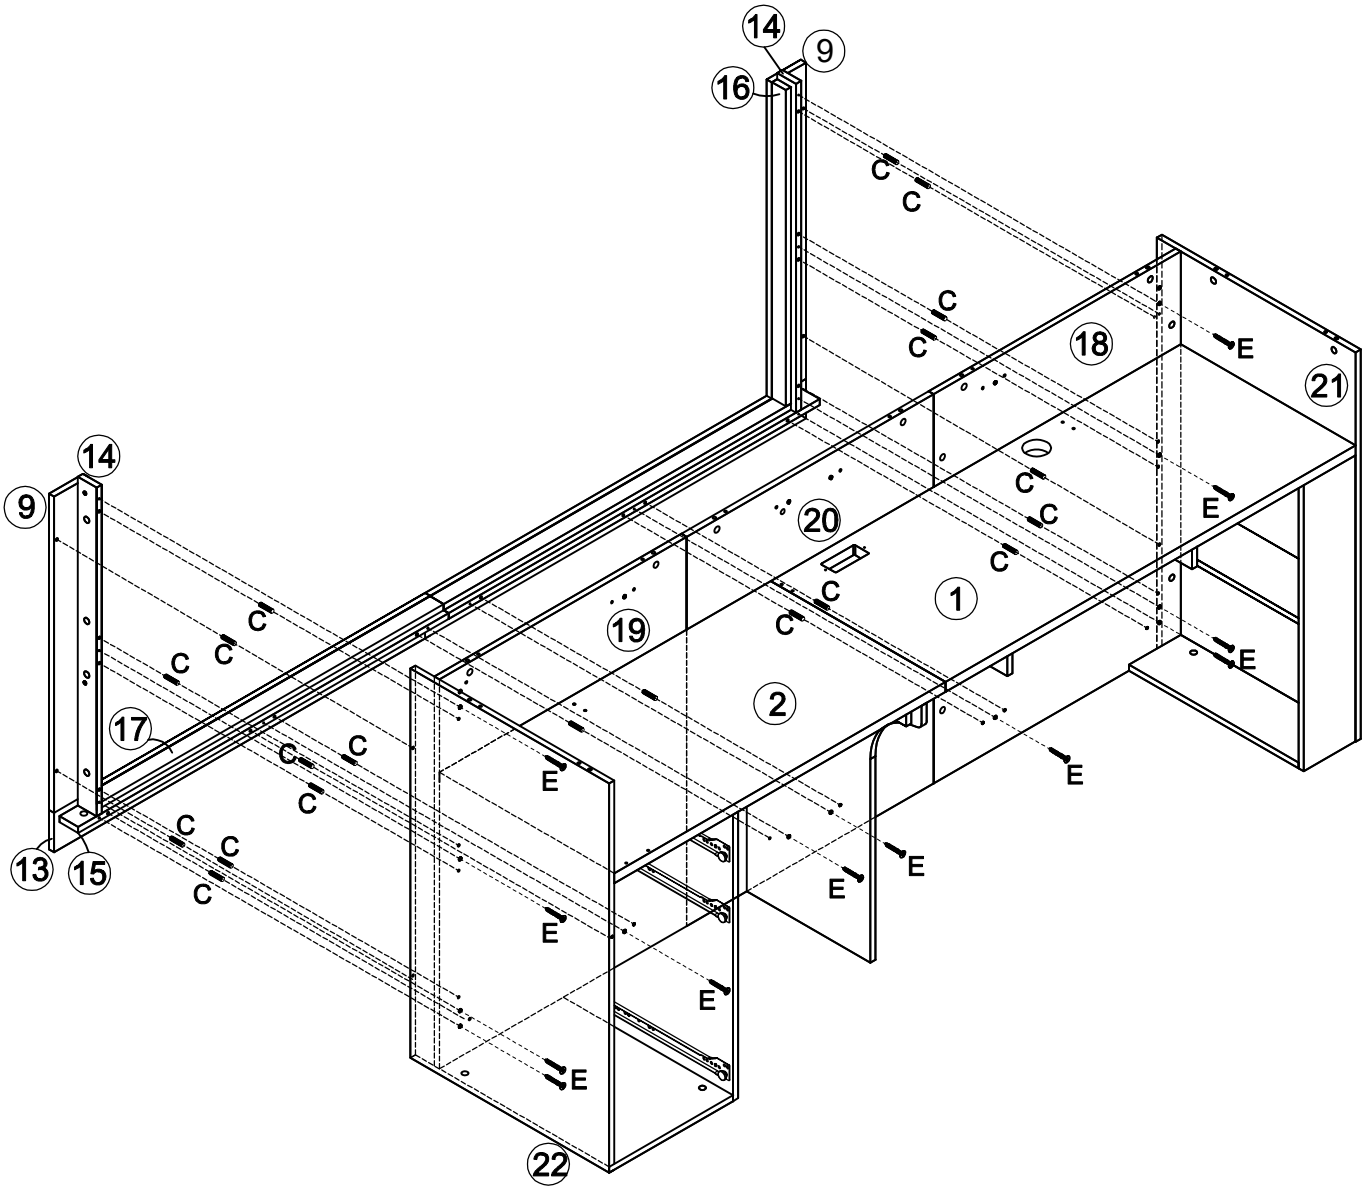
| C | x20 |
|---|---|
| Ø6x30mm | |

| E | x12 |
|---|---|
| Ø4x25mm | |

# STEP31

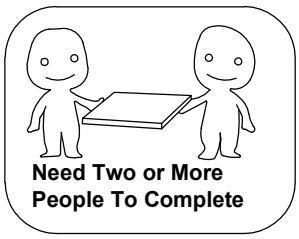


Need Two or More
People To Complete




| C | x8 |
|---|---|
|  | |
| Ø6x30mm | |


| E | x6 |
|---|---|
|  | |
| Ø4x25mm | |

# STEP32

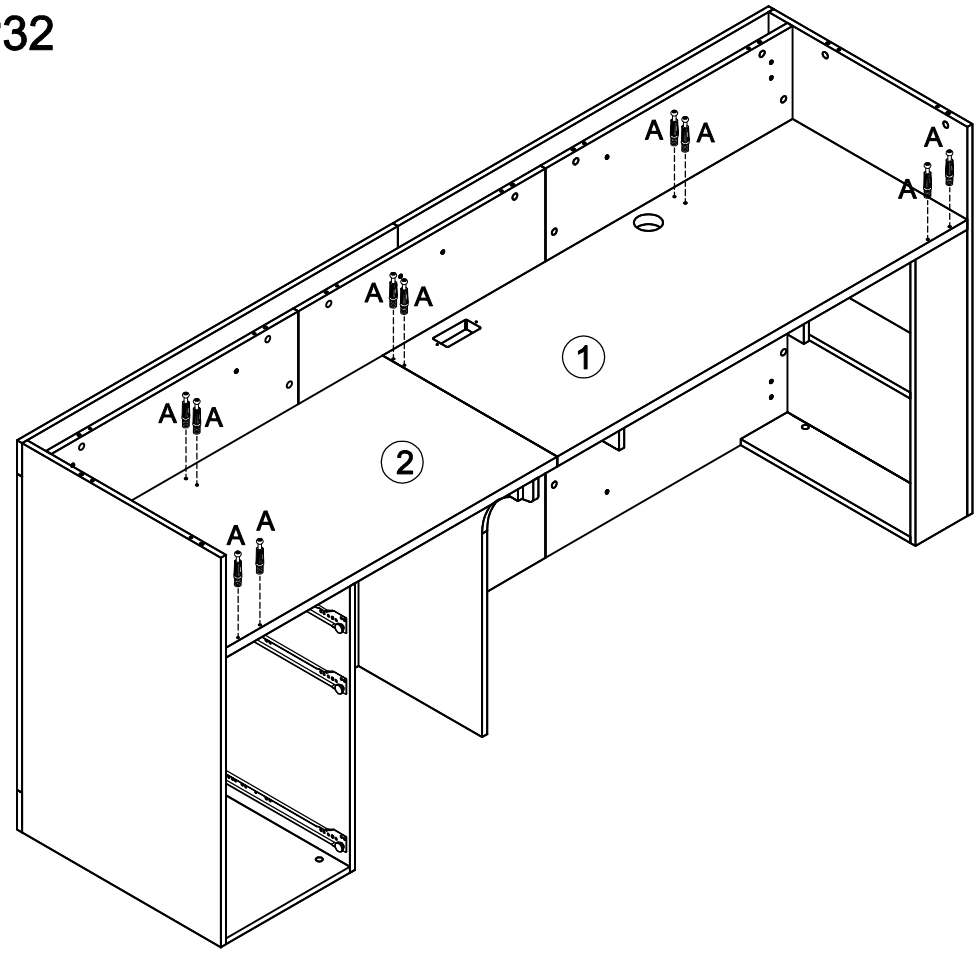



| A | x10 |
|---|---|
|  | |
| Ø6x32mm | |

# STEP33

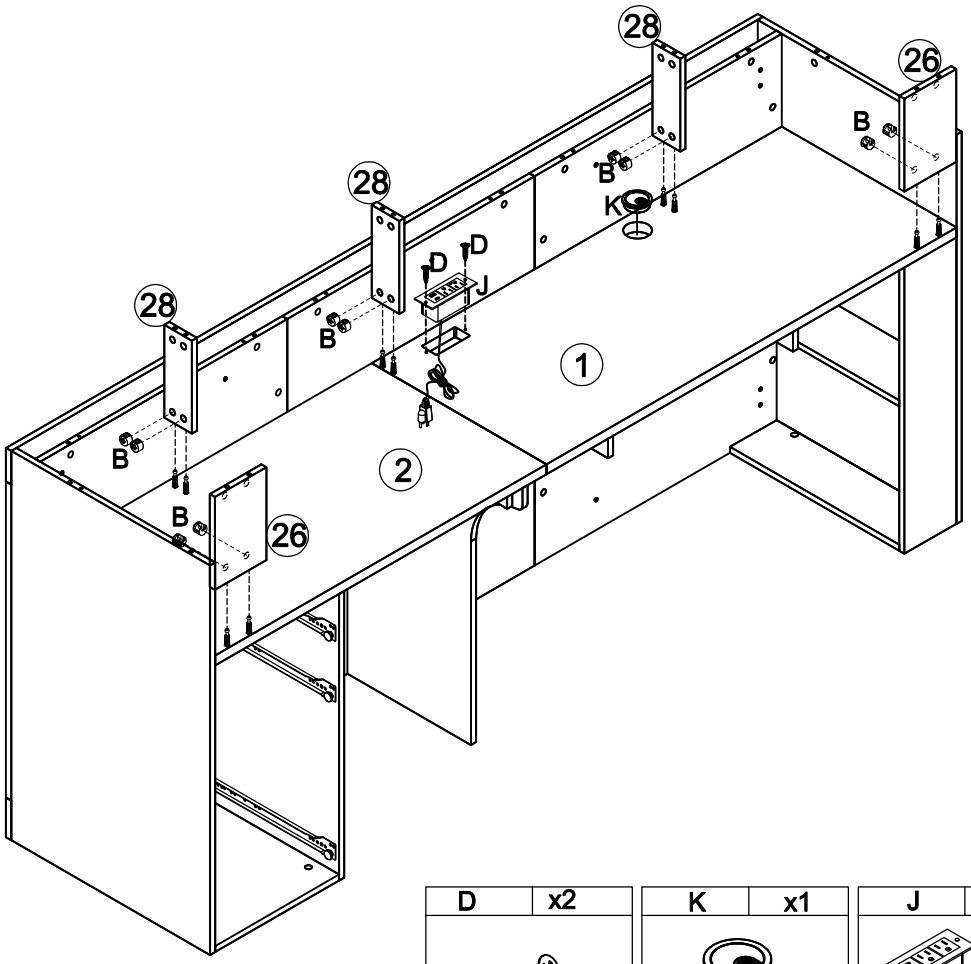



| D | x2 |
|---|---|
|  | |
| Ø3.5x12mm | |

| K | x1 |
|---|---|
|  | |
| | |

| J | x1 |
|---|---|
|  | |
| | |


| B | x10 |
|---|---|
|  | |
| | |

# STEP34

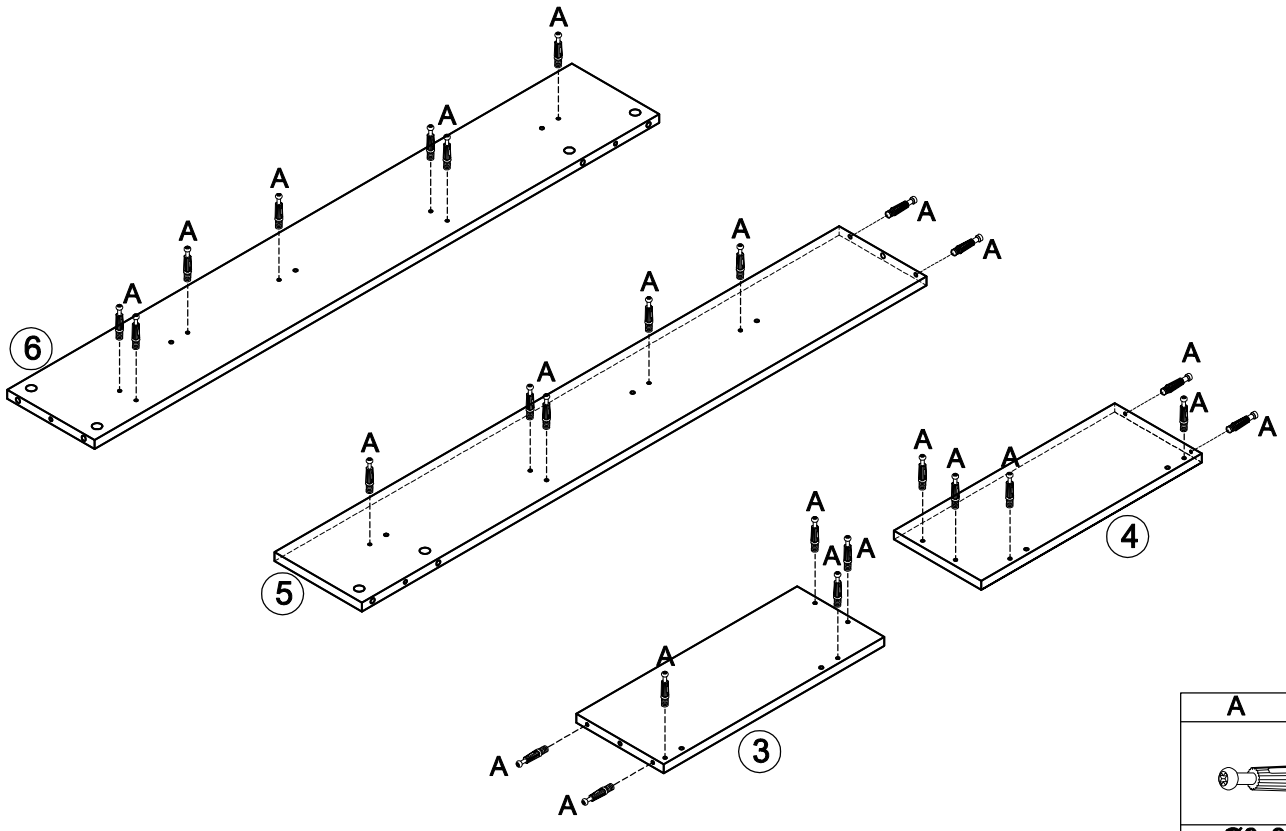


| A | x26 |
|---|---|
|  | |
| Ø6x32mm | |

# STEP35

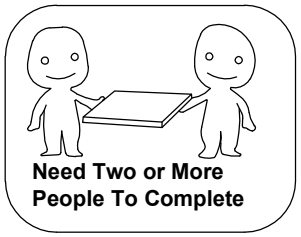







| B | x6 |
|---|---|
|  | |

| C | x3 |
|---|---|
|  | |
| Ø6x30mm | |

# STEP36

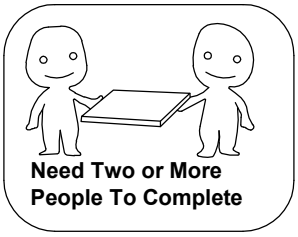


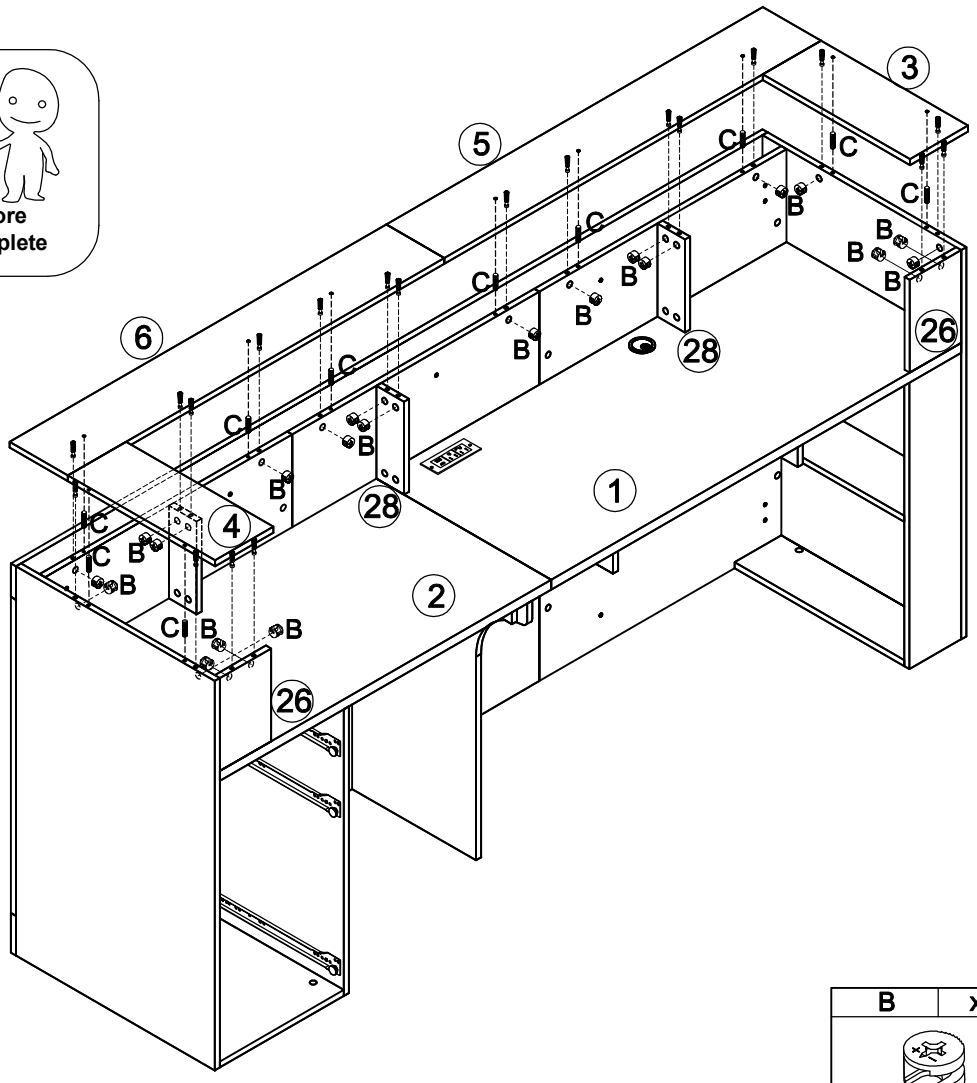
| B | x20 |
|---|---|
|  | |


| C | x10 |
|---|---|
|  | |
| Ø6x30mm | |

## STEP37

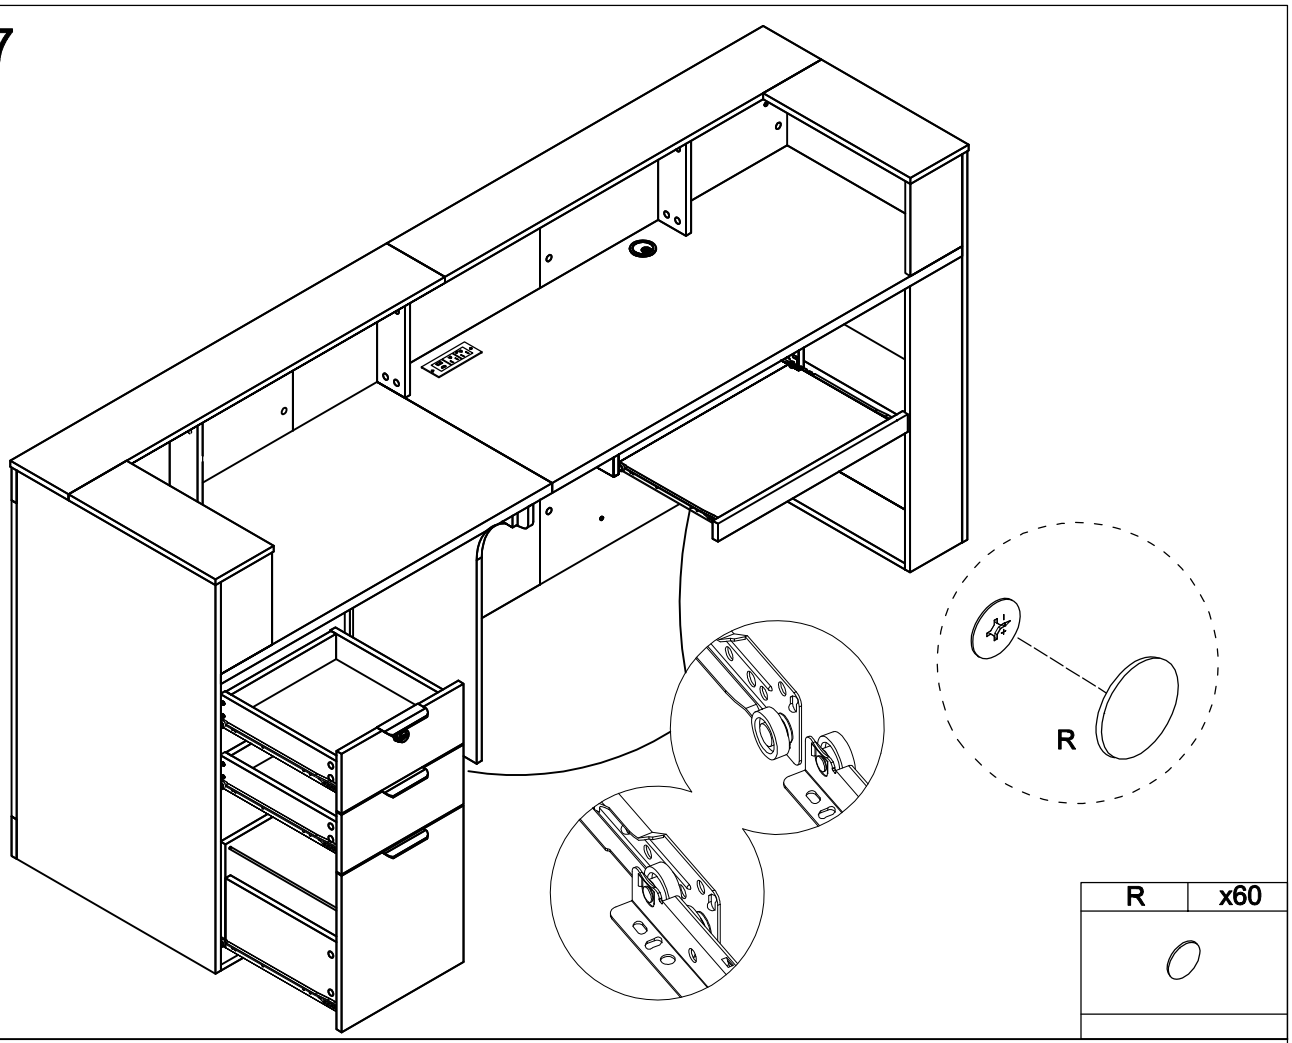


| R | x60 |
|---|---|
|  | |

## STEP38

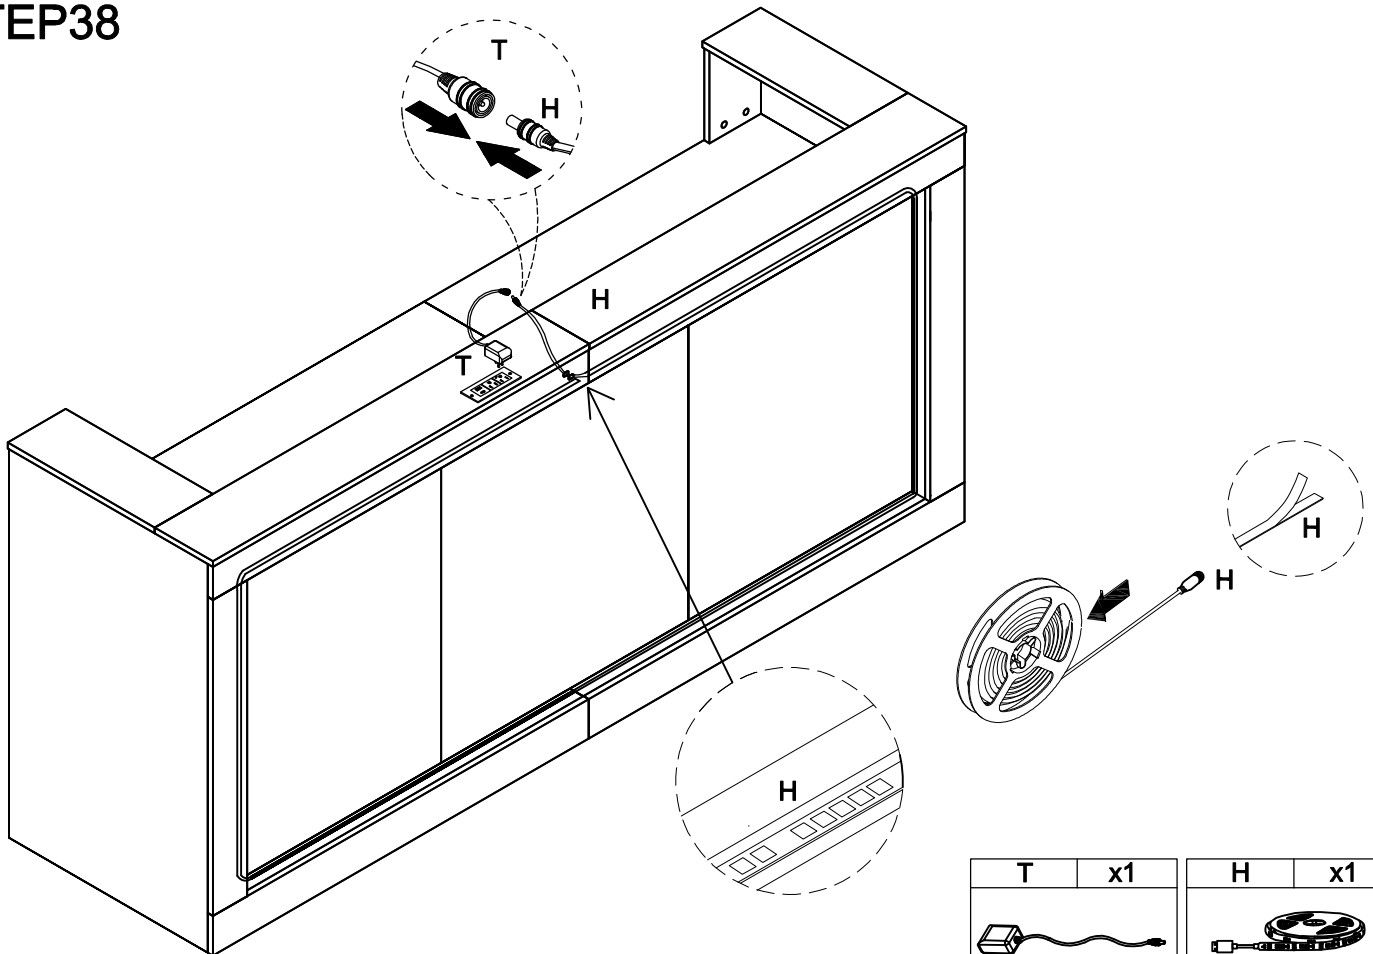


| T | x1 |
|---|---|
|  | |

| H | x1 |
|---|---|
|  | |