


ASSEMBLY INSTRUCTIONS
BATH VANITY-CABINET

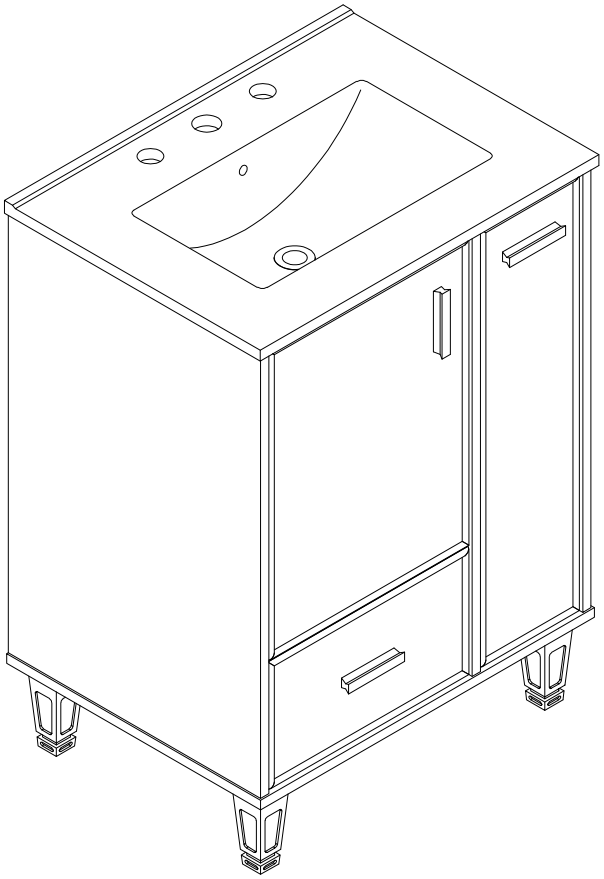


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.
Compare with the parts list to be sure all parts are present.
DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED


***Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!**
*** Please assemble on a clean soft surface to avoid damage.**

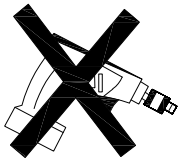

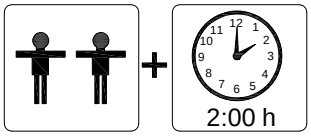


Tools Required


(Not included)


(Not included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

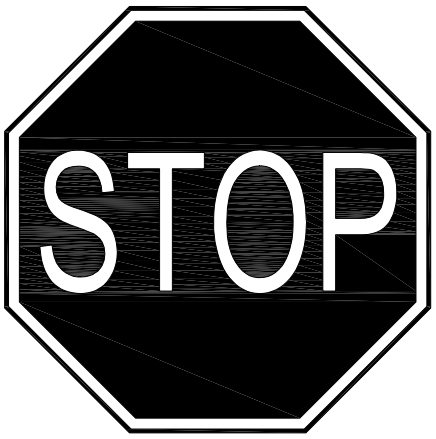

Please do not return this product to the retailer!!
We are able to assist you in ANY way

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.

Before Installation

Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


• We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.

• Please do not over tighten screws or bolts until the assembly is completed.


• Keep children and animal away from the work area, small parts could choke if swallowed.

• Please put all parts on a non-abrasive floor before assembly,and follow the assembly steps to assemble your newly purchased product correctly and efficently.


Cam Lock Assembly Instructions

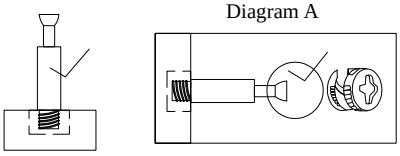


Insert Cam Ball into hole as shown in diagram A.

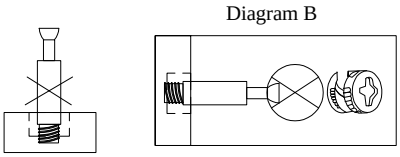


Make sure not to insert the Cam Bolt:
Too deep as shown in figure B as this will cause the cam Lock to be misaligned and unable to interock properly.

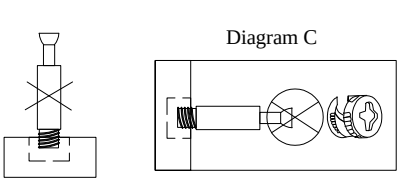


Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.



Connect the panels together.

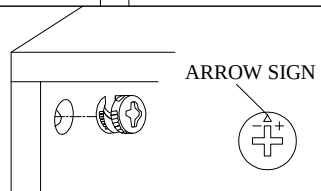


Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.

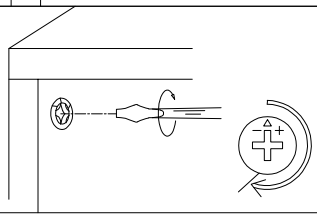















To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver.
**Do not use an automatic screwdriver as it may bend or break if too much power is imposed.*

Detail View










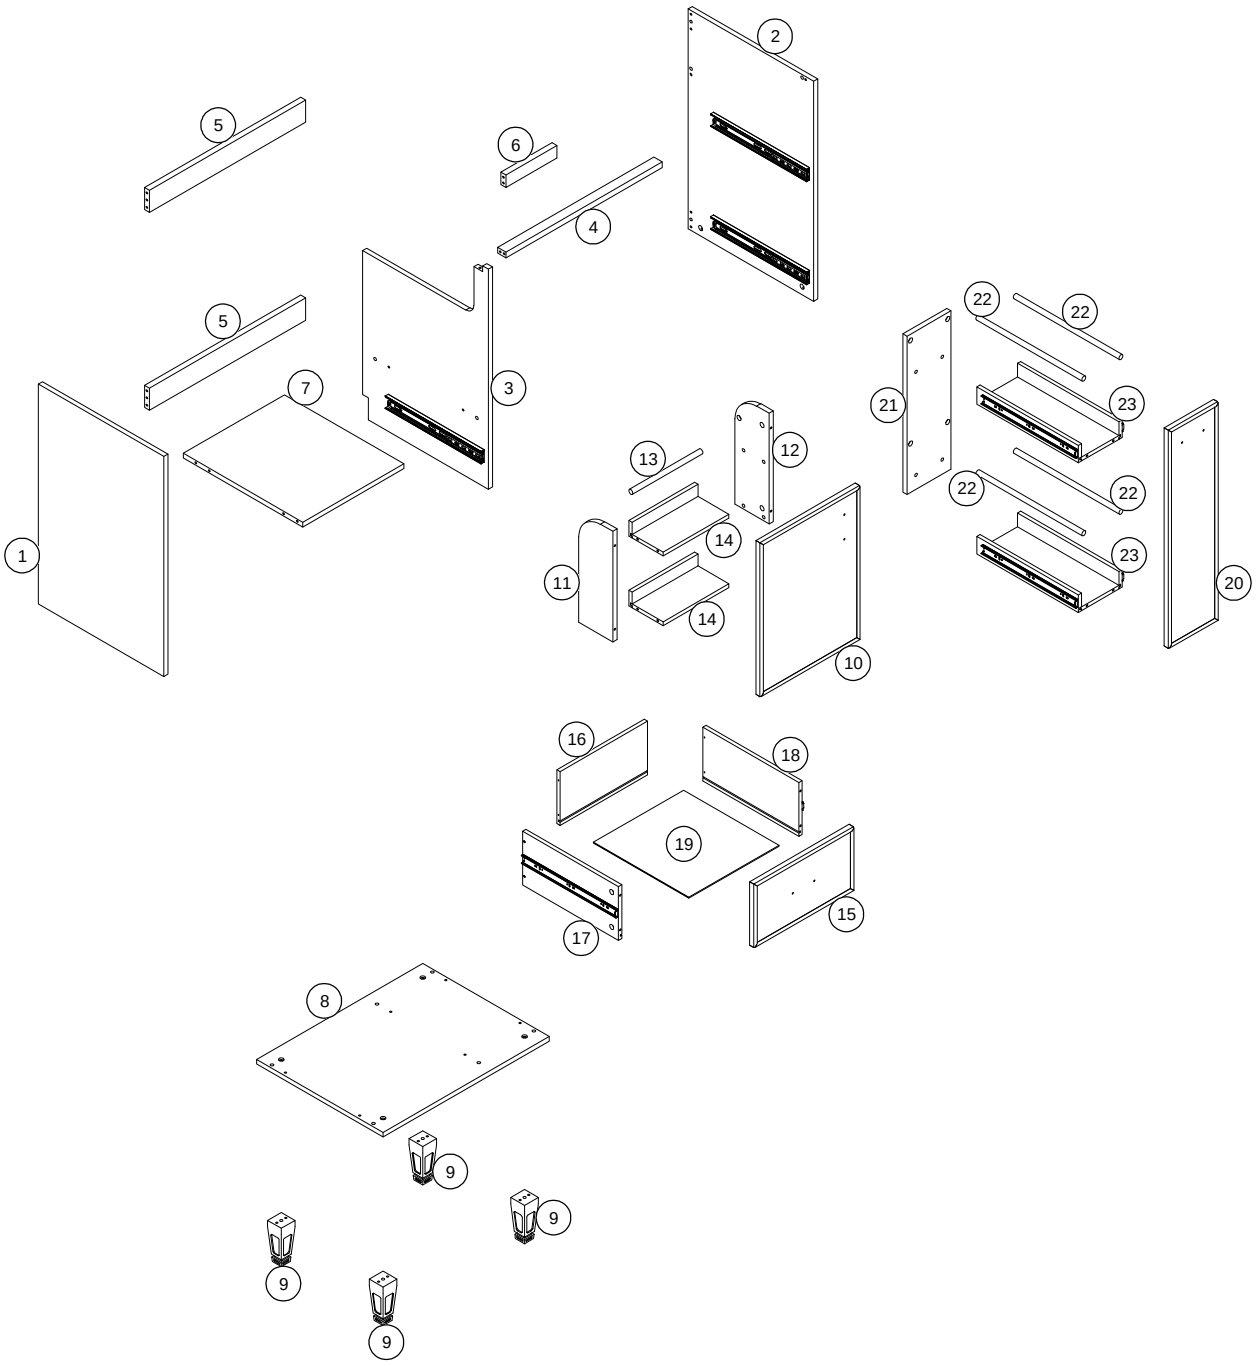


Identifying the Hardware-Identify the hardware using the illustrations below.











Part Lists

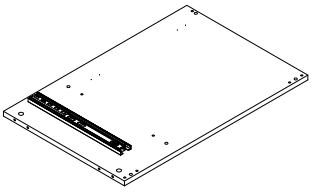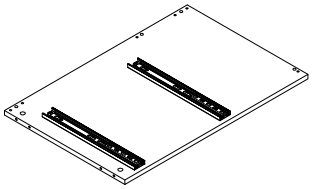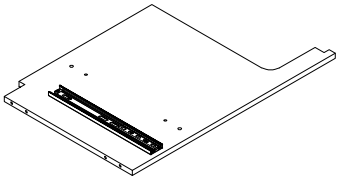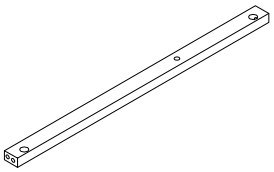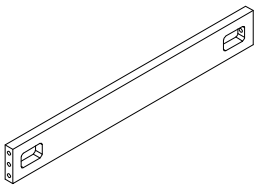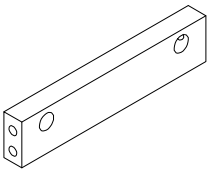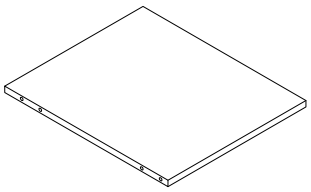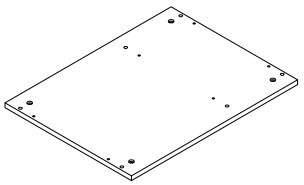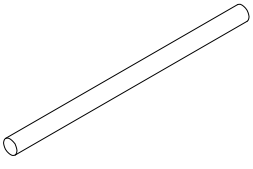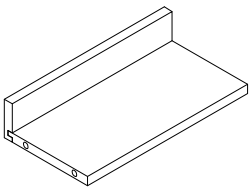1  Side Panel (L) - 1pc	2  Side Panel (R) - 1pc
3  Mid Panel - 1pc	4  Top Front Cossbar - 1pc
5  Top + Bottom Rear Crosbar - 2pcs	6  Side Rear Crosbar - 1pc
7  Mid Frame - 1pc	8  Bottom Frame - 1pc
9  Legs - 4pcs	10  Door Cabinet - 1pc
11  Door Shelf Side Panels (L) - 1pc	12  Door Shelf Side Panels (R) - 1pc
13  Round Bar - 1pc	14  Door Shelf Bottom Frame - 2pcs


Part Lists

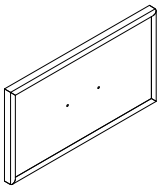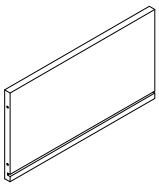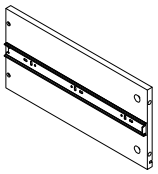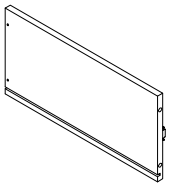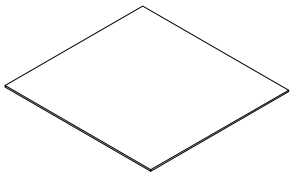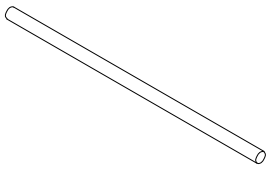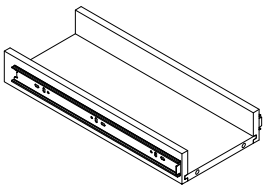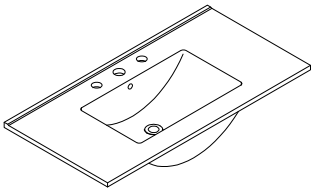
15  Bottom Drawer Face - 1pc	16  Rear Bottom Drawer panel - 1pc
17  Side Bottom Drawer Panel (L) - 1pc	18  Side Bottom Drawer Panel (R) - 1pc
19  Bottom Panel - 1pc	20  Side Drawer Face - 1pc
21  Rear Side Drawer panel - 1pc	22  Round Bar - 4pcs
23  Bottom Frame Drawer - 2pcs	 Sink - 1pc


Hardware Lists

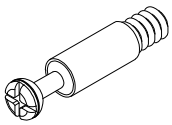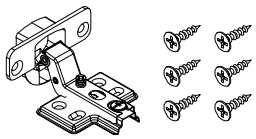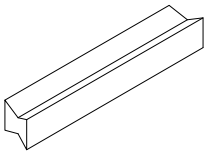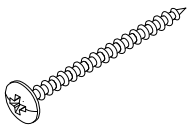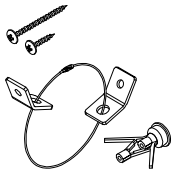
A  Ø8*30mm	B  Ø6*32mm	C  Ø14.5*9.5mm
Wood dowel (30pcs + 1pc)	Three in on bolts (39pcs + 1pc)	Three in one locks (39pcs + 1pc)
D 	E  Ø13xM6*30mm	F  K4mm
Damping hinge (2 sets)	Hex-Head bolt (8pcs + 1pc)	Allen key (1pc)
G 	H  Ø8xM4*20mm	I  Ø10*10mm
Handle (3pcs)	Handle screw (6pcs)	Plastic Canopy (4pcs + 1pc)
J  Ø8xØ4*35mm	K 	
Round head screw (4pcs + 1pc)	Anti fall Hardware (2 sets)	


STEP:1

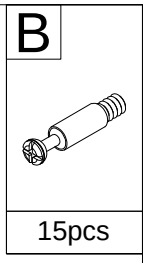


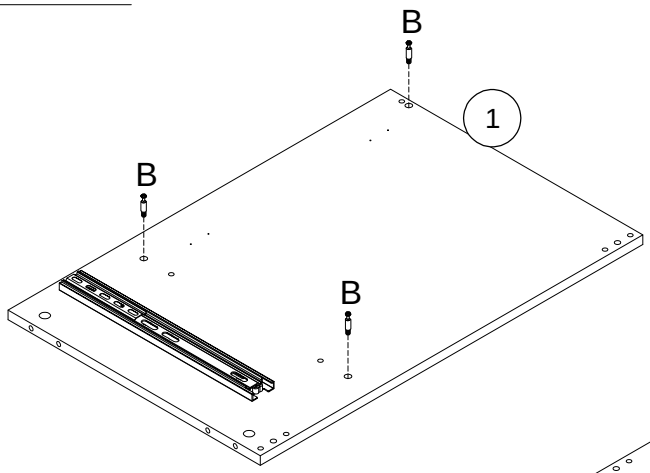


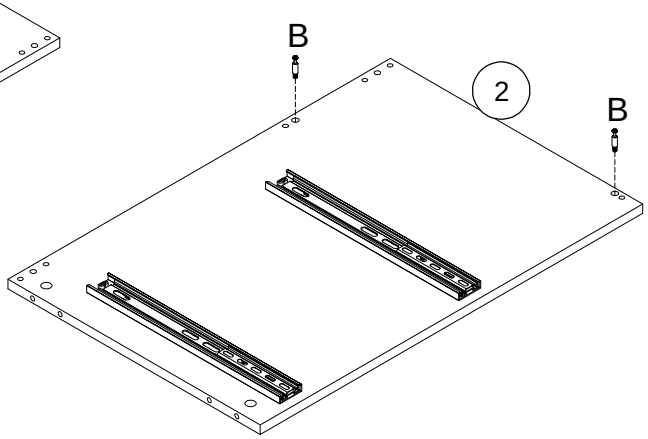


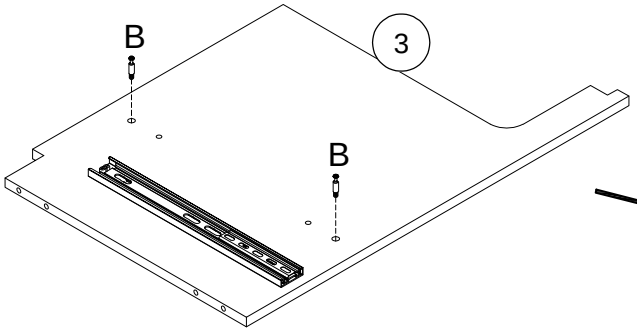

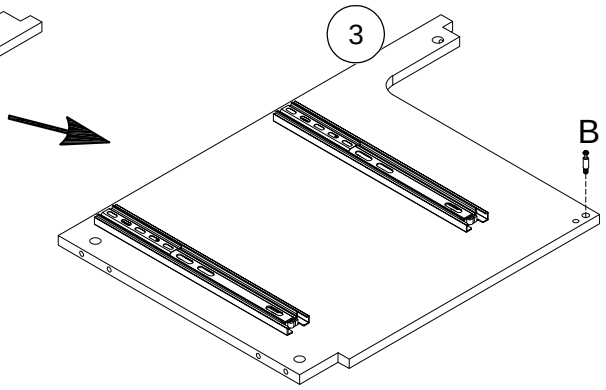


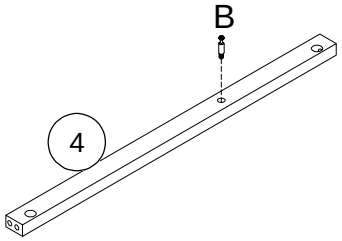


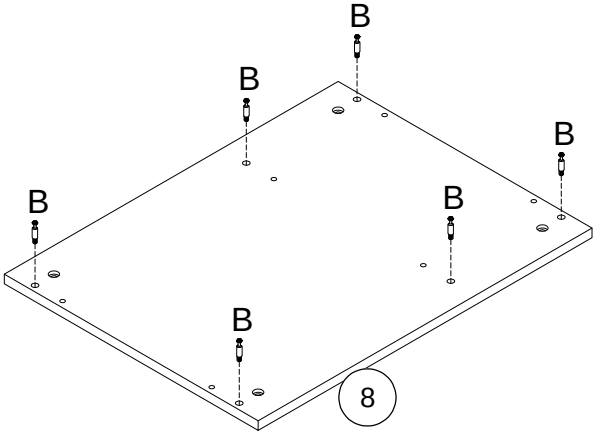

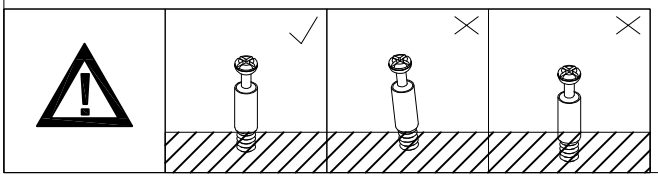


STEP:2

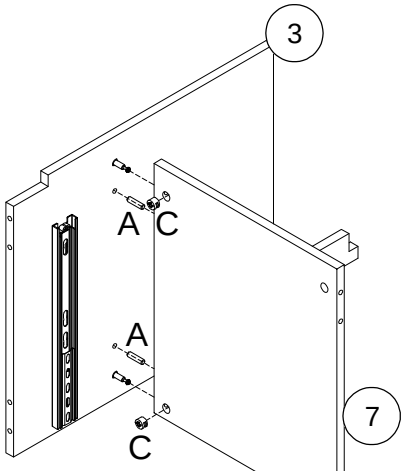

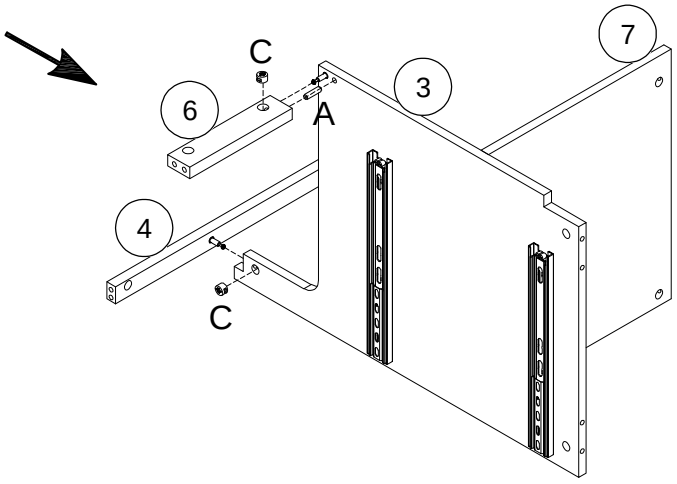


A




3pcs


C




4pcs

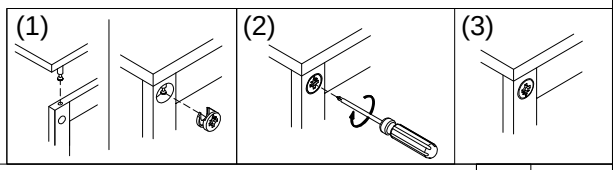

STEP:3

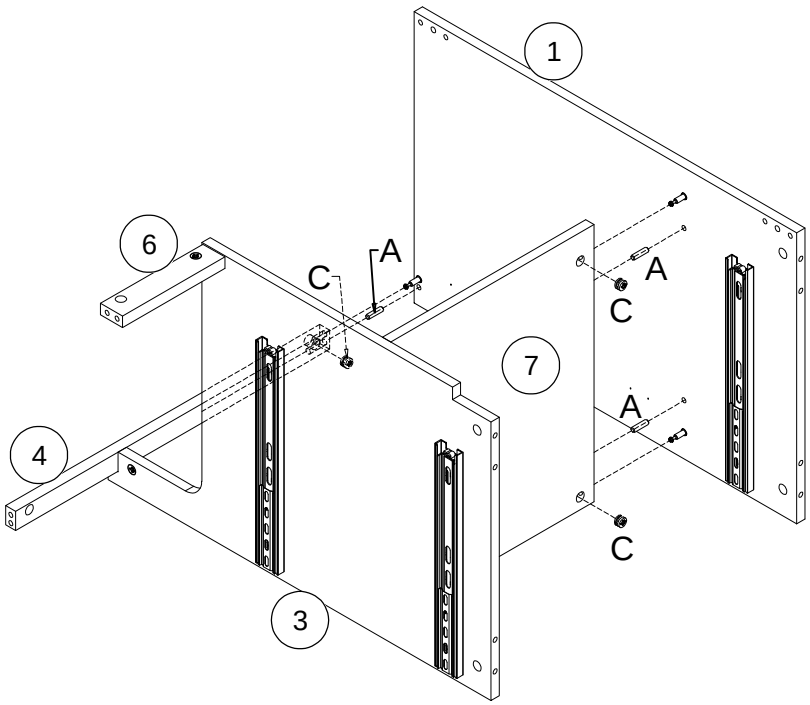


A




3pcs

C




3pcs

STEP:4

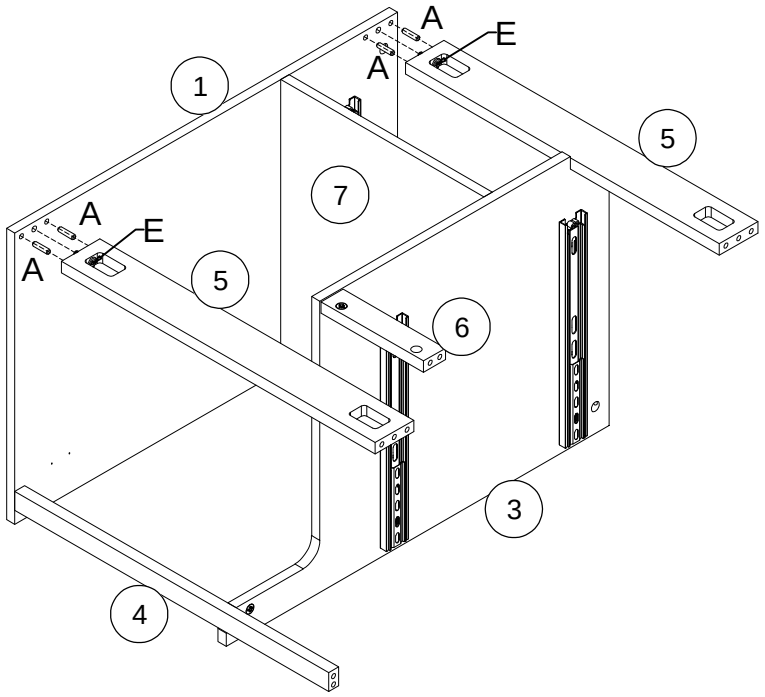


A




4pcs

E




2pcs

STEP:5

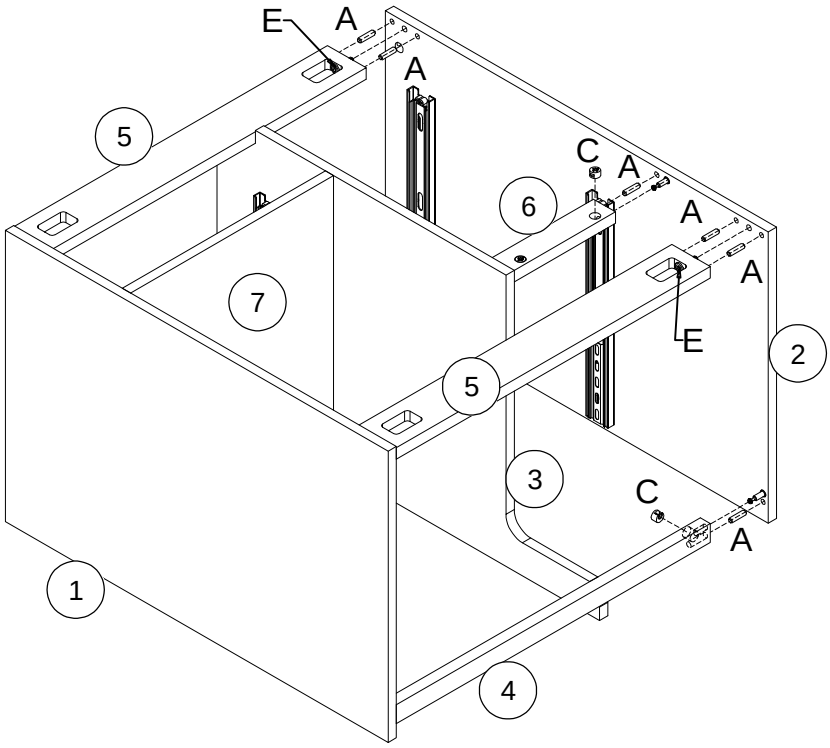


A




6pcs

C




2pcs

E




2pcs

STEP:6

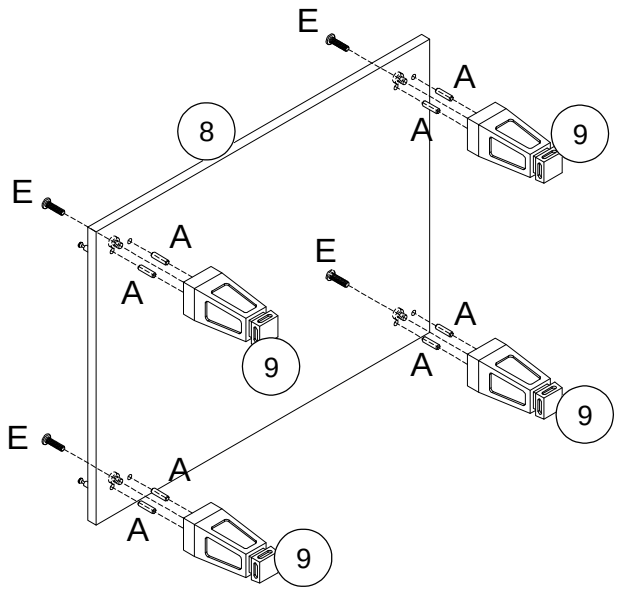


A




8pcs

E




4pcs

STEP:7

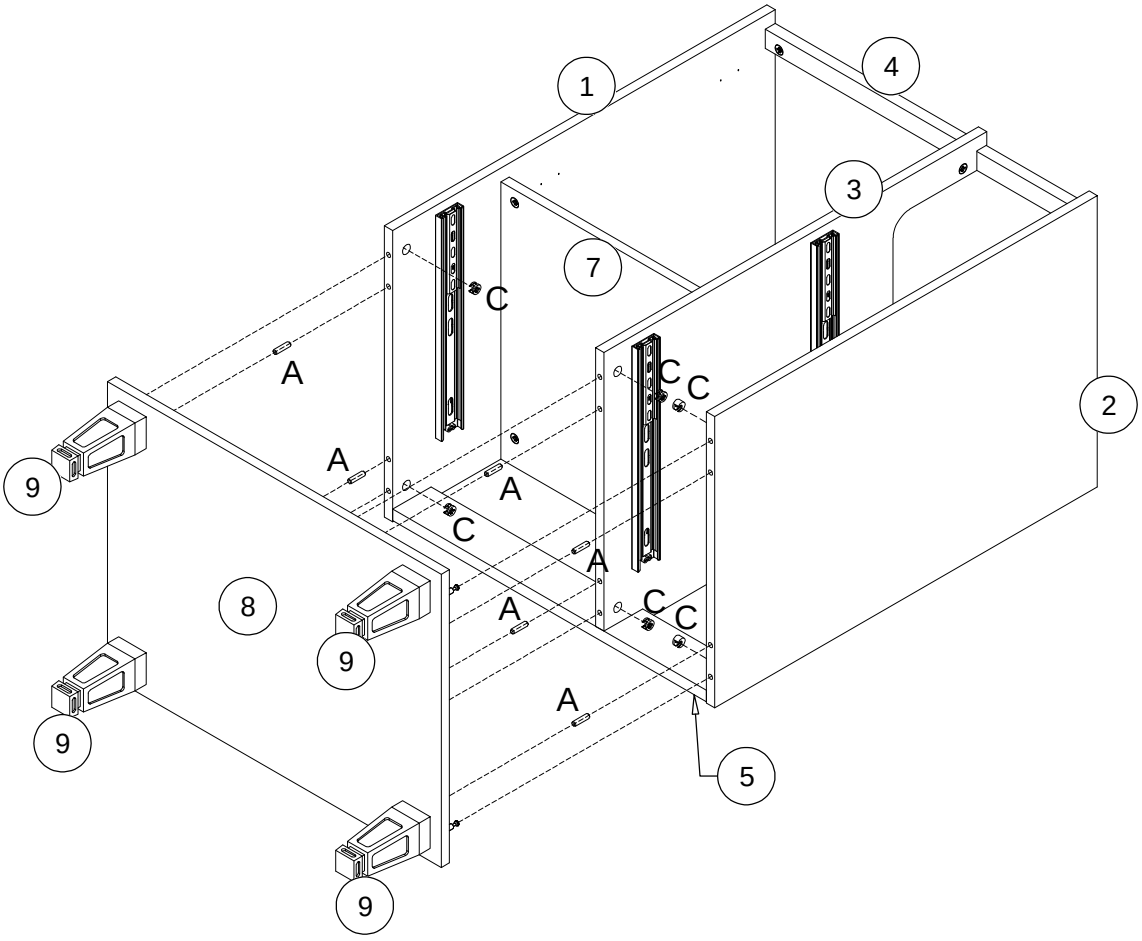


A




6pcs


C





6pcs


STEP:8

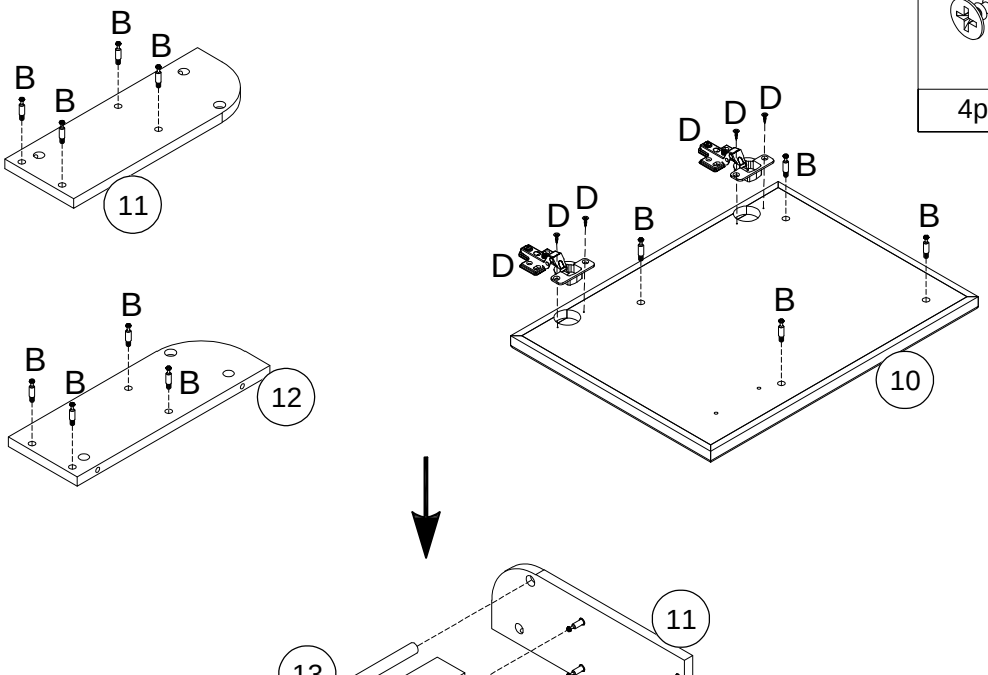


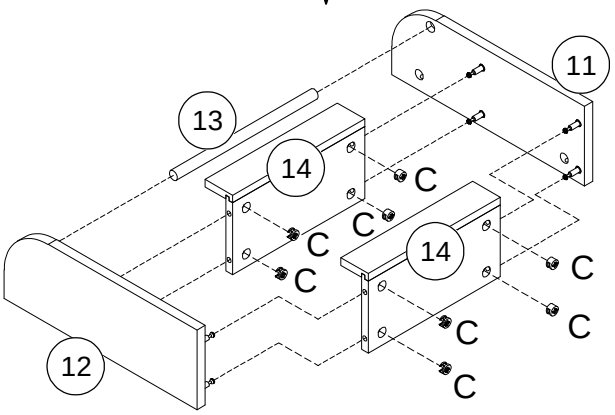

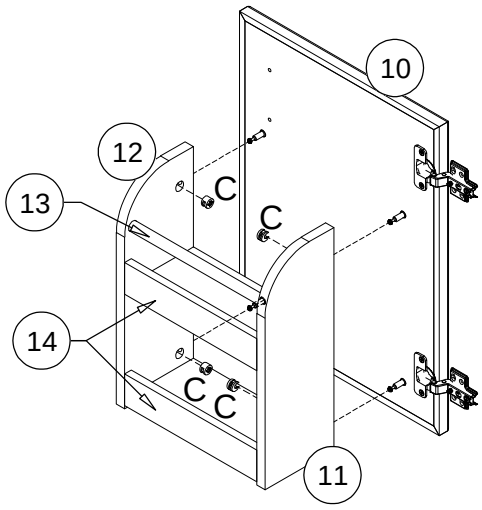



D	B
	
4pcs	12pcs

C

12pcs


D

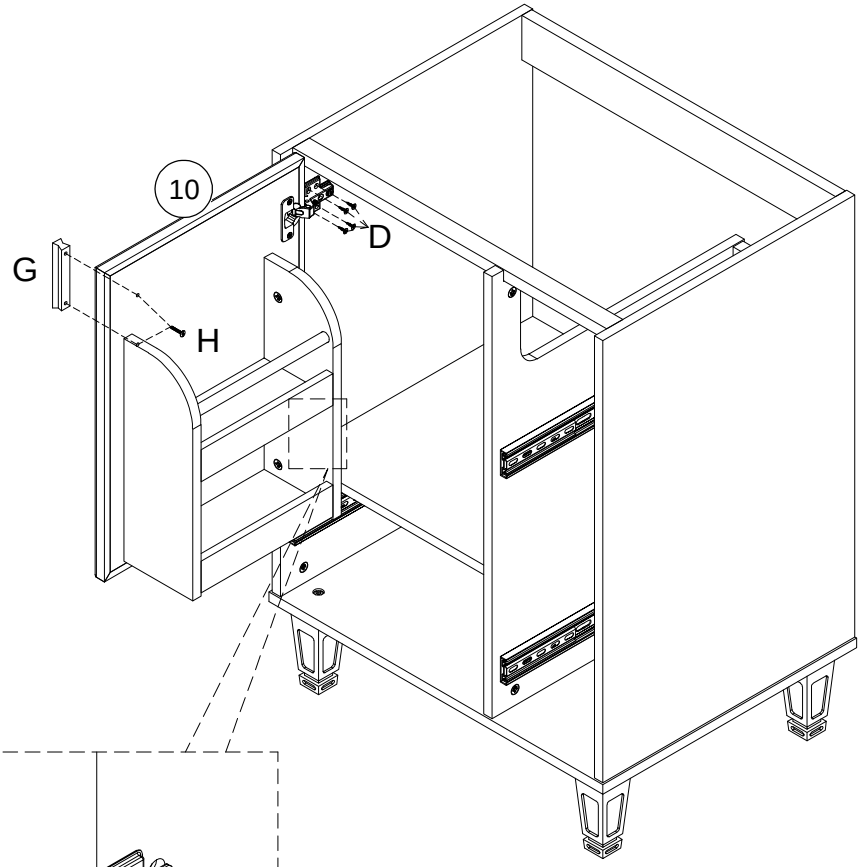2pcs

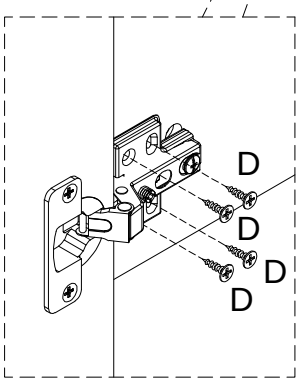STEP:9






D



8pcs

G




1pc


H







2pcs

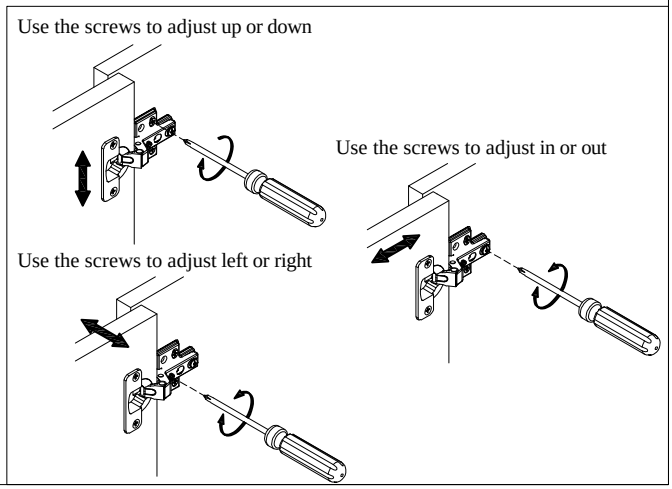



STEP:10

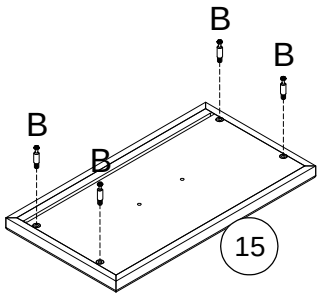



I	G	B
		
4pcs	1pc	4pcs

J	H	C
		
4pcs	2pcs	4pcs

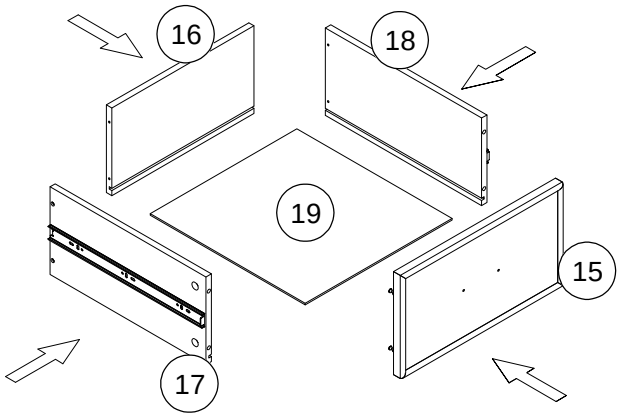


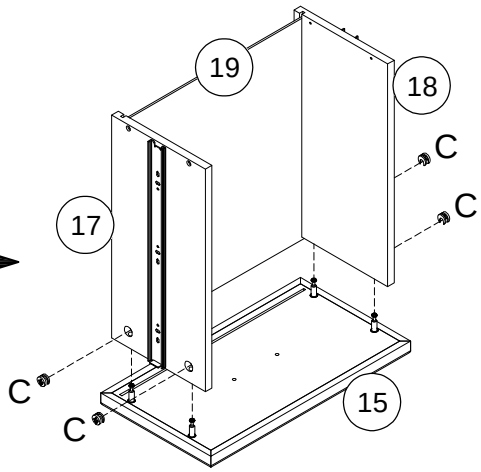


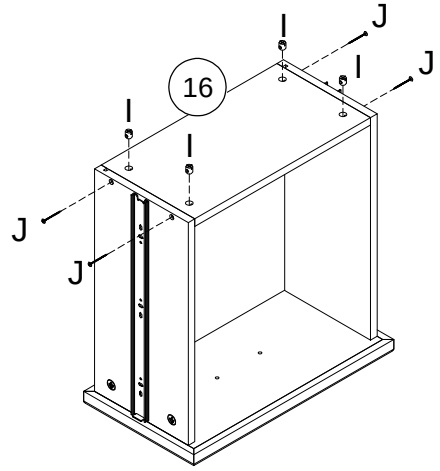




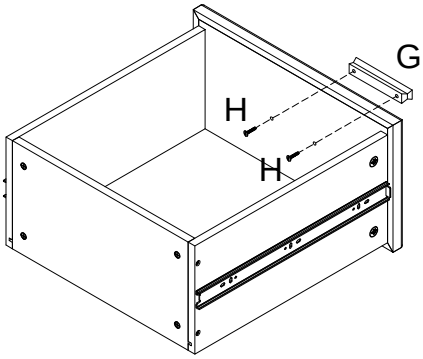


STEP:11

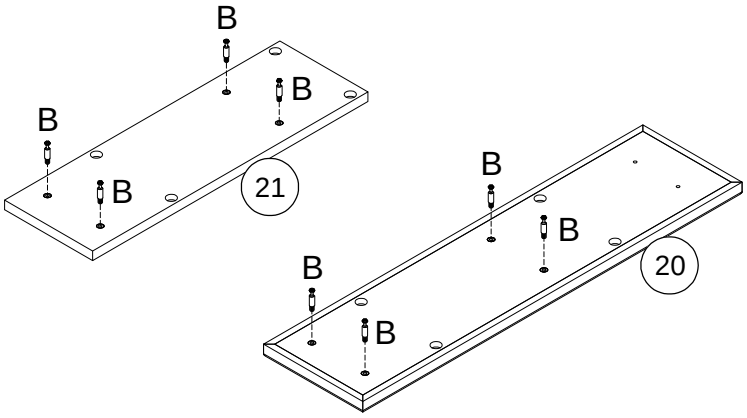


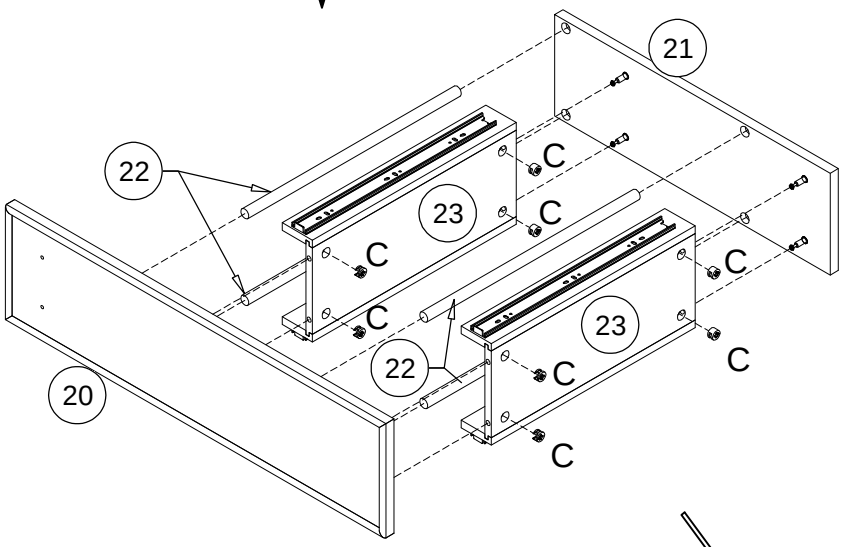

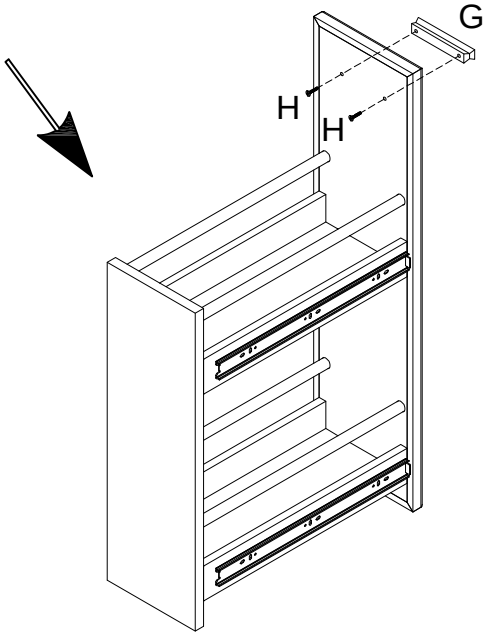


H	B	C	G
			
2pcs	8pcs	8pcs	1pc

STEP:12

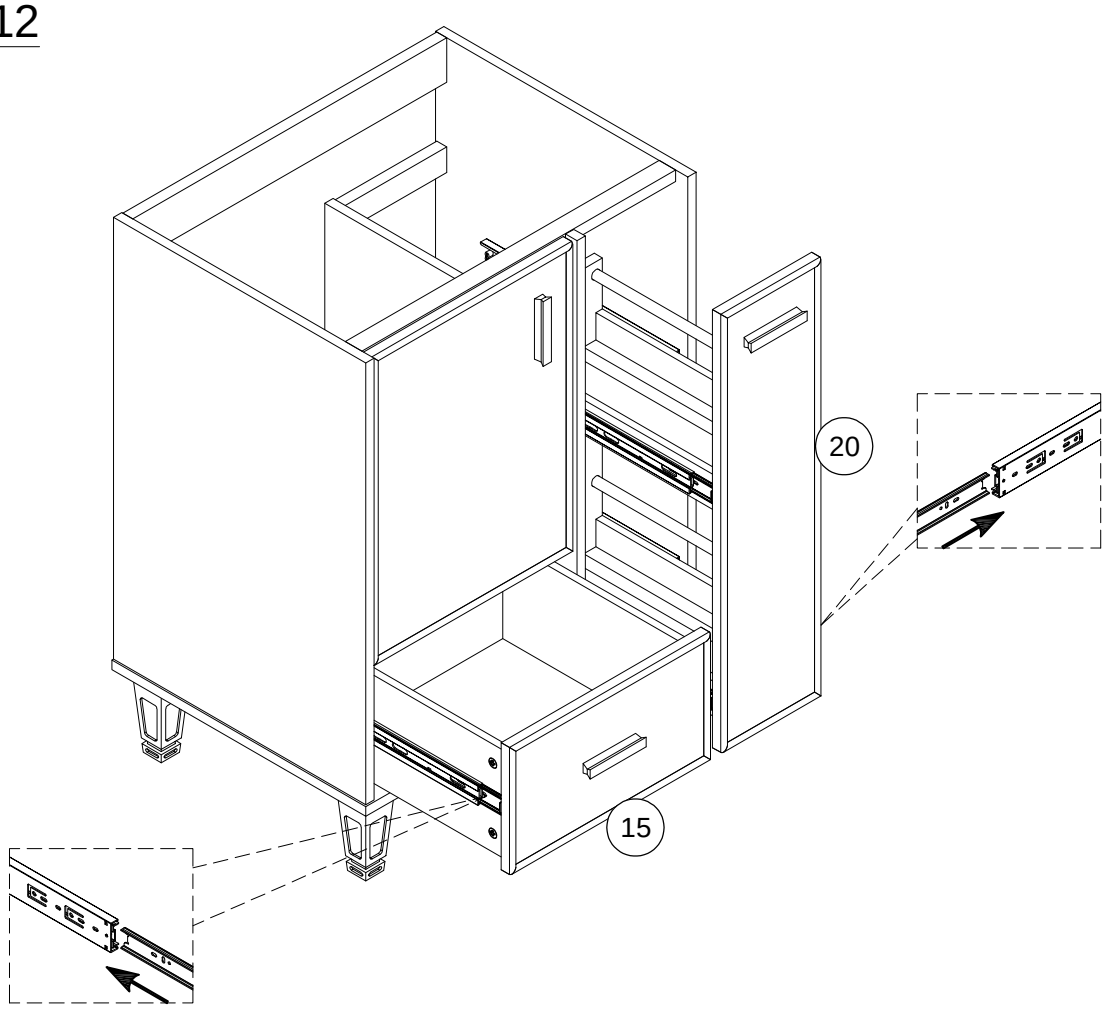

STEP:13

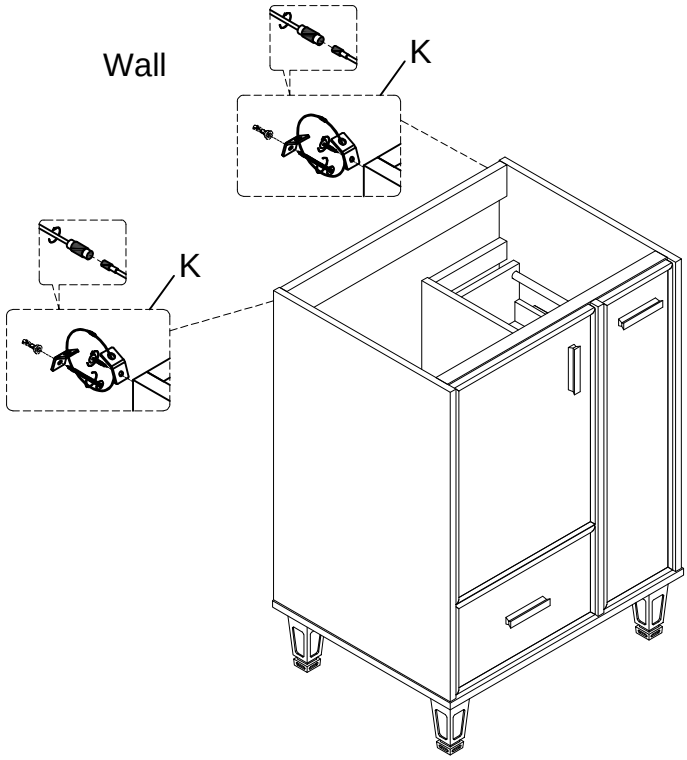


K



2 sets


STEP:14


Install the sink on the cabinet with glue.
Let stand for 24 hours

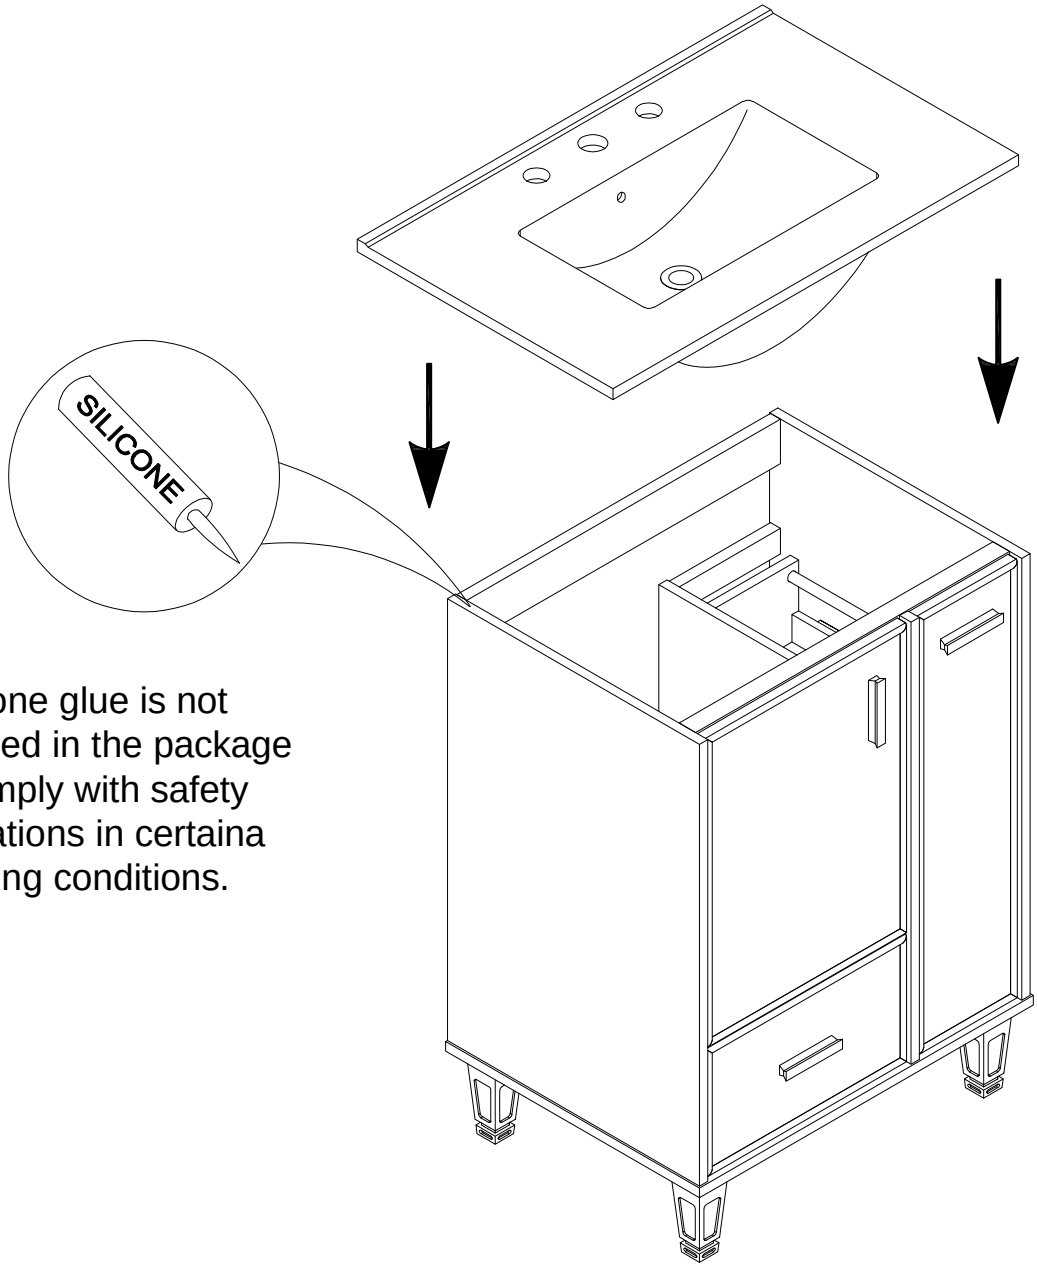


*Silicone glue is not included in the package to comply with safety regulations in certaina shipping conditions.

STEP:15

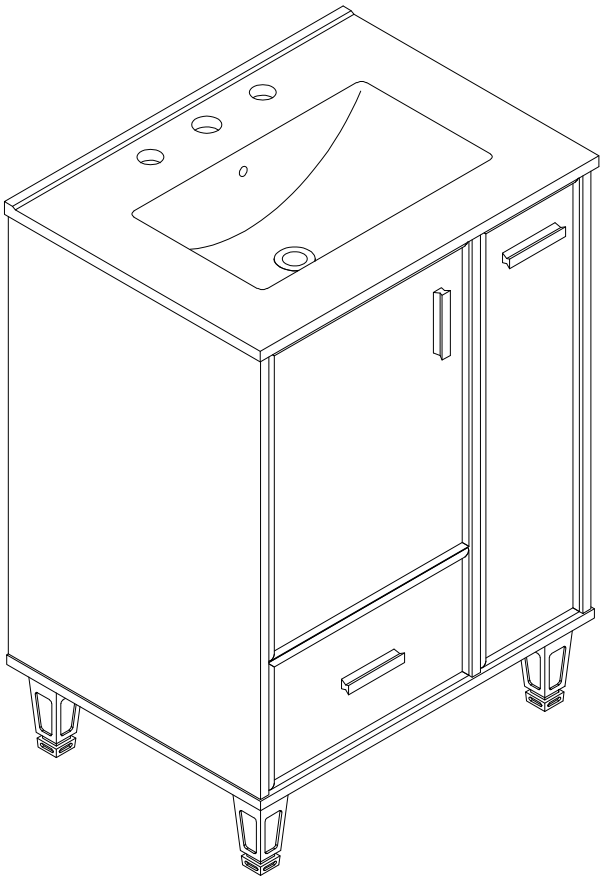


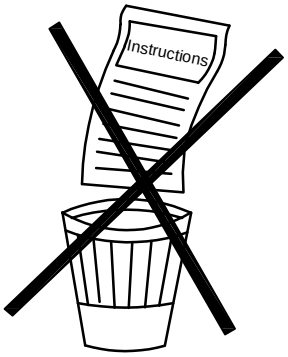

HINGE ADJUSTMENTS

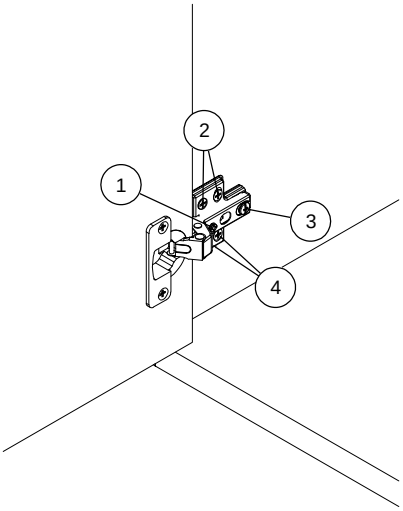


(1) Sideways / Tilt adjustment

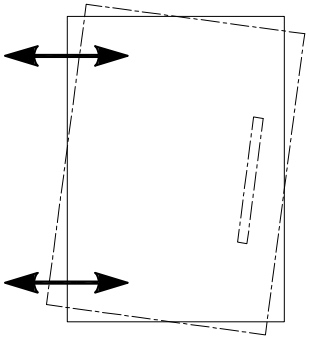

Turn the screw
clockwise to move the door further away from the side of the cabinet
anticlockwise to move the door closer to the side of the cabinet

(2) (4) Height adjustment

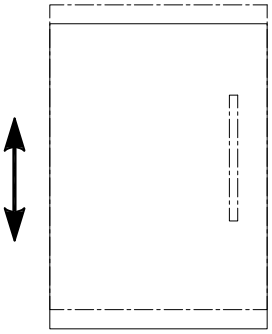

While supporting the weight of the door, turn the screws
clockwise to move the door up
anticlockwise to move the door down

(1) Forward and back adjustment

