

ASSEMBLY INSTRUCTION

MODEL NUMBER: 2-86Q. K

NOTES:

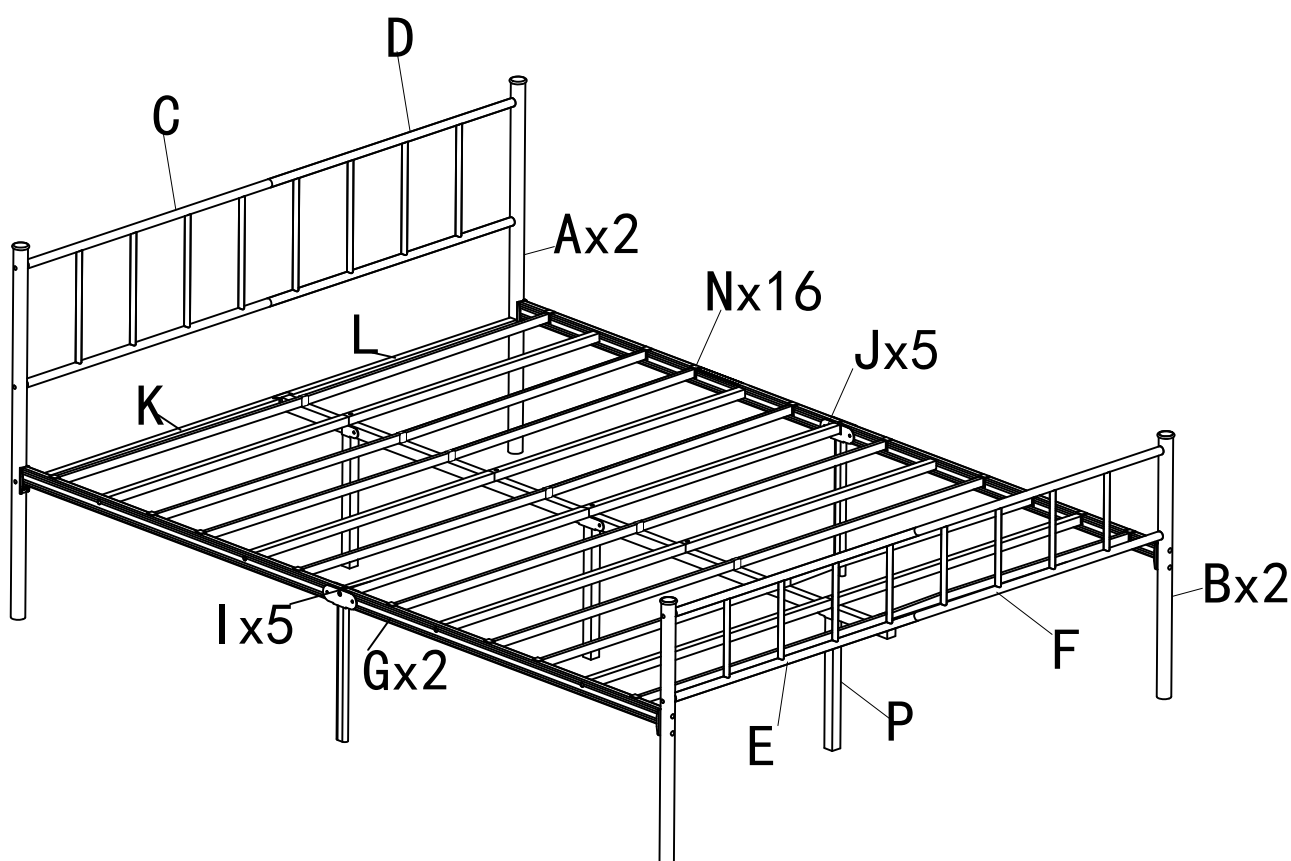
- Do not skip any step.
- Do not fully tight screws until all the bed parts are assembled.



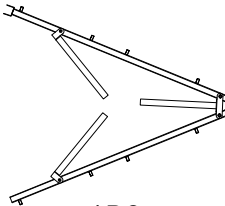
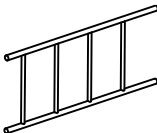

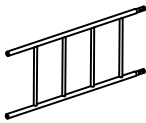
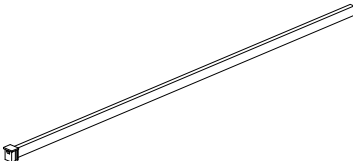




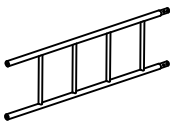
WARNING:

- WARNIND FOR YOUNG CHILDREN-This product contains small components, please ensure that they are kept away from small children while assembling.

Warranty Information:

- We warran ty th is product to be free from defects in materials.If u have any query about bed , pls contact our after-salesupportemail: Pakkahome@outlook.com




A	G	aa		M6×55mm	24
 2PCS	 2PCS	bb		M8×50mm	8
		cc		M6×12mm	8
		dd		4×4mm	1
		ee			18
B	P	ff		M6×30mm	2
 2PCS	 1PC				
C	J				
 1PC	 5PCS				
D	N				
 1PC	 16PCS				
E	K	SPARE			
 1PC	 1PC				
I	L				
 5PCS	 1PC				
F					
 1PC					

2/8

cc		M6×12mm	4
dd		4×4mm	1


Note: For easy setup intention,
do not tighten screws during
the installation process

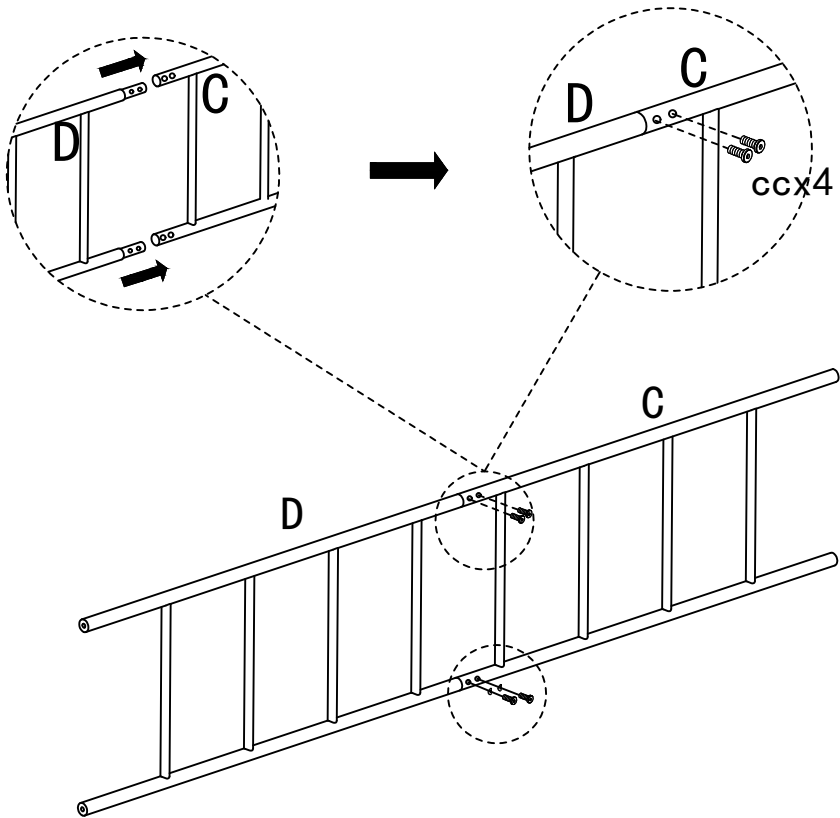
Step 1




cc		M6×12mm	4
dd		4×4mm	1

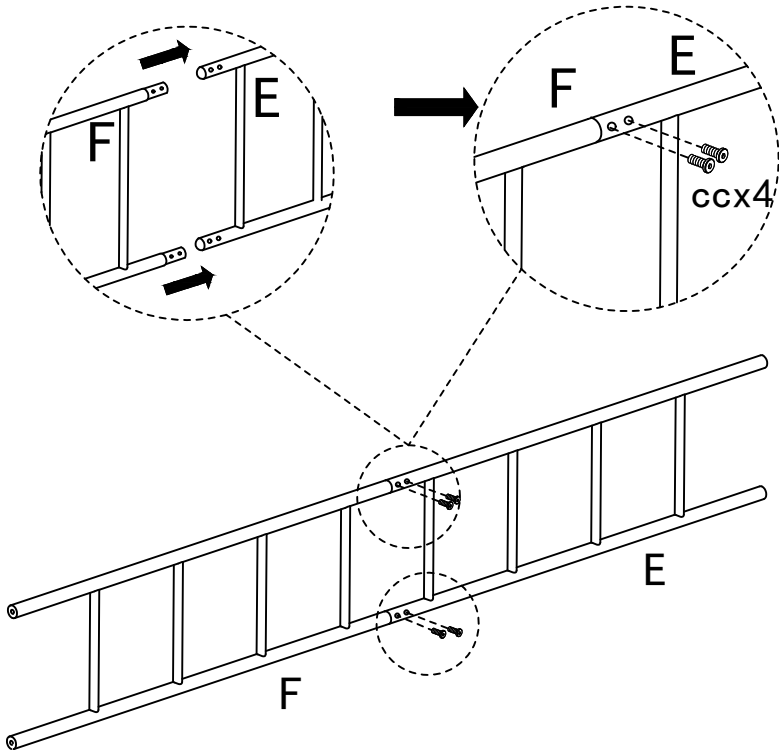
Step 2




aa	 M6×55mm	4
ee		4
dd	 4×4mm	1

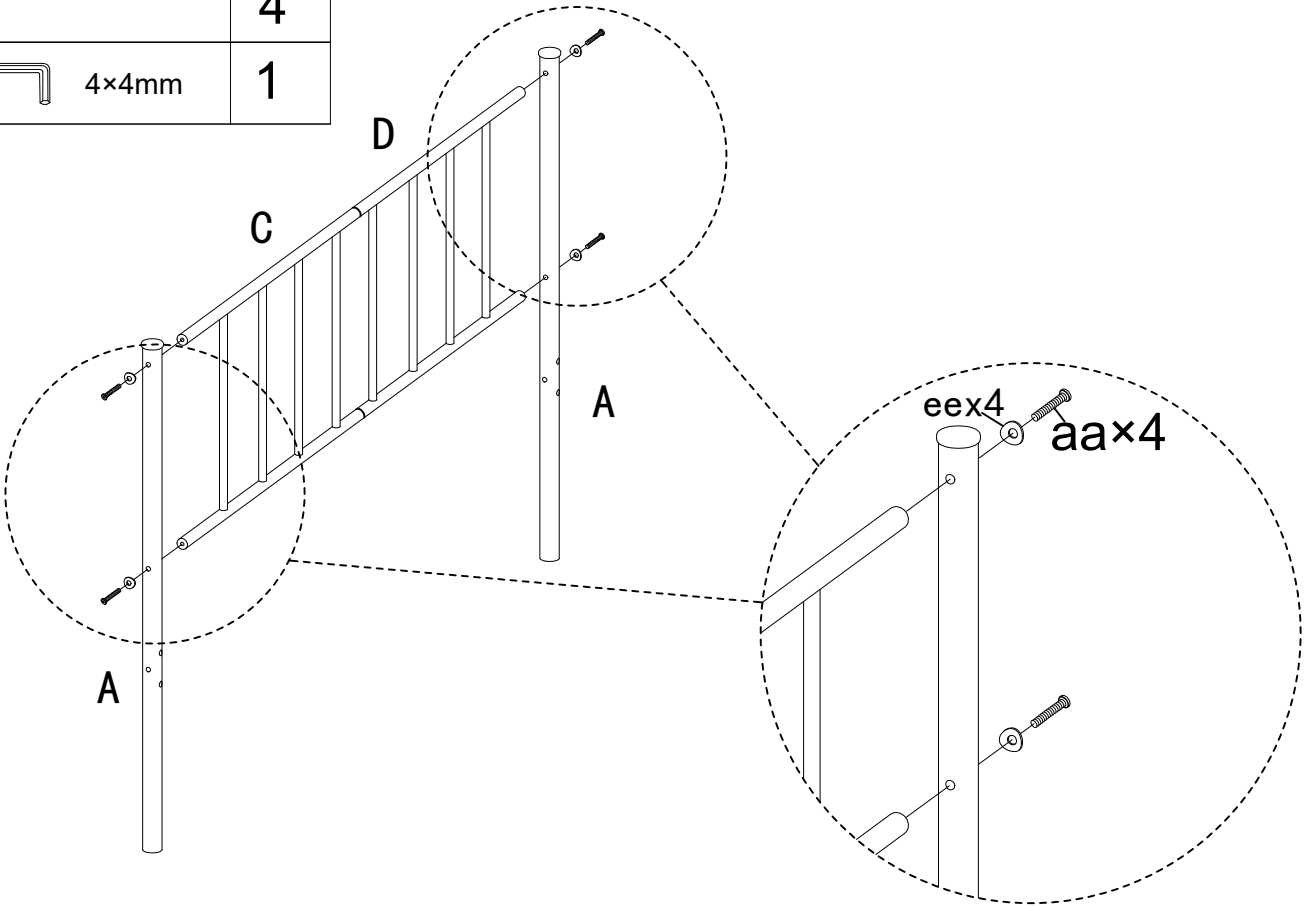



aa	 M6×55mm	4
ee		4
dd	 4×4mm	1

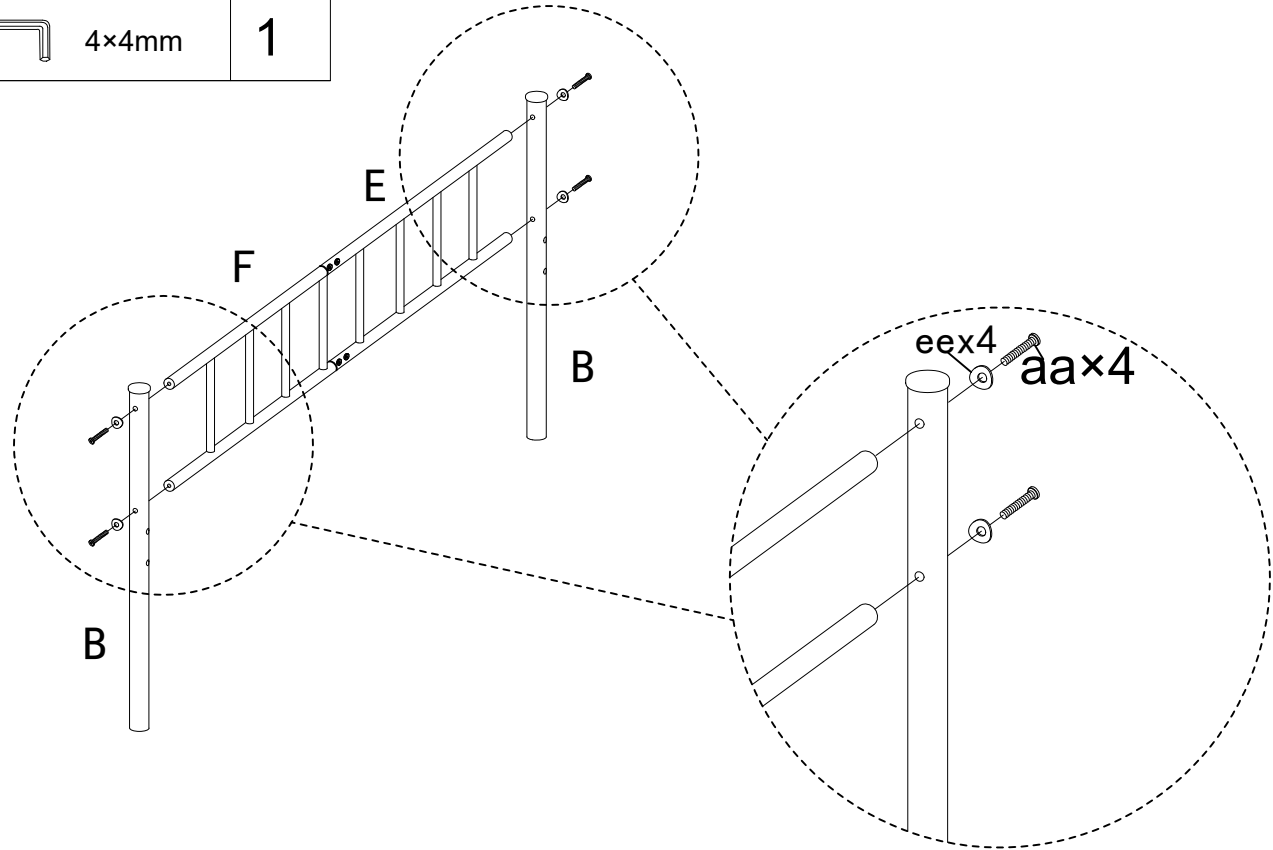

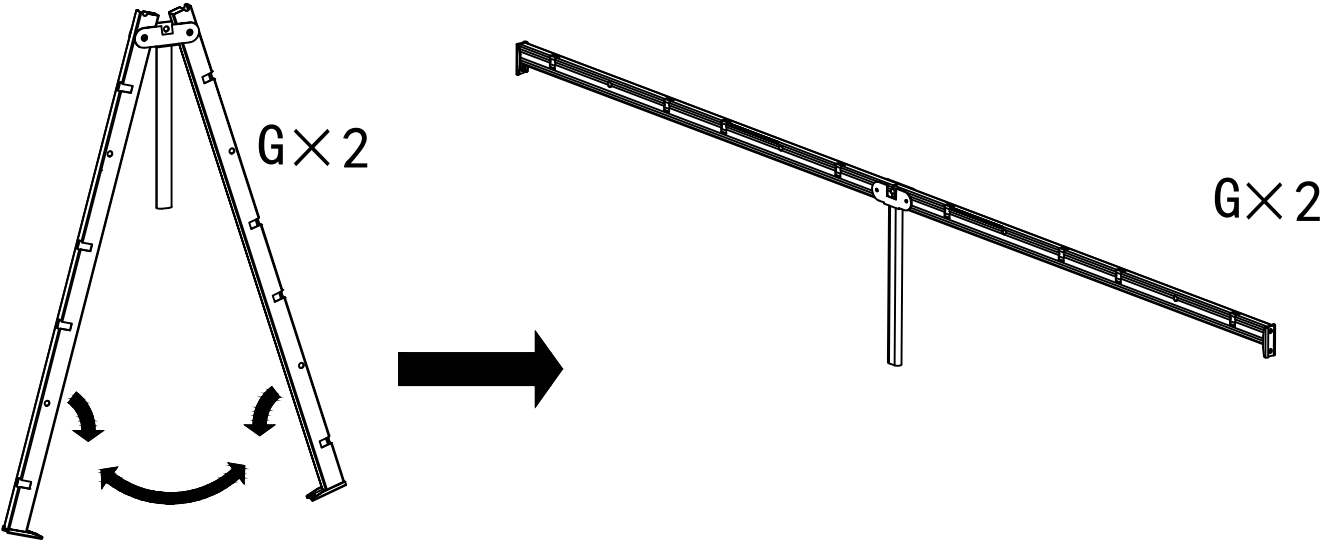


bb	 M8×50mm	8
ee		8
dd	 4×4mm	1

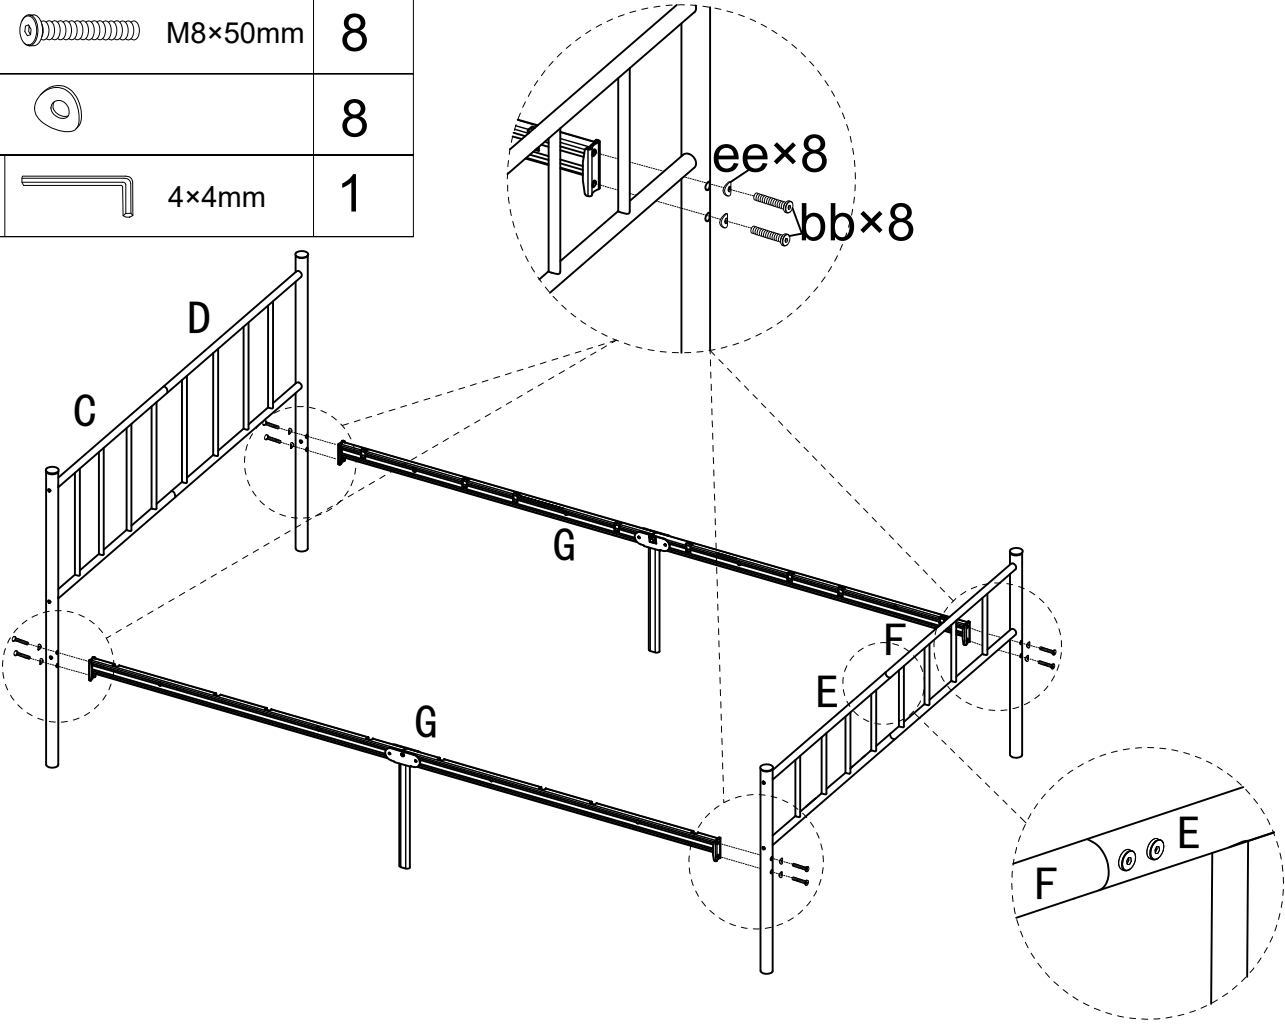

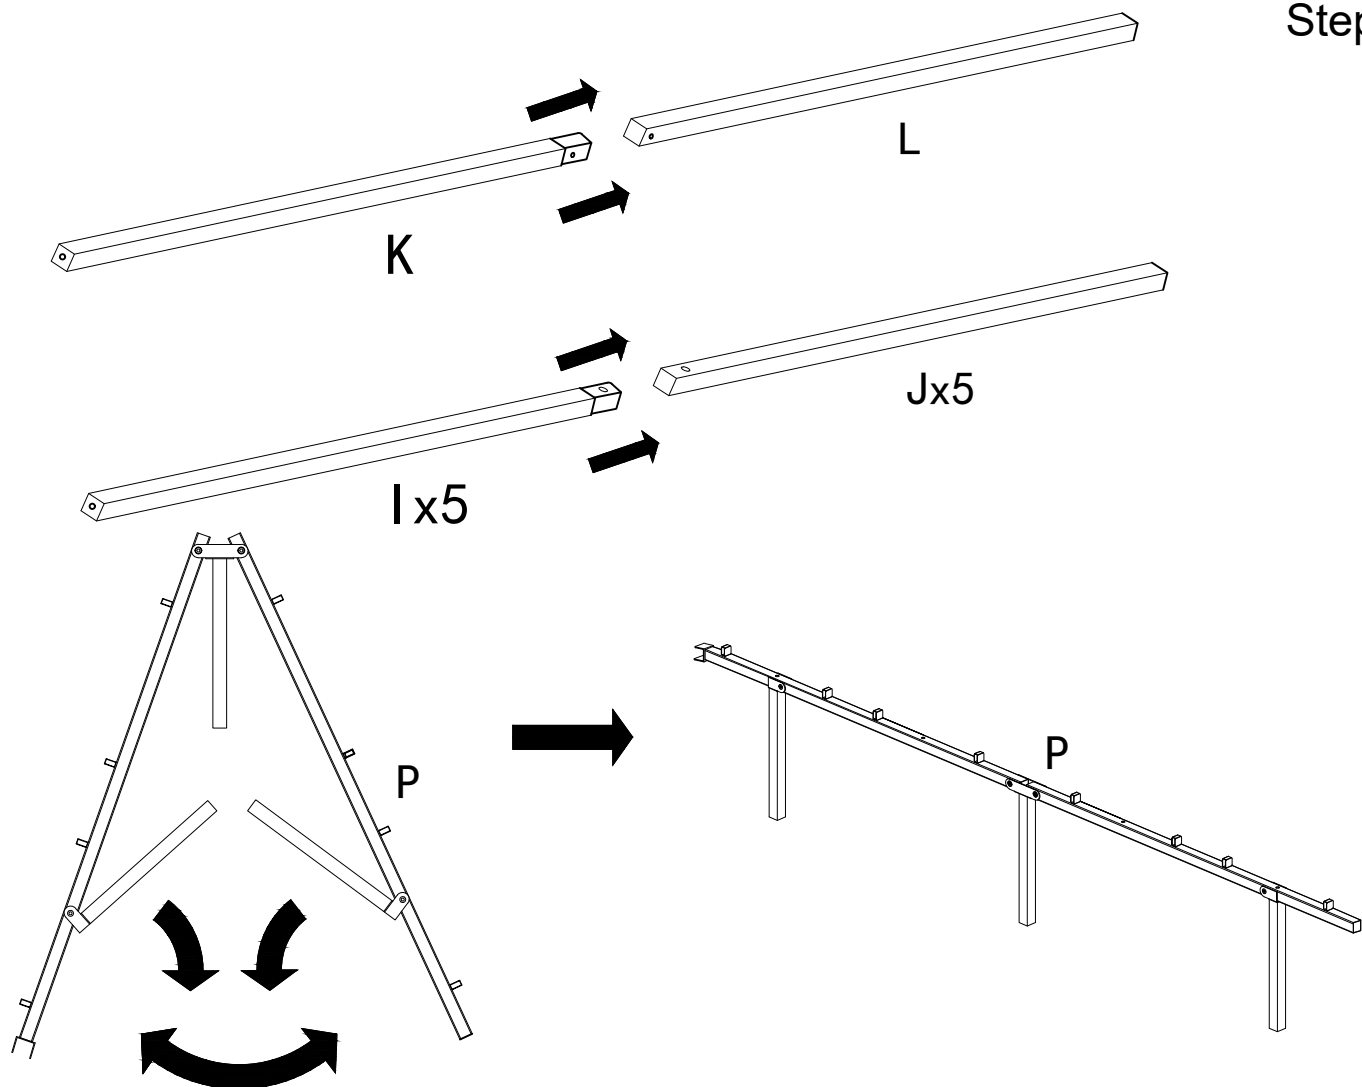


aa		M6×55mm	12	ee		2
dd		4×4mm	1			

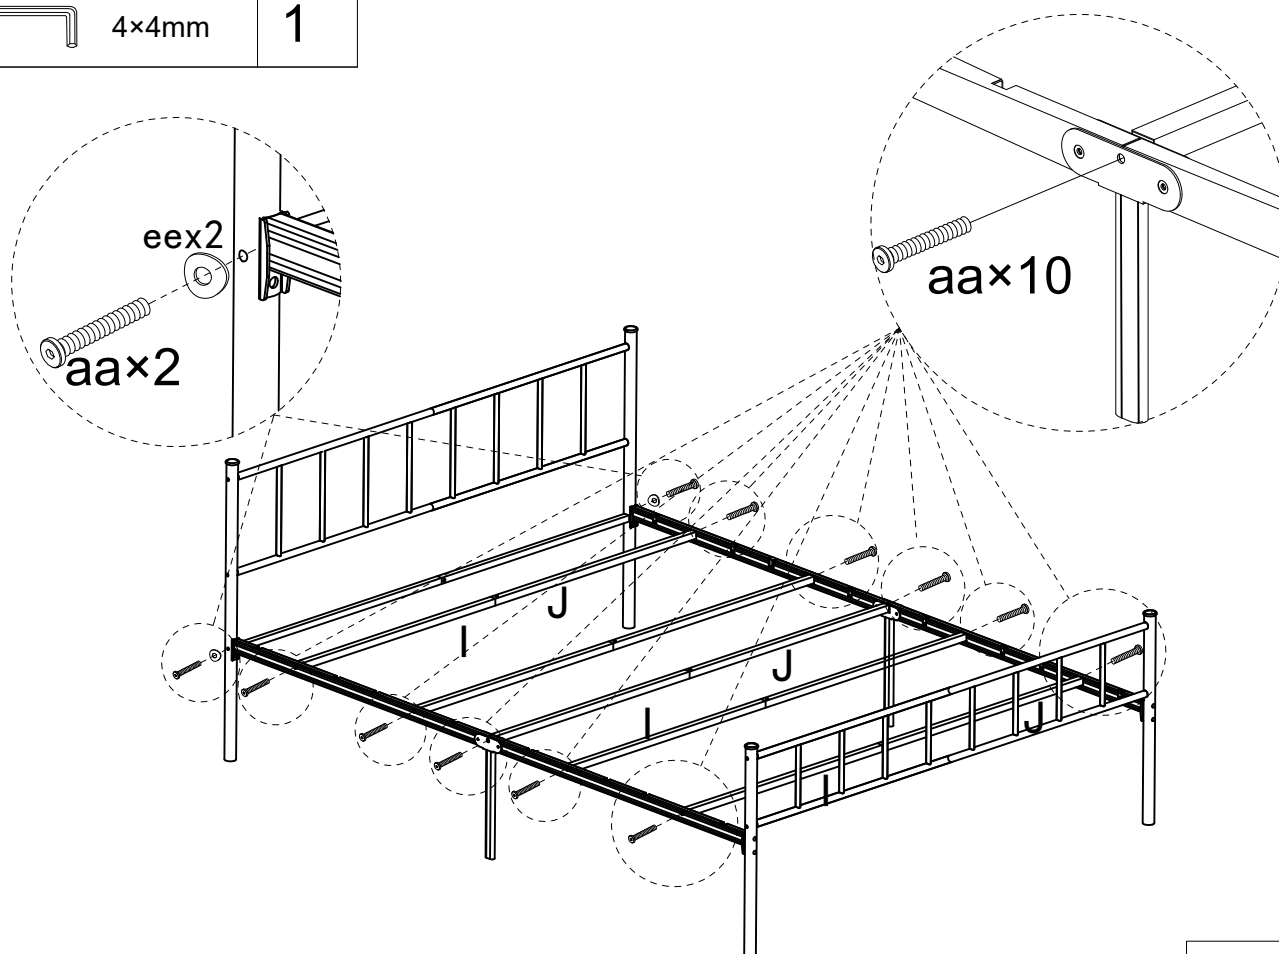

aa	 M6×55mm	4	ff	 M6×30mm	2
dd	 4×4mm	1			

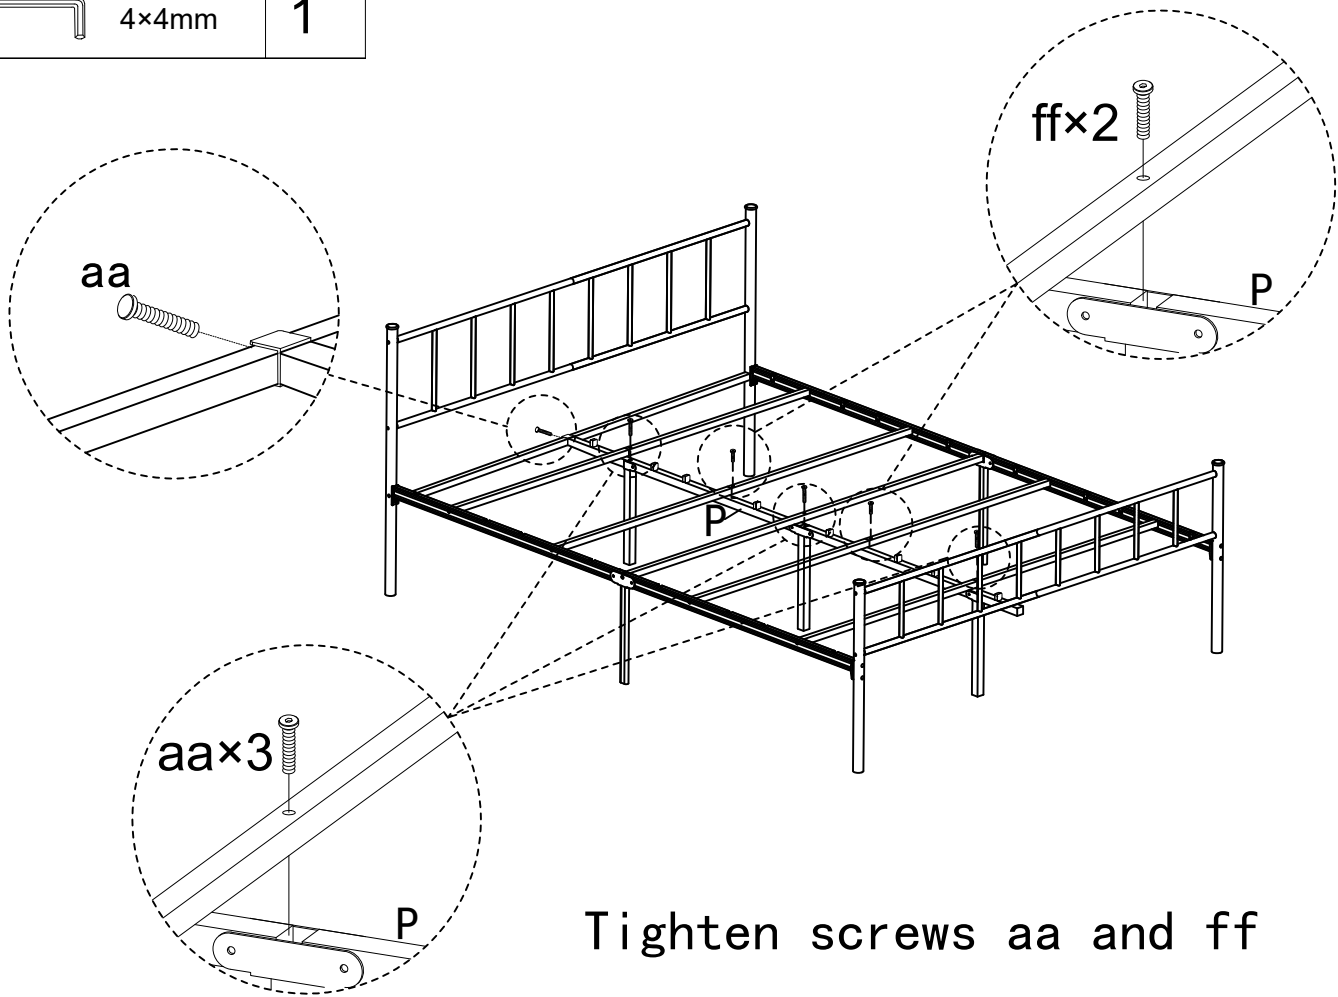Step 9



Step 10

