

Barber Chair Instruction



warning notice



Open your item in the area where you plan to keep it to reduce heavy lifting.



Identify, sort, and count the parts before assembling.



Lay all parts on smooth flat surface.



Make sure to always face the point on the top of the Cam Lock towards the outer edge.




Do NOT use harsh chemicals or abrasive cleaners on this item.



Never push, pull, or drag your furniture.

Teamwork



Not having two people involved in the assembly can potentially result in damage to the unit and pose a risk of personal injury.

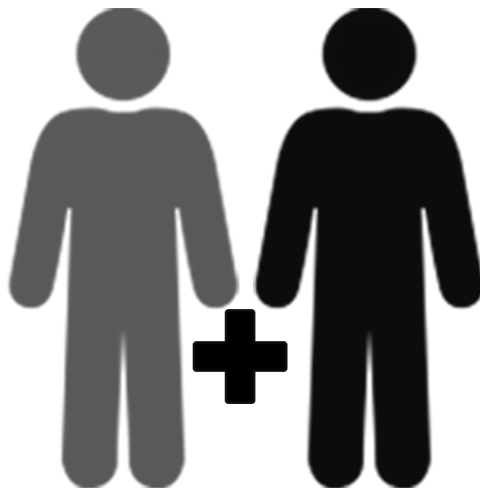

Components

Step 1


Check all parts you received.

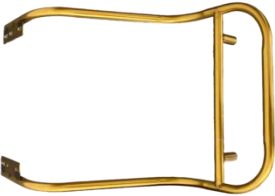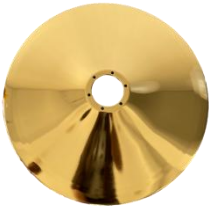Part List				
				
Ax1	Bx1	Cx2	Dx1	
				
Ex1	Fx1	Gx1	Hx2	Ix6

Assembly Instructions

Step 2

Insert threaded bolts on bottom of pump "G" into holes on top of base "E" .Tighten and locking 6 nuts "I" onto threaded bolts.

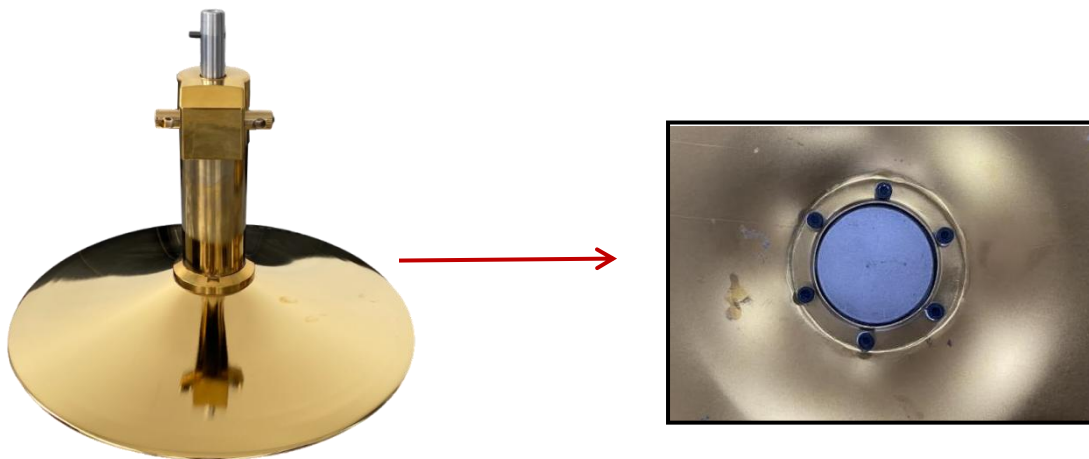

Step 3

Assembled foot bar "F" and hydraulic pump,tighten the set screws to firmly hold the foot bar in place.(pay attention to the direction of foot bar)



Assembly Instructions

Step 4


unscrew the 4 screws under the armrest "C" , Install armrest parts "C" on the seat cushion "A" both sides,tighten(note:please note the direction of the armrest)



Note that the armrest is connected to the seat through the most marginal hole.

Step 5


Install the foot pad "H" on the footrest "D" .Tighten,as picture.

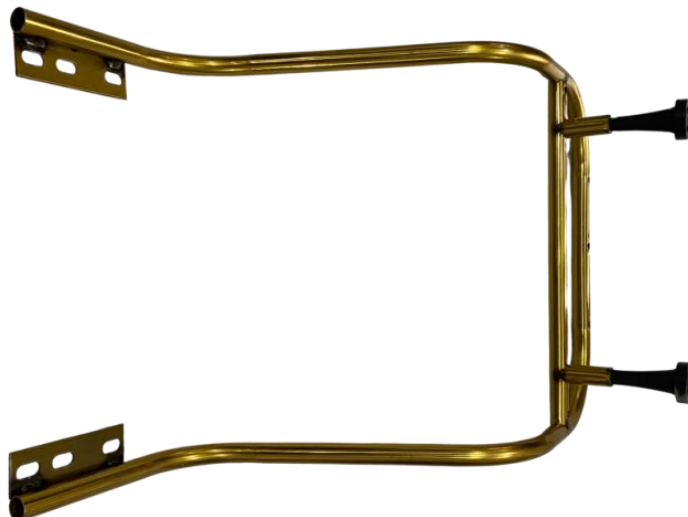

Assembly Instructions

Step 6

Unscrew 4 screws previously assembled on the seat cushion "A", assemble footrest "D" to seat cushion by those screws, tighten.,as picture.

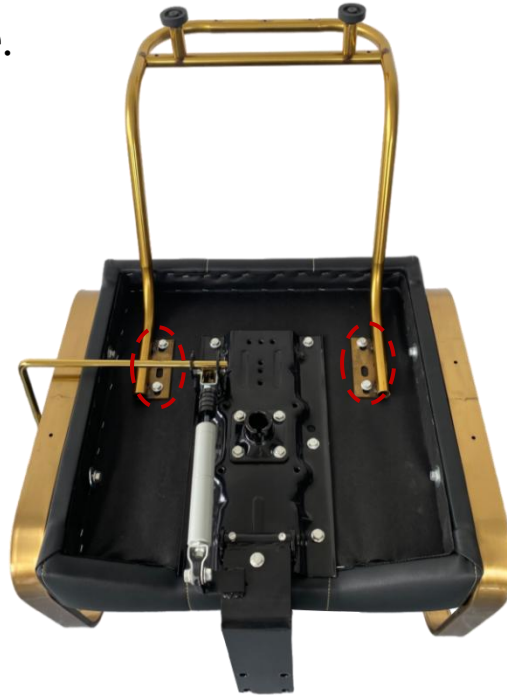

Step 7

Put the assembled seat to the hydraulic pump.



Noted:the tray on the set plate must be aligned with the black pin of hydraulic pump.



Assembly Instructions

Step 8

Unscrew the 4 screws on the backrest "B" ,assemble the backrest "B" to seat cushion "A" by those screws,adjust the backrest into place before tightening the screws.

