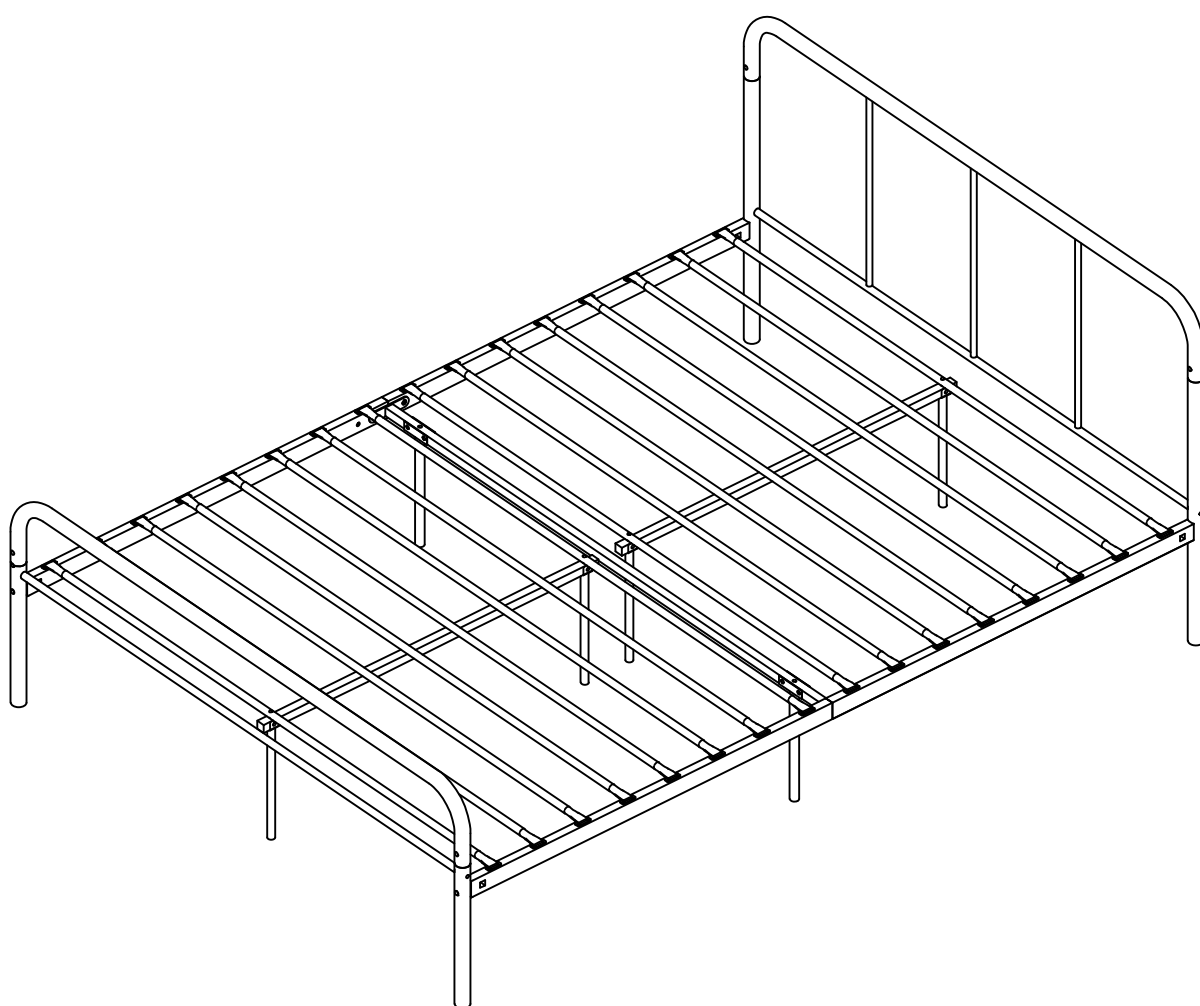
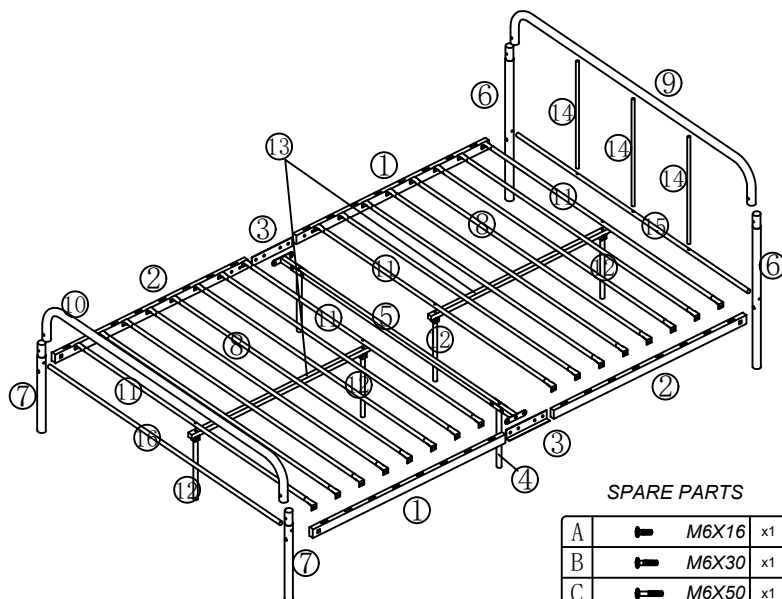




WARNING













·Please don't fasten all screws until you assemble full bed.

A		M6X16	x4
B		M6X30	x7
C		M6X50	x4
D		M8X15	x8
E		M8X35	x2
F		M8X50	x4
G		M8X70	x4
H		M6X18	x8
I			x12
J			x2
K			x4
L			x32
M		M4	x2
N		M5	x1




SPARE PARTS


A		M6X16	x1
B		M6X30	x1
C		M6X50	x1
D		M8X15	x1
E		M8X35	x1
F		M8X50	x1
G		M8X70	x1
H		M6X18	x1
I			x1
J			x1
K			x1
L			x1

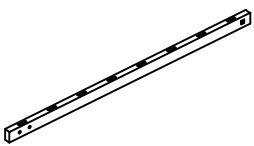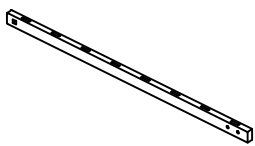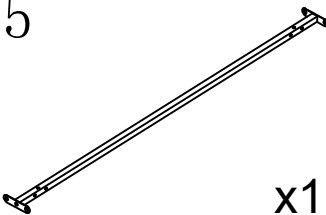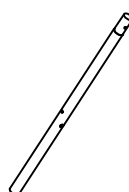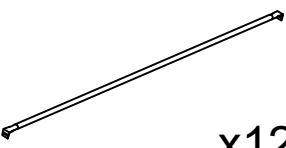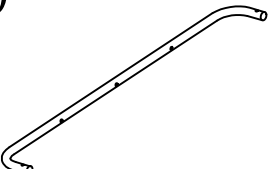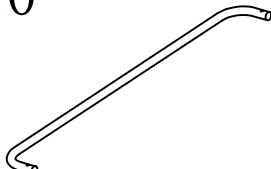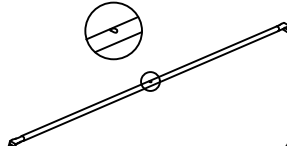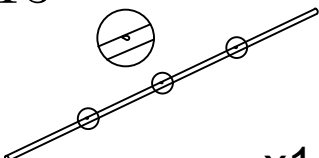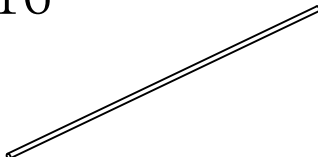1  x2	2  x2	3  x2	4  x2
5  x1	6  x2	7  x2	8  x12
9  x1	10  x1	11  x4	12  x4
13  x2	14  x3	15  x1	16  x1

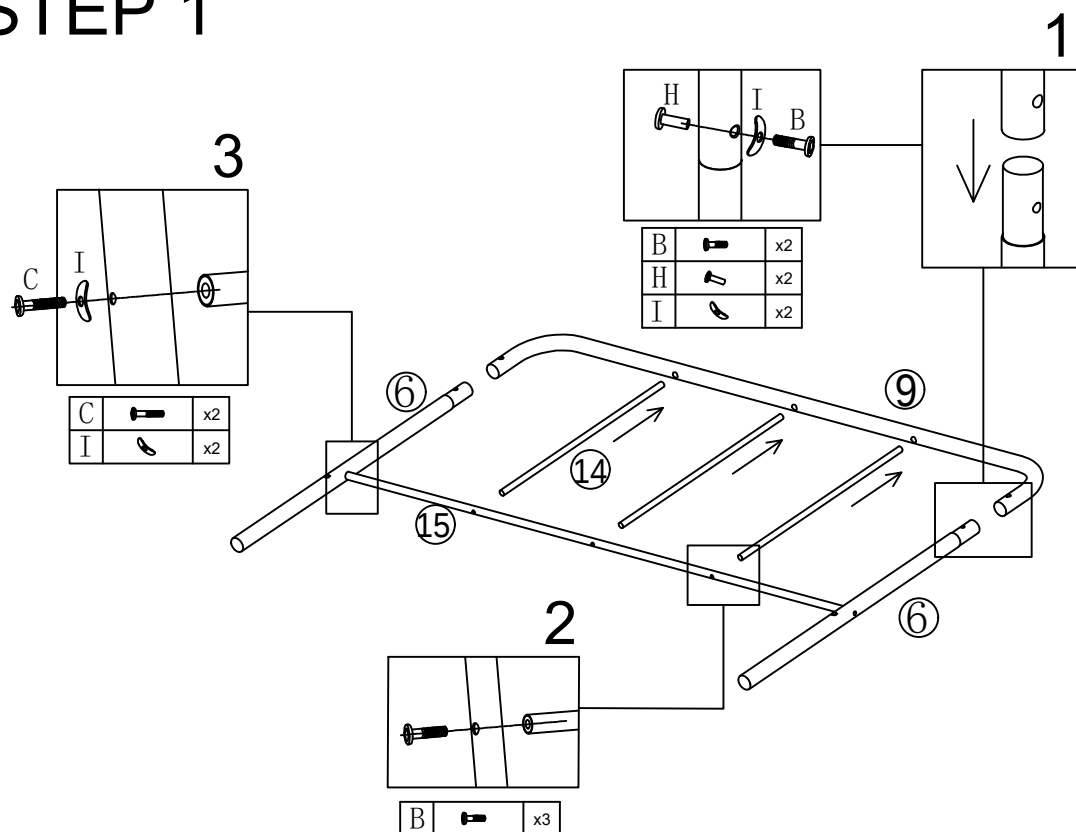
STEP 1



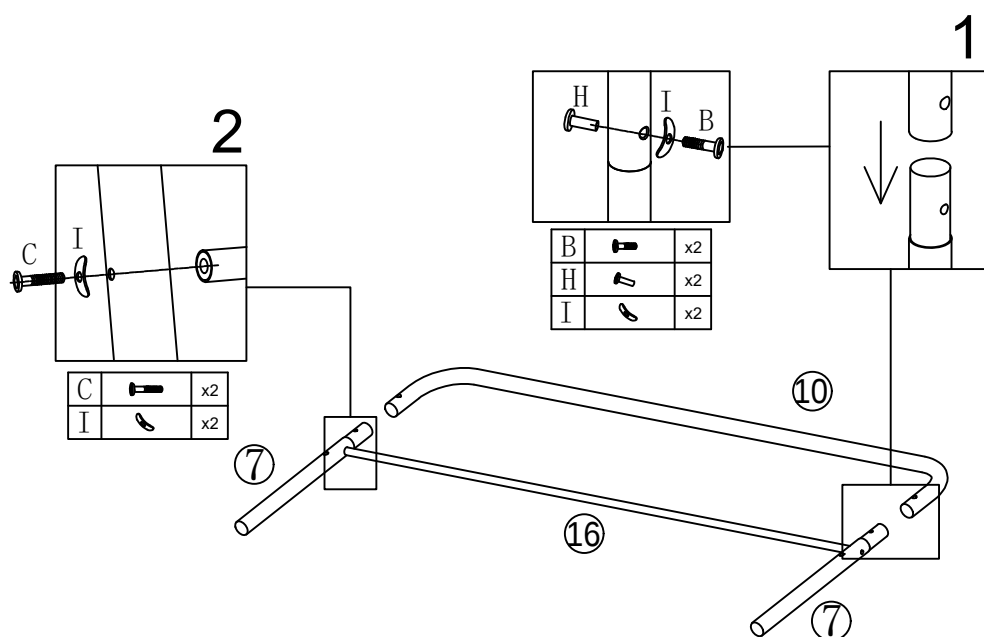
STEP 2



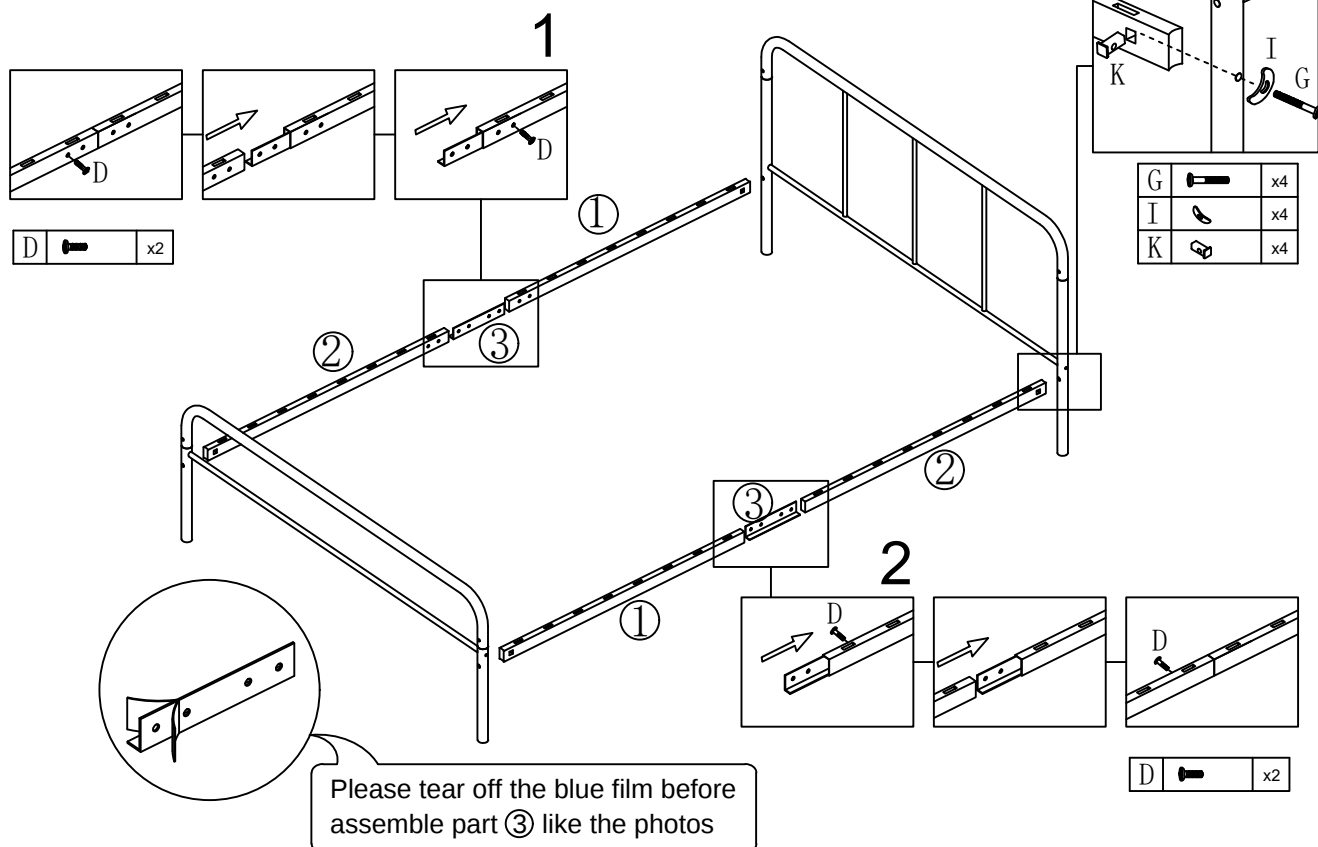
STEP 3



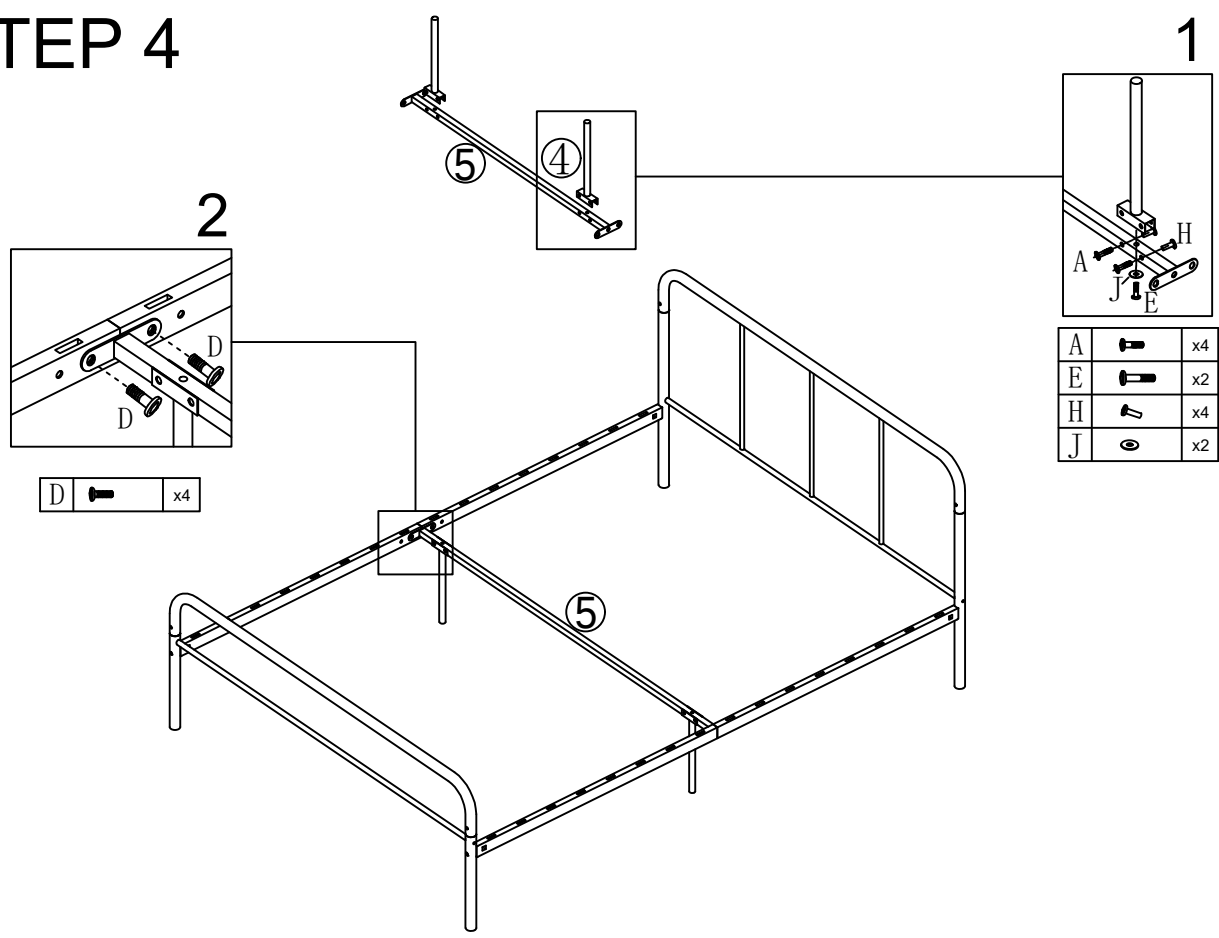STEP 4



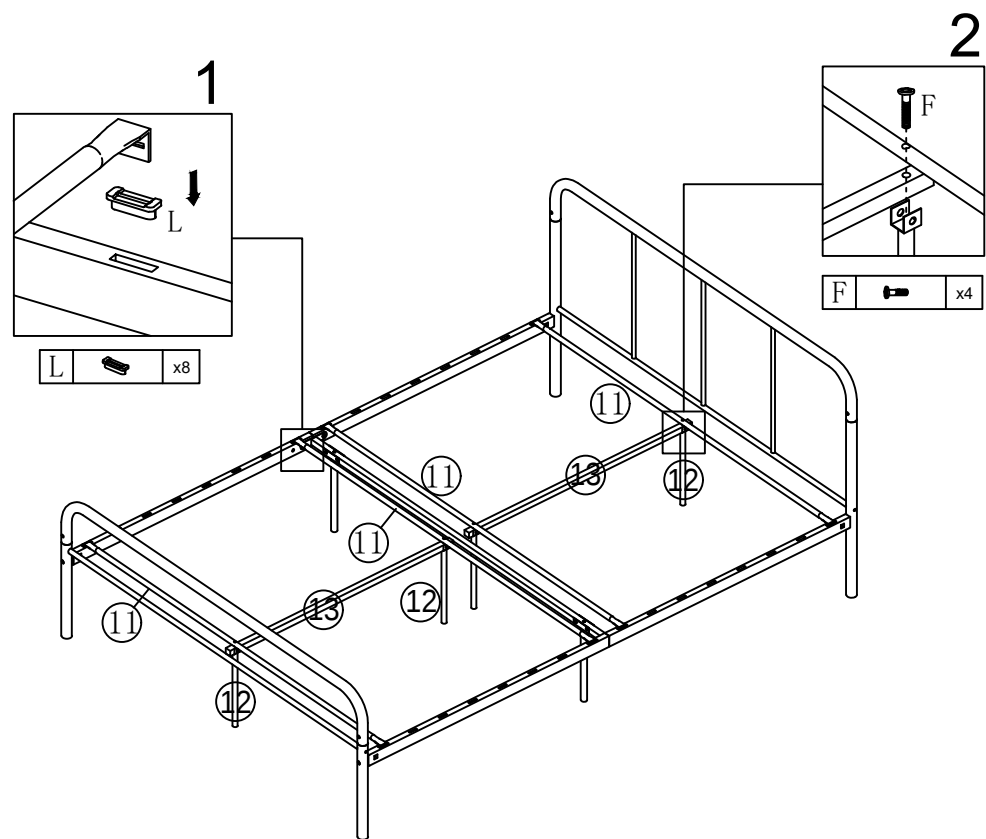STEP 5



STEP 6

