
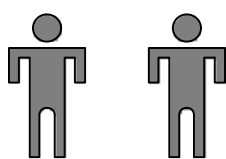



ASSEMBLY INSTRUCTIONS

ITEM:MJGS01



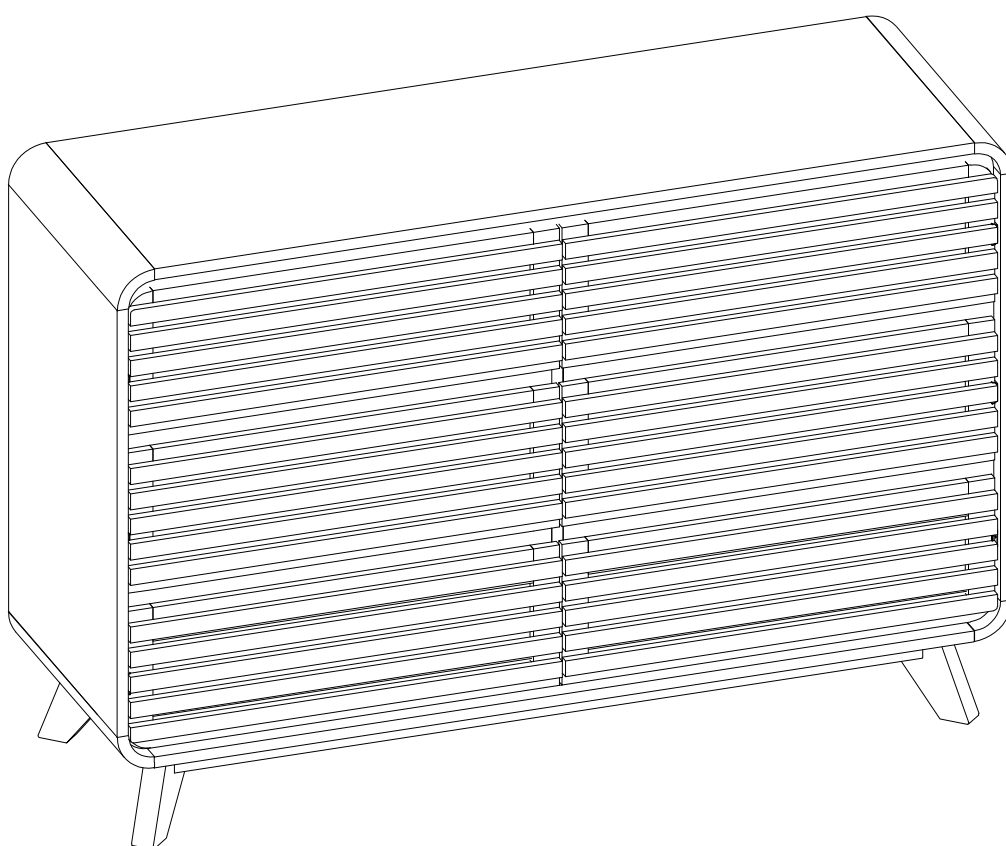


2 people for assembly
















PACKAGE INCLUDE

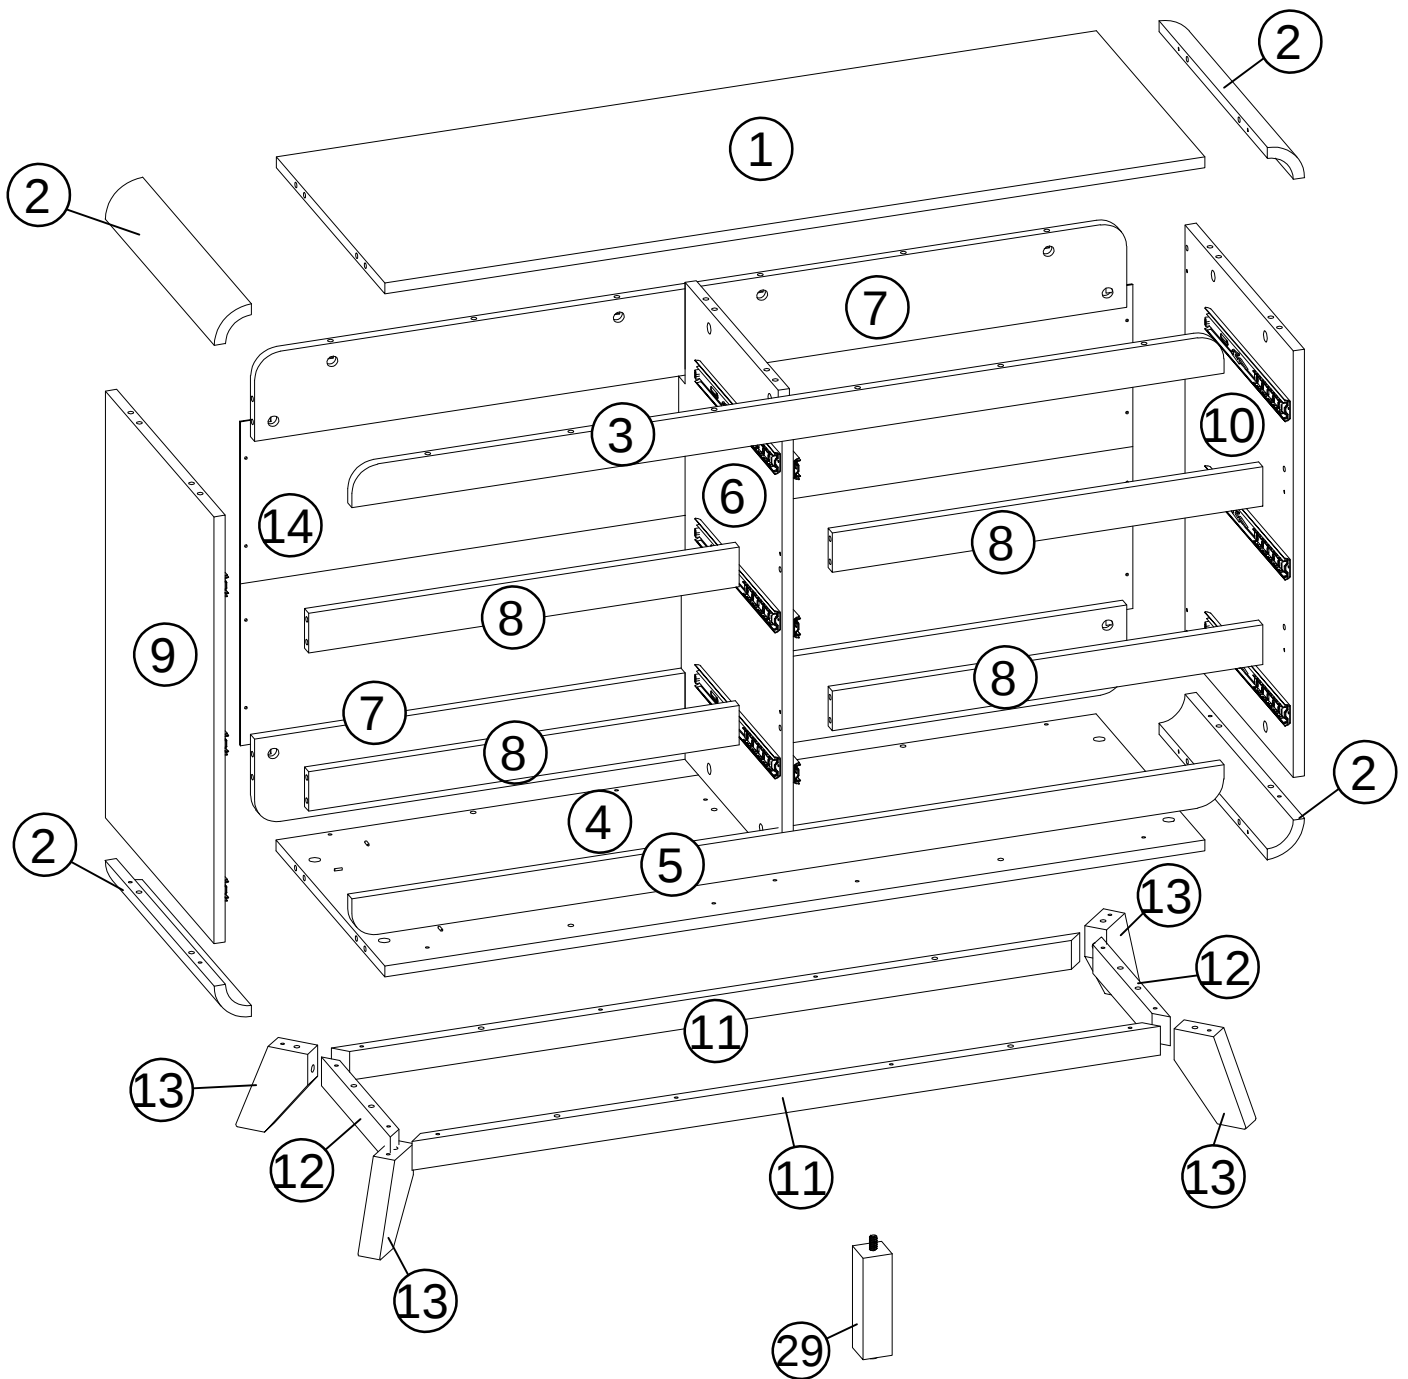


PACKAGE INCLUDE

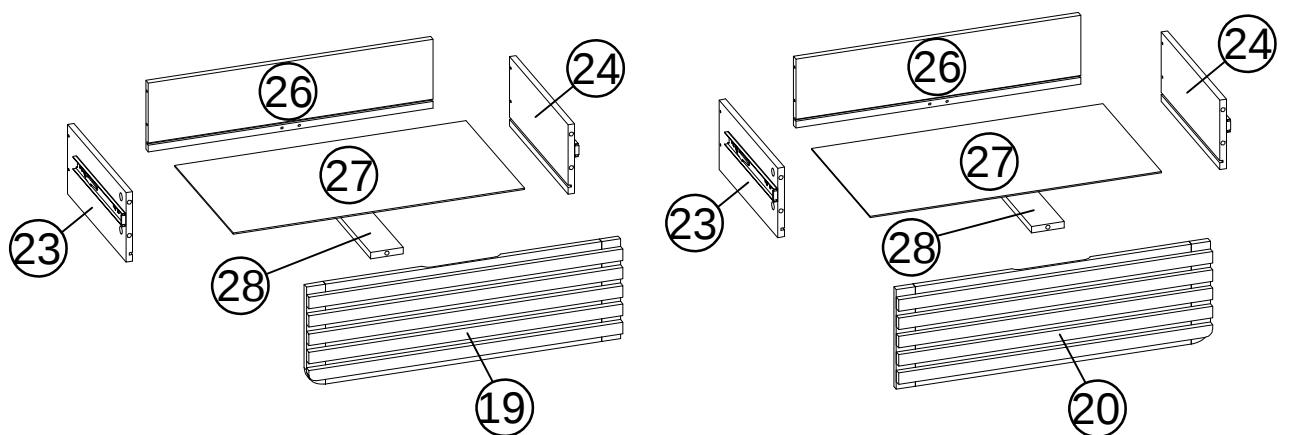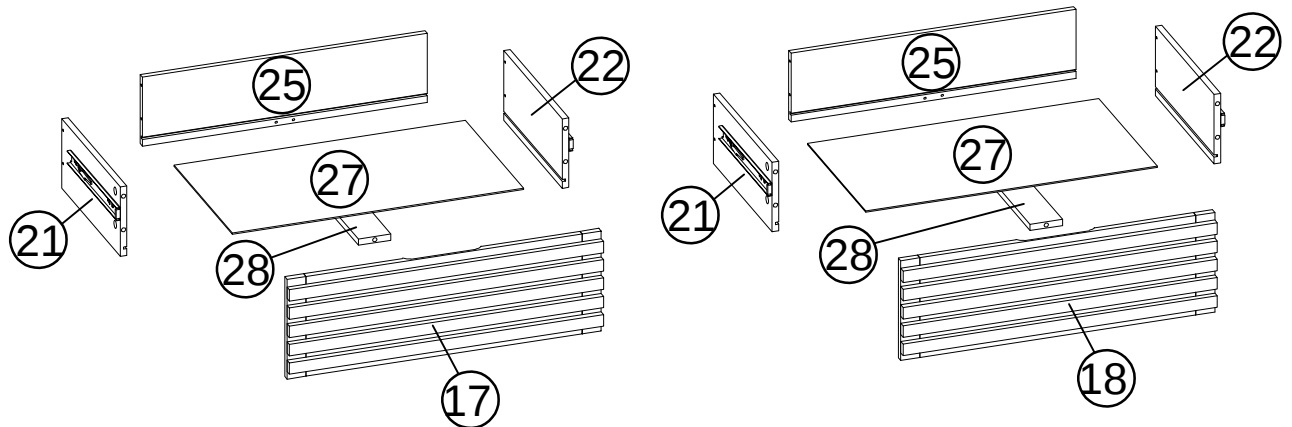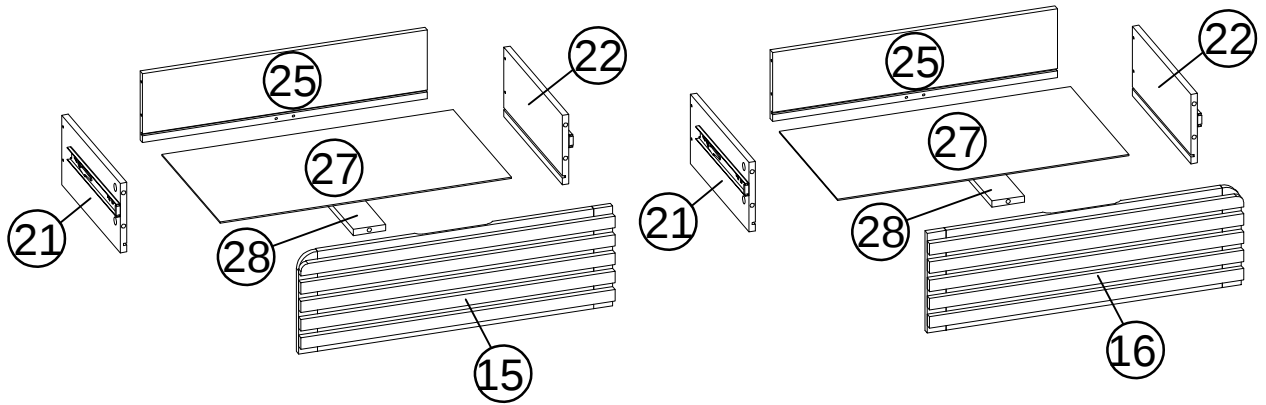


PACKAGE CONTENT

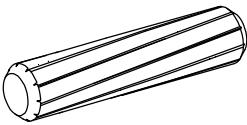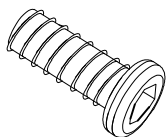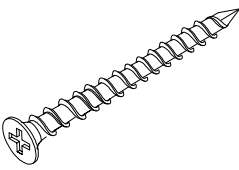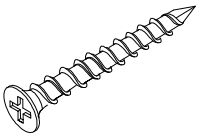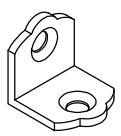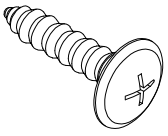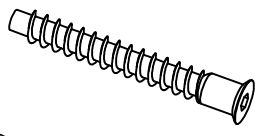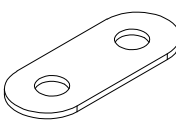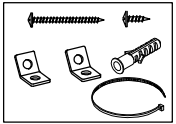$\phi 7.8 \times 30 \text{MM}$  A 54X+2	 B 24X+1	$\phi 6 \times 34 \text{MM}$  C 76X+2	$\phi 15 \times 12 \text{MM}$  D 46X+2
$\phi 1/4" \times 22 \text{mm}$  E 4X	 F 4X	$\phi 4 \times 50 \text{MM}$  G 14X+1	$\phi 4 \times 38 \text{MM}$  H 36X+1
$\phi 4 \times 12 \text{MM}$  I 8X+1	 J 4X	$\phi 15 \times 9 \text{MM}$  K 30X+1	$\phi 4 \times 14 \text{MM}$  L 8X+1
$\phi 3.5 \times 15 \text{MM}$  M 24X+1	$\phi 6 \times 50 \text{MM}$  N 4X+1	 O 4X	$\phi 3 \times 14 \text{MM}$  P 8X+1
 Q 2X	 1X		


How to use the cam lock system

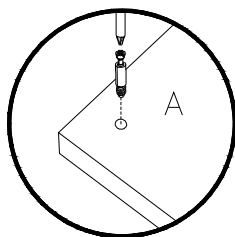


1. Screw cam bolt into panel

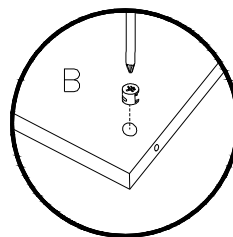


2. Push cam into panel - arrow feature on cam top points to panel edge

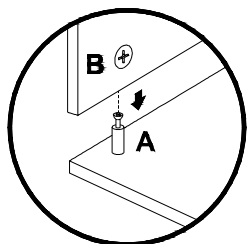

3. Align cam bolt(s) with cam(s) and insert all the way into cross-bored hole(s)

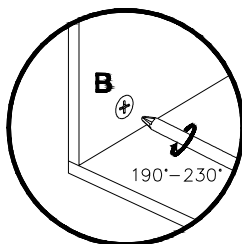


4. Rotate cam(s) clockwise 190°-230° to lock panels together

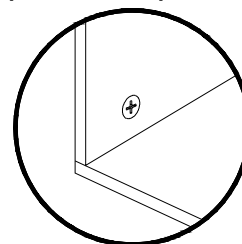

5. Panels should be tight against each other and connection should be rigid


Insert the wood dowel (A) at least half way by tapping lightly with a rubber mallet, IF NECESSARY

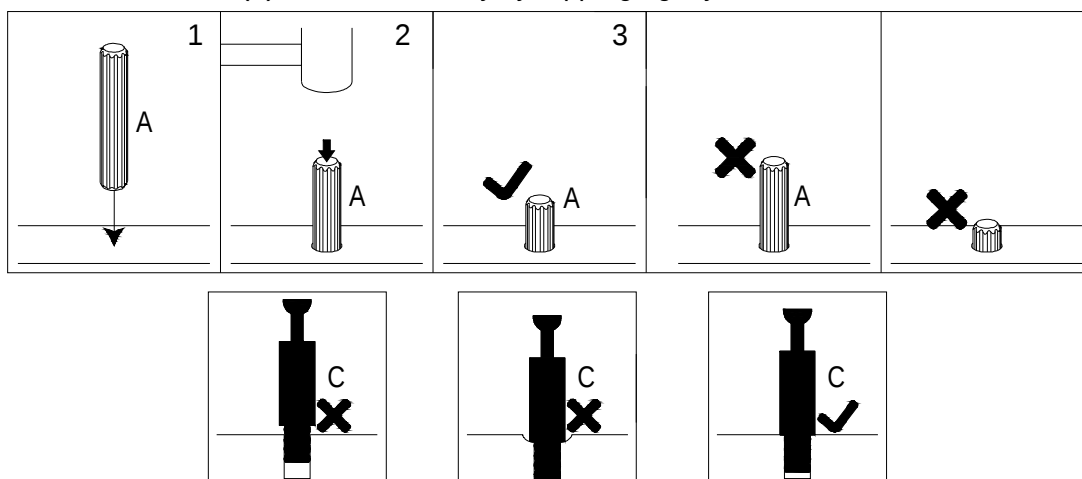

⚠ WARNING

- Unit must be placed on a level surface or leveled with included hardware (when applicable).
- Do not sit or stand on or allow children to climb, sit or stand on the assembled product.
- For safety reasons, it is imperative that this unit be mounted to the wall.
- Do not use without installing the tip restraint.
- Unit can tip over causing severe injury or death.
- Do not exceed the recommended weight limits.
- Evenly distribute the weight on each level and always keep the heavier loads on the bottom.
- Before cutting, drilling or hammering into any wall or floor surface, verify the location of electrical, plumbing and gas lines. Cutting may cause serious injury.

Now you can assemble the TV console.

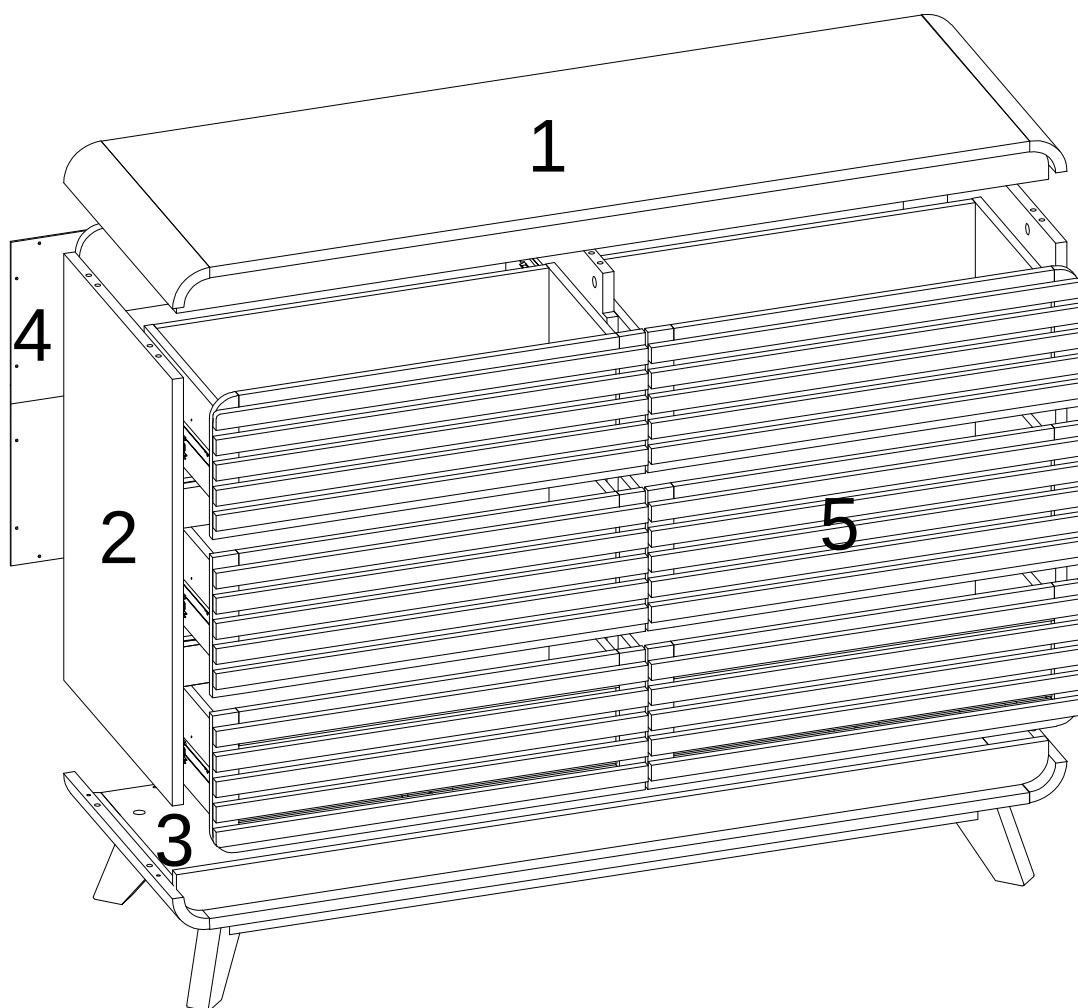




The installation process is divided into five parts:

1. Install the cabinet top part
2. Install the cabinet body
3. Install the bottom part
4. Install the back part
5. Install the drawers part




Tip:

Using an electric screwdriver will make assembly easier.




STEP 1

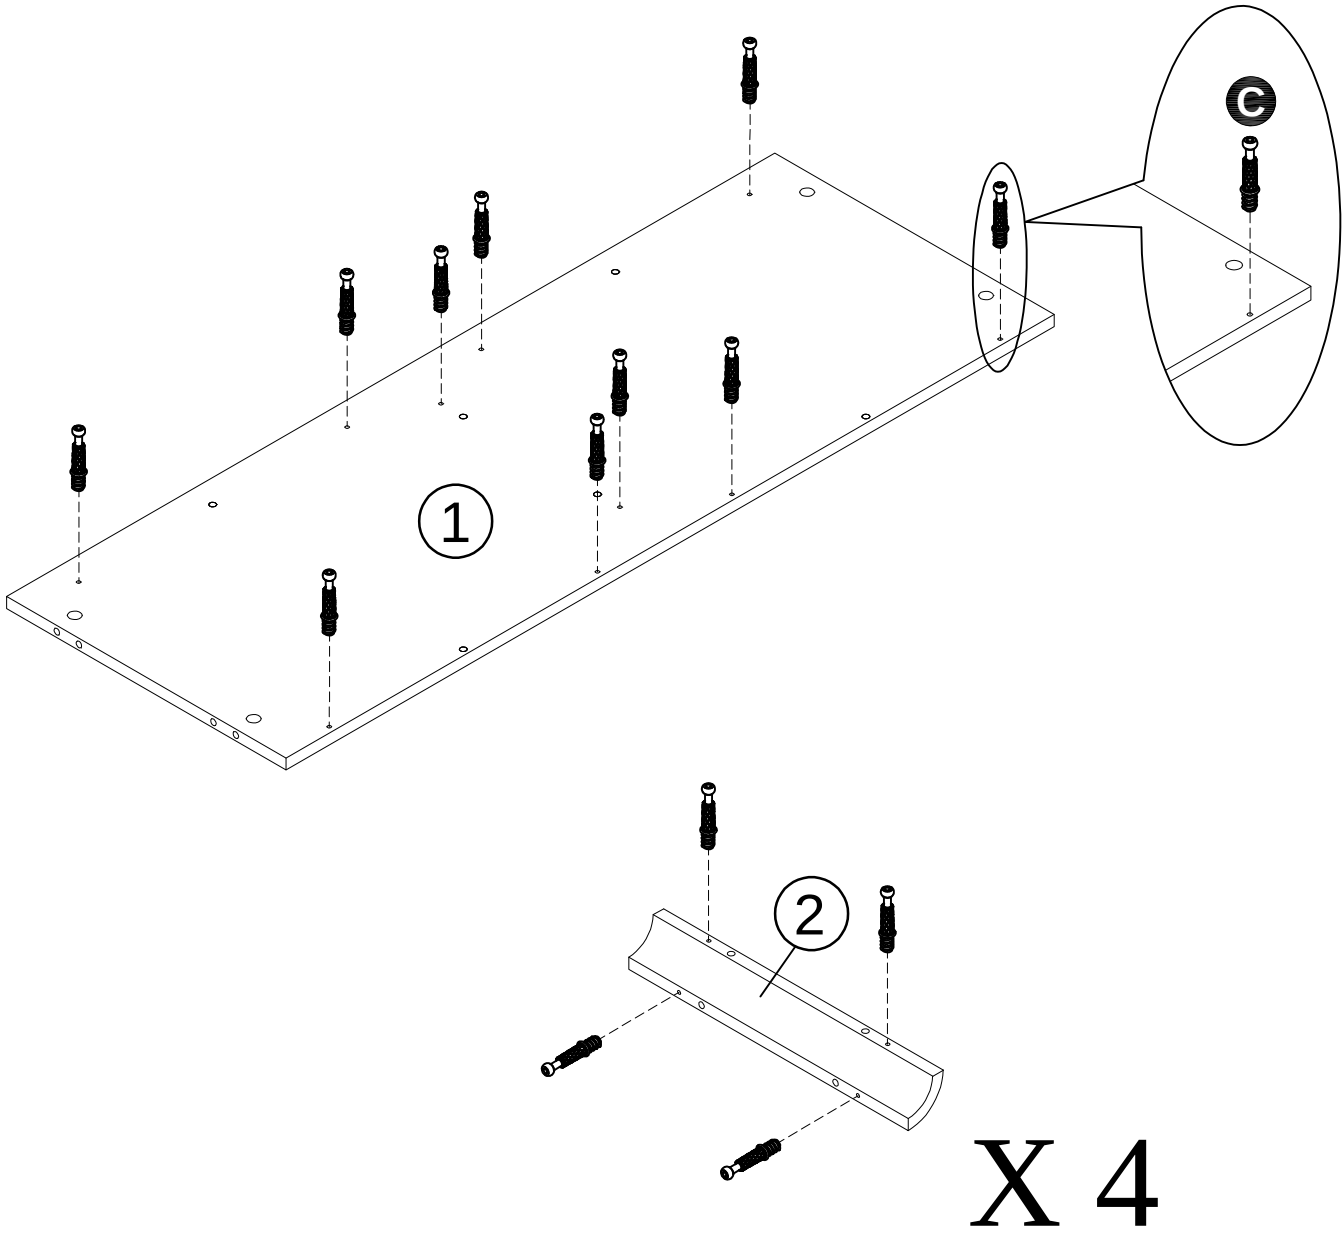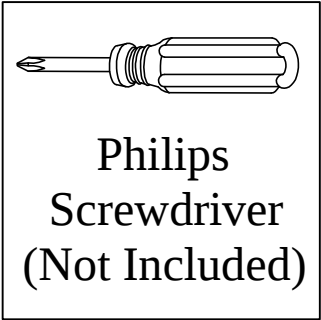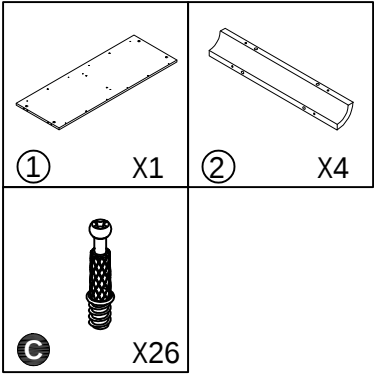




STEP 2

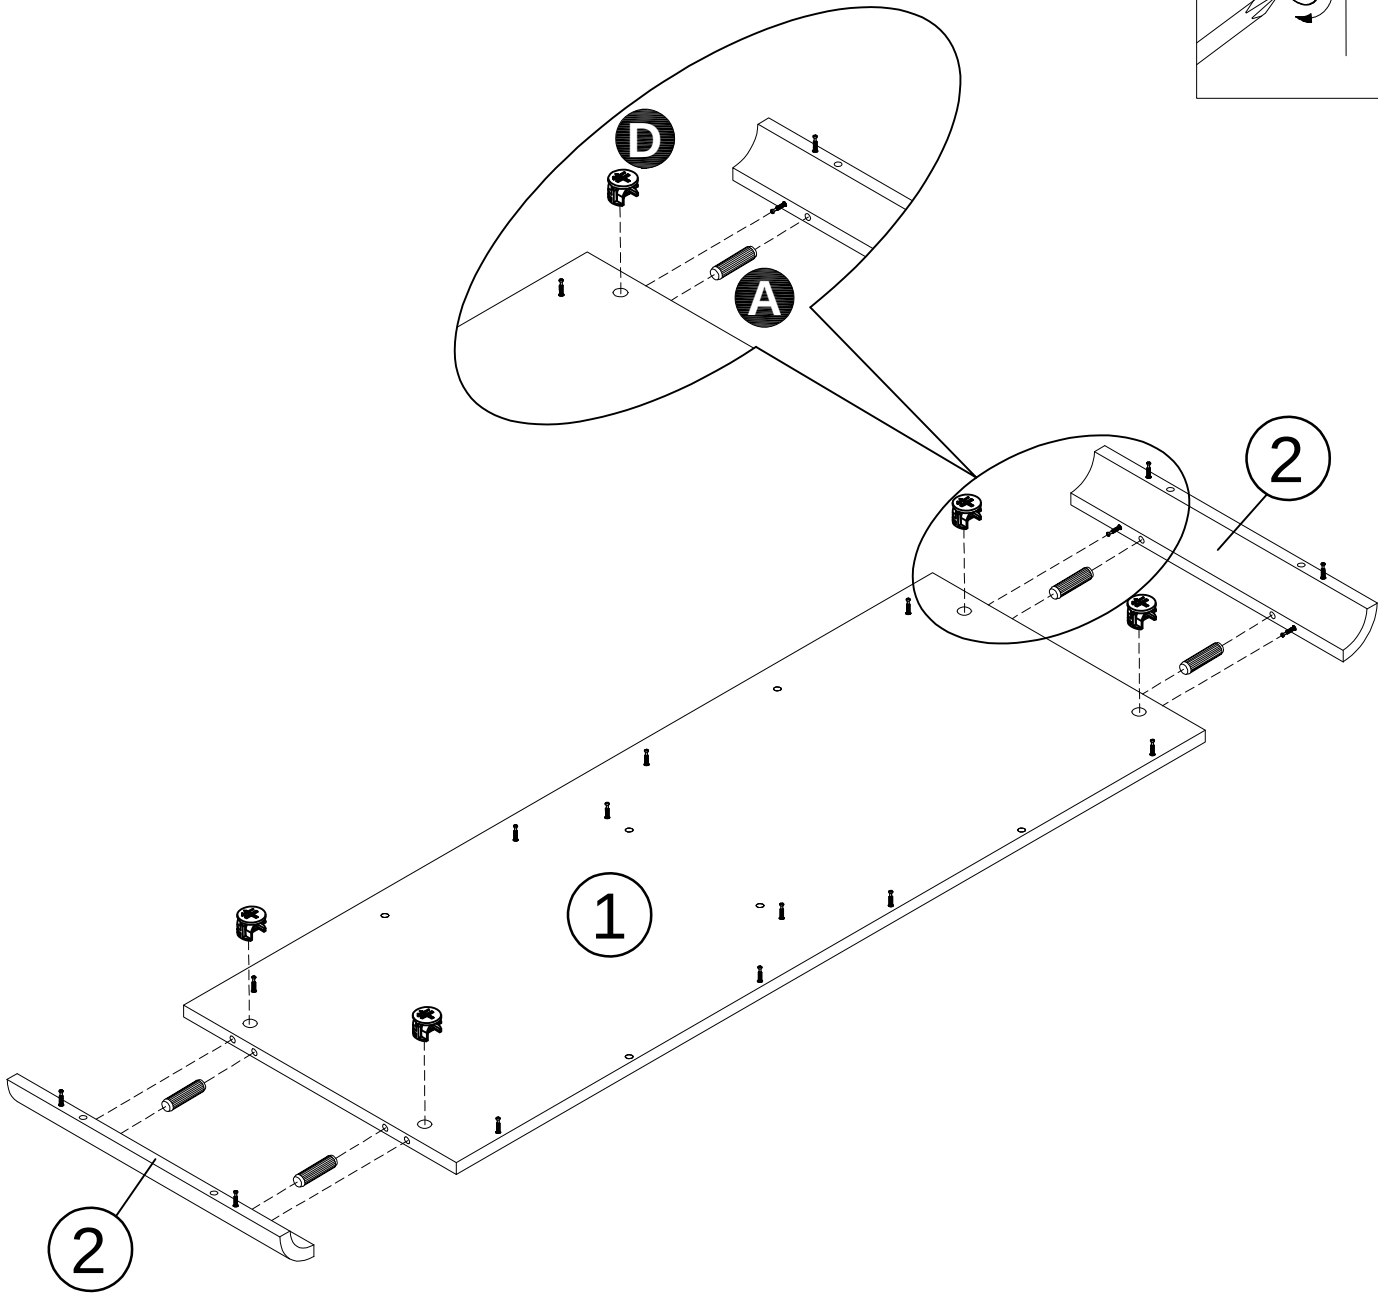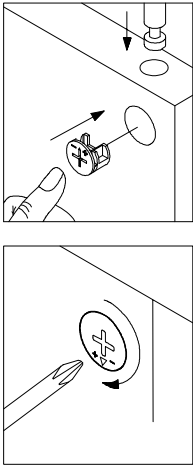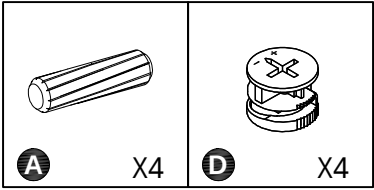



STEP 3

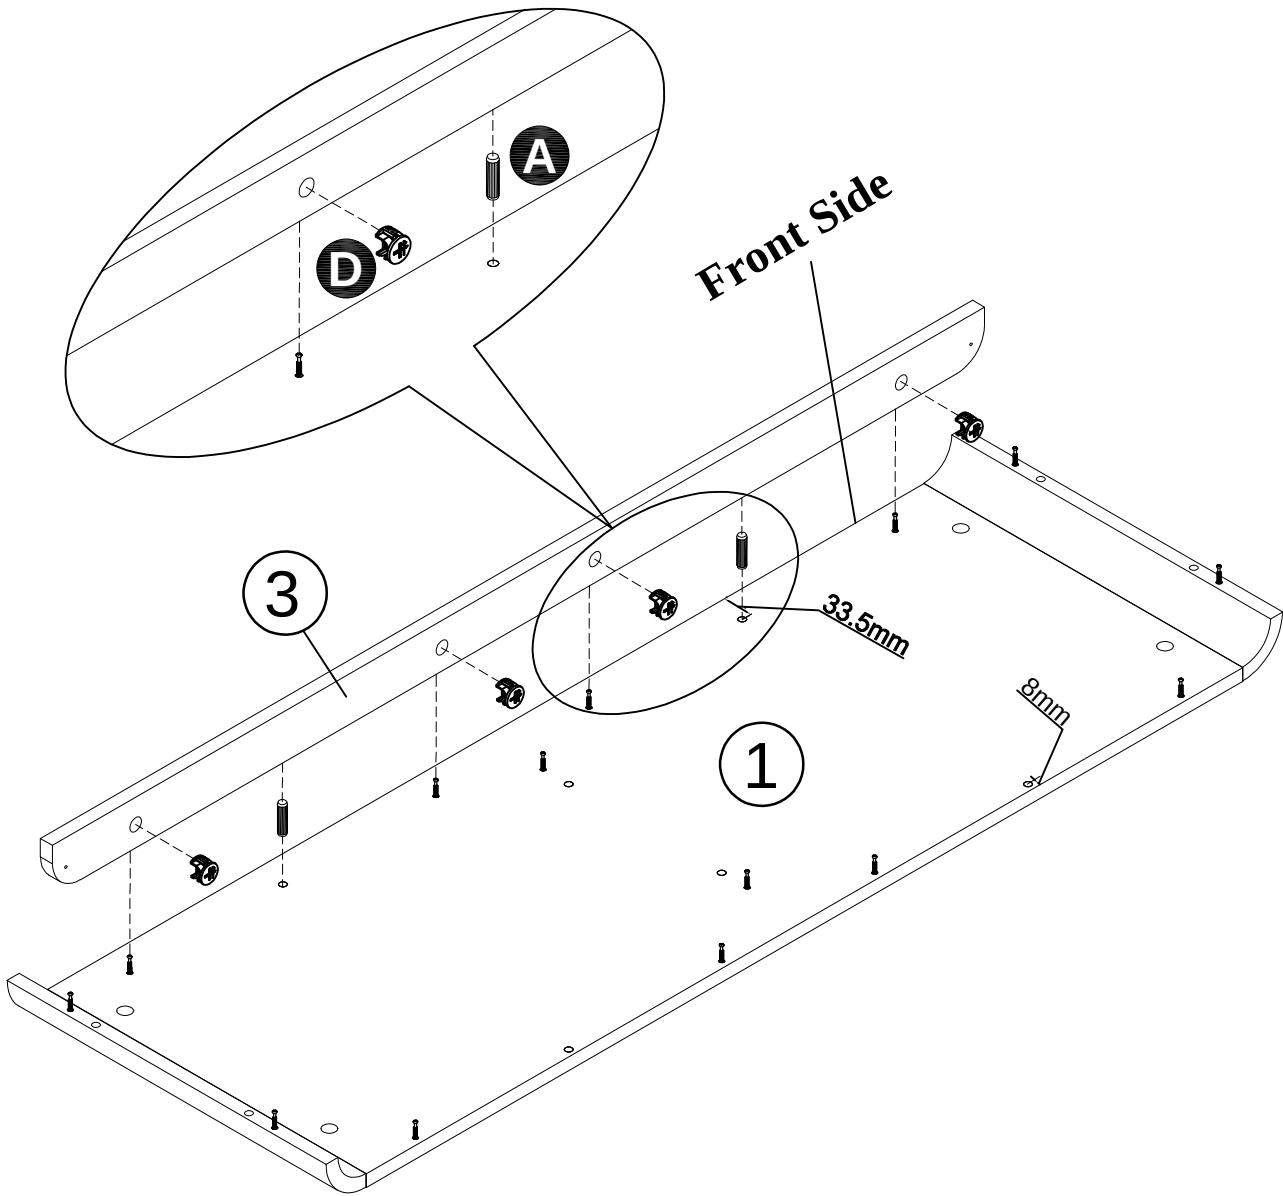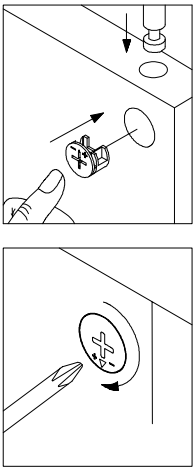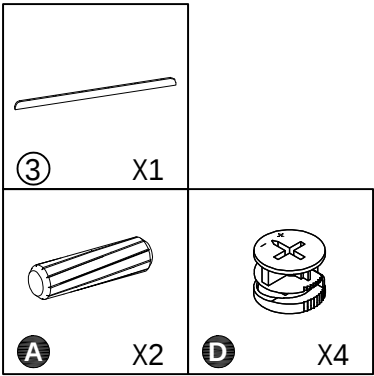


STEP 4

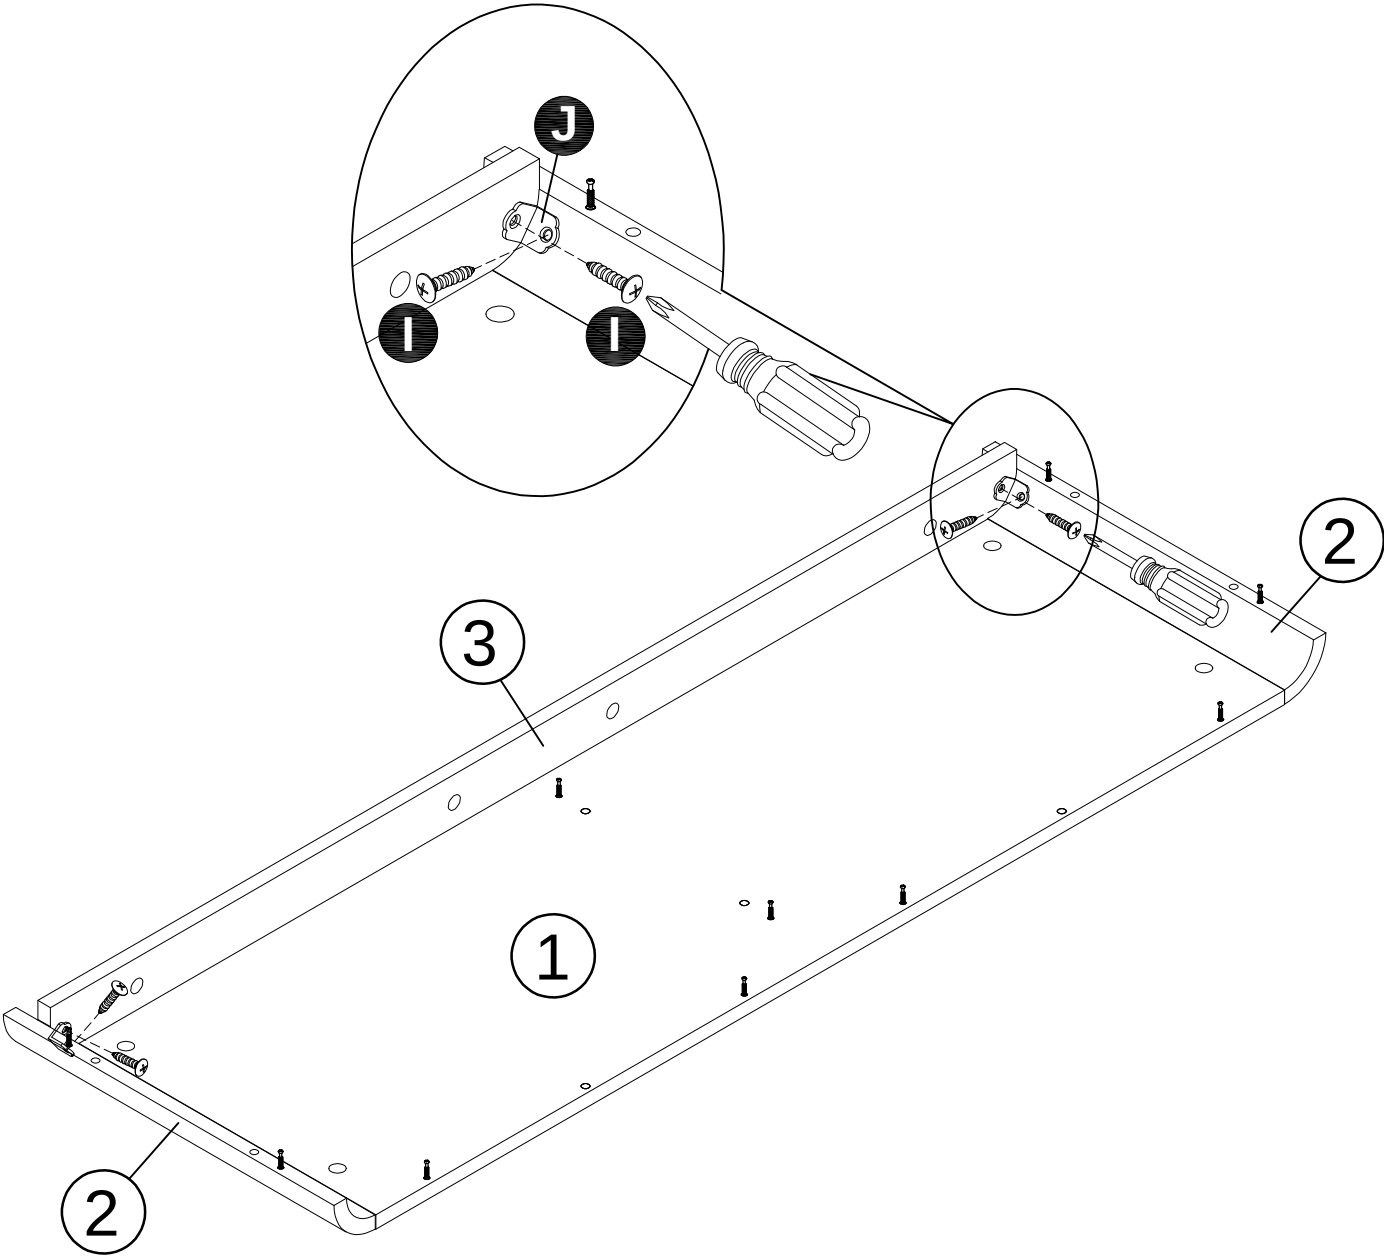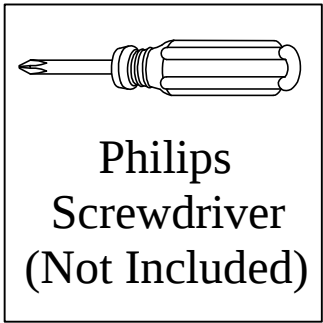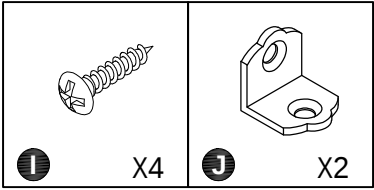




STEP 5

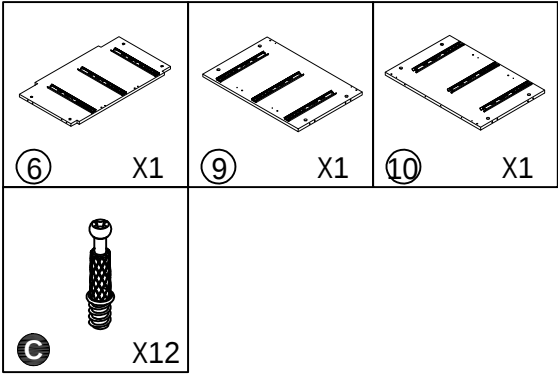

Philips
Screwdriver
(Not Included)




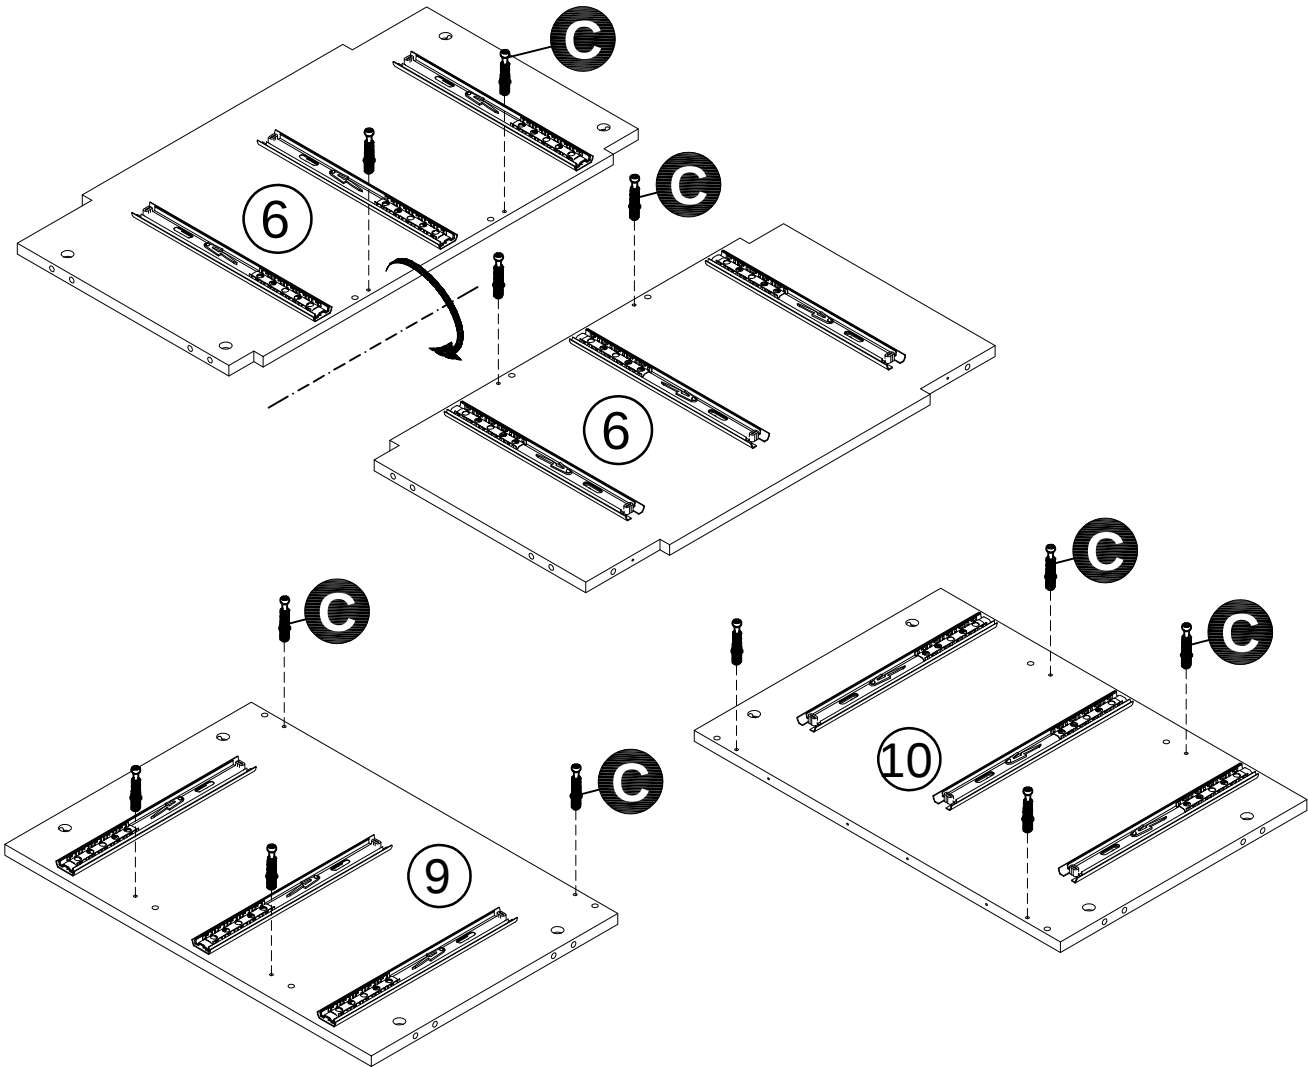


STEP 6


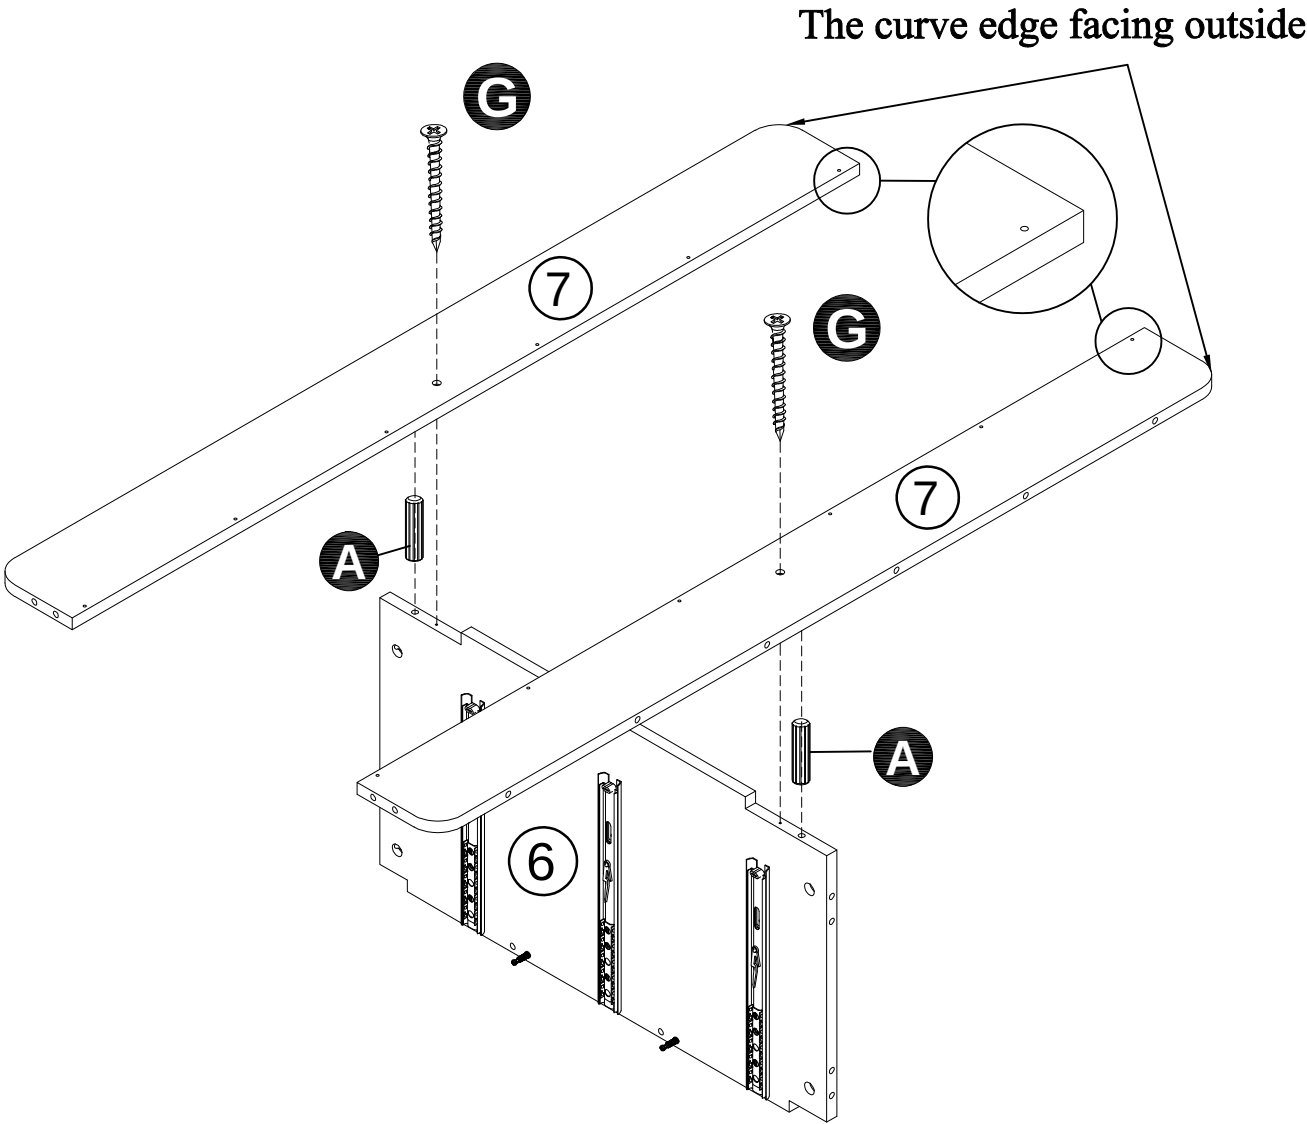
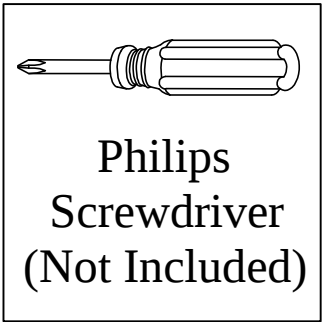
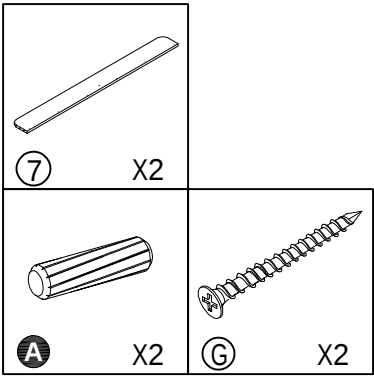


Note: ask for assistance on this step.

STEP 7

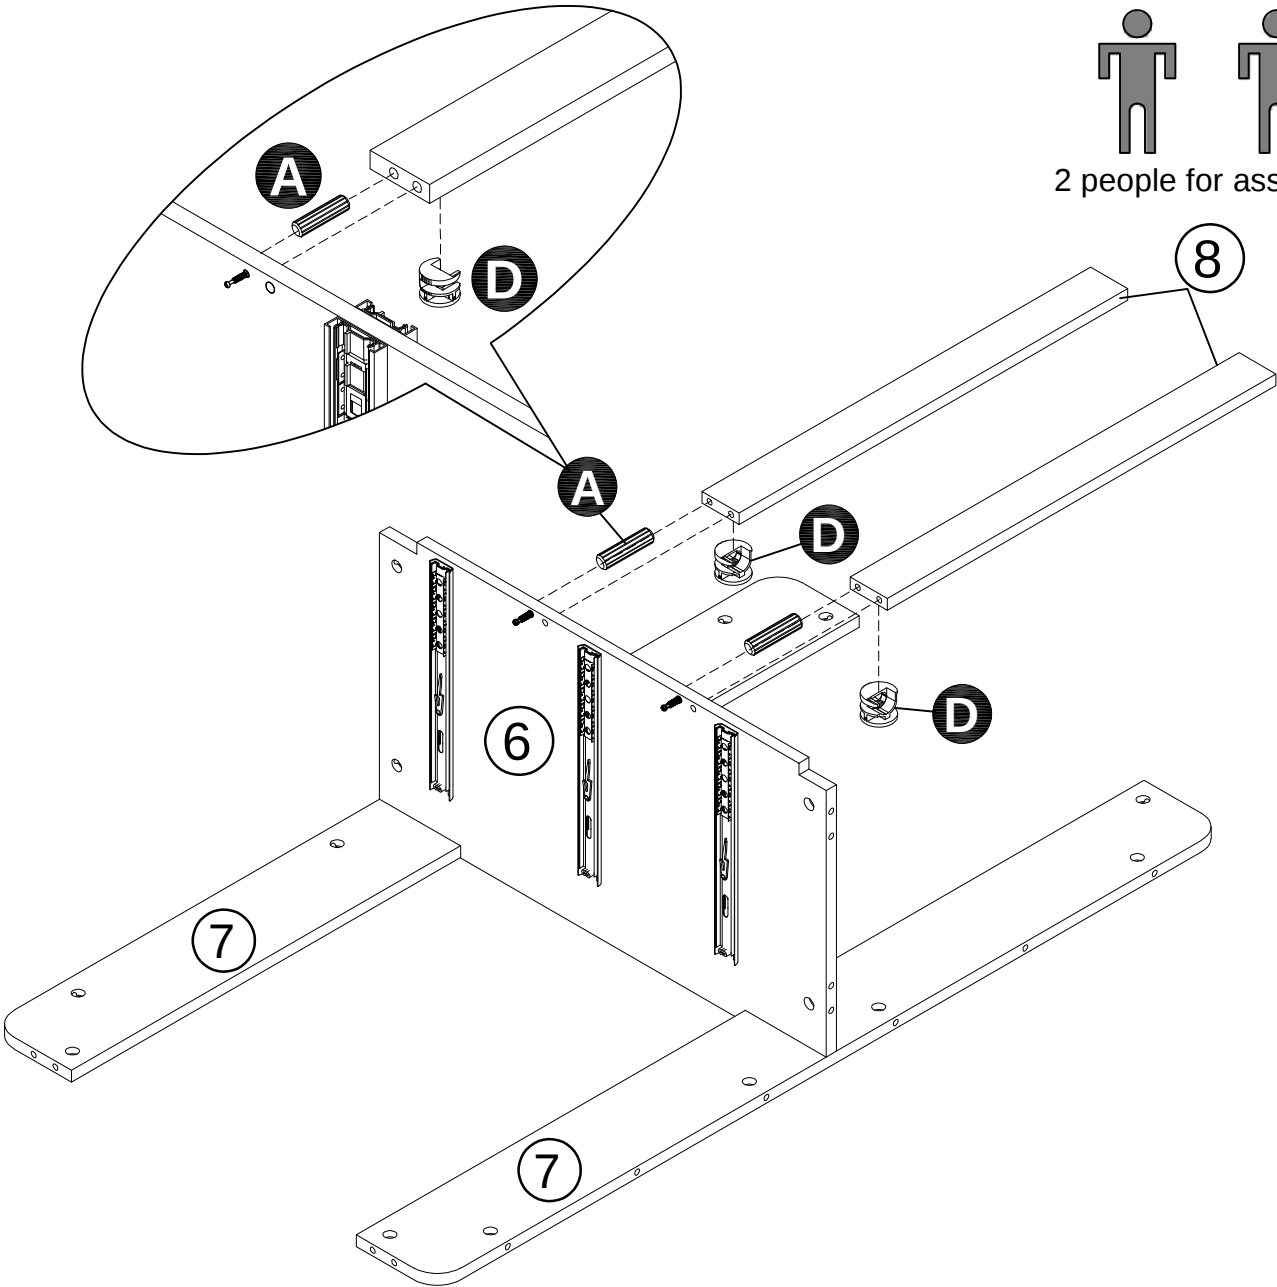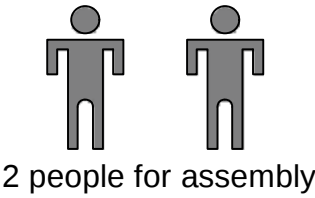
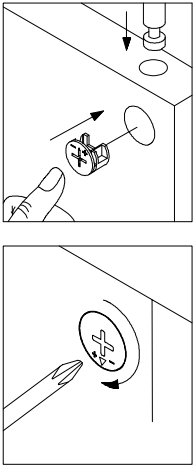
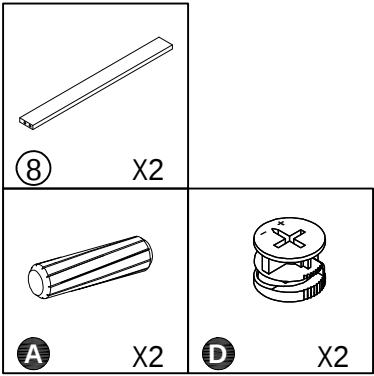


STEP 8

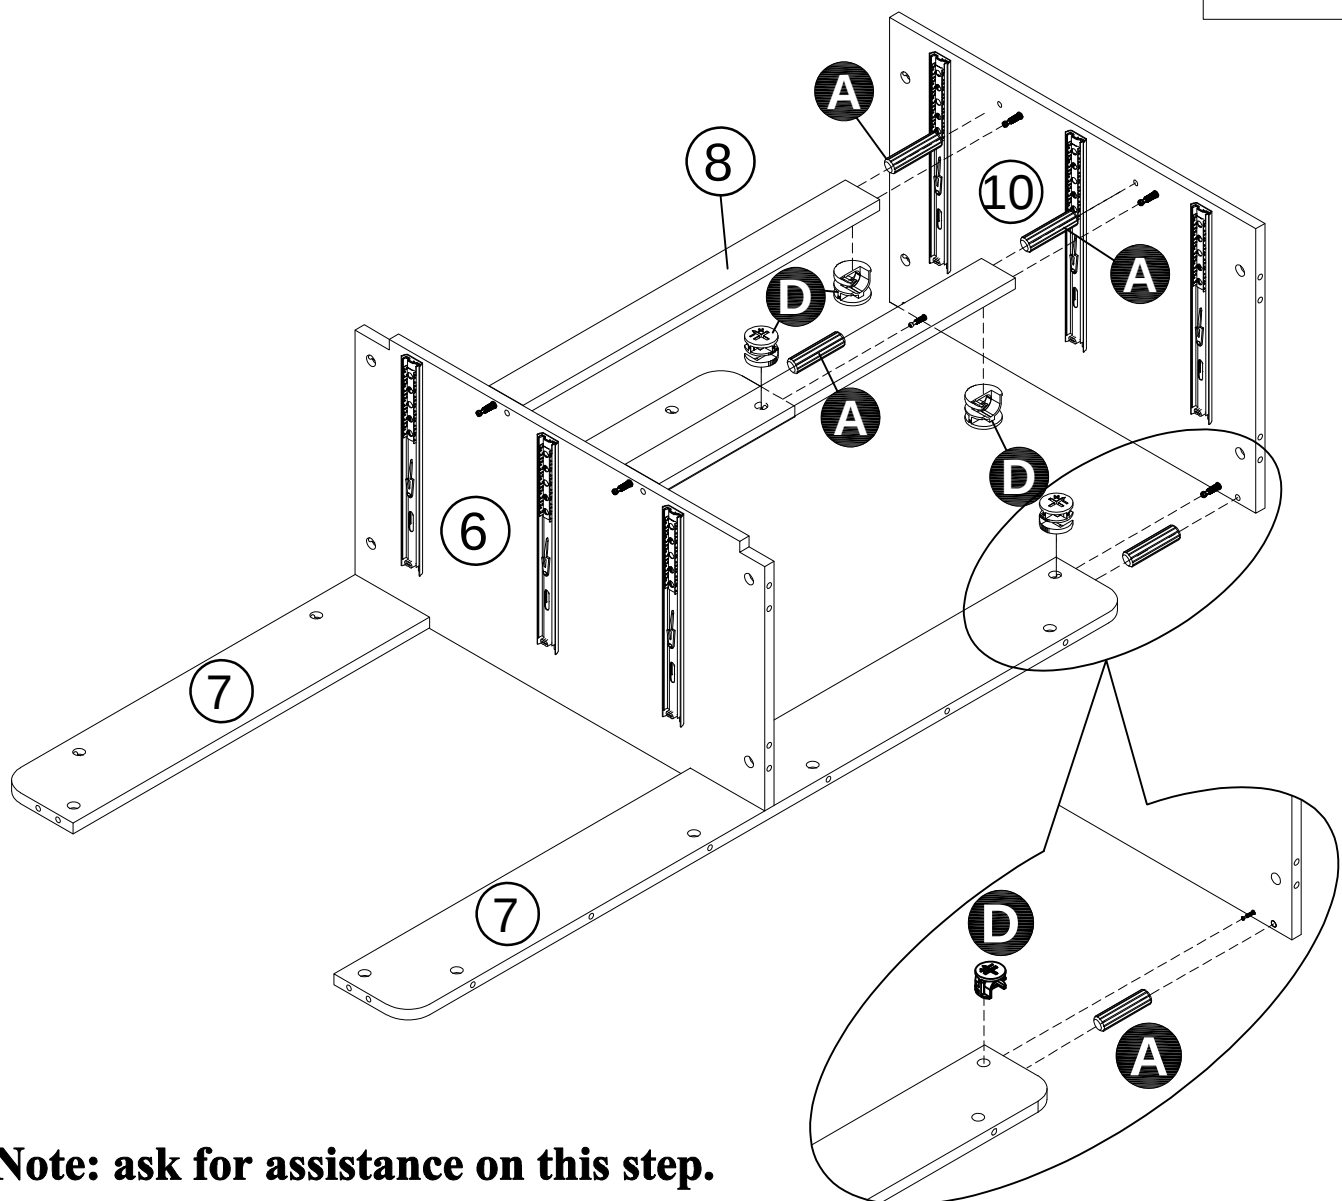
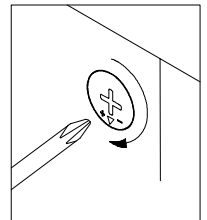
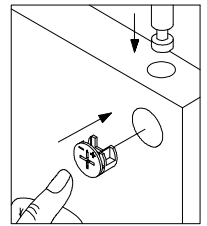
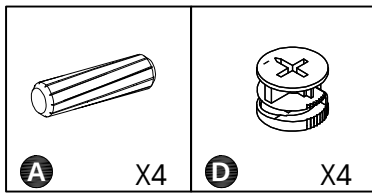


Note: ask for assistance on this step.



STEP 9

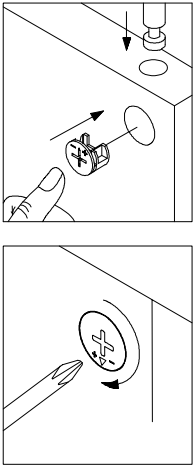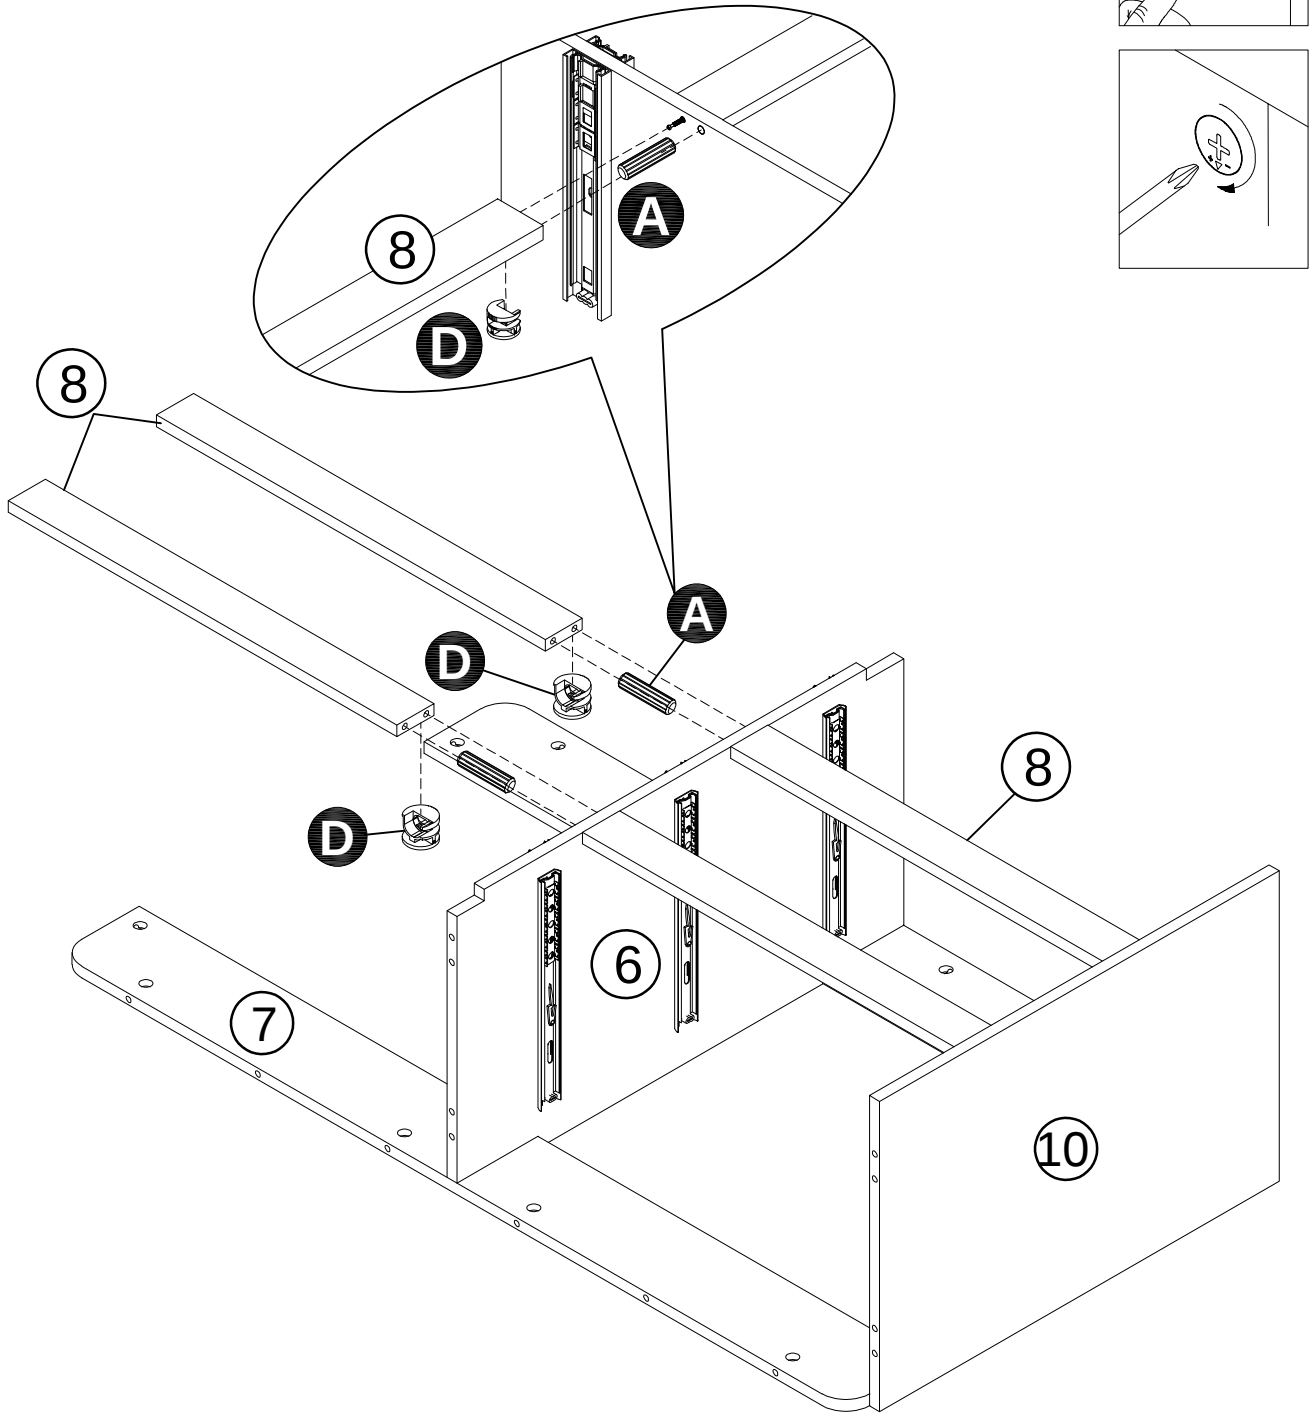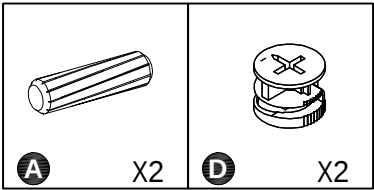

STEP 10

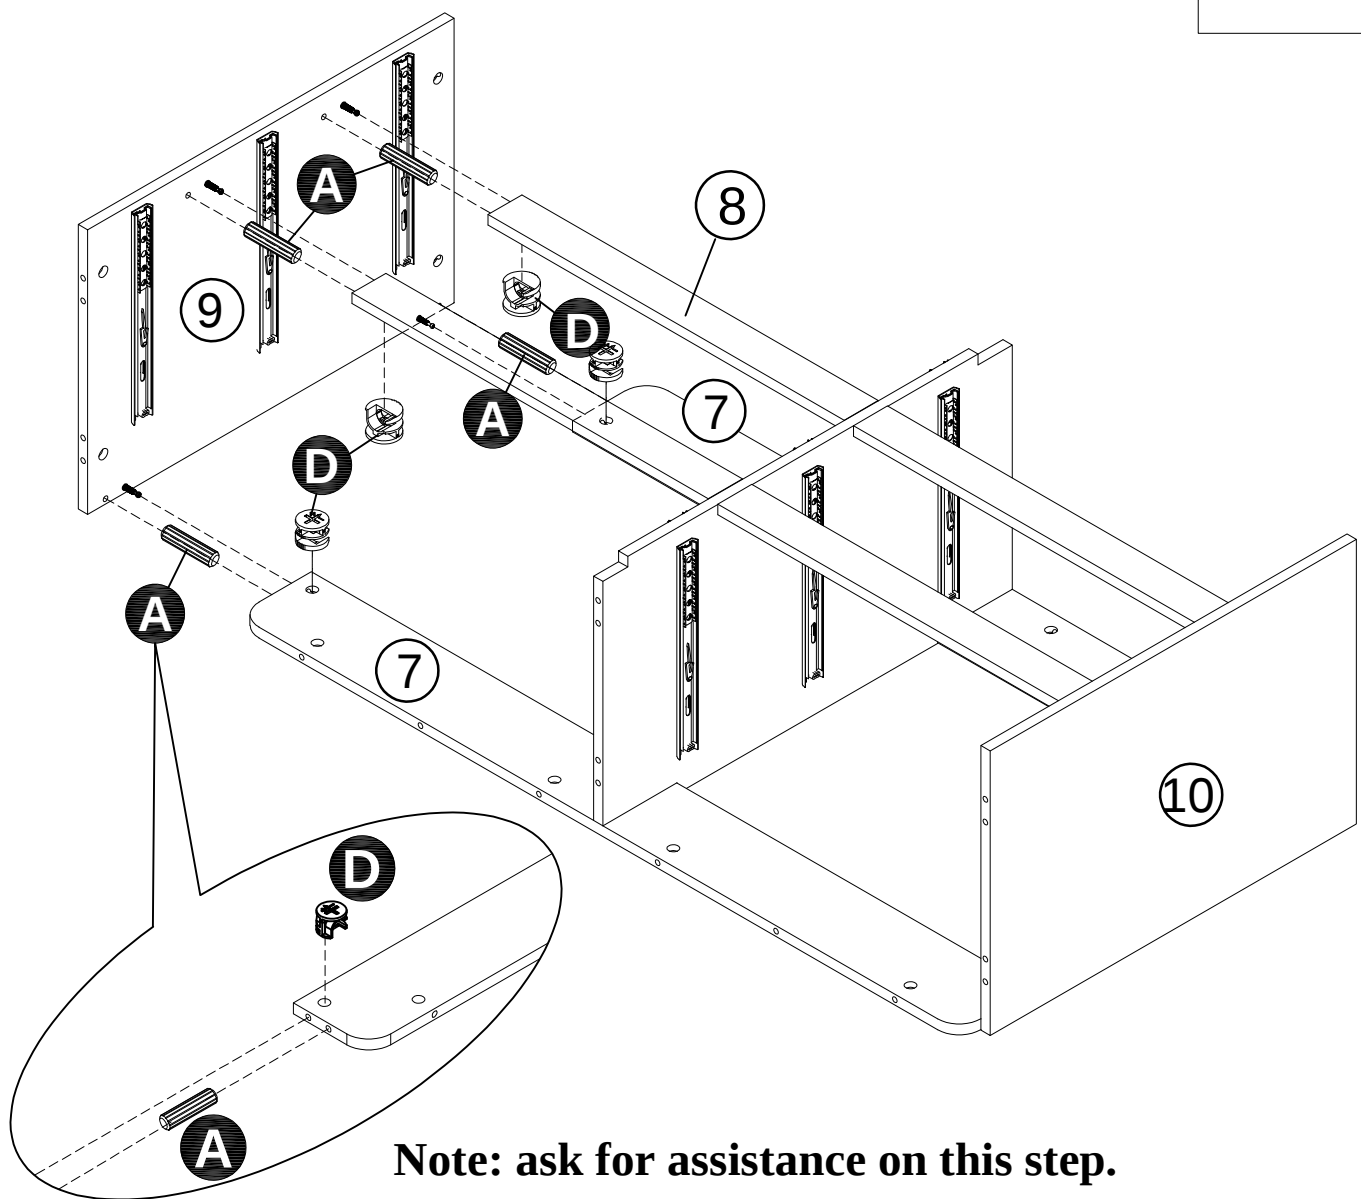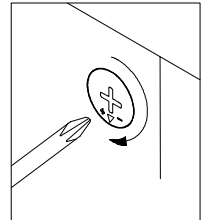
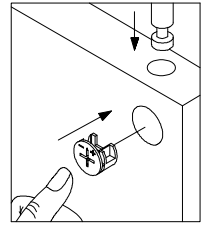
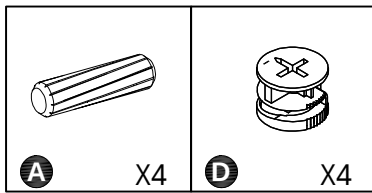


STEP 11


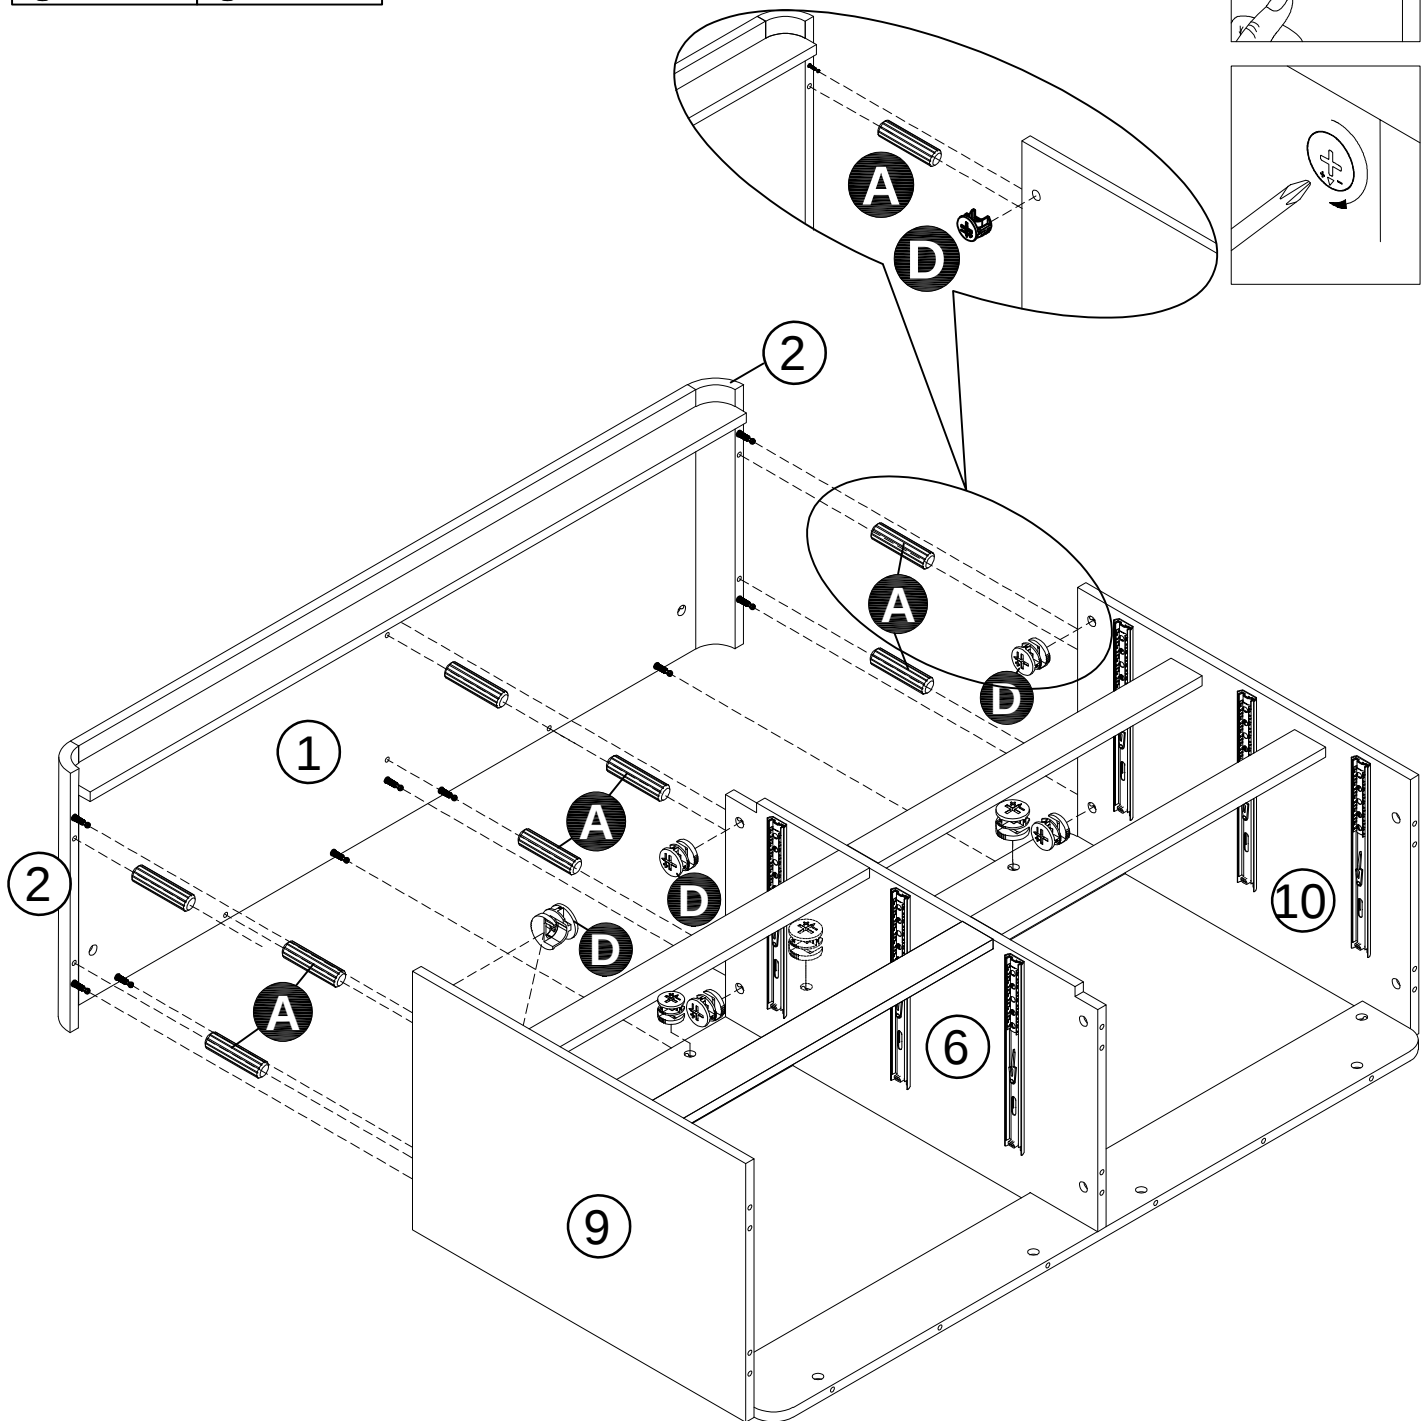
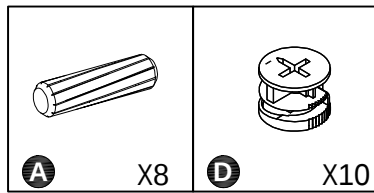


Note: ask for assistance on this step.





STEP 12

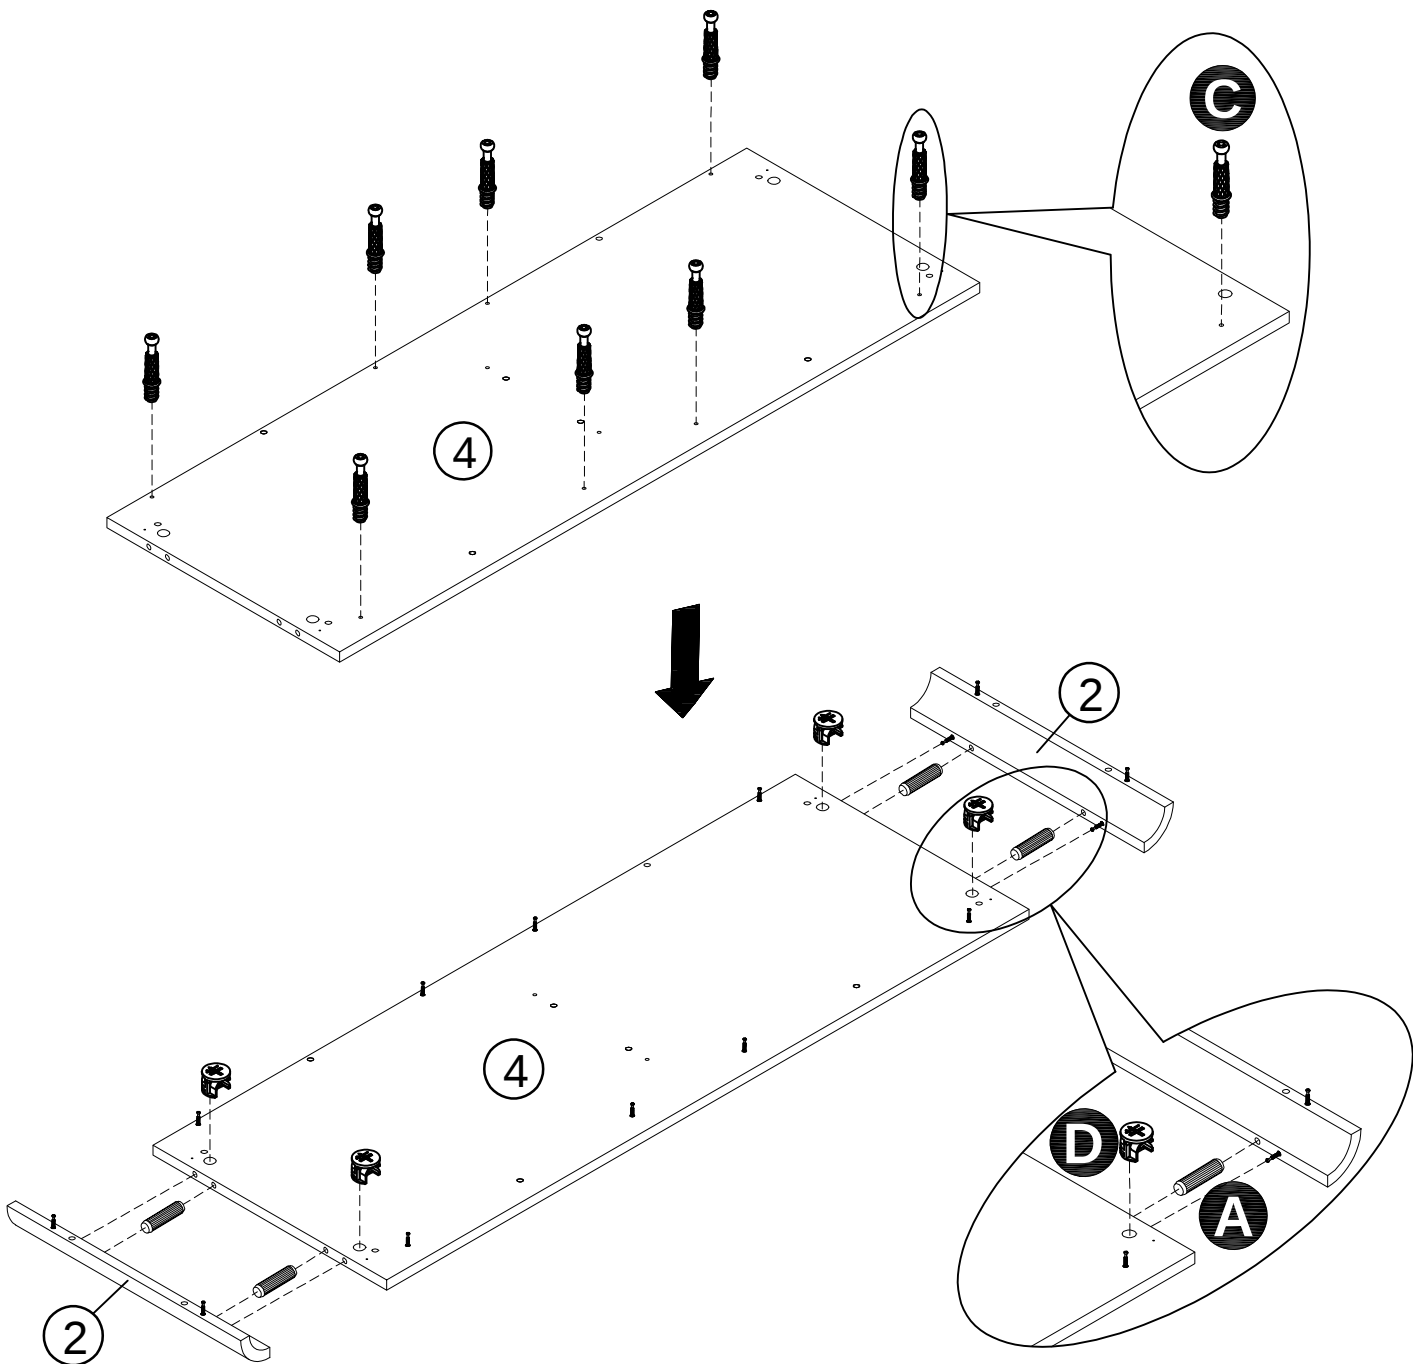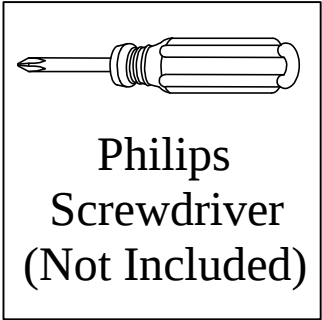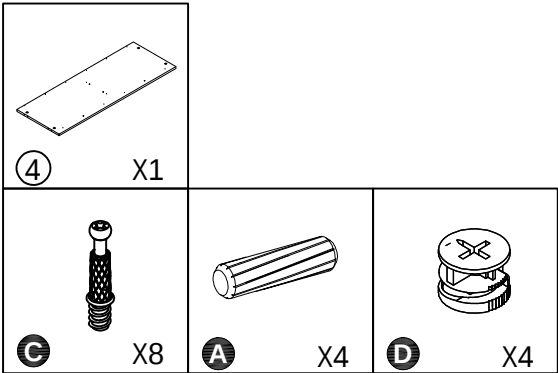


STEP 13

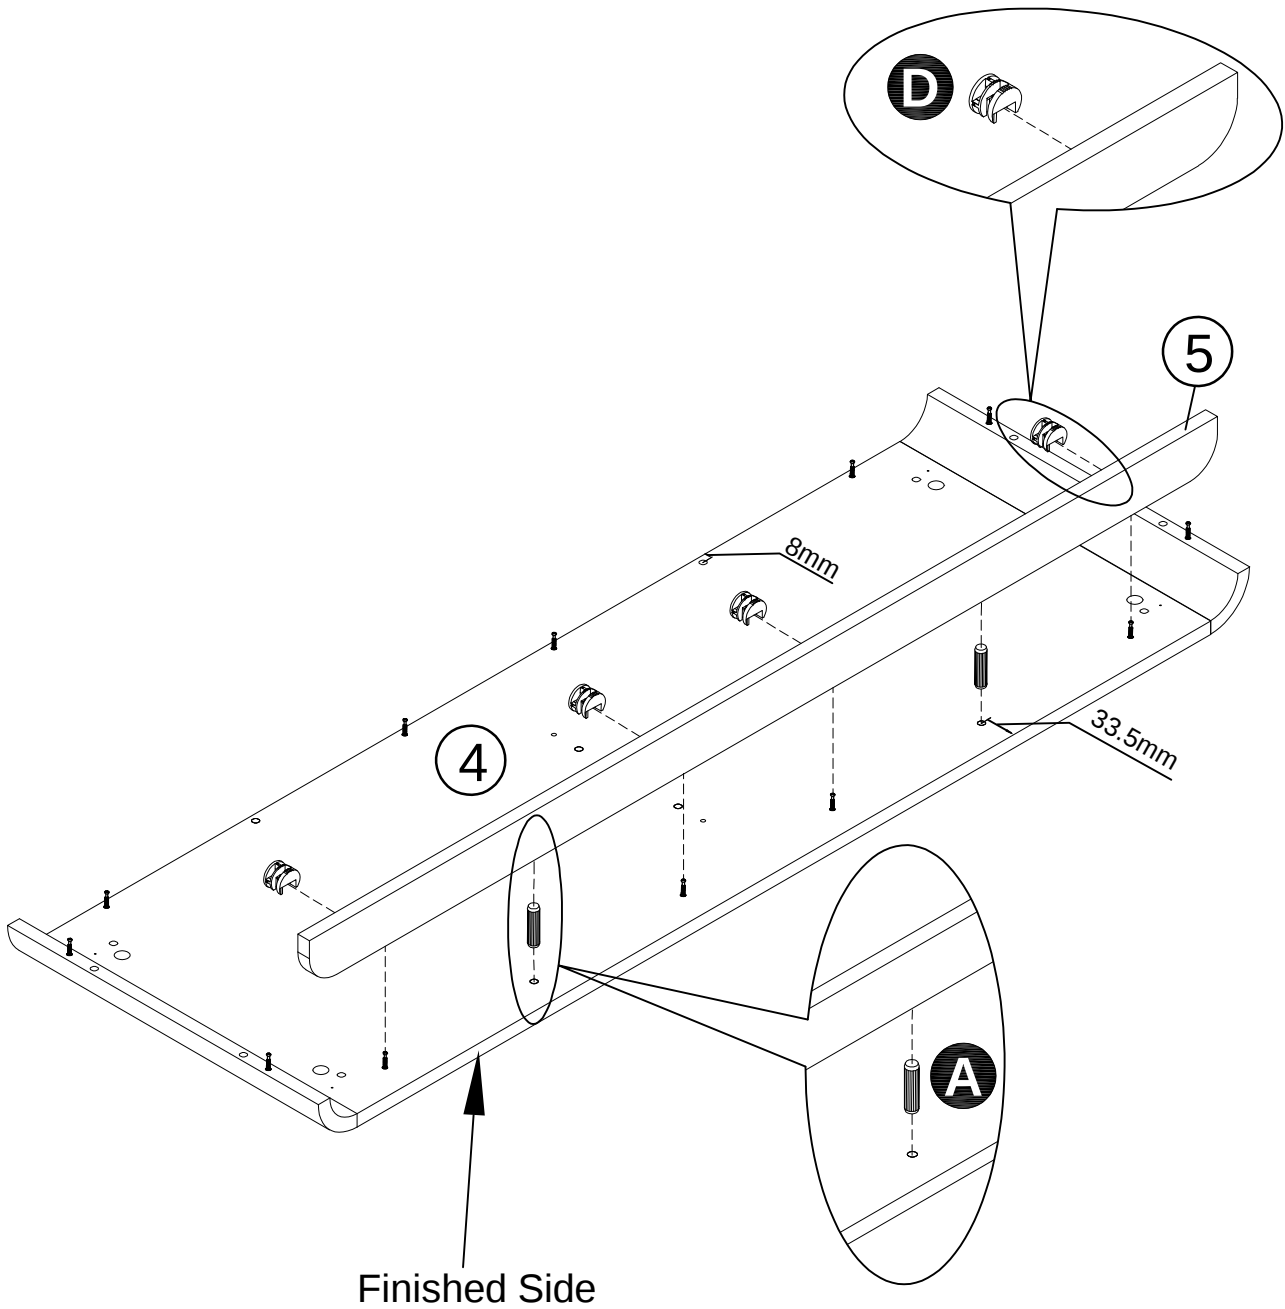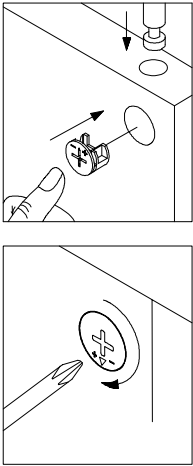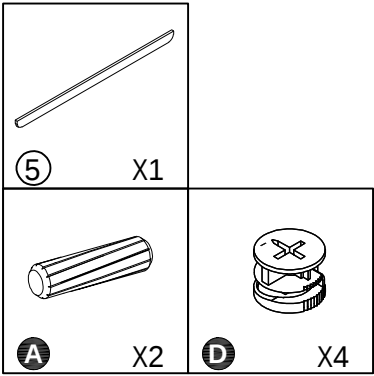


STEP 14







			
I X4	J X2	O X4	P X8









Philips
Screwdriver
(Not Included)


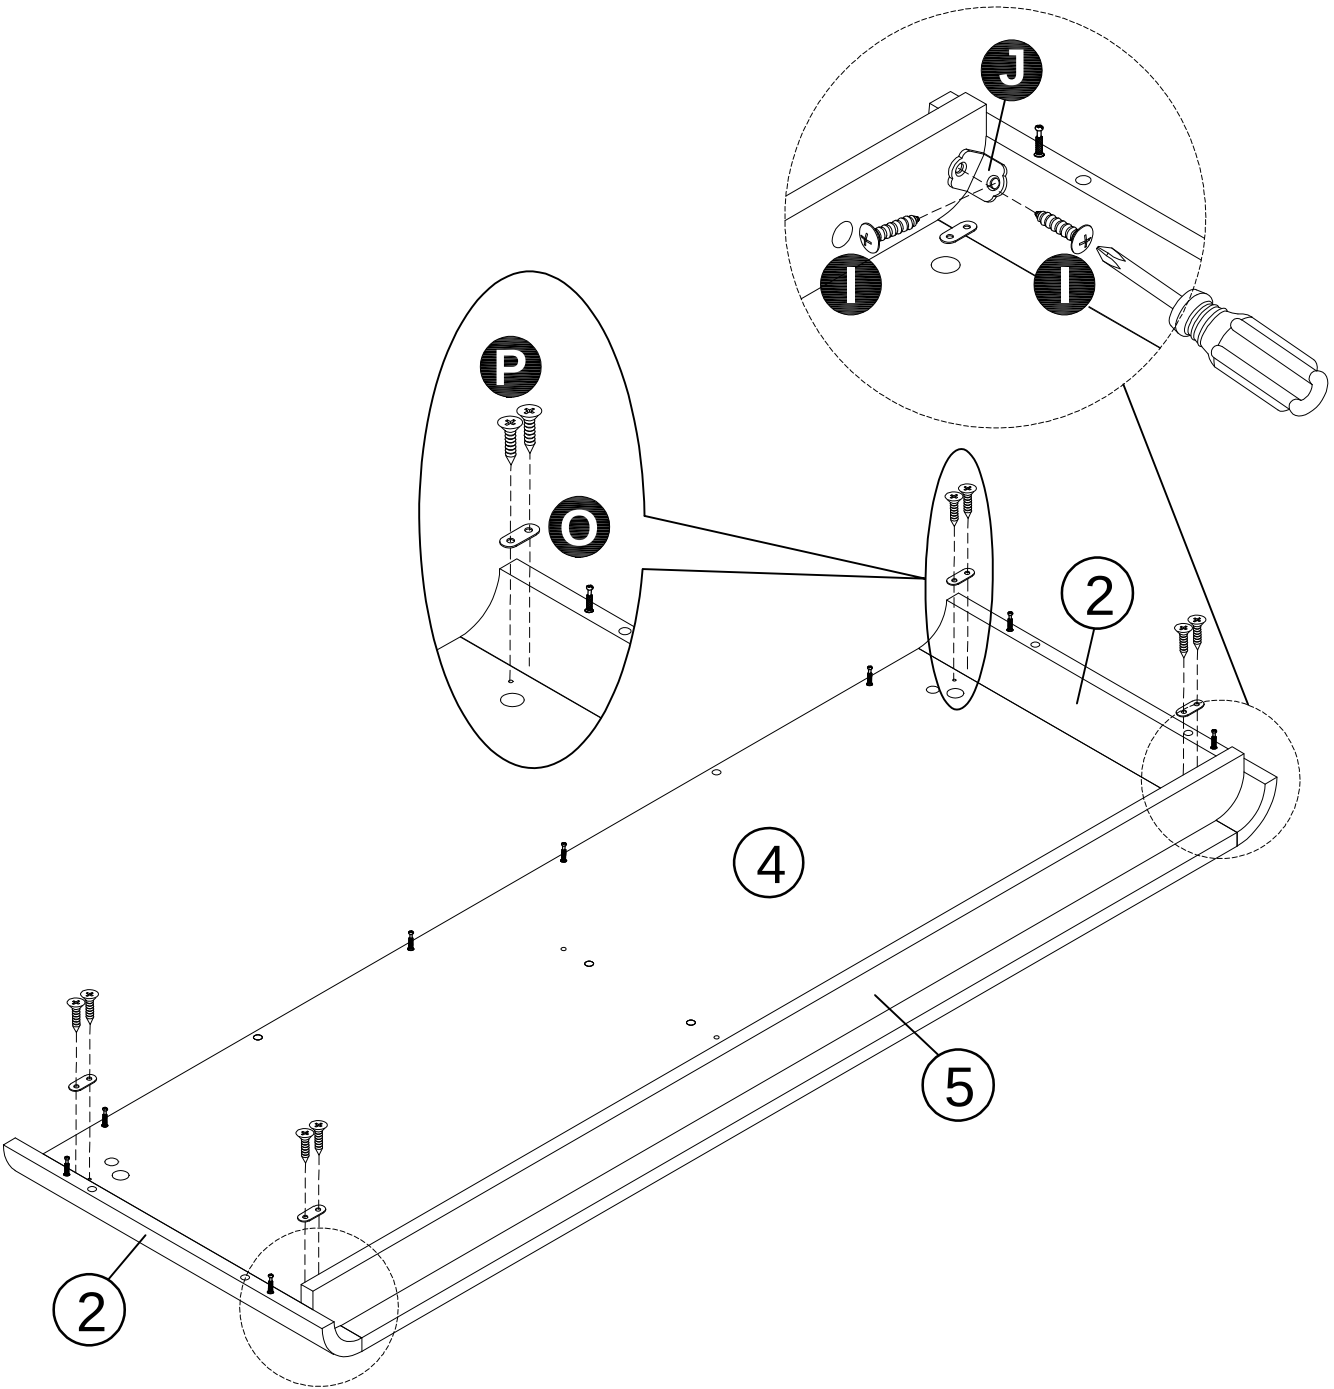


STEP 15

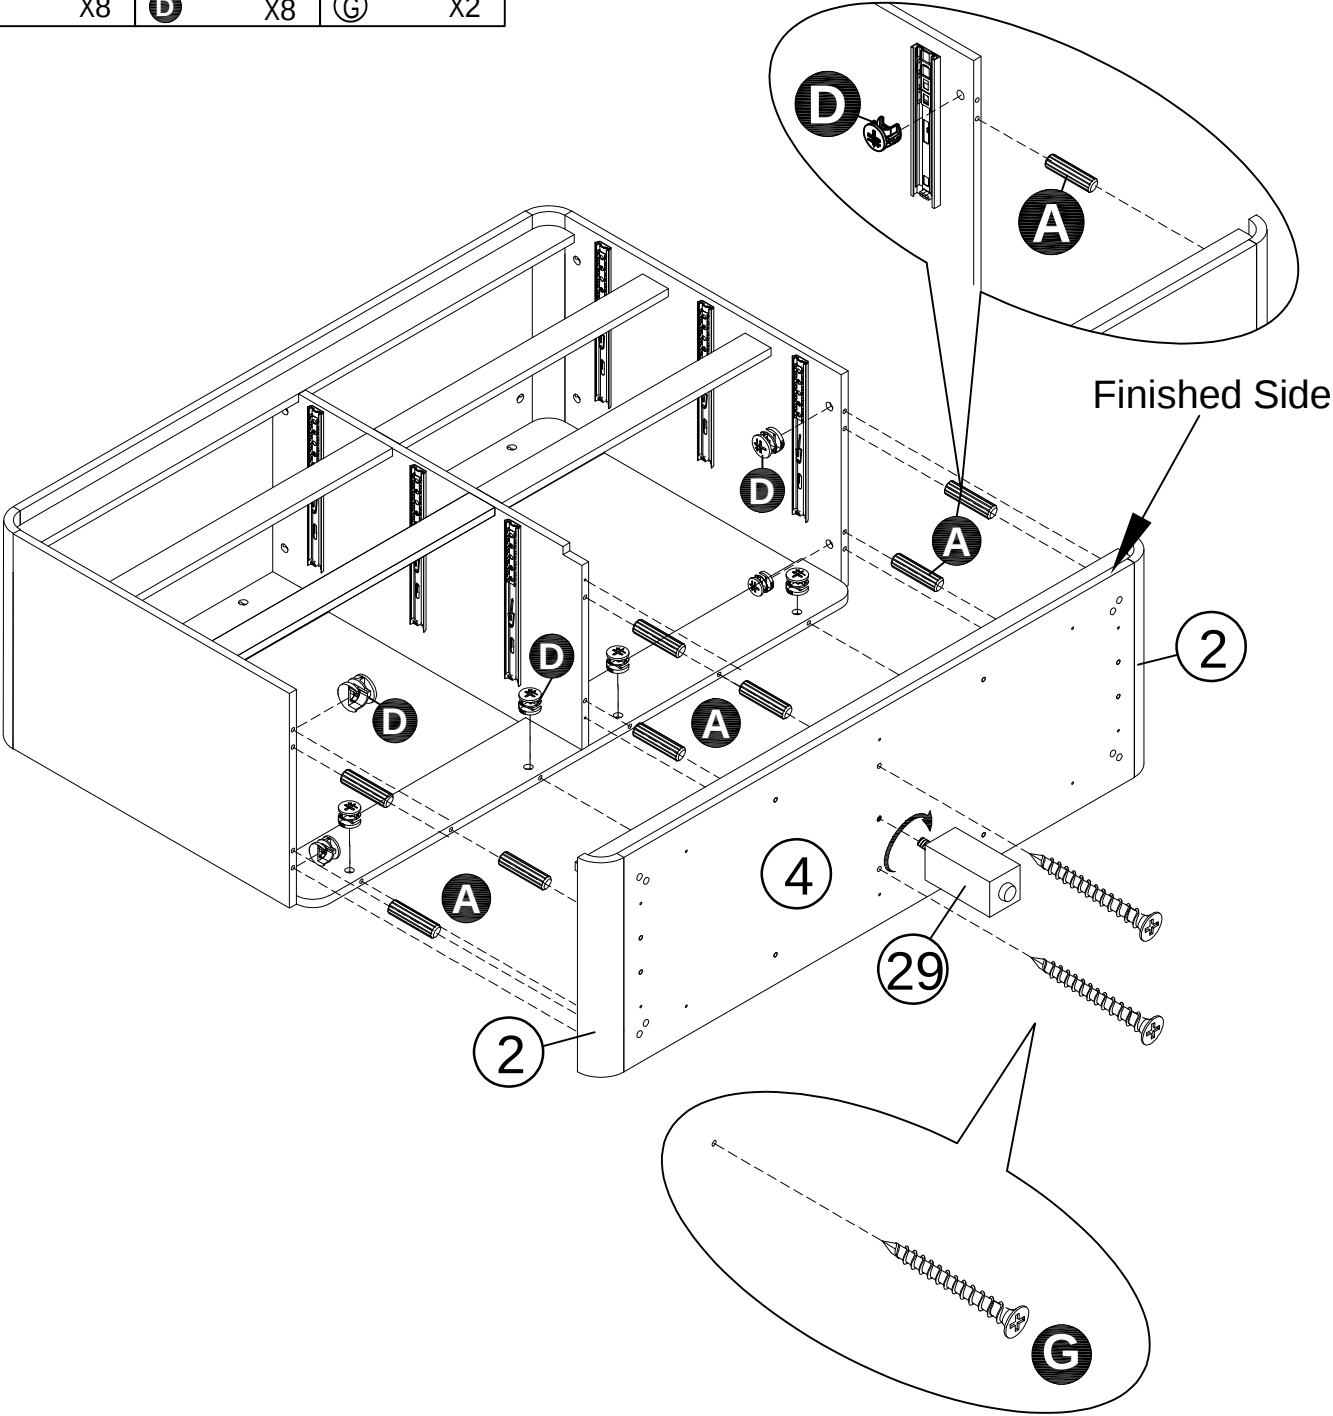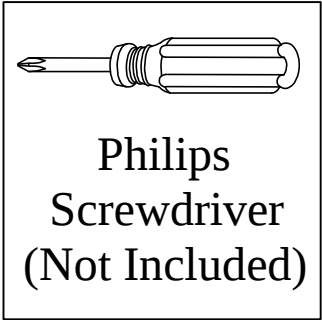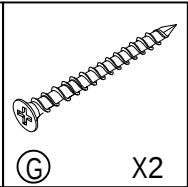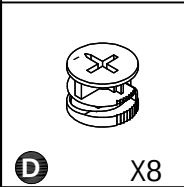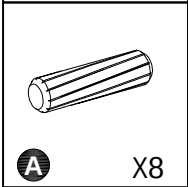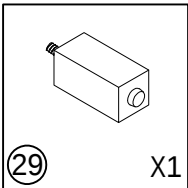


STEP 16

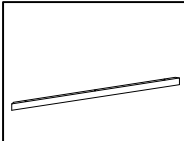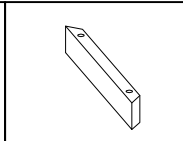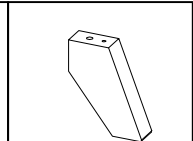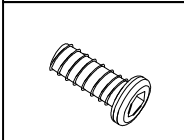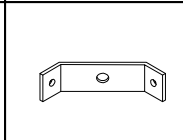
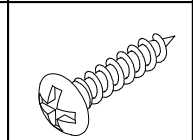
 11 X2	 12 X2	 13 X4
 E X4	 F X4	 L X8

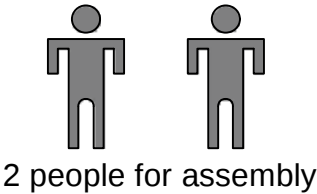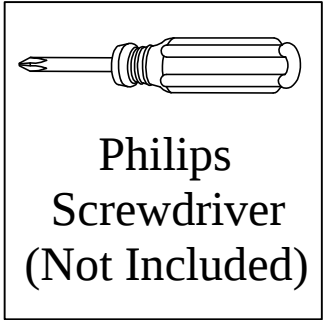


Note: that there are no dowel holes on this side

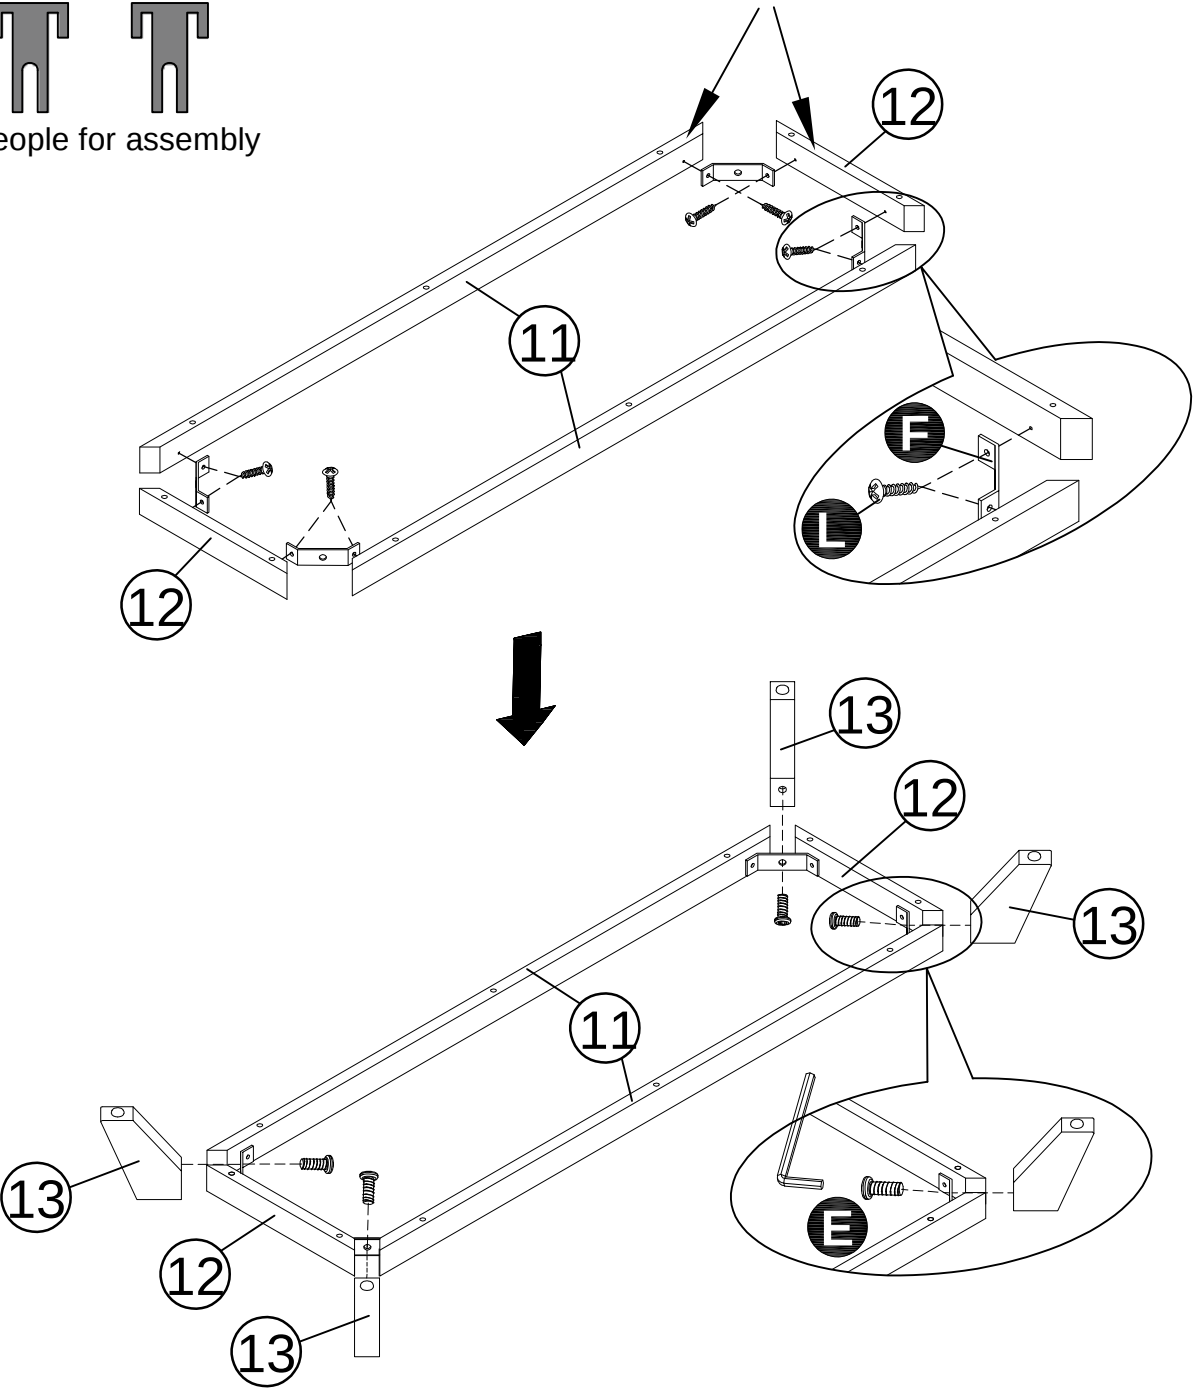


STEP 17

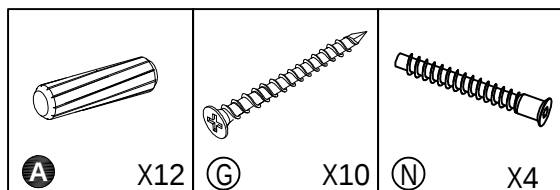




Philips
Screwdriver
(Not Included)

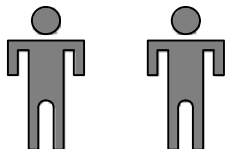


2 people for assembly

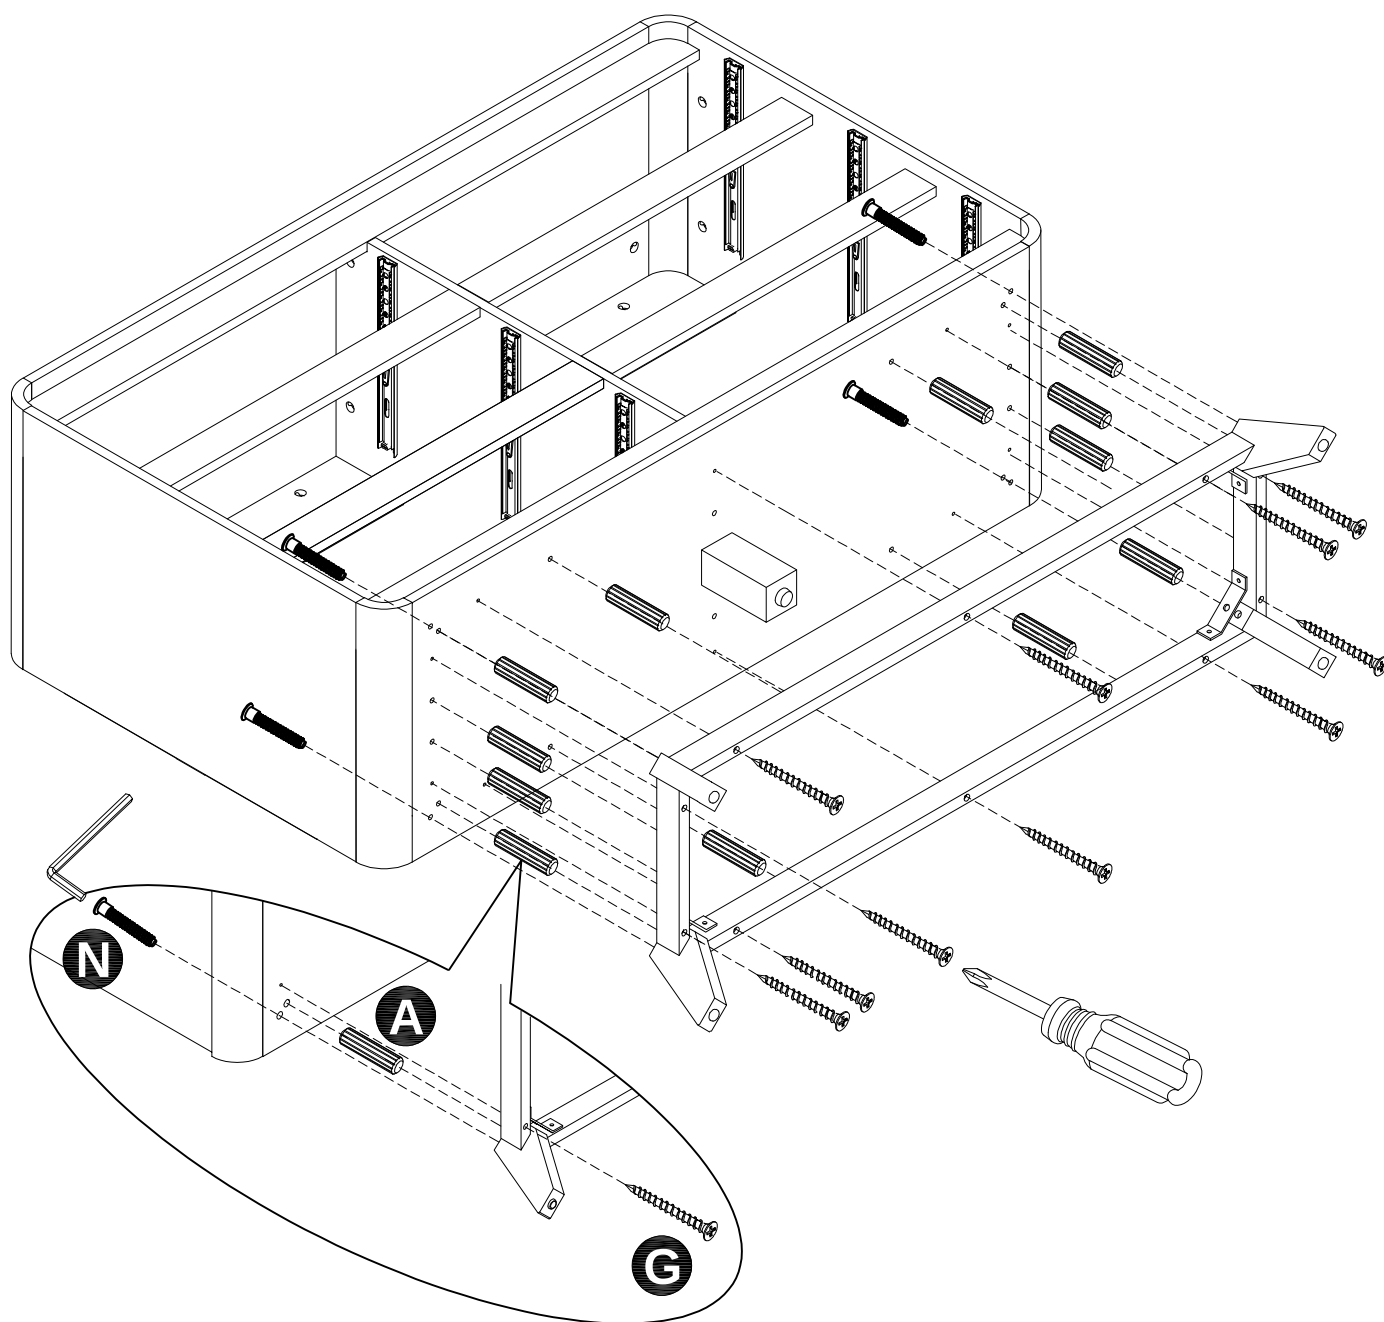

STEP 18

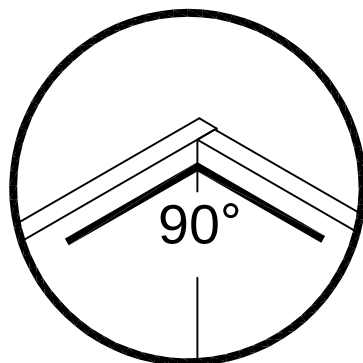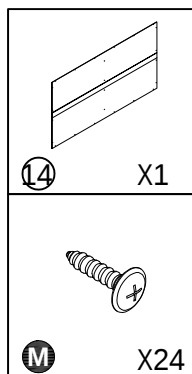


Philips
Screwdriver
(Not Included)






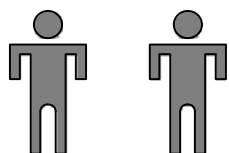










2 people for assembly

Before attaching the
back panel be sure
that the unit is at 90°.


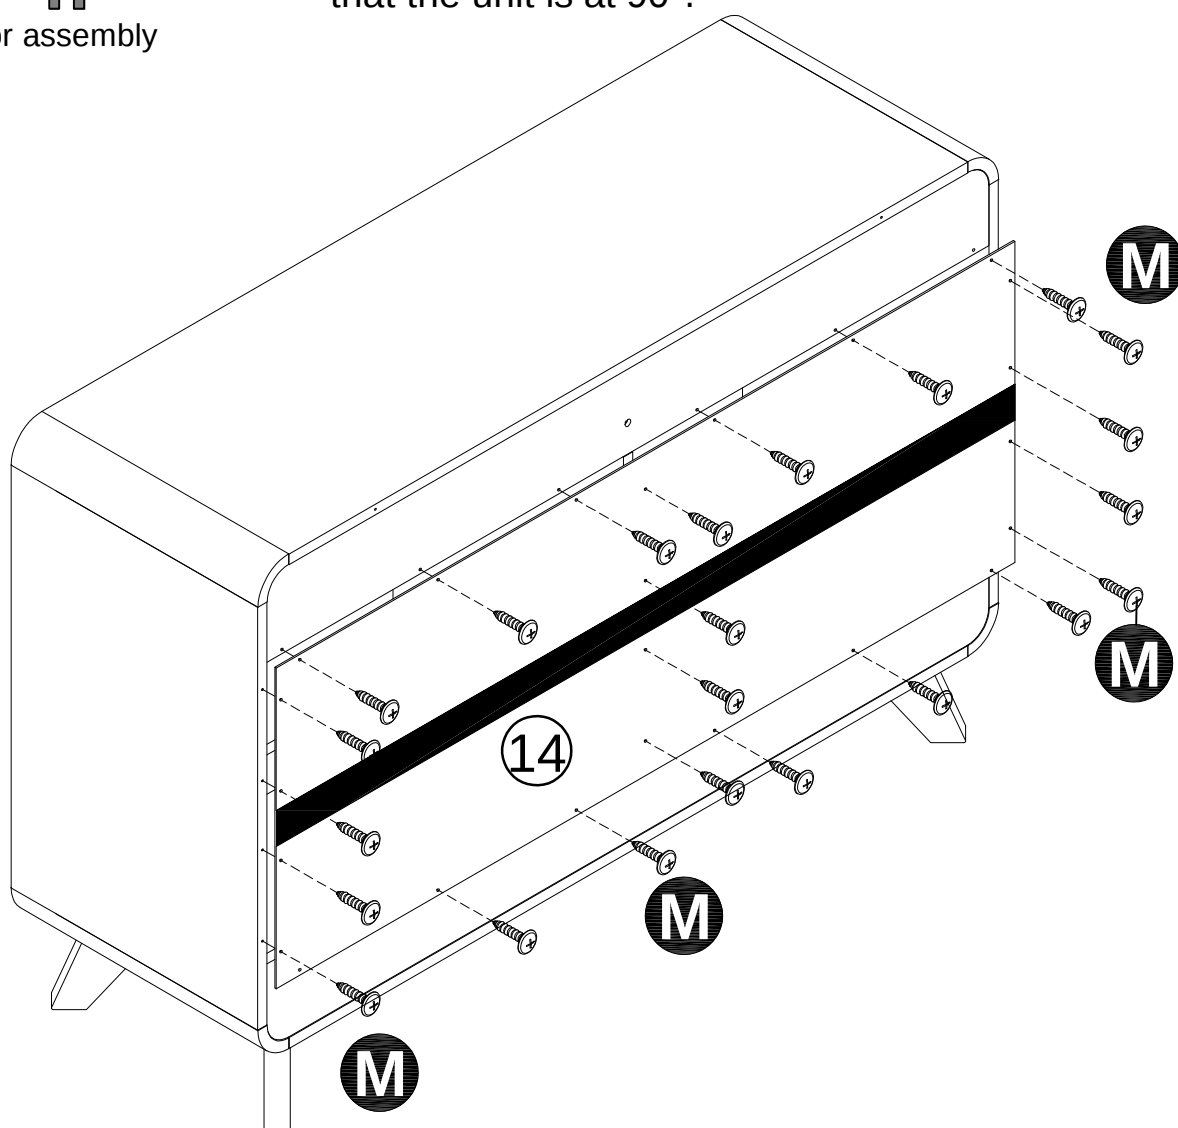


STEP 19


					
15 X1	16 X1	17 X1	18 X1	19 X1	20 X1

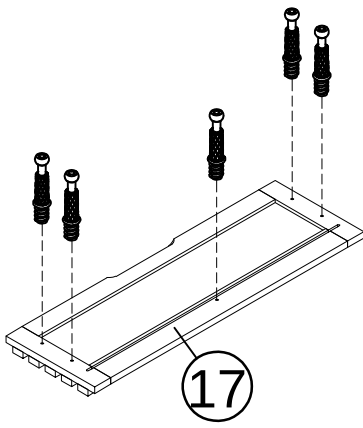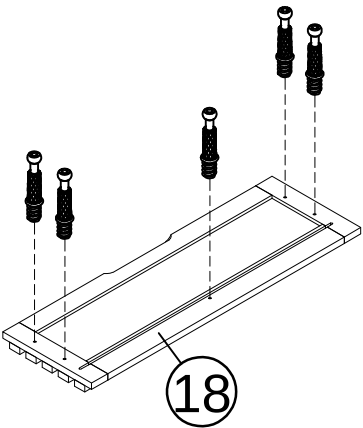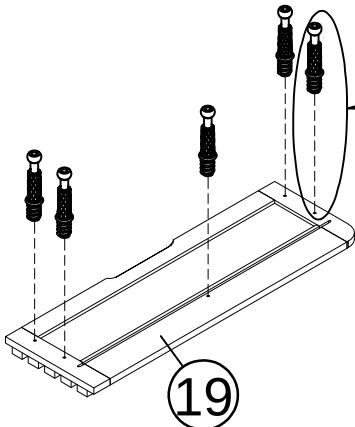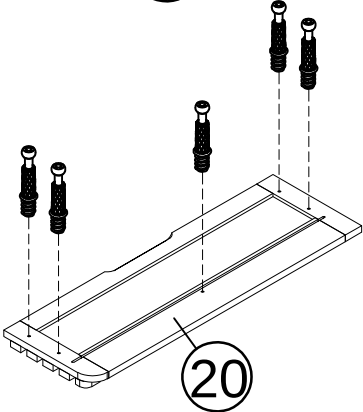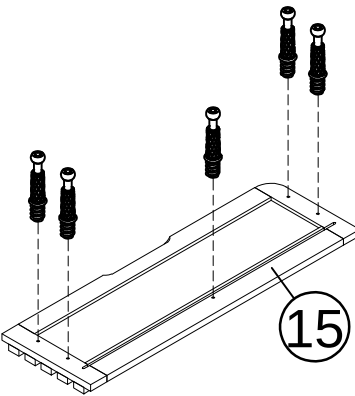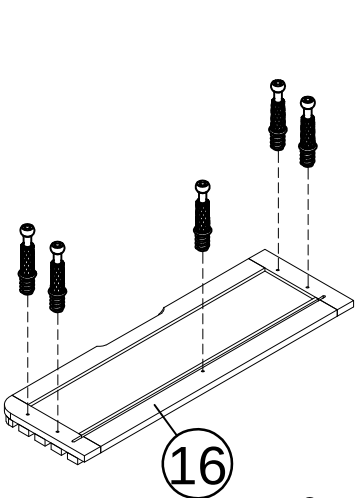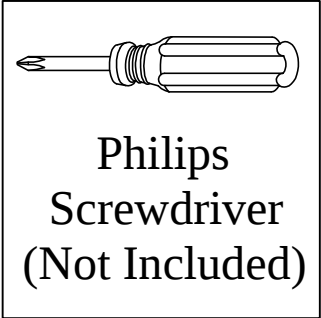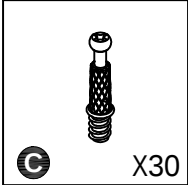




STEP 20

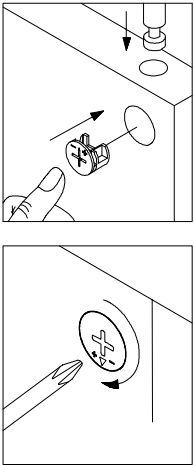
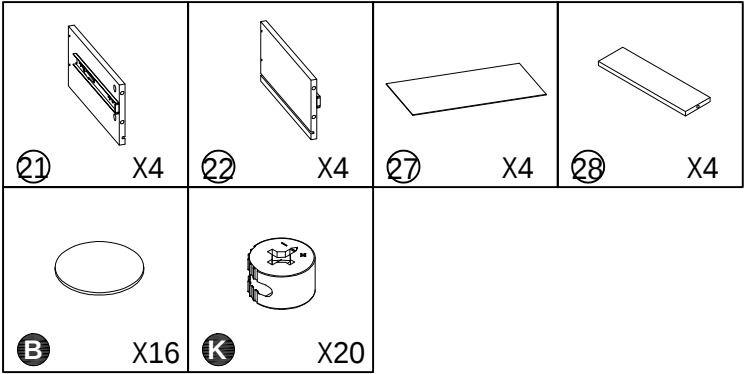


Note: Parts labeled K and D are similar in appearance; please take care to distinguish between them. Part K is slightly shorter than Part D






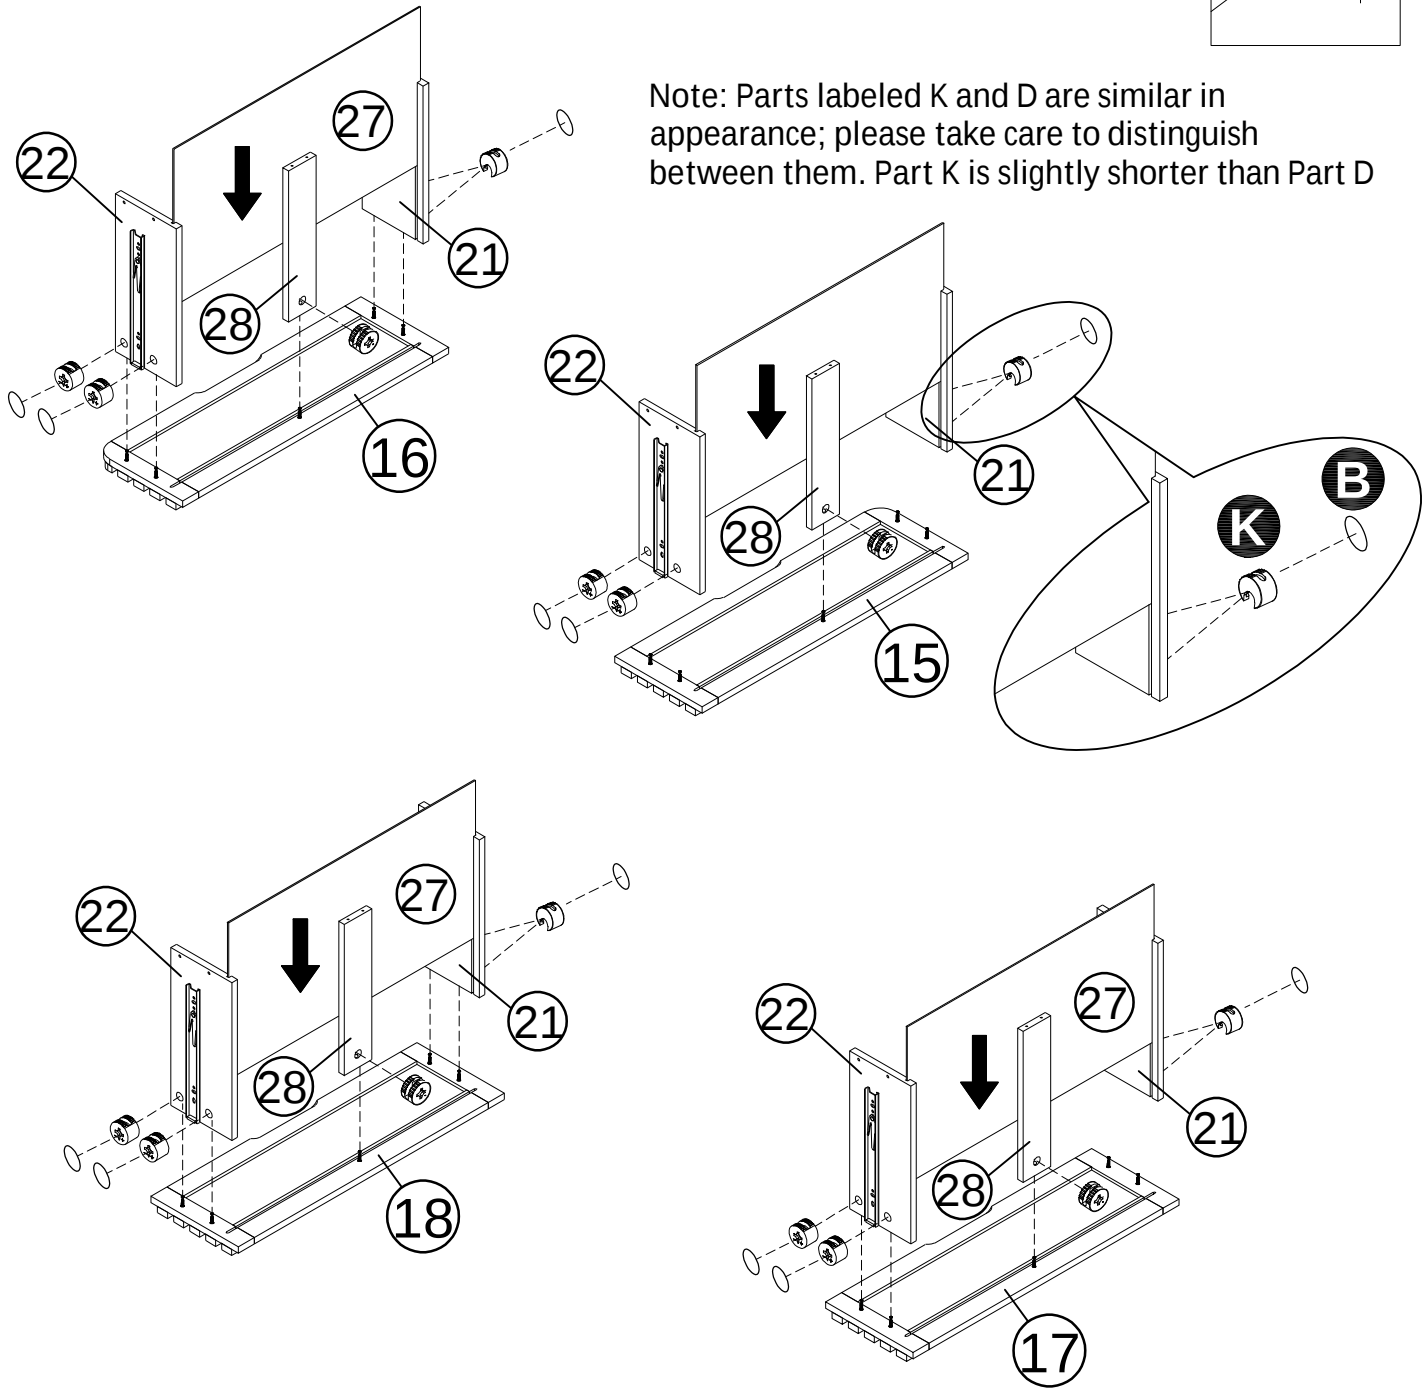


STEP 21





 23 X2	 24 X2	 27 X2	 28 X2
 B X8	 K X10		

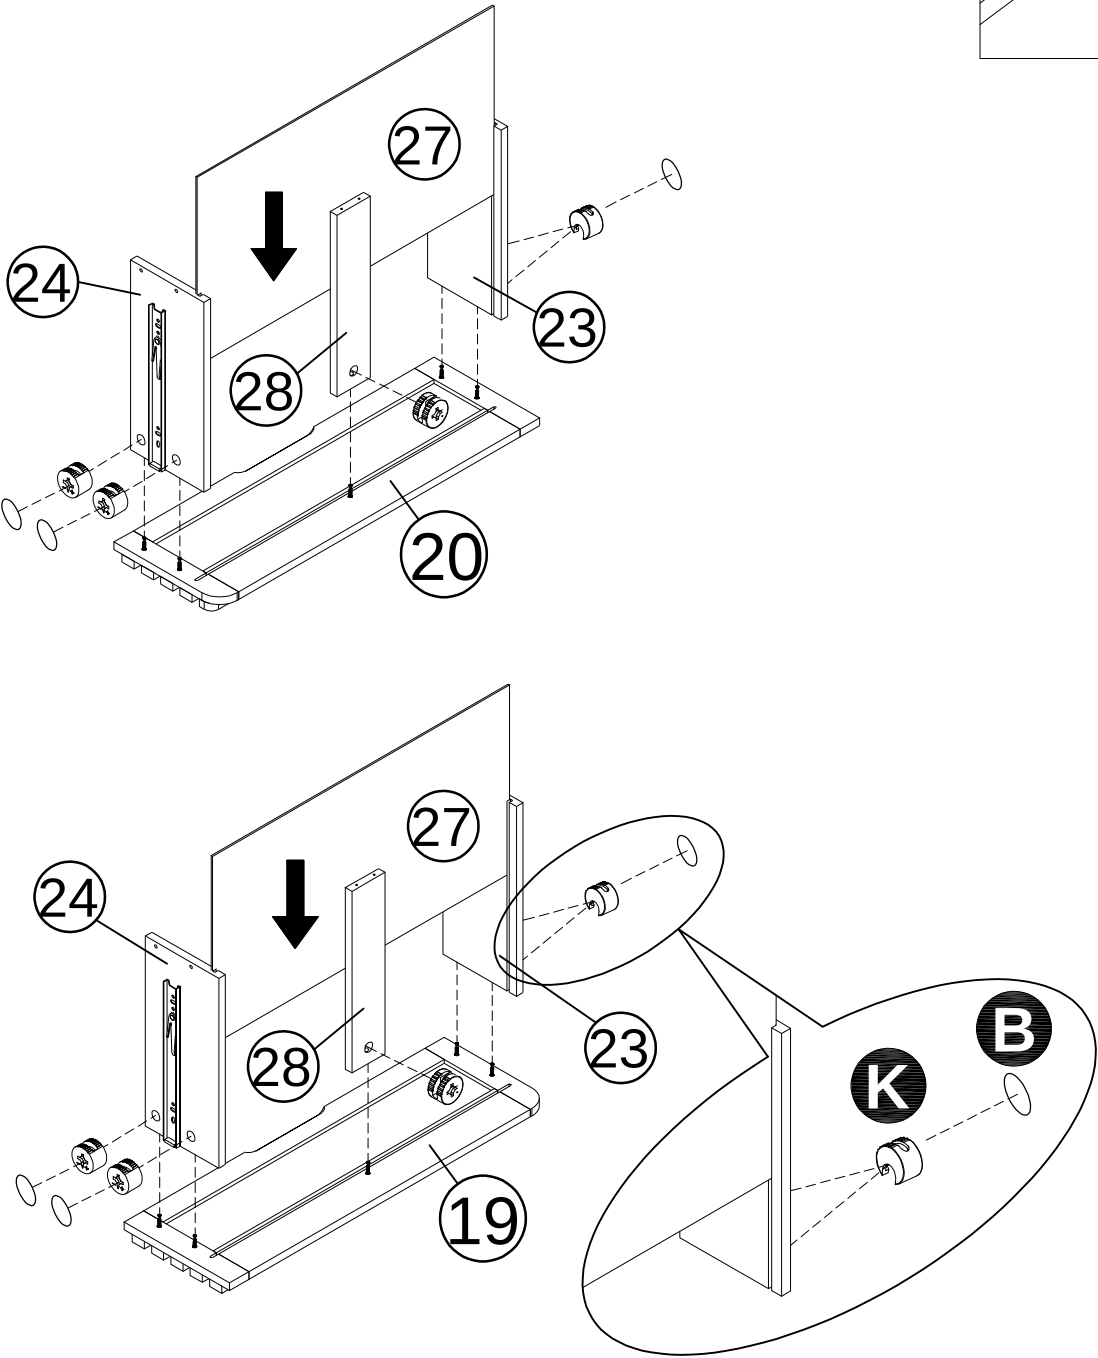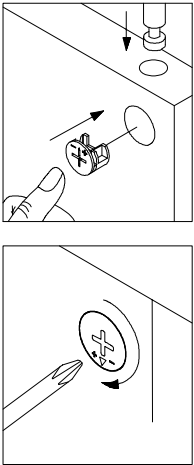


STEP 22

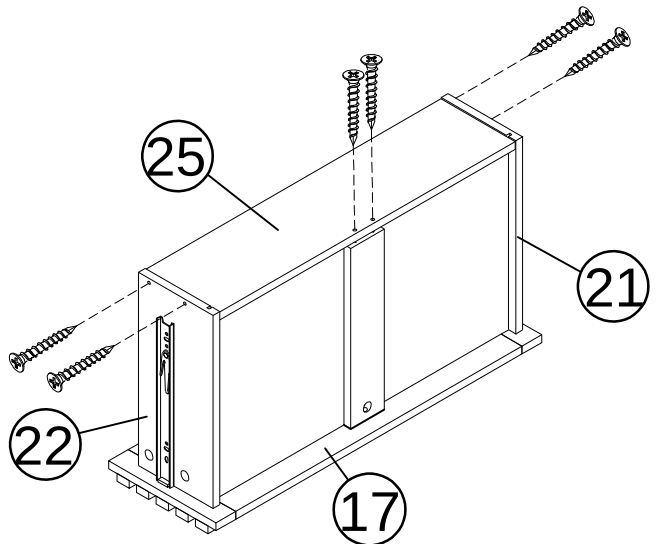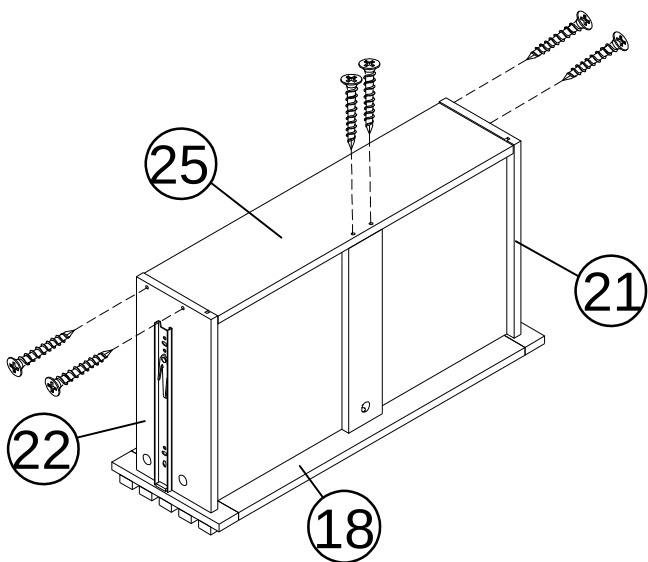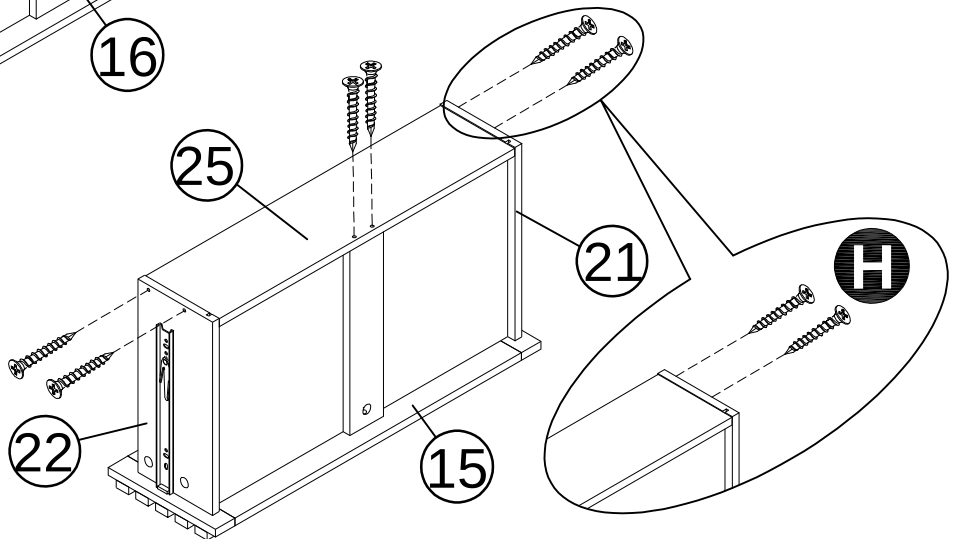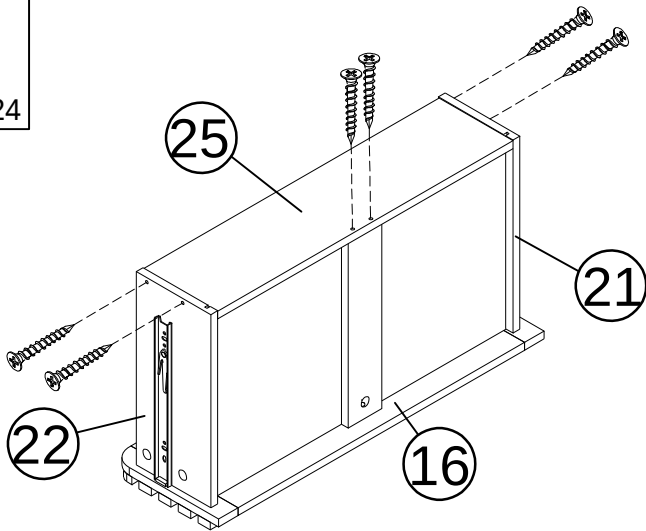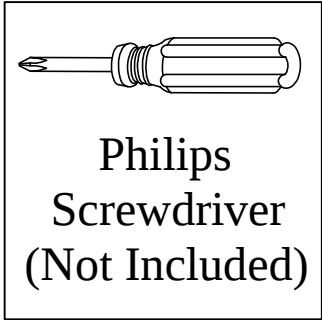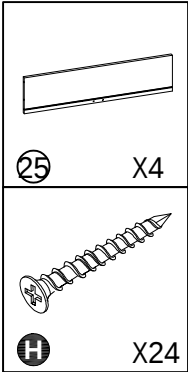


STEP 23

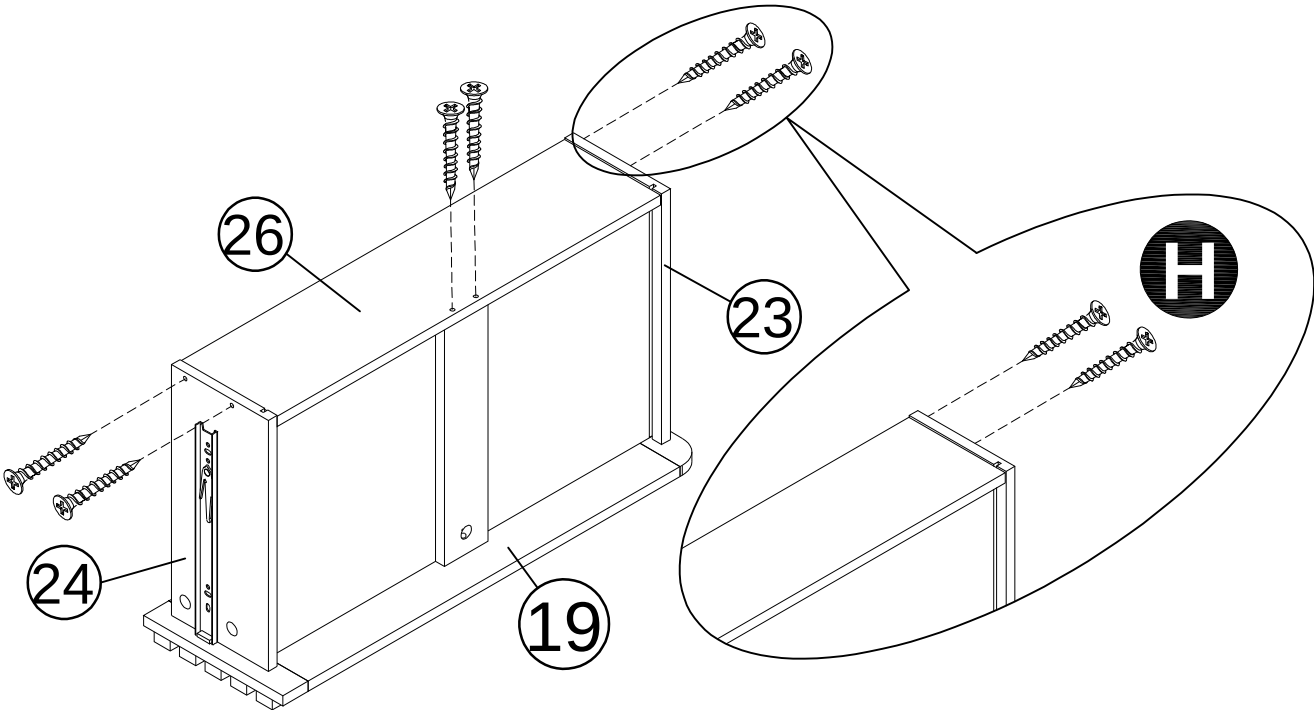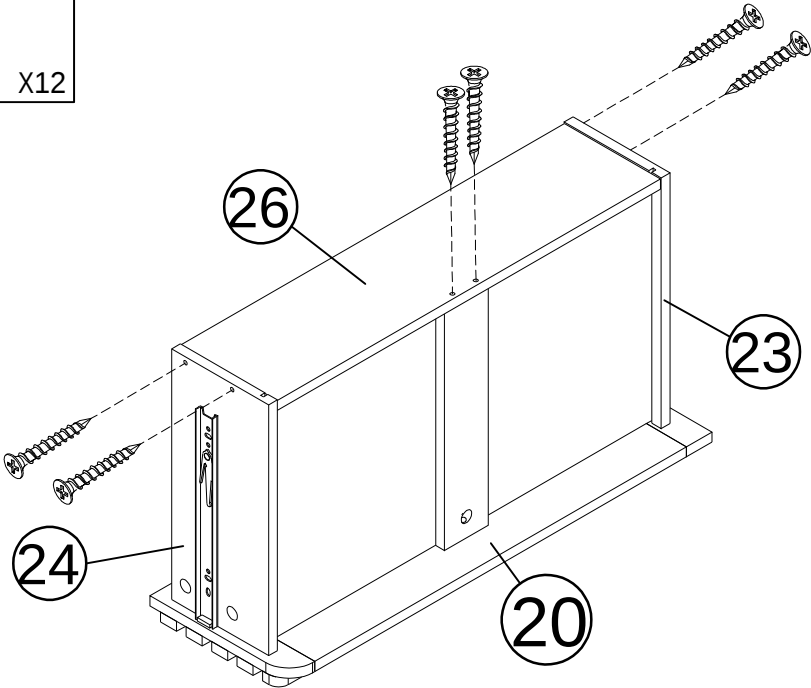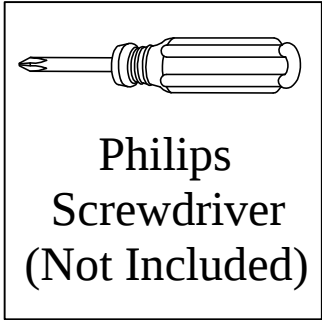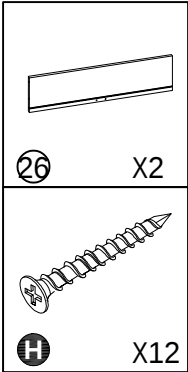

STEP 24

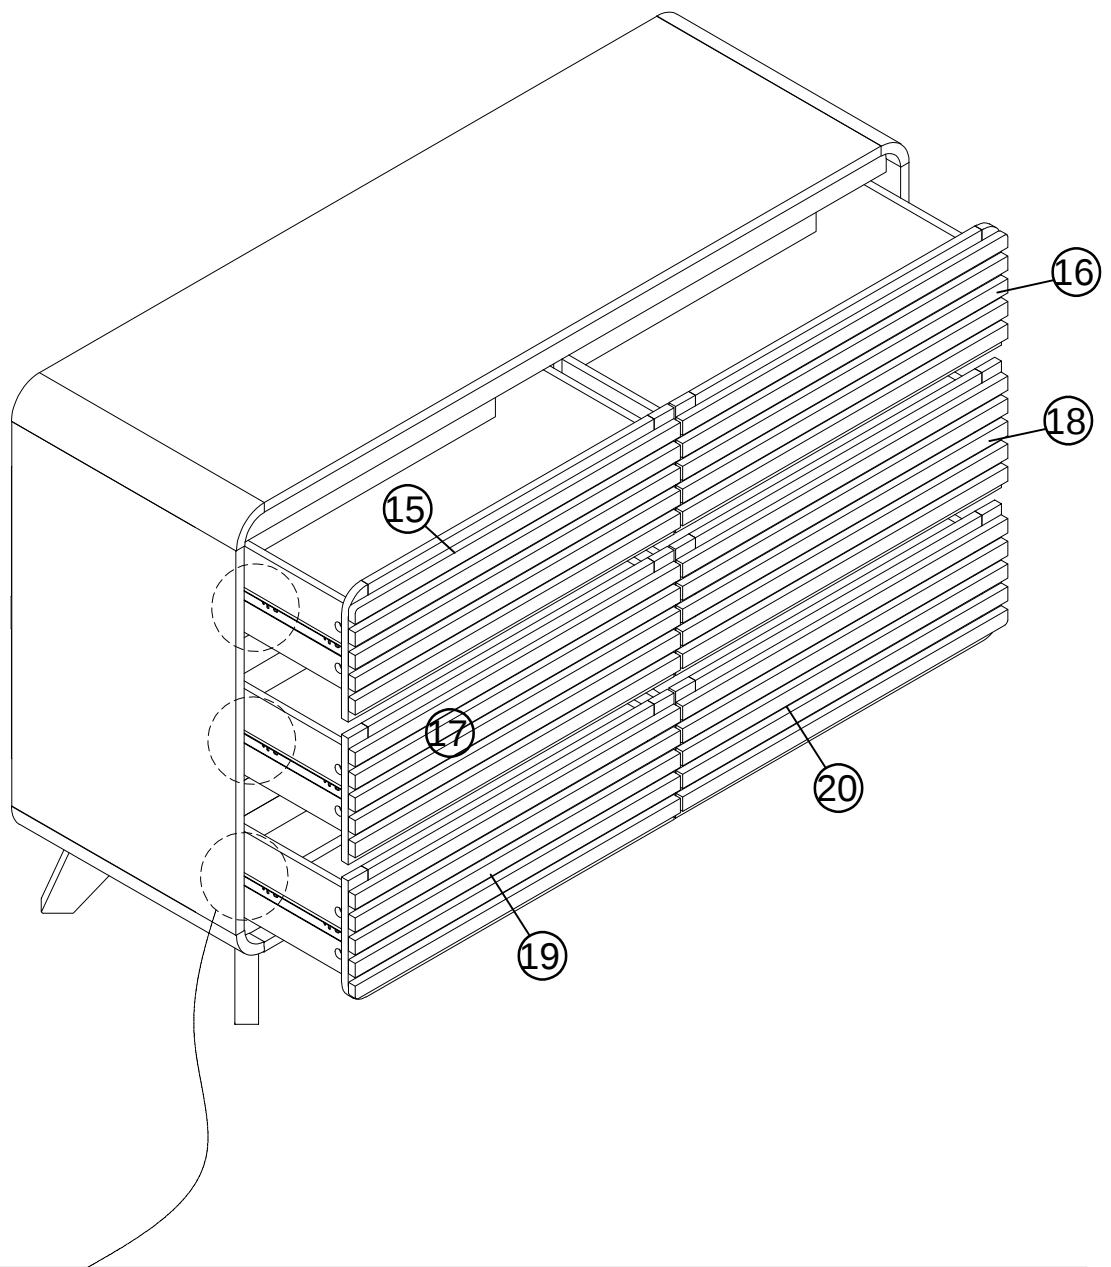


1


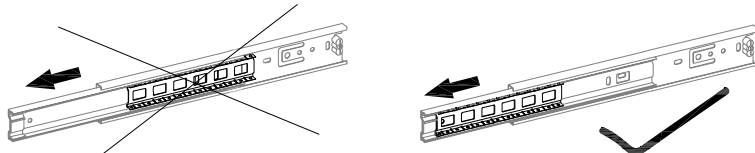


NOTE: Pull the inner ball bearing slides on each side all the way out till it stops.(may be slightly greasy).


2

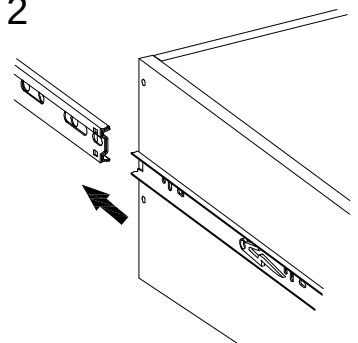


STEP 25

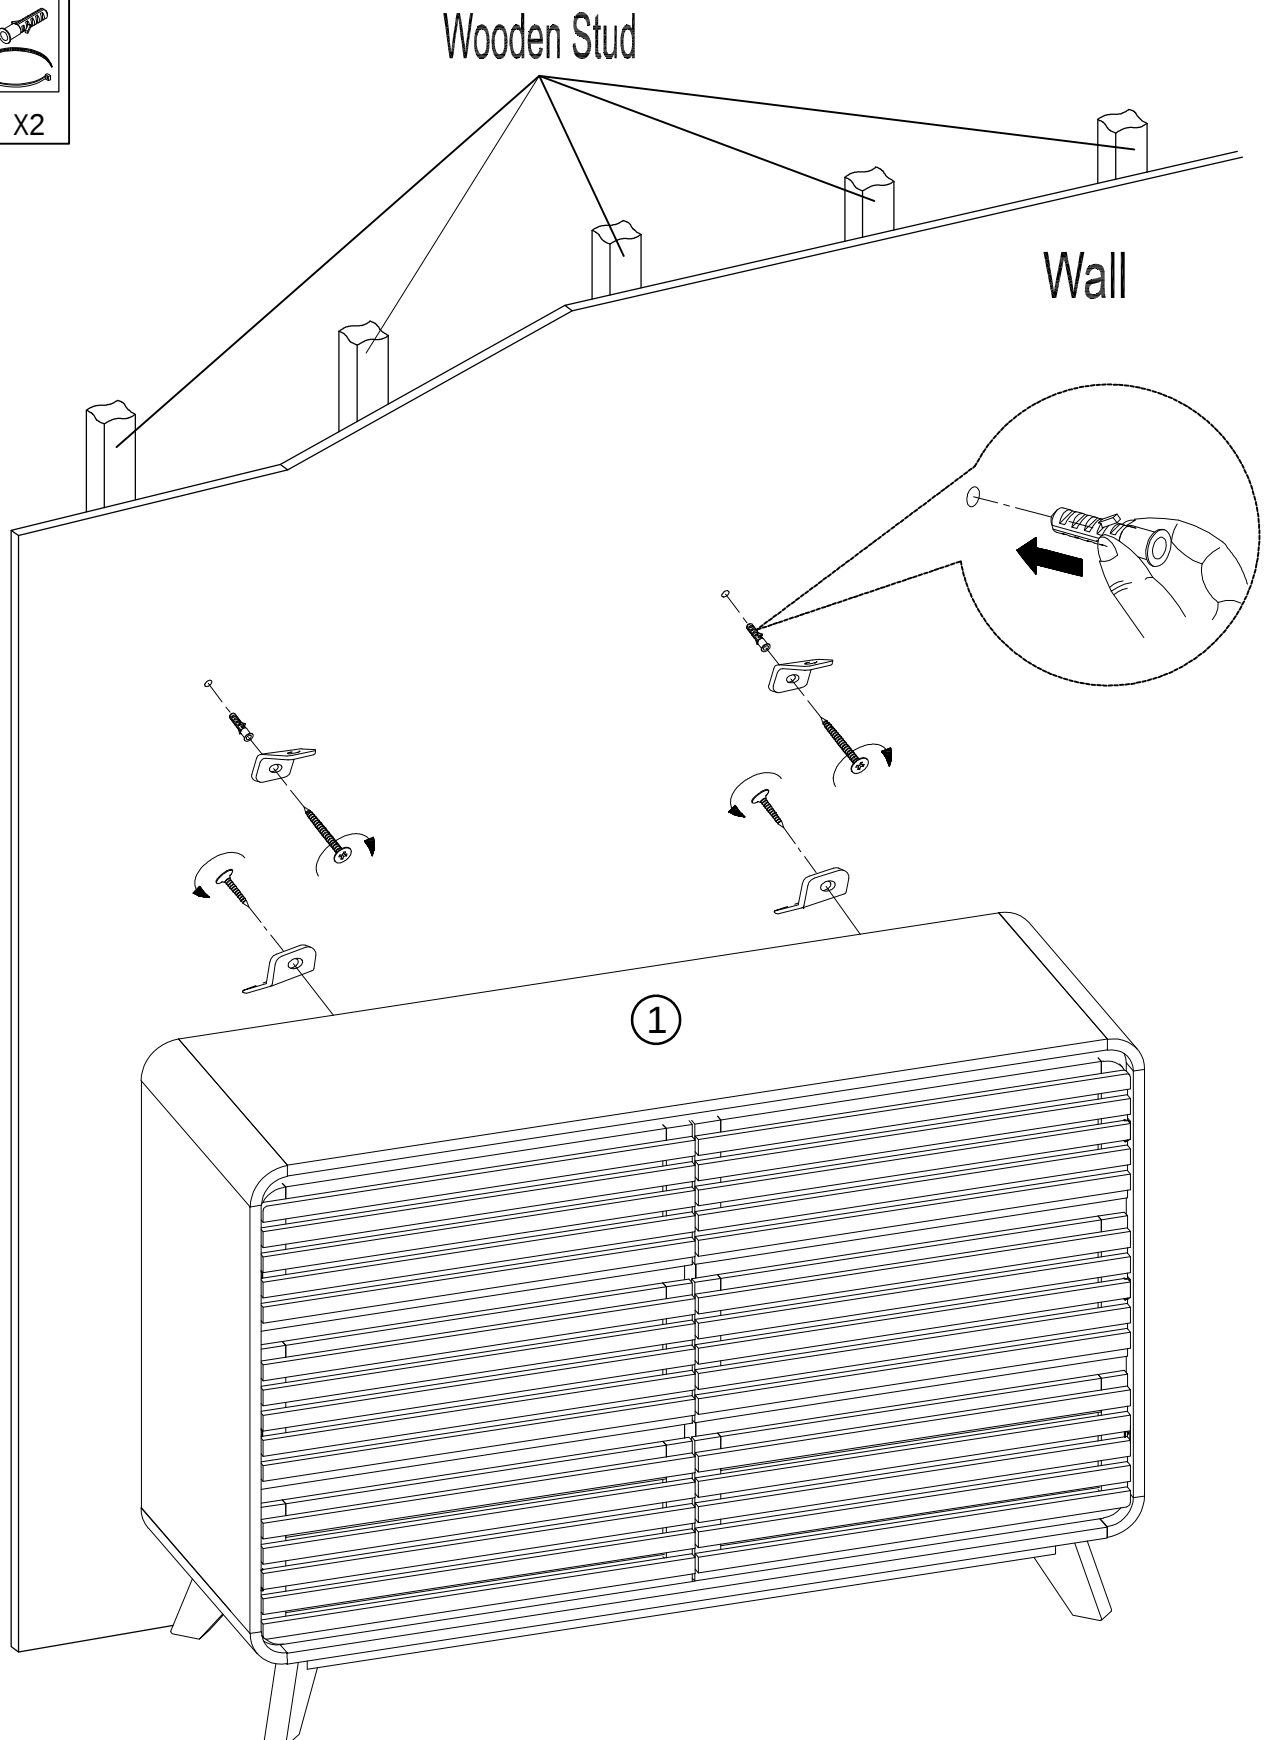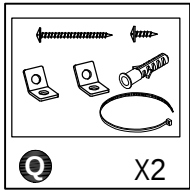

STEP 26

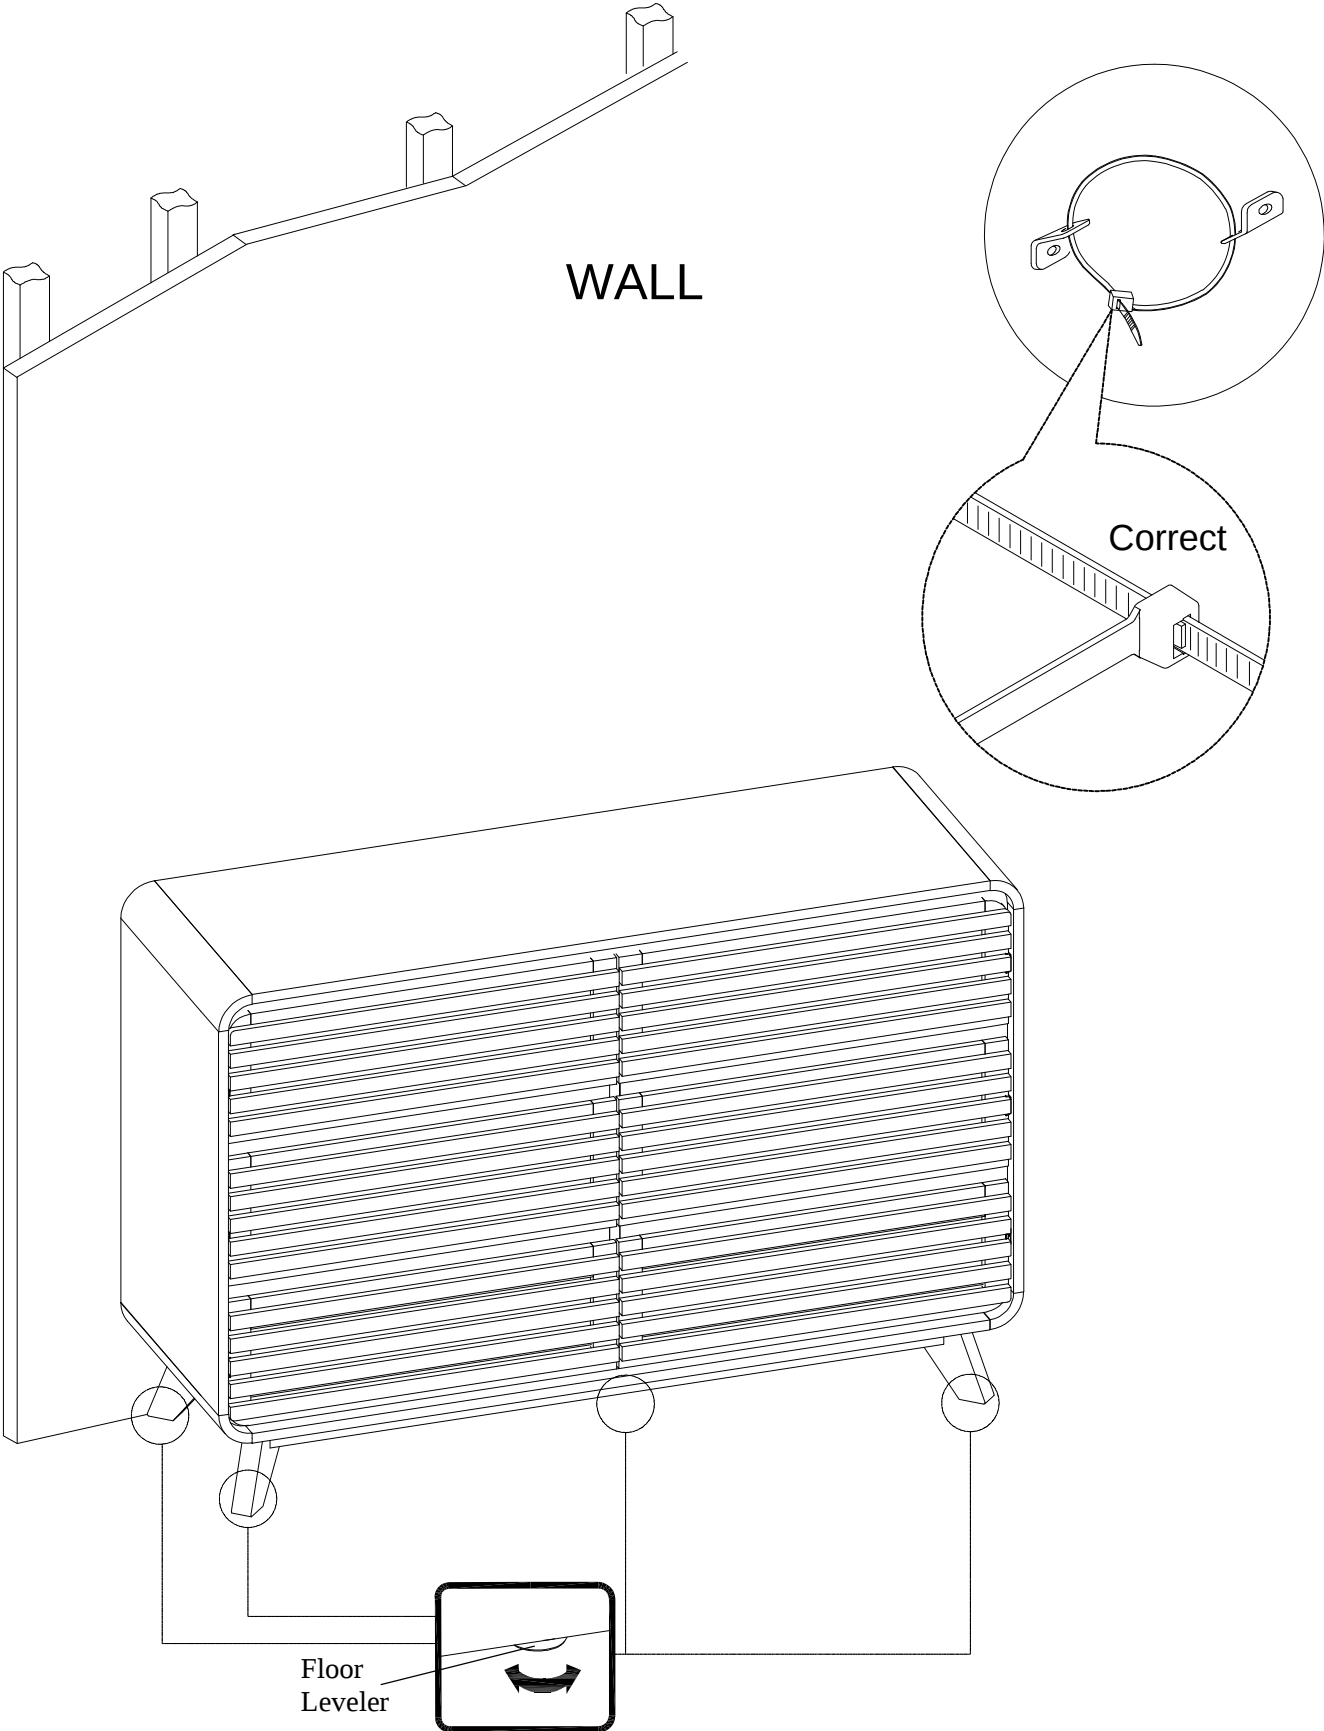

STEP 27

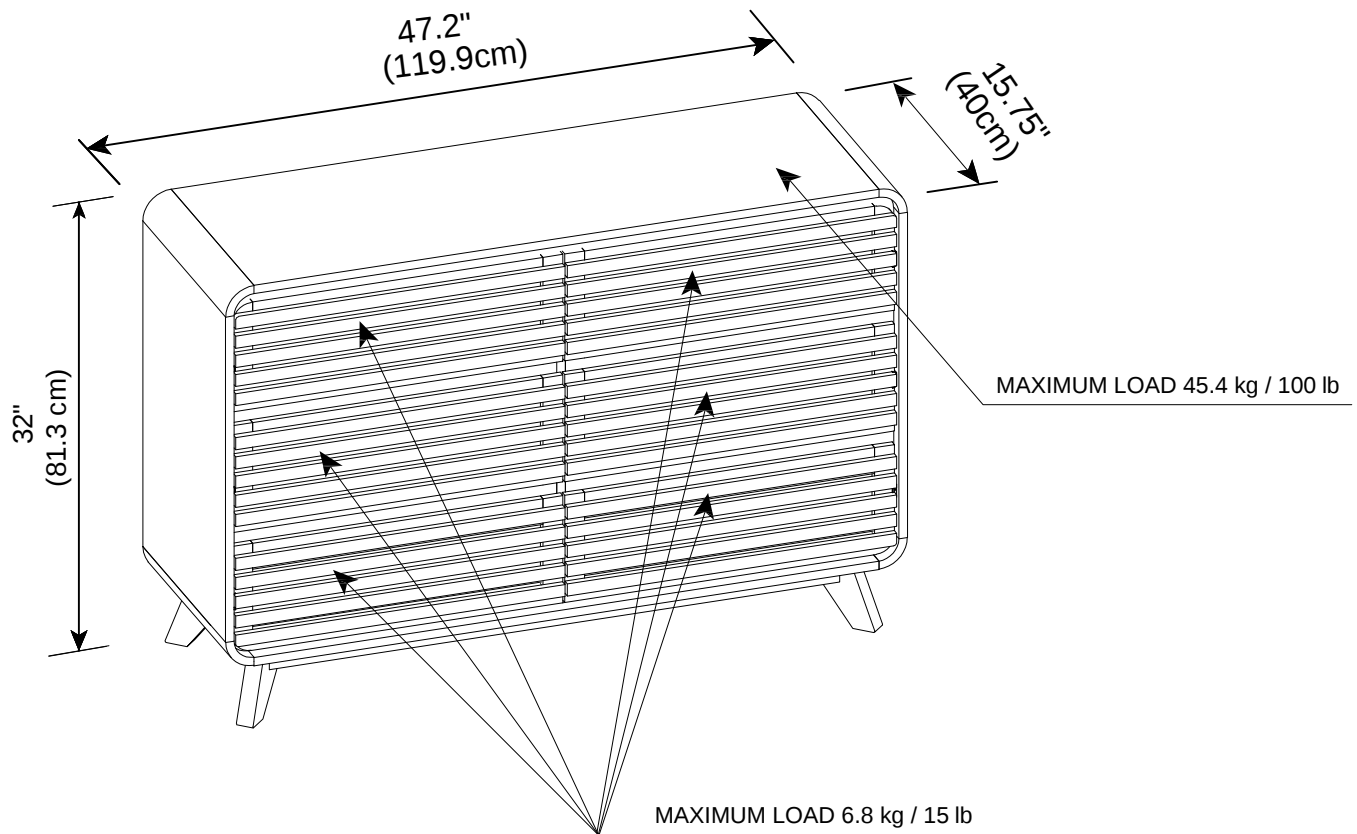

SPECIFICATIONS

ASSEMBLED DIMENSIONS(W x D x H)

47.2" x 15.75 " x 32"

119.9 x 40 x 81.3 cm

MAXIMUM WEIGHT CAPACITY

Top: 100 lb