
Sofa Assembly Instruction

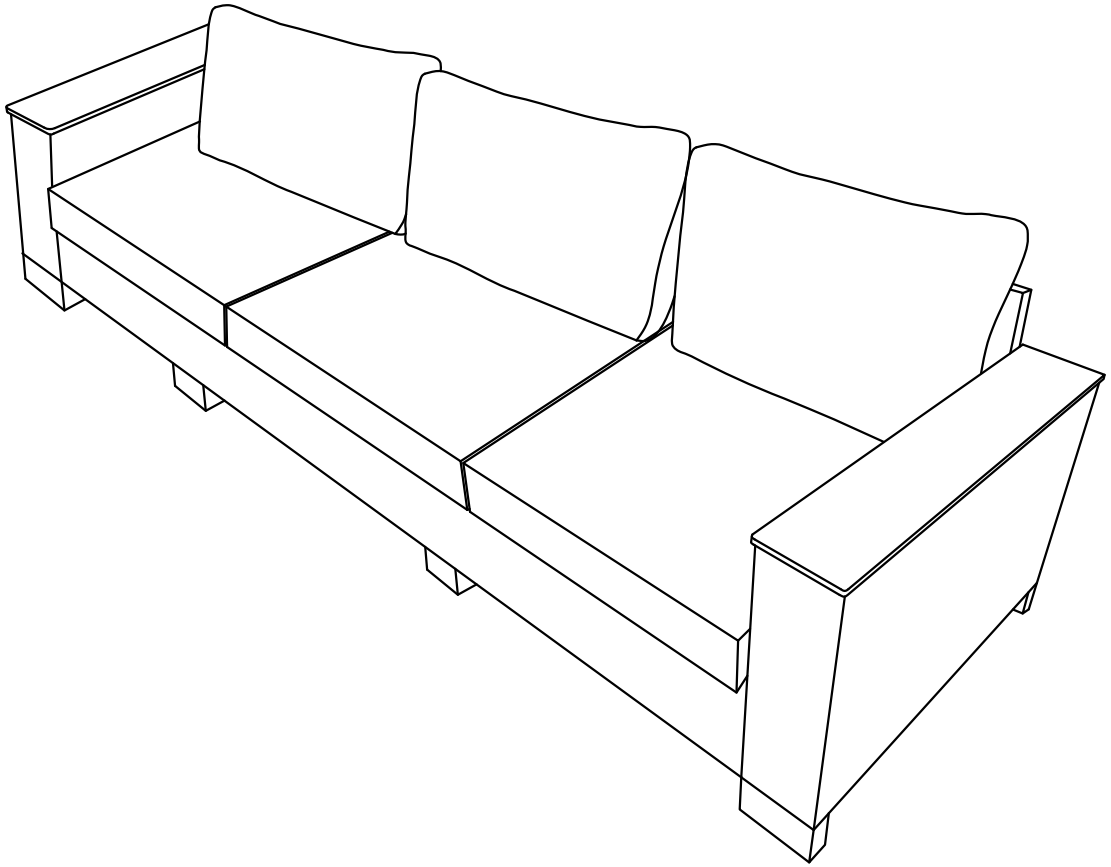

Dear Customer,

After receiving the product, please check all the accessory codes and quantities according to the instruction manual, if there is any omission, please contact us in time. We will provide solutions for you.

If you have any questions, please contact us in time; support@papajet.net

Revision Date:20231230


Safety and Care Advice

Important – Please read these instructions fully before starting assembly


Thanks for your purchase.Before the assembly.please follow the instruction to check if all the spare parts and screws are intact.

- Considering the size and weight of the sofa, we recommend two adults to assemble the sofa, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
- Keep all components and packaging out of reach of children or animals to avoid risk of choking or suffocation.
- Please do not throw away any of the packaging or the instruction until you have checked all the components and hardware and the furniture is fully assembled. Please ensure that the packaging is disposed of in a safe and environmentally friendly way.


Your cushions come vacuum packed and sealed for shipping.To restore the cushion's original shape, follow the steps below.

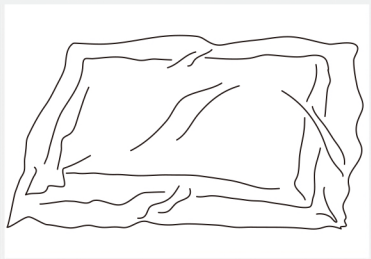


Open the vacuum bag carefully.

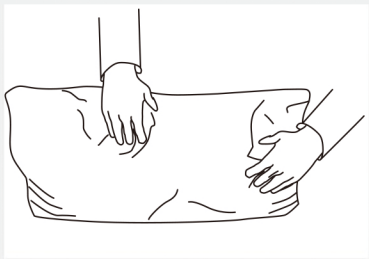

Press and tap with both hands from the side to fully inhale air

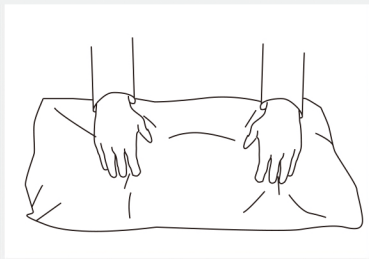


Press and tap with both hands from the front to fully inflate.

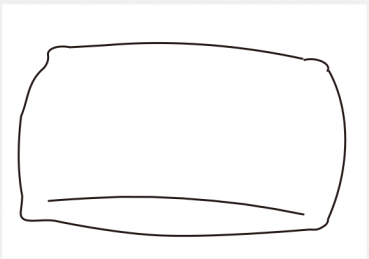


Carefully smooth out each section until the surface is even.

After packing up, place them in somewhere dry and ventilated. After about 72-96hours. It can be restored to the best use condition.










SOFA

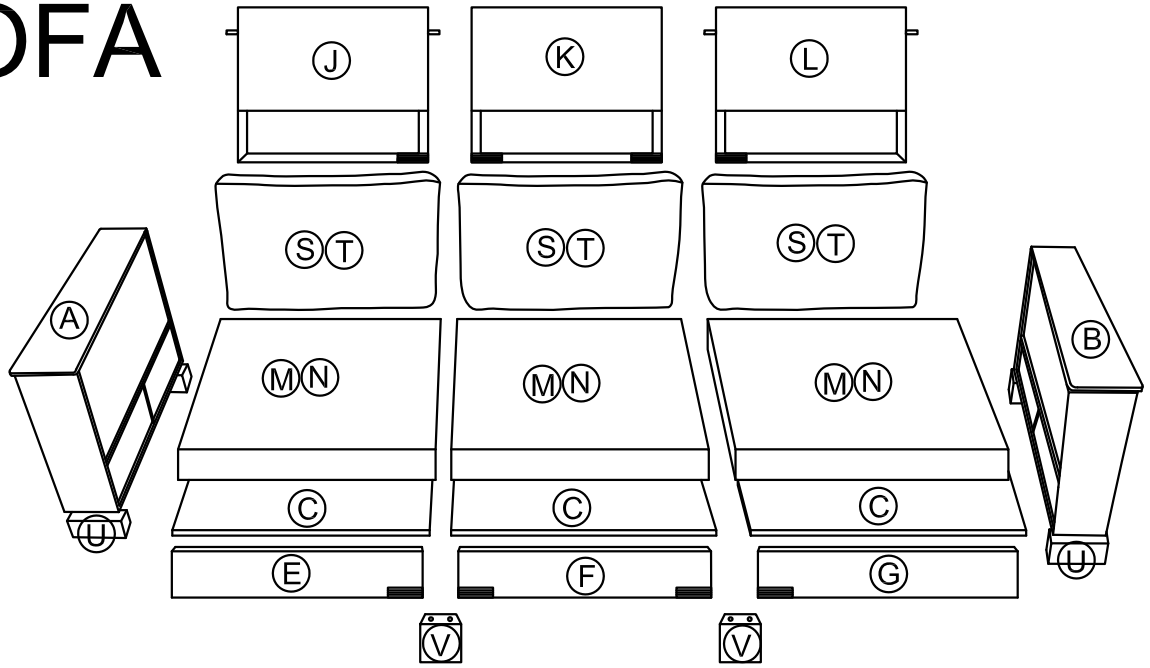


Hardware parts

① Bolt  M6x35 x22	② Bolt  M6x55 x8	③ Bolt  M6x60 x14
④ Washer  x66	⑤ Nut  x22	⑥ Allen Key  x1
⑦ Spanner  x1		

Main structure accessories

Ⓐ Right Armrests  x1	Ⓑ Left Armrests  x1	Ⓒ Seat  x3	Ⓔ Side panel  x1	Ⓕ Side panel  x1	Ⓖ Side panel  x1	Ⓙ Back rest  x1	Ⓚ Back rest  x1	Ⓛ Back rest  x1
Ⓜ Seat cushion  x3	Ⓝ Seat cushion cover  x3	Ⓢ Back cushion  x3	Ⓣ Back cushion cover  x3	Ⓤ Wooden footpads  x4	Ⓥ Wooden footpads  x4			


STEP1

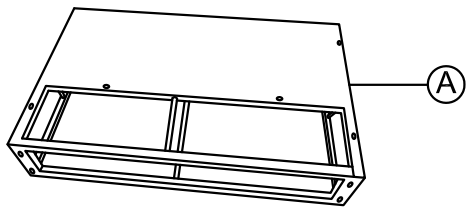

Right

Place the Armrests on the ground before assemble.
Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.


STEP2

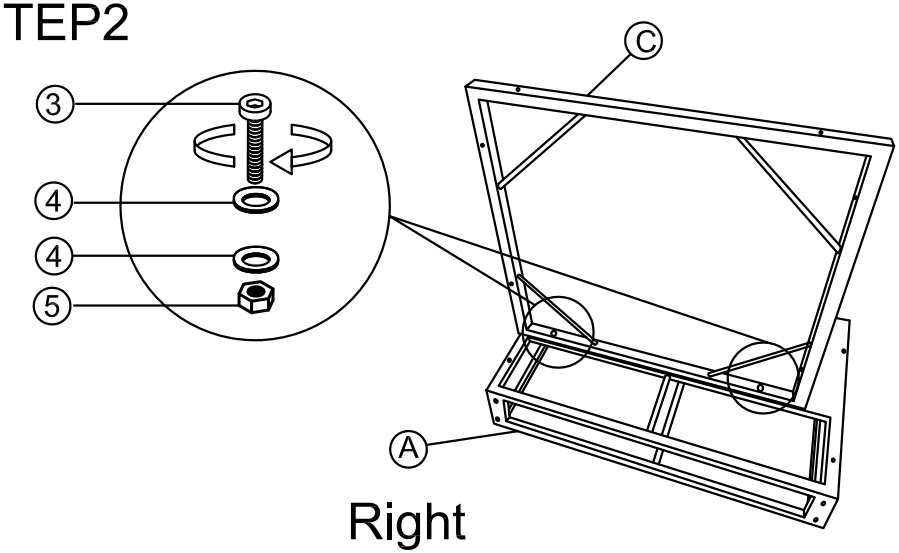

Right

Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.


STEP3

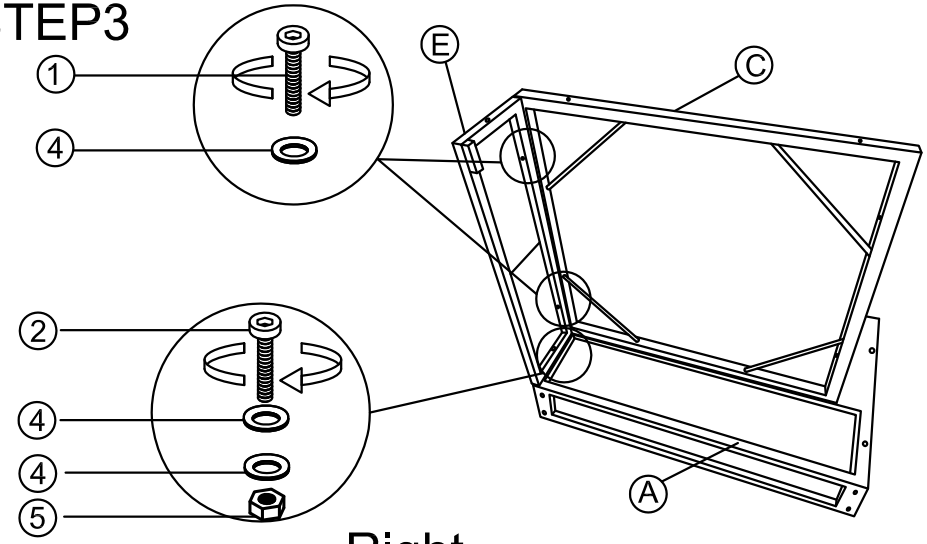

Right

Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.


STEP4

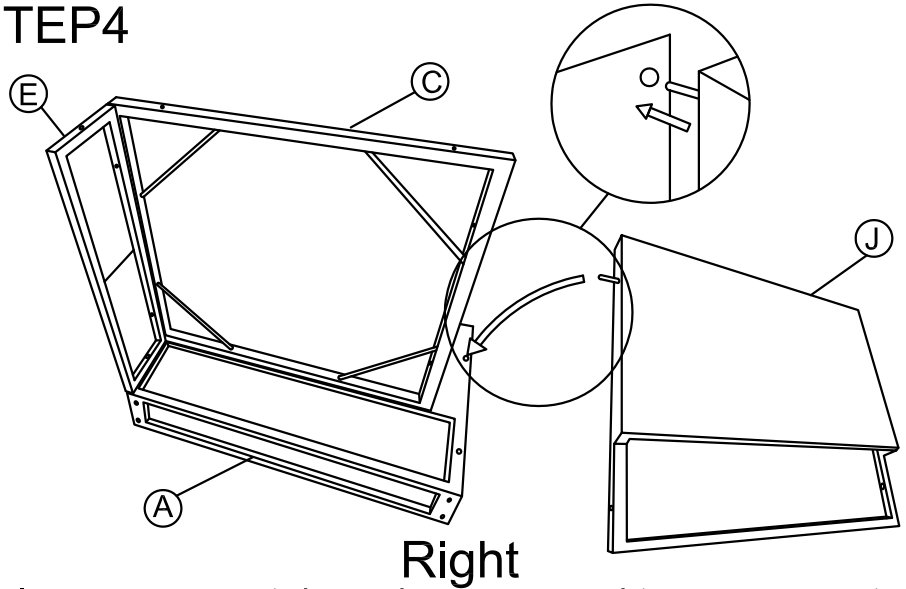

Right

Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.


STEP5

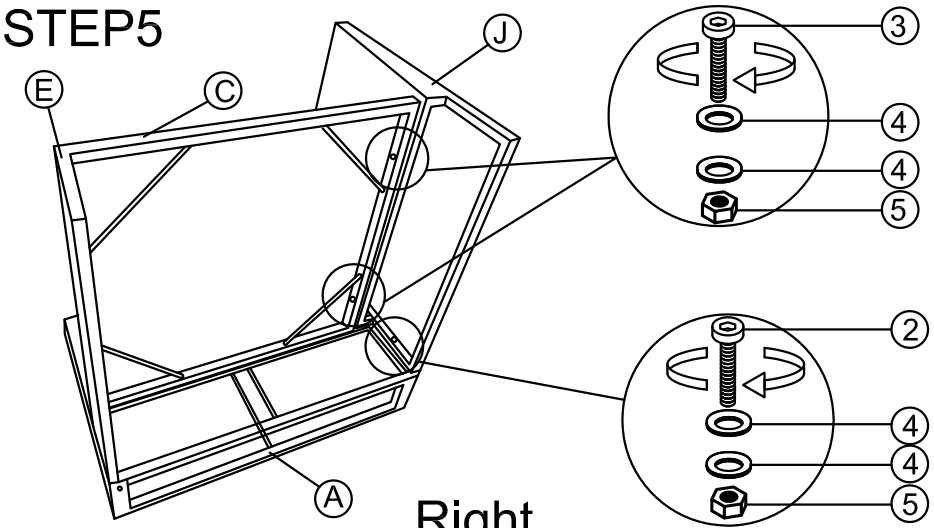

Right

Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.


STEP6

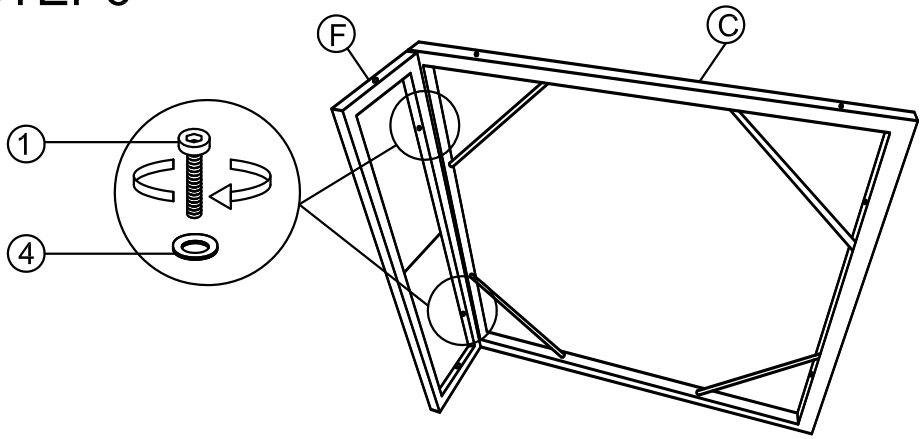

middle sofa

Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.


STEP7

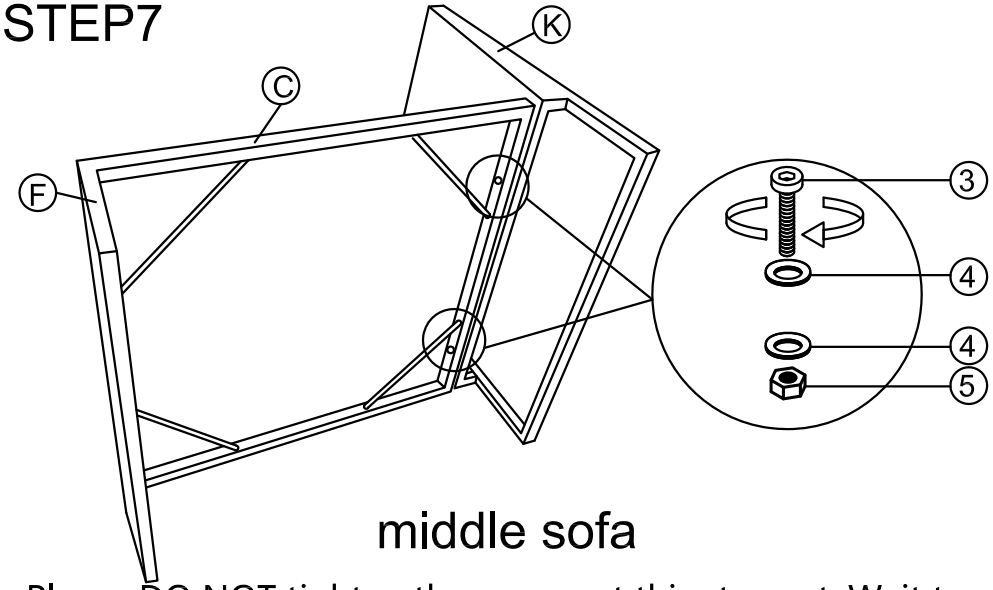

middle sofa

Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.


STEP8

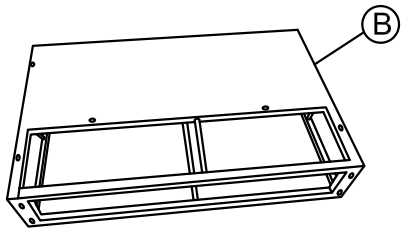

Left

Place the Armrests on the ground before assemble.
Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.


STEP9

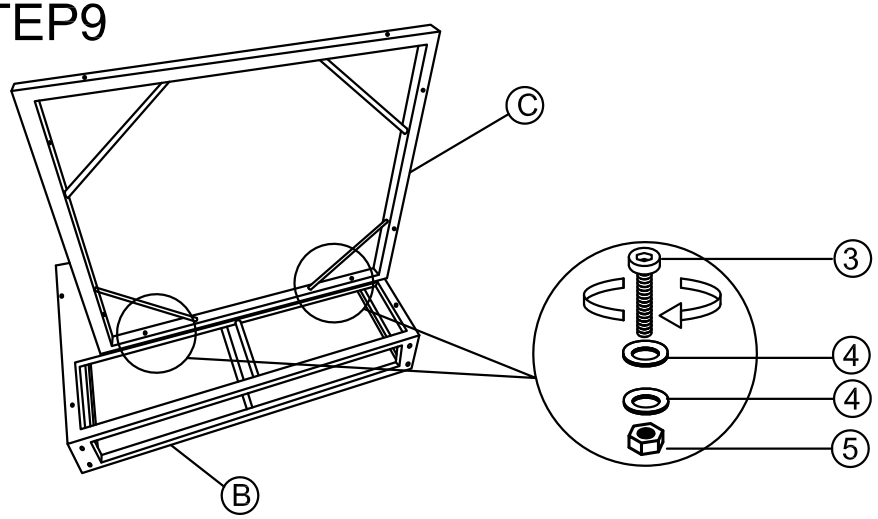

Left

Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.


STEP10

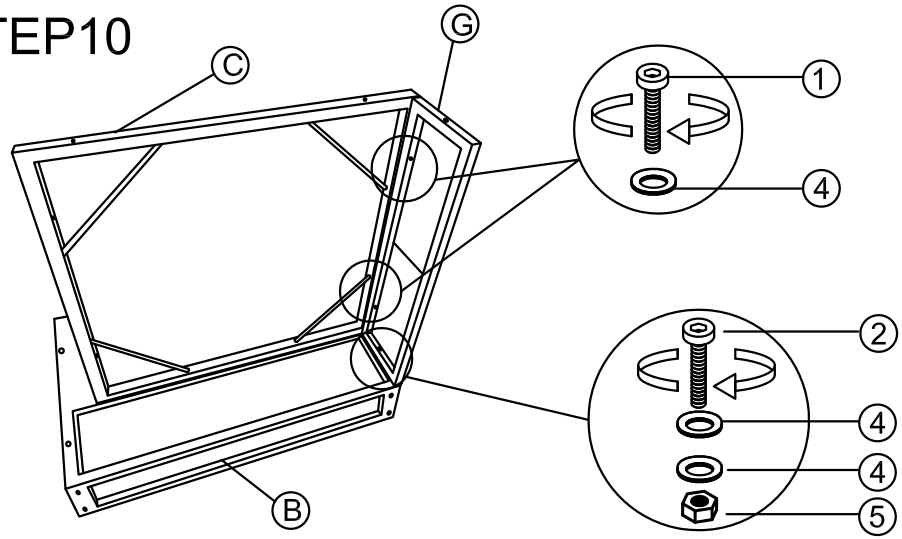

Left

Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.


STEP11

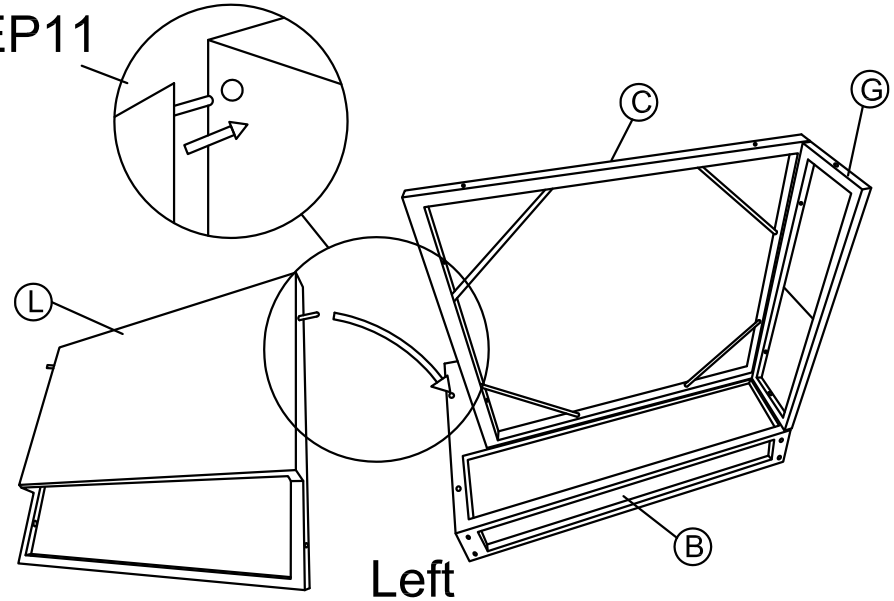

Left

Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.


STEP12

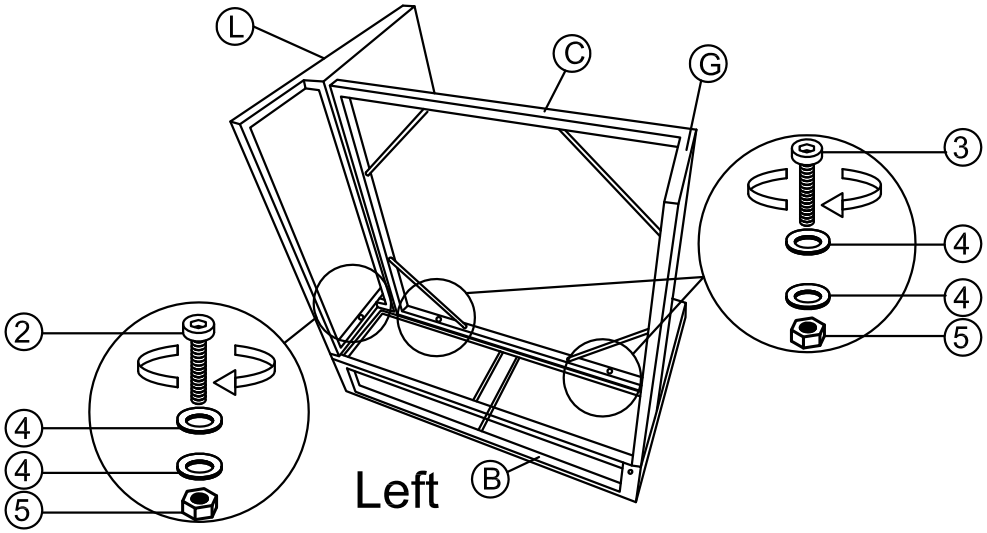

Left


Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.

STEP13

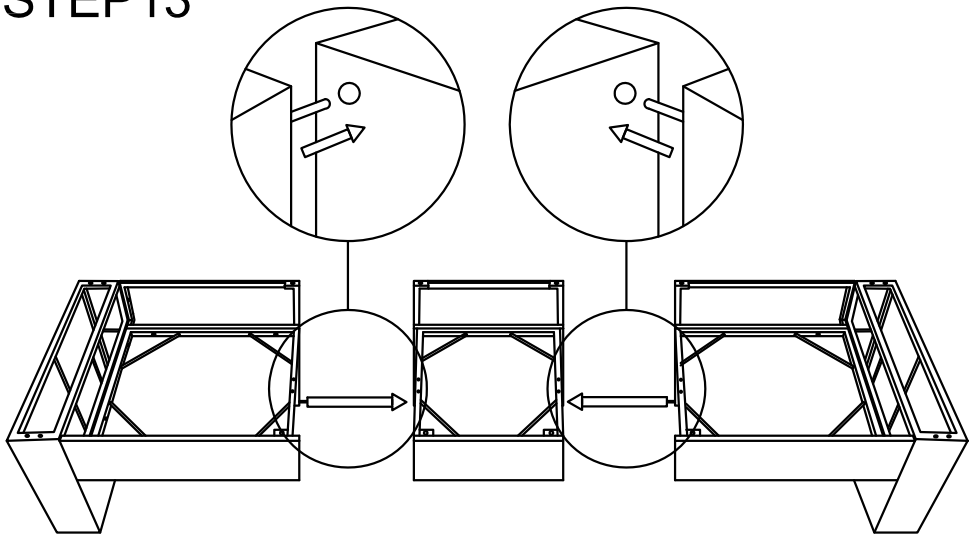


Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.

STEP14

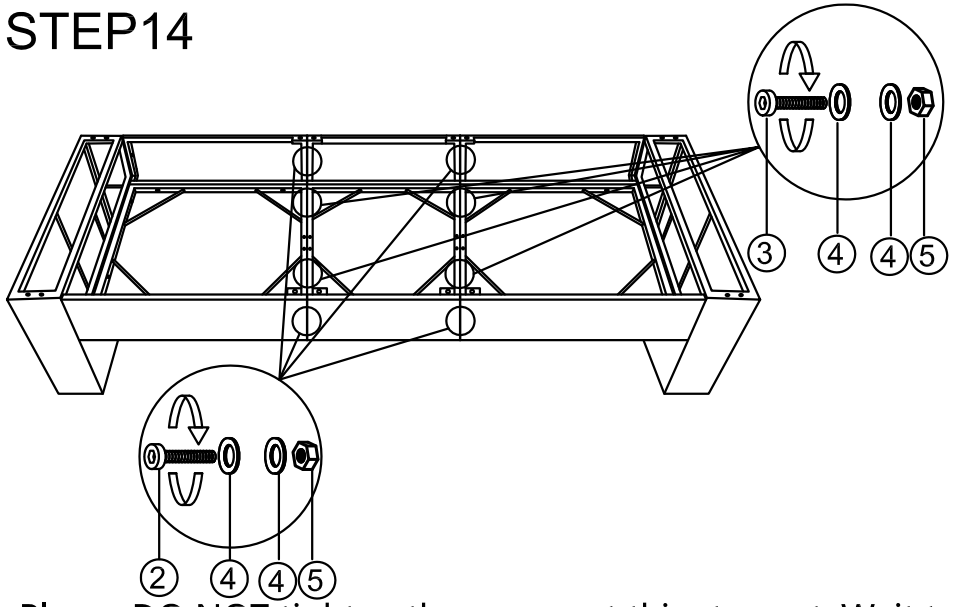


Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.

STEP15

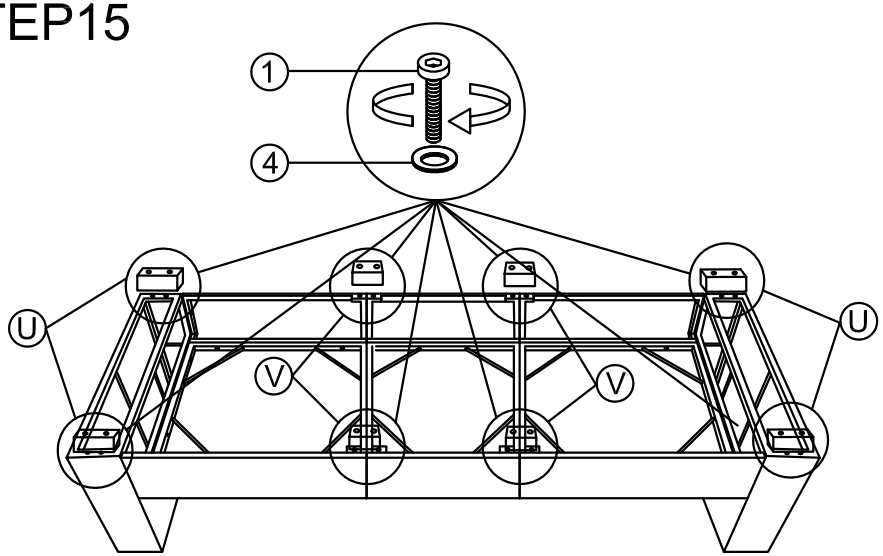

Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.

STEP16

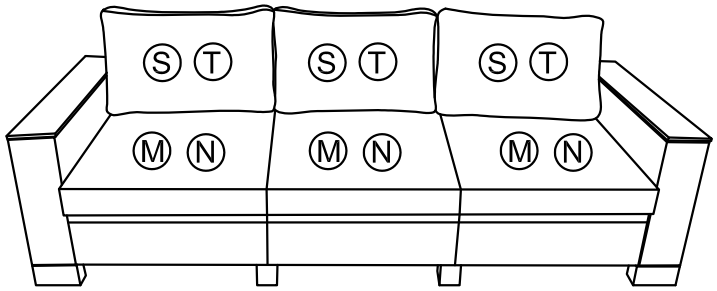

Please DO NOT tighten the screws at this step yet. Wait to tighten all the screws until the product is fully installed.