



ASSEMBLY INSTRUCTIONS

FULL BED WITH TRUNDLE & DRAWERS

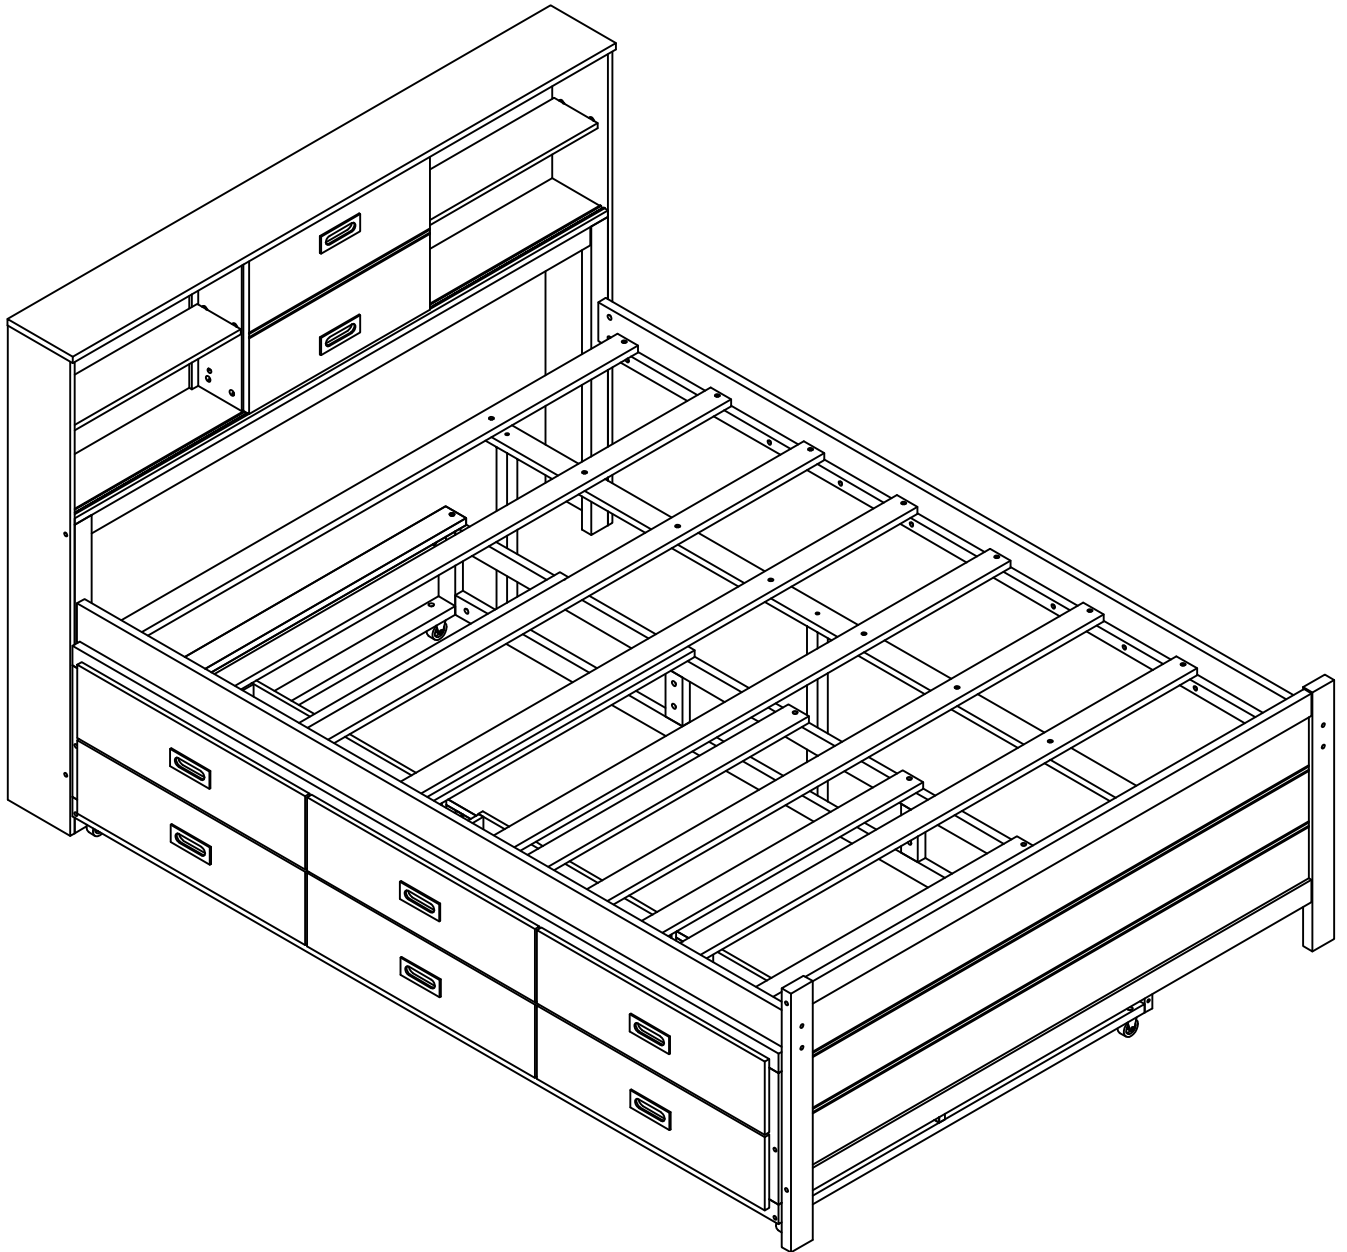


WF324289/WF324290

ASSEMBLY INSTRUCTIONS

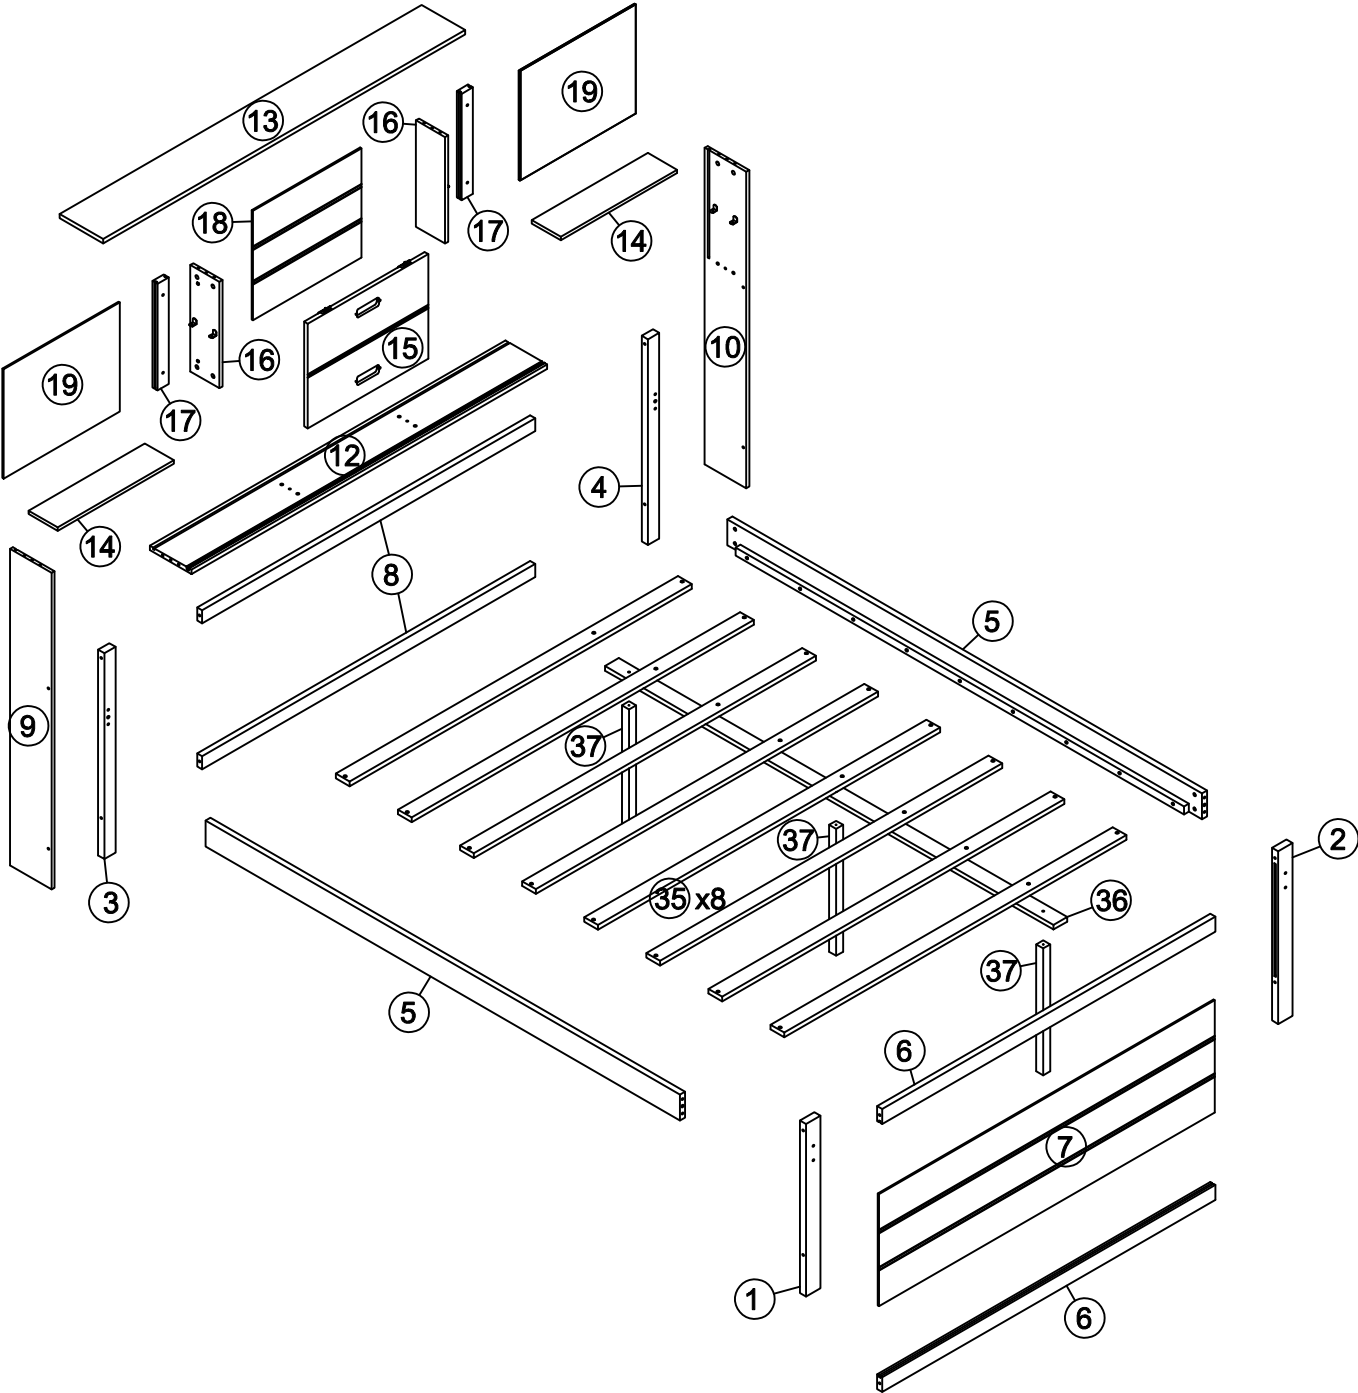









ASSEMBLY INSTRUCTIONS

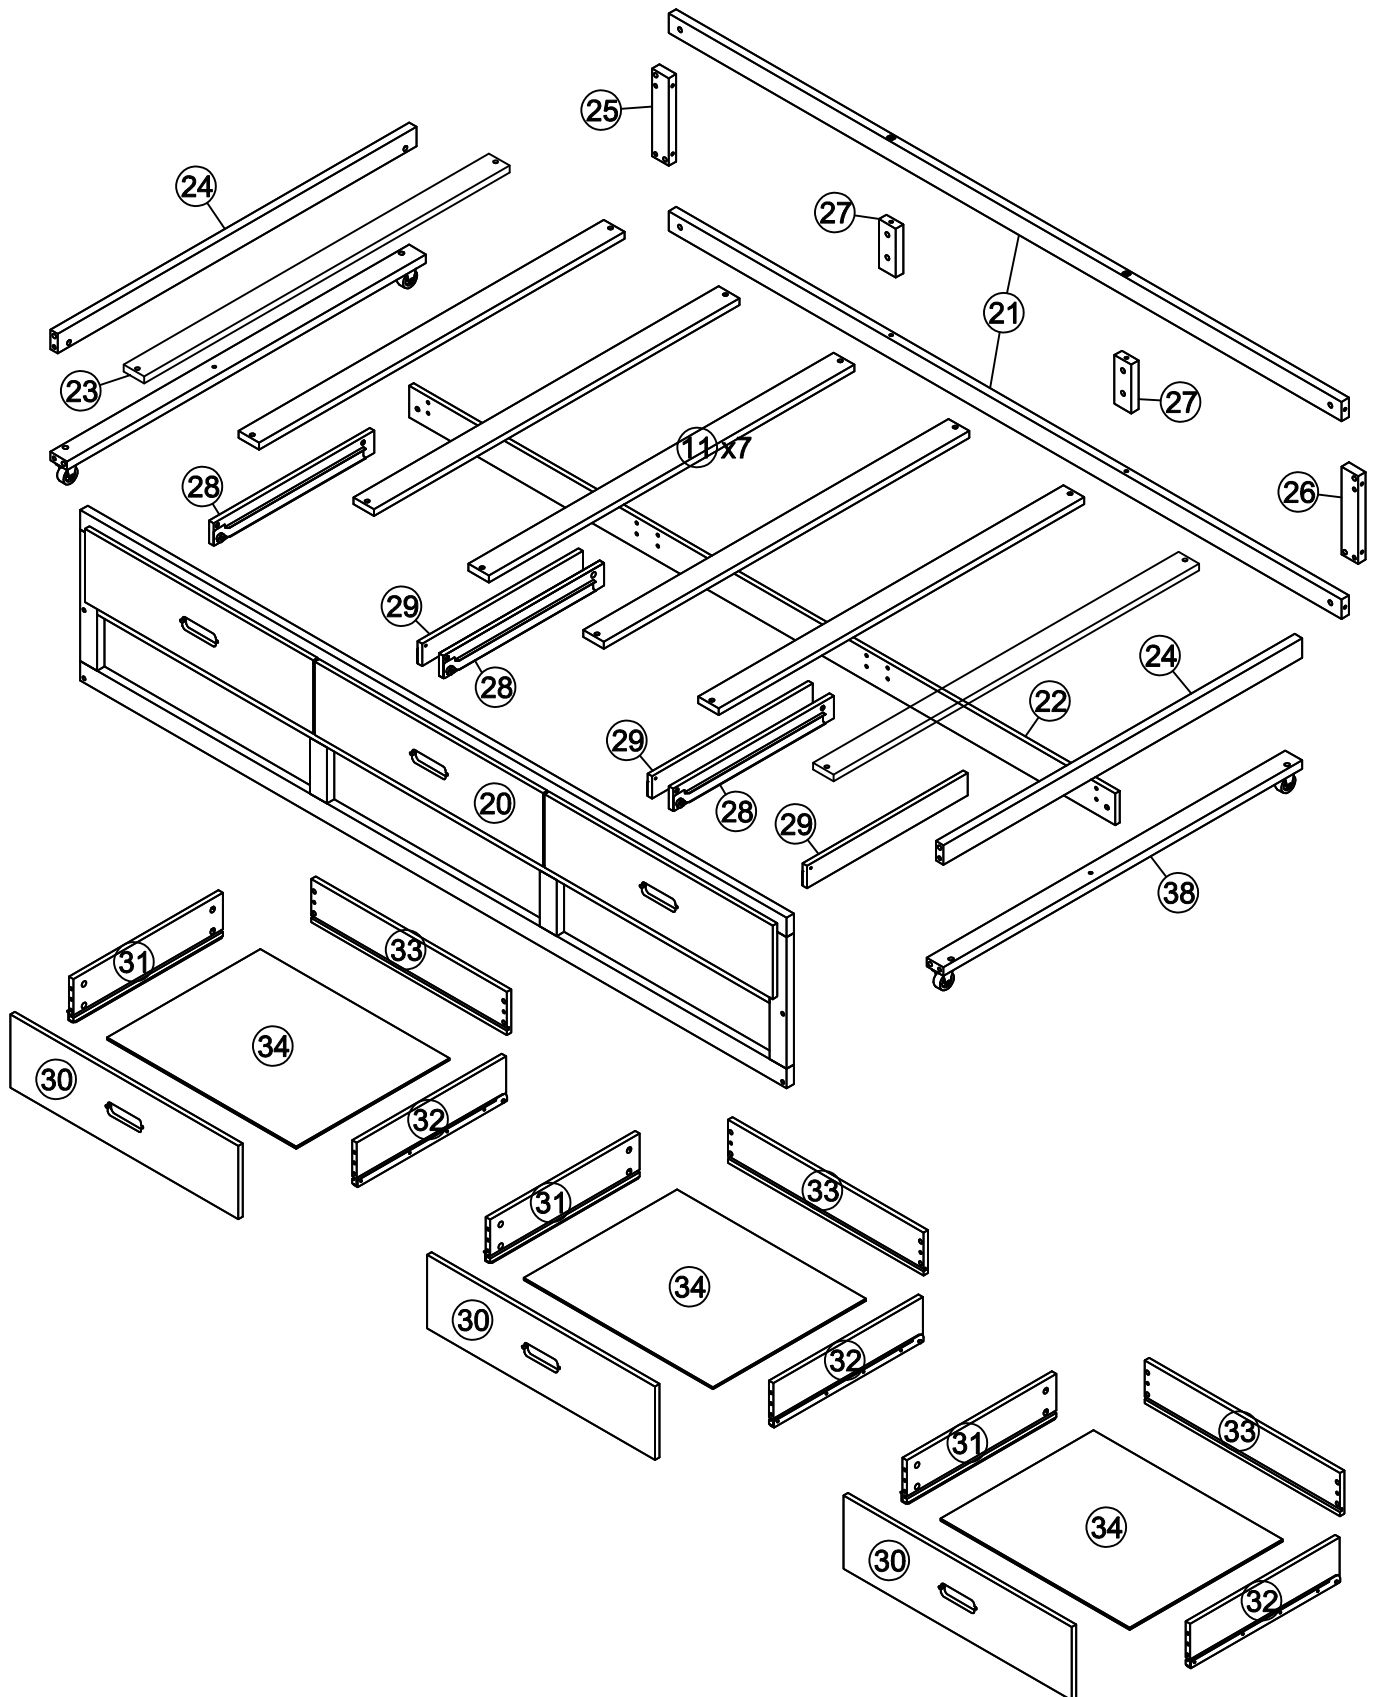

ASSEMBLY INSTRUCTIONS

PARTS LIST













WF324289

1	Leg		1pc	17	Headboard frames		2pcs
2	Leg		1pc	20	Front trundle frames		1pc
3	Leg		1pc	21	Back trundle frames		2pcs
4	Leg		1pc	22	Back drawers frames		1pc
5	Side rails		2pcs	25	Side trundle frames		1pc
12	Bottom shelves		1pc	26	Side trundle frames		1pc
13	Top shelves		1pc	27	Trundle frames support		2pcs
14	Shelves panels		2pcs	36	Center rails		1pc
16	Side shelves		2pcs	37	Center rails support legs		3pcs

ASSEMBLY INSTRUCTIONS




PARTS LIST

WF324290 (Hardware in this SKU)

6	 Headboard frames	2pcs	24	 Side drawers frames	2pcs
7	 Headboard panels	1pc	28	 Side drawers support	3pcs
8	 Headboard frames	2pcs	29	 Side drawers support	3pcs
9	 Side shelves	1pc	30	 Front drawers	3pcs
10	 Side shelves	1pc	31	 Side drawers	3pcs
11	 Slats	7pcs	32	 Side drawers	3pcs
15	 Headboard frames	1pc	33	 Back drawers	3pcs
18	 Headboard frames	1pc	34	 Bottom drawers	3pcs
19	 Headboard frames	2pcs	35	 Slats	8pcs
23	 Side drawers frames	1pcs	38	 Side drawers frames	1pcs


ASSEMBLY INSTRUCTIONS

HARDWARE LIST (WF324290)

A	Ø4x30		38PCS	L	4x58		1PC
B	Ø4x25		6PCS	M	Ø 6.5x35		40PCS
C	Ø4x15		16PCS	N	Ø12x10		40PCS
D	Ø3.5x12		12PCS	O	18x18x2		2PCS
E	1/4x100		8PCS	P	20x17		8PCS
F	1/4x90		8PCS	Q	105x39x12 M4x10		8PCS
G	1/4x65		18PCS	R	Ø38x46x38		4PCS
H	1/4x60		4PCS	S	1/4x25		3PCS
I	1/4x55		6PCS	T	6.5x50		3PCS
J	Ø10x40		12PCS	Phillip head screw Not include 			
K	Ø8x30		26PCS				


ASSEMBLY INSTRUCTIONS


Step 1

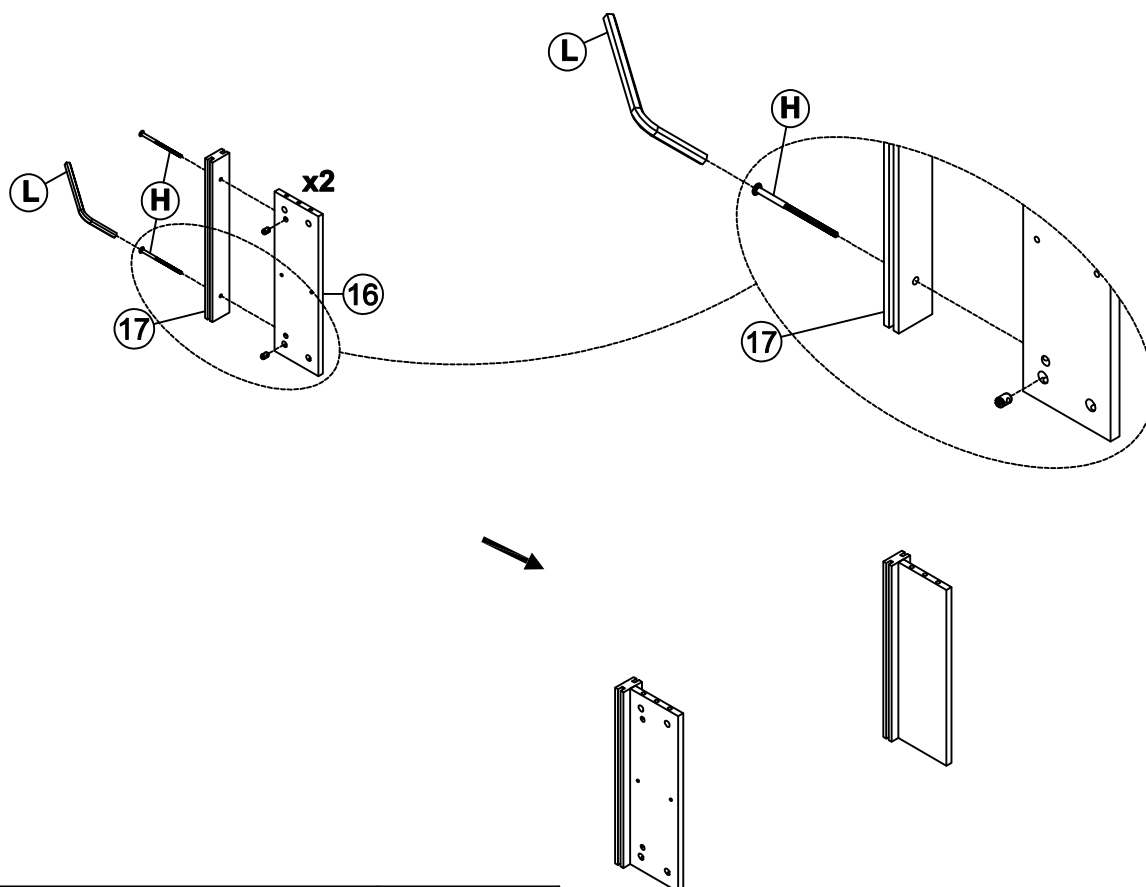

H	1/4x60		4PCS
----------	--------	---	-------------


Step 2

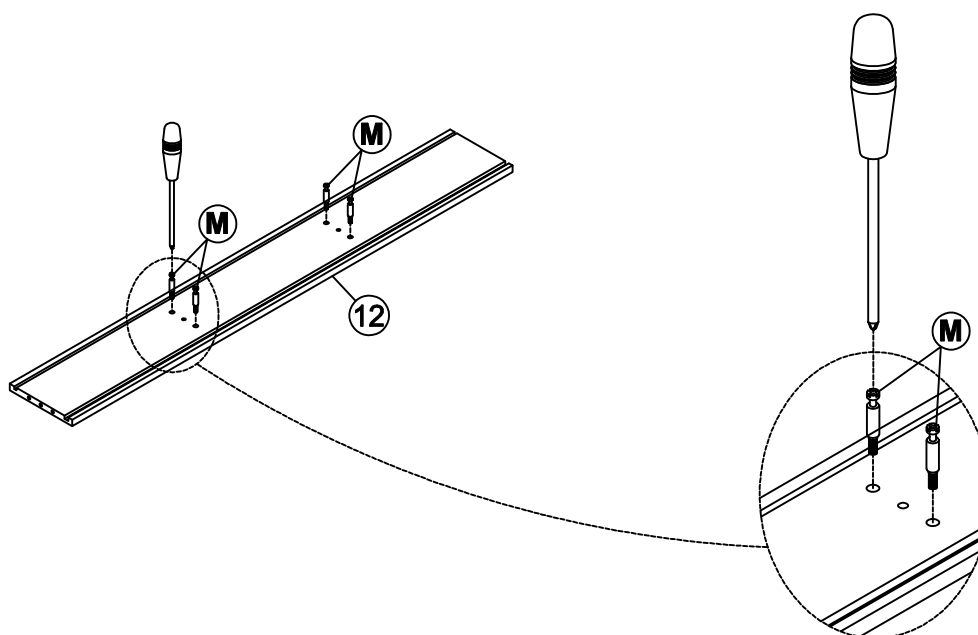

M	Ø 6.5x35		4PCS
----------	----------	---	-------------


ASSEMBLY INSTRUCTIONS


Step 3

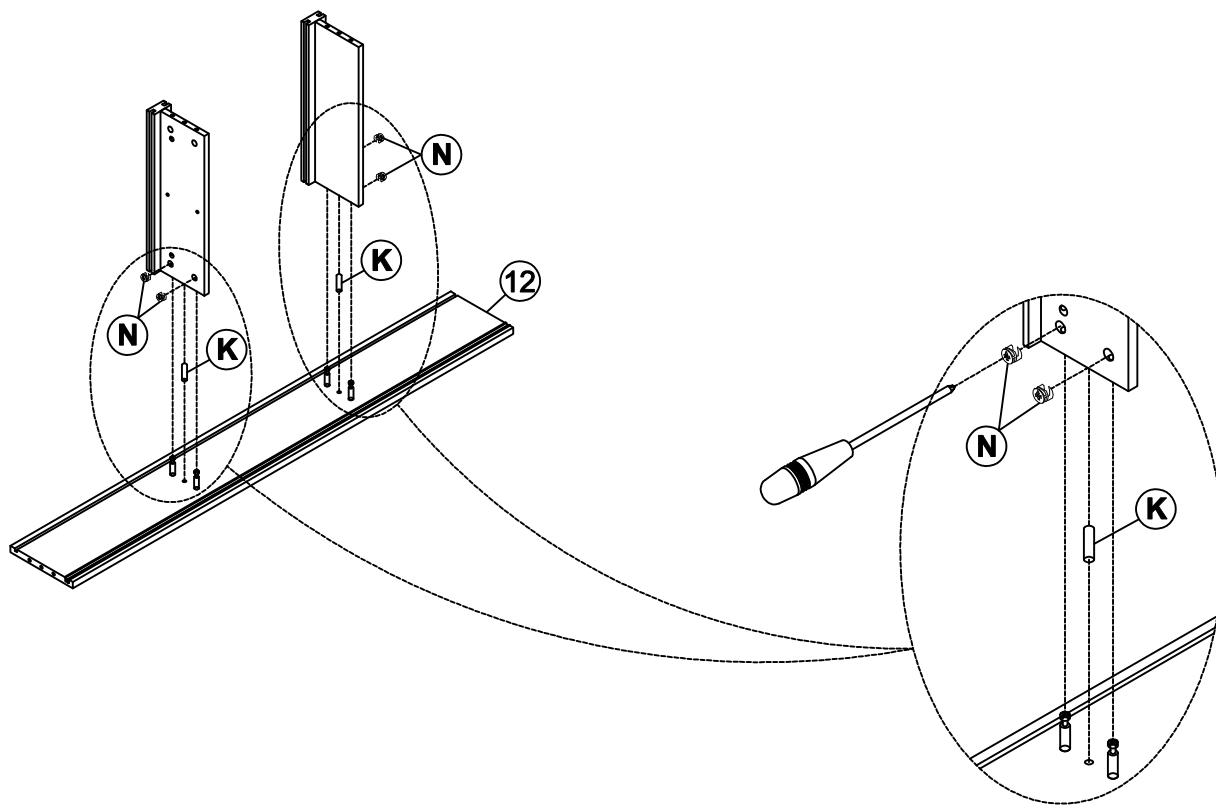

K	Ø8x30		2PCS	N	Ø12x10		4PCS
----------	-------	---	------	----------	--------	---	------


Step 4

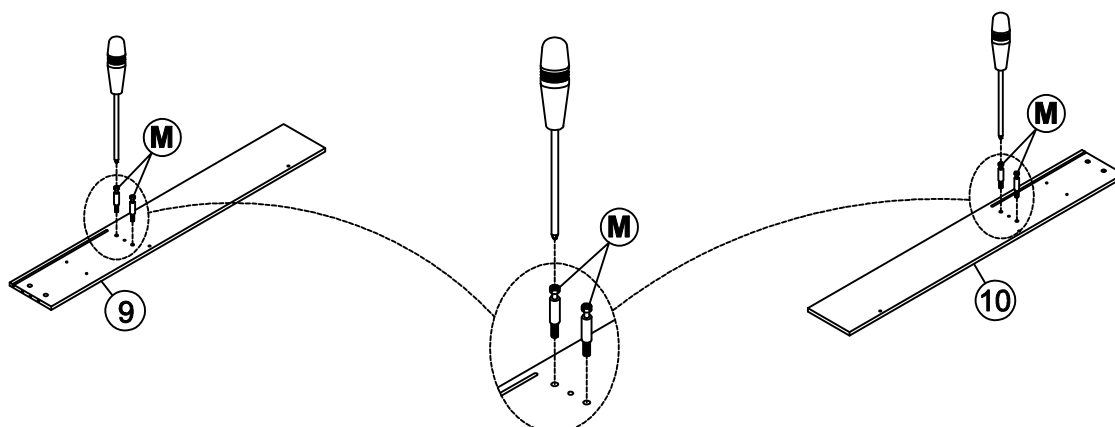

M	Ø 6.5x35		4PCS
----------	----------	---	------


ASSEMBLY INSTRUCTIONS

Step 5

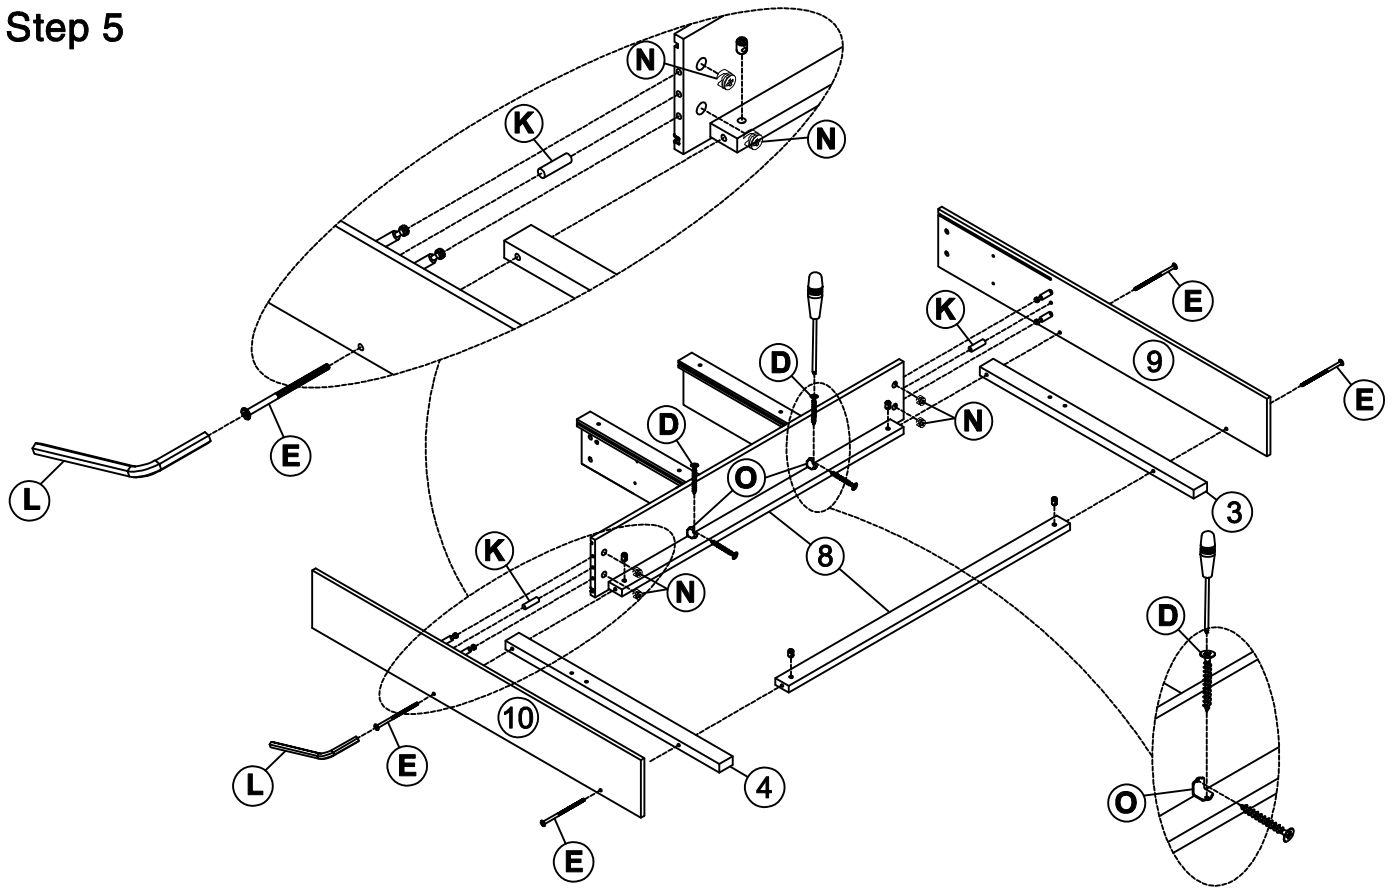


D	Ø3.5x12		4PCS	L	4x58		1PC
E	1/4x100		4PCS	N	Ø12x10		4PCS
K	Ø8x30		2PCS	O	18x18x2		2PCS


Step 6

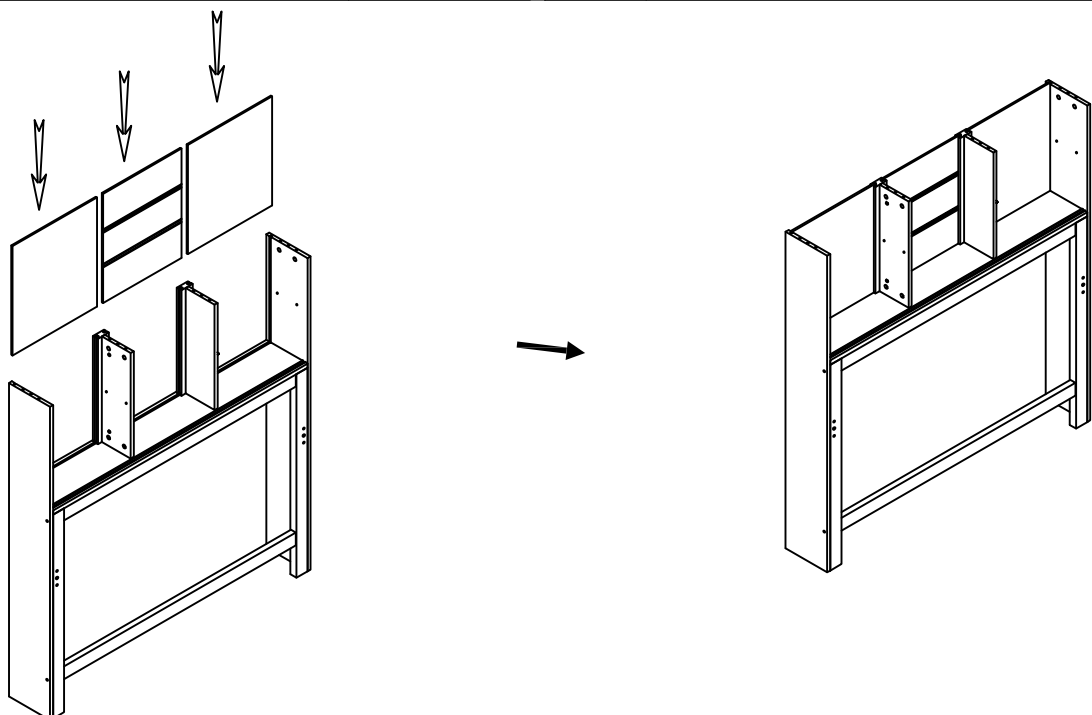


ASSEMBLY INSTRUCTIONS

Step 7

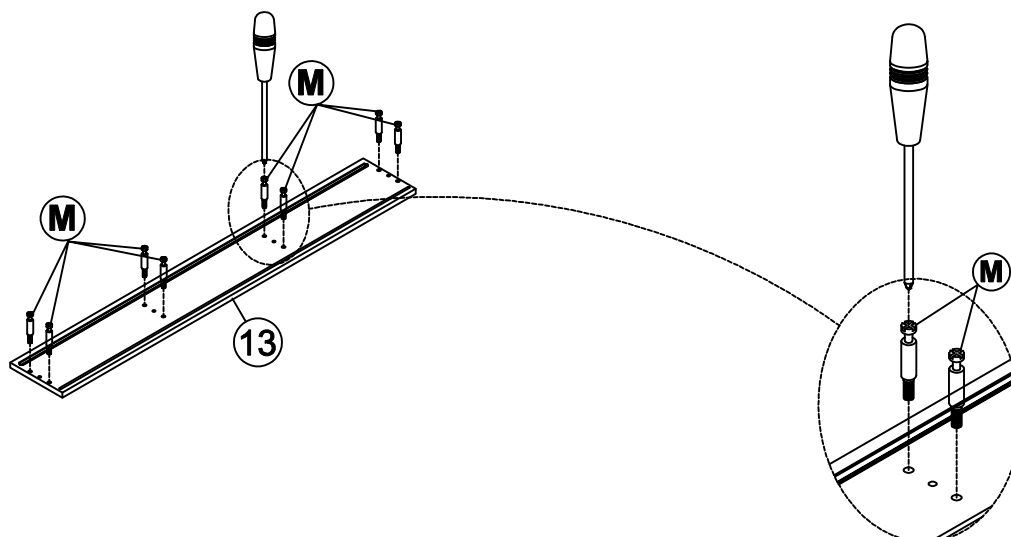

M	Ø 6.5x35		8PCS
----------	----------	---	------


Step 8

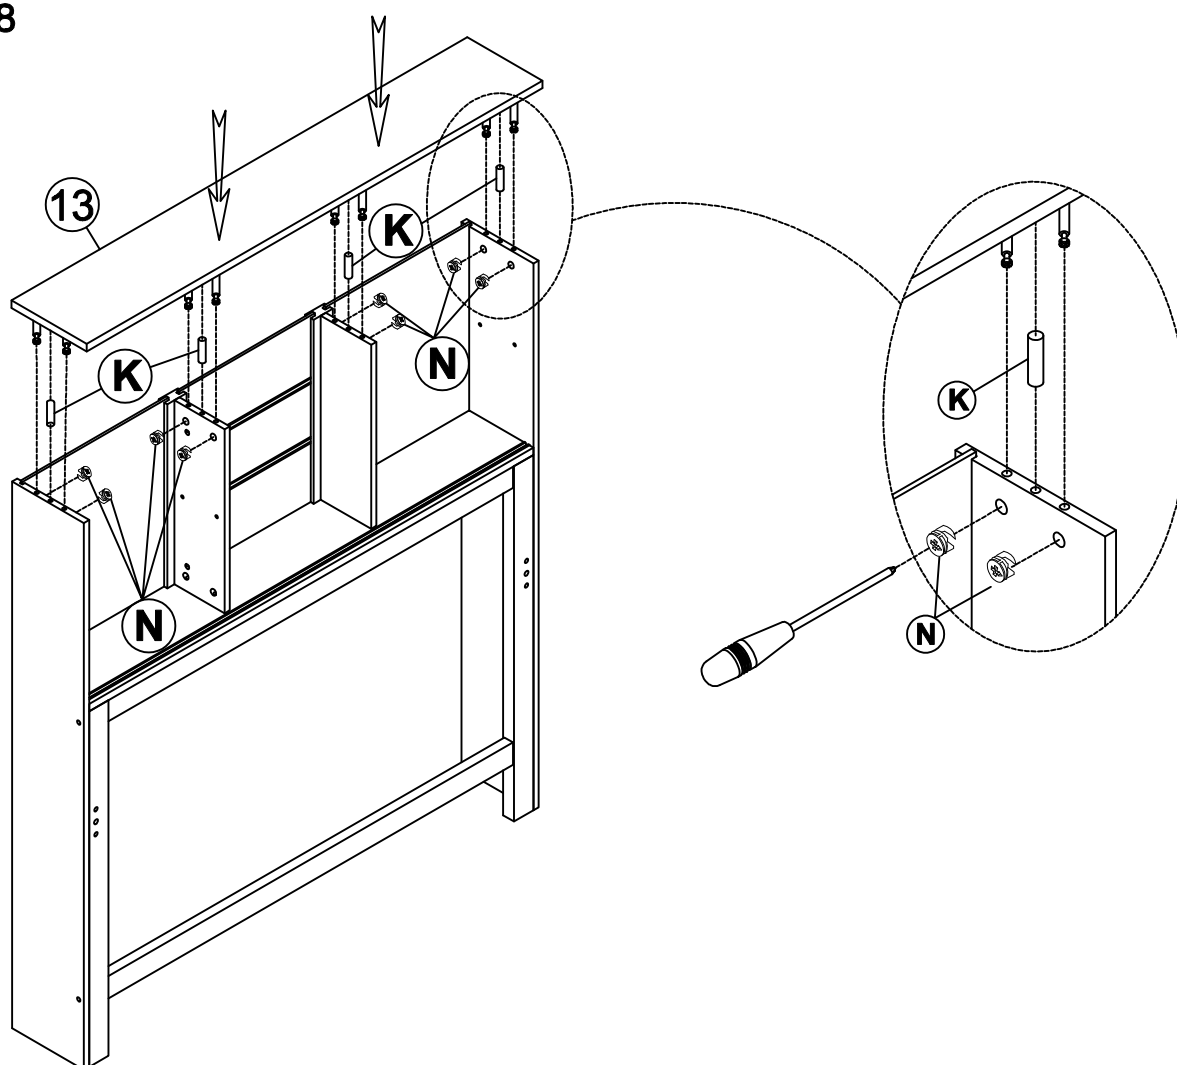

K	Ø8x30		4PCS	N	Ø12x10		8PCS
----------	-------	---	------	----------	--------	---	------


ASSEMBLY INSTRUCTIONS

Step 9

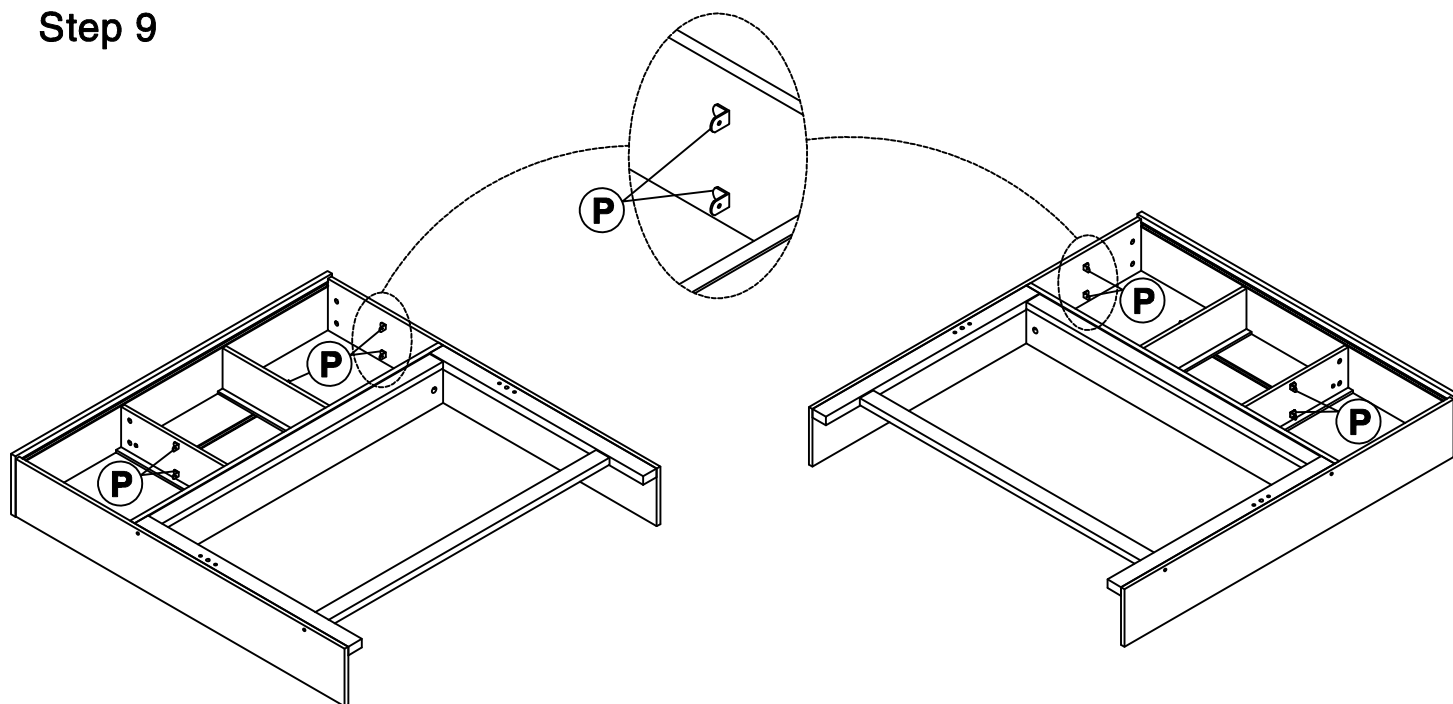

P	20x17		8PCS
----------	-------	--	------


Step 10

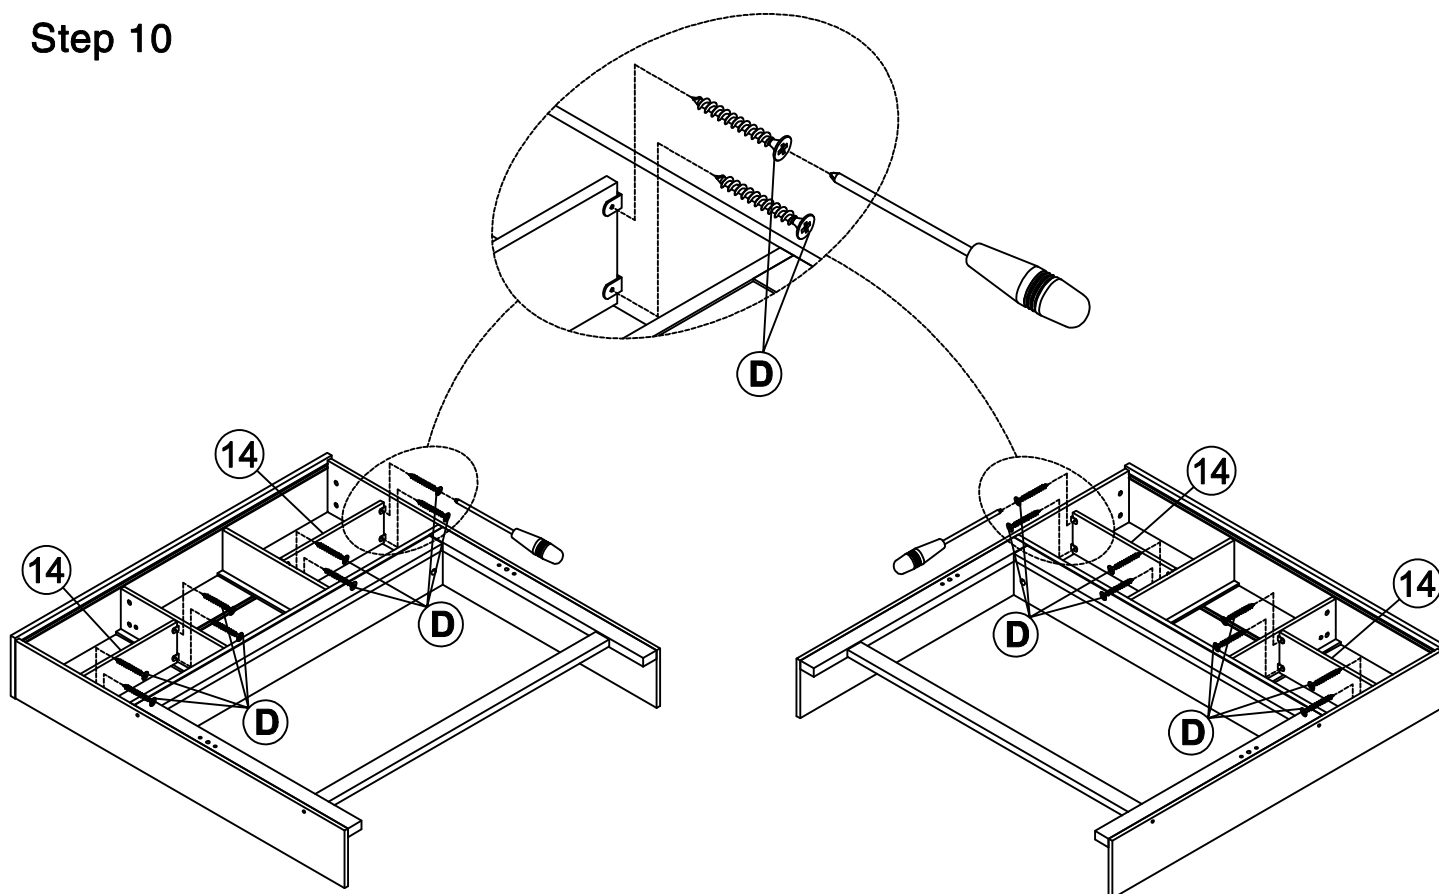

D	Ø3.5x12		8PCS
----------	---------	--	------


ASSEMBLY INSTRUCTIONS

Step 11

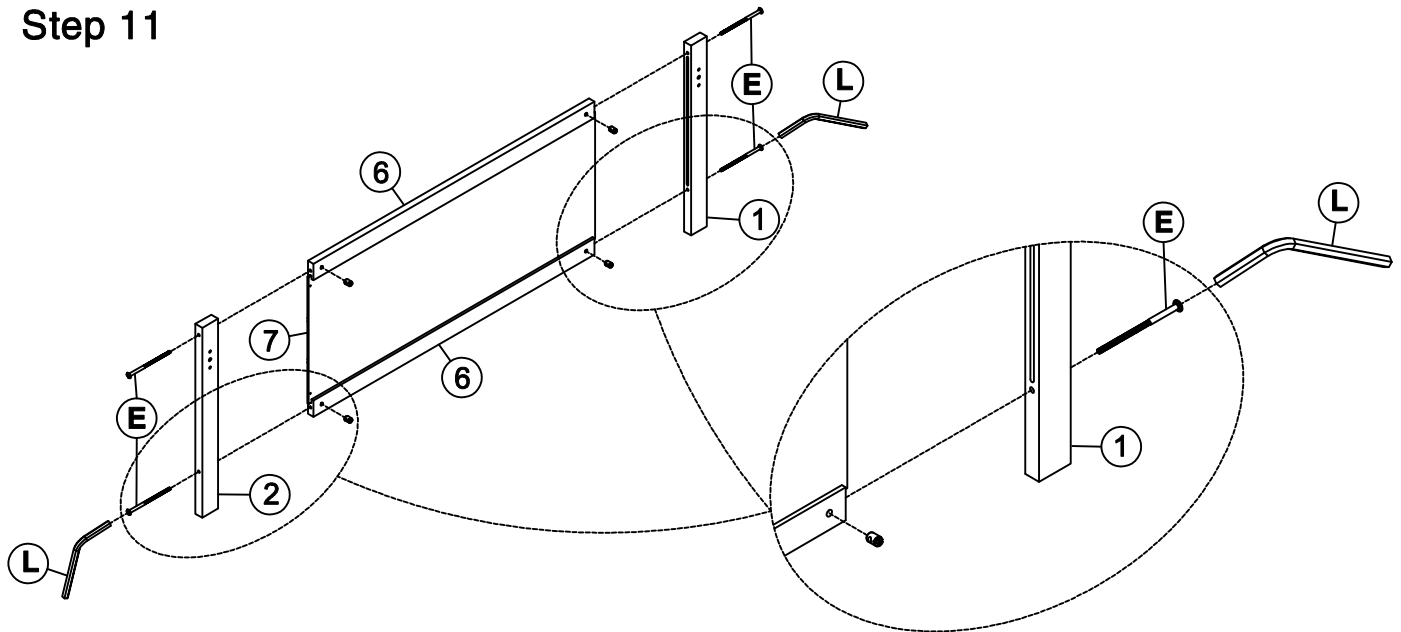

E	1/4x100		4PCS	L	4x58		1PC
----------	---------	---	------	----------	------	---	-----


Step 12

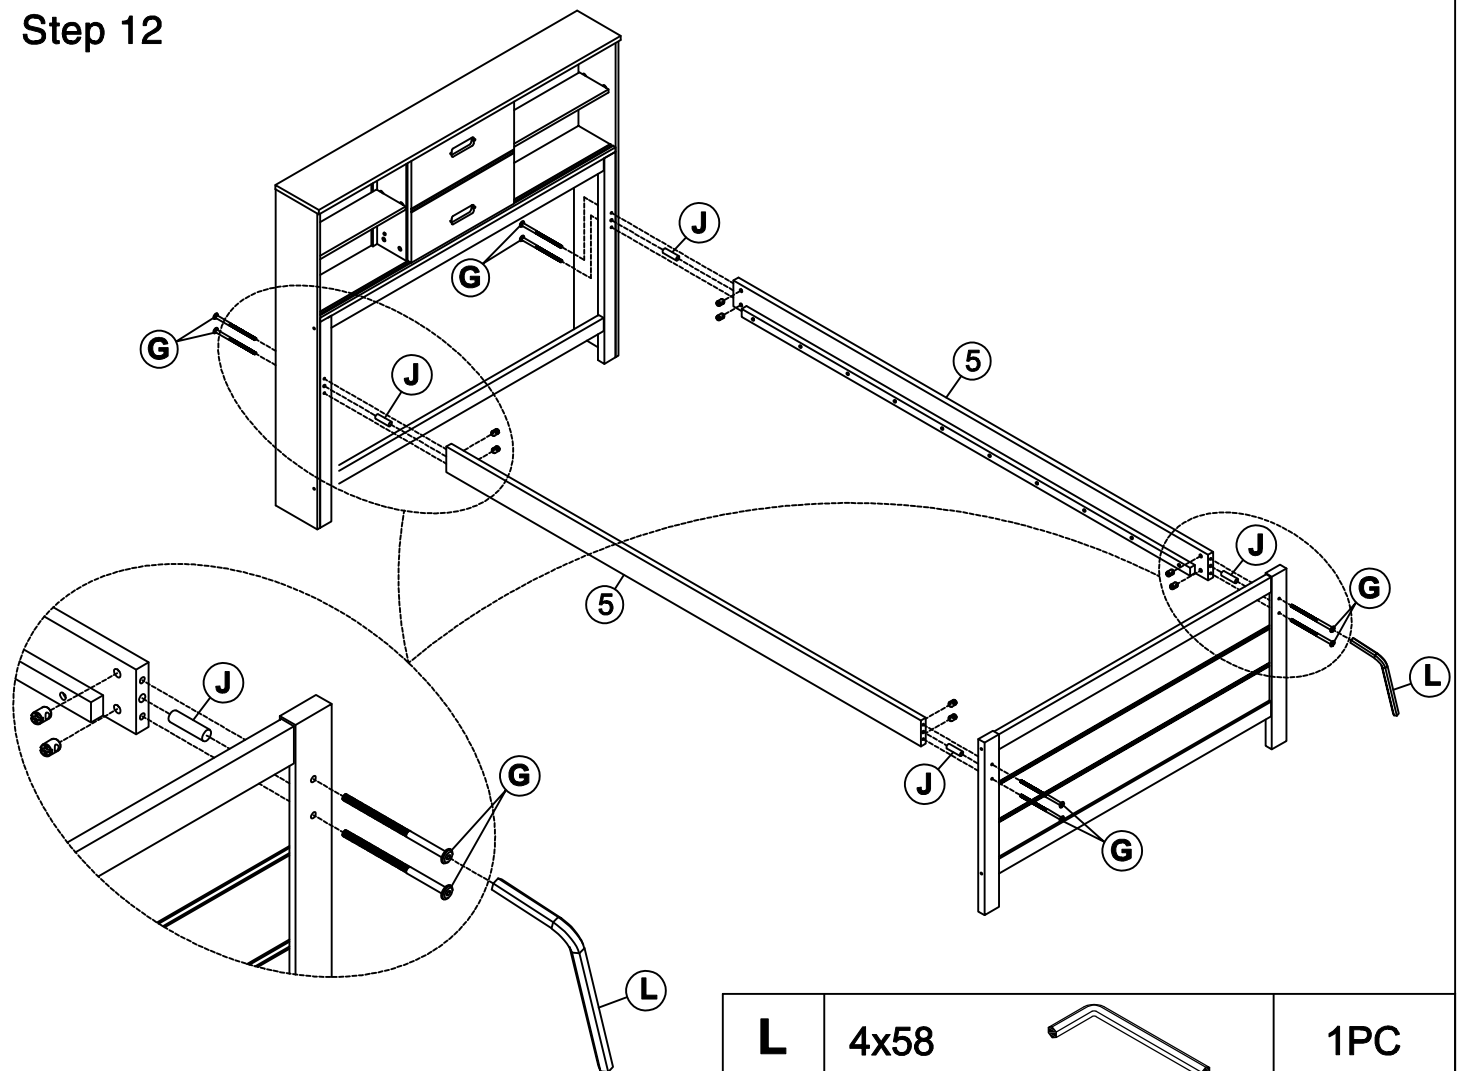

G	1/4x65		8PCS	J	Ø10x40		4PCS
----------	--------	---	------	----------	--------	---	------


ASSEMBLY INSTRUCTIONS

Step 13

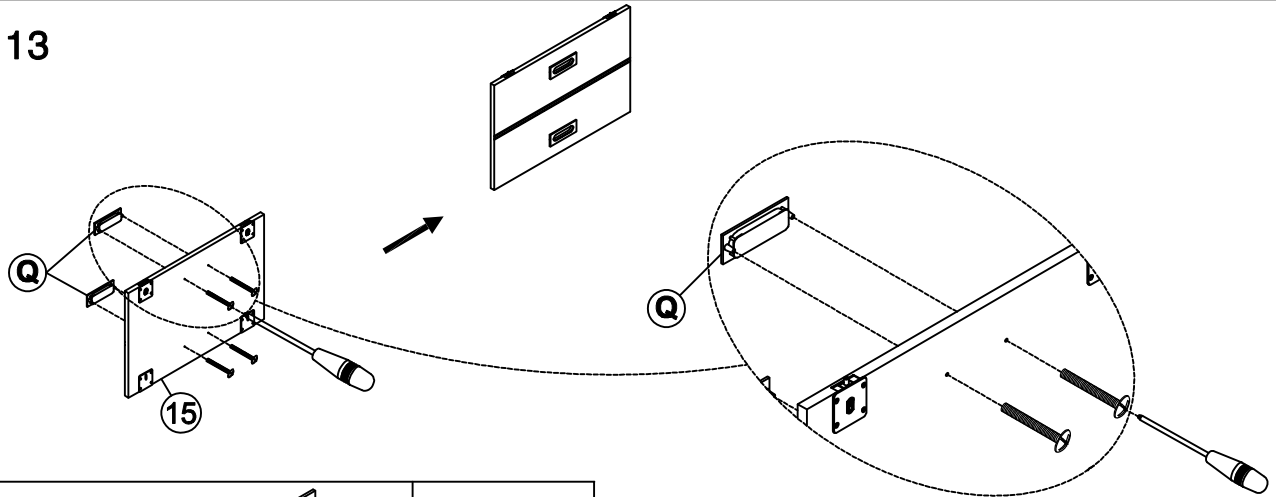


Q

105x39x12
M4x10




2PCS

Step 14

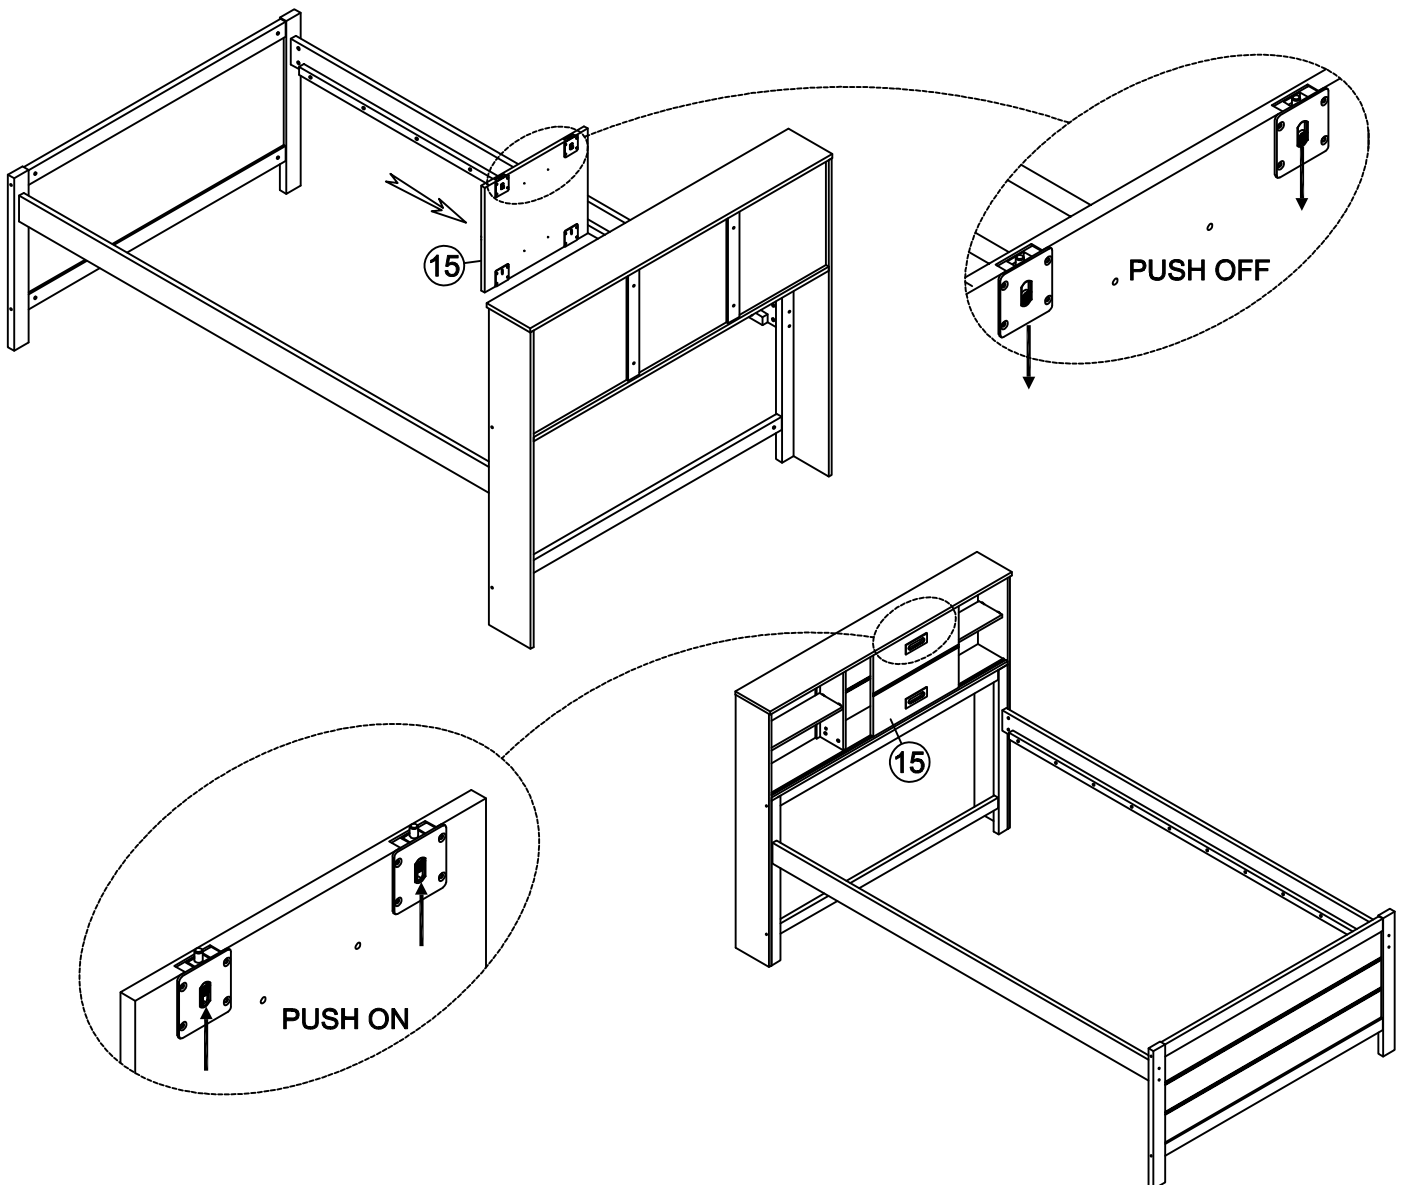

ASSEMBLY INSTRUCTIONS


Step 15

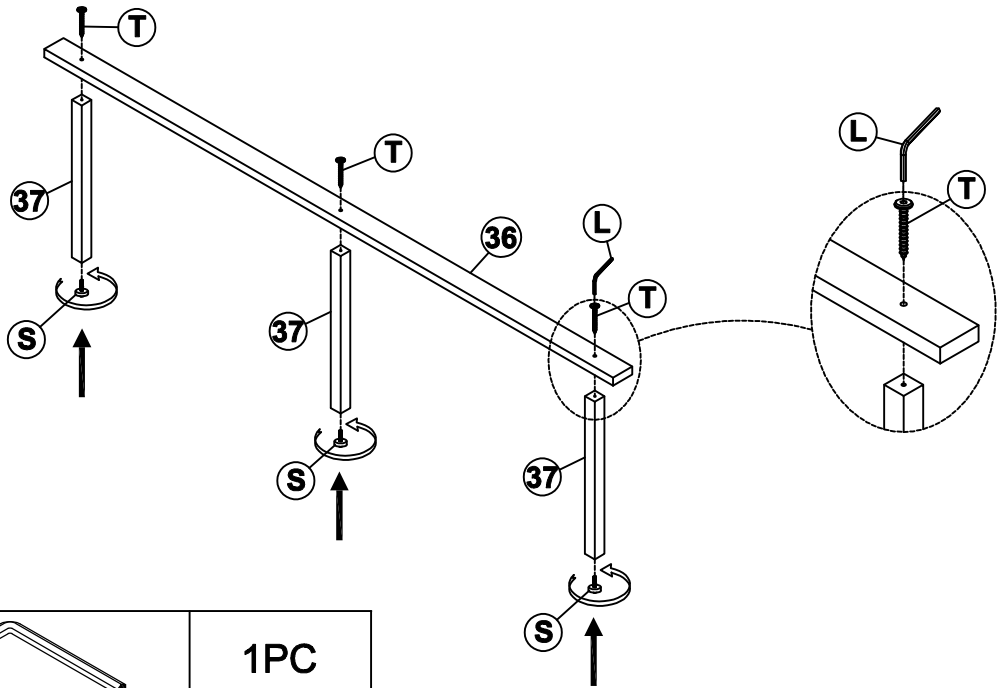

L	4x58		1PC			
S	1/4x25		3PCS	T	6.5x50	 3PCS

Step 16


First attach 2pcs part 35 to the front and end of the frame between headboard. Then attach the remaining part 35 equidistantly between headboard

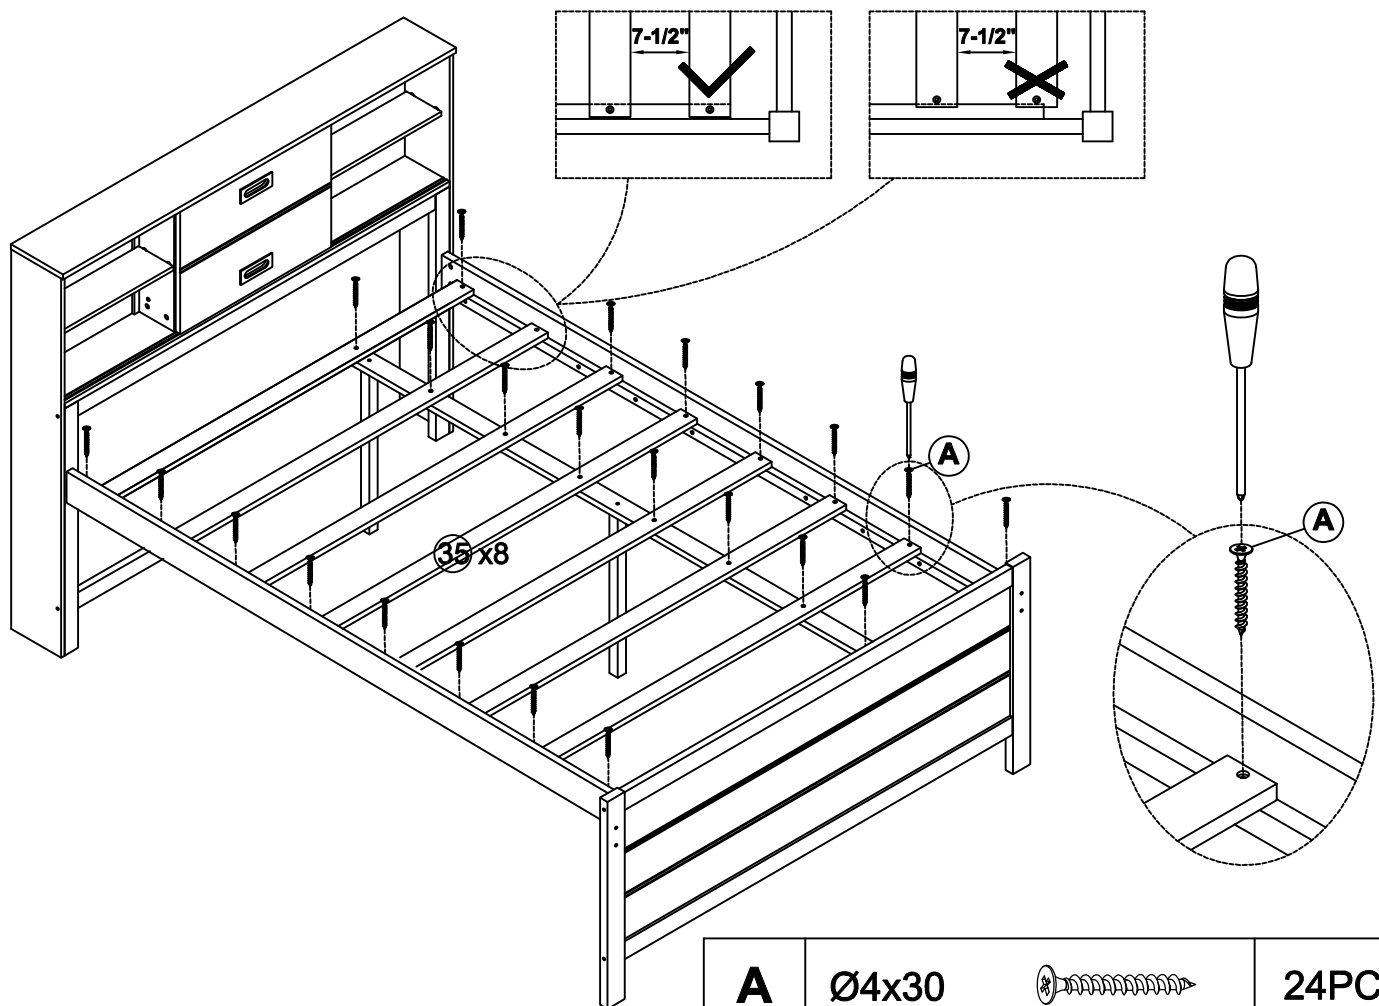

A	Ø4x30		24PCS
----------	-------	---	-------


ASSEMBLY INSTRUCTIONS

Step 17

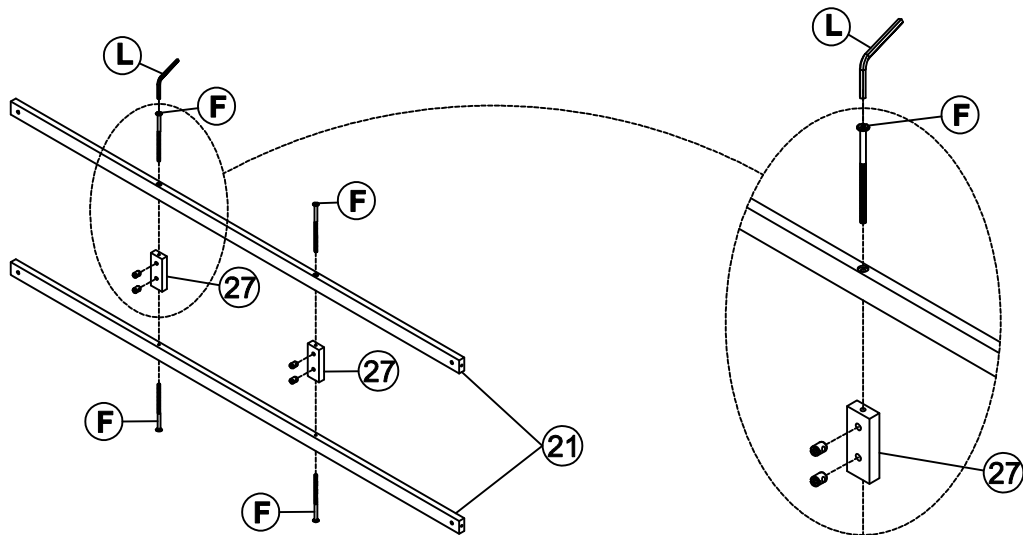


F	1/4x90			4PCS	L	4x58		1PC
----------	--------	---	---	------	----------	------	---	-----

Step 18

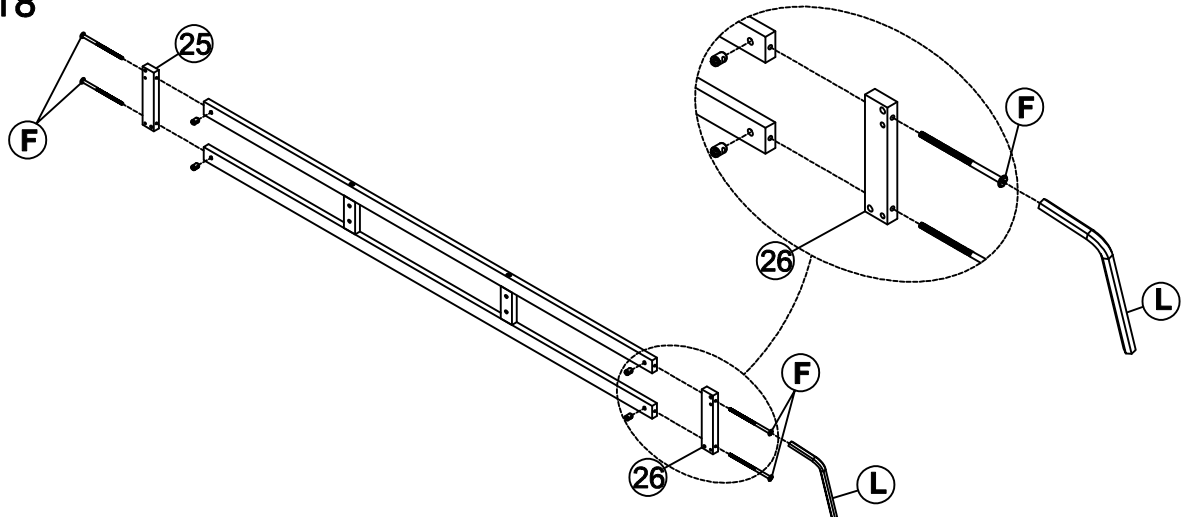

F	1/4x90			4PCS	L	4x58		1PC
----------	--------	---	---	------	----------	------	---	-----


Step 19

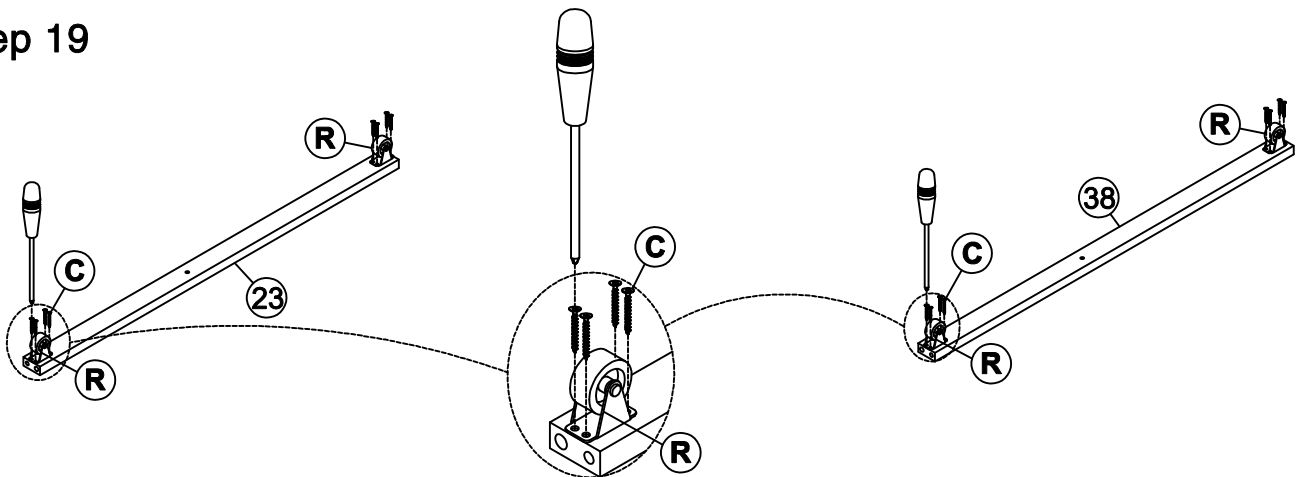

R	Ø38x46x38		4PCS	C	Ø4x15		16PCS
----------	-----------	---	------	----------	-------	---	-------


ASSEMBLY INSTRUCTIONS


Step 20

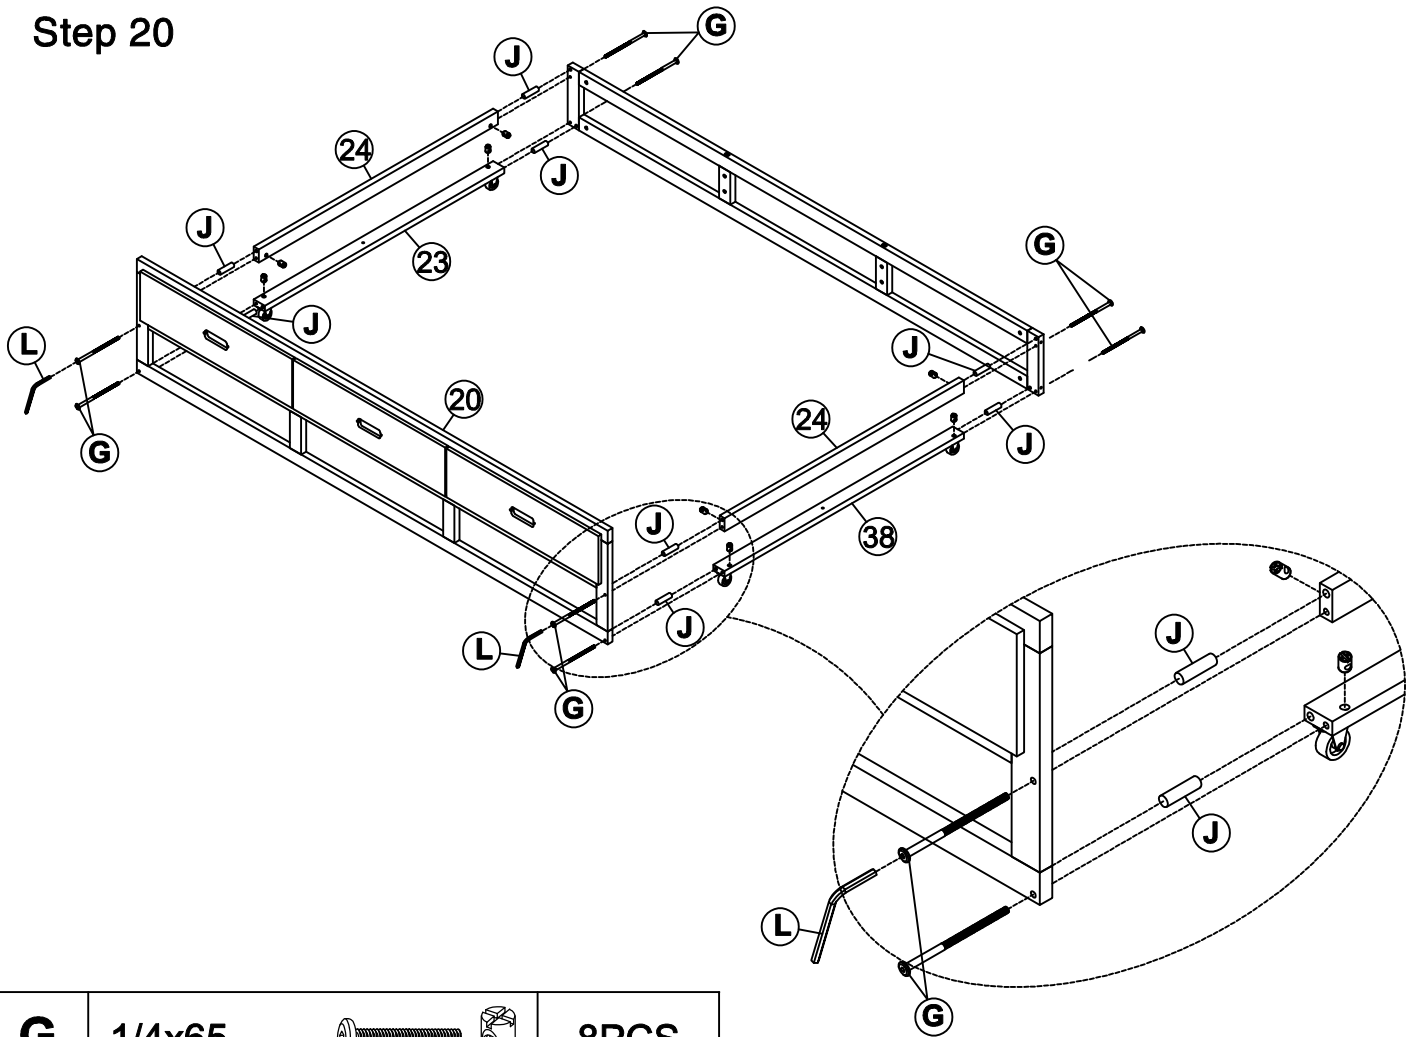

G	1/4x65		8PCS			
J	Ø10x40		8PCS	L	4x58	 1PC


Step 21

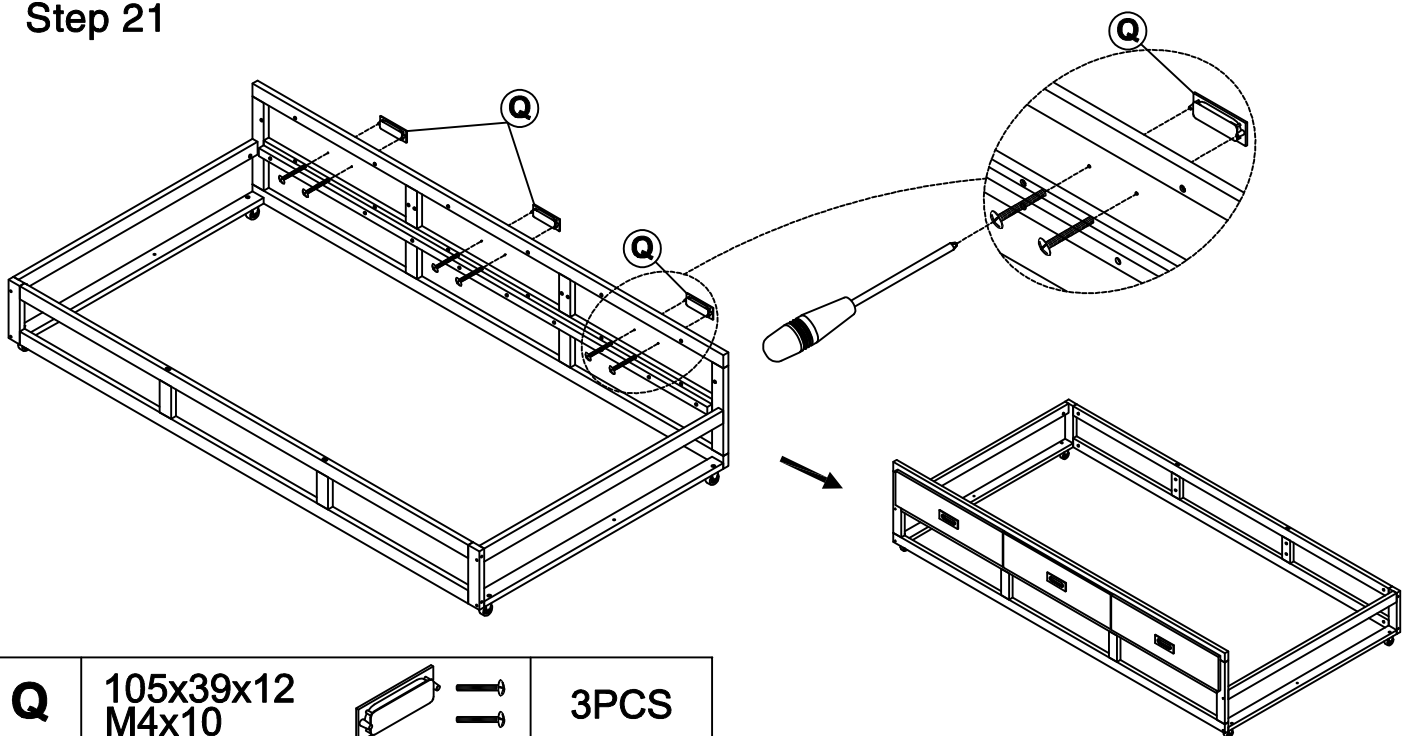

Q	105x39x12 M4x10		3PCS			
----------	--------------------	---	------	--	--	--


ASSEMBLY INSTRUCTIONS

Step 22

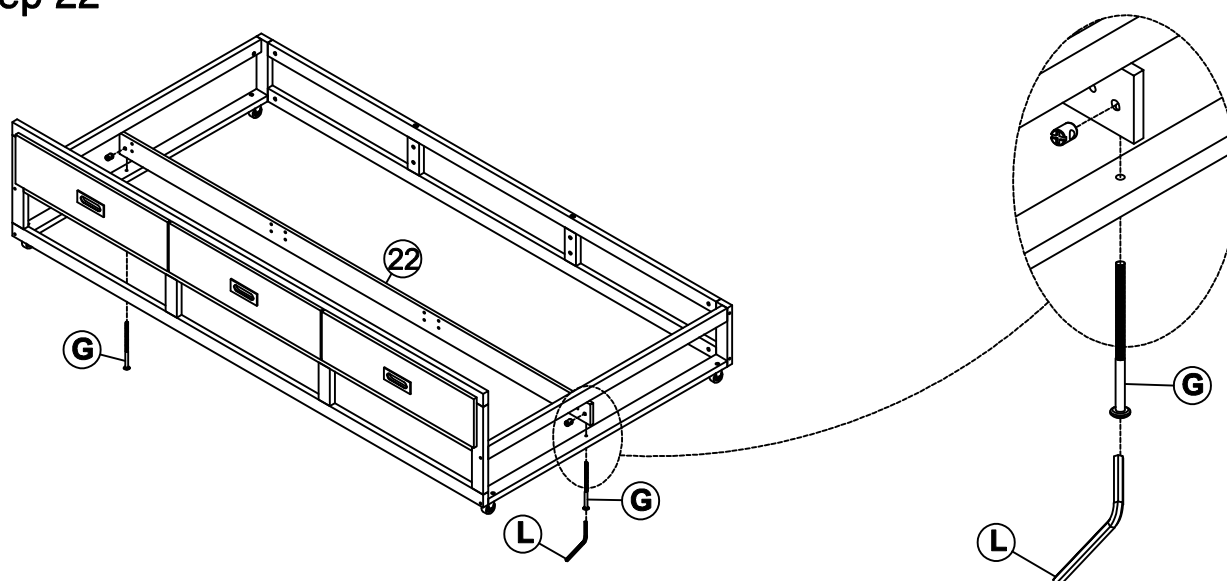

G	1/4x65			2PCS	L	4x58		1PC
----------	--------	---	---	------	----------	------	---	-----


Step 23

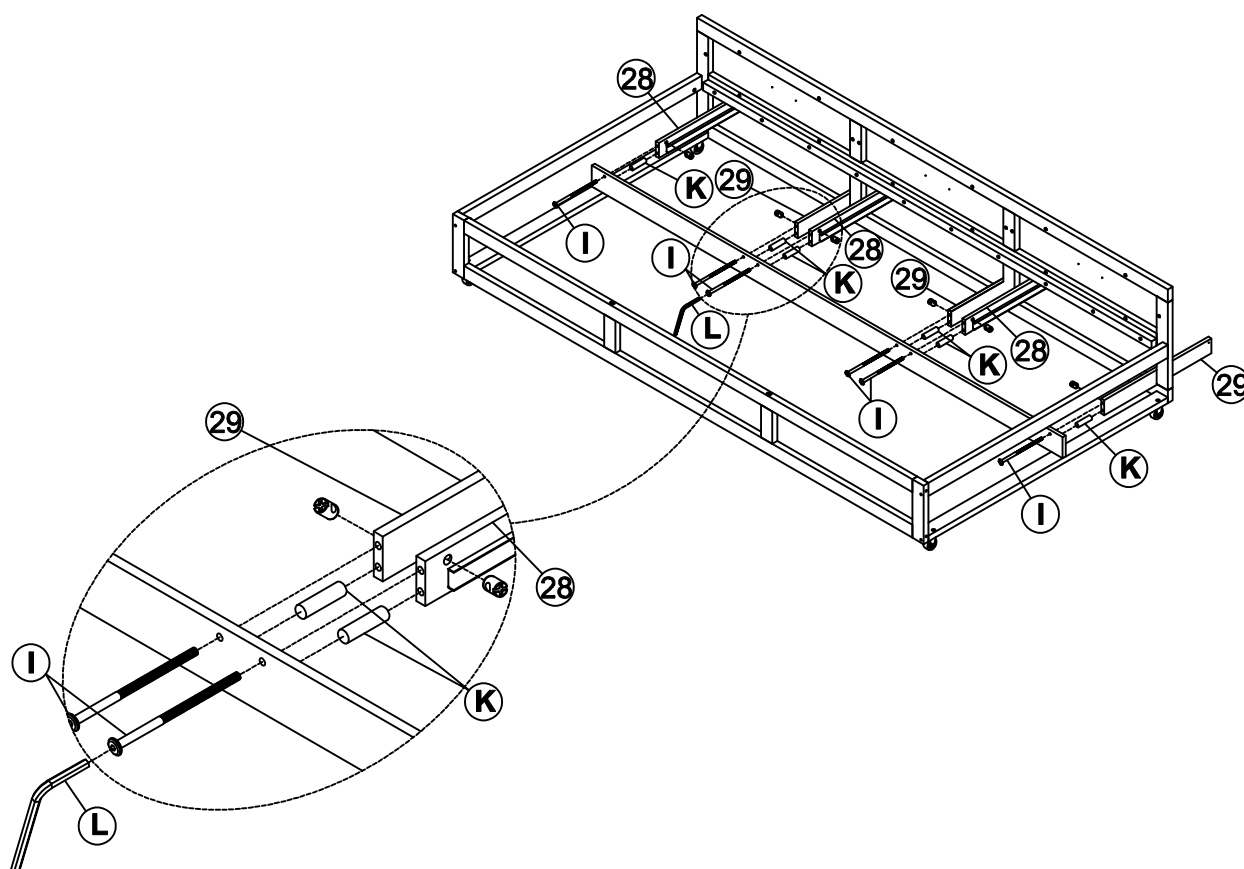

					K	Ø8x30		6PCS
I	1/4x55			6PCS	L	4x58		1PC


ASSEMBLY INSTRUCTIONS

Step 24

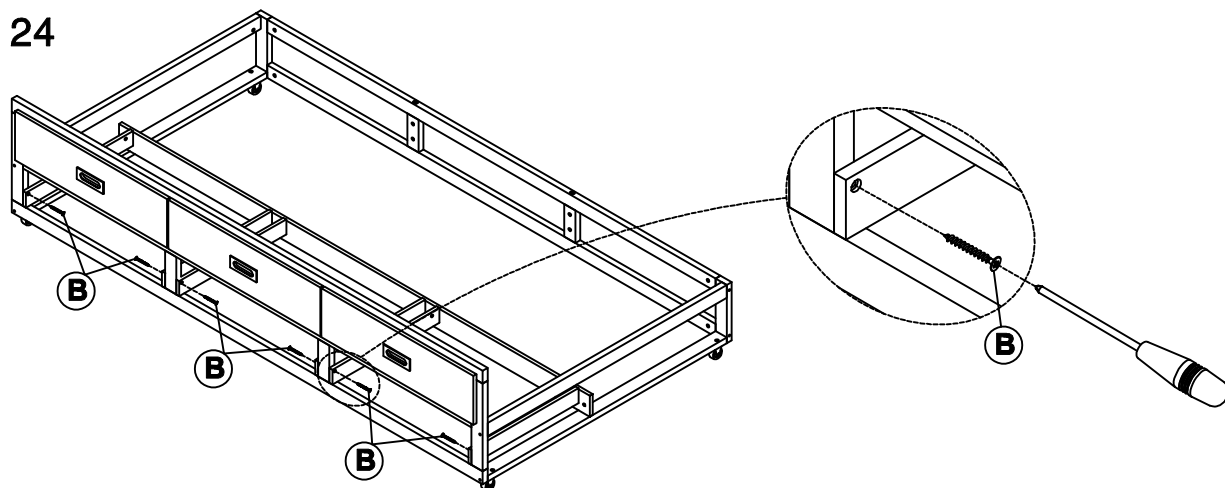


B Ø4x25  6PCS

Step 25

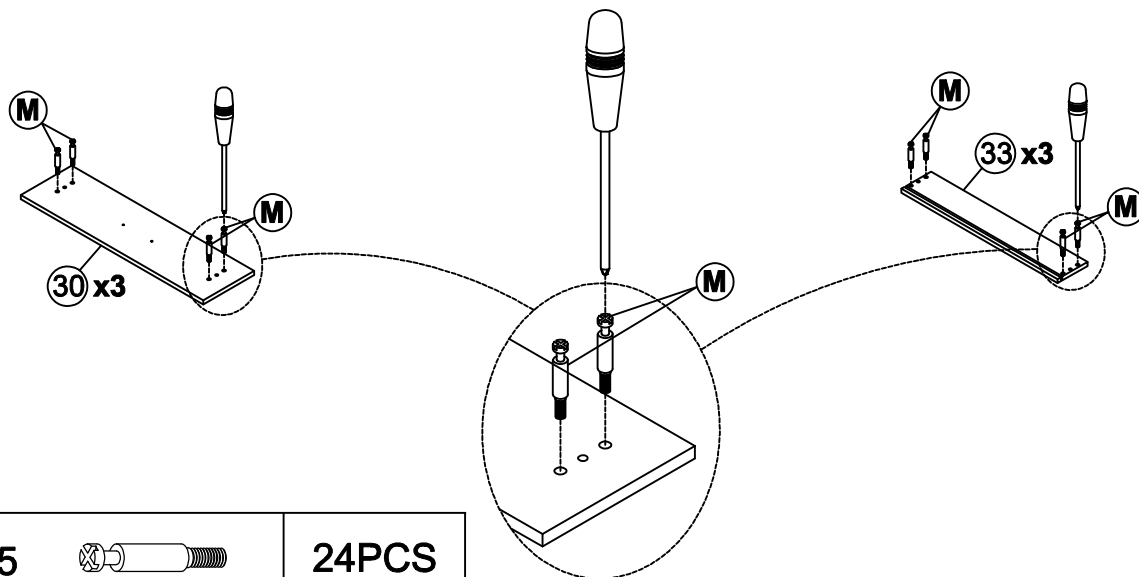

M Ø 6.5x35  24PCS


Step 26

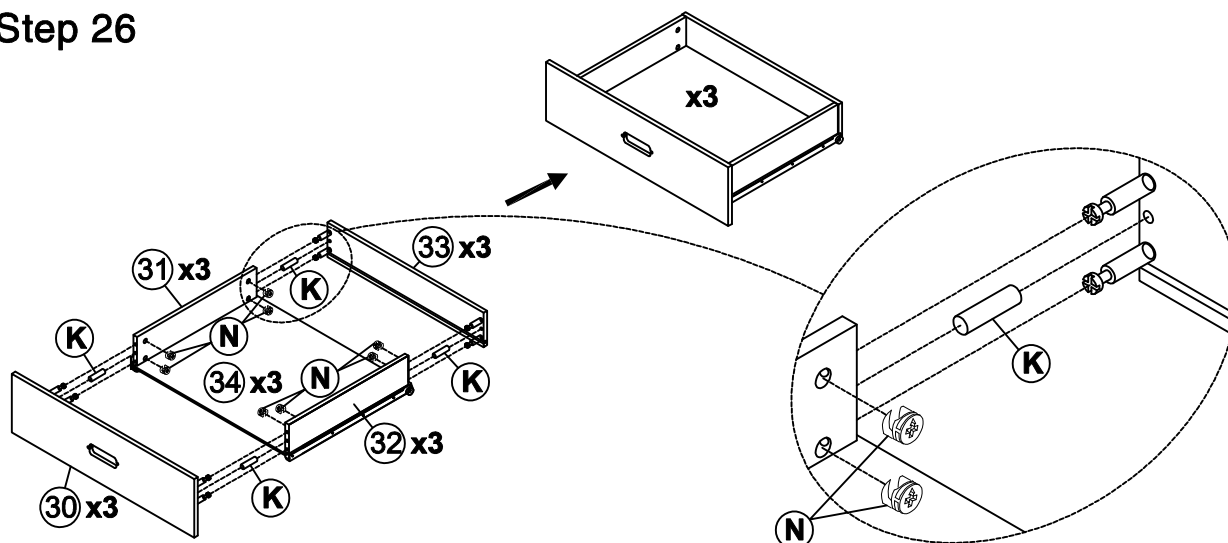

K Ø8x30  12PCS **N** Ø12x10  24PCS

ASSEMBLY INSTRUCTIONS

Step 27

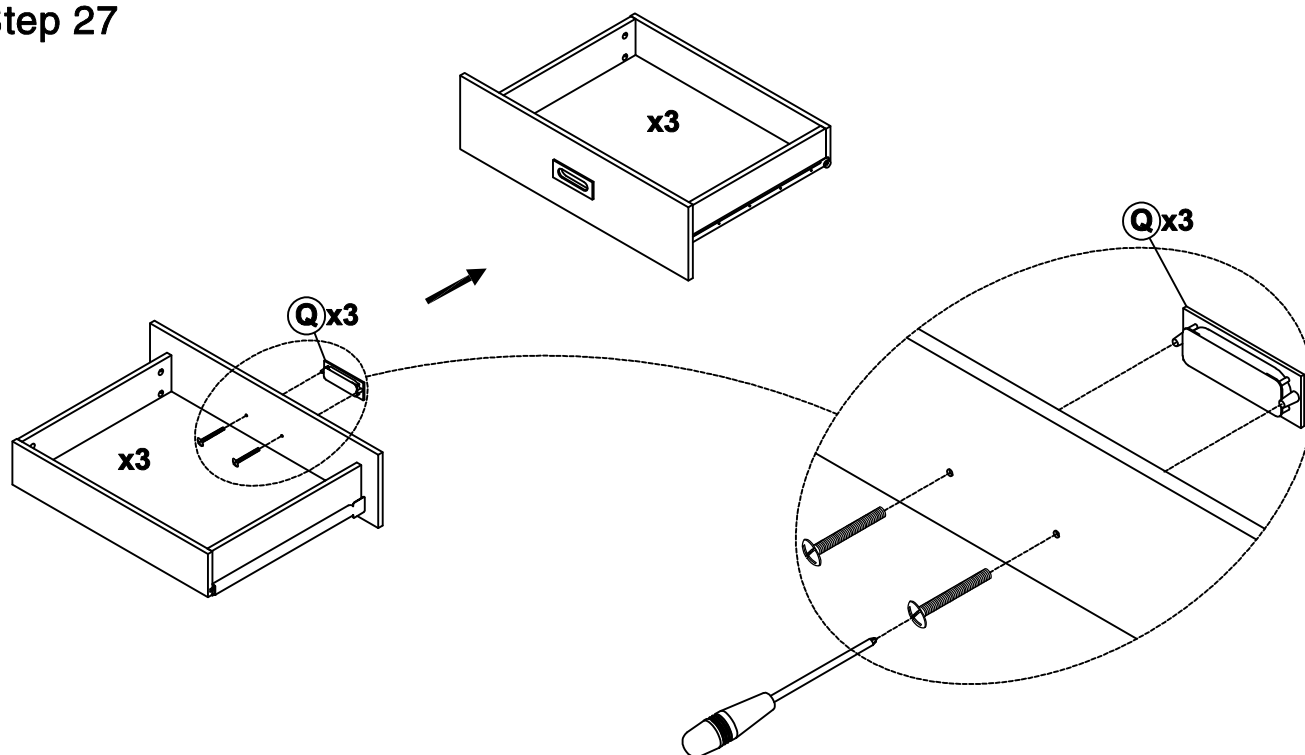


Q

105x39x12
M4x10



3PCS





Step 28

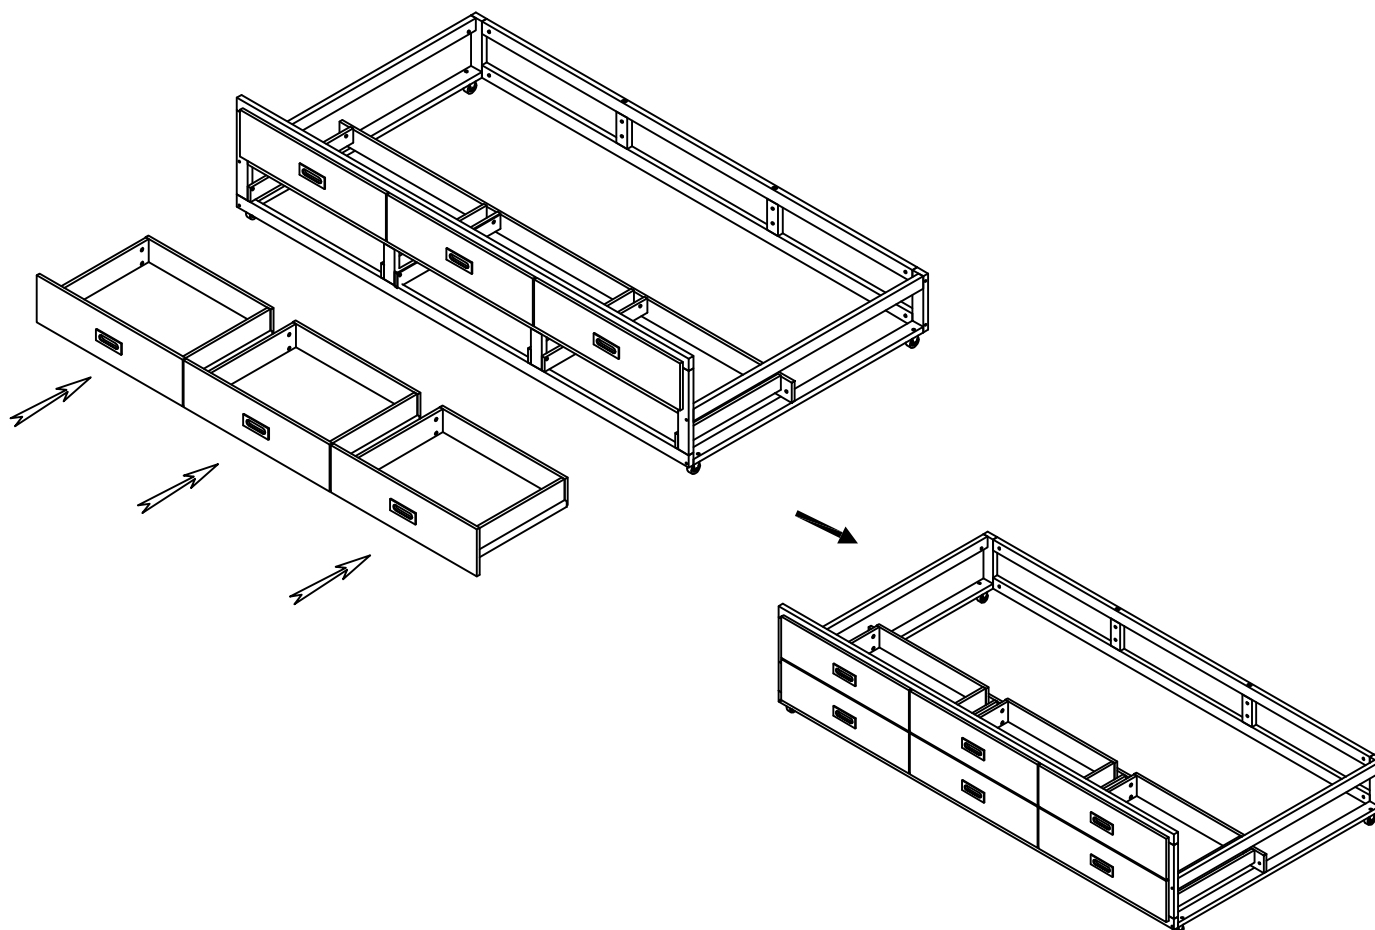

ASSEMBLY INSTRUCTIONS

Step 29

Part 11 equidistantly between headboard.

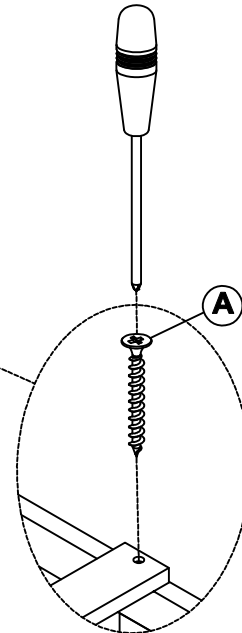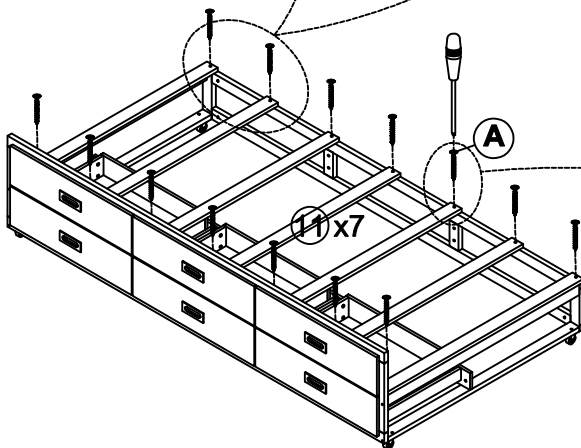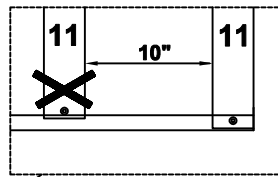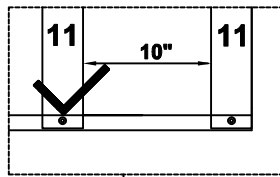

A

Ø4x30



14PCS

Step 30

