
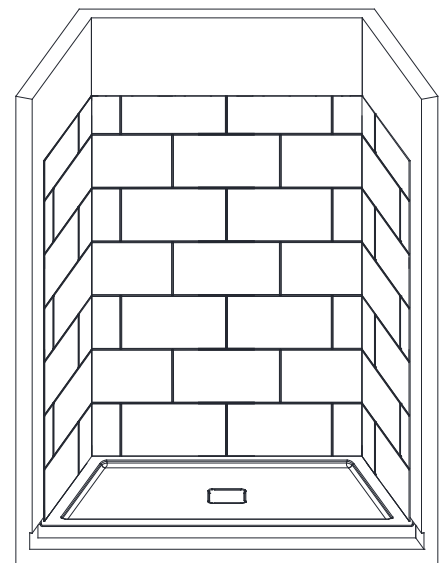
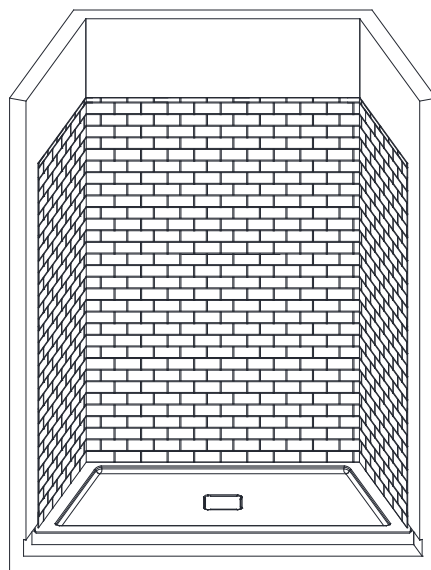


INSTALLATION MANUAL

GUIDE D'INSTALLATION

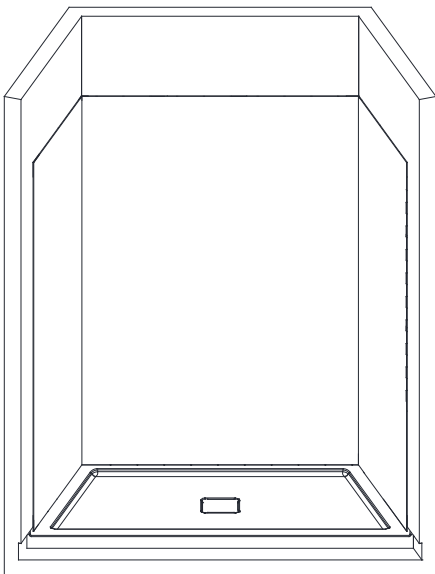

PBA306060

PBA326060

PBA366060

PBA306072

PBA326072

PBA366072

PBA306096

PBA326096-1MW/1MG

PBA366096-1MW/1MG

PBB306060

PBB326060

PBB366060

PBB306072

PBB326072

PBB366072

PBB306096

PBB326096-1

PBB366096-1

PBC306060

PBC326060

PBC366060

PBC306072

PBC326072

PBC366072

PBC306096


PBC326096-1

PBC366096-1


SPECIFICATION. / SPÉCIFICATION.

Model Modèle	Dimensions*		
	W	L	H
PBA306060/PBA326060/PBA366060/ PBA306072/PBA326072/PBA366072/ PBA306096/PBA326096-1MW/1MG/ PBA366096-1MW/1MG	30"~36" [762~914mm]	60" [1524mm]	60"~104" [1524~2642mm]
PBB306060/PBB326060/PBB366060/ PBB306072/PBB326072/PBB366072/ PBB306096/PBB326096-1/PBB366096-1	30"~36" [762~914mm]	60" [1524mm]	60"~104" [1524~2642mm]
PBC306060/PBC326060/PBC366060/ PBC306072/PBC326072/PBC366072/ PBC306096/PBC326096-1/PBC366096-1	30"~36" [762~914mm]	60" [1524mm]	60"~104" [1524~2642mm]

* Tolérance sur les dimensions: $\pm 1/4"$ [.6 cm]
Tolerance on dimensions: $\pm 1/4"$ [.6 cm]

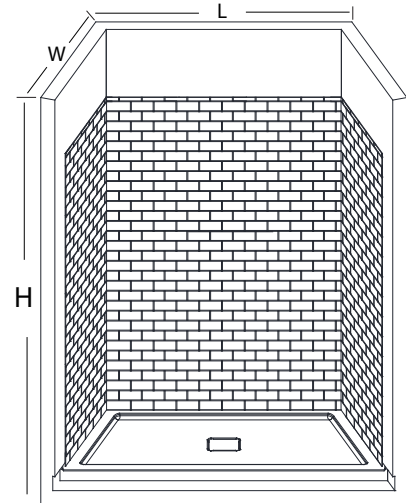


TOOLS AND MATERIALS REQUIRED. / OUTILS ET MATÉRIAUX REQUIS.

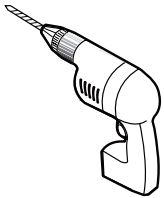

DRILL
PERÇEUSE




DRILL BITS 3/16"
MÈCHE 3/16"

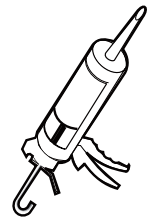


SILICONE
SCÉLLANT



PENCIL
CRAYON

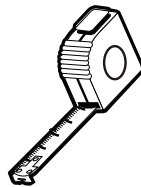


TAPE MEASURE
RUBAN À MESURER

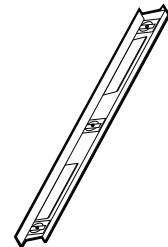

LEVEL
NIVEAU


Elements / Pièces:

A1

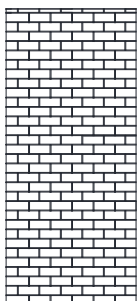


1X

B

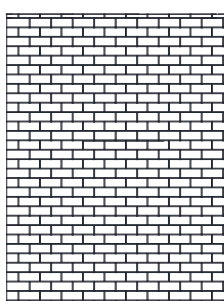


1X


A2

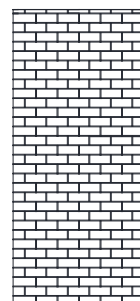


1X

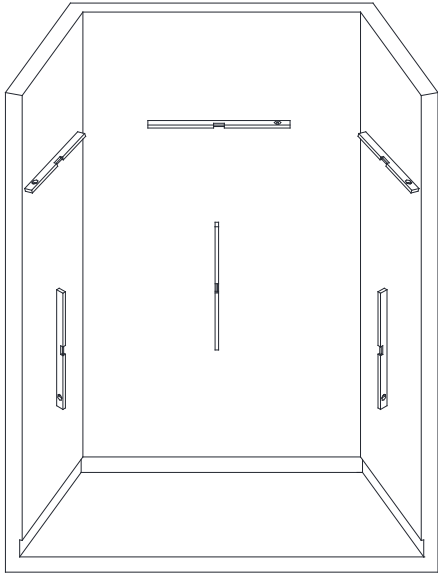


Step 1. Inspect the installation wall to confirm it is level.

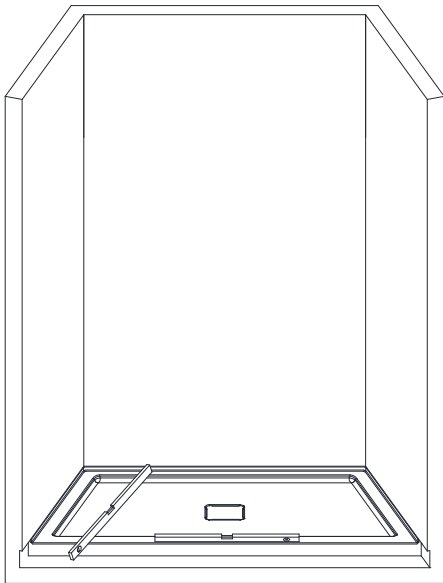


Step 2. Adjust the shower base or bathtub to ensure the surface is level.

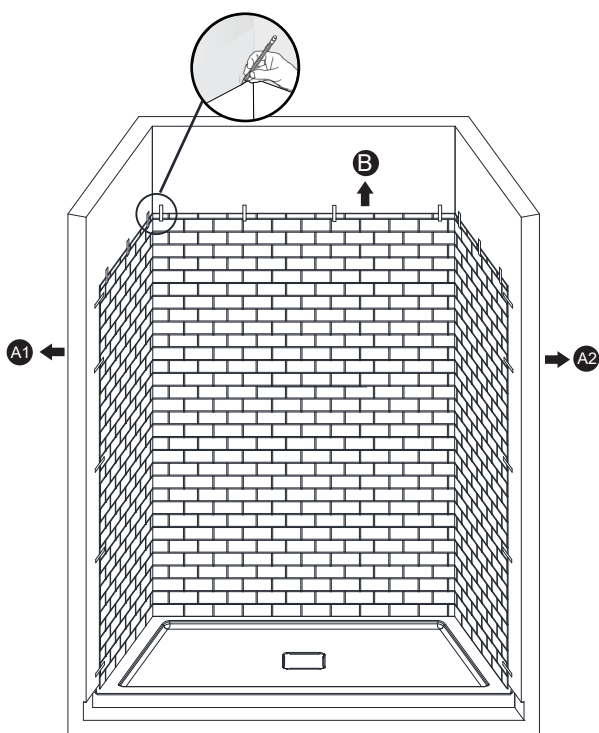


Step 3. Trial-fit the wall panel on the wall, align the gaps, check if the dimensions match, then draw positioning horizontal lines above.

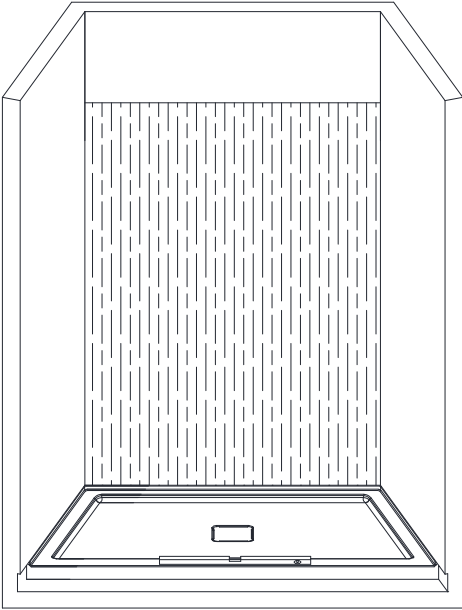

Step 4. Install the front wall panel first, applying adhesive to the front surface.

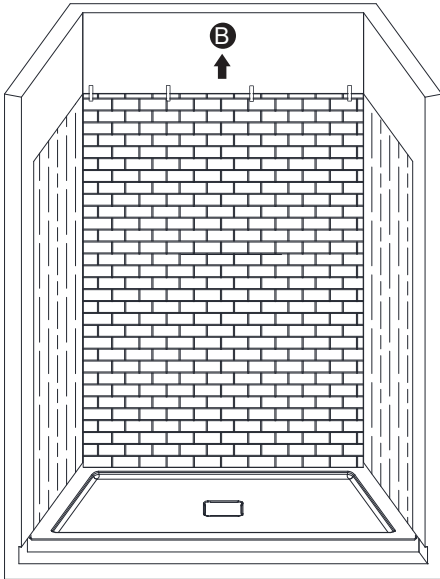

Step 5. Press the wall panel firmly into place, using masking tape on top to assist in securing it tightly.

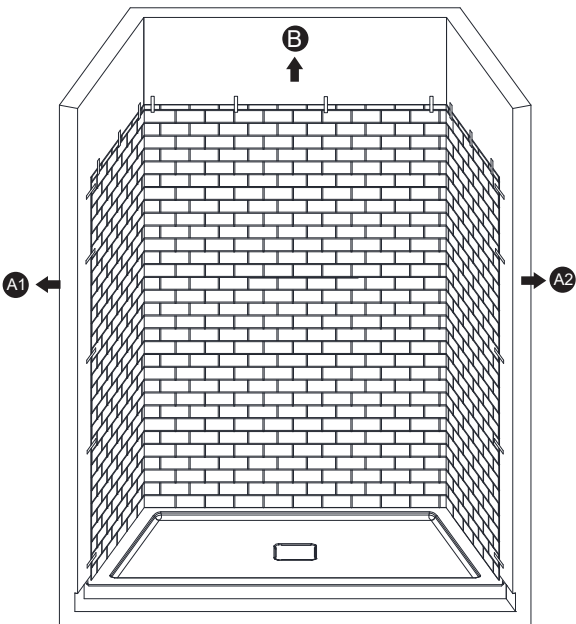


Step 6. Repeat steps 5 and 6 to attach the side panels.



24 HOURS

Allow 24hours for silicone to dry before use

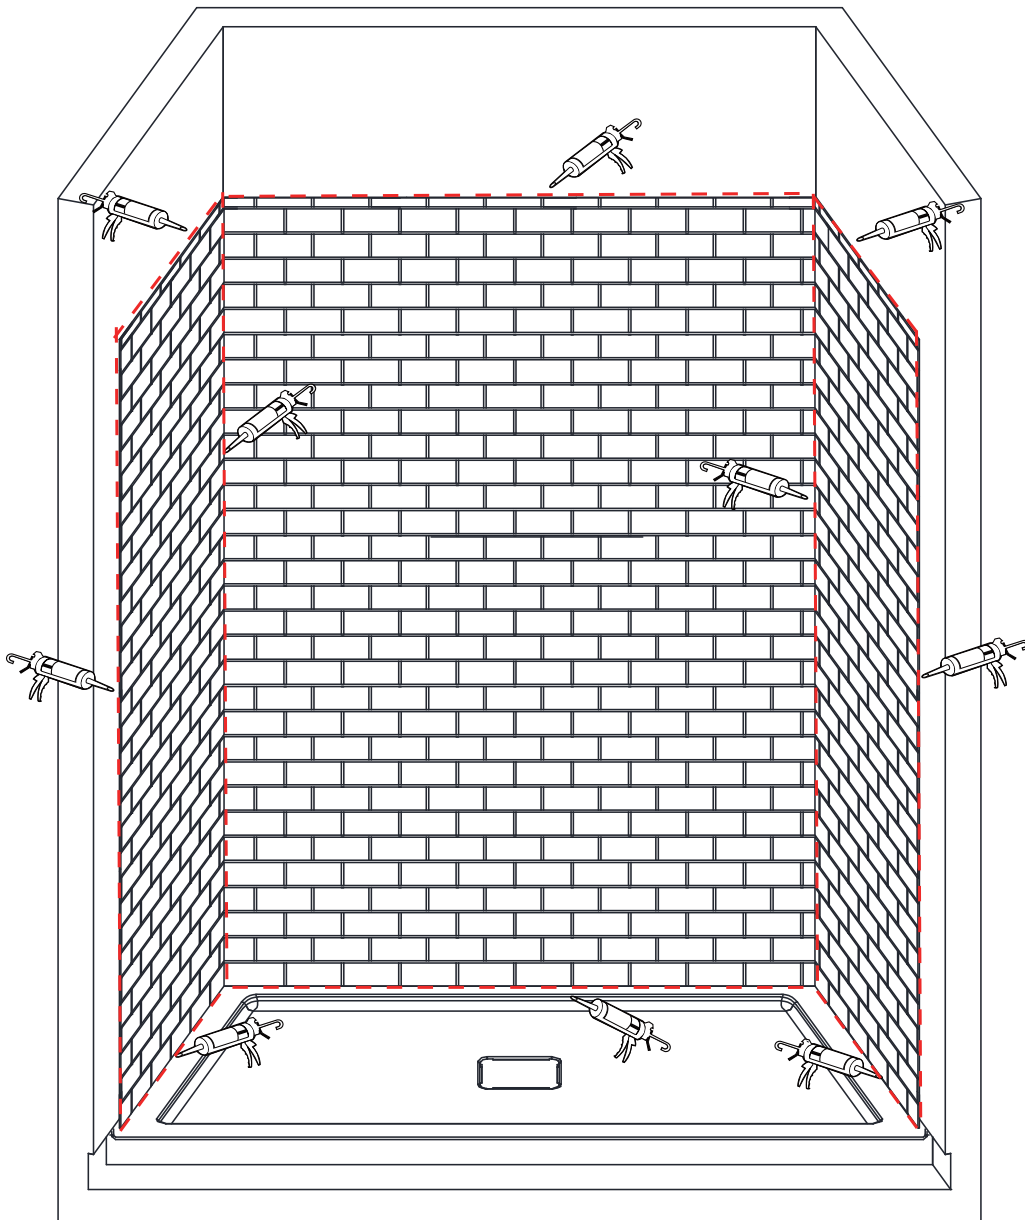

Step 7. Apply silicone sealant to the seams and joints.