HOW TO ASSEMBLY :-

ITEM # UPT-350391

Tools - Power Drill, Screwdriver

The Product



Guidelines : Configure all part as in Below List,

a. 12 Bells (4 x Set of 3)
b. 3 Iron Hooks
c. Pipe
d. Set of 6 Rawl Plugs & 6 Screw bolts

STEP # 1

Combine three pipes into one, As in Fig 1.1

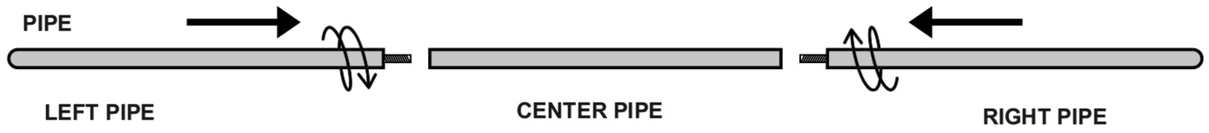


Fig 1.1

STEP # 2

Use the pipe first for the marks on the wall to mount the HOOKS as in Fig 1.2

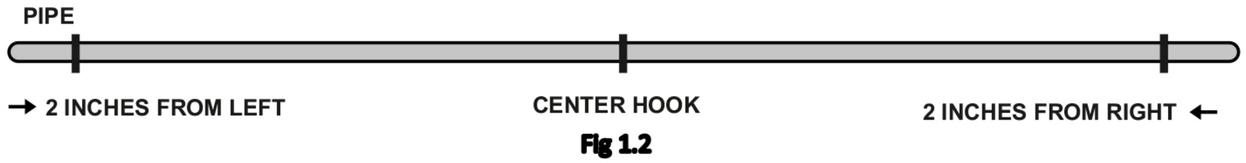


Fig 1.2

STEP # 3

Drill Hole and insert Rawl Plugs then place hanger and mount with screw as in below Fig 1.3

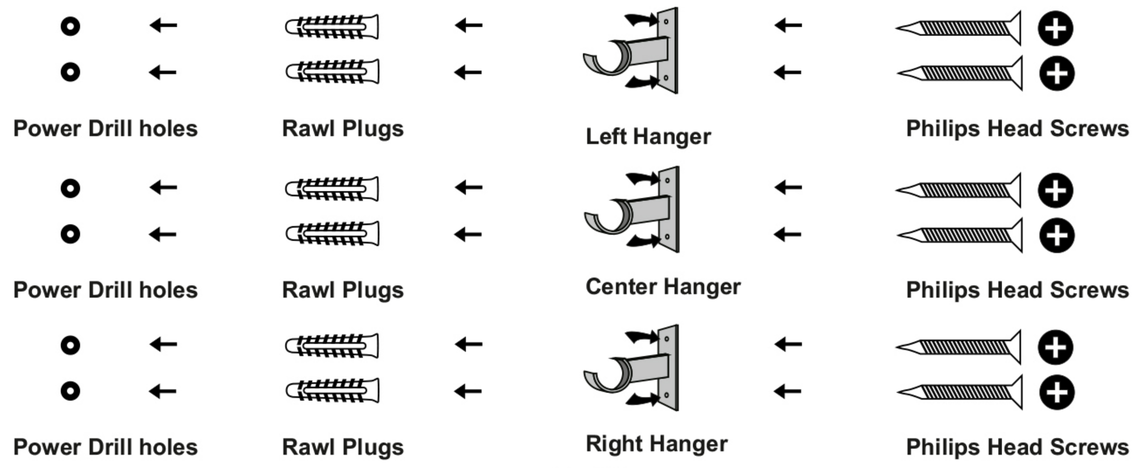


Fig 1.3

STEP # 4

Insert the pipe in the hooks as in Fig 1.4




Fig 1.4

STEP # 5

Place each Decorative Bells to the place as directed parts as directed below Fig 1.5

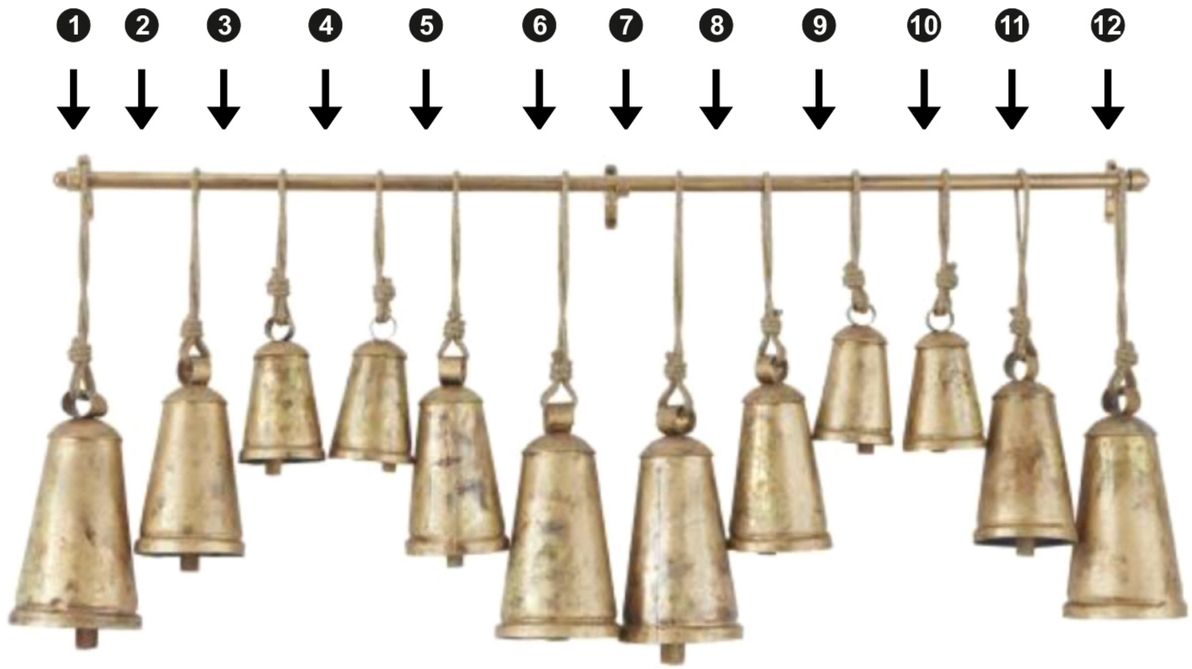


Fig 1.5