


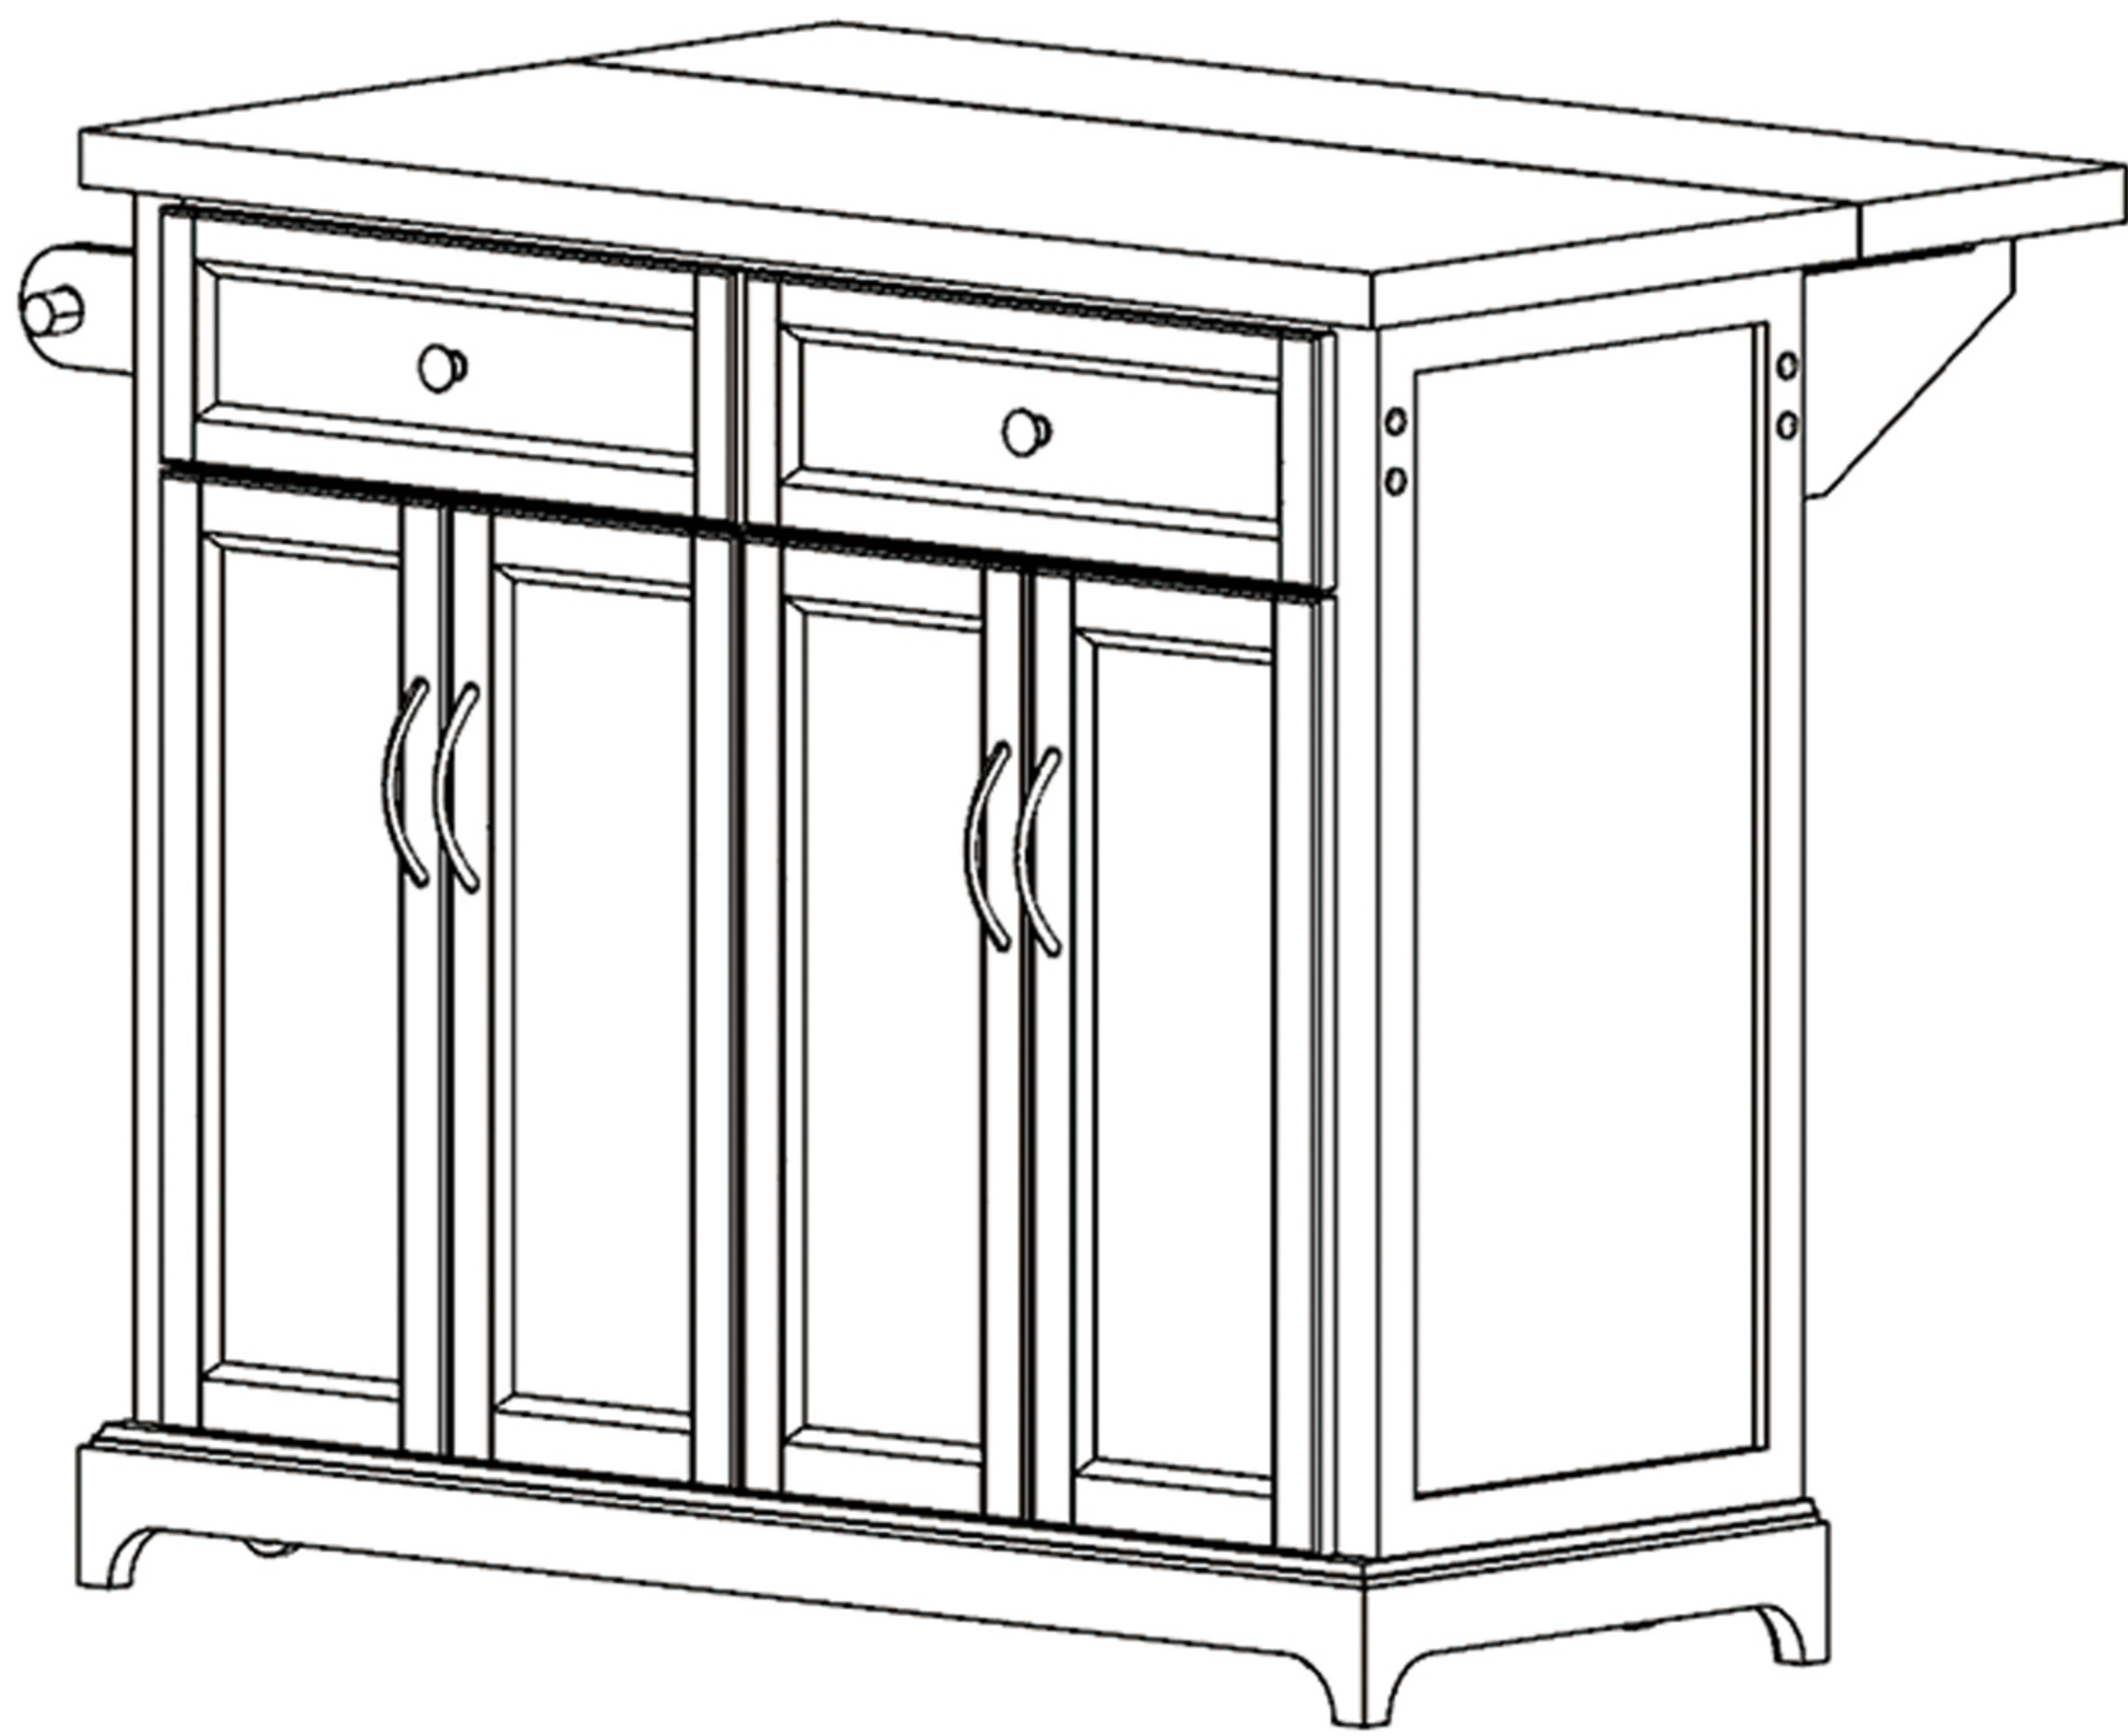


2024-01

FKW71






a

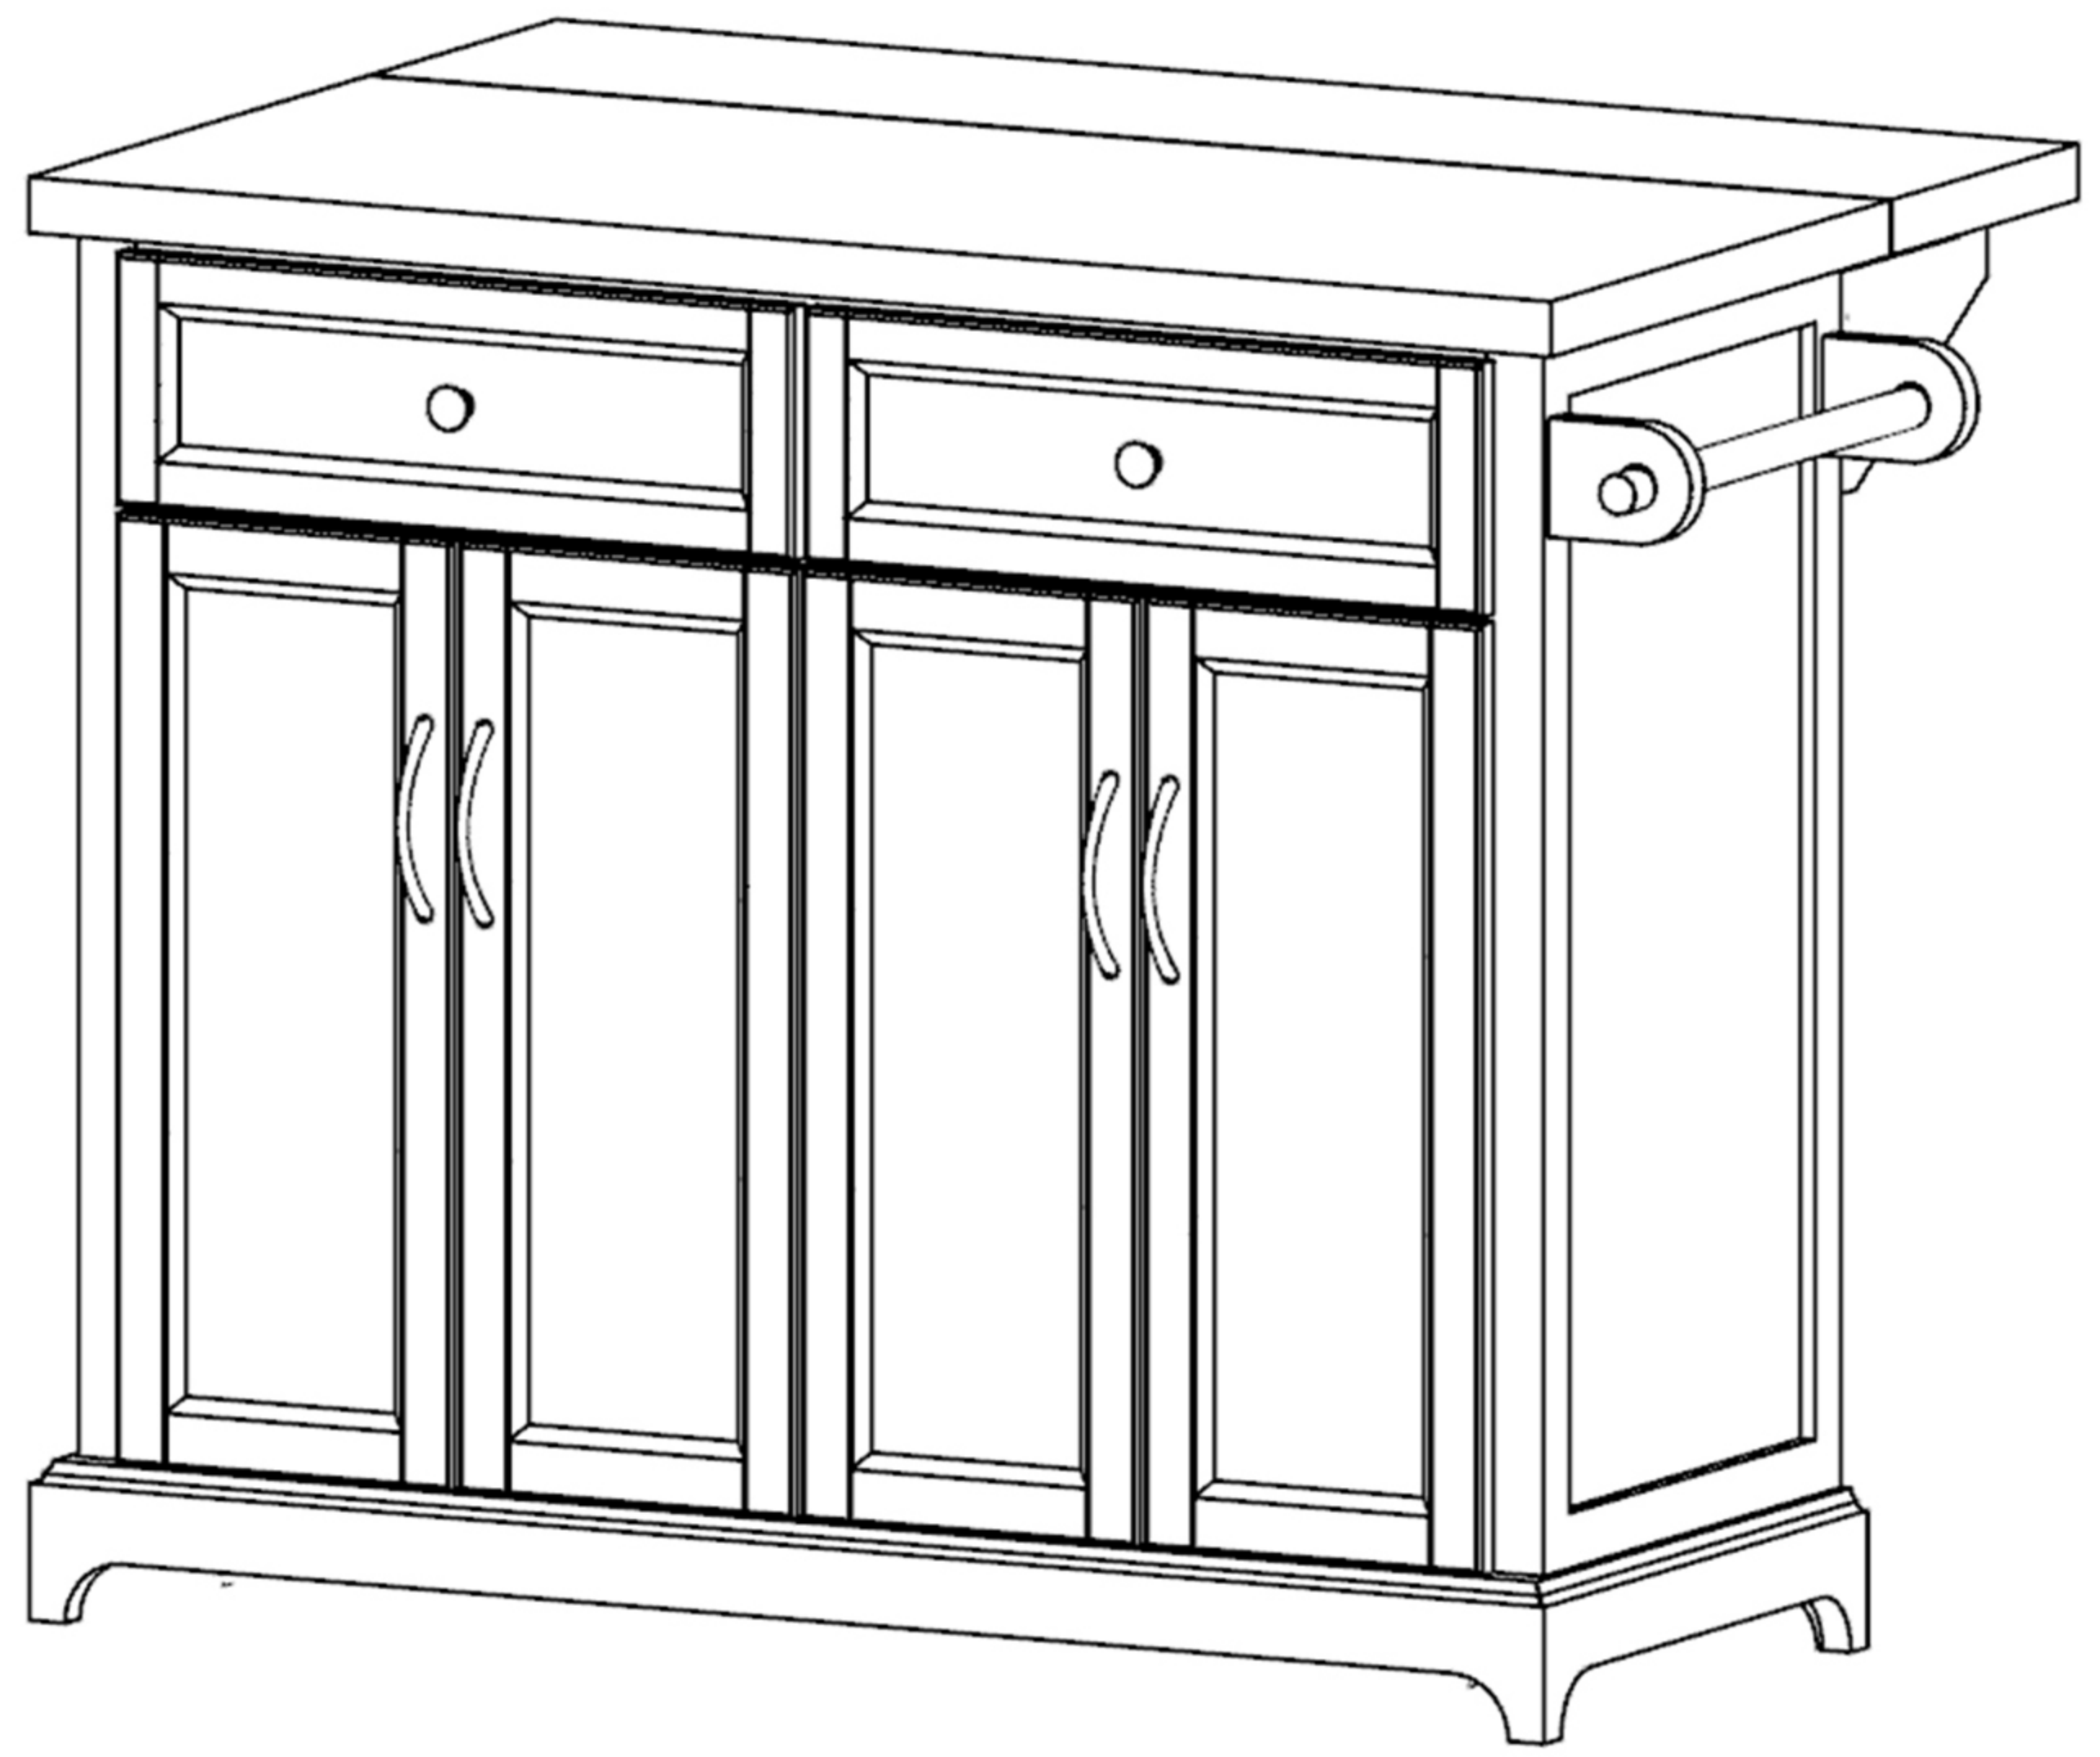


b


TOOLS:

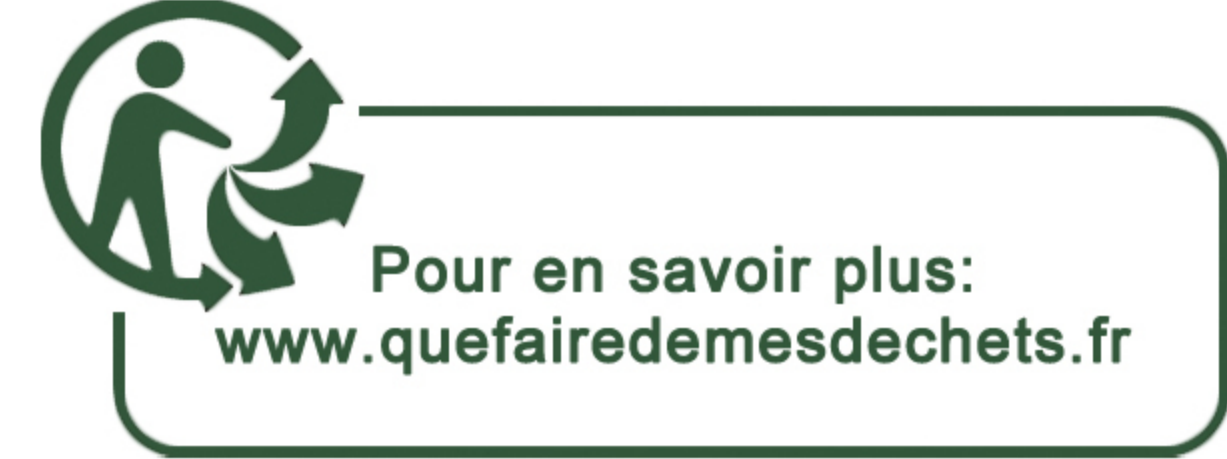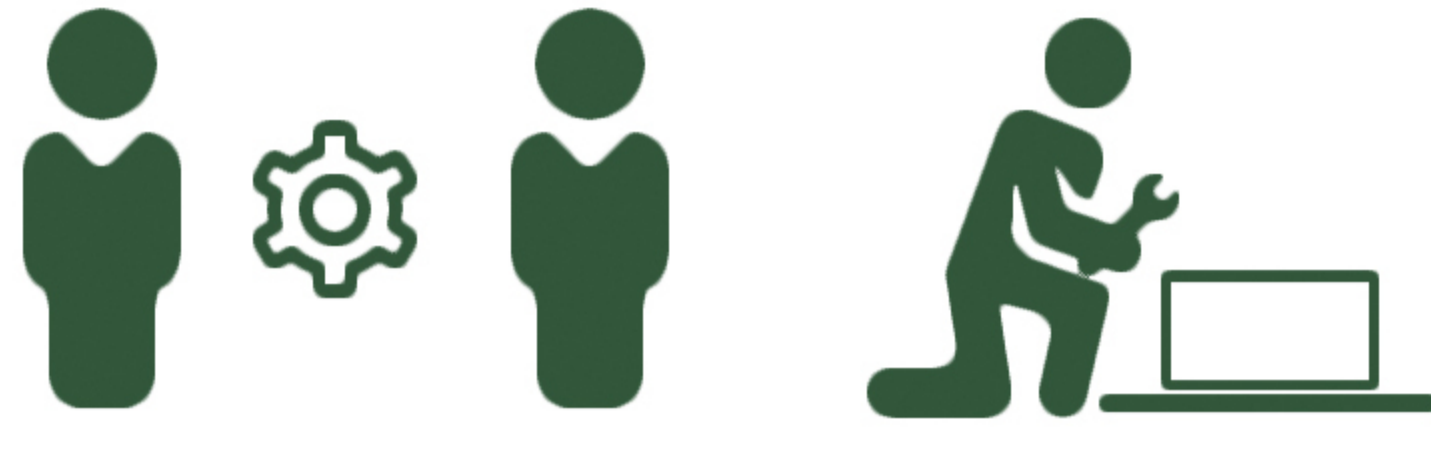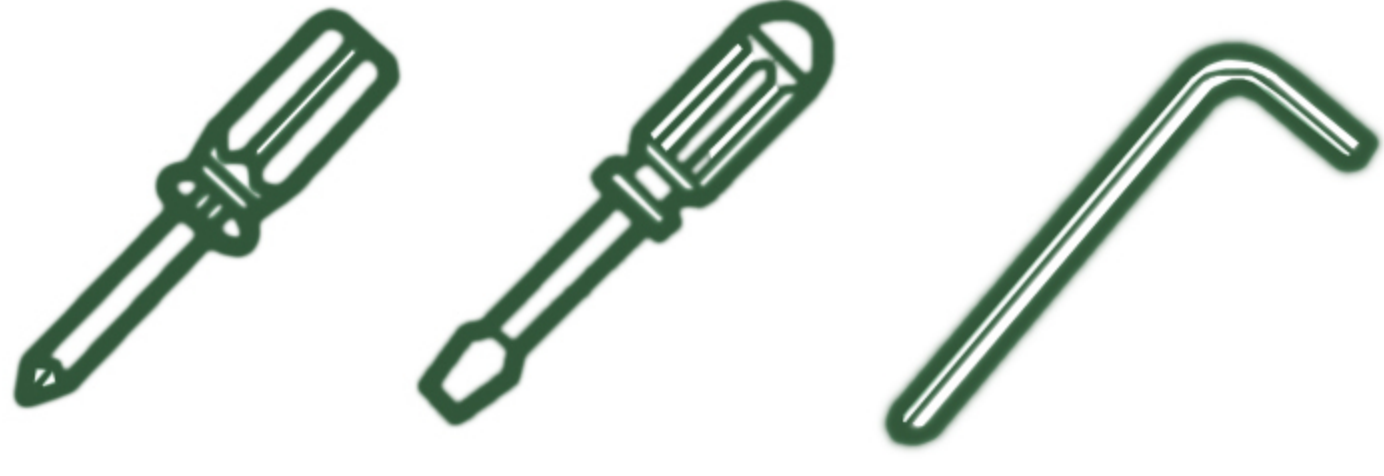


PACKAGING A

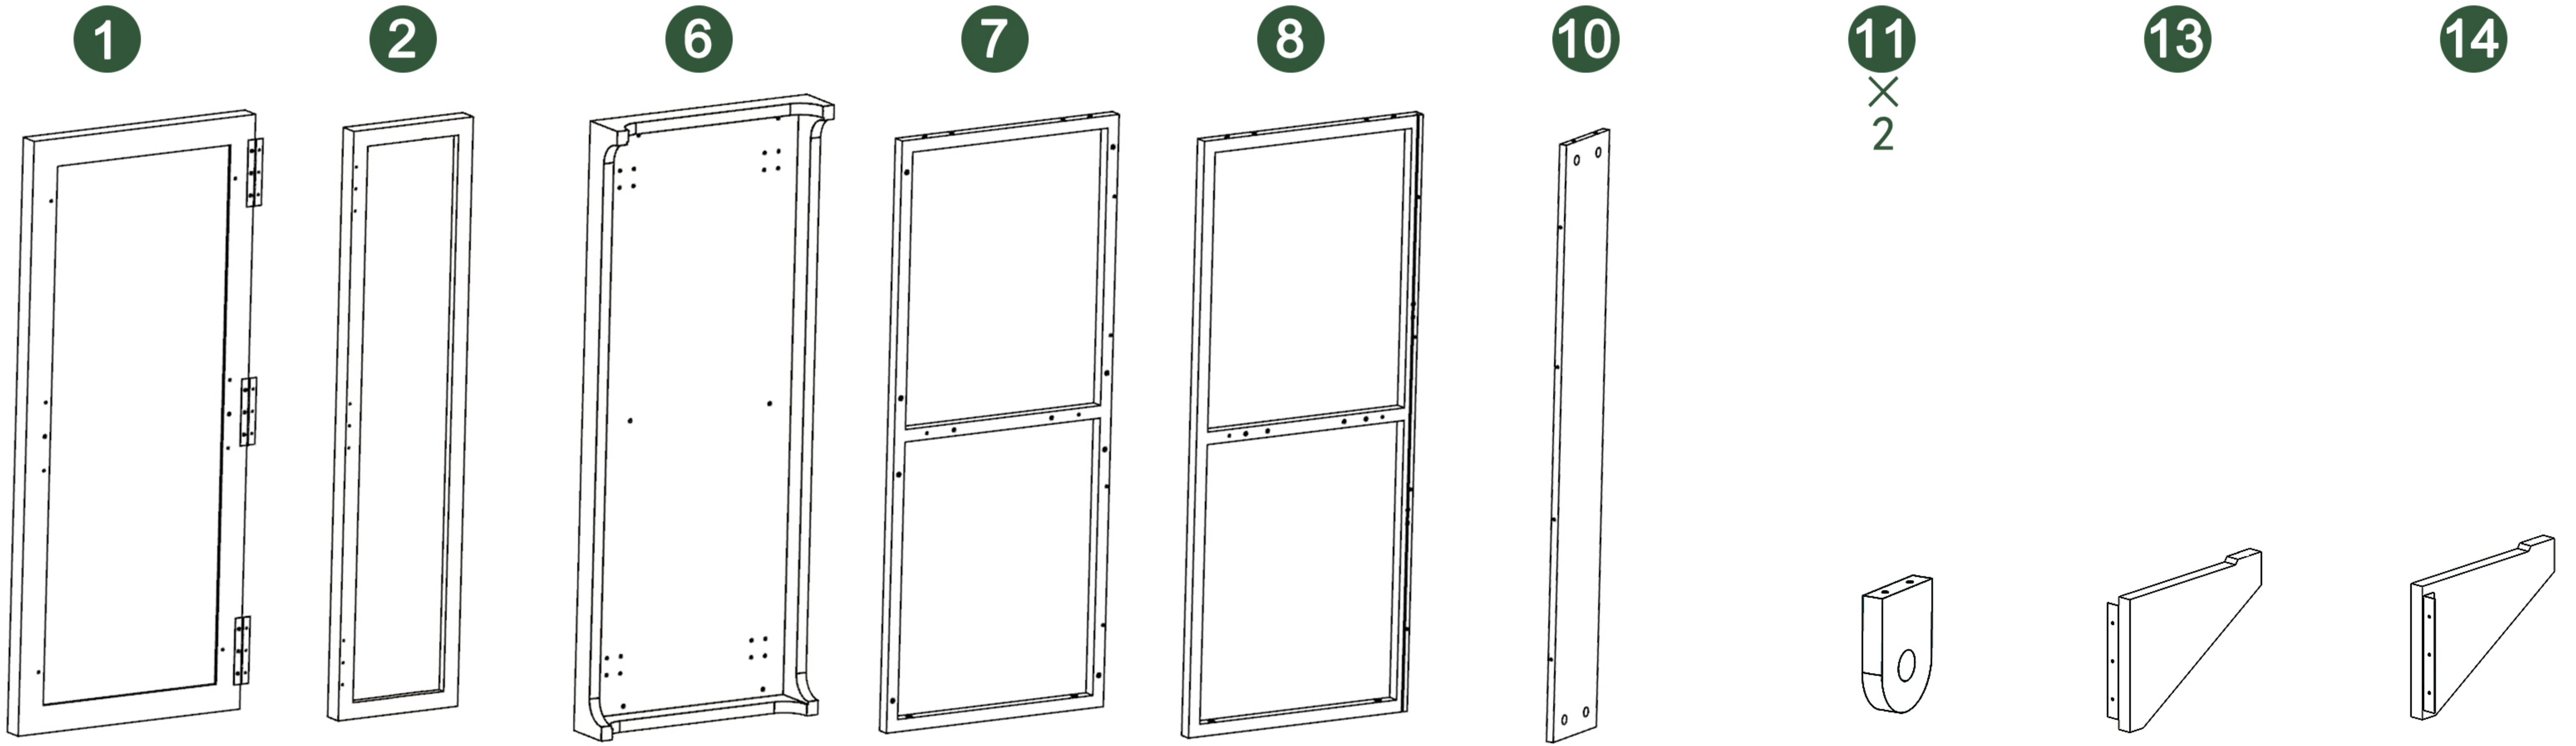


PACKAGING B

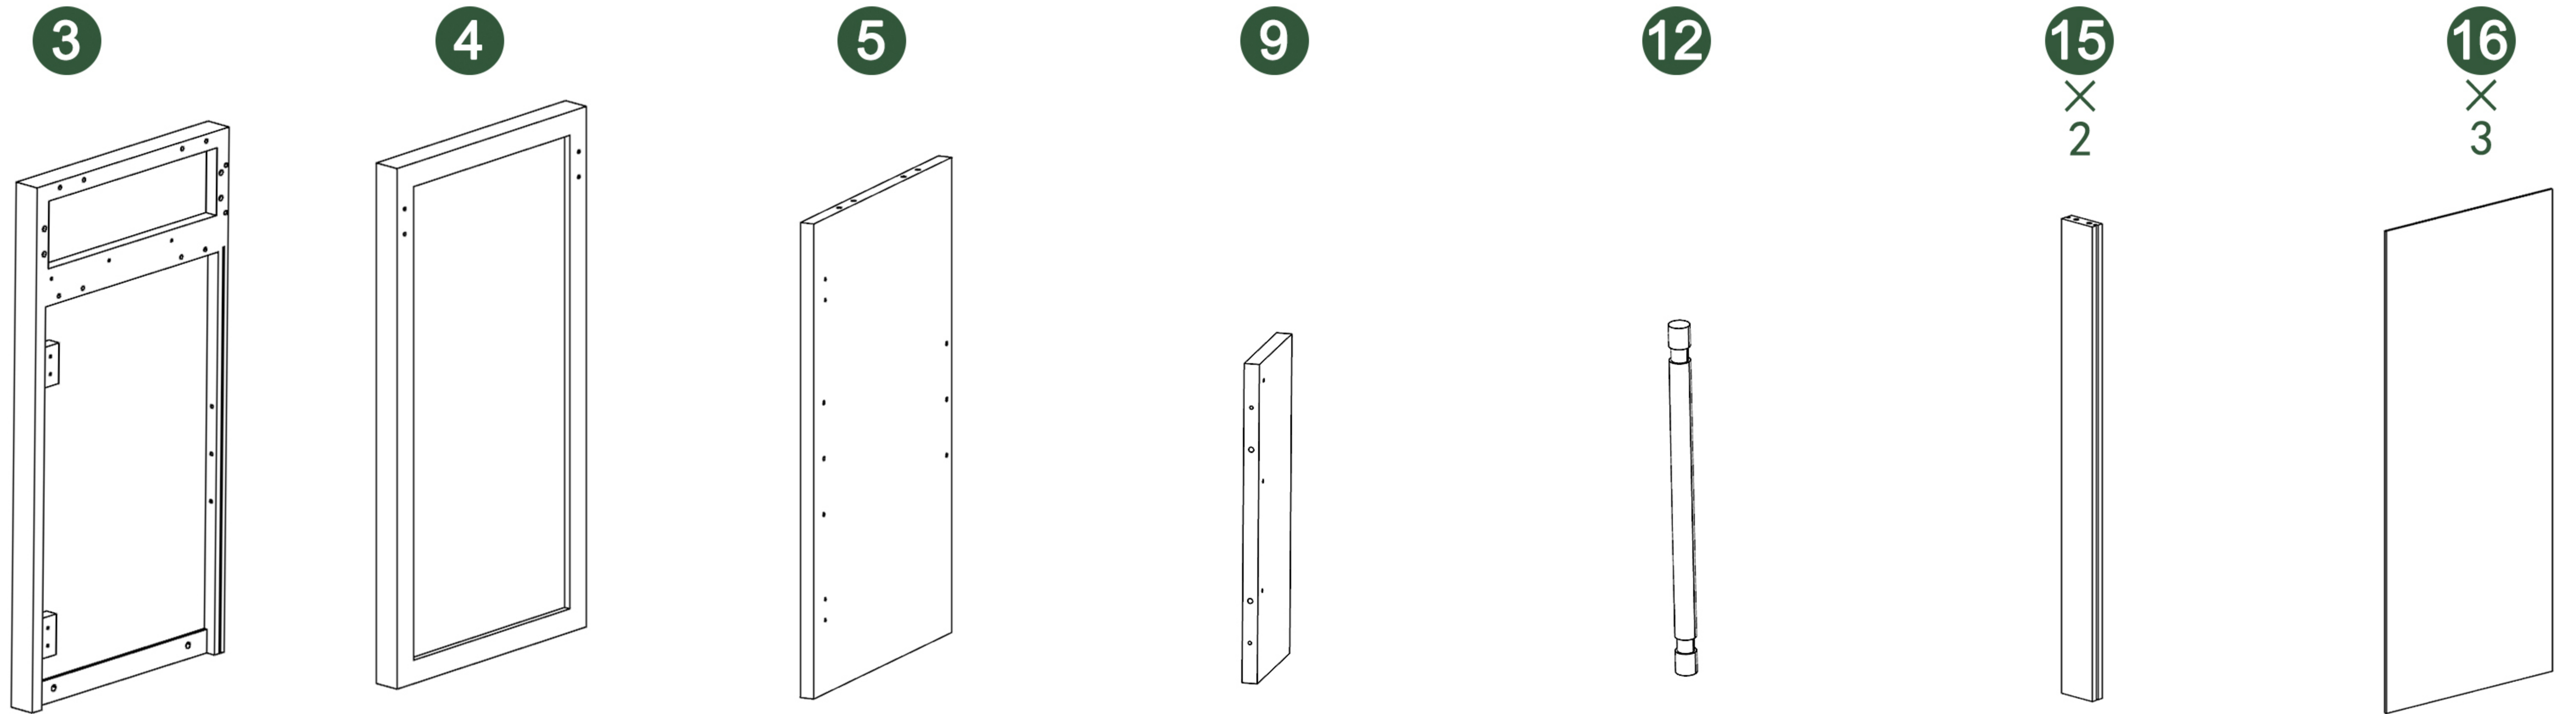


PACKAGING B




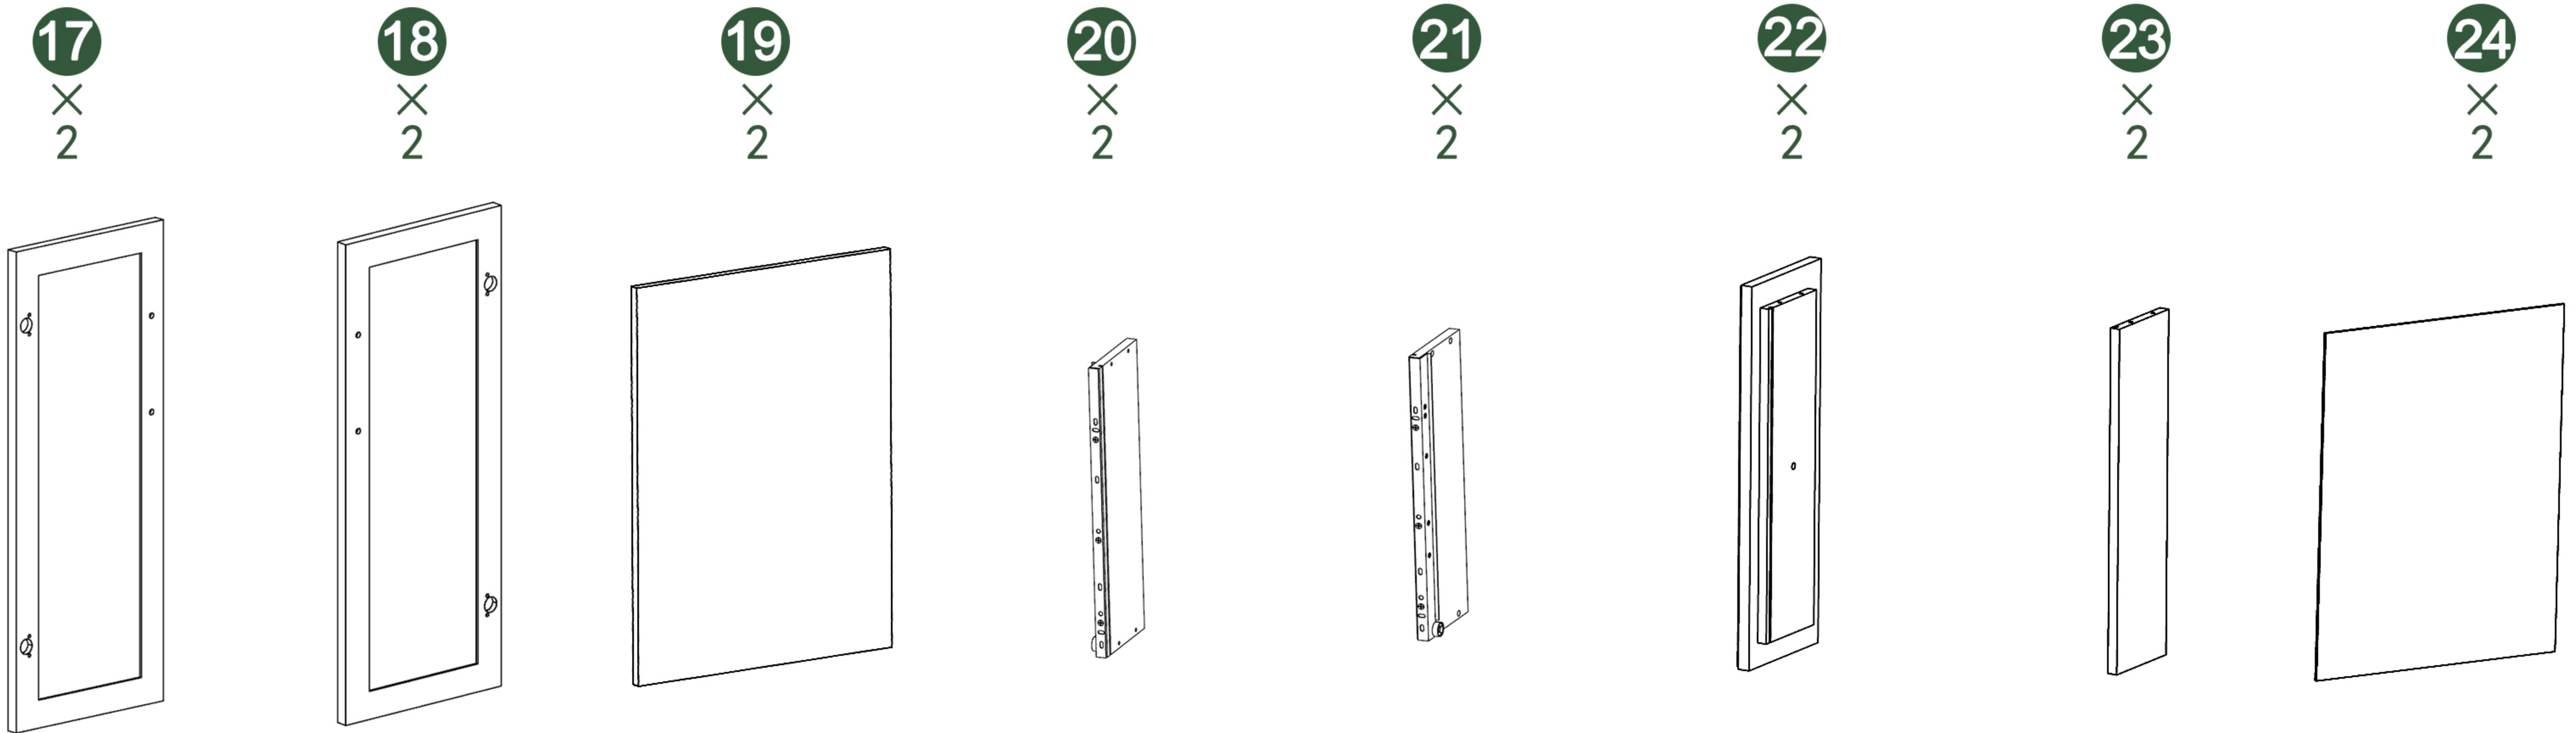


UNIT:MM PACKAGING B

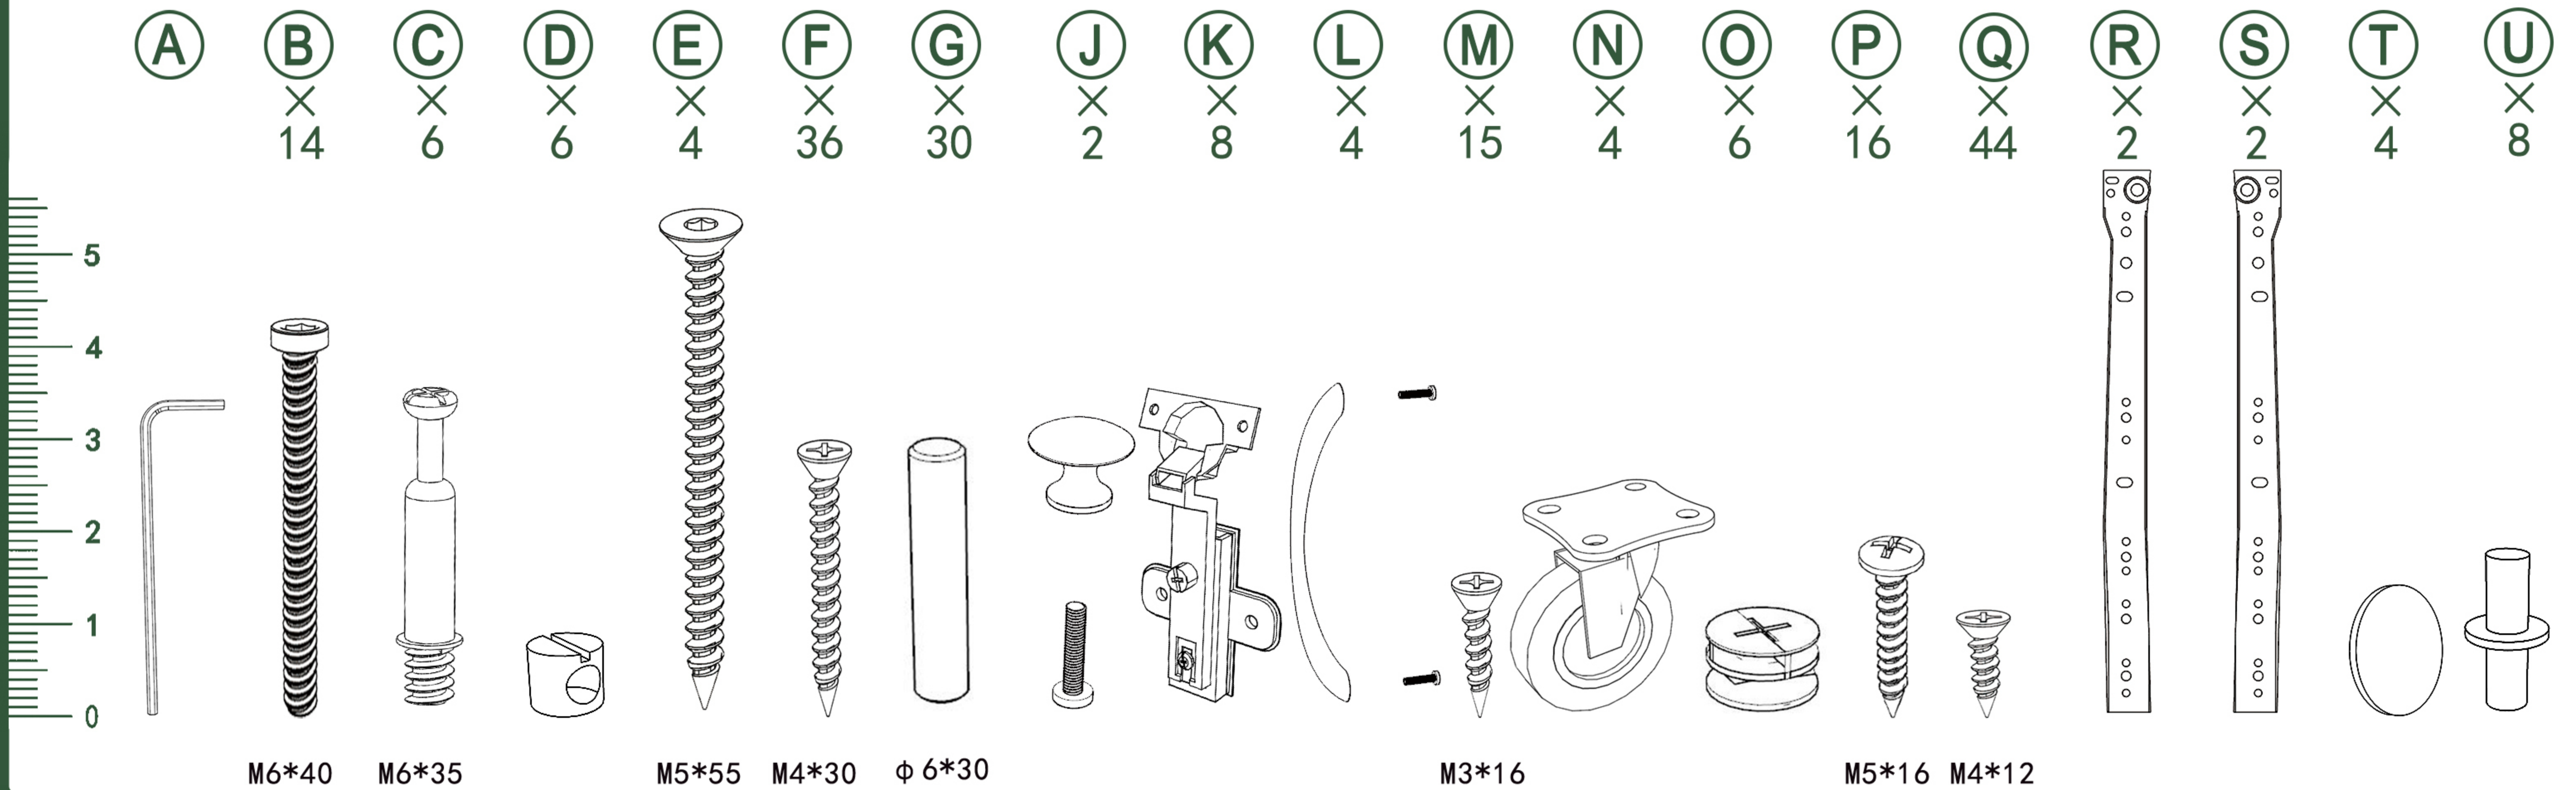


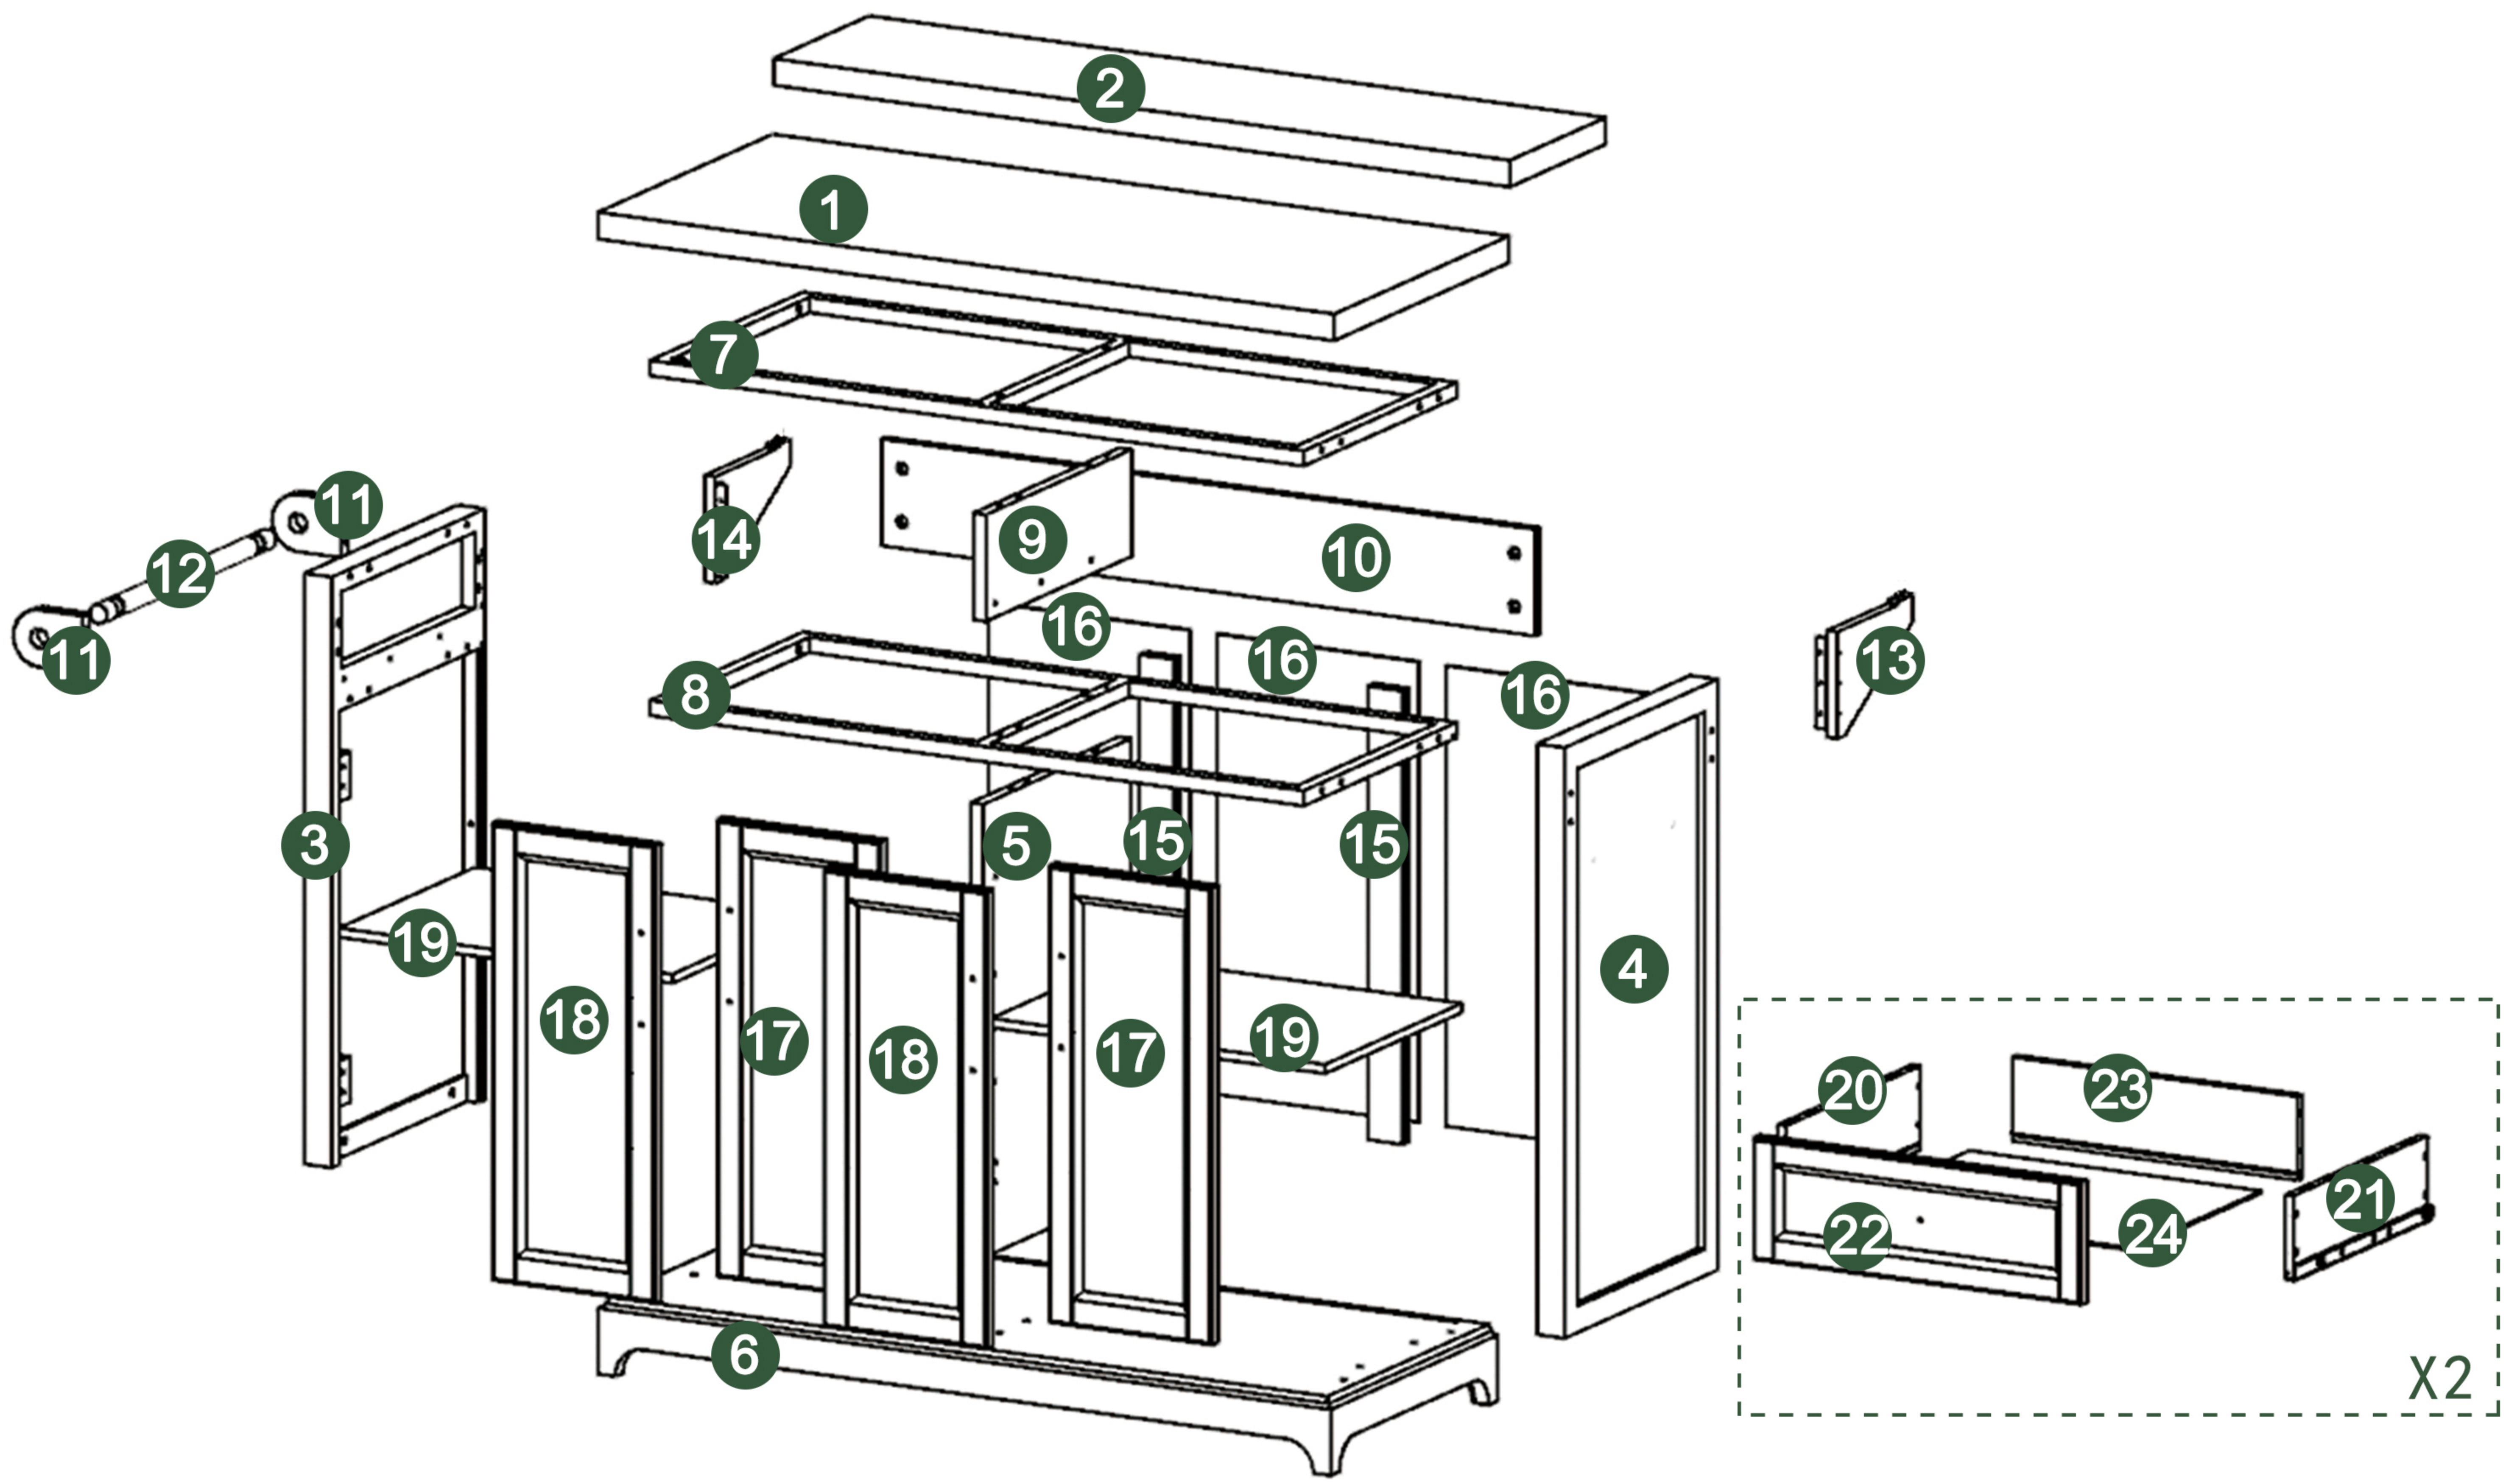


**BOLT INSTALLATION AS BELOW:**

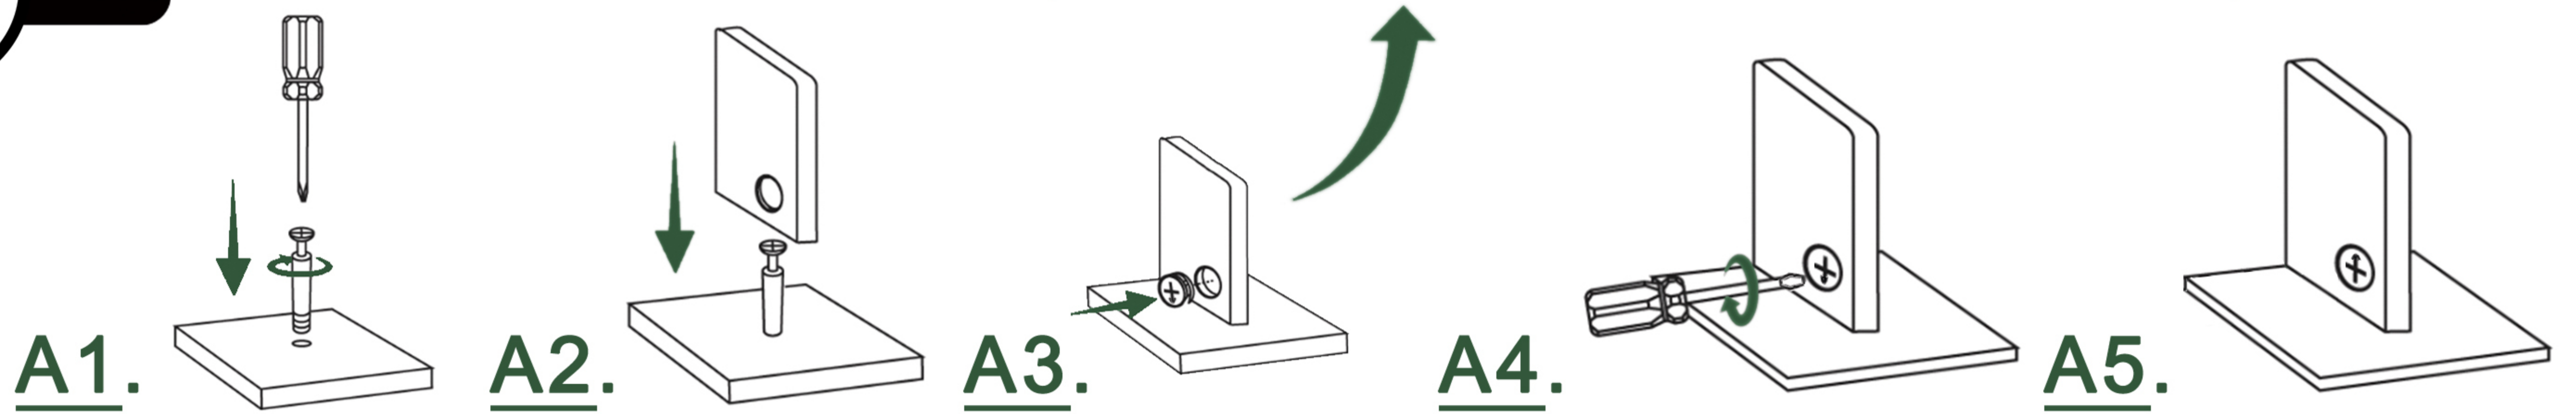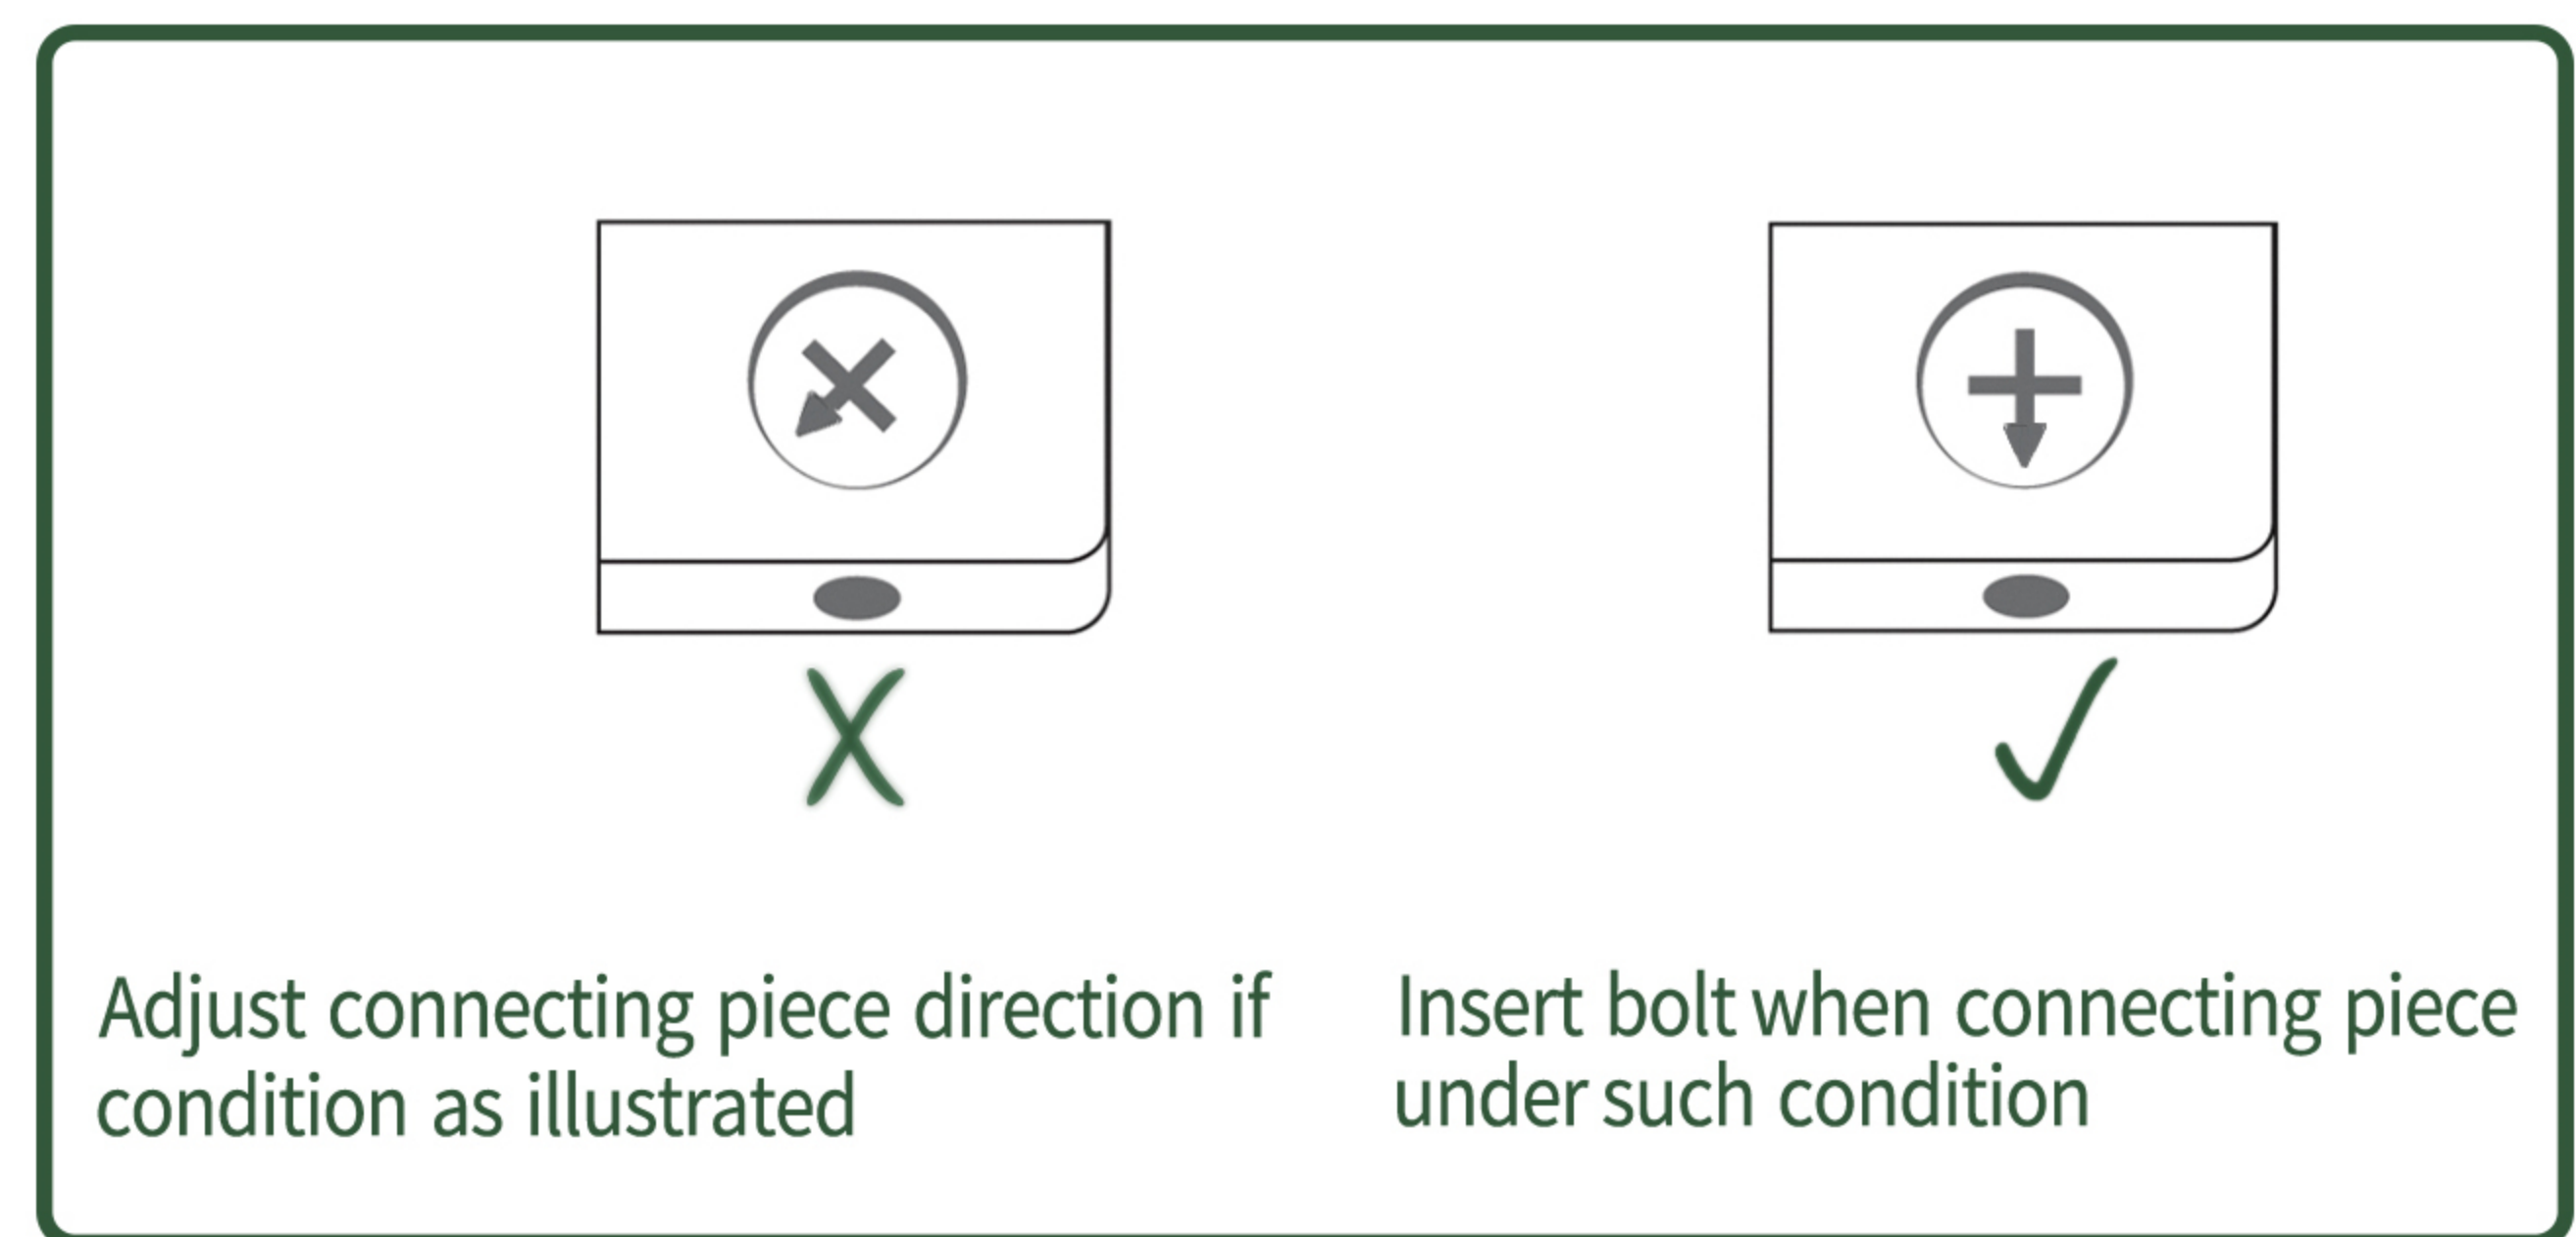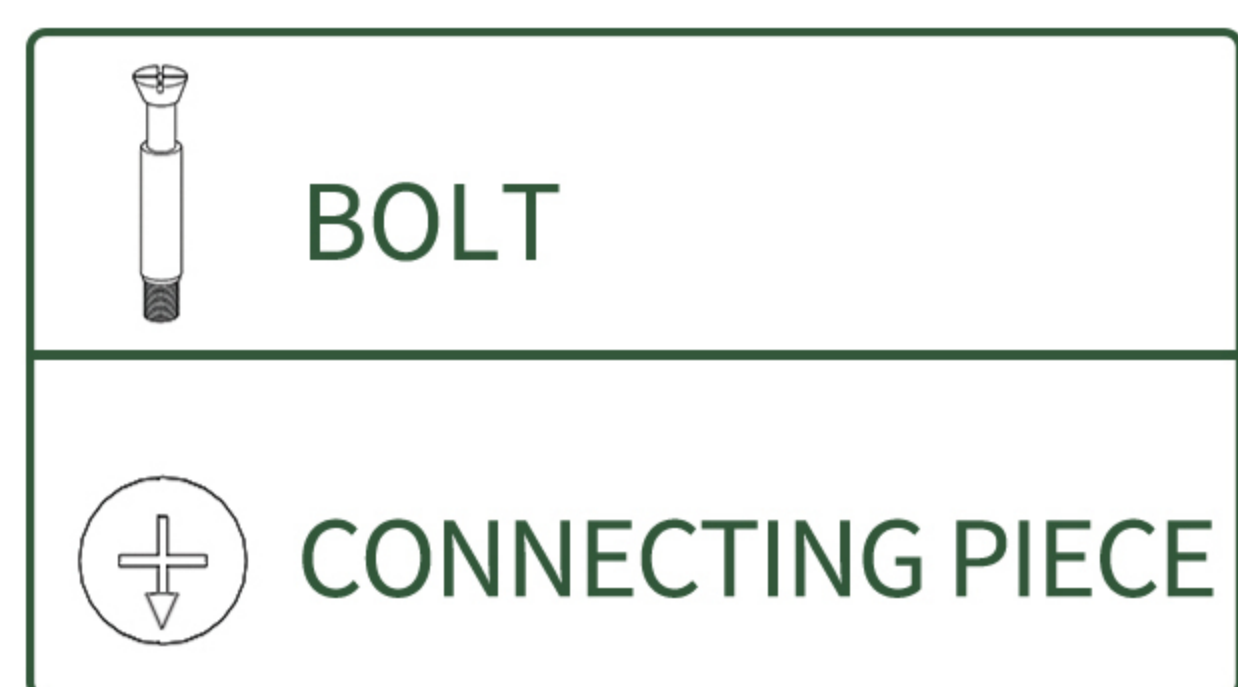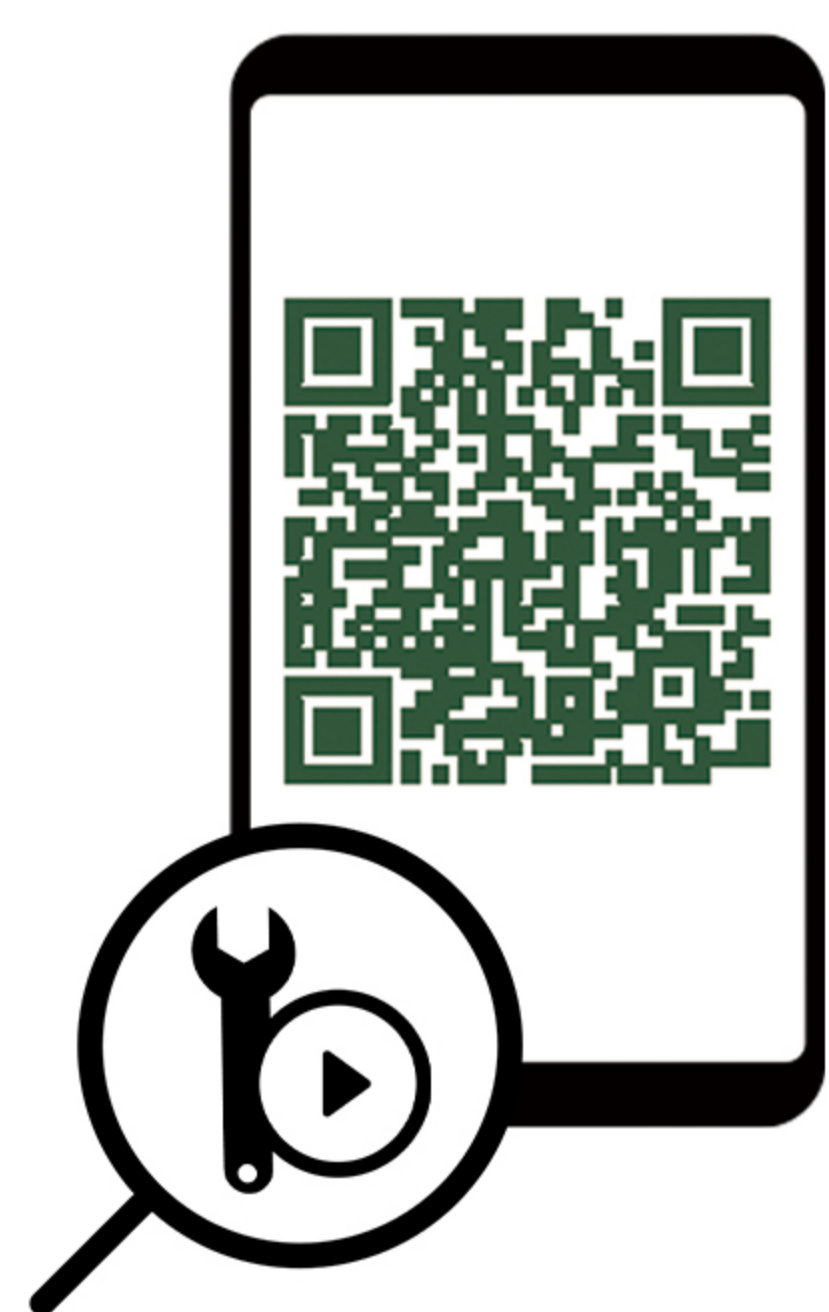


1.

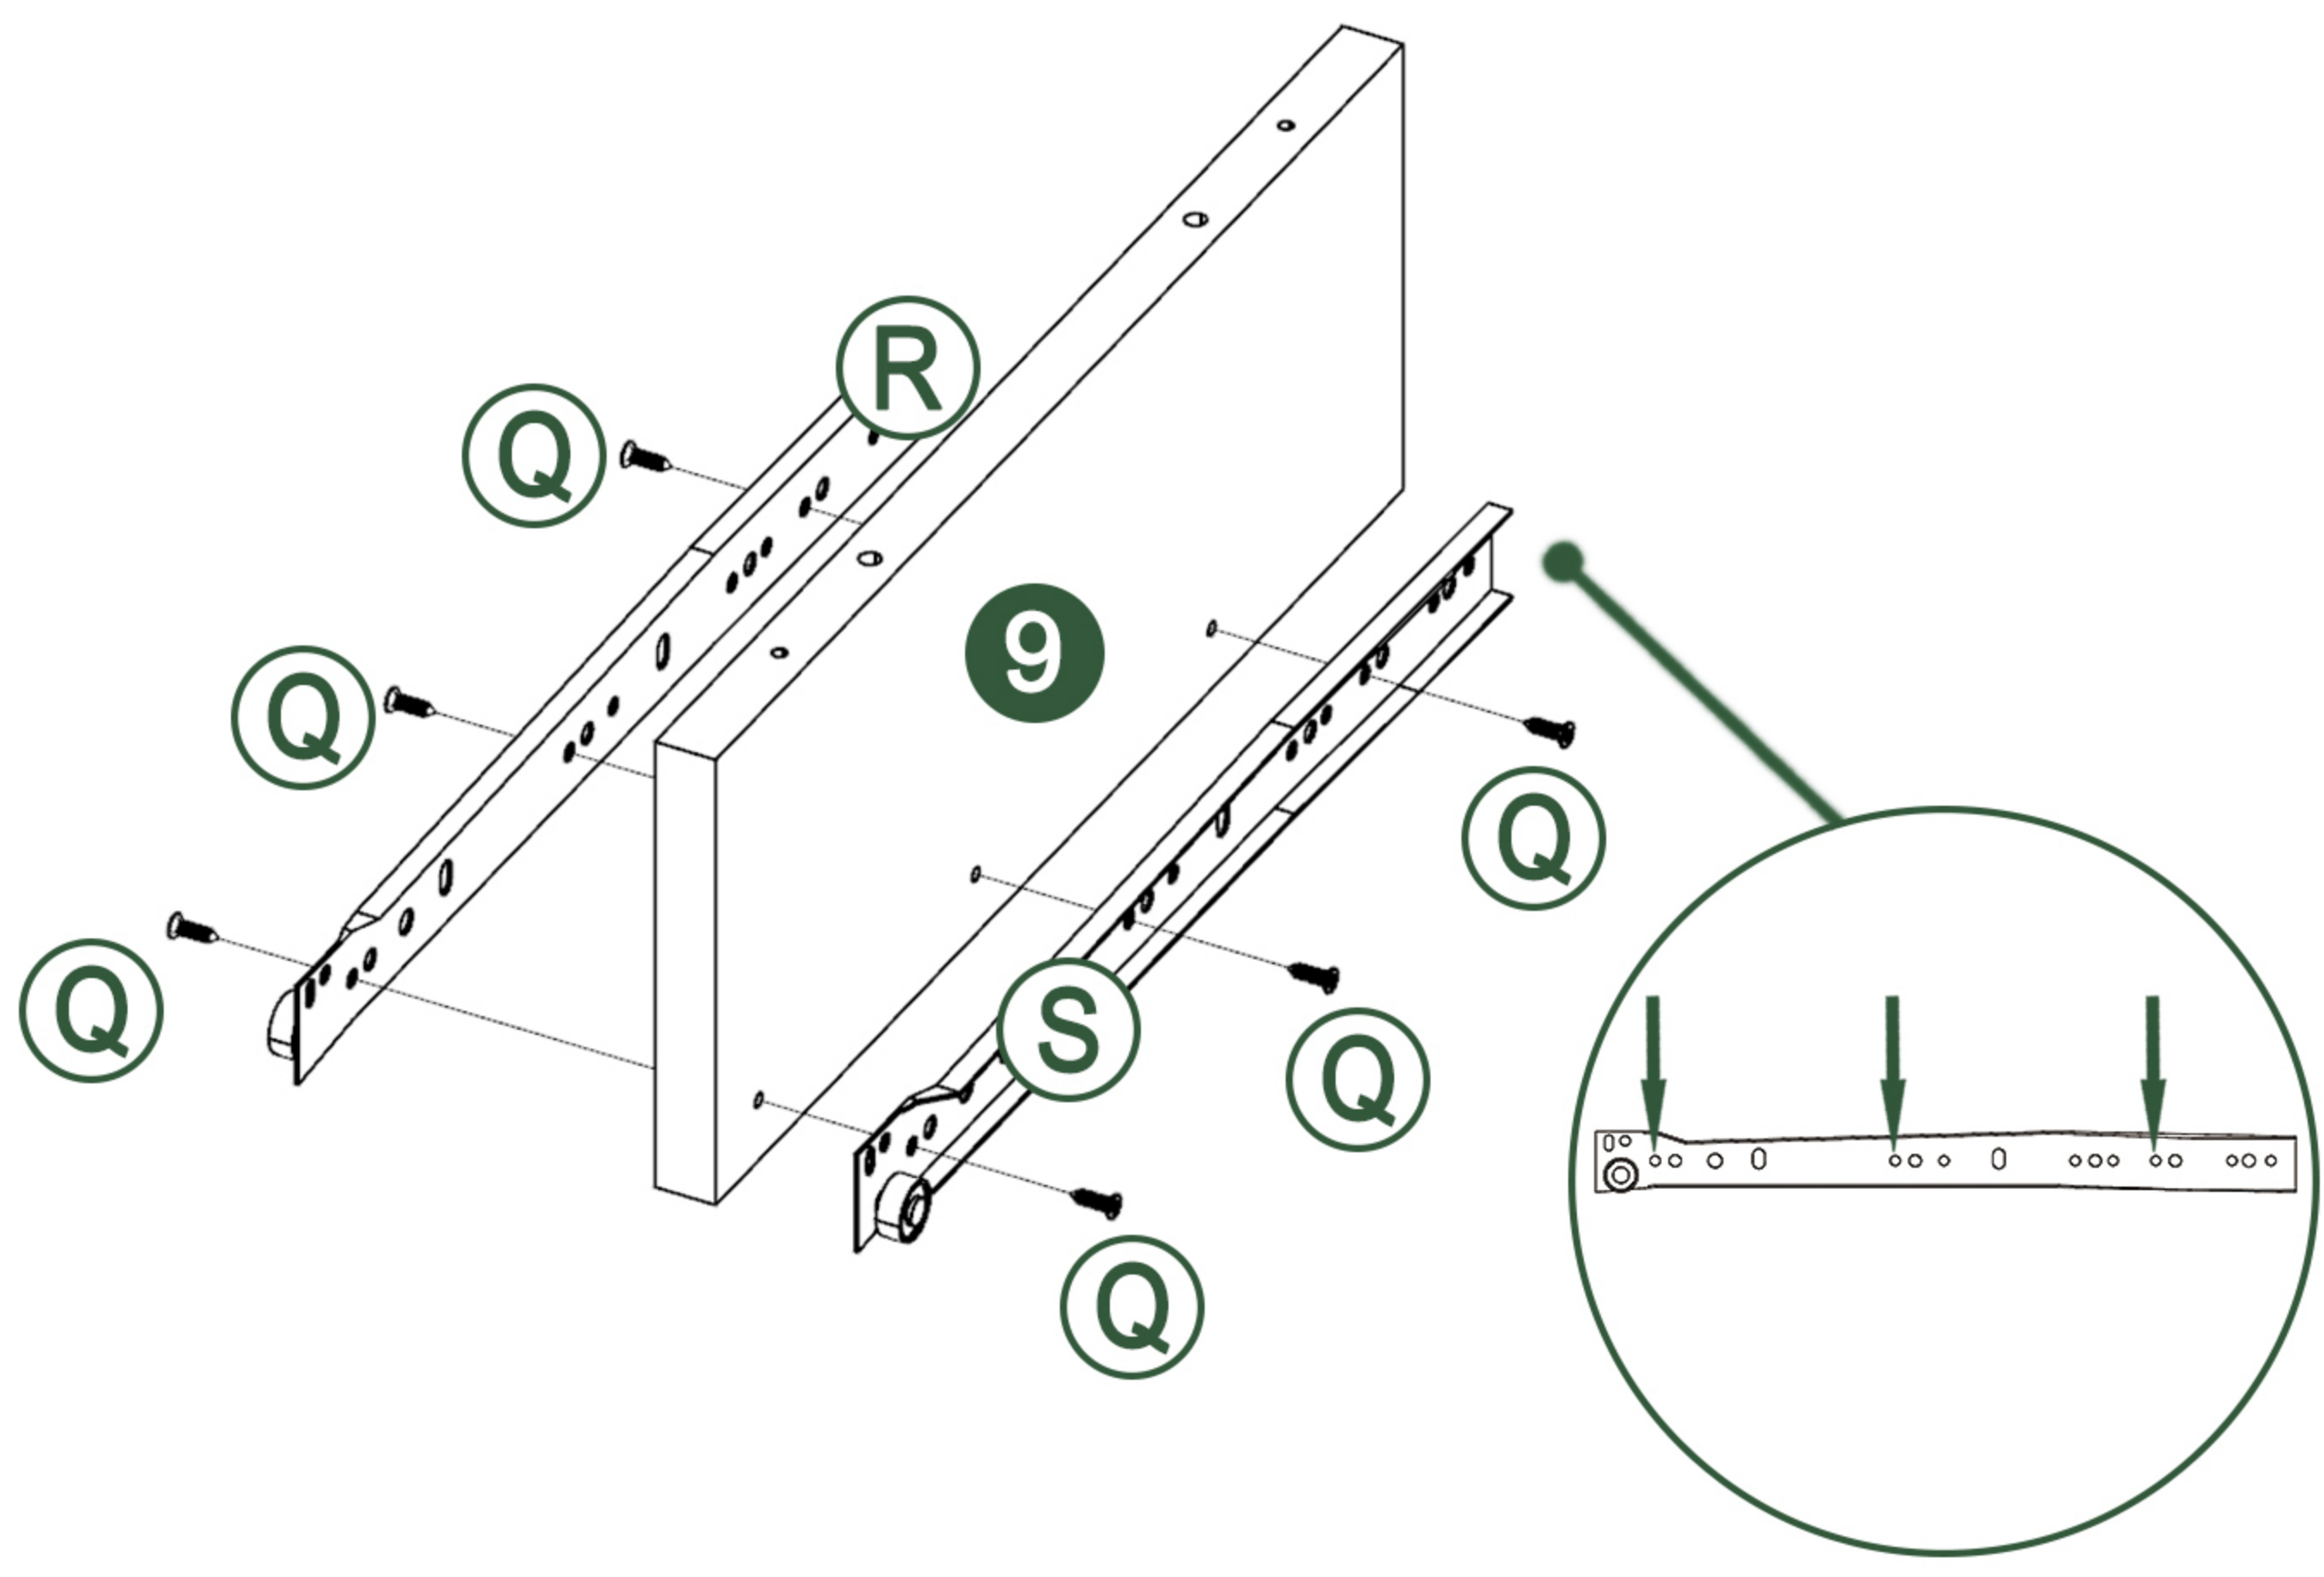


2.

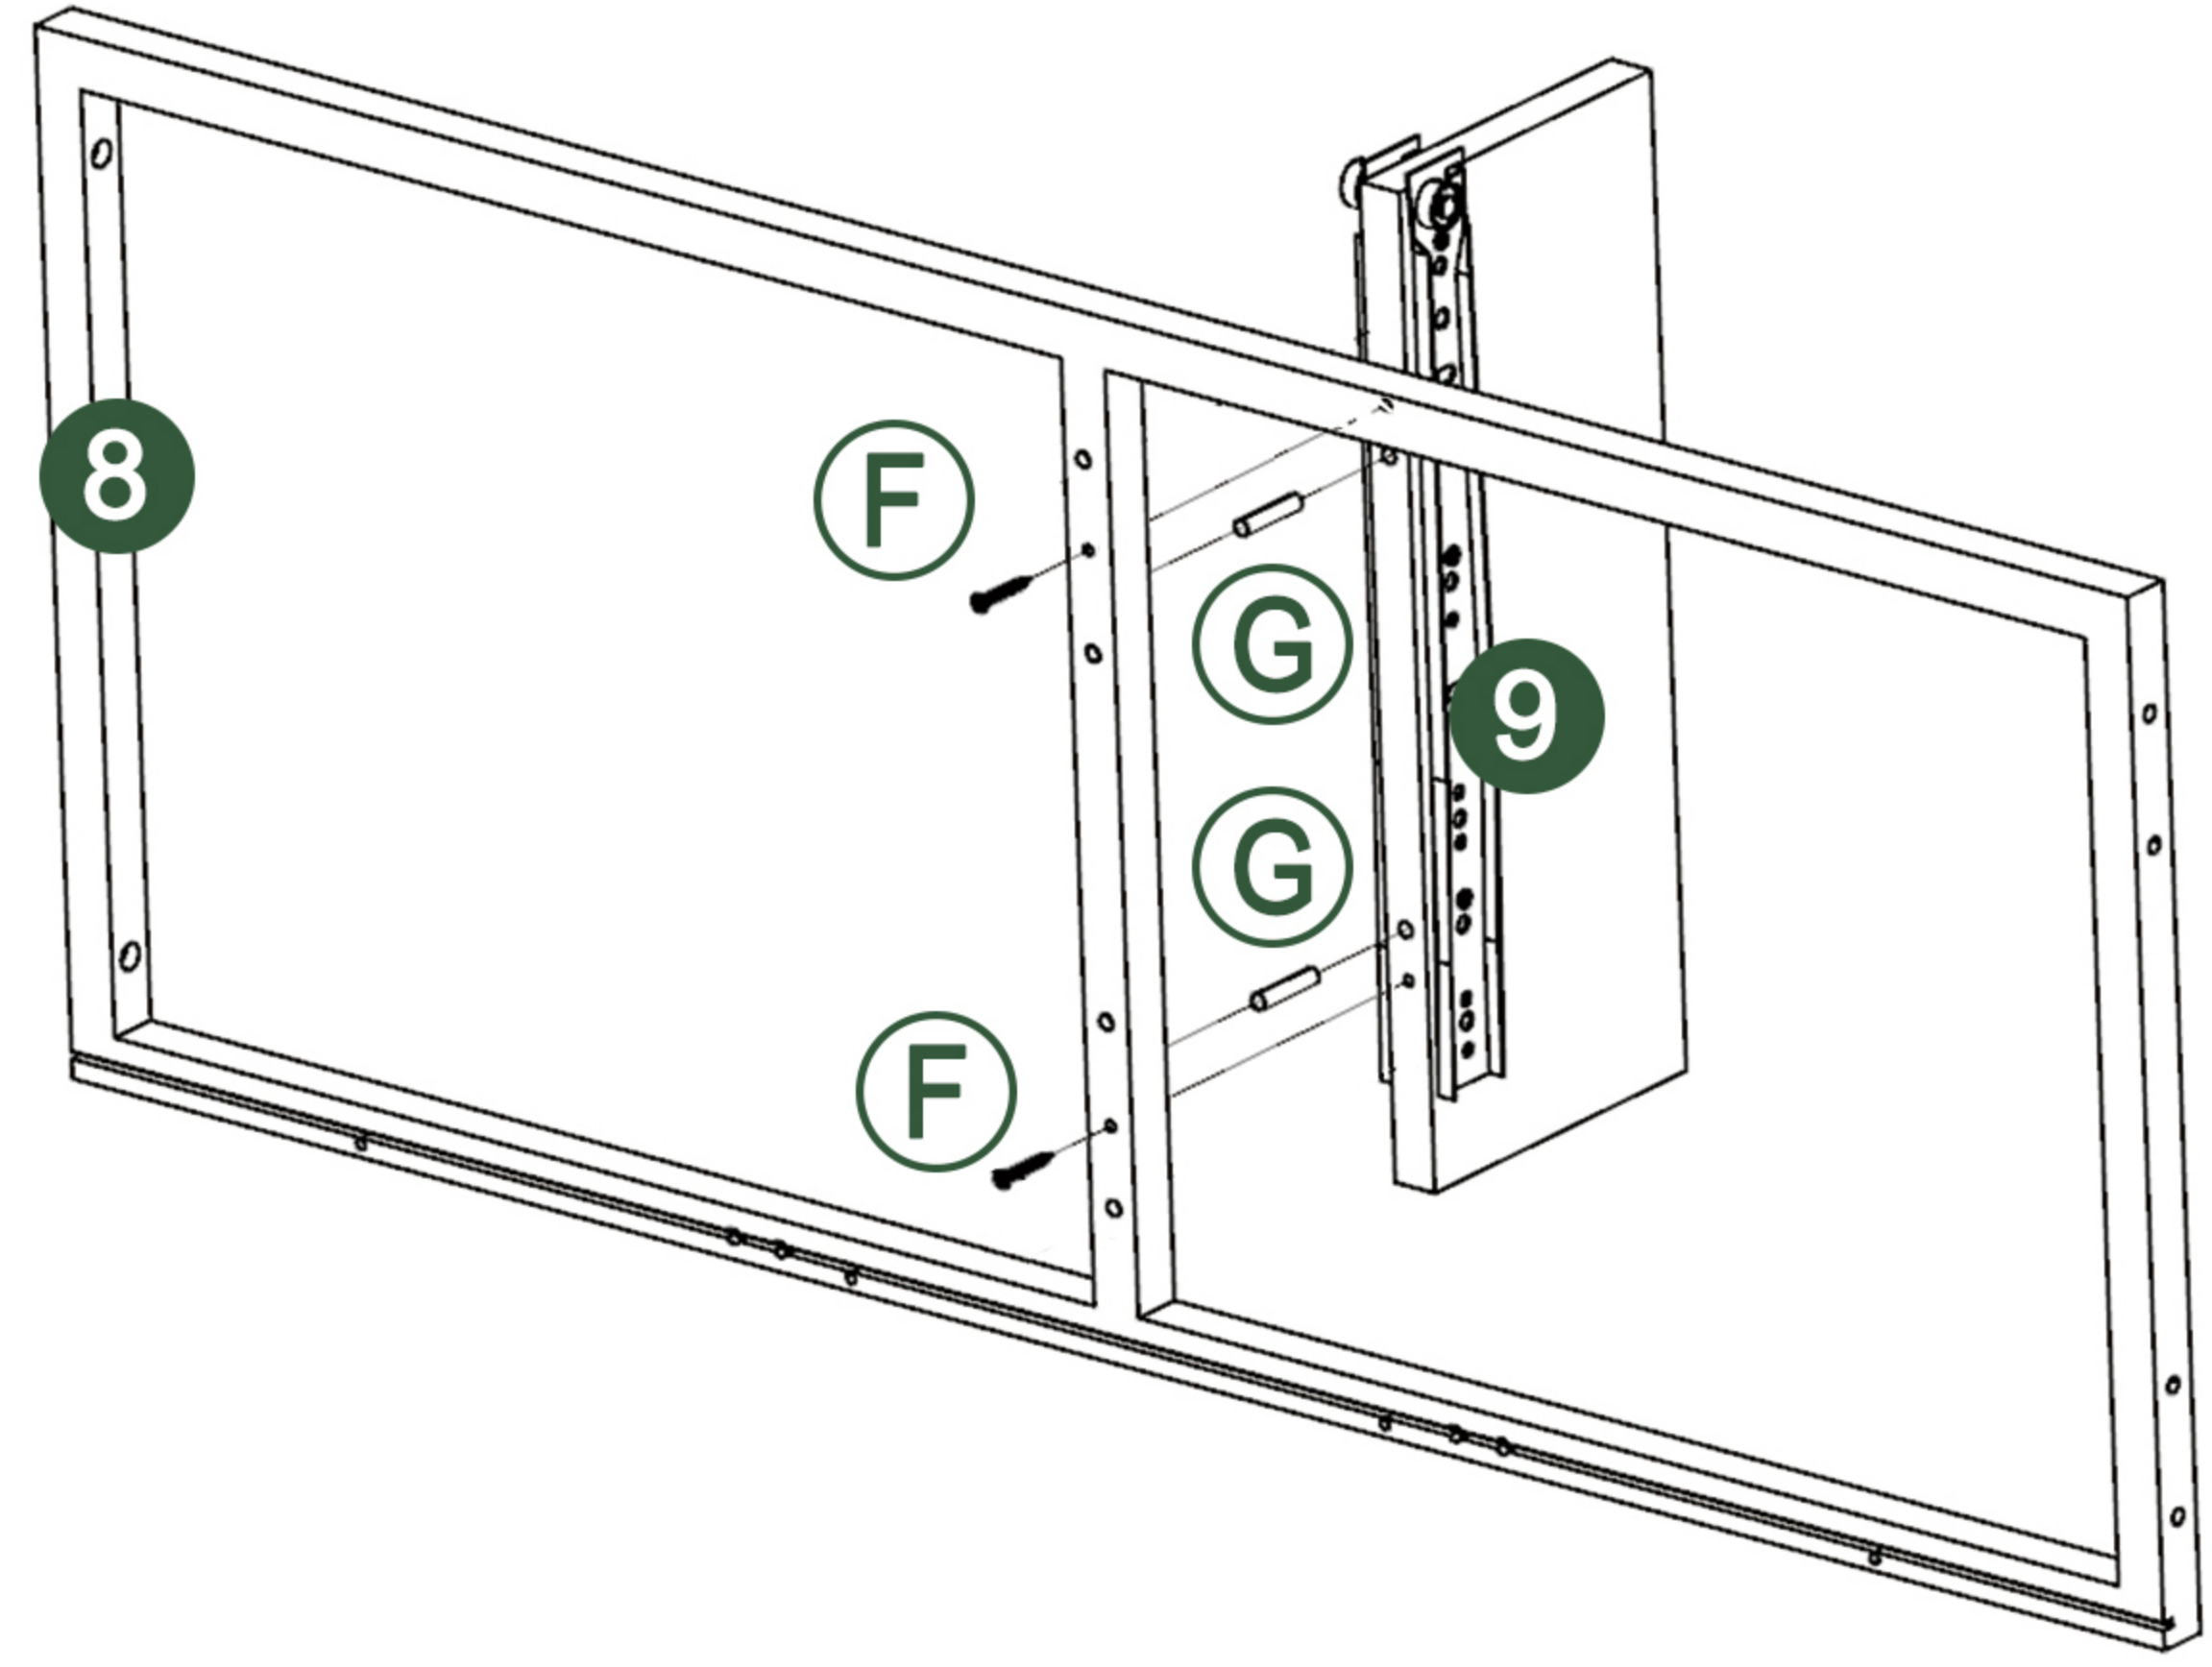


3.

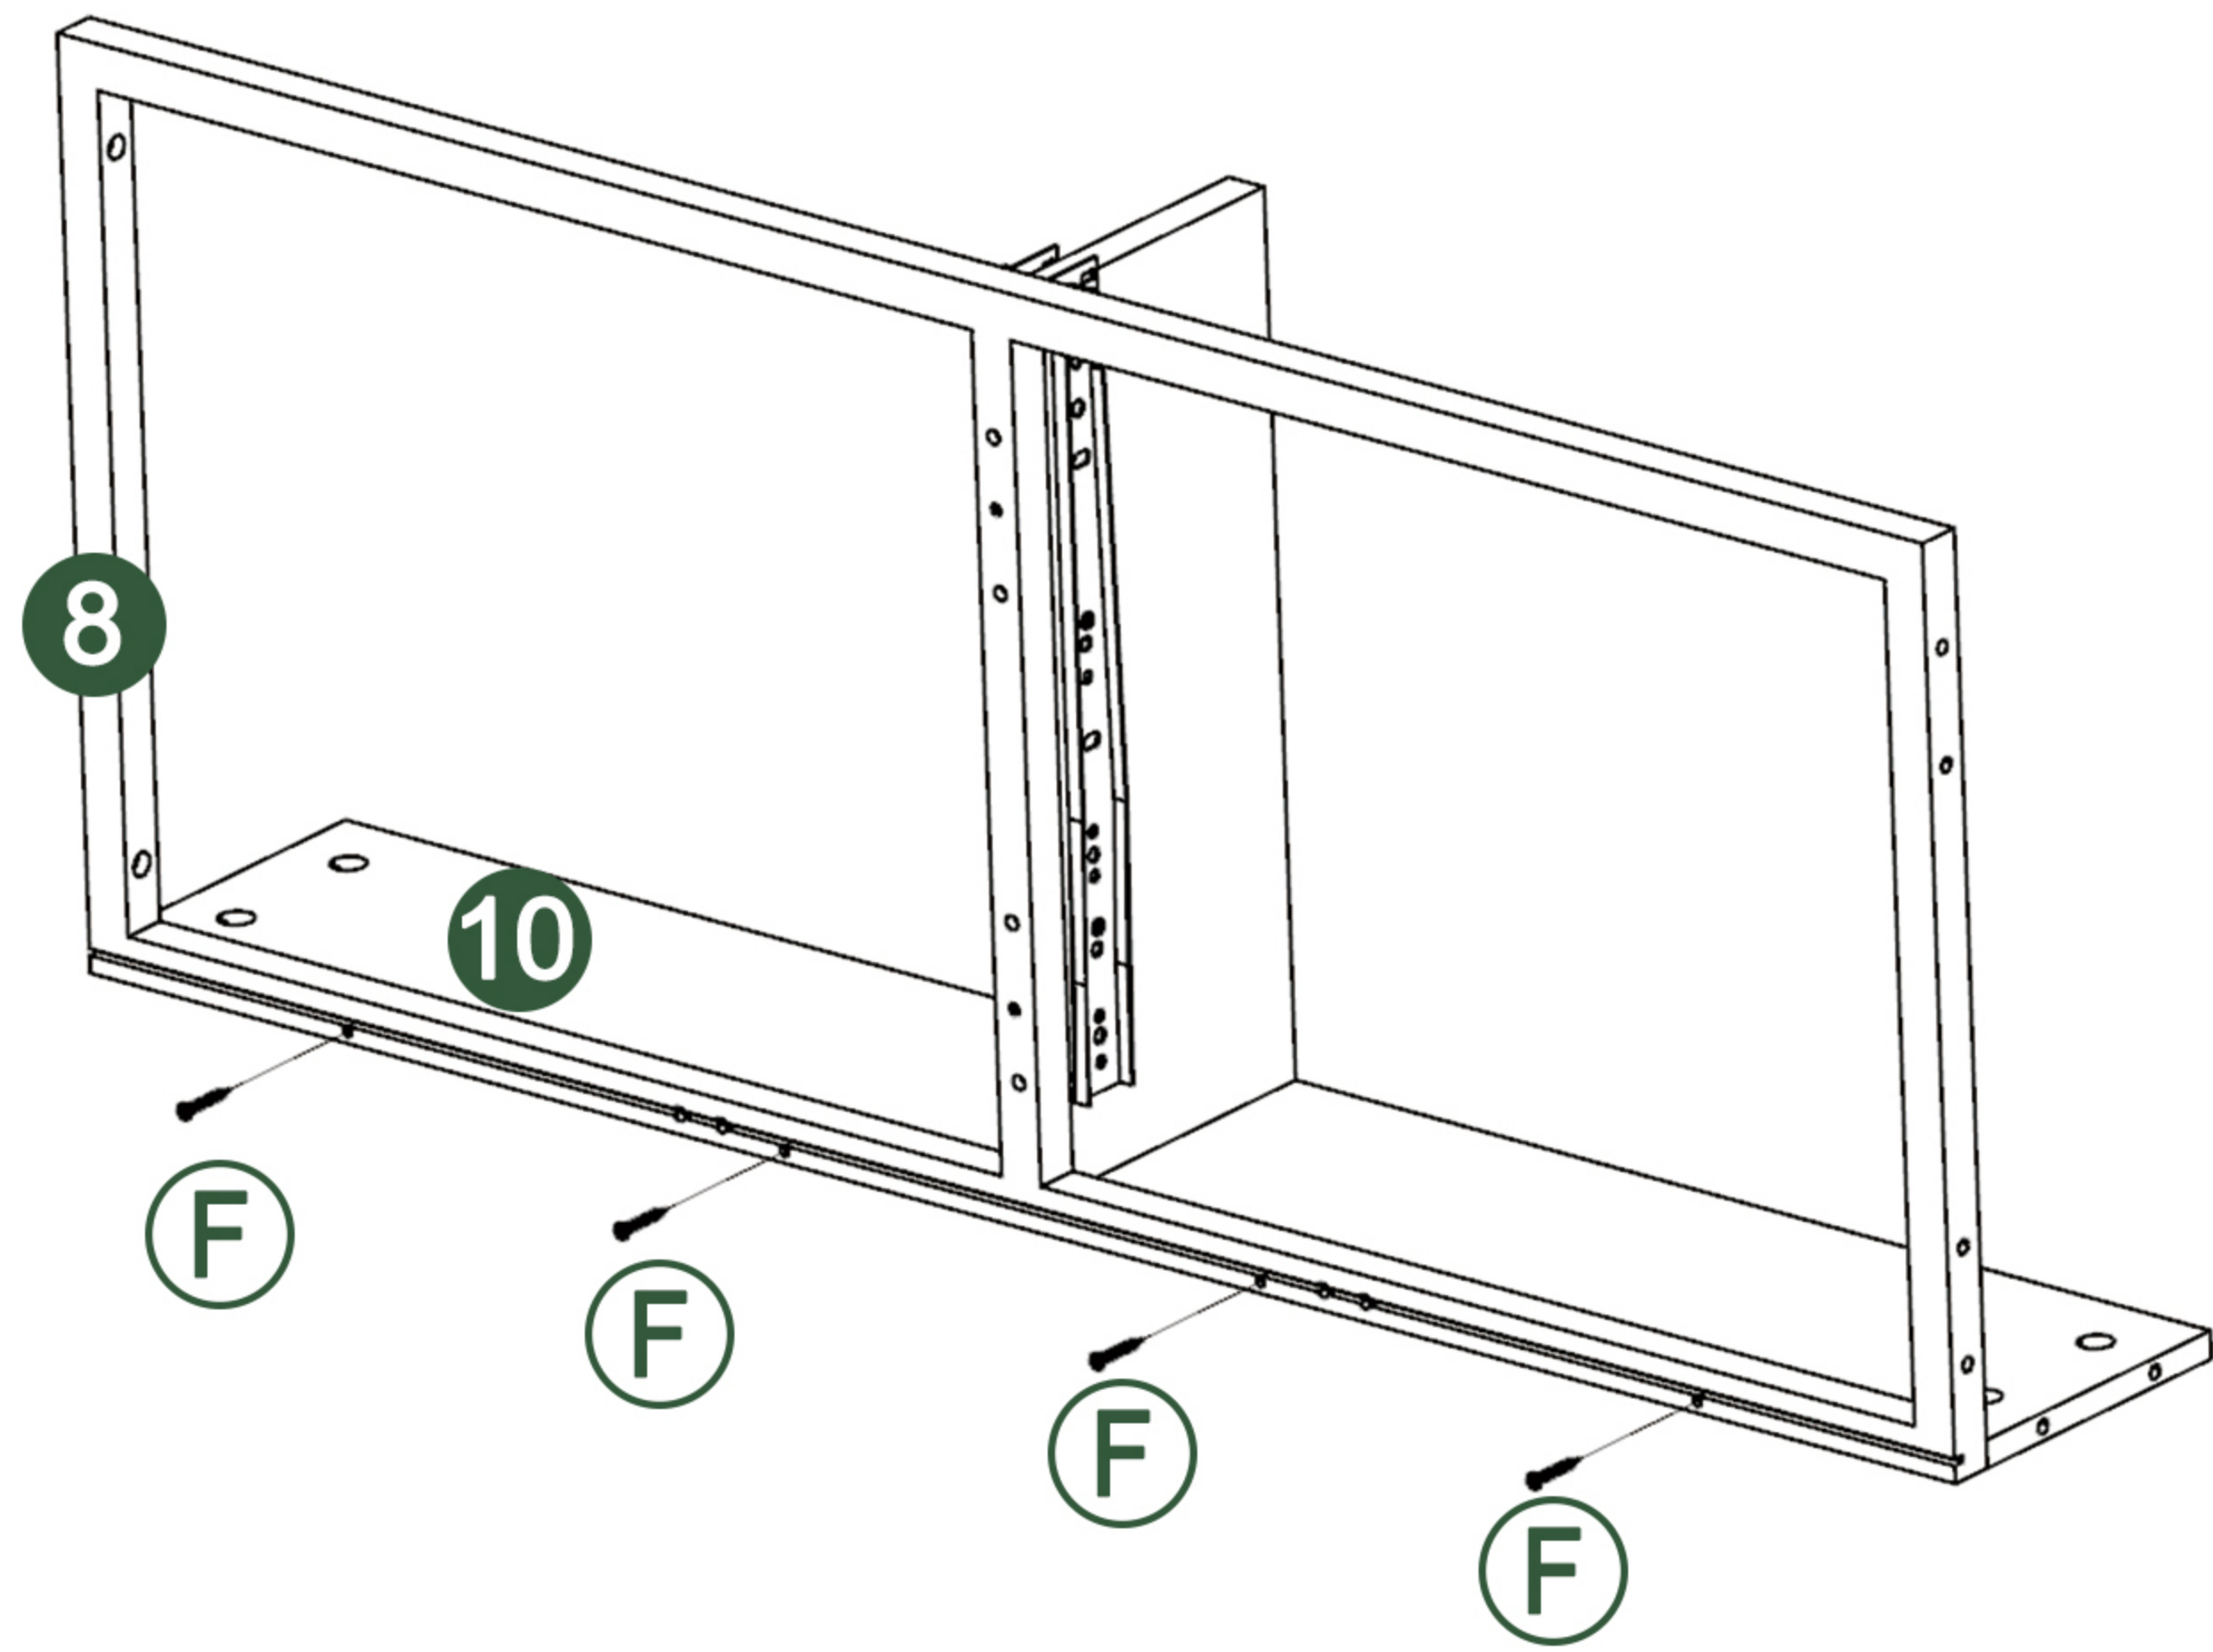


4.

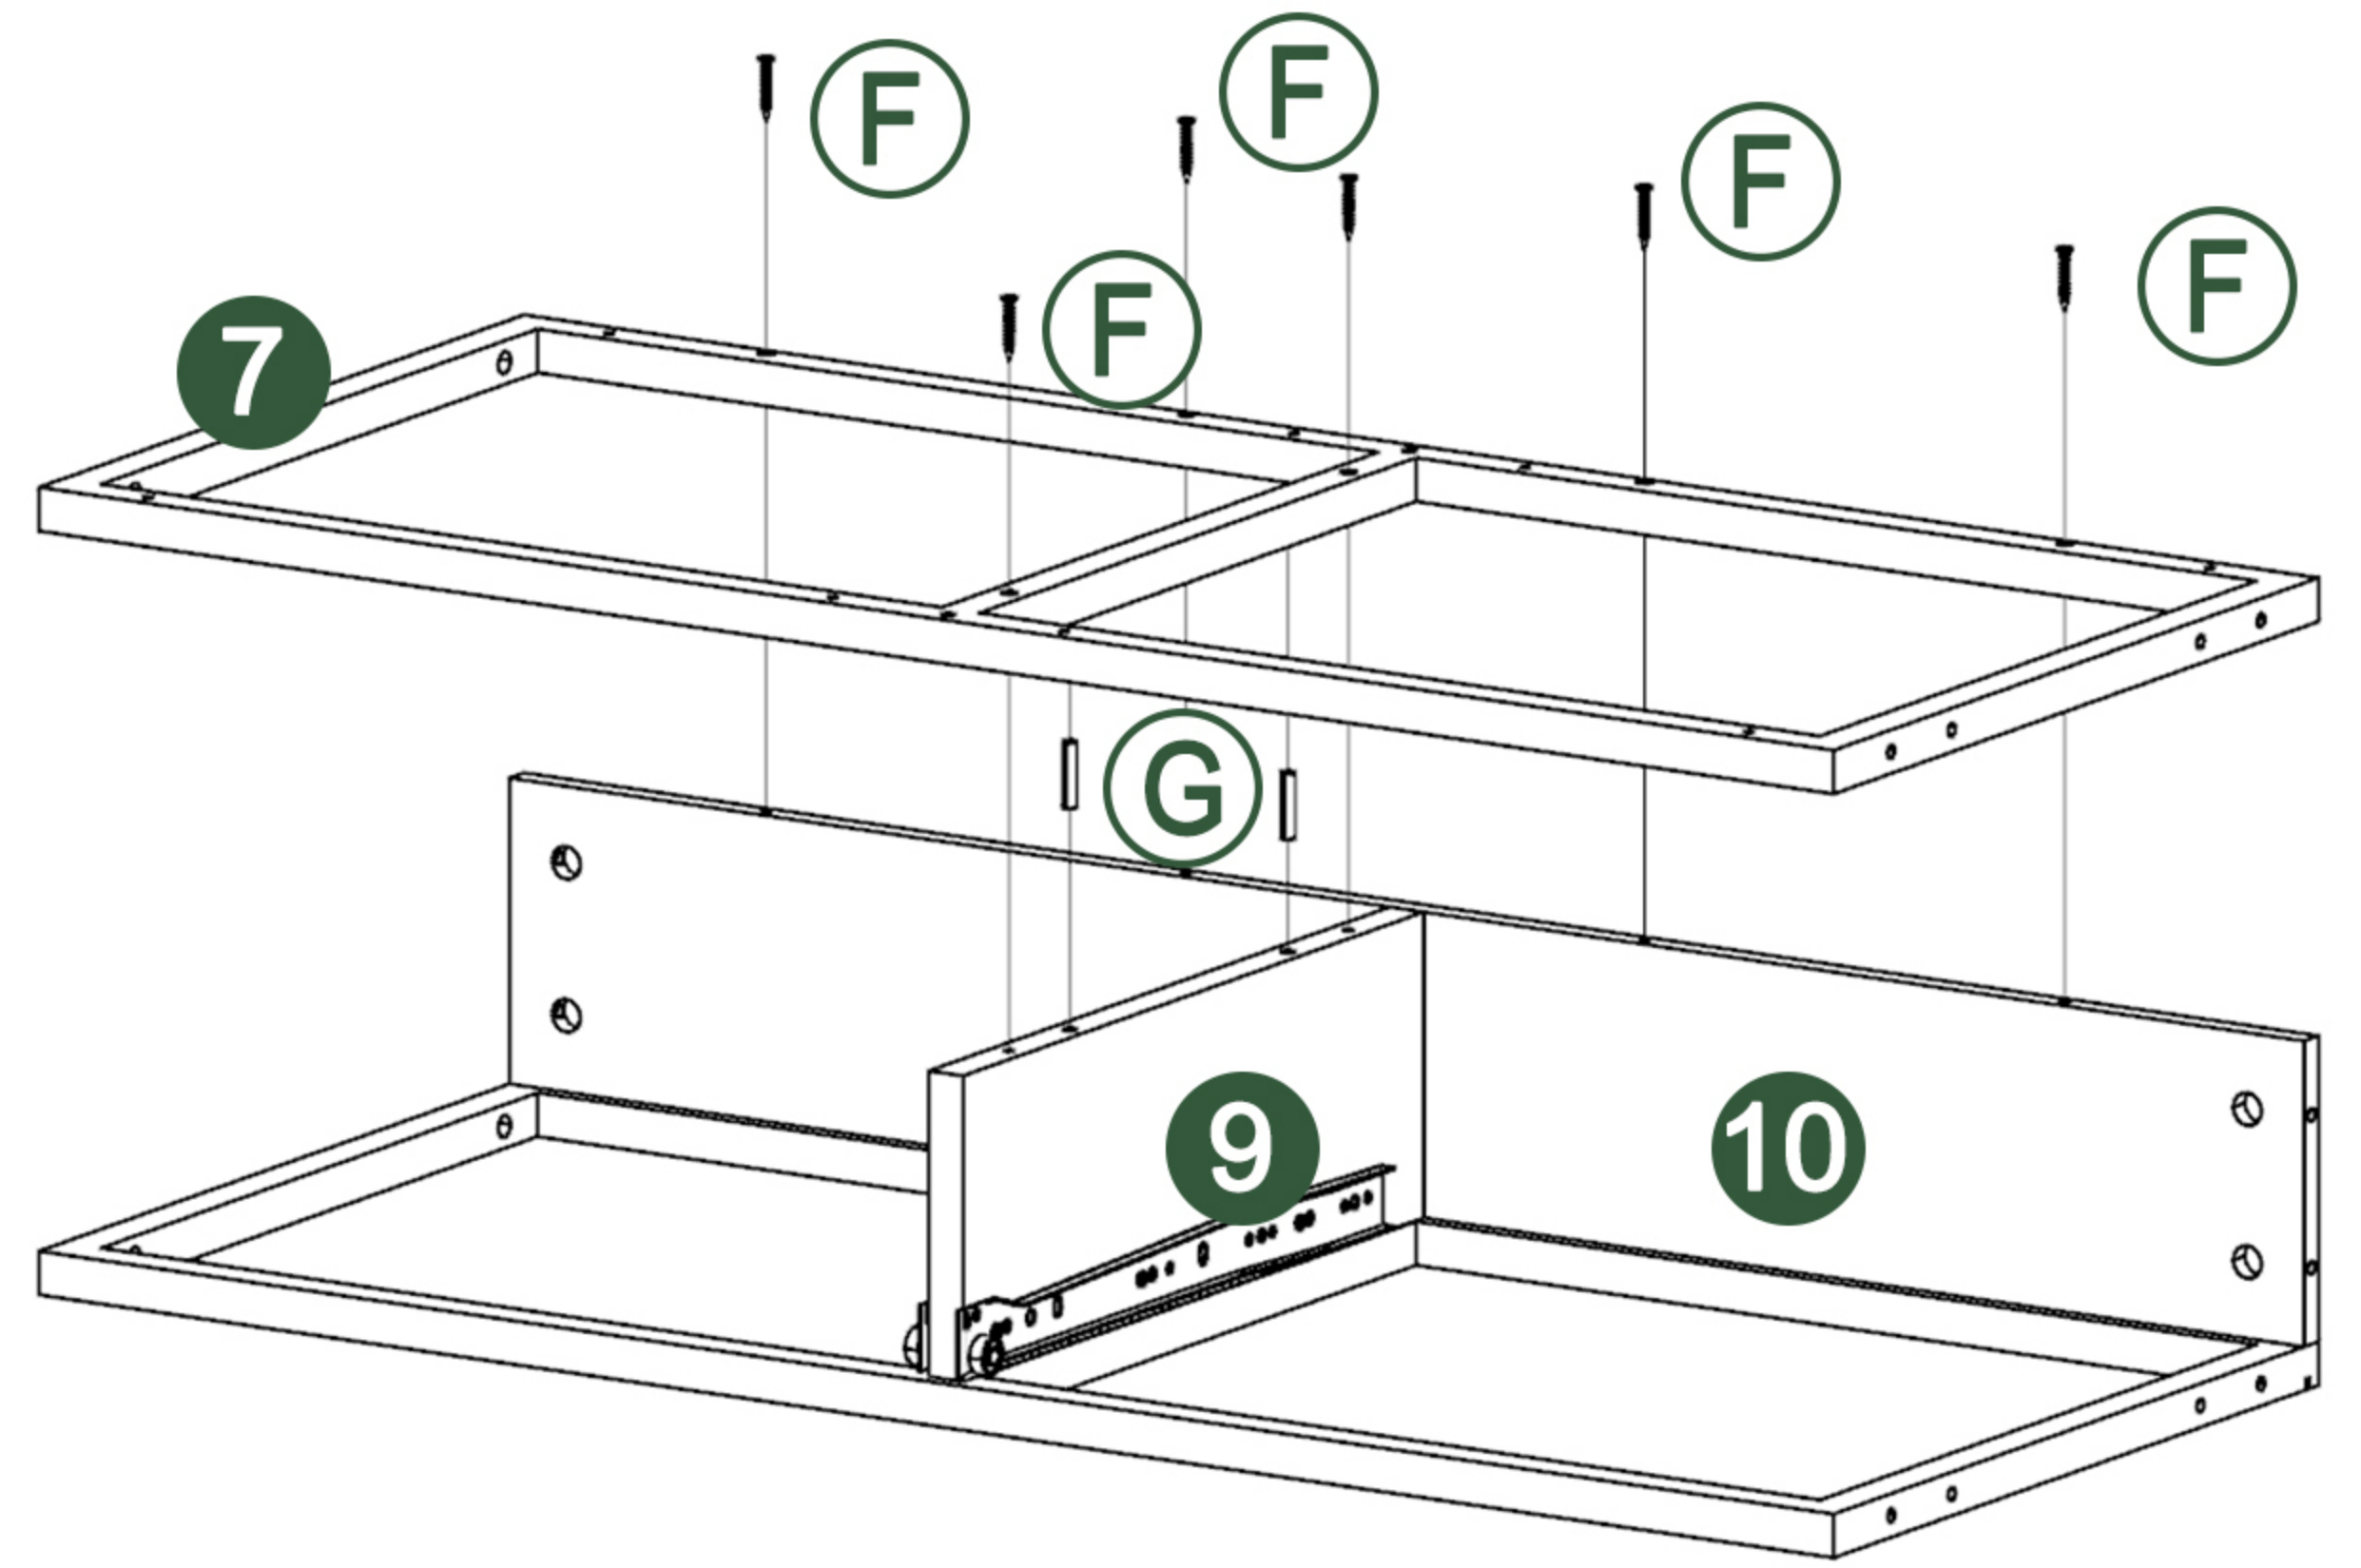


5a.

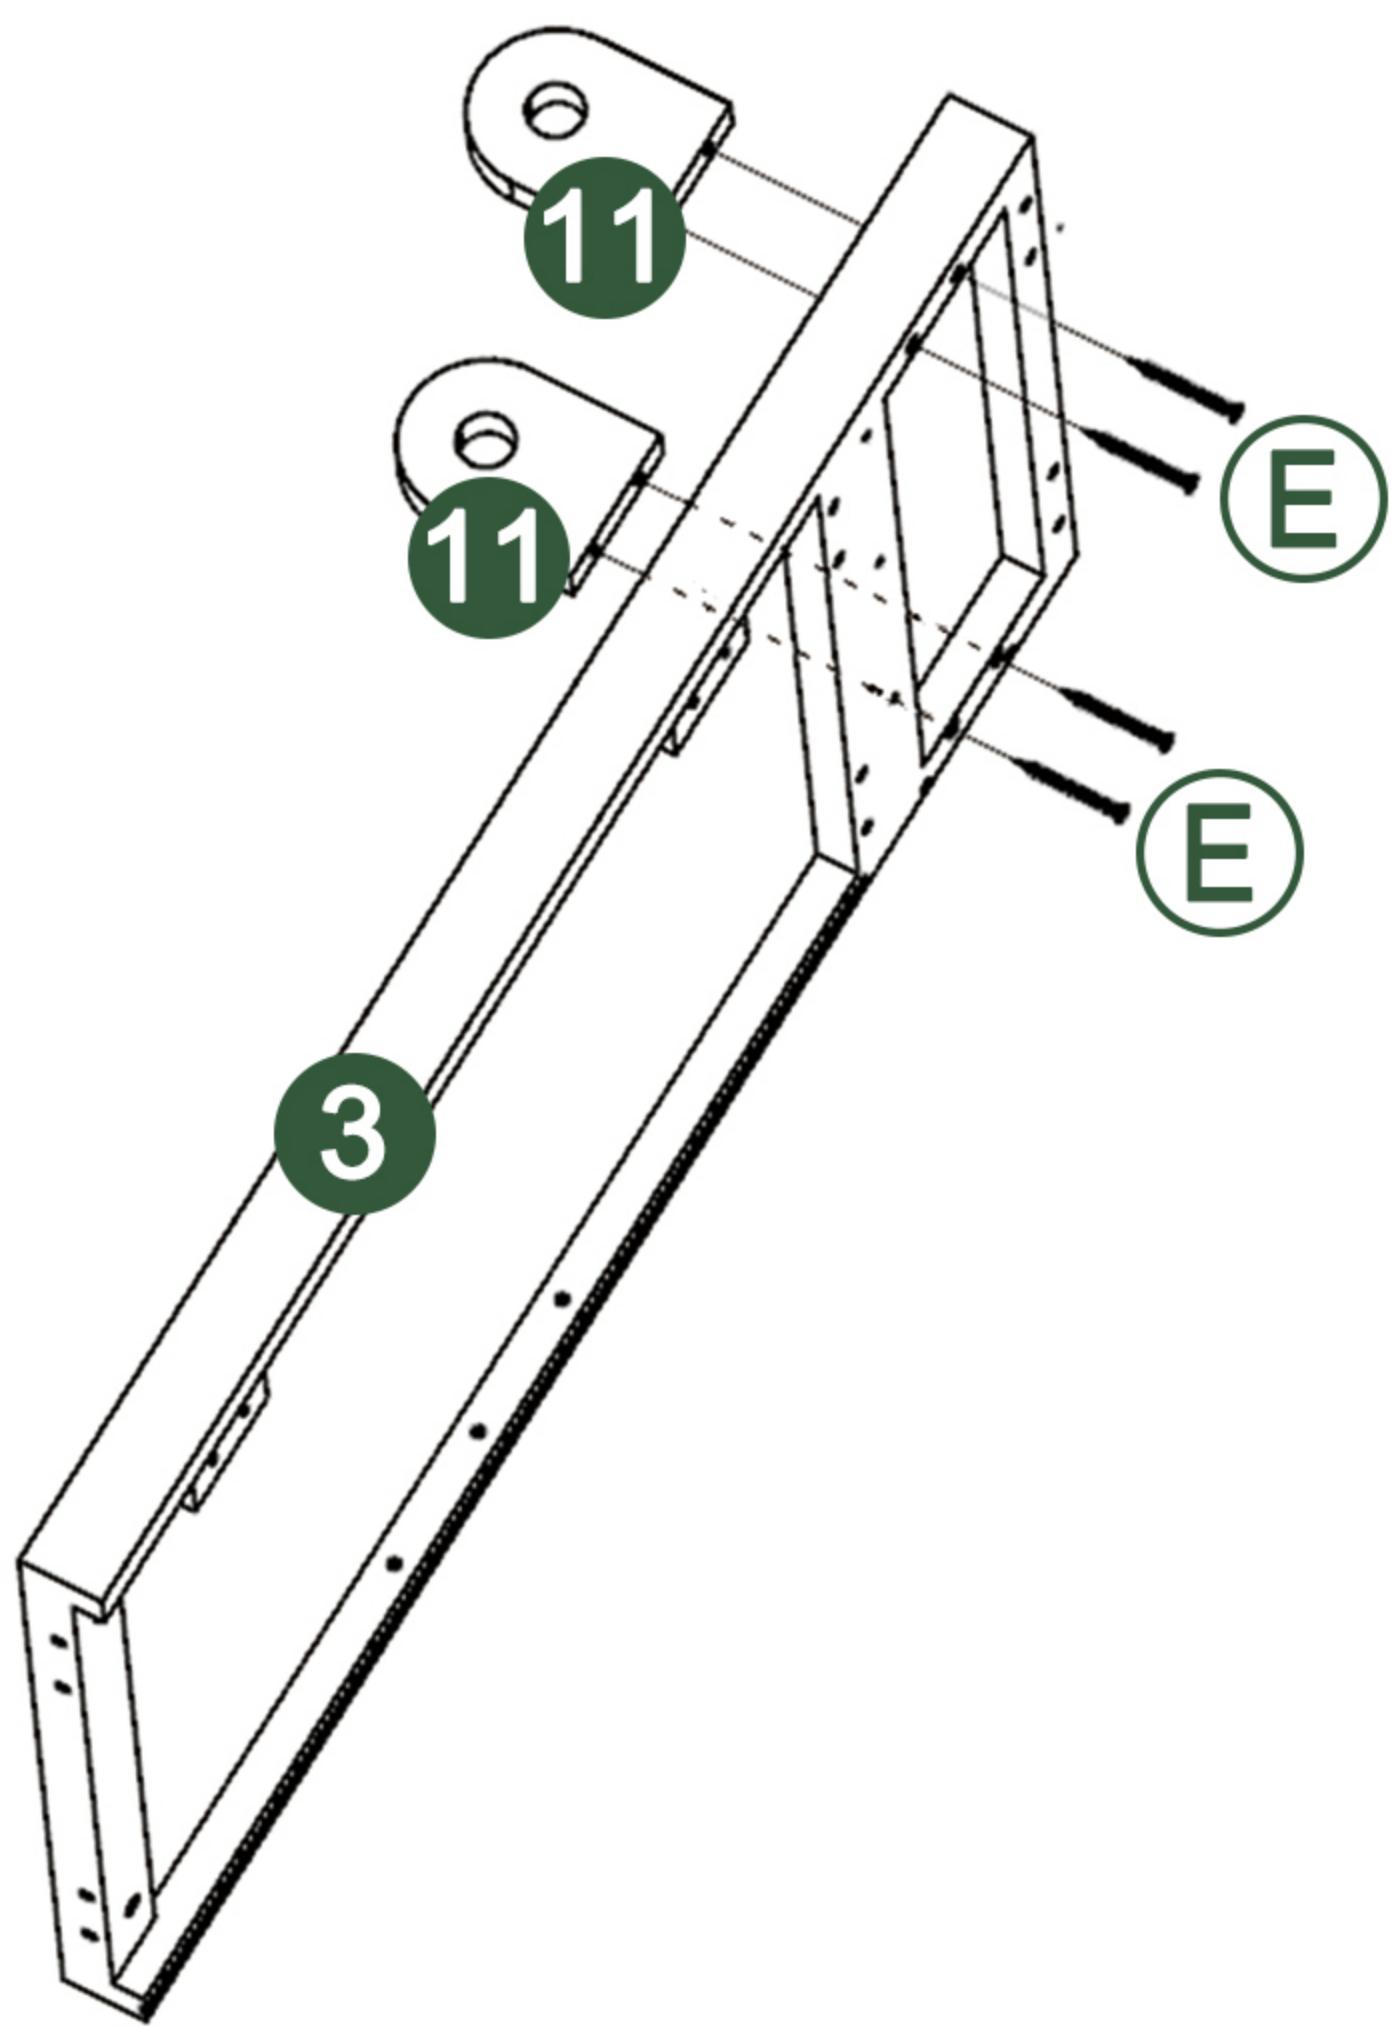


6a.

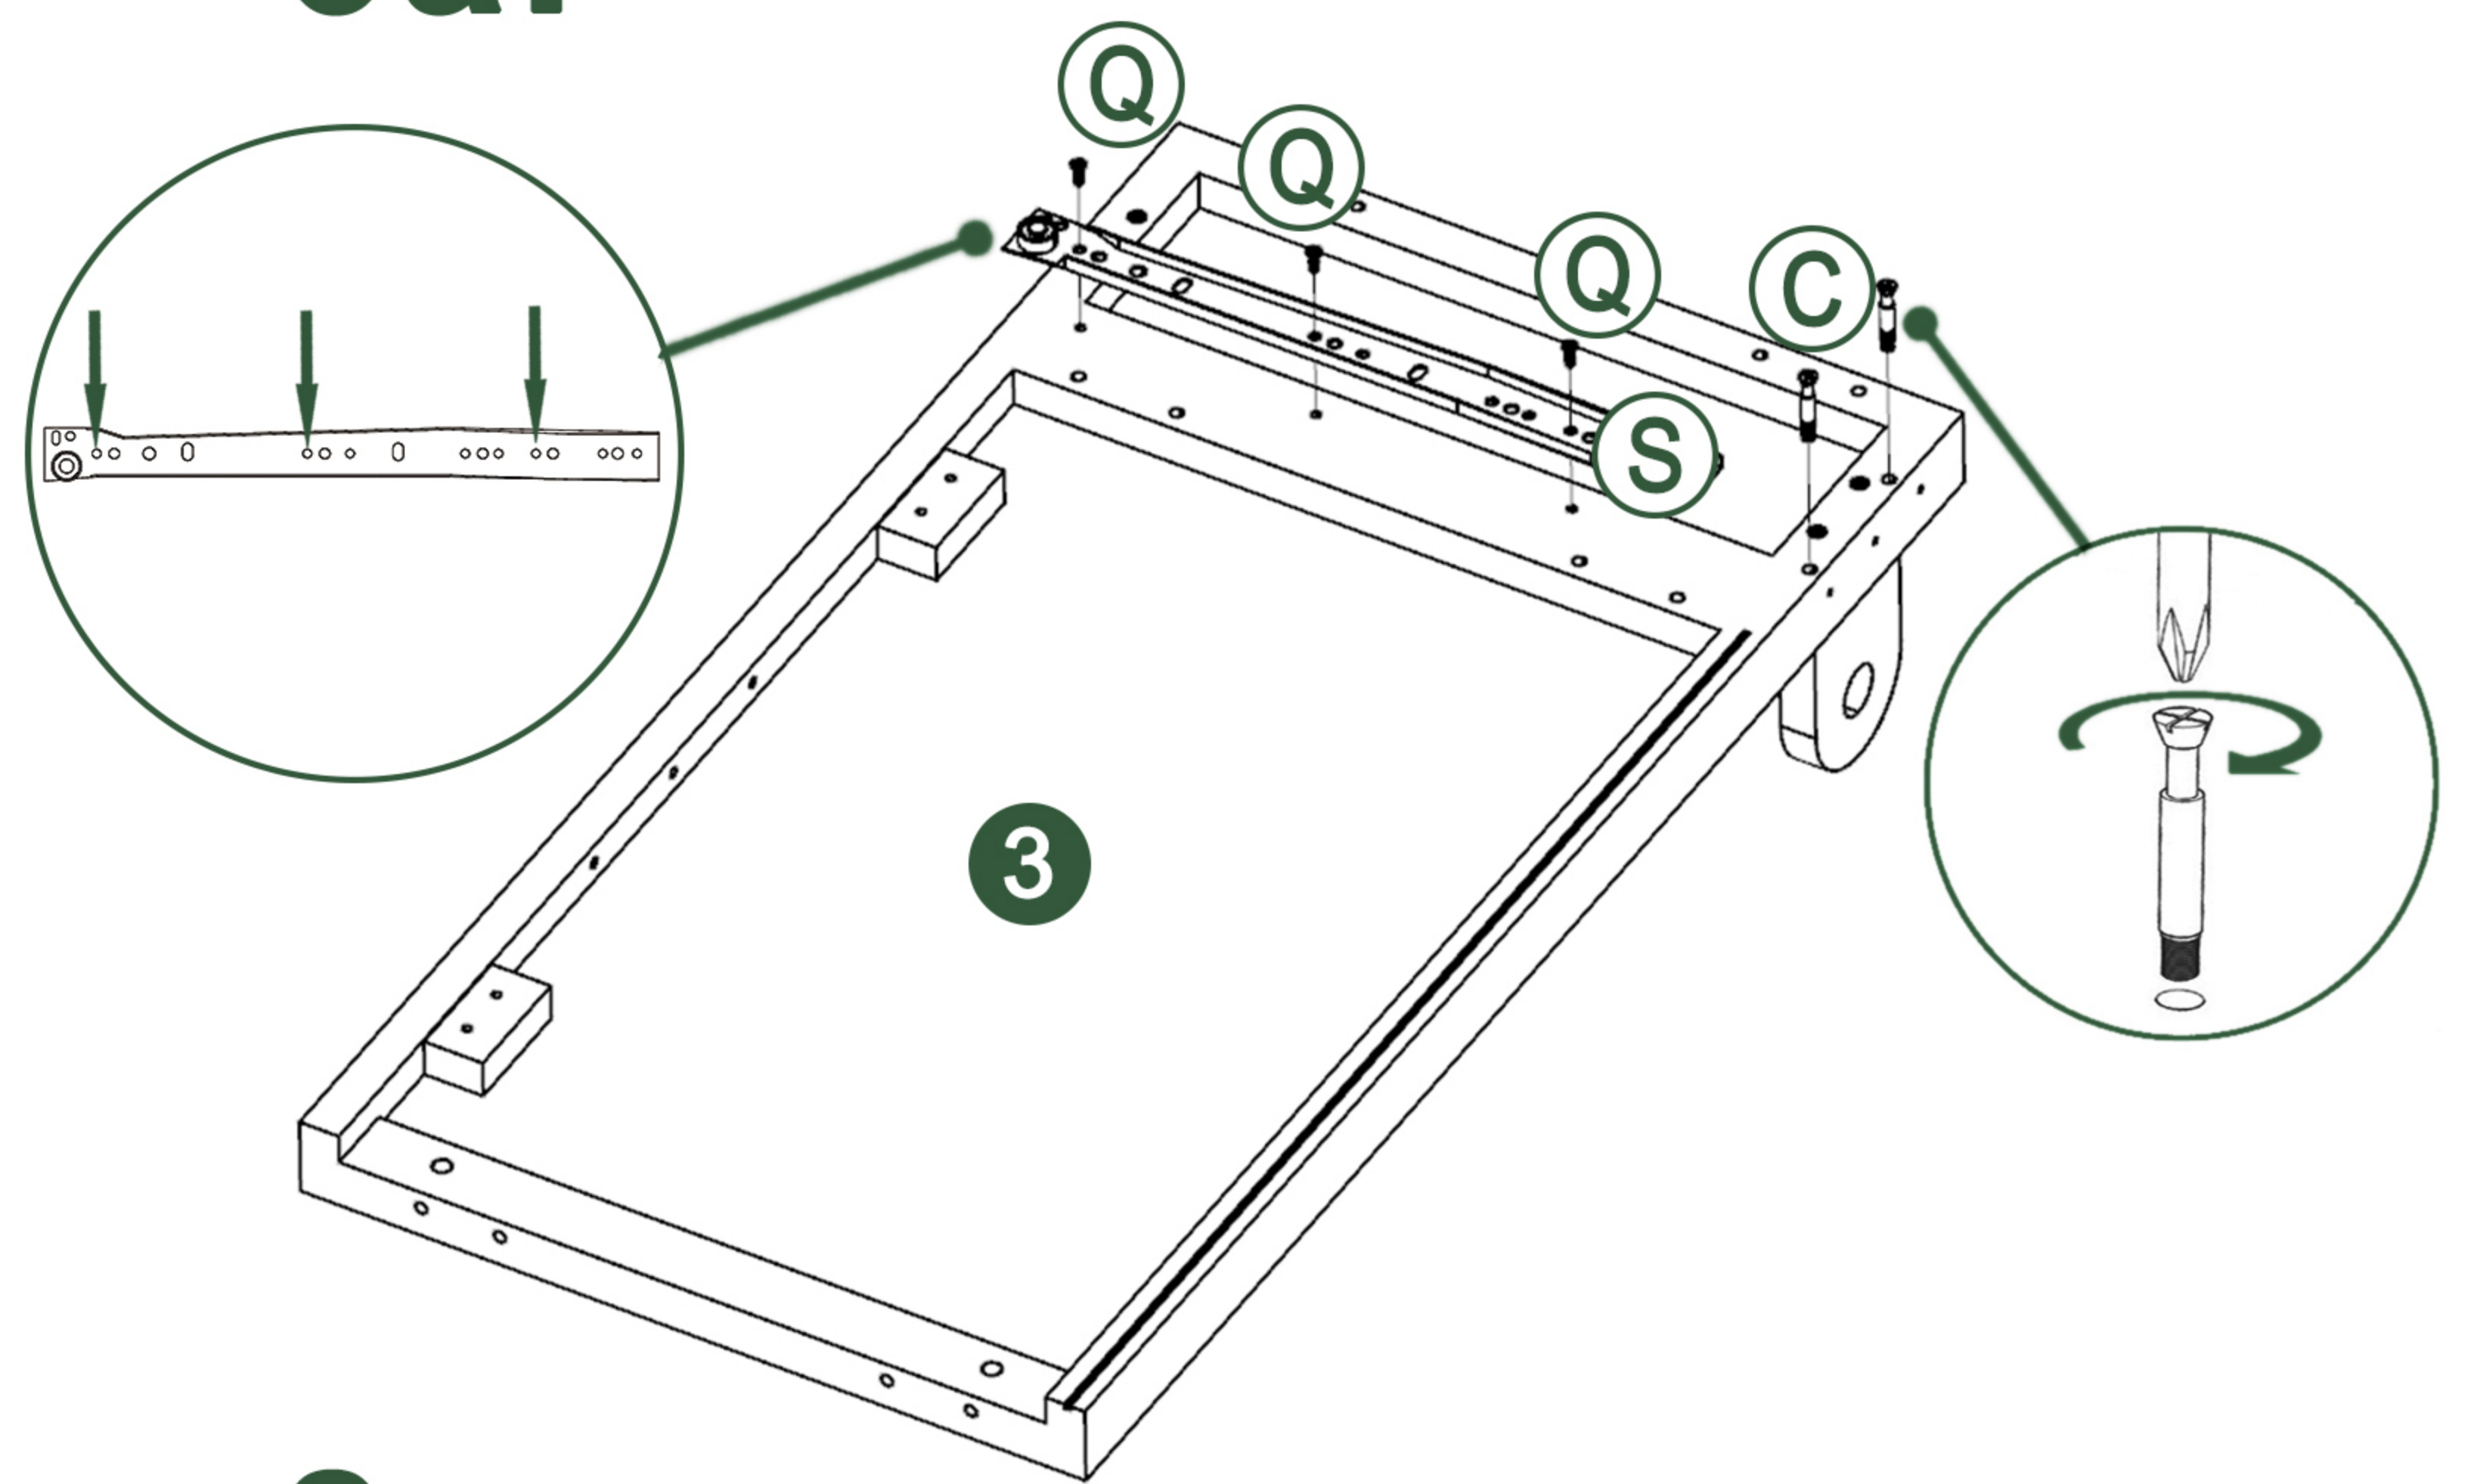


7a.

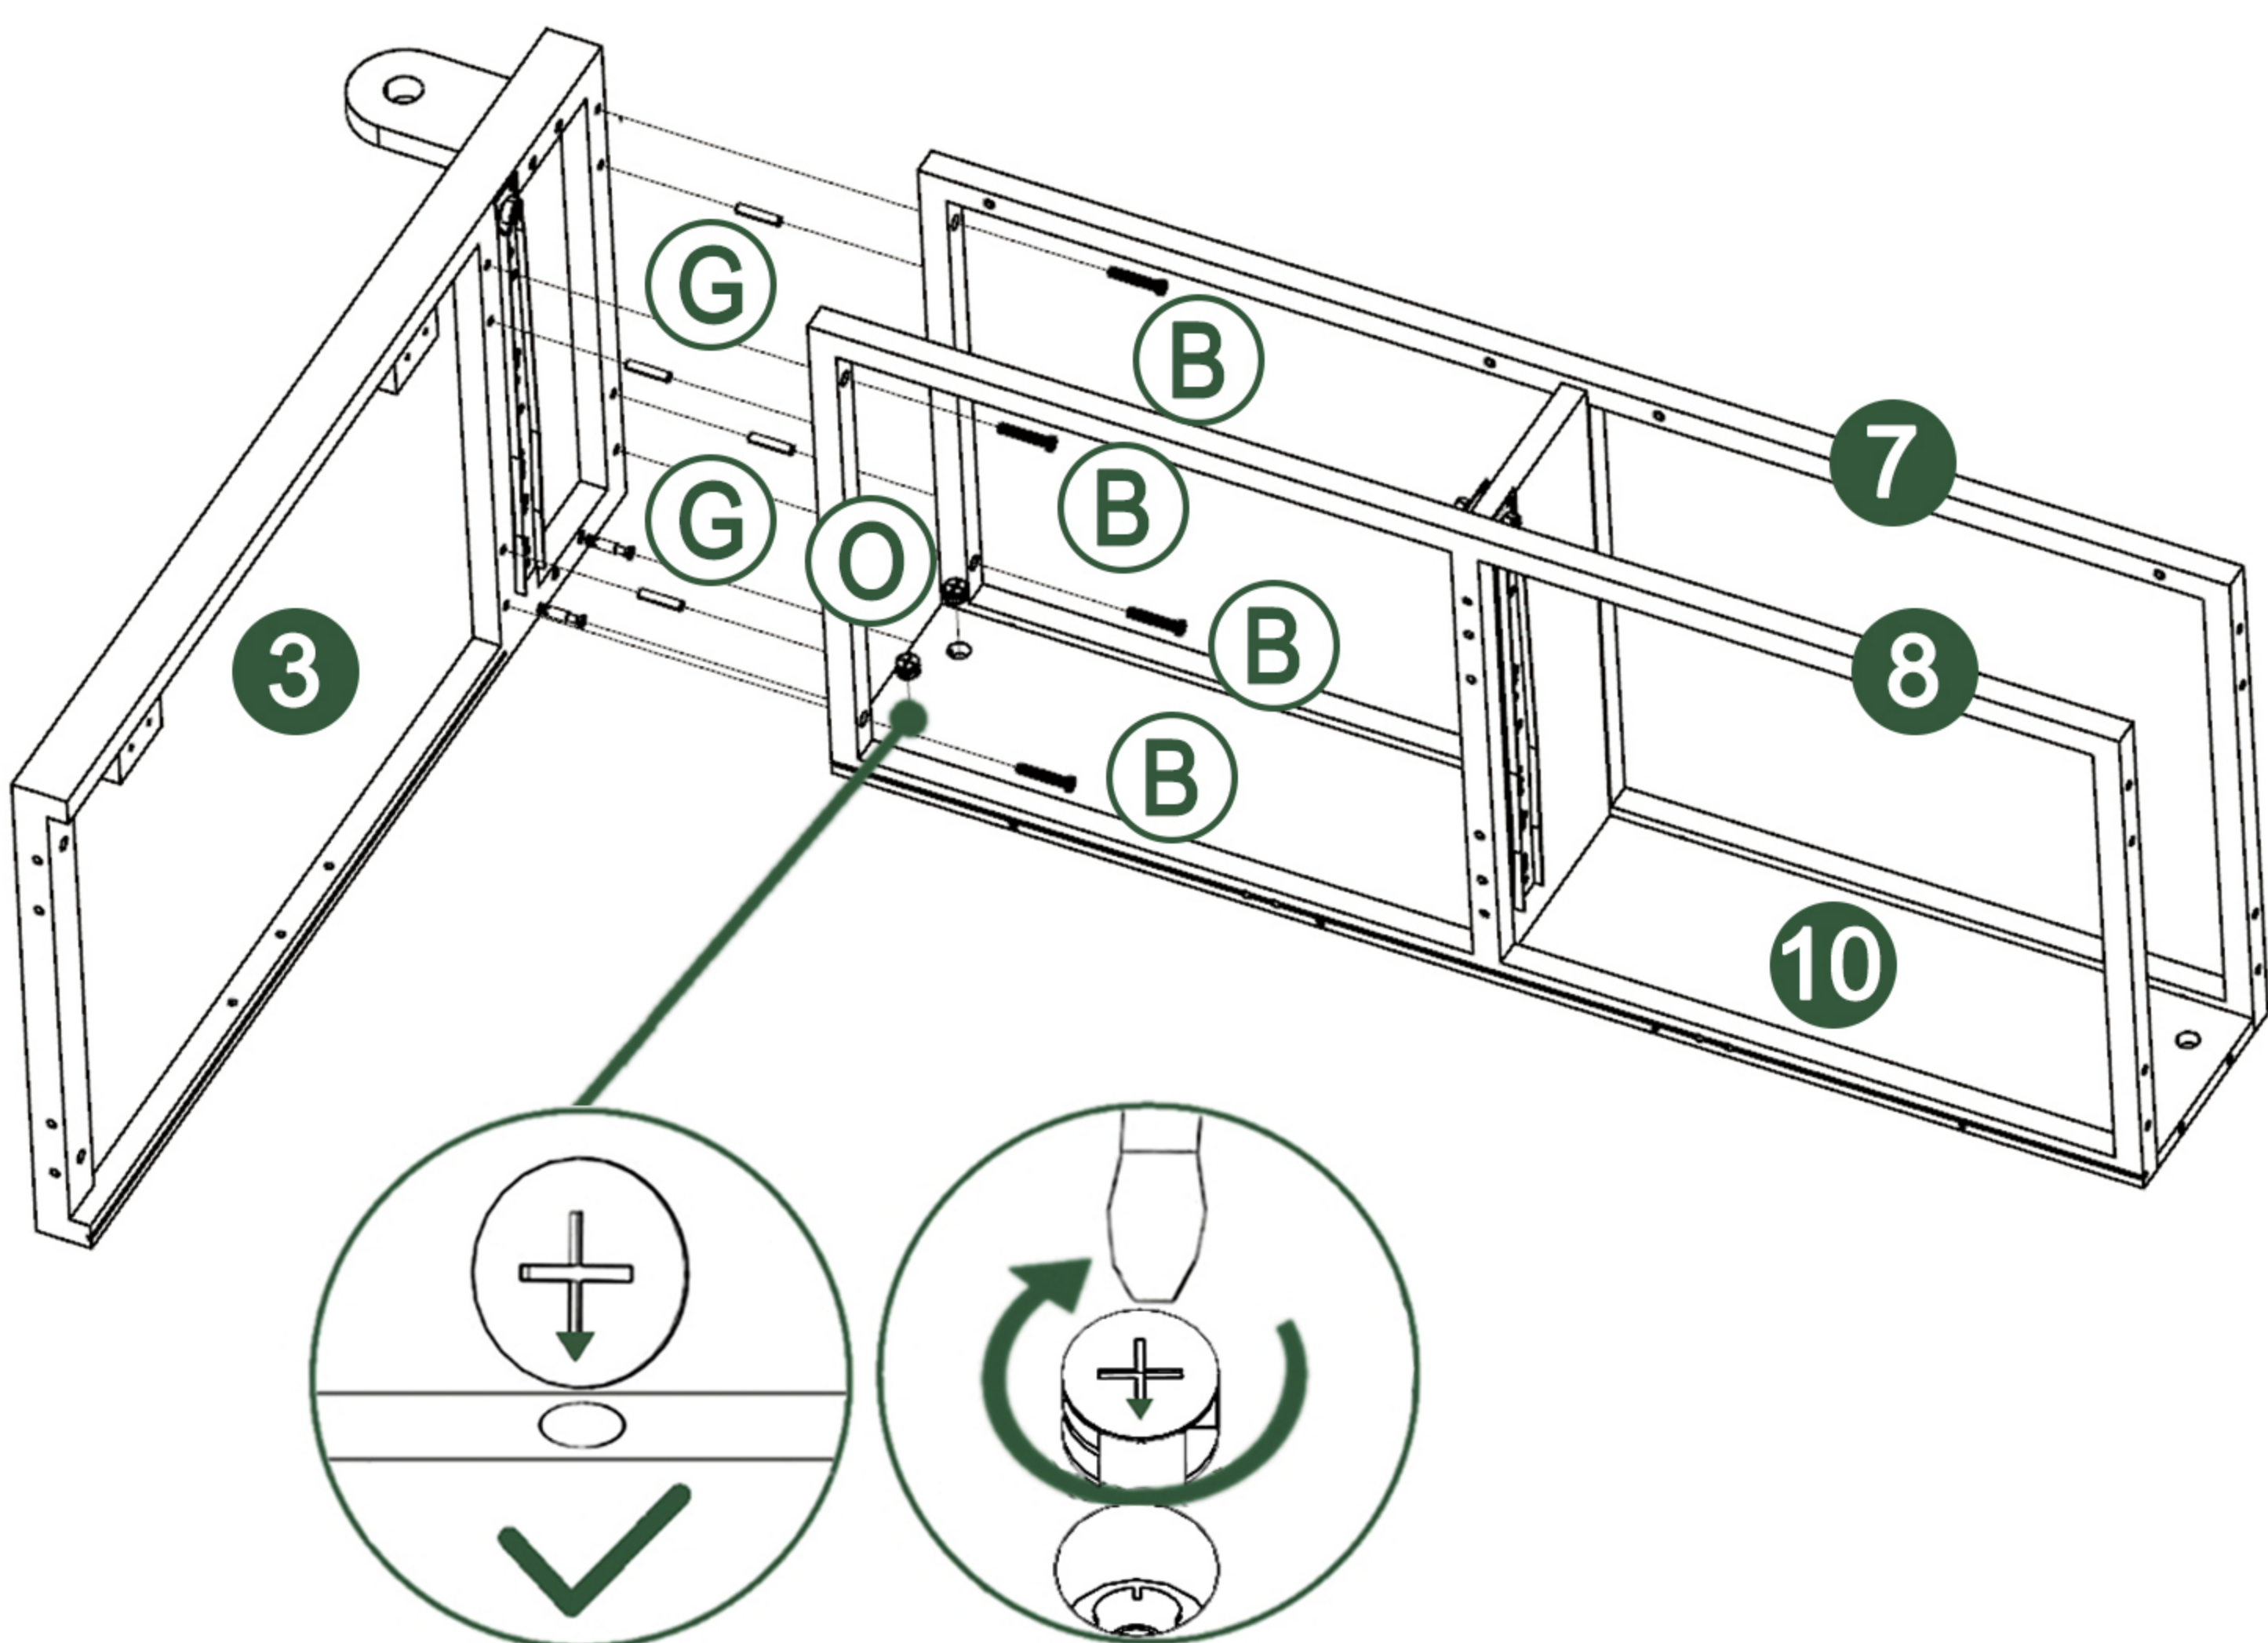


8a.

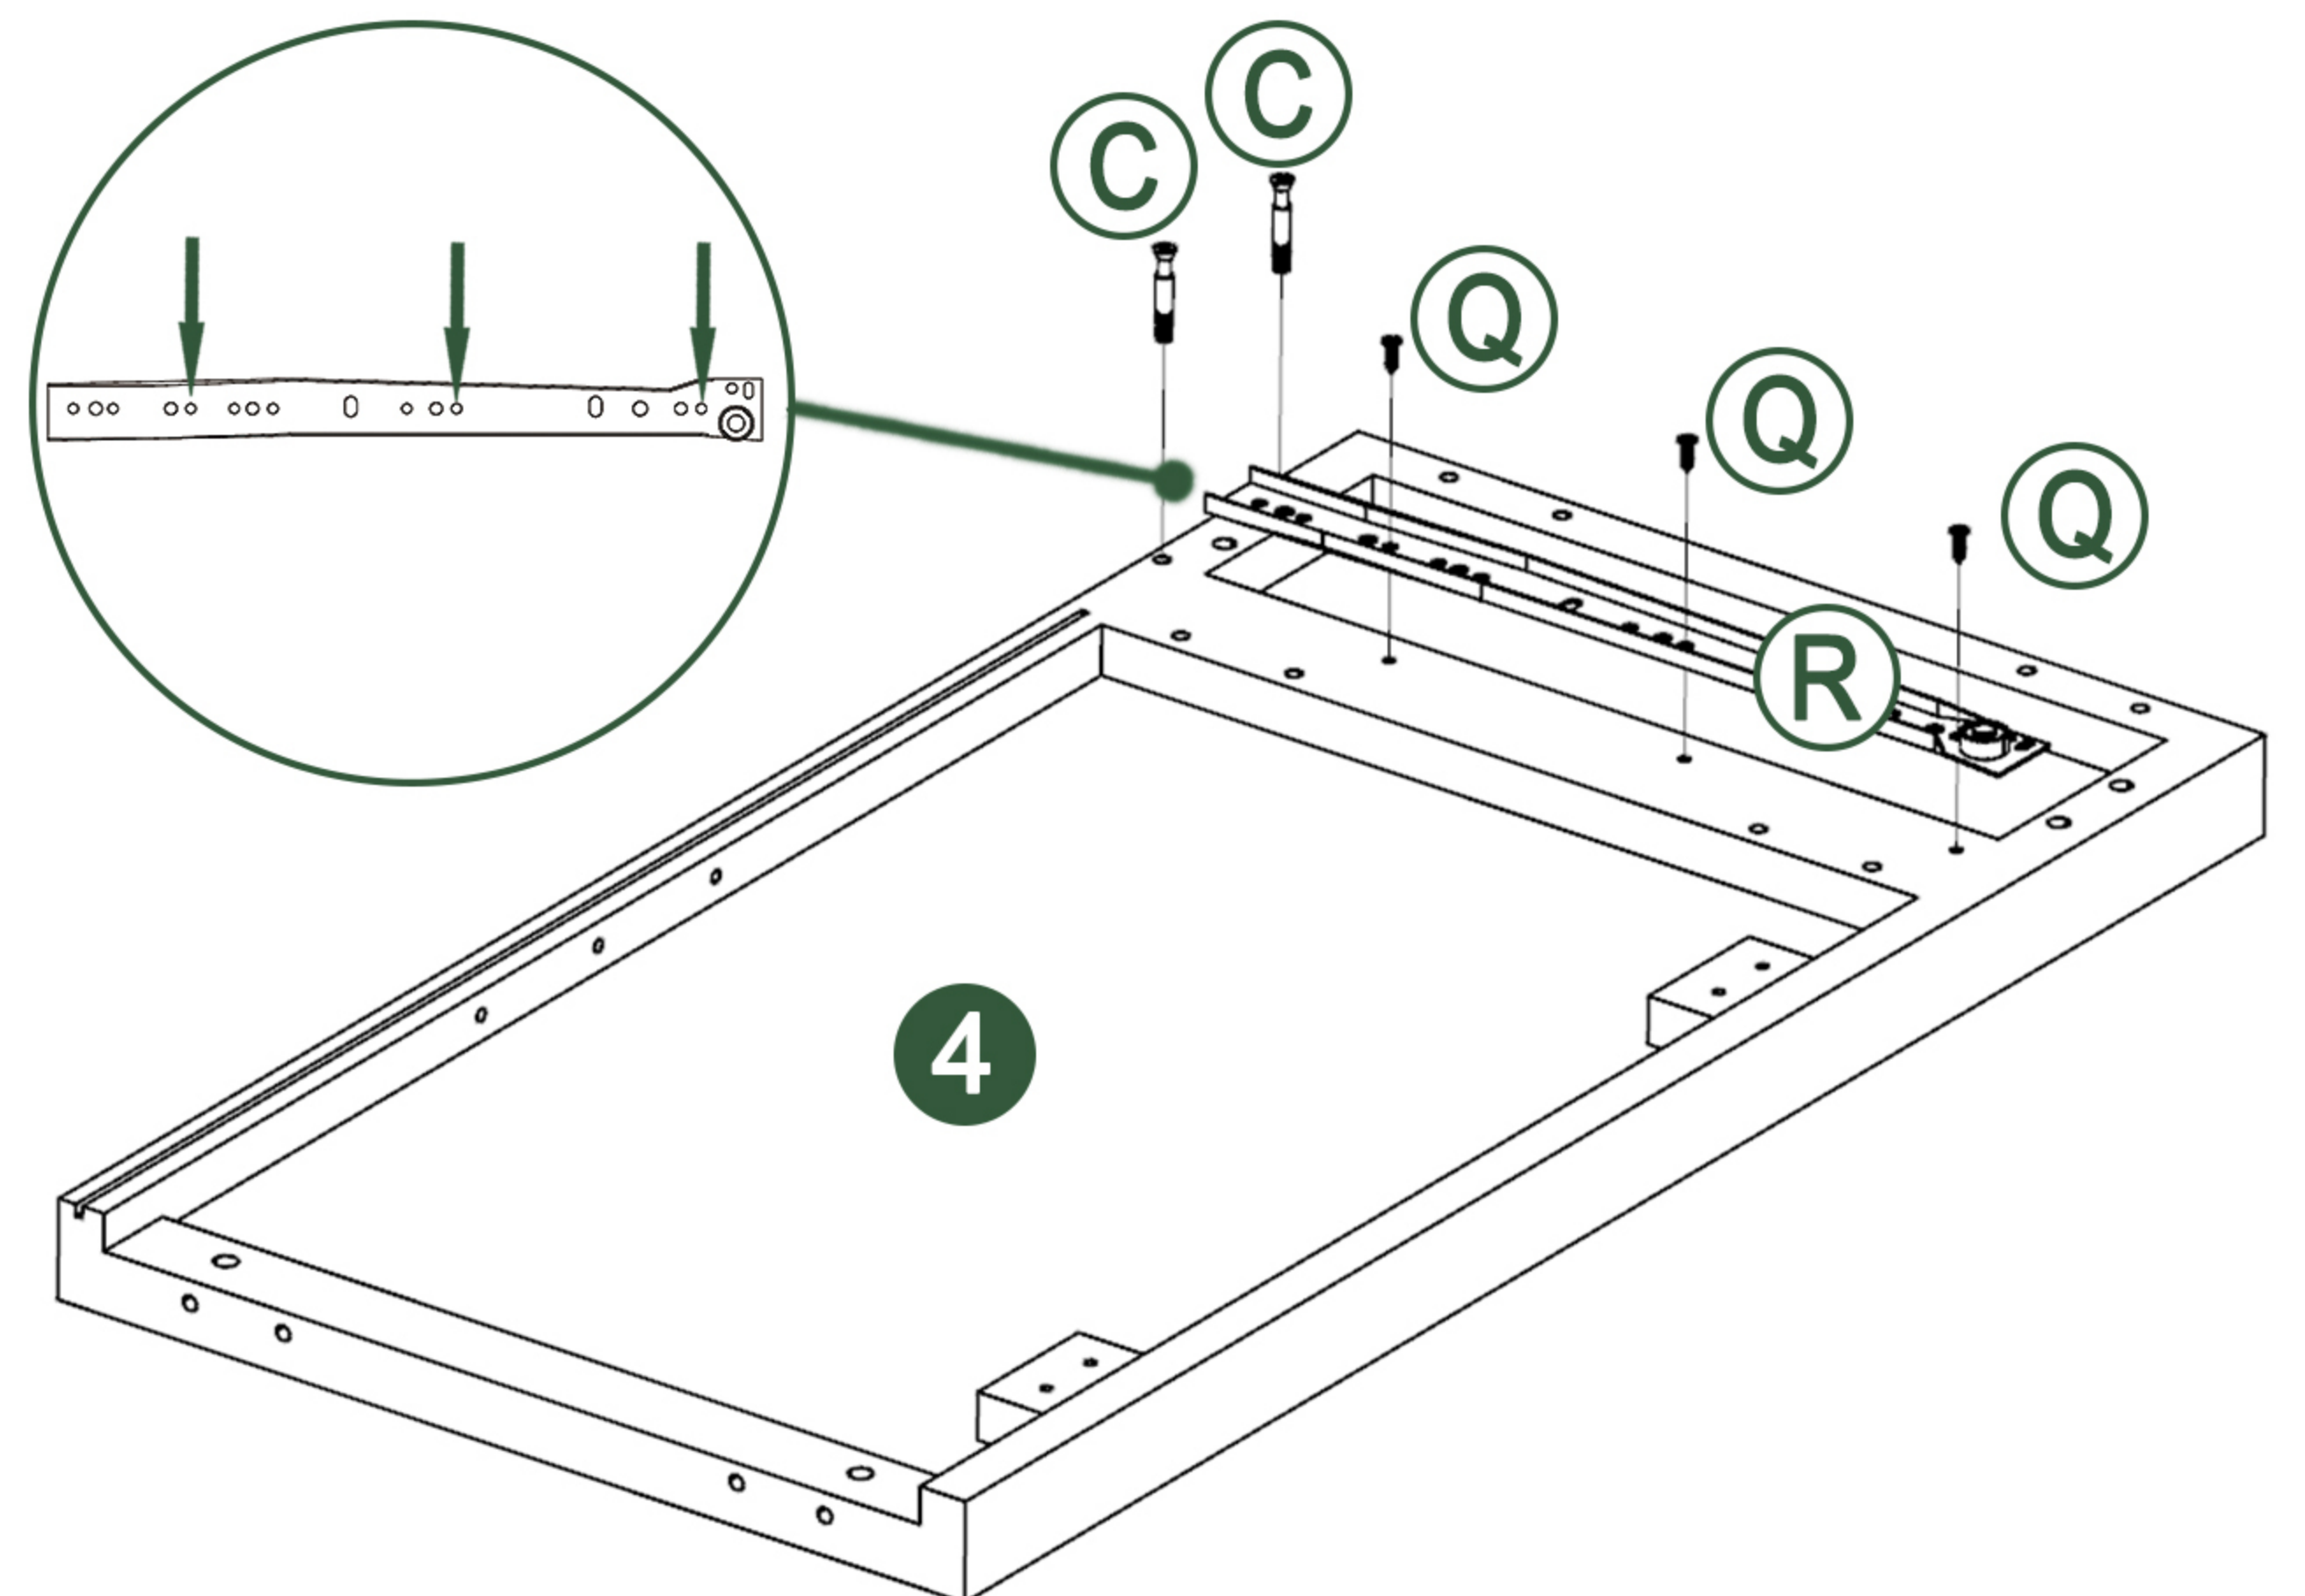


9a.

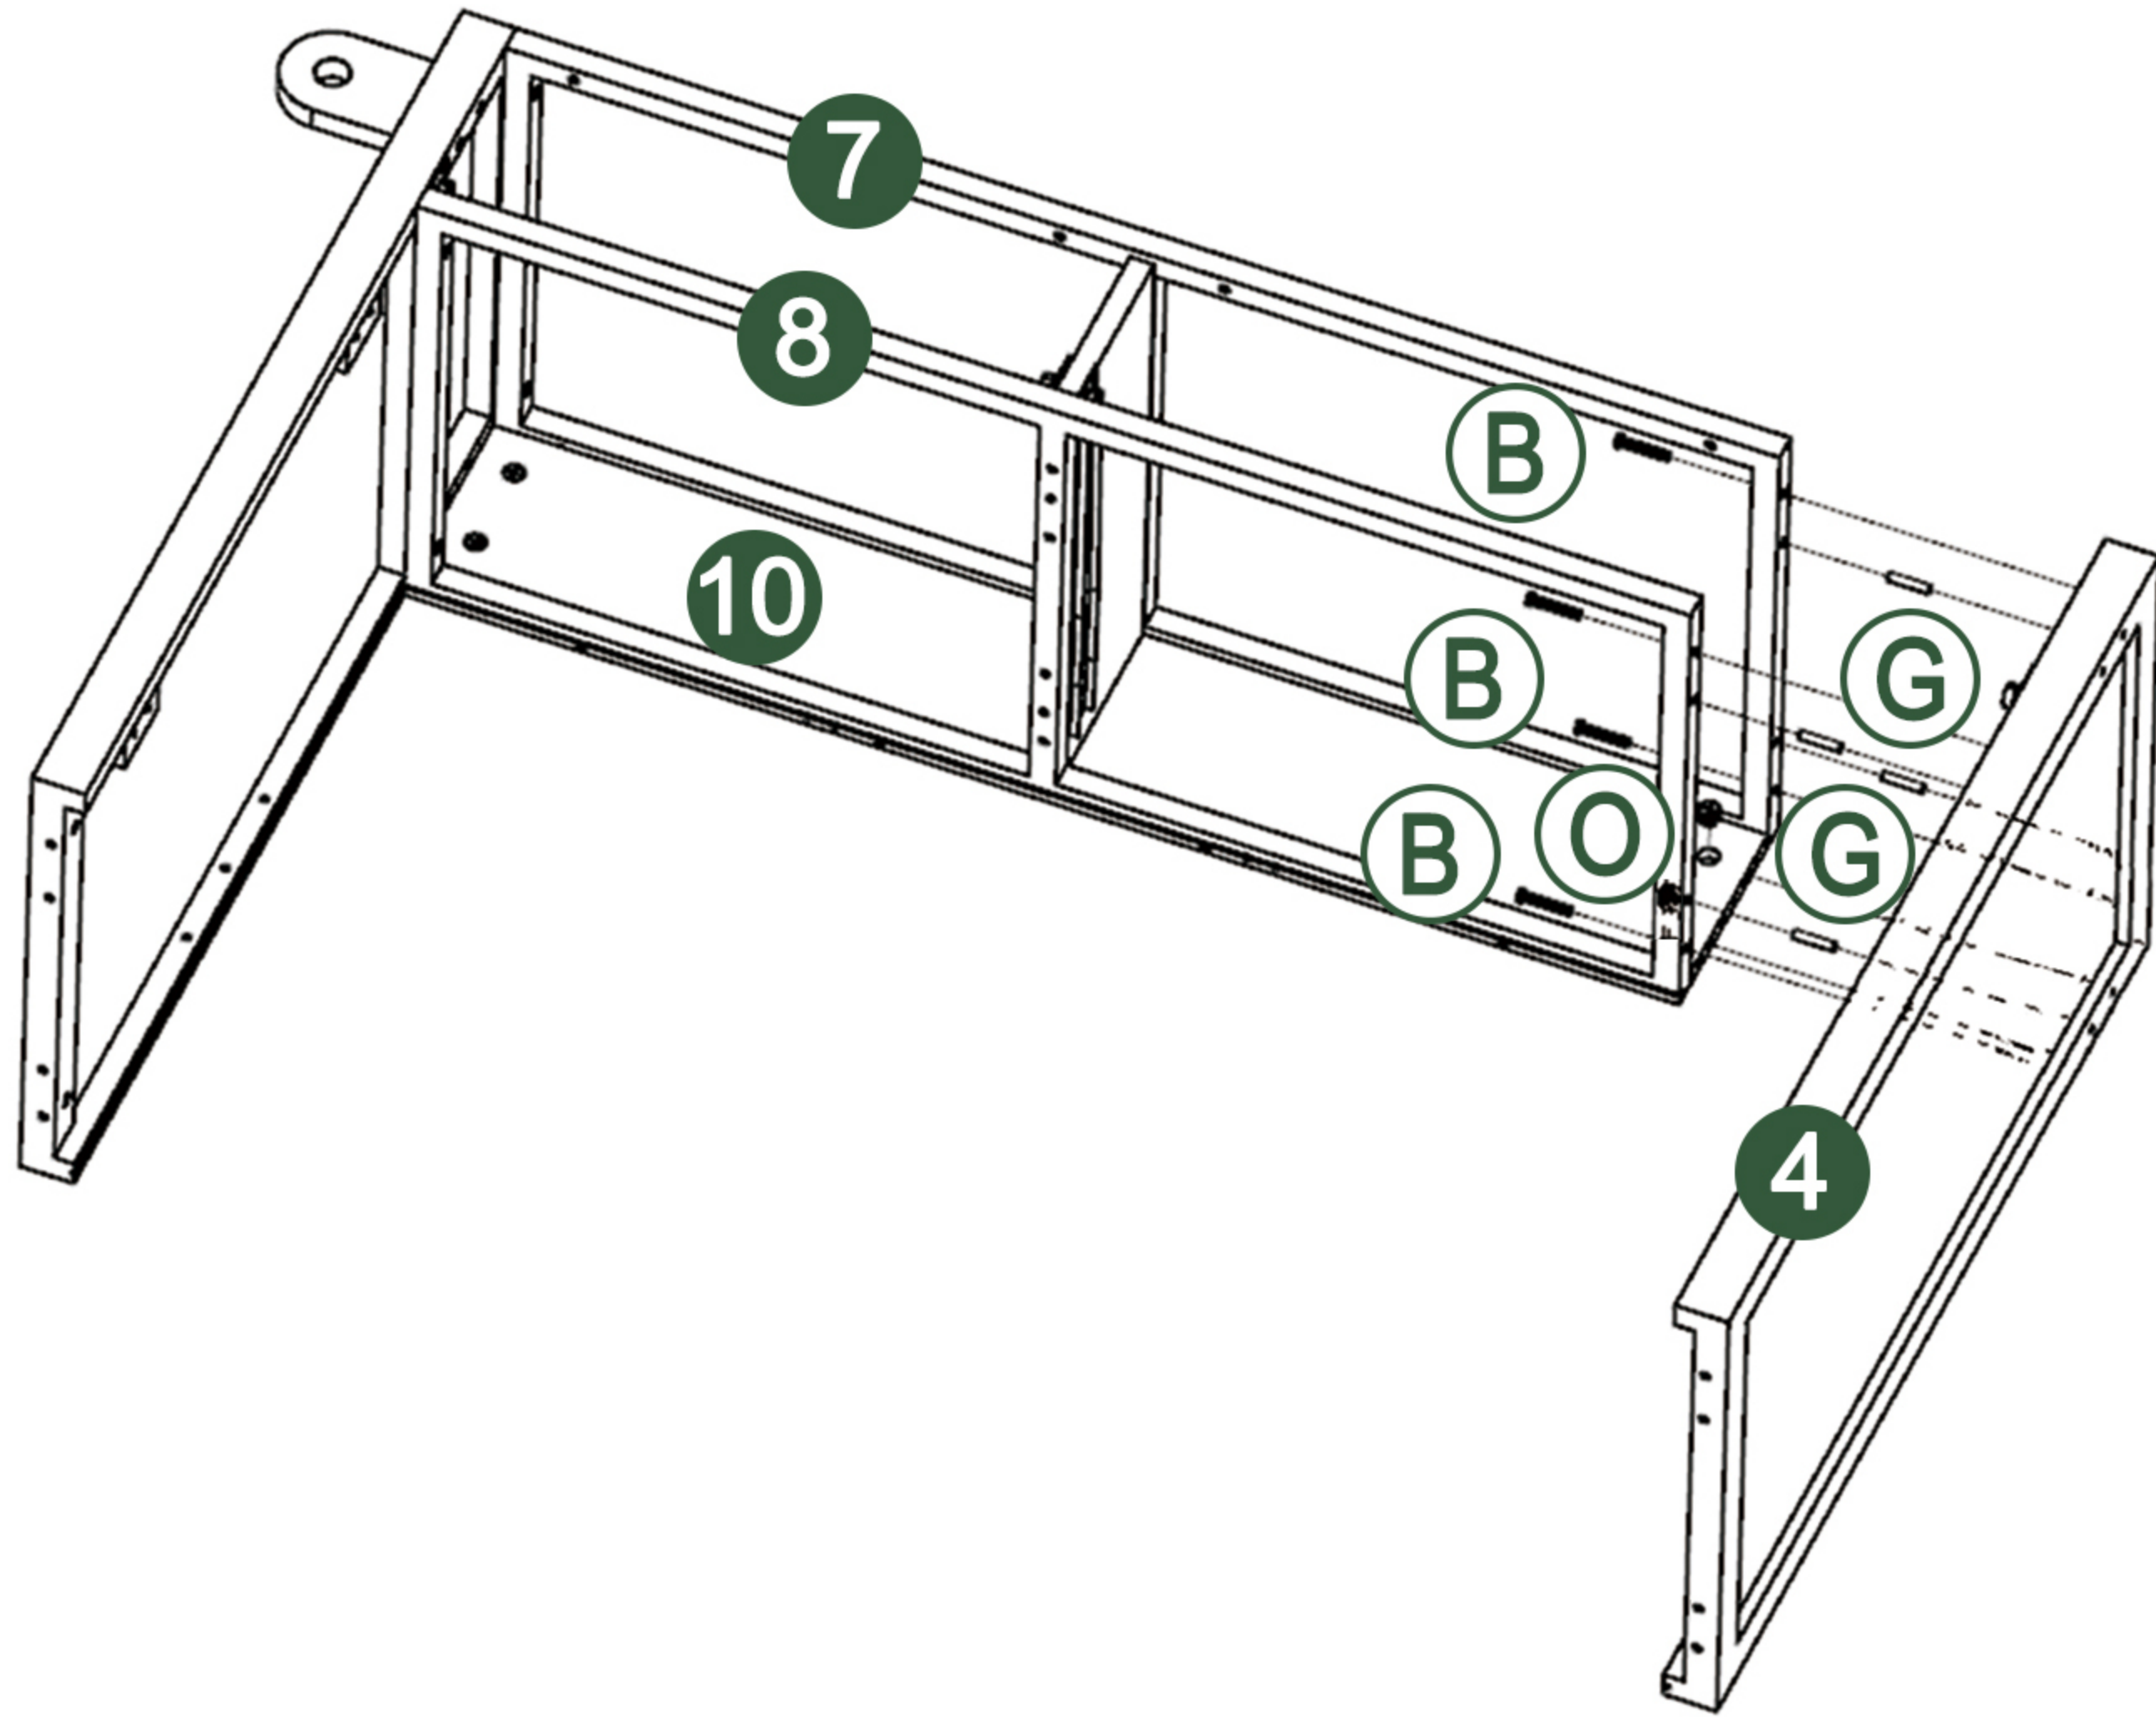


10.

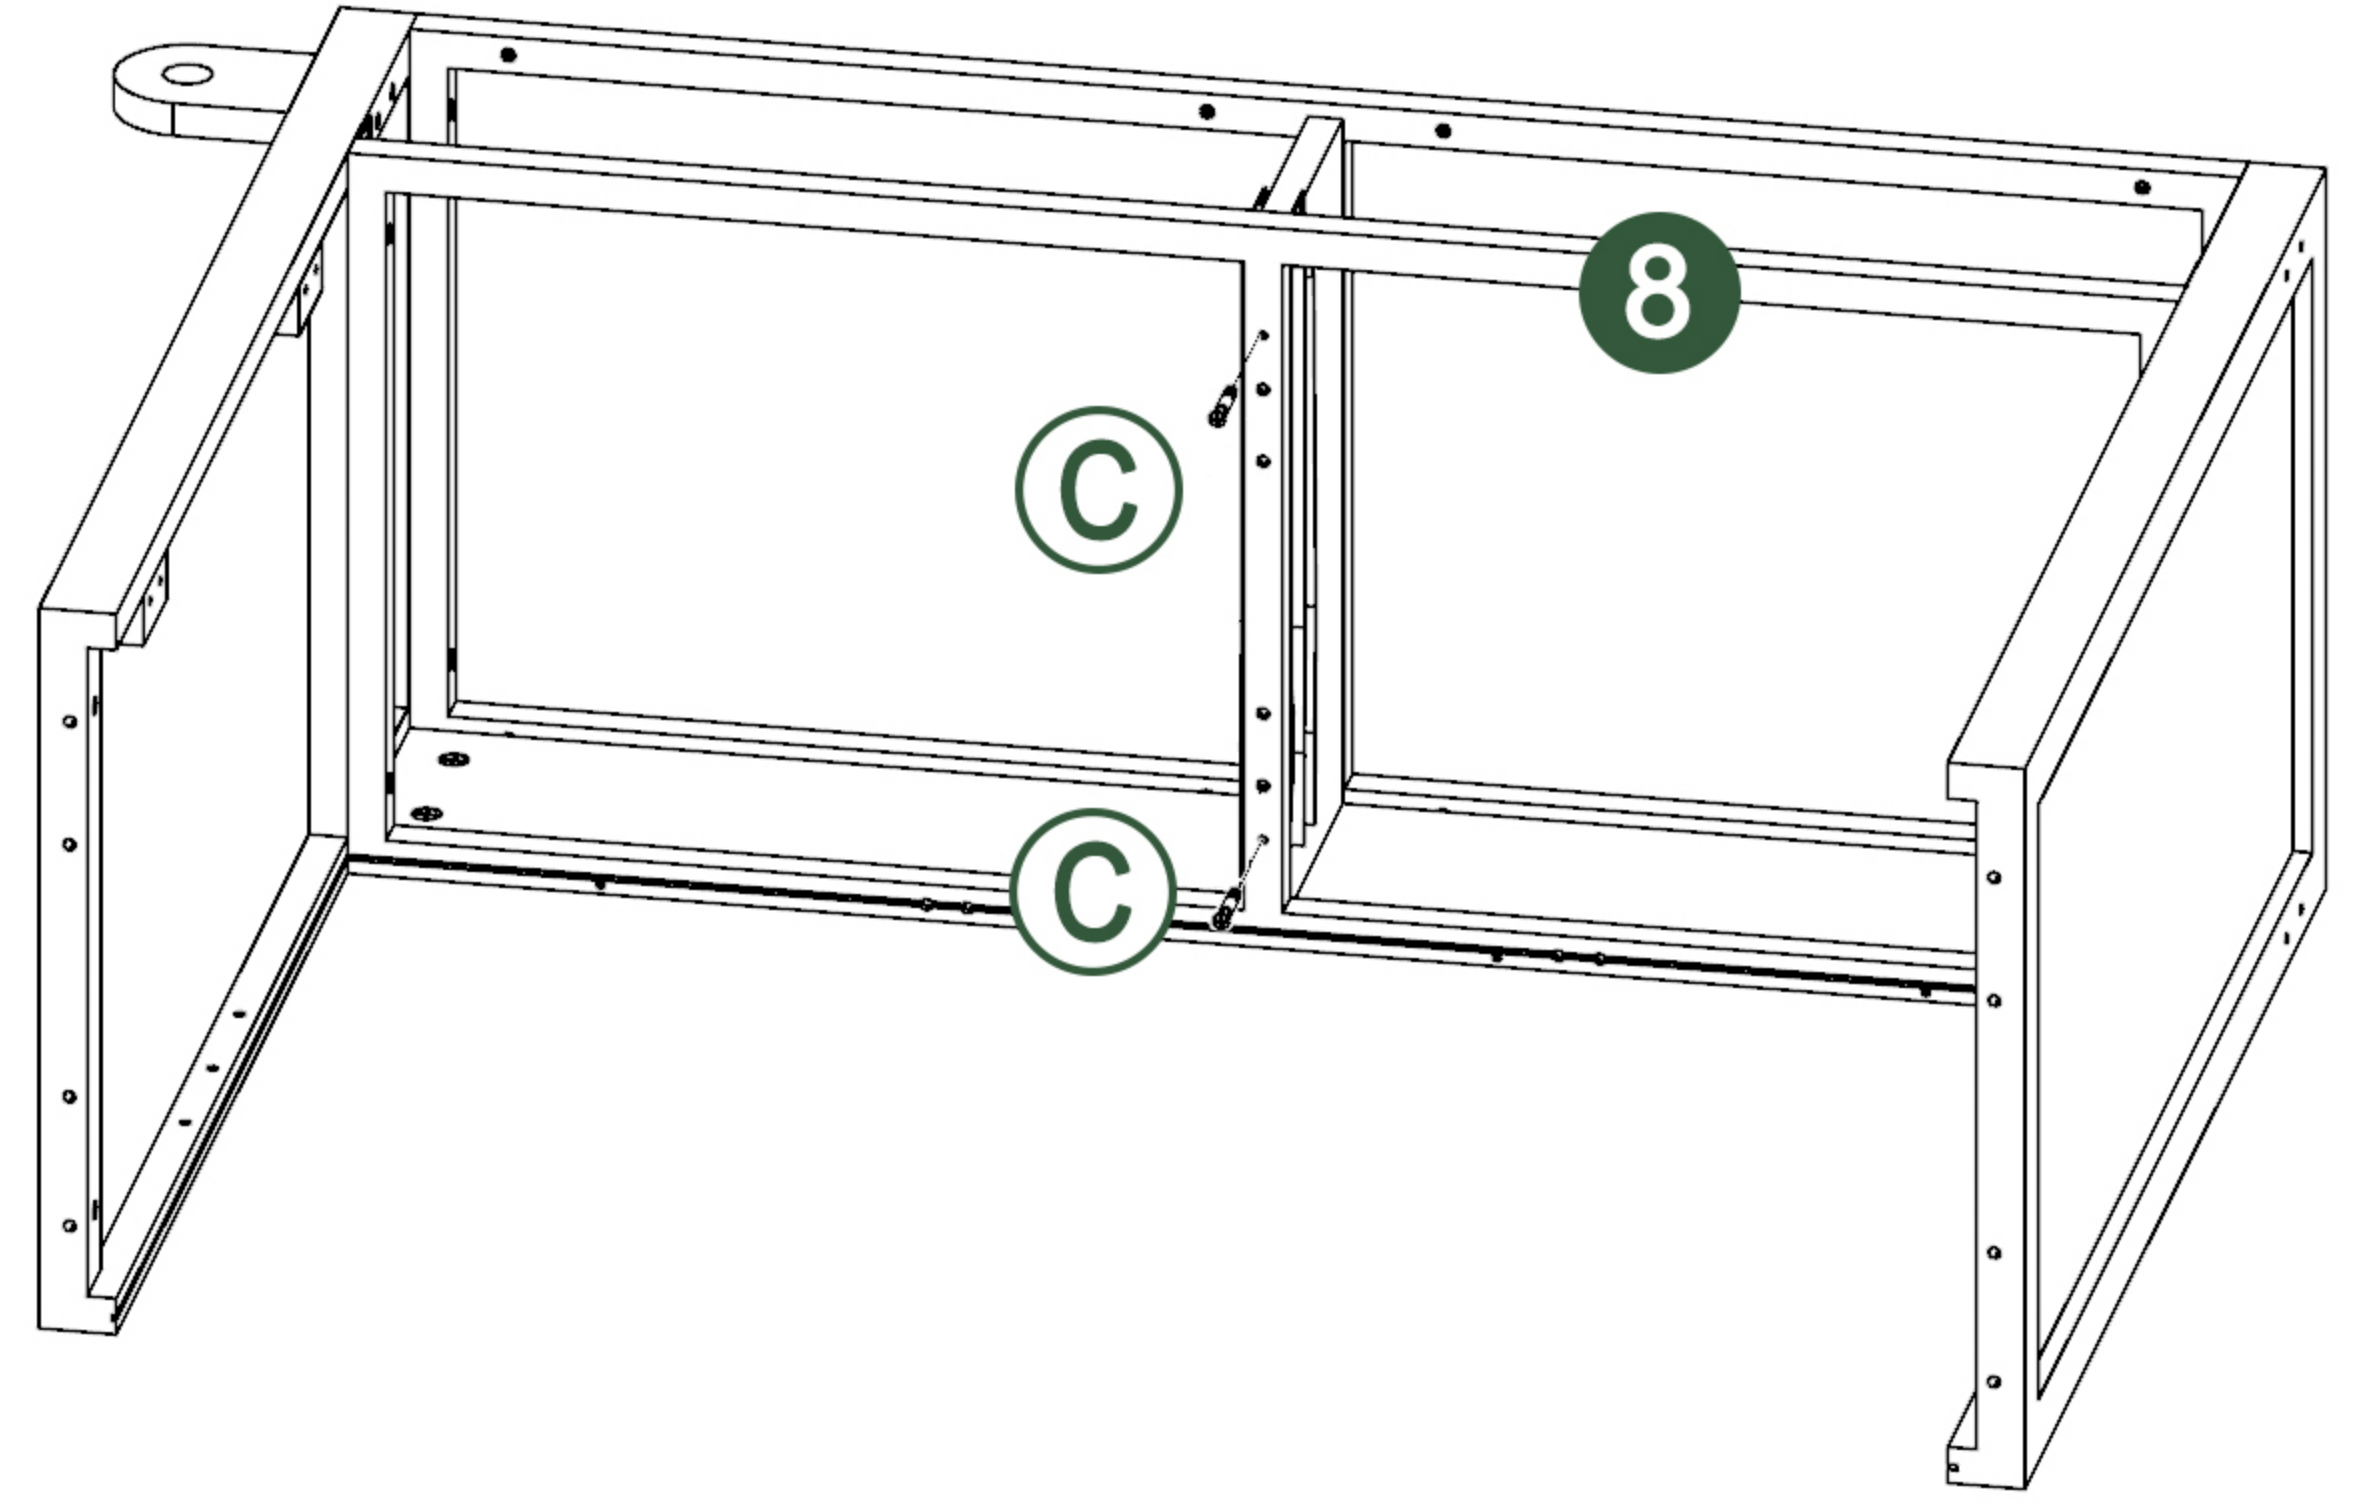


11.

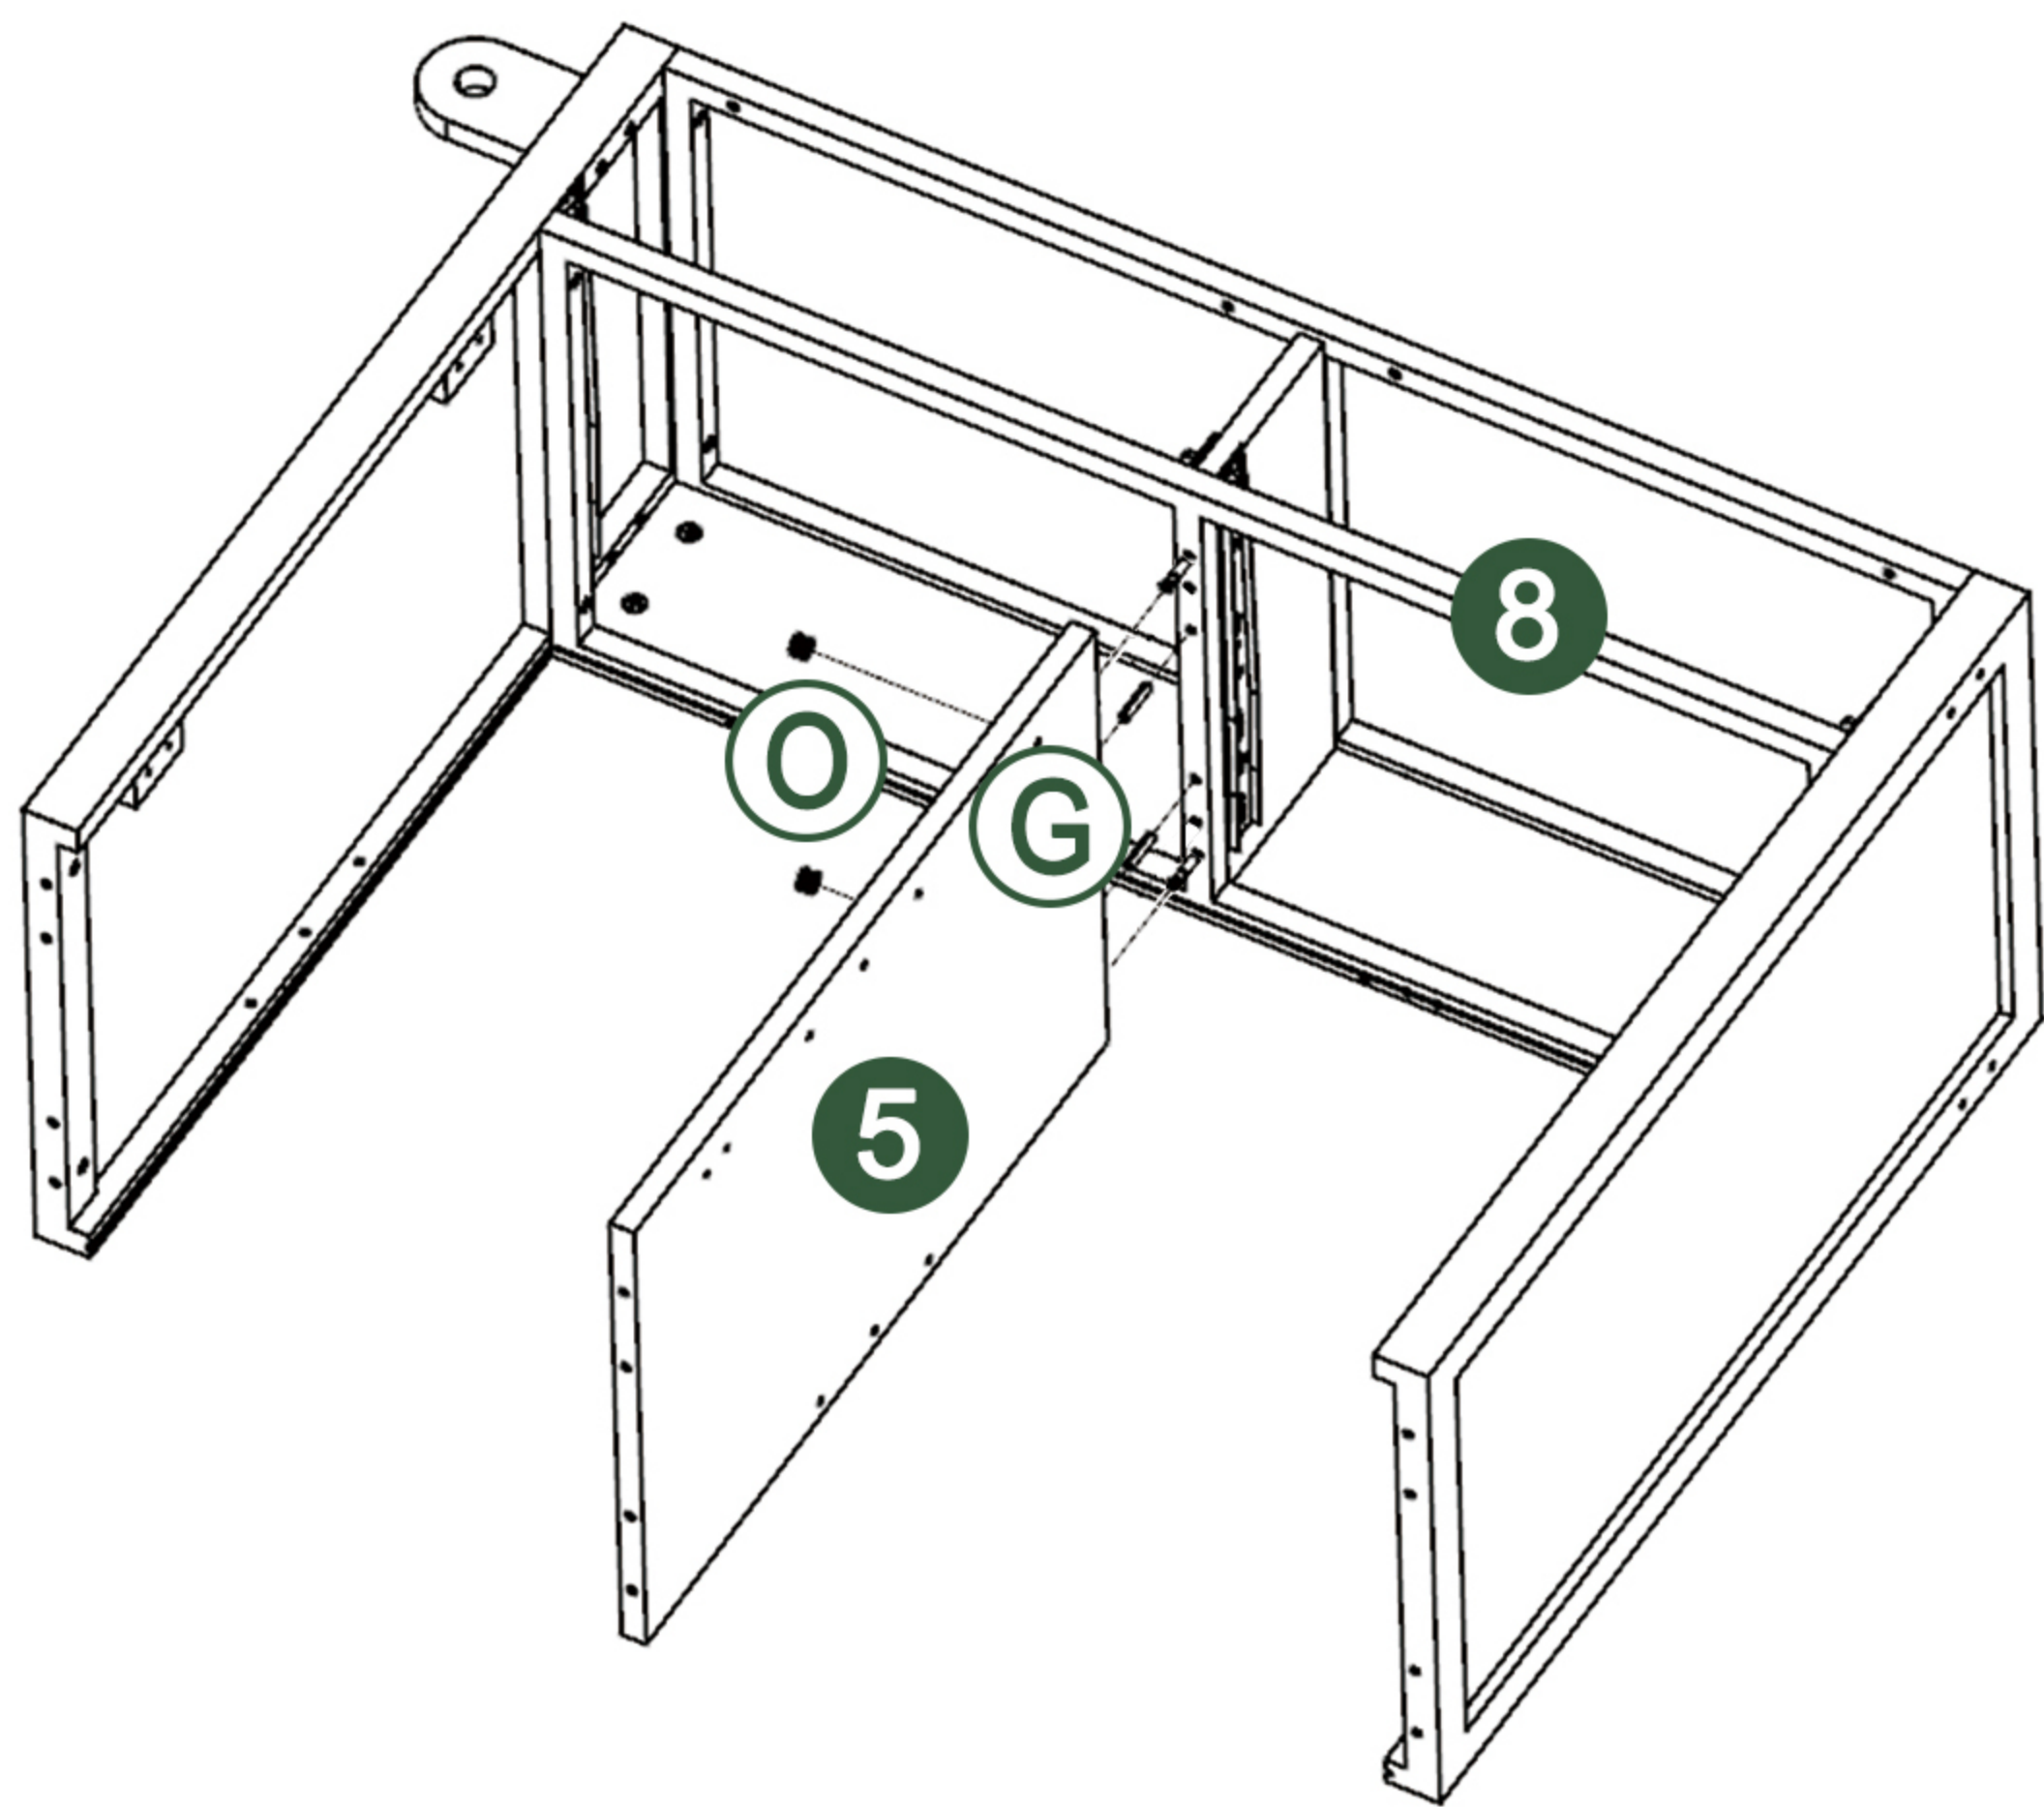


12.

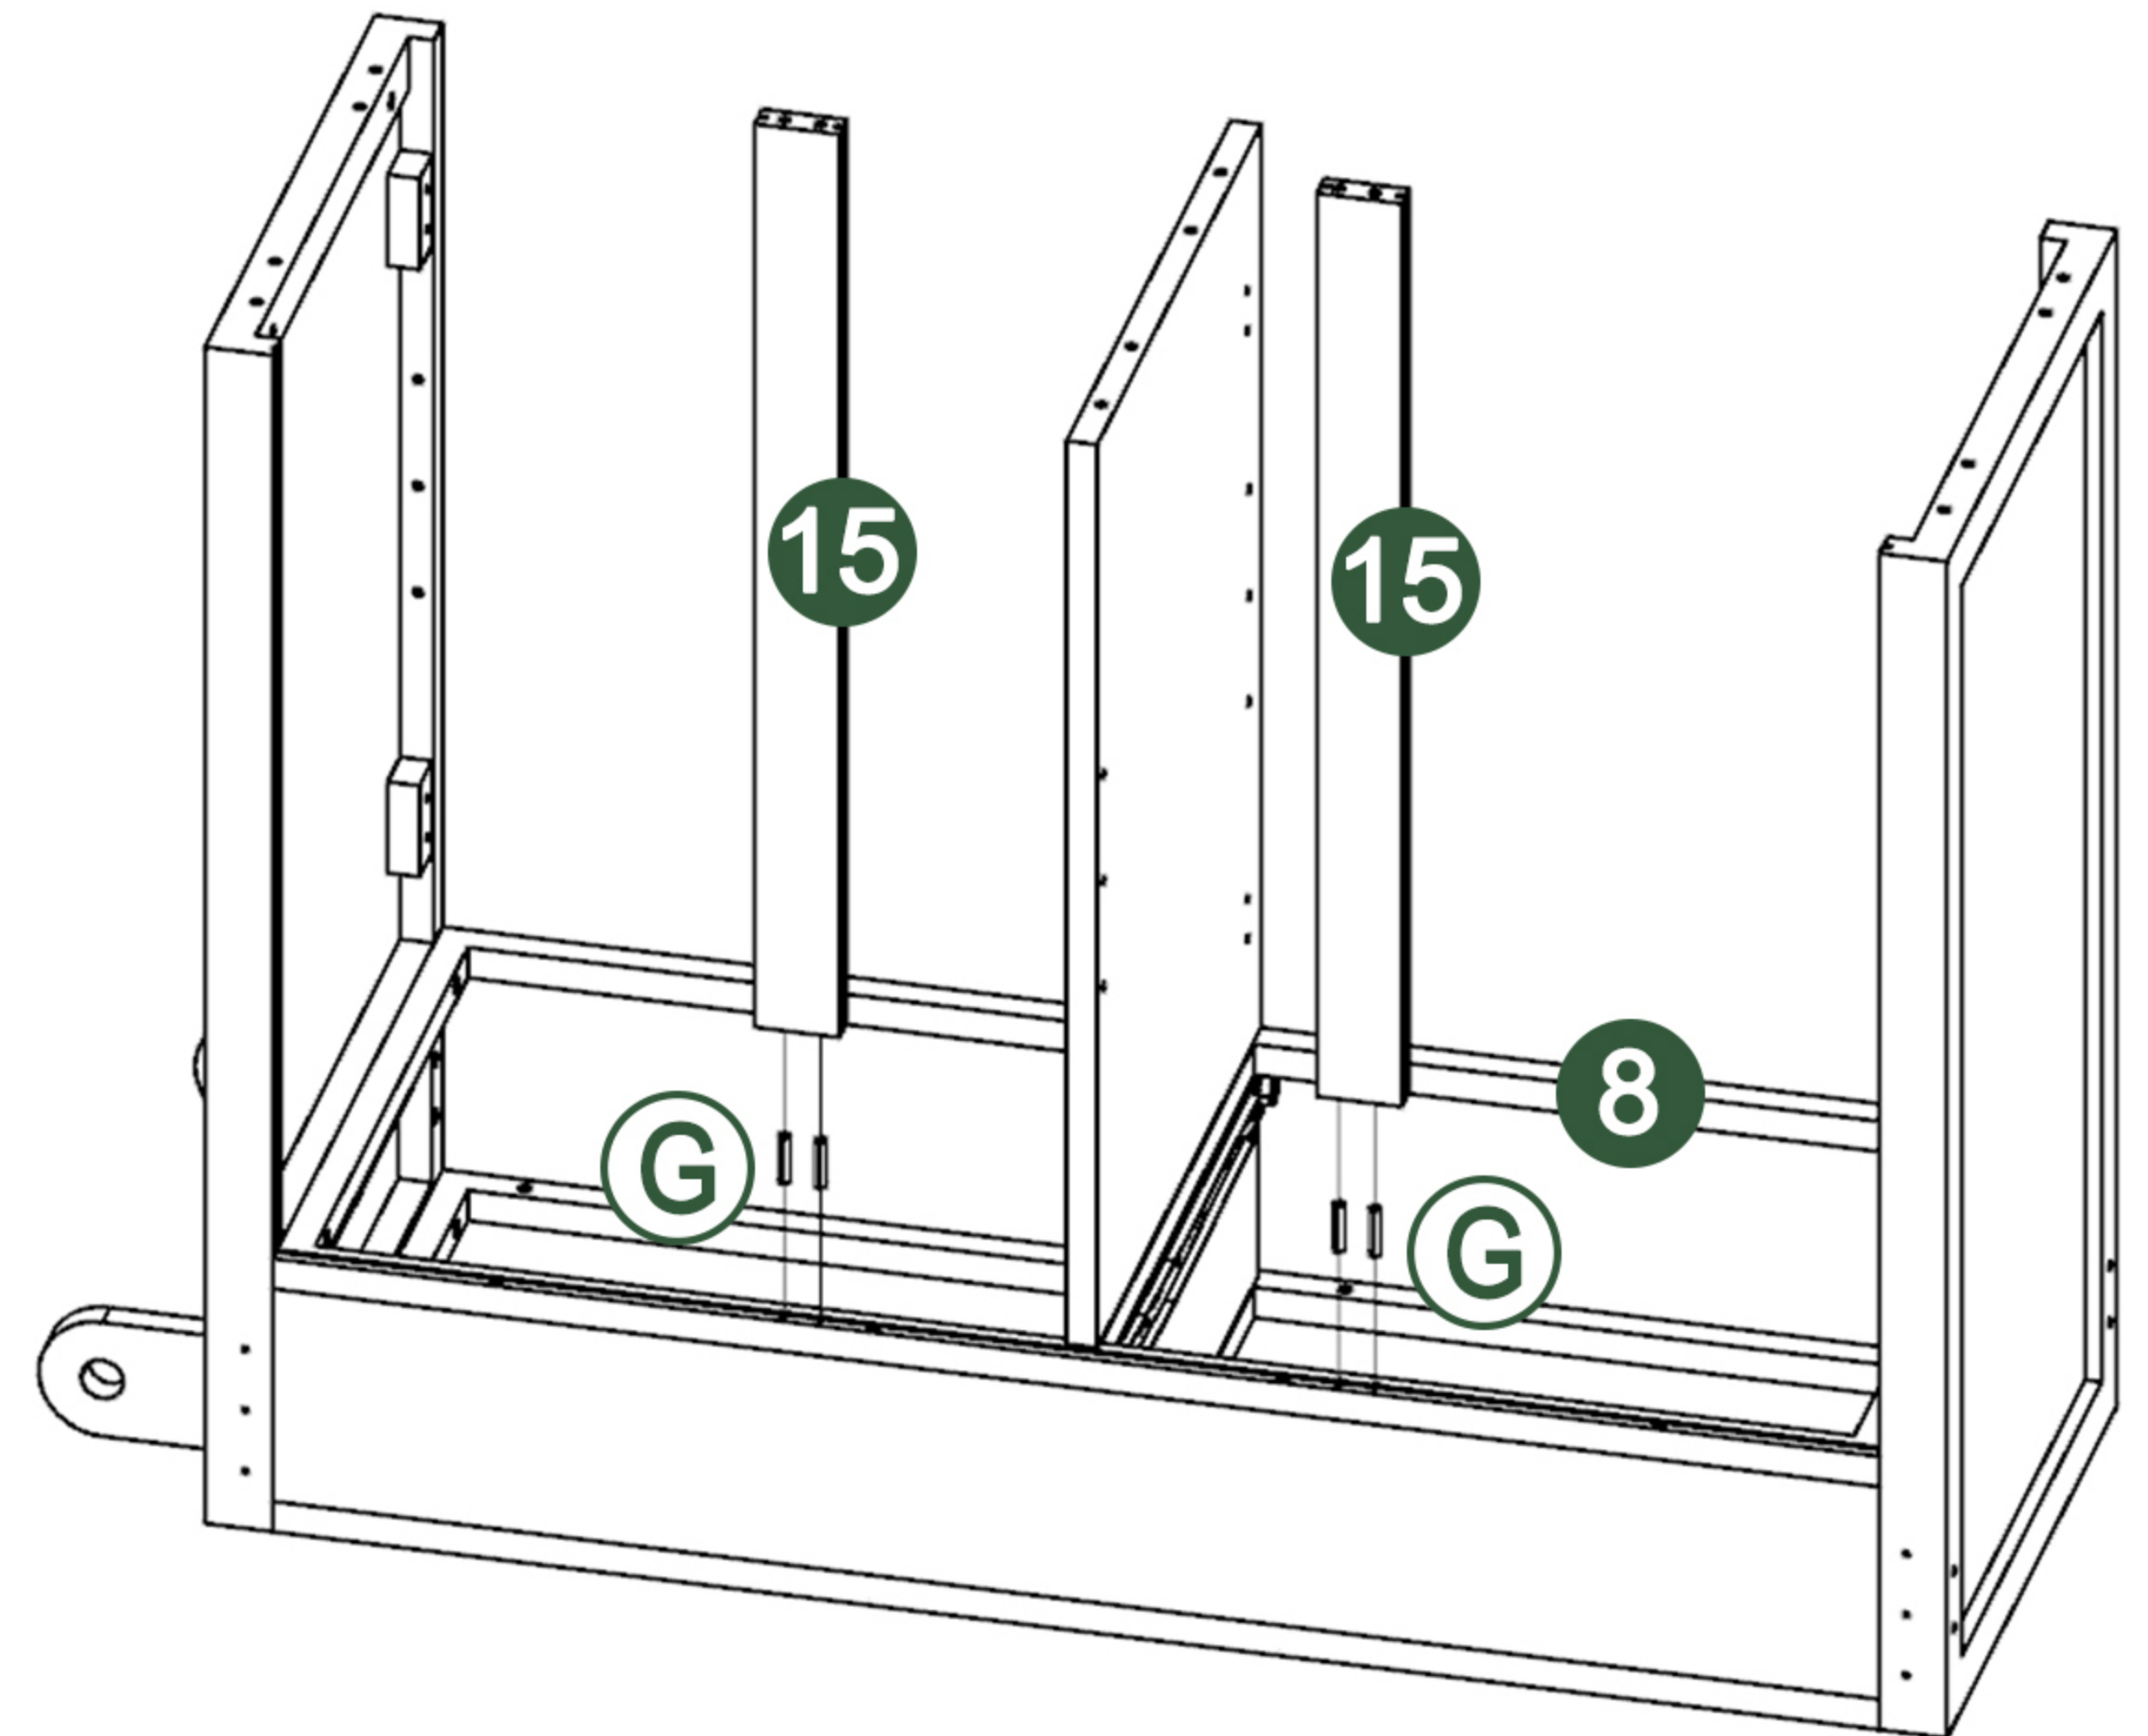


13.

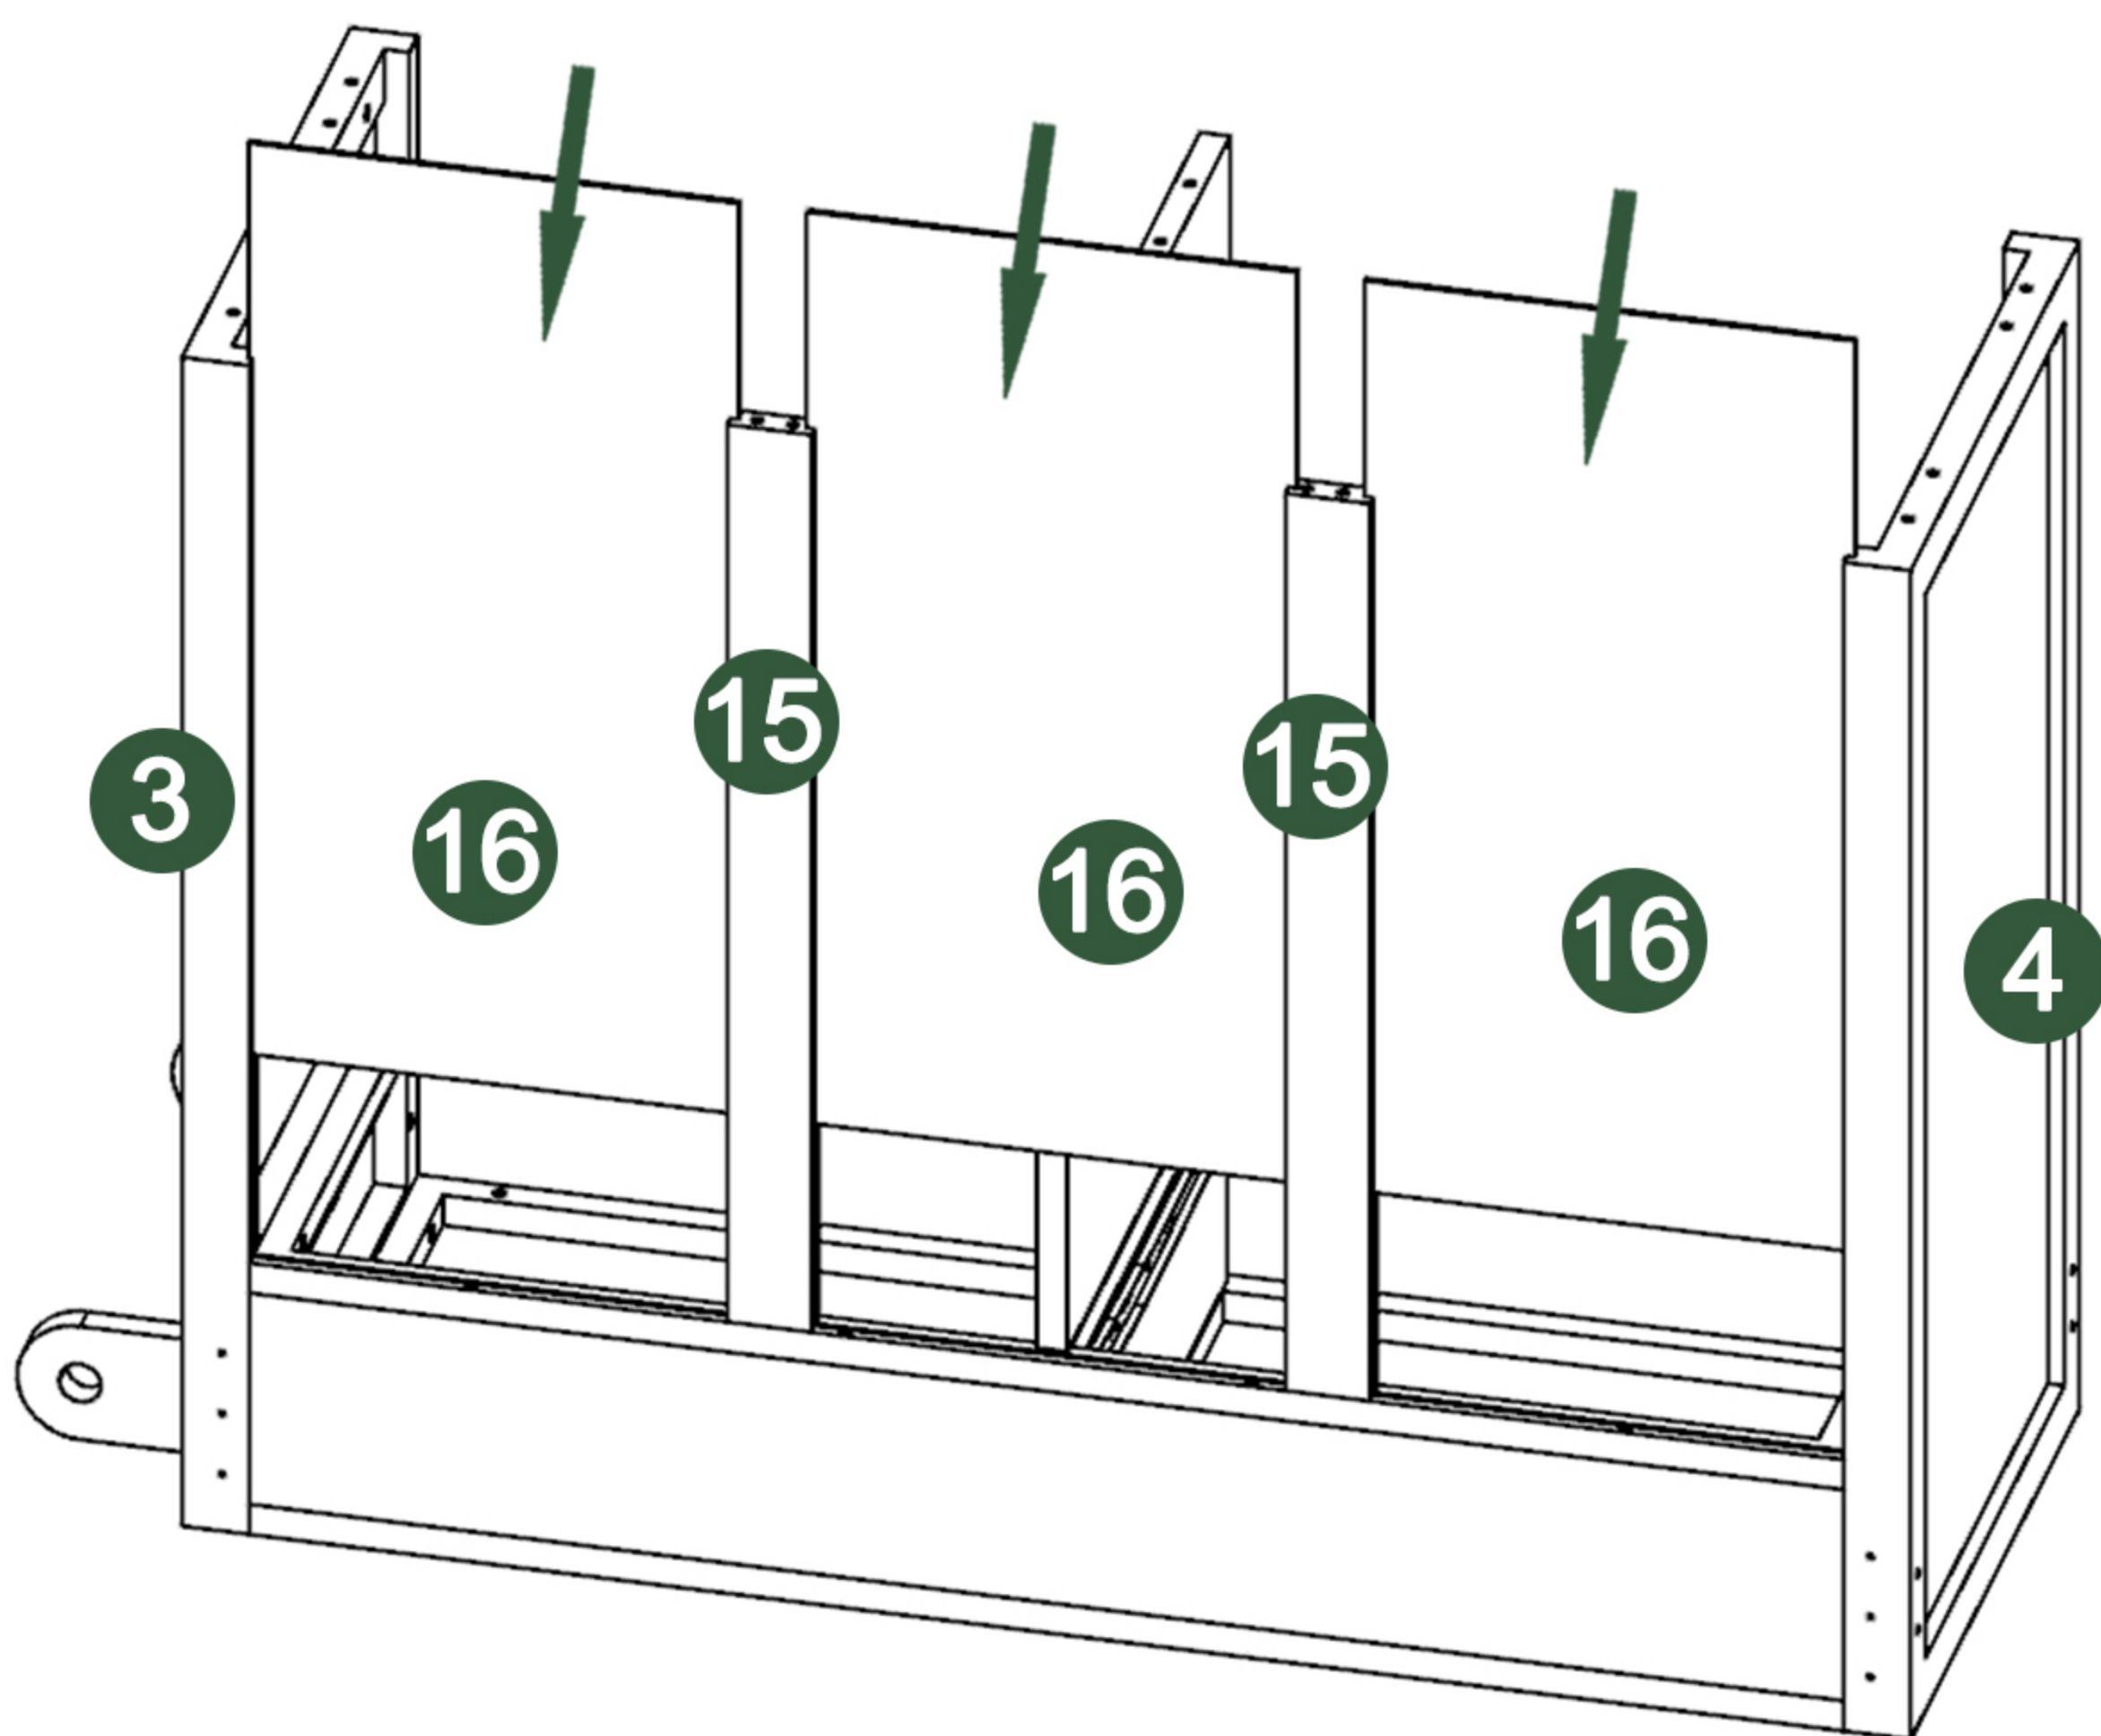


14.

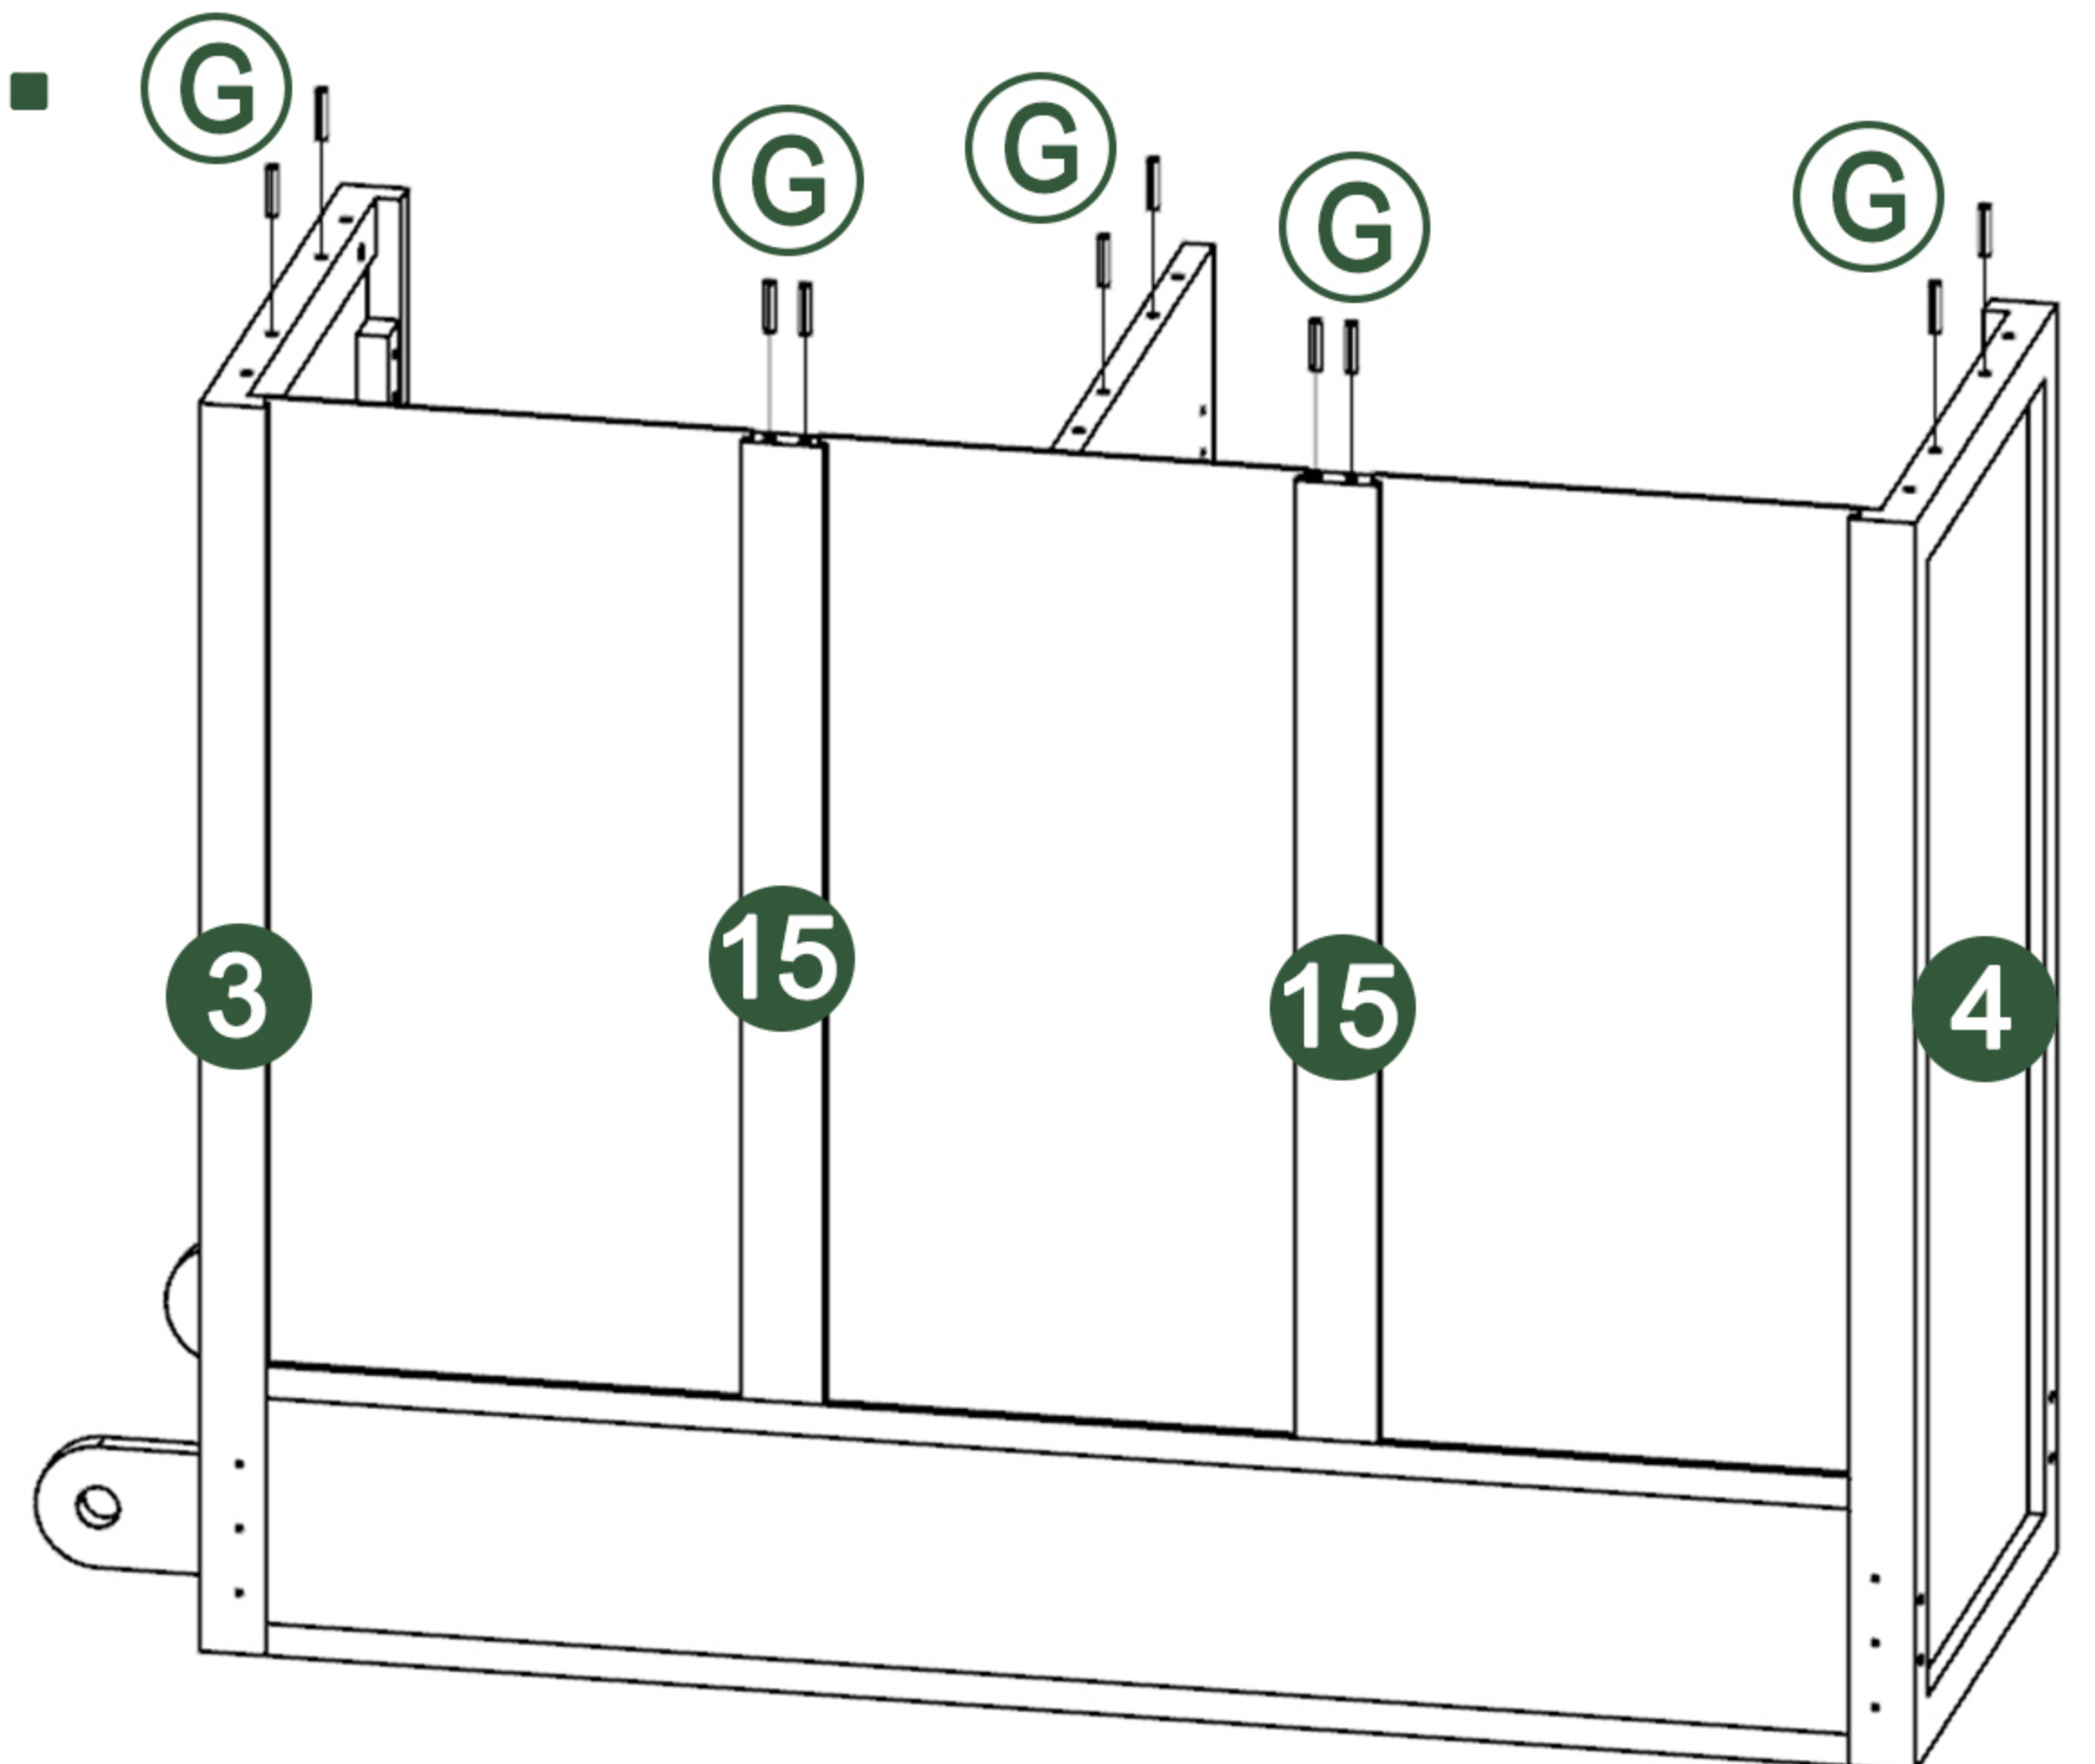


15.

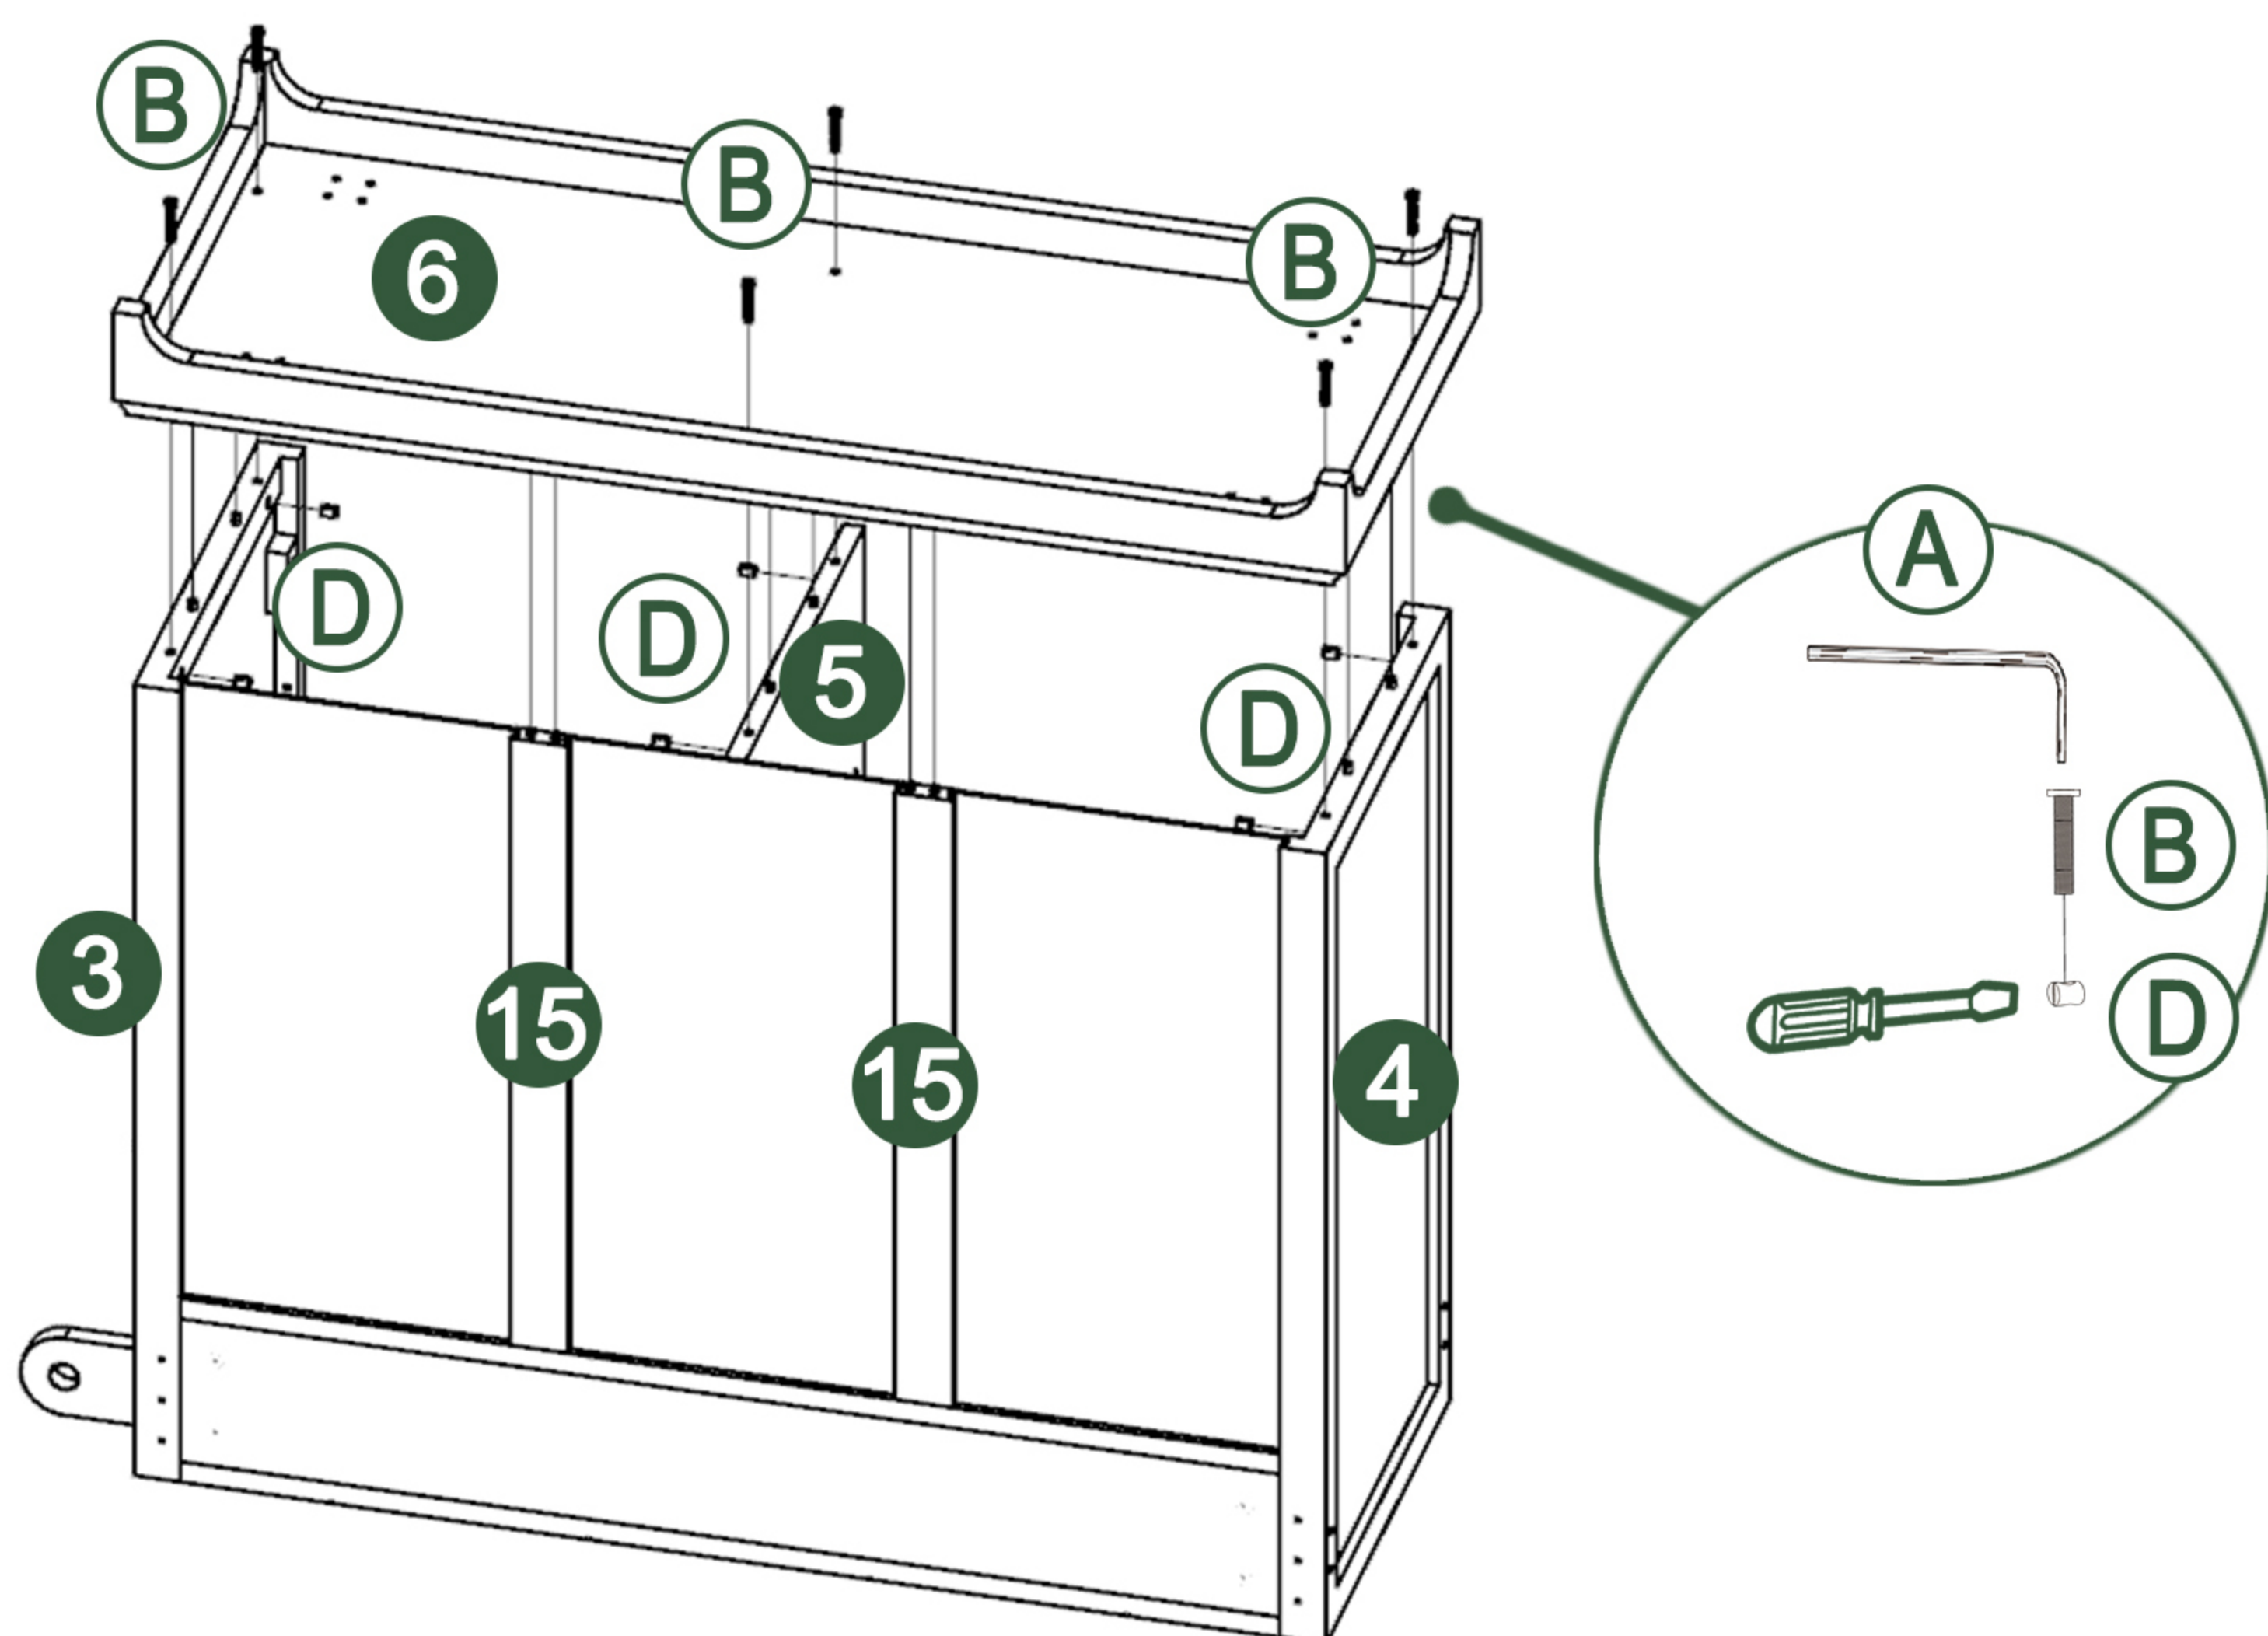


16.

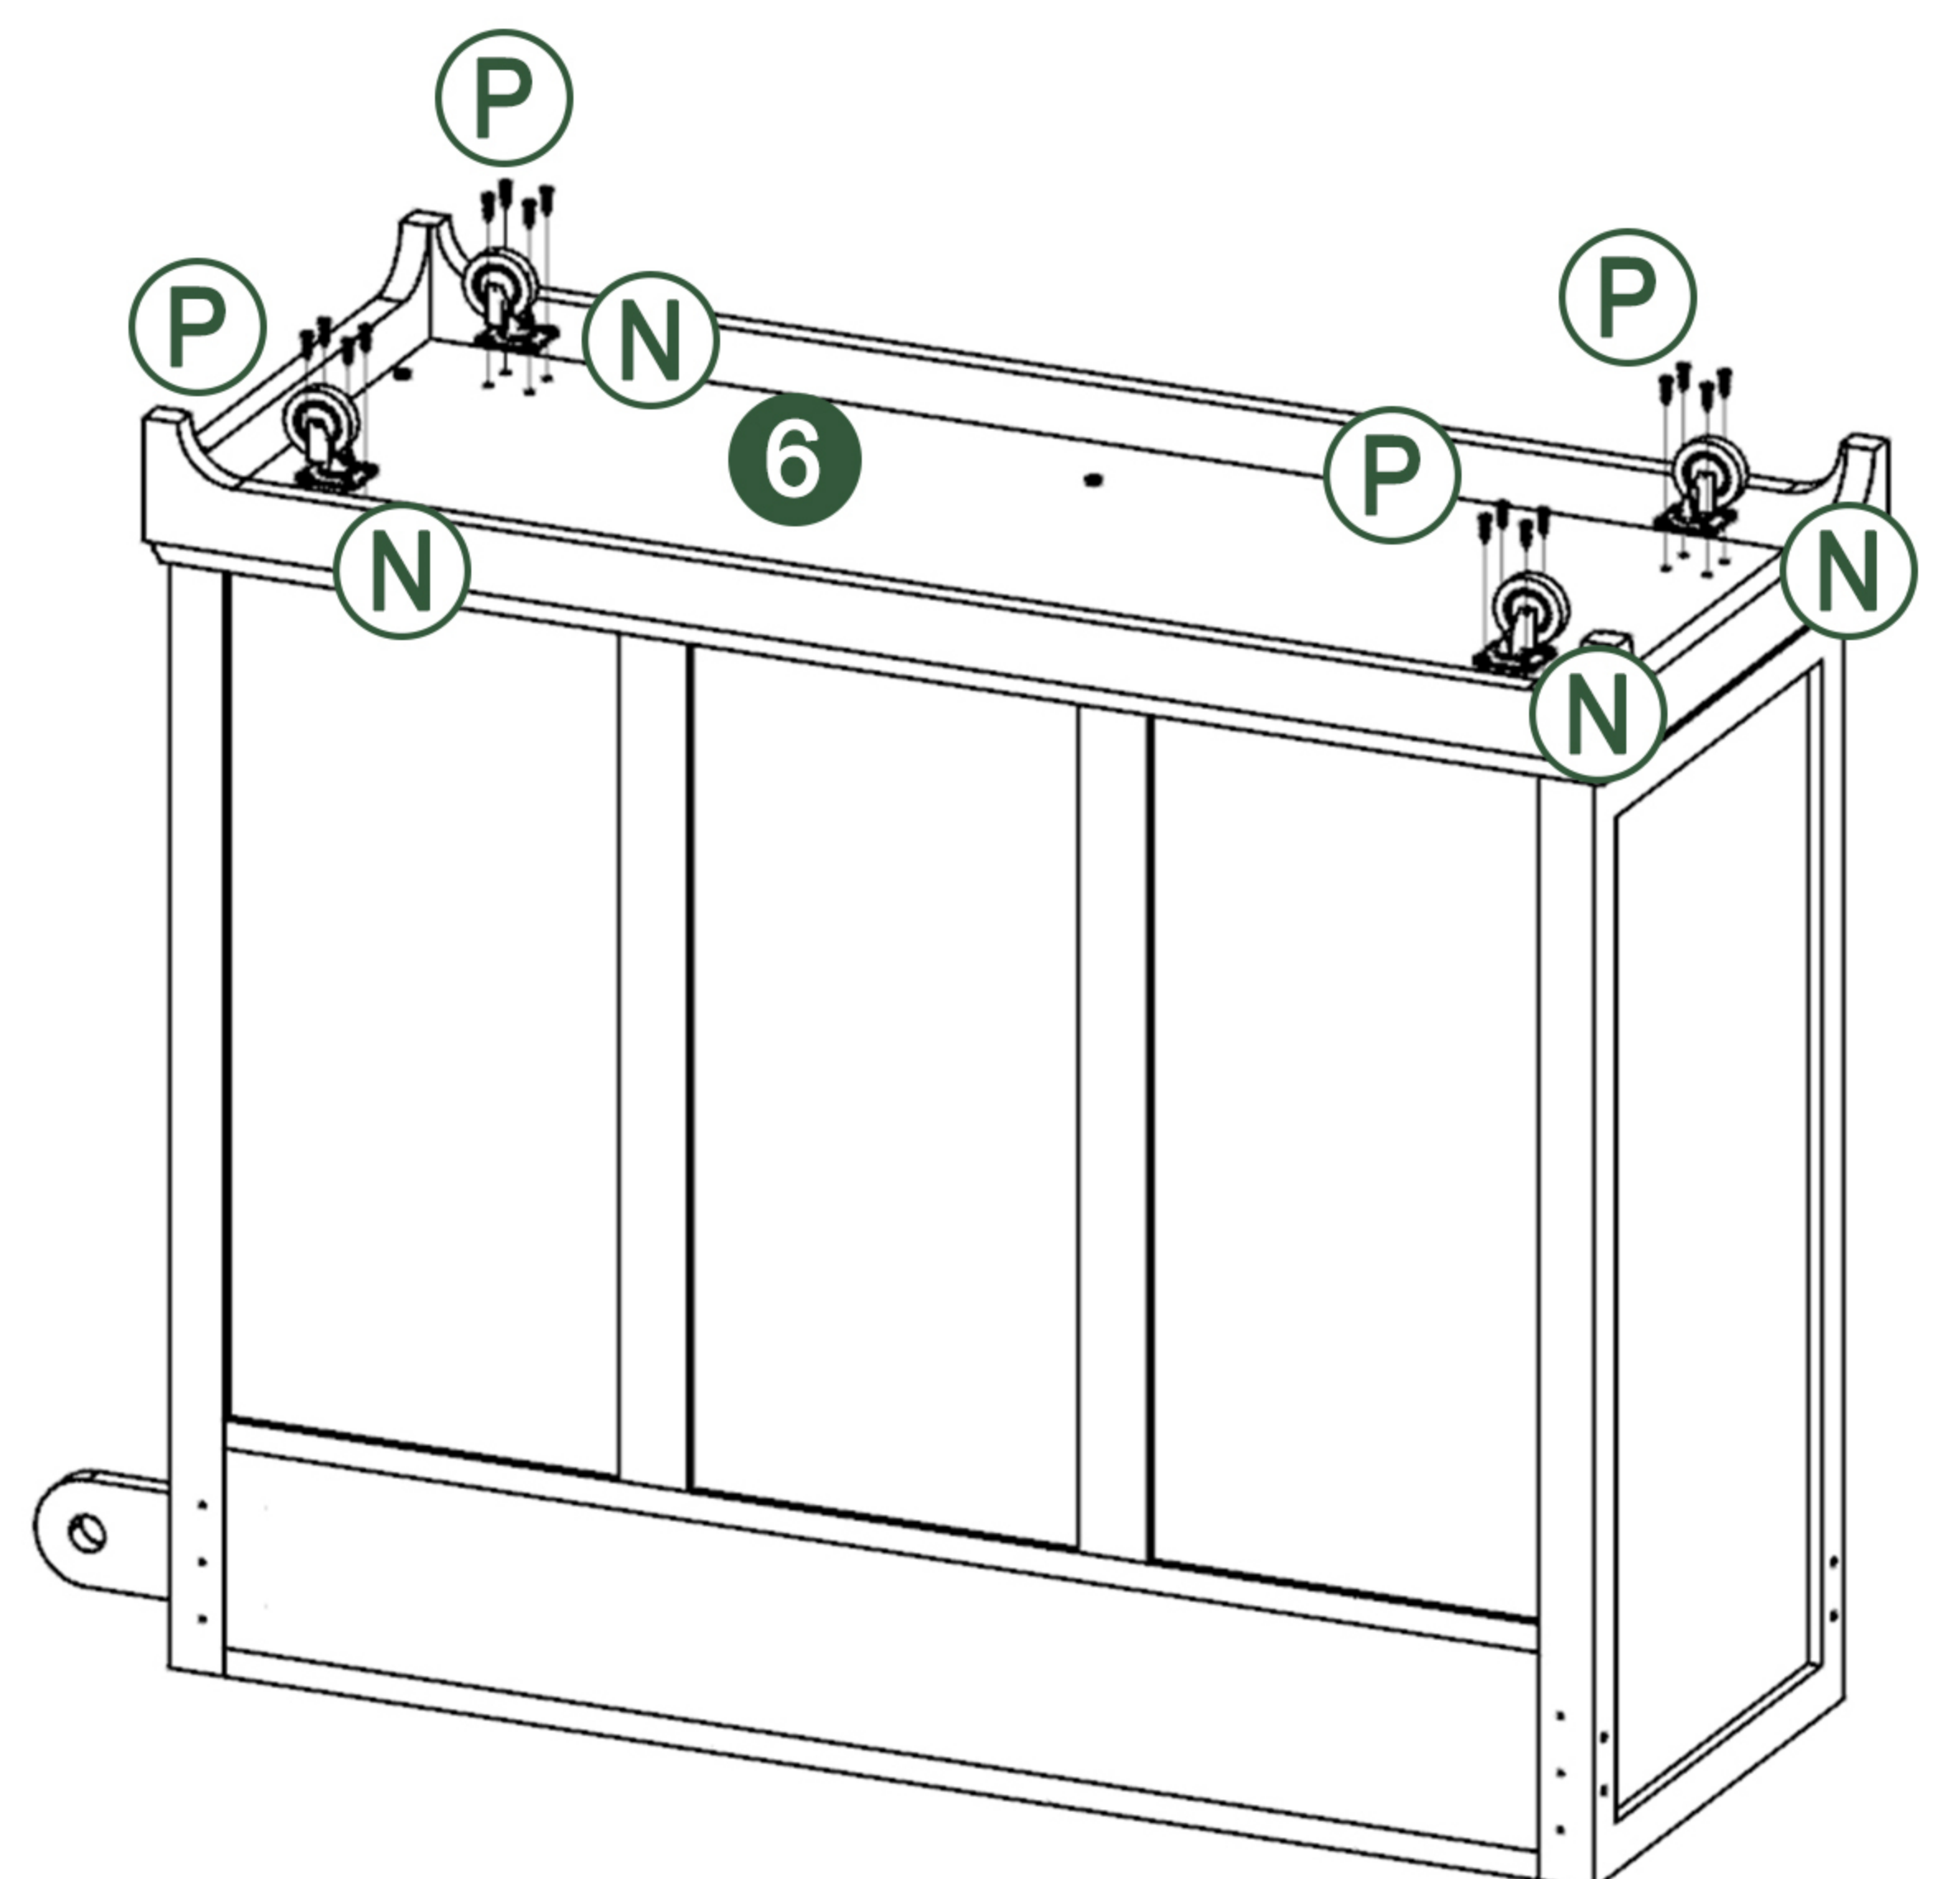


17.

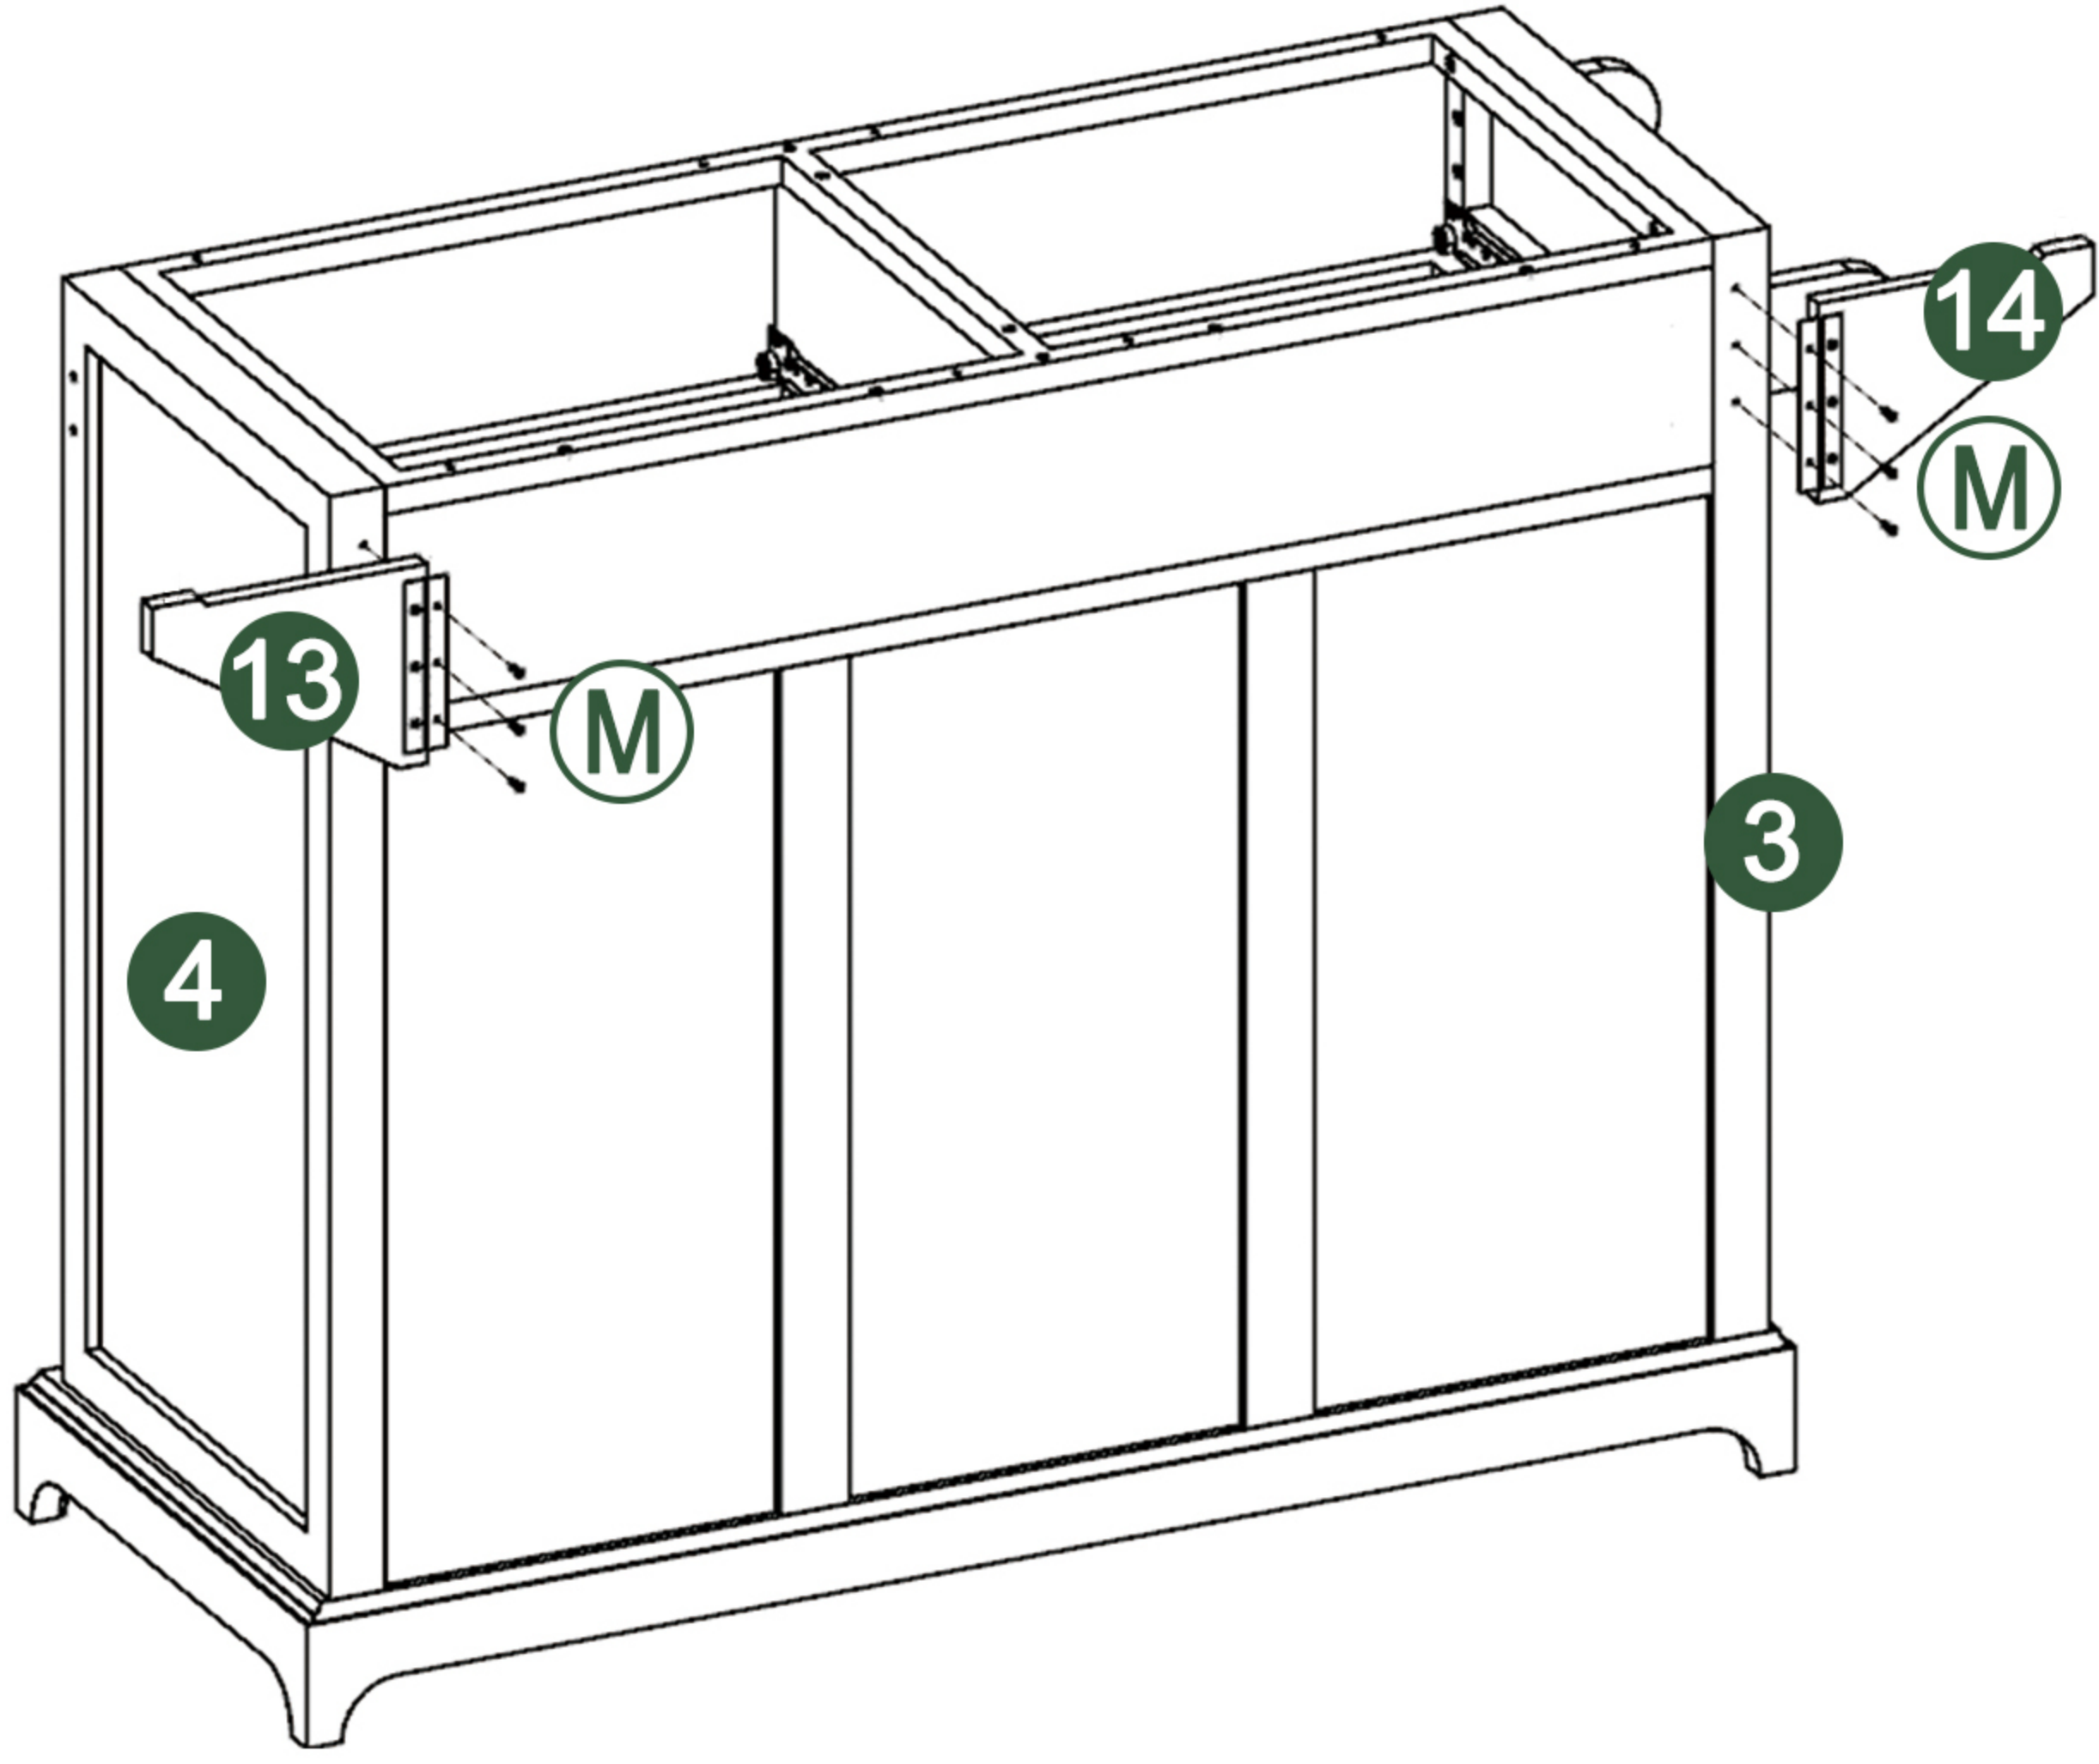


18.

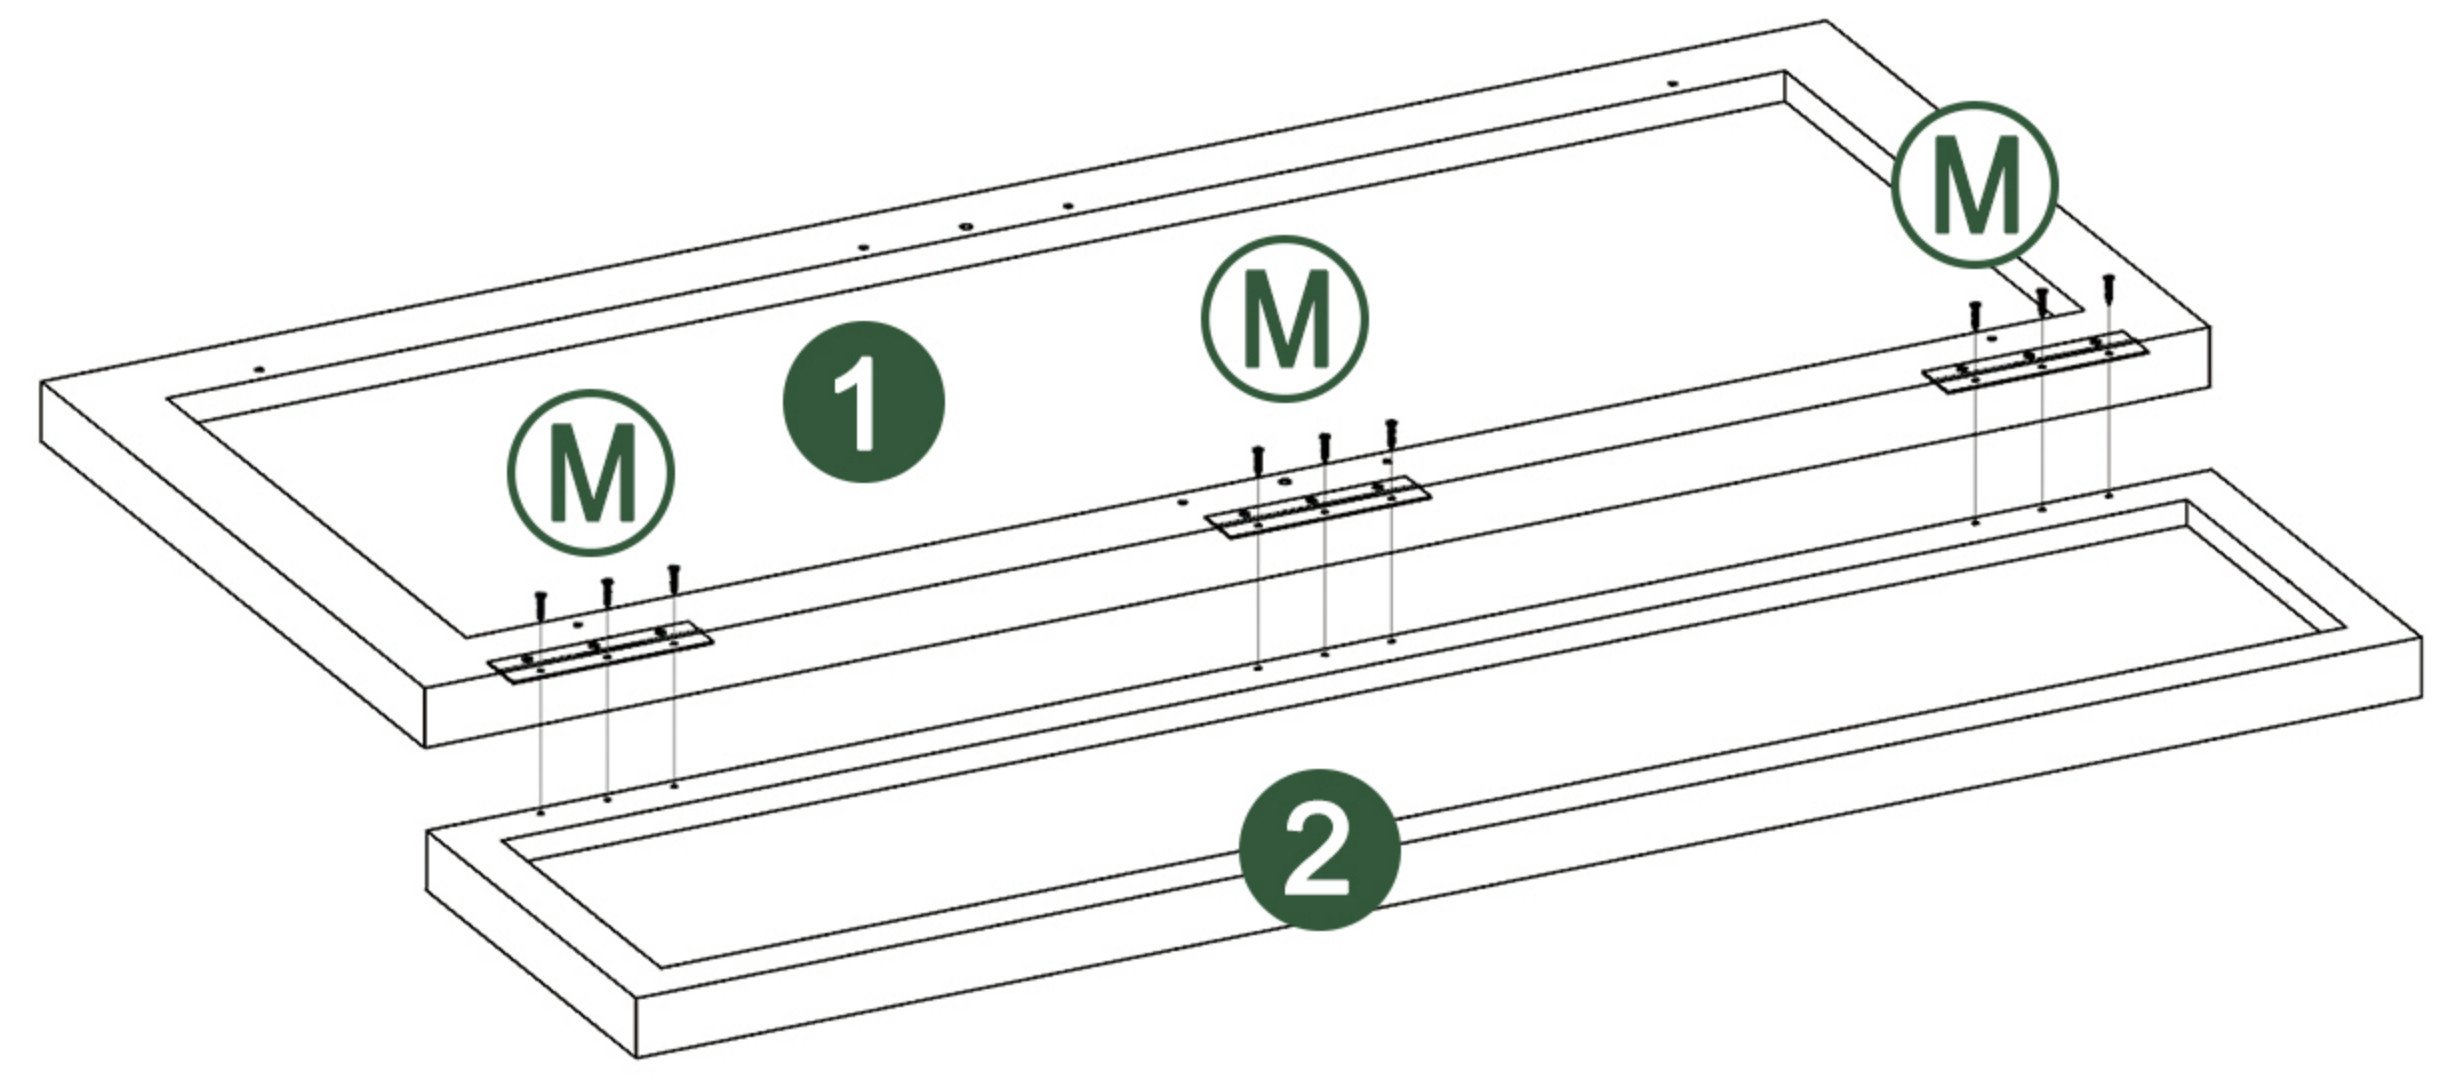


19.

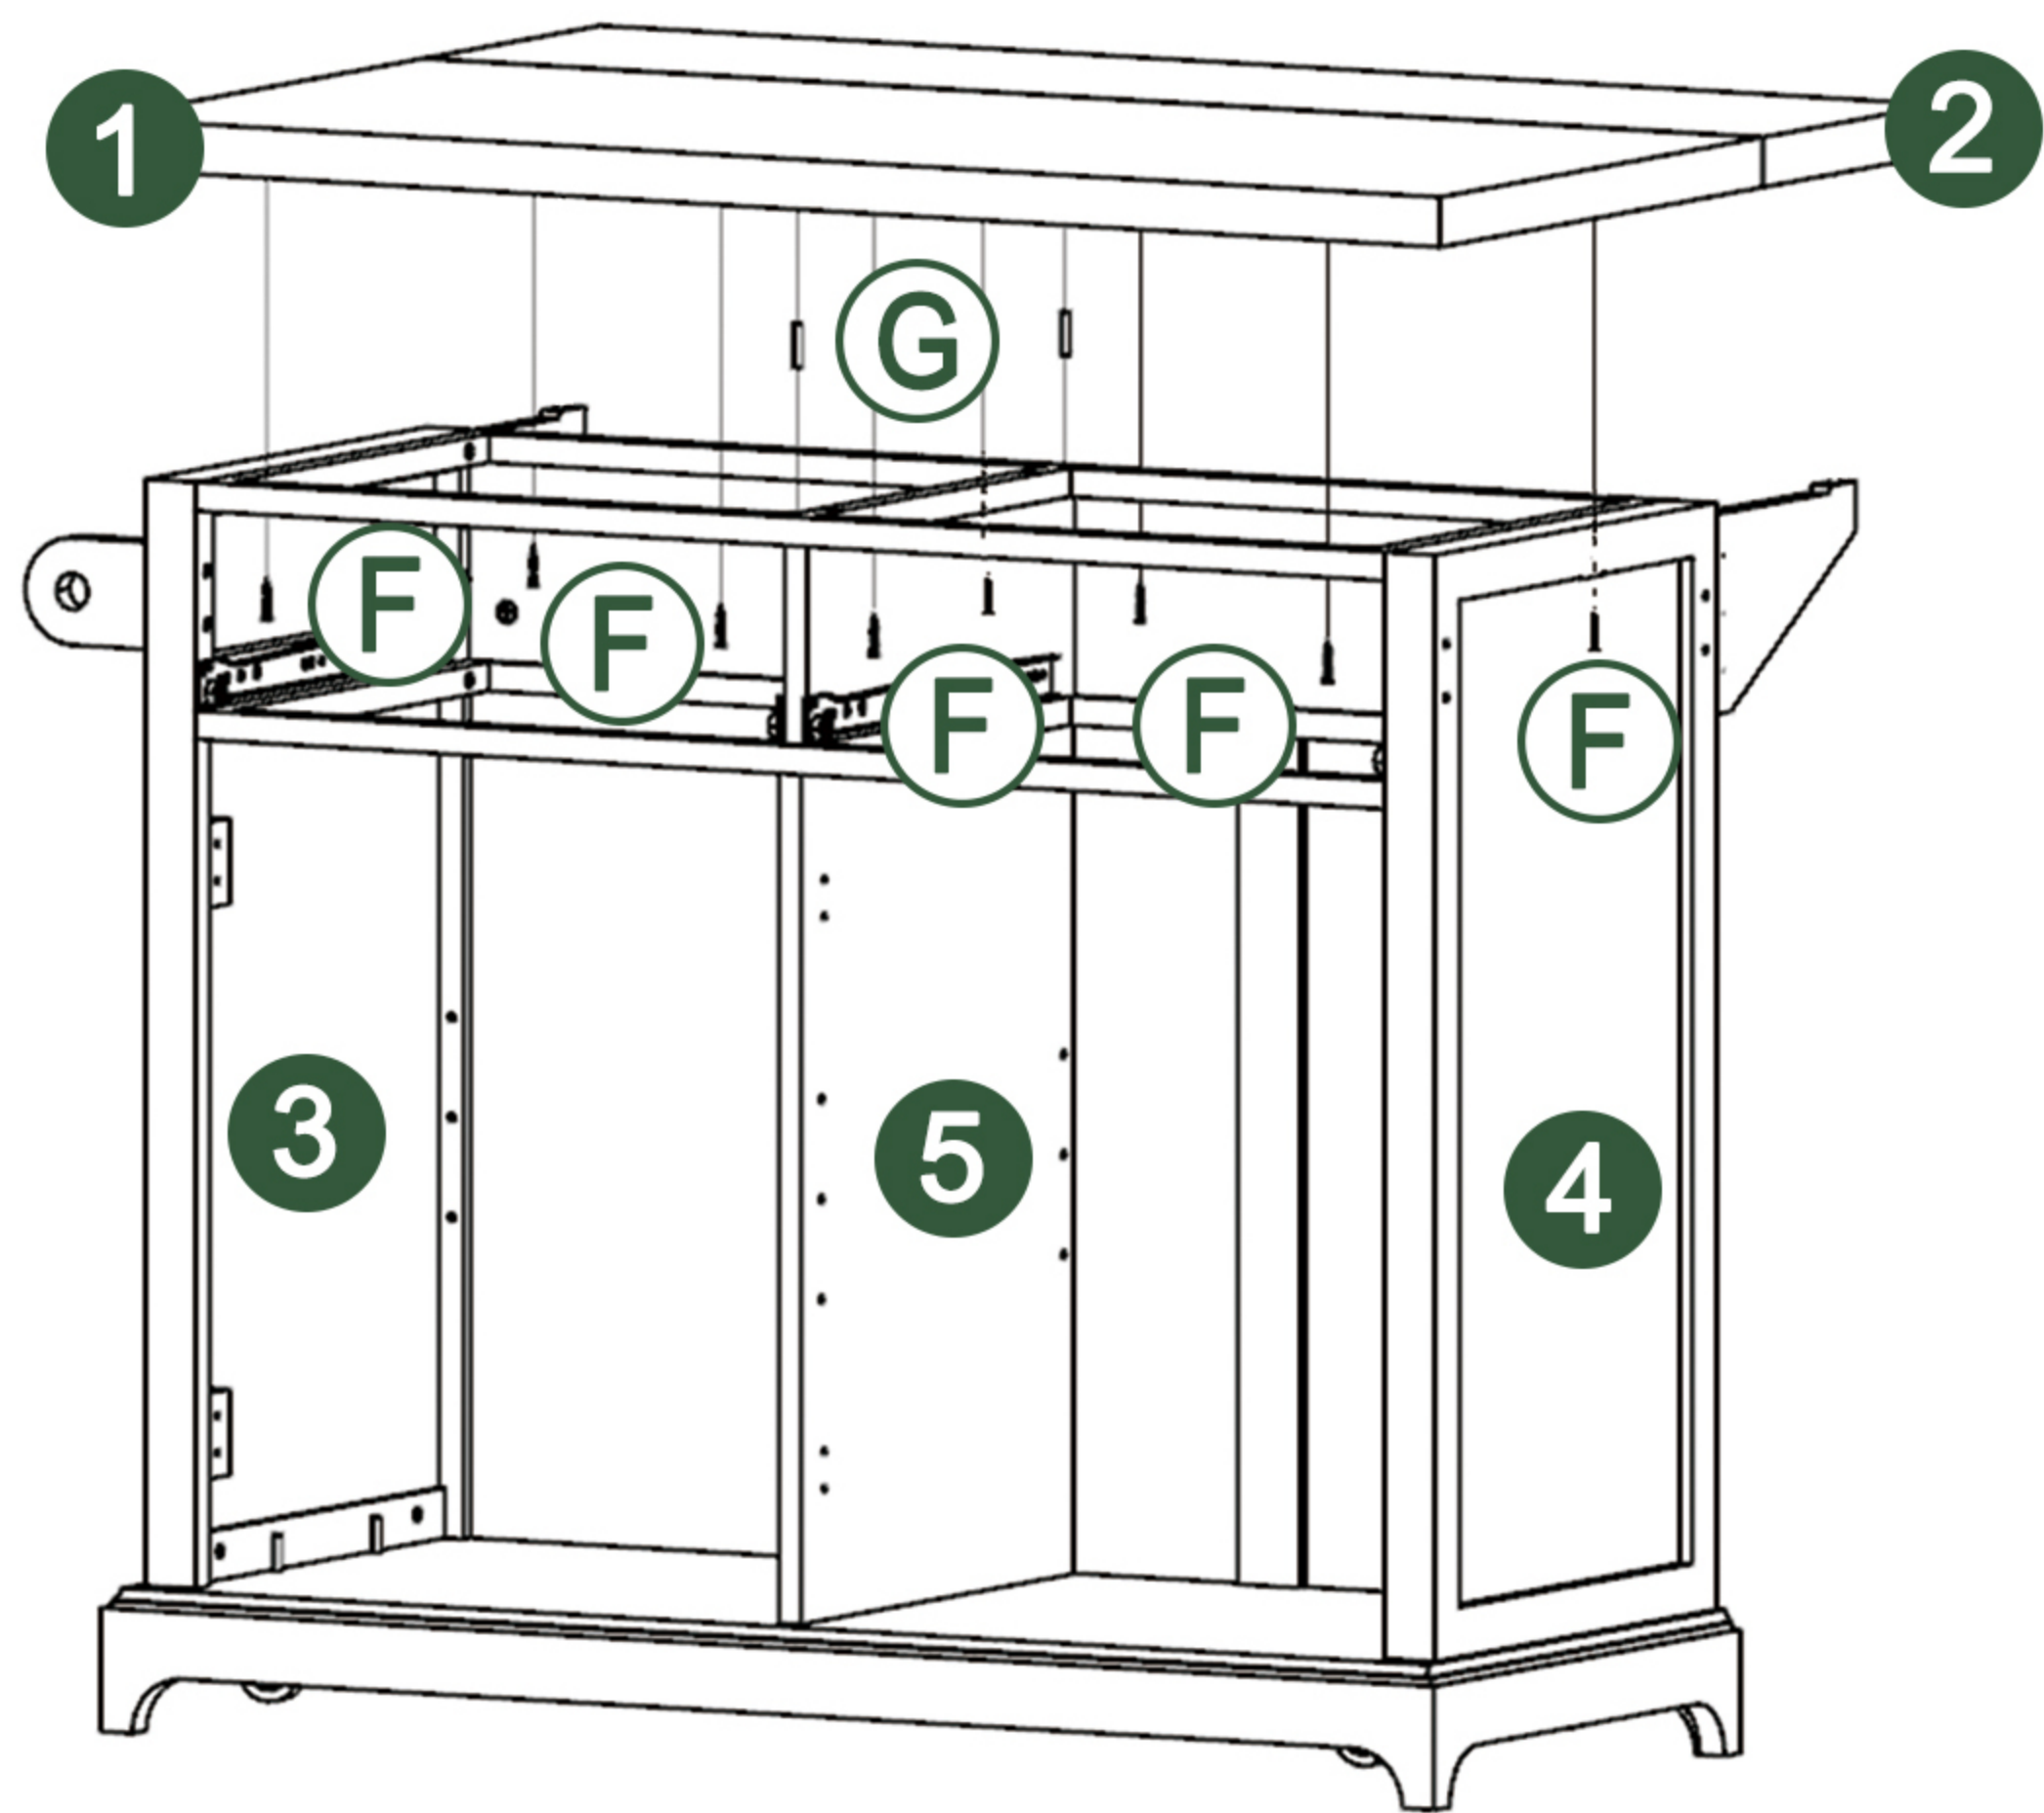


20(X2).

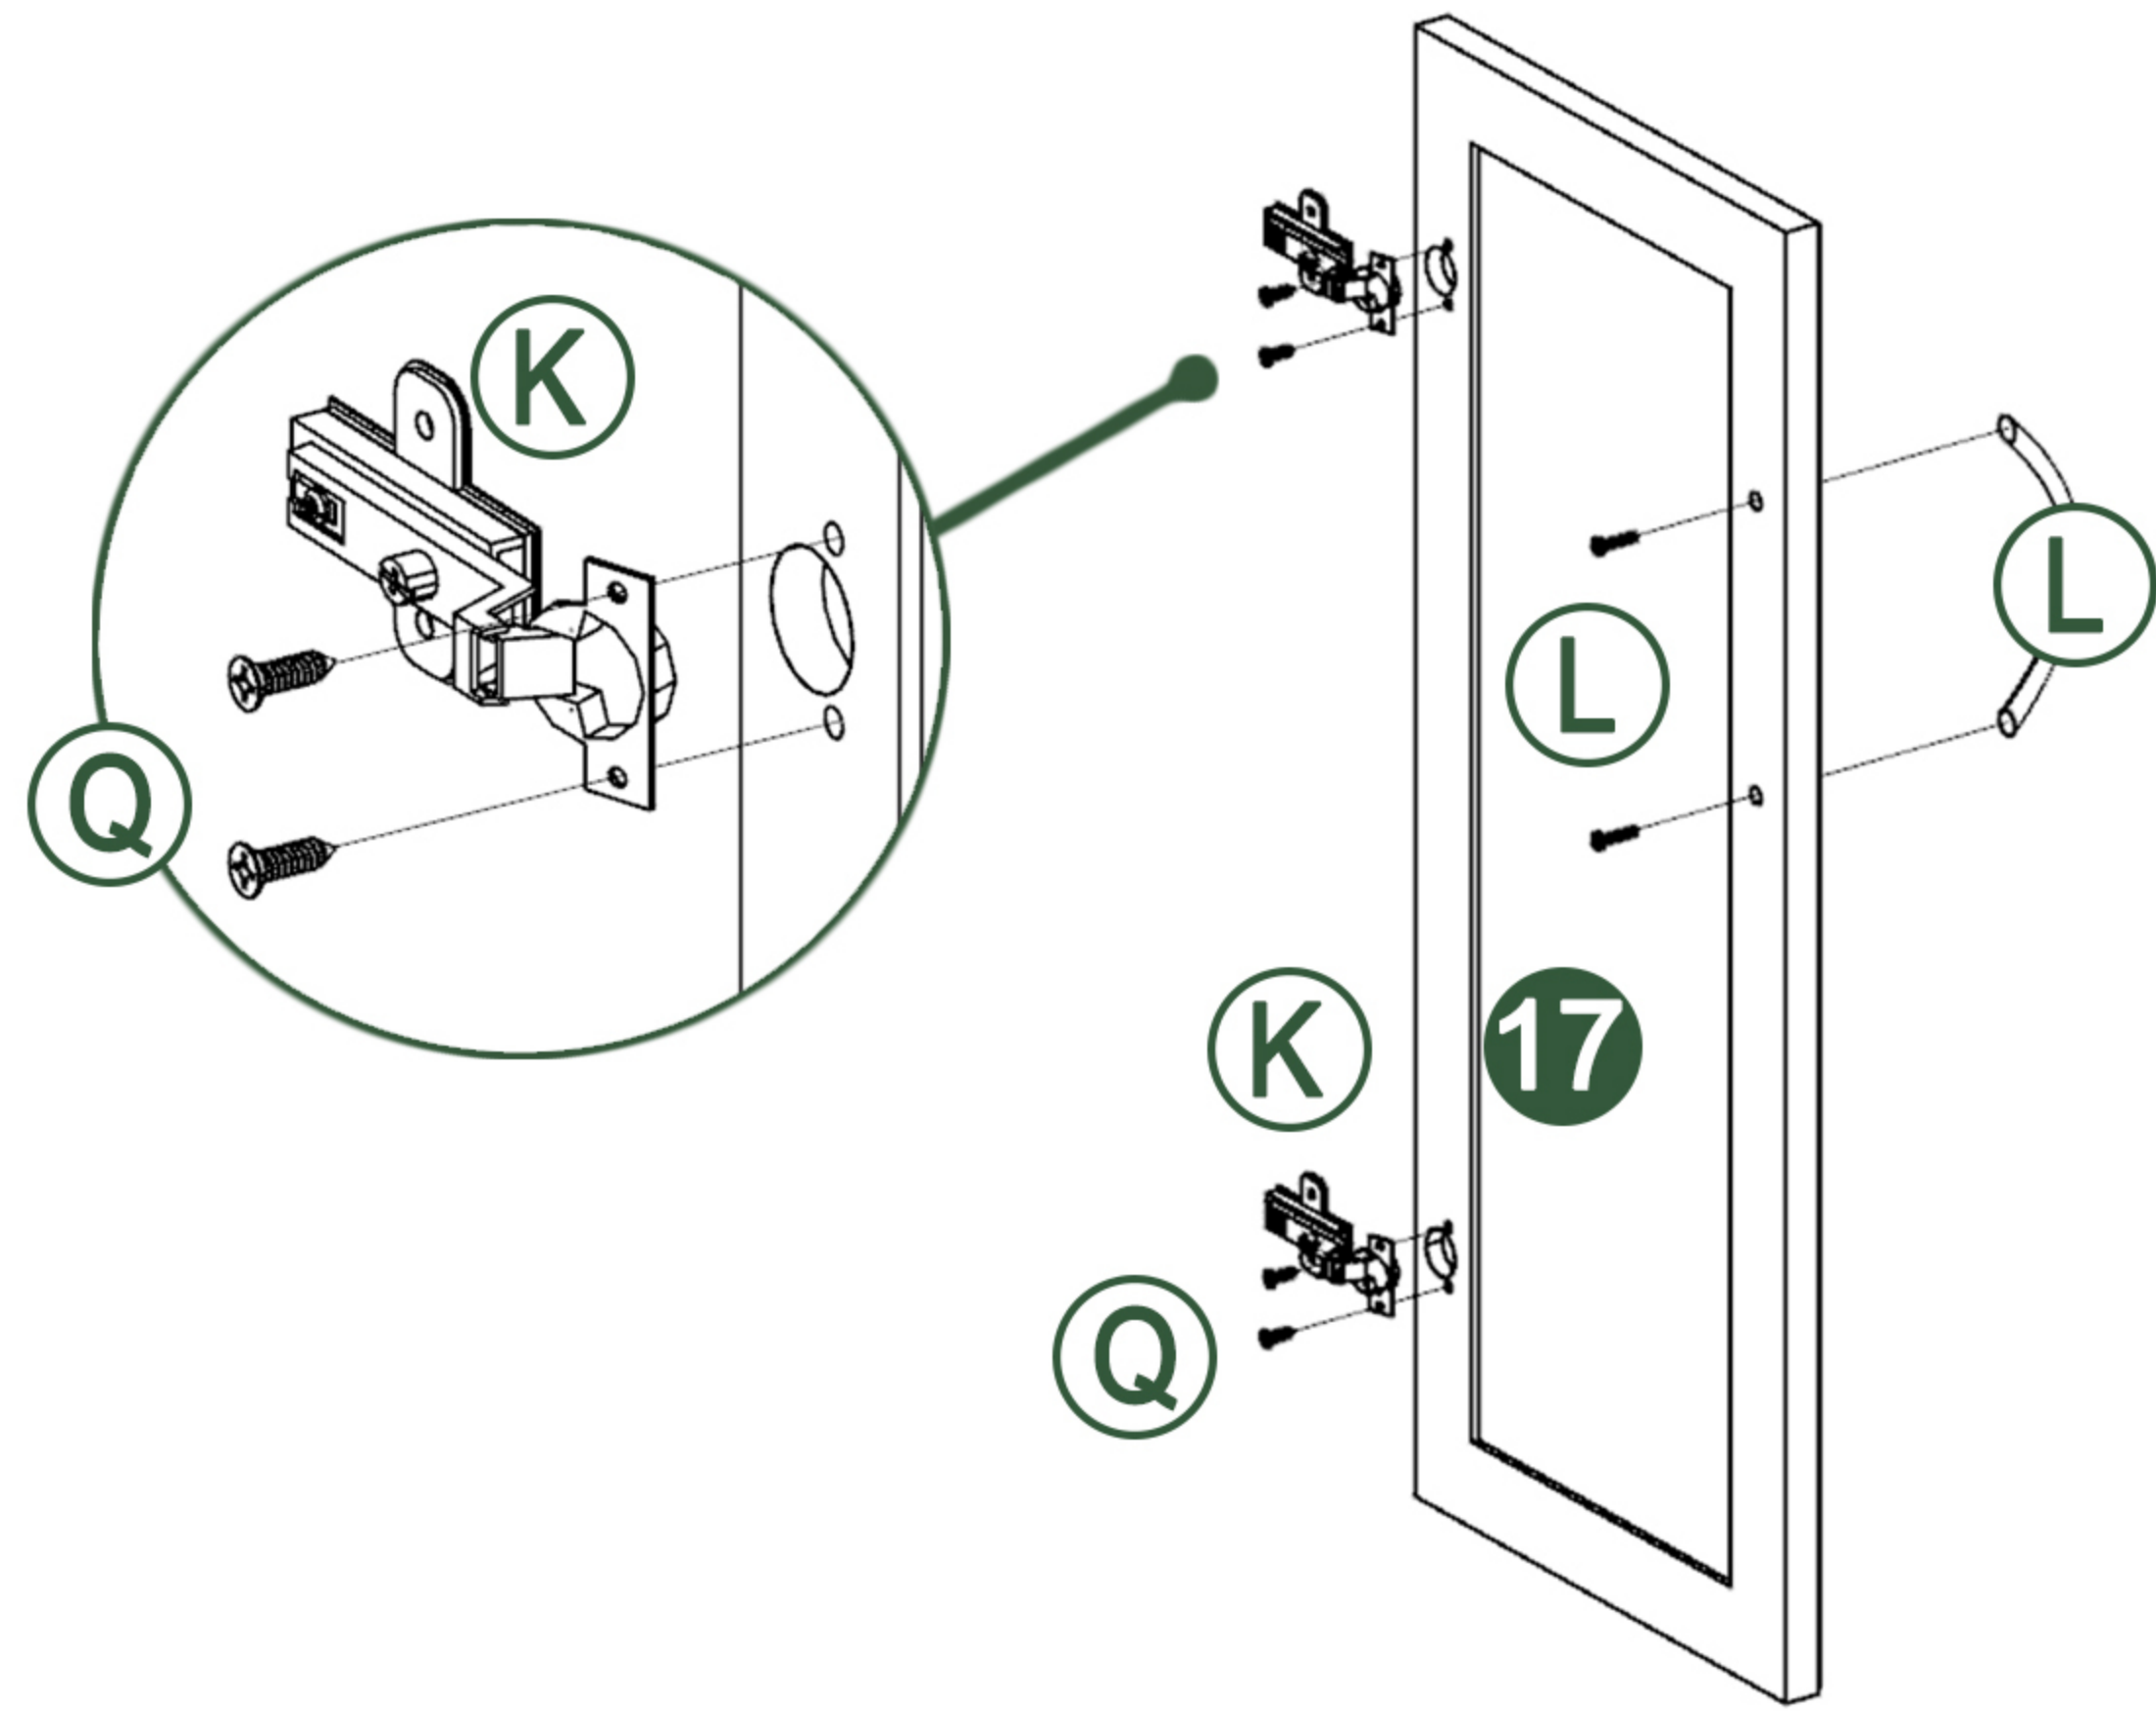



21.

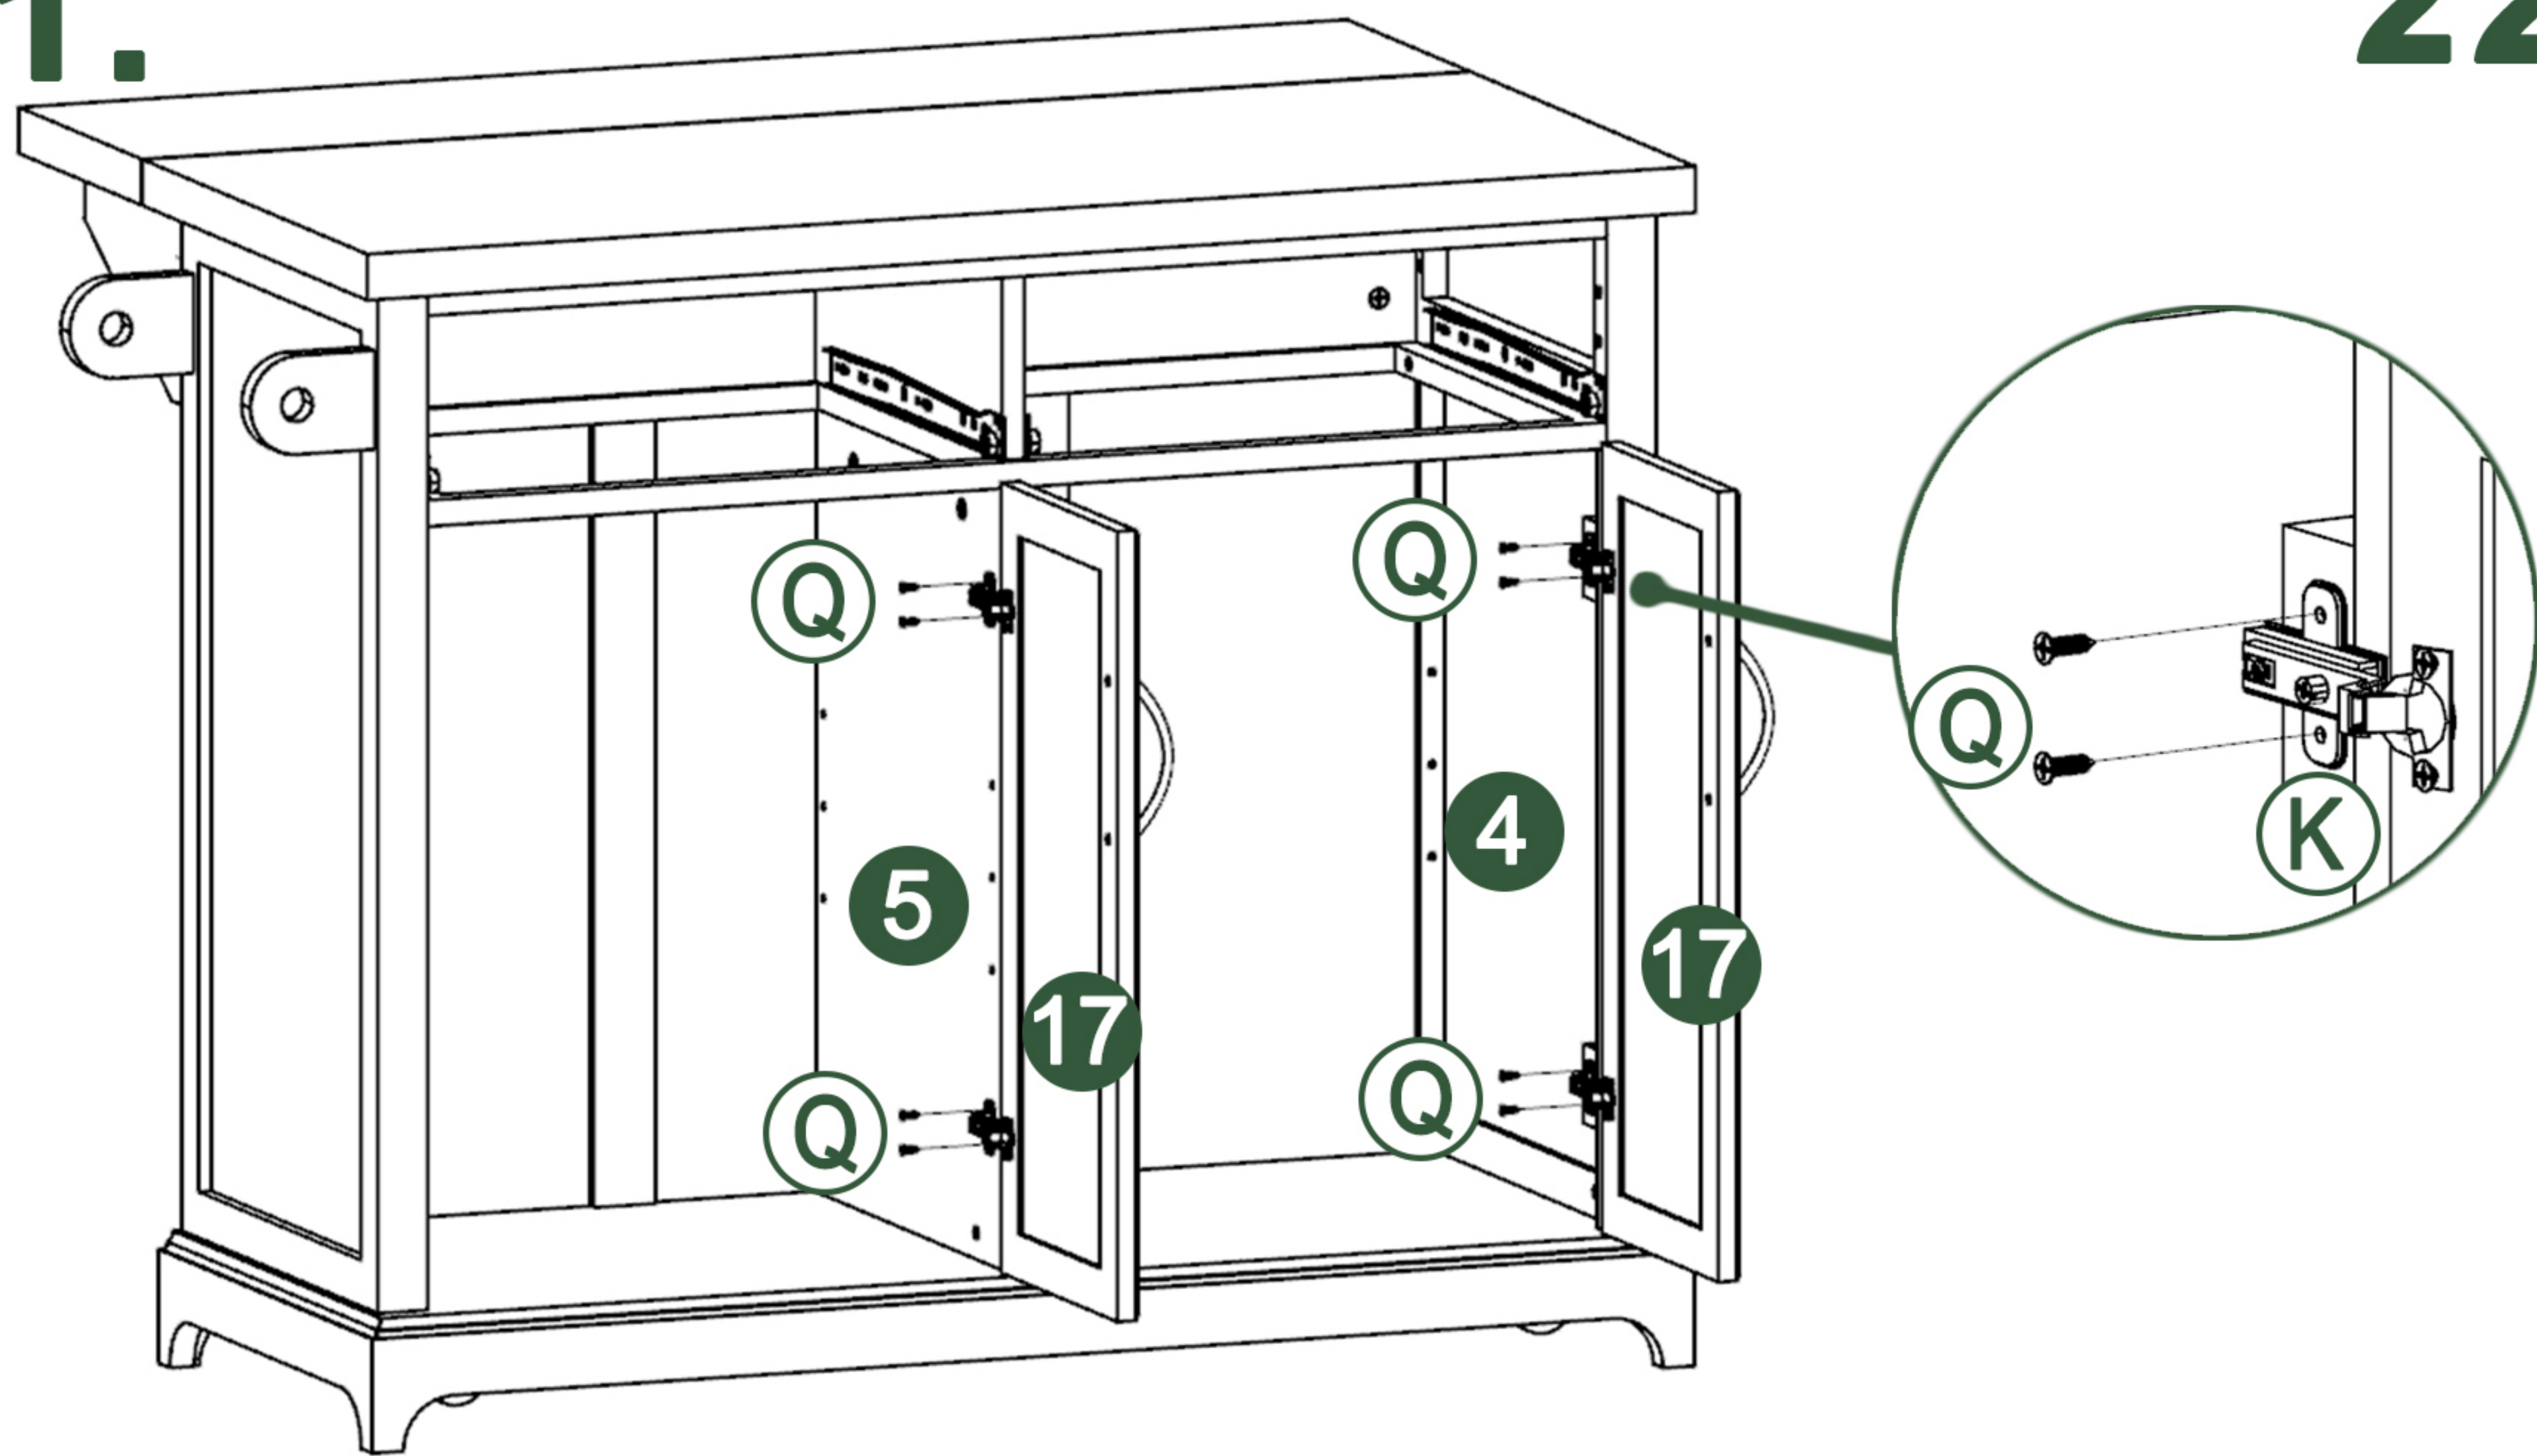


22(X2).

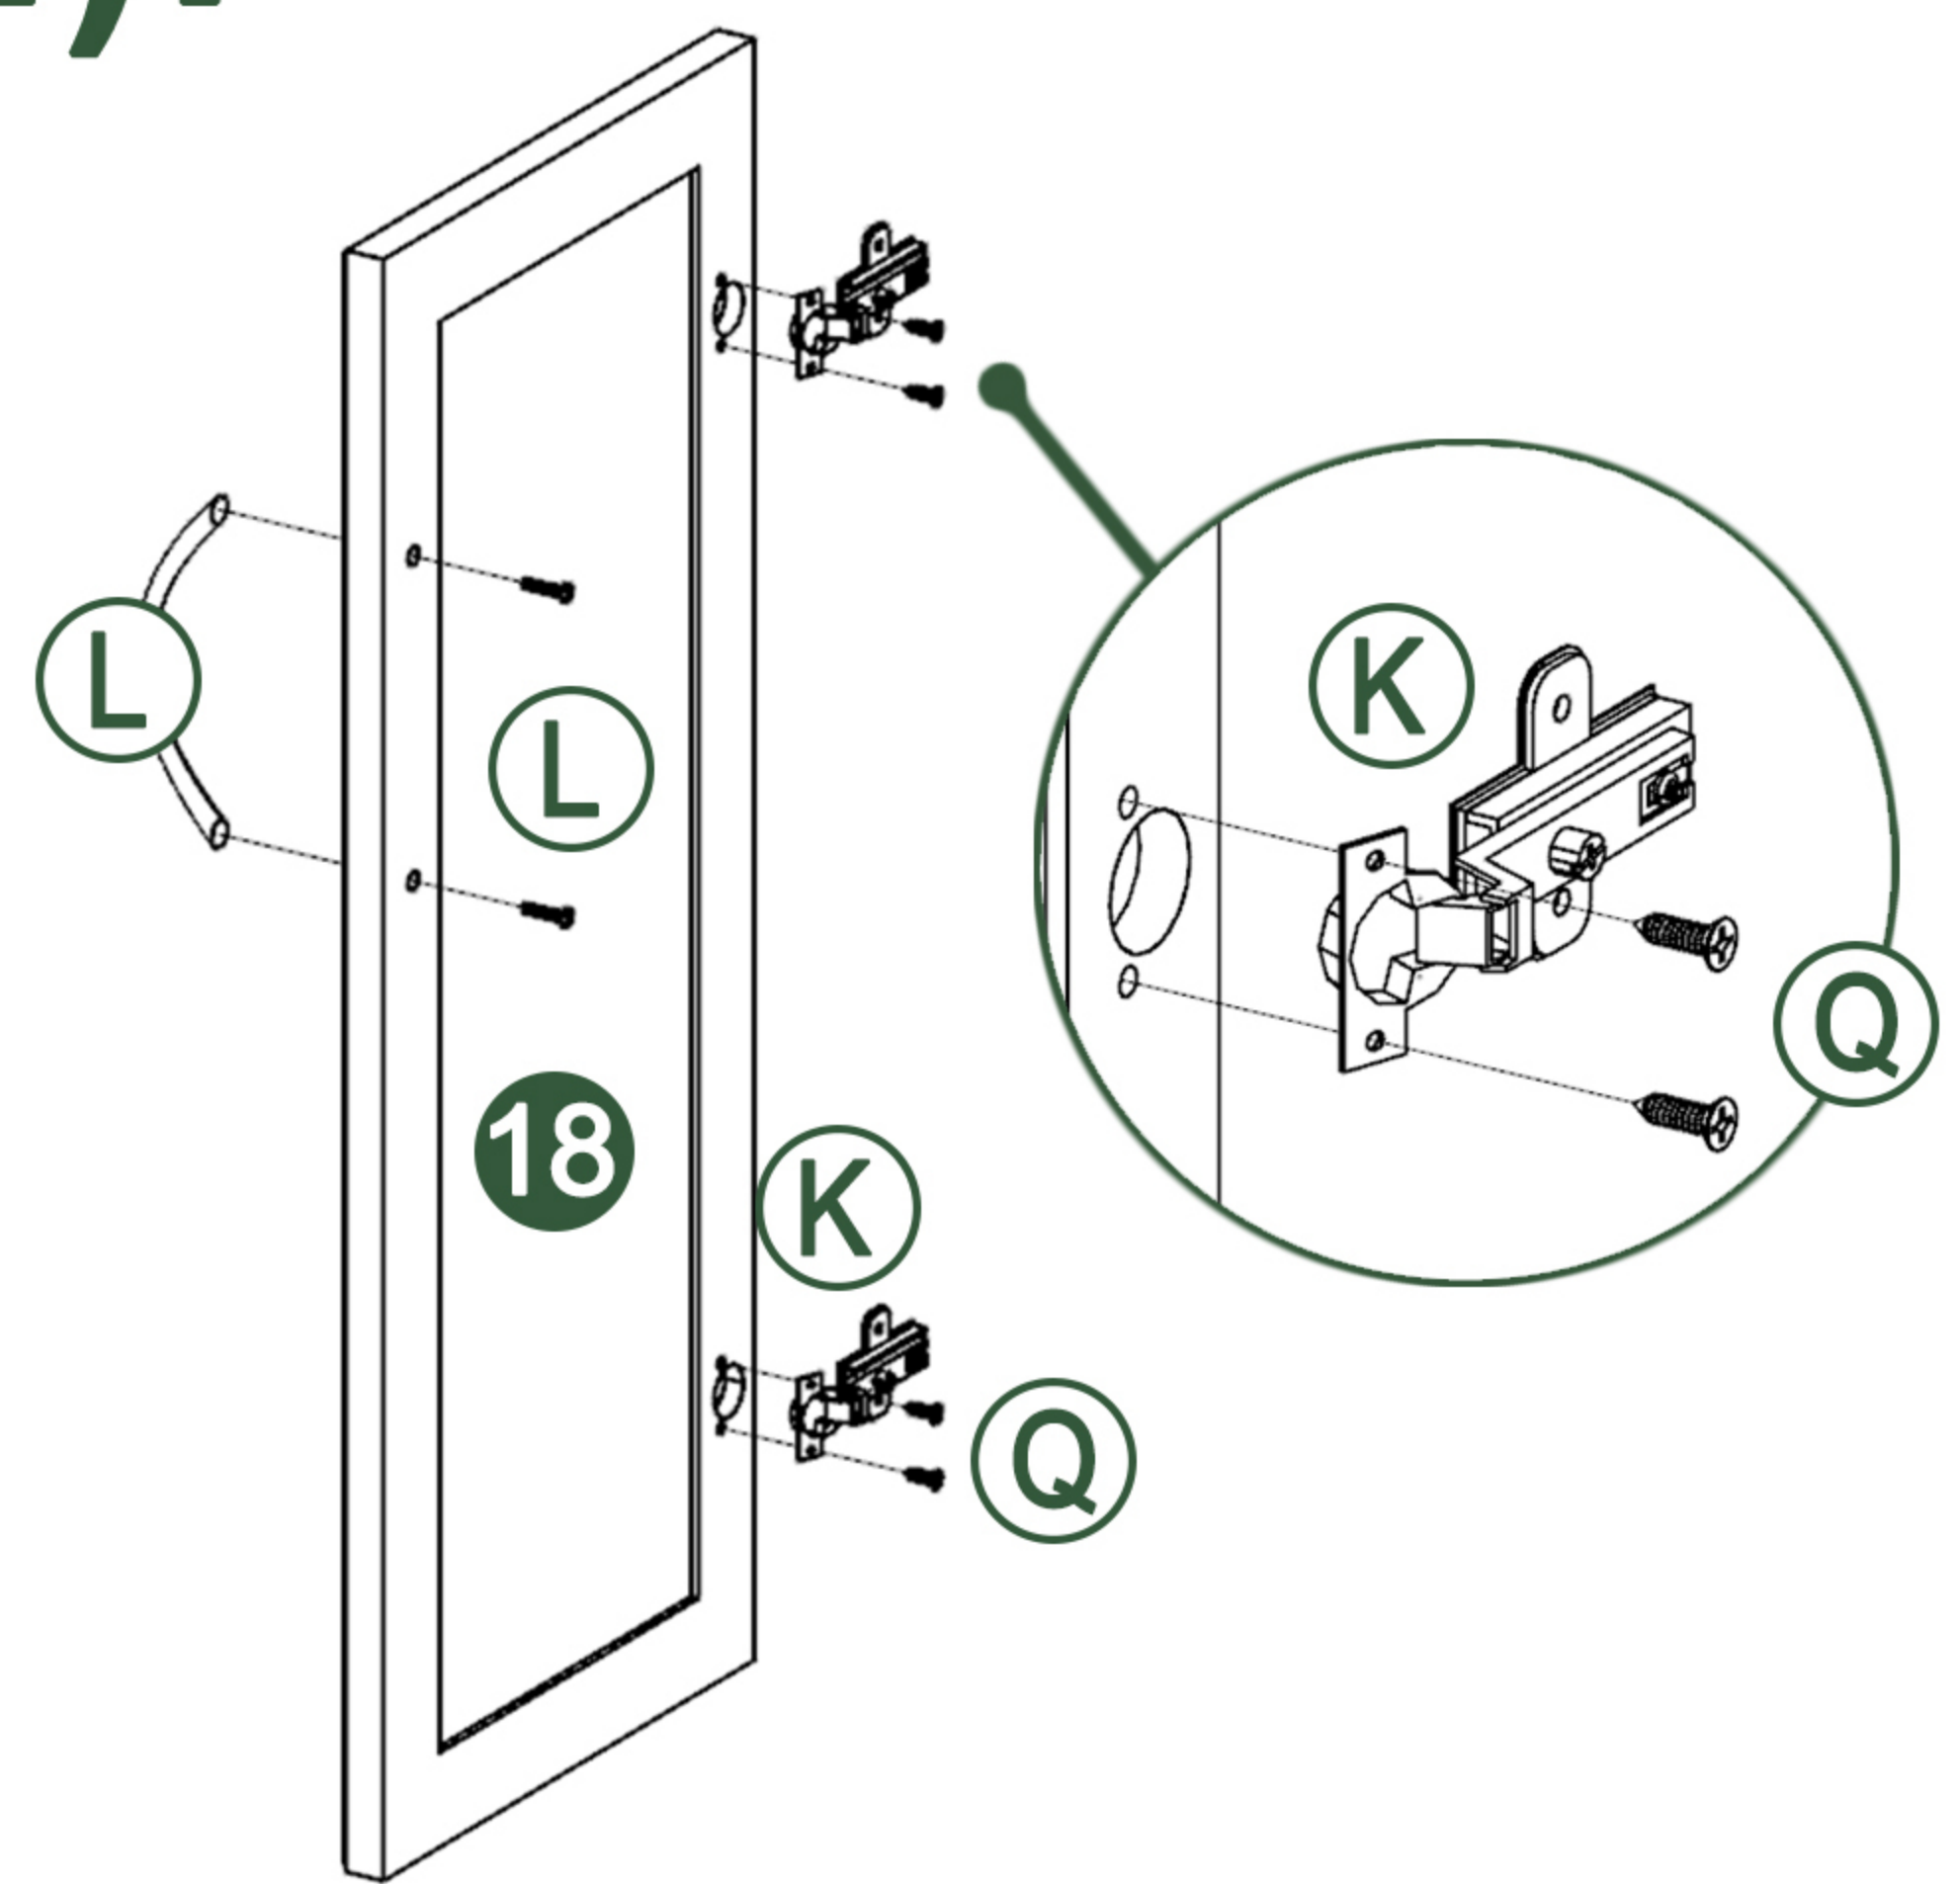


23.

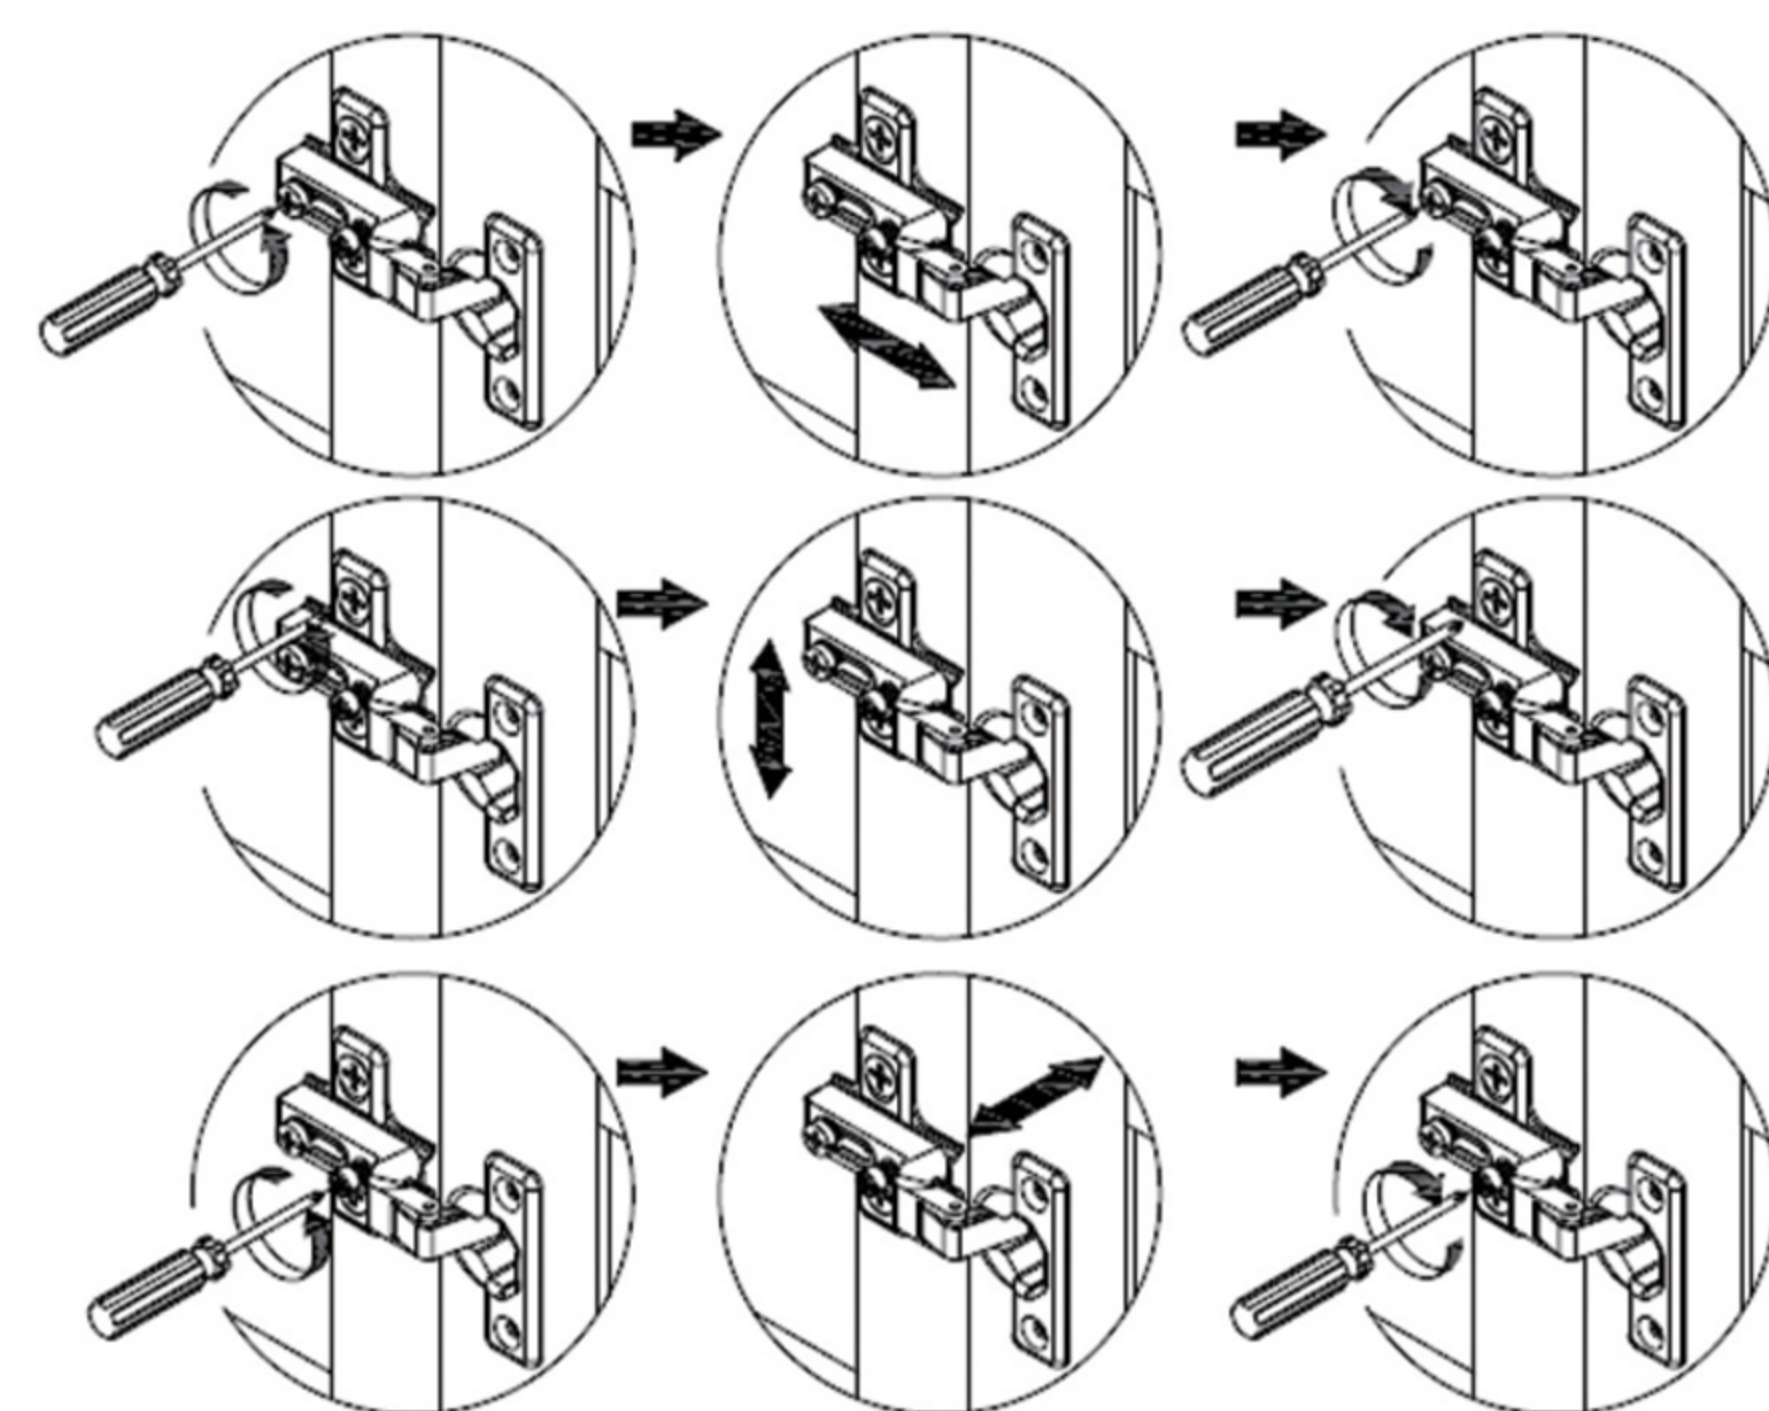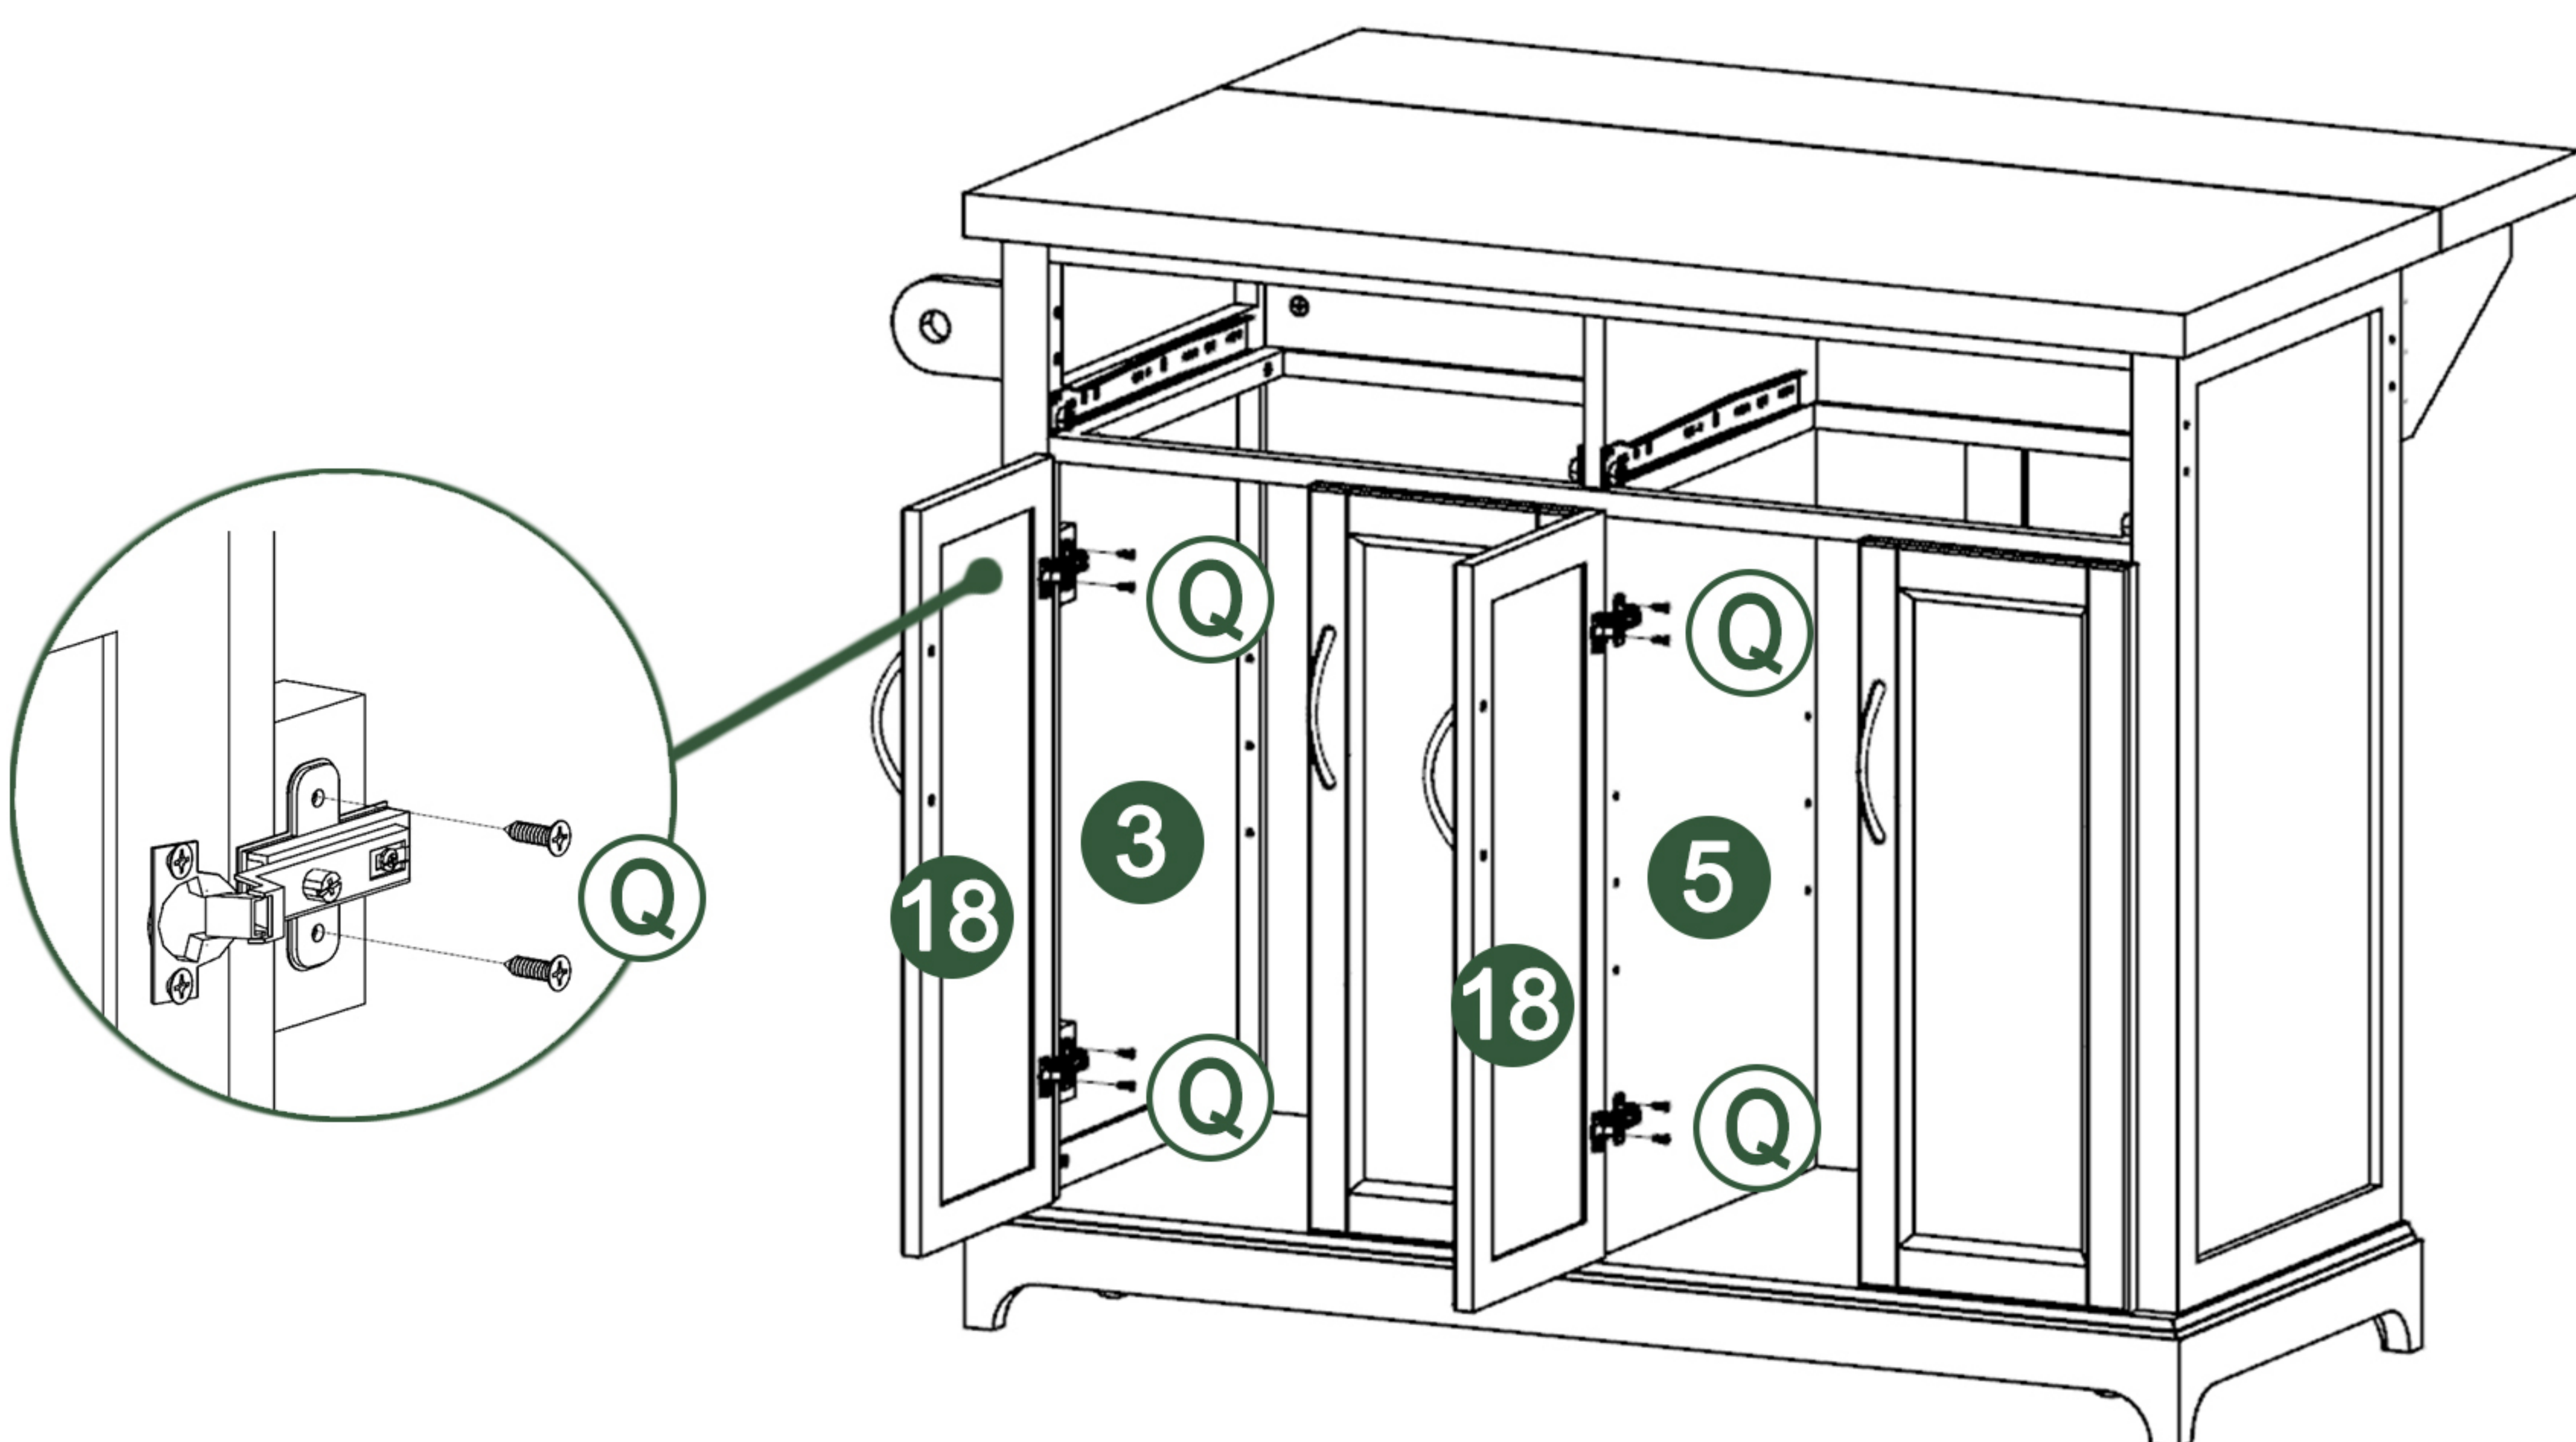


24.

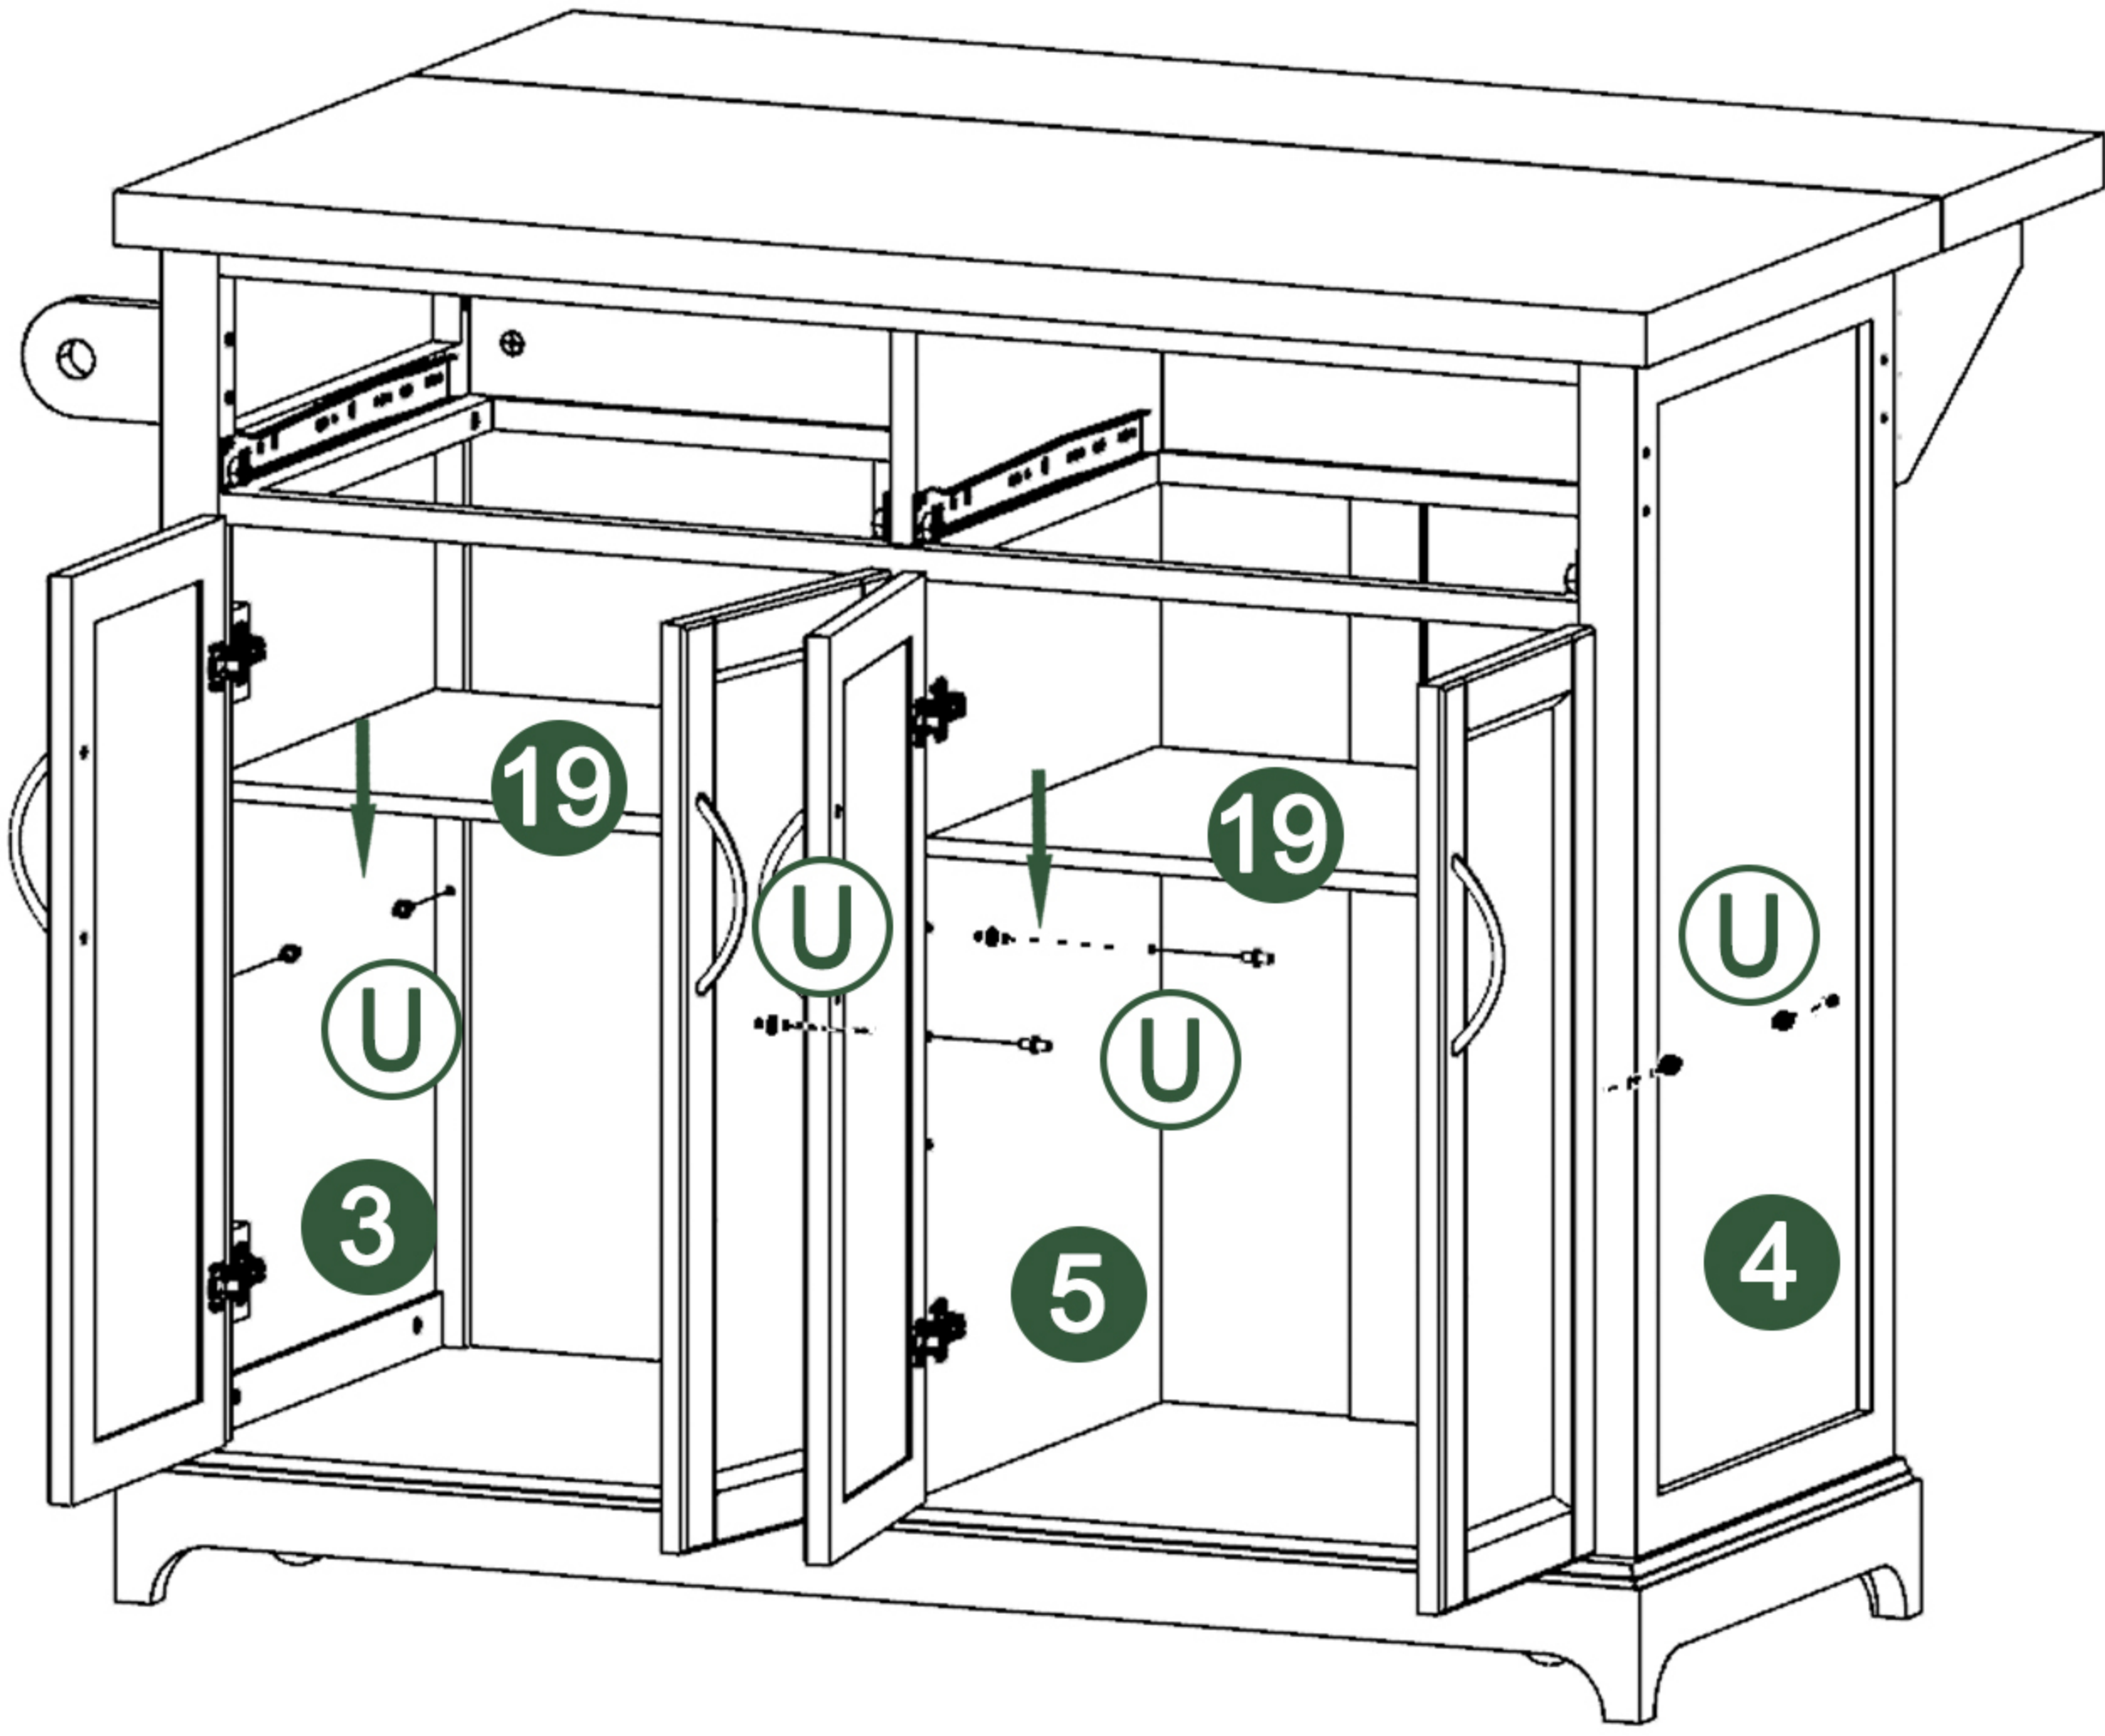


25(X2).

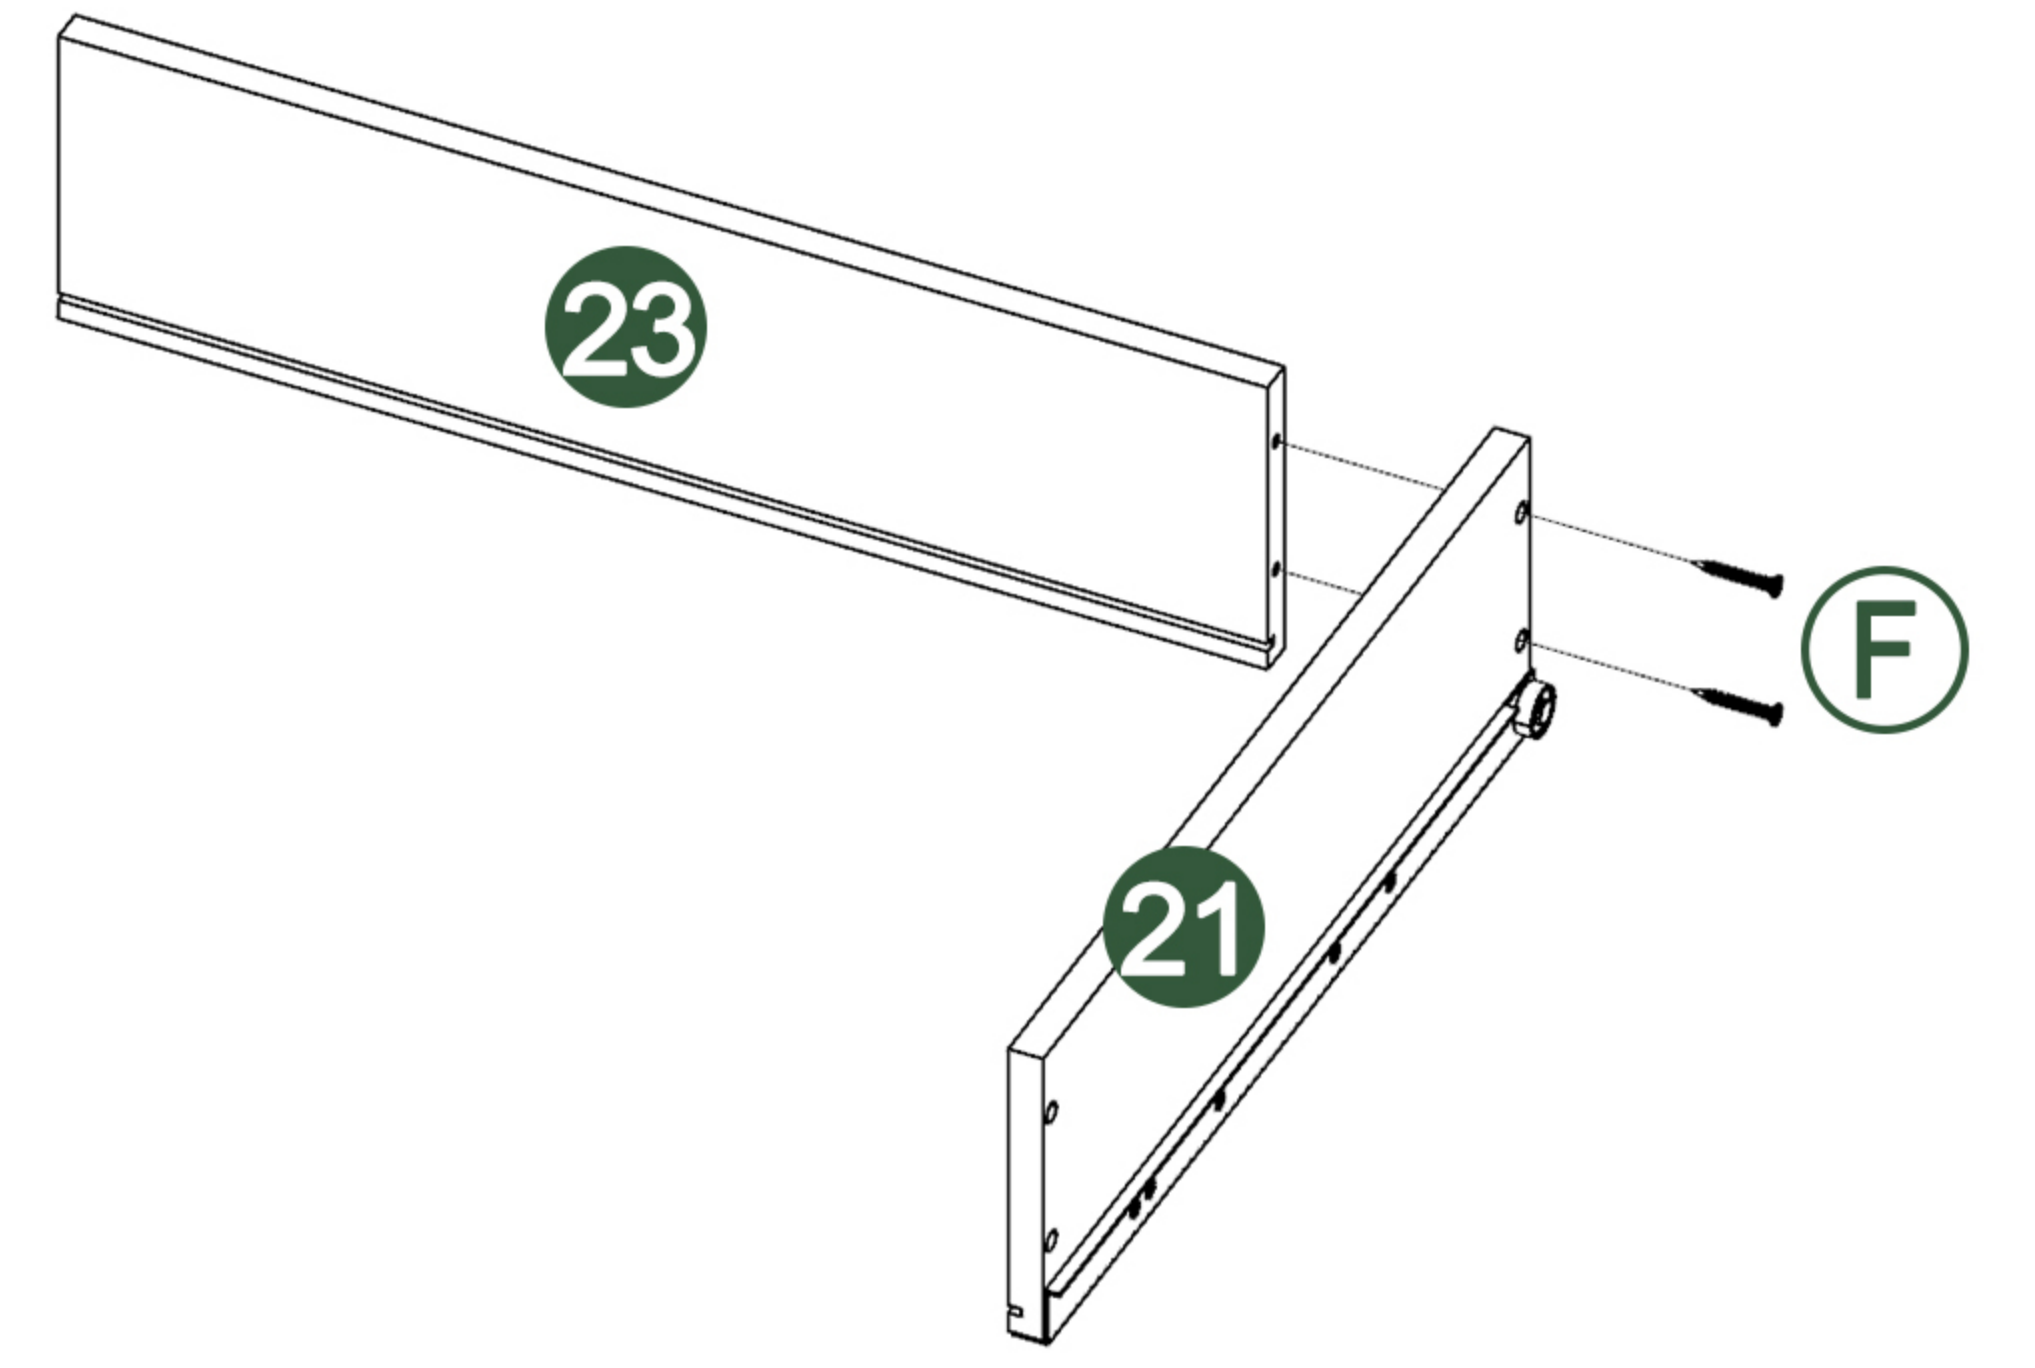


26(X2).

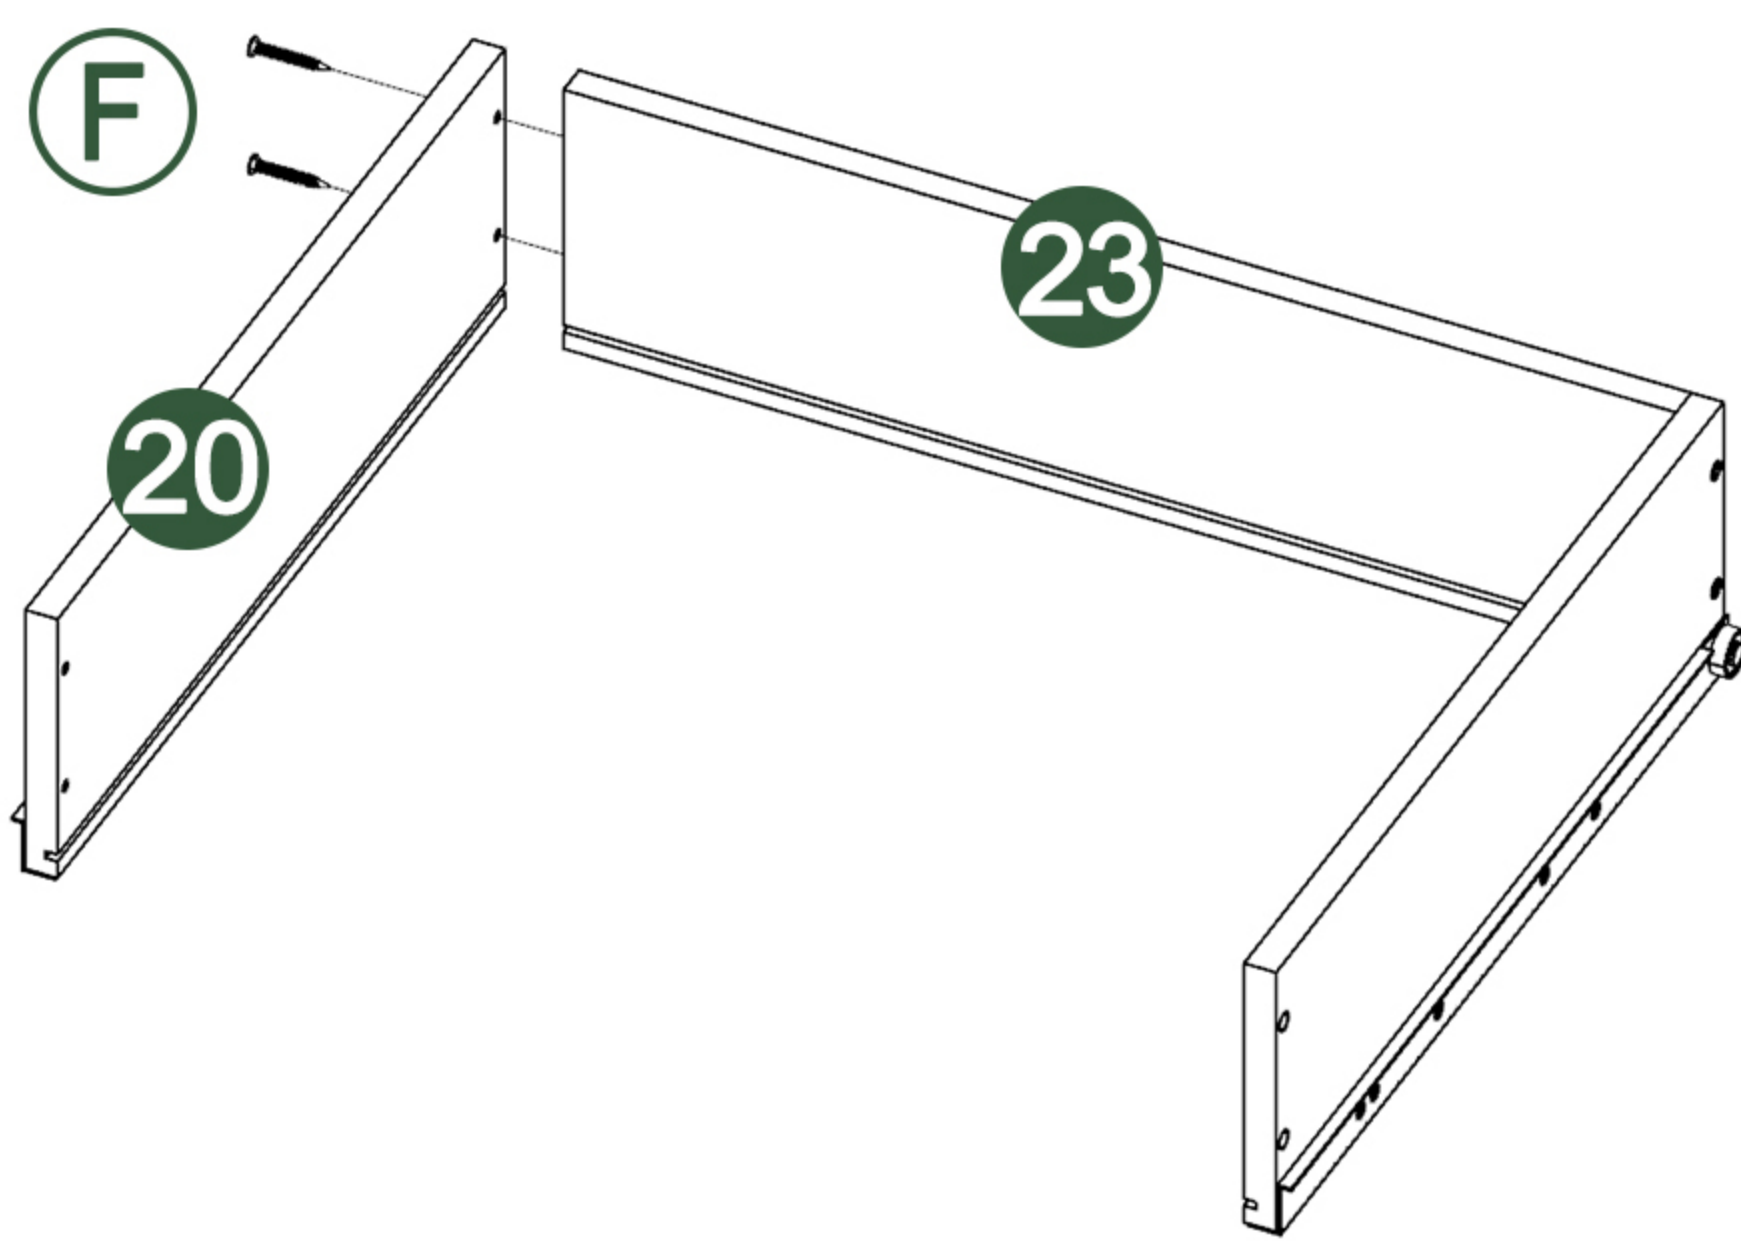


27(X2).

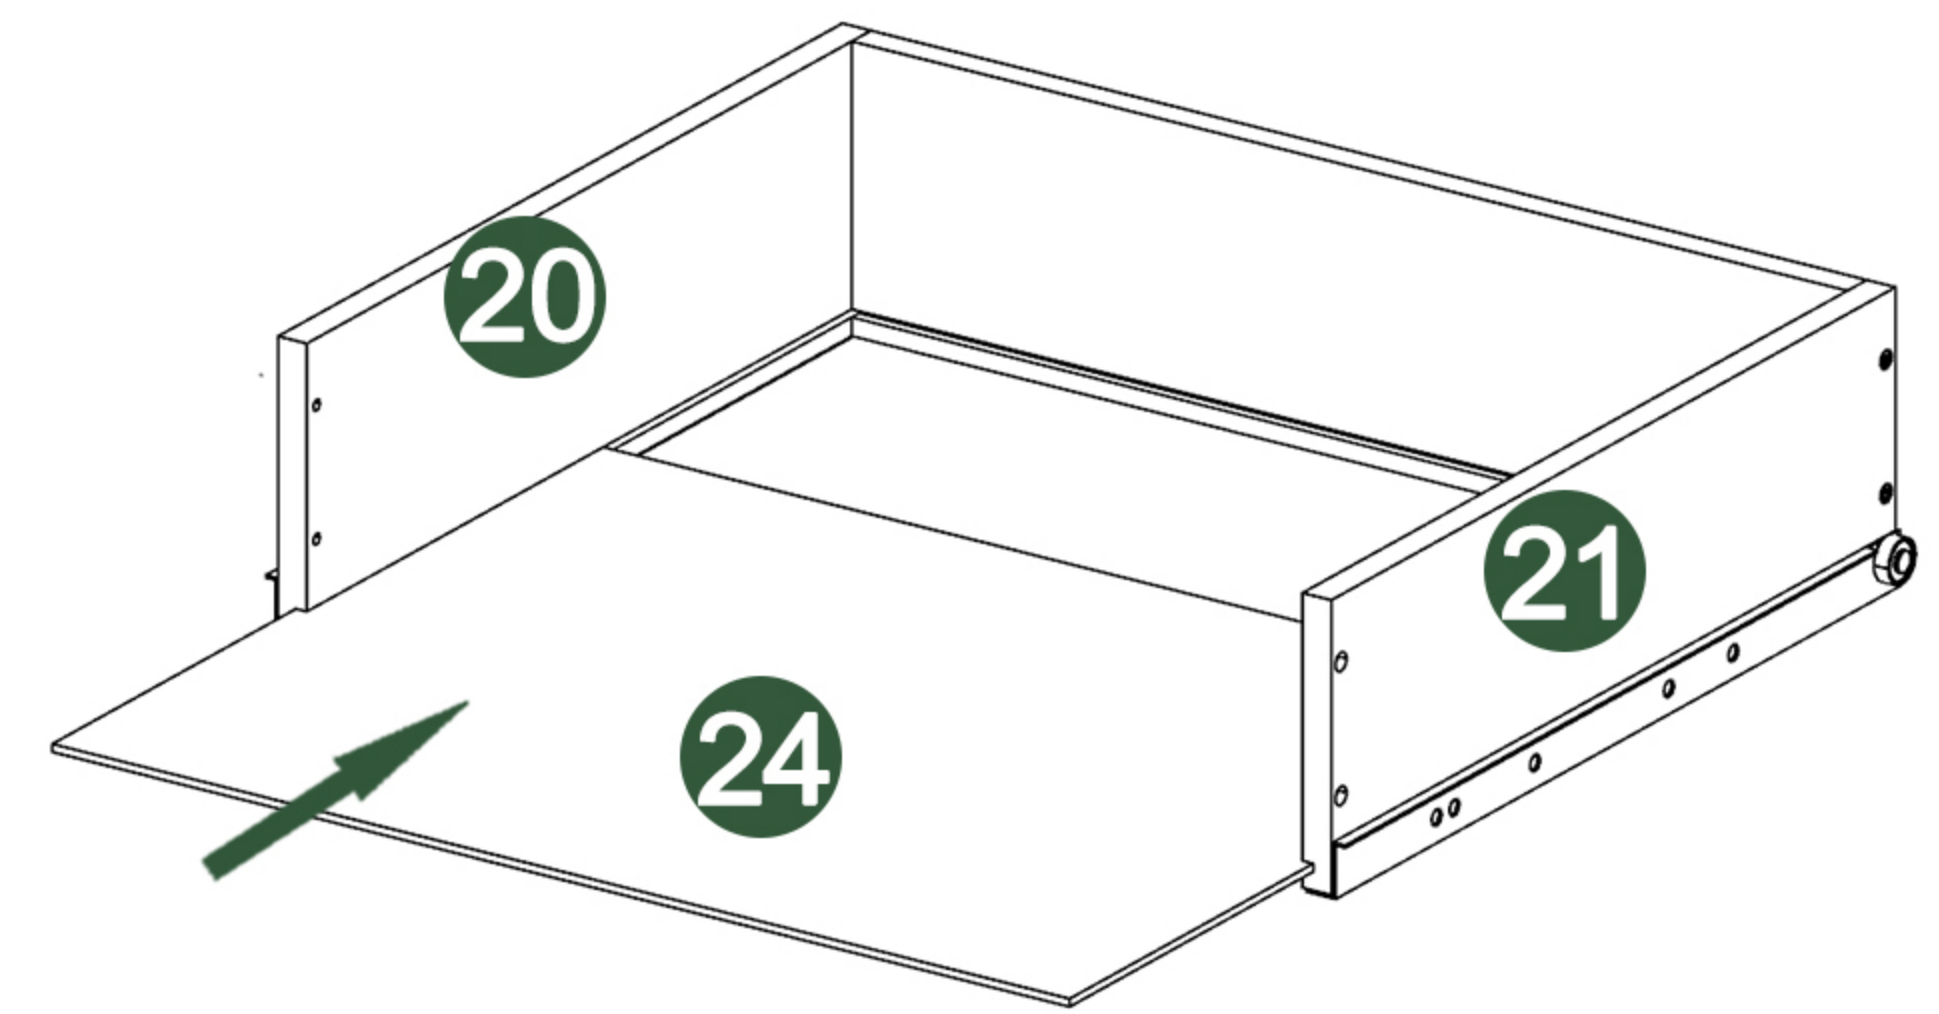


28(X2).

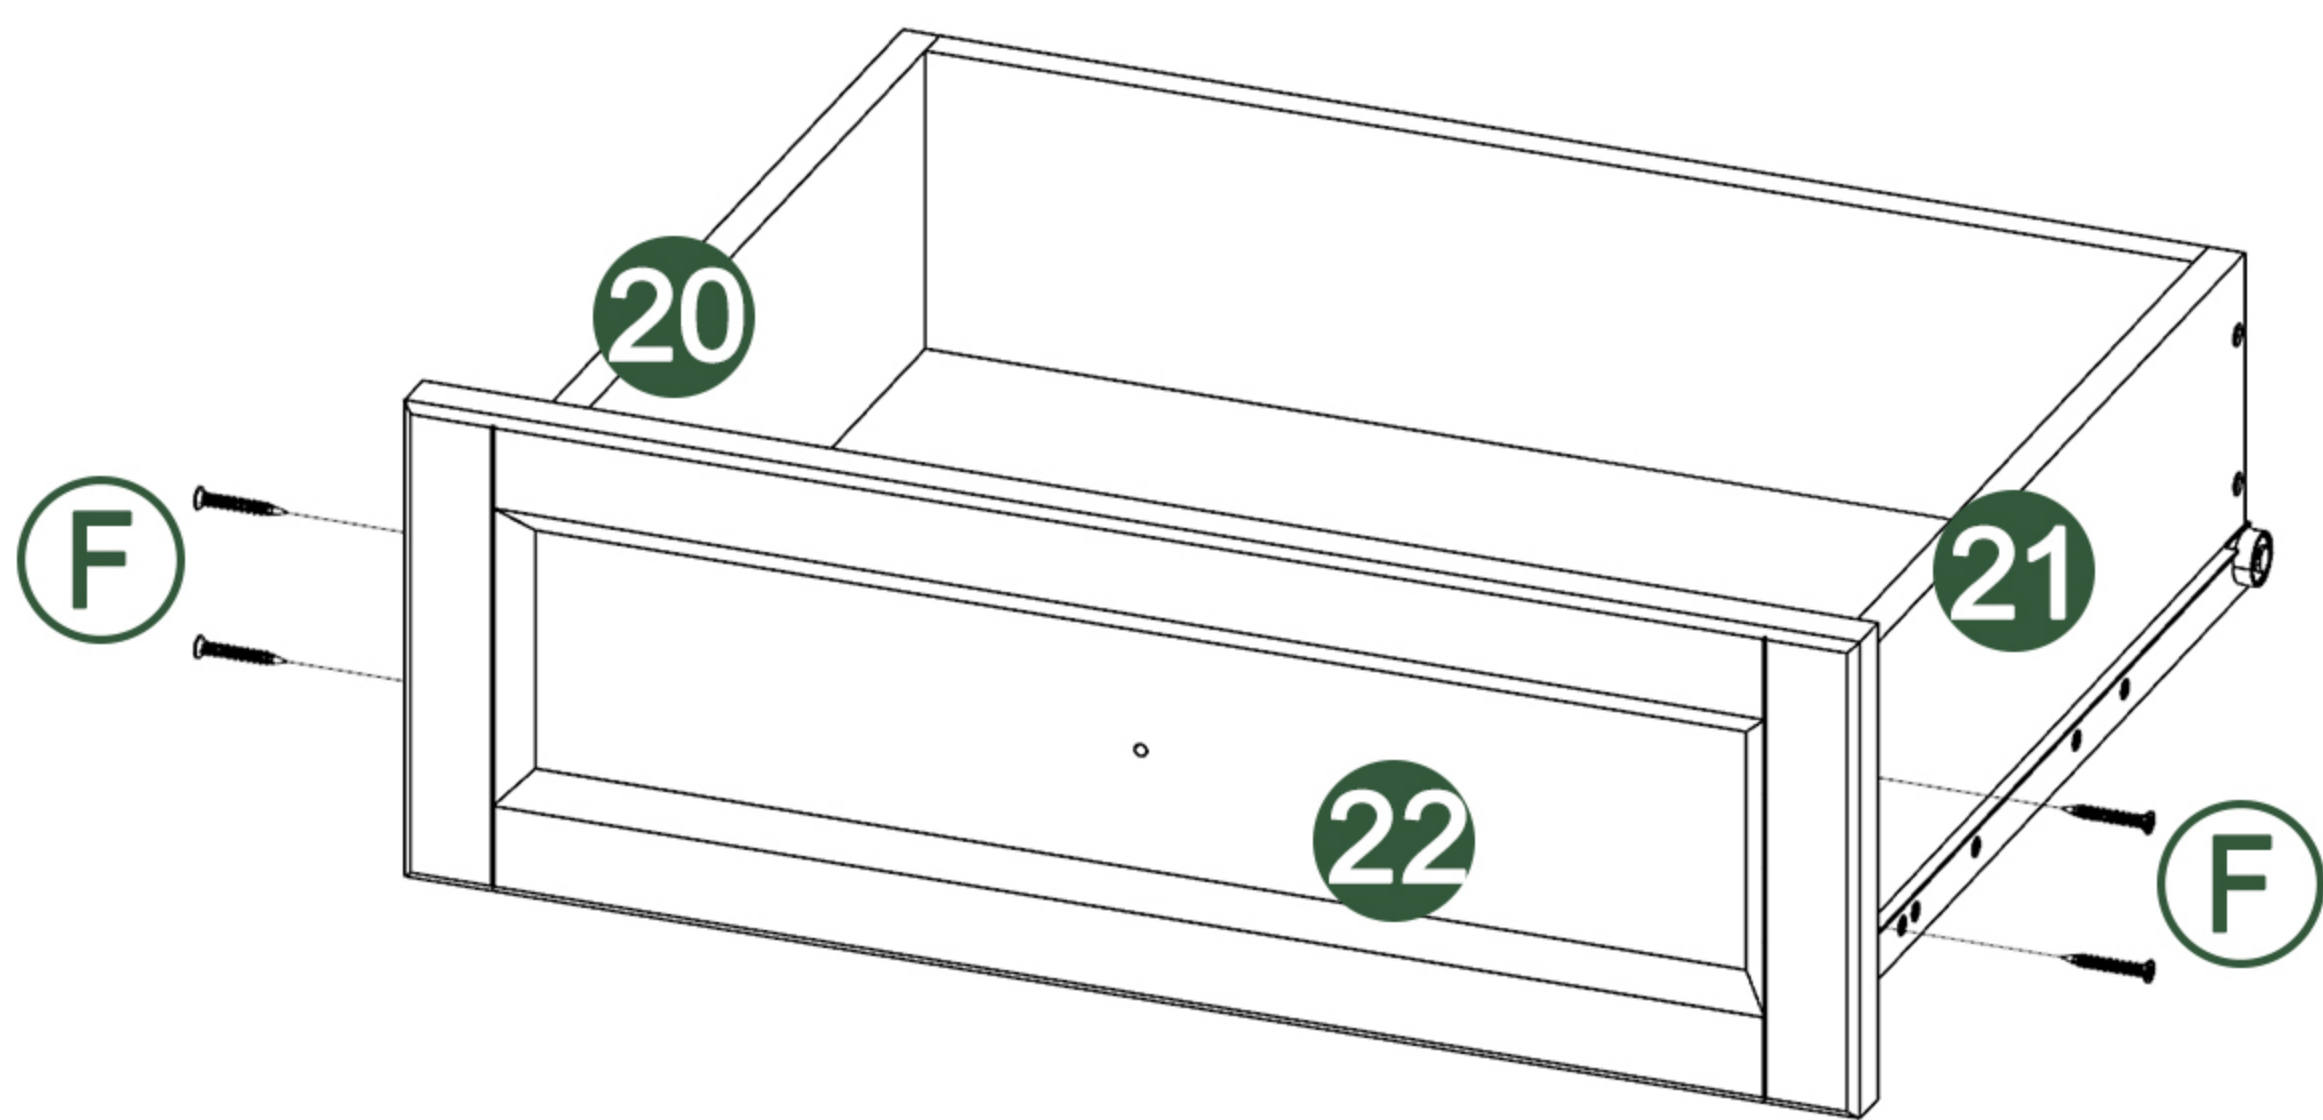


29(X2).

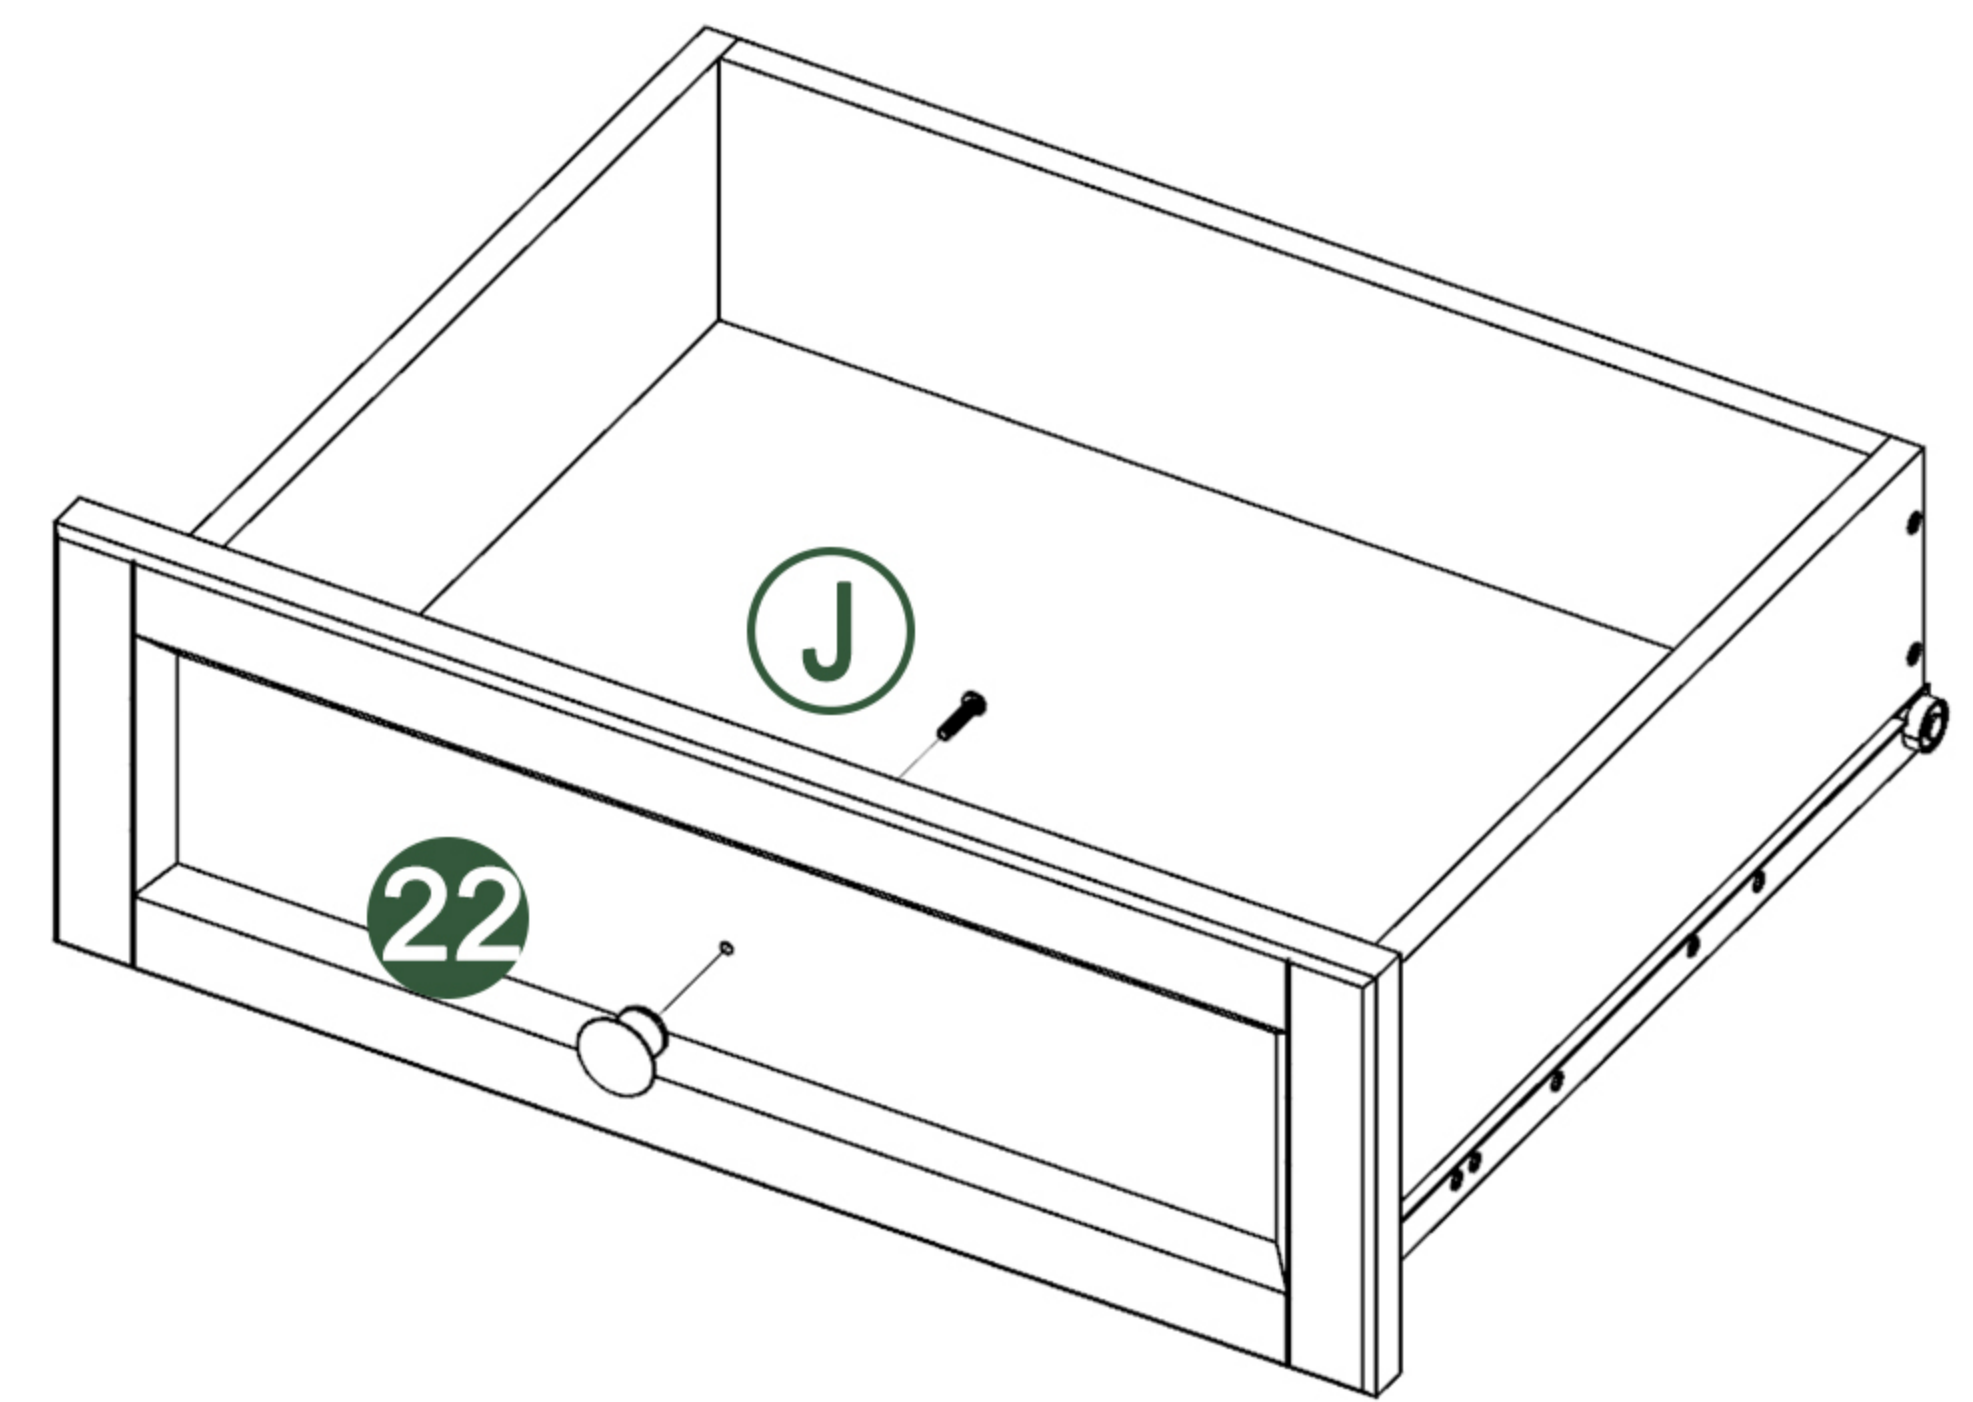


30.

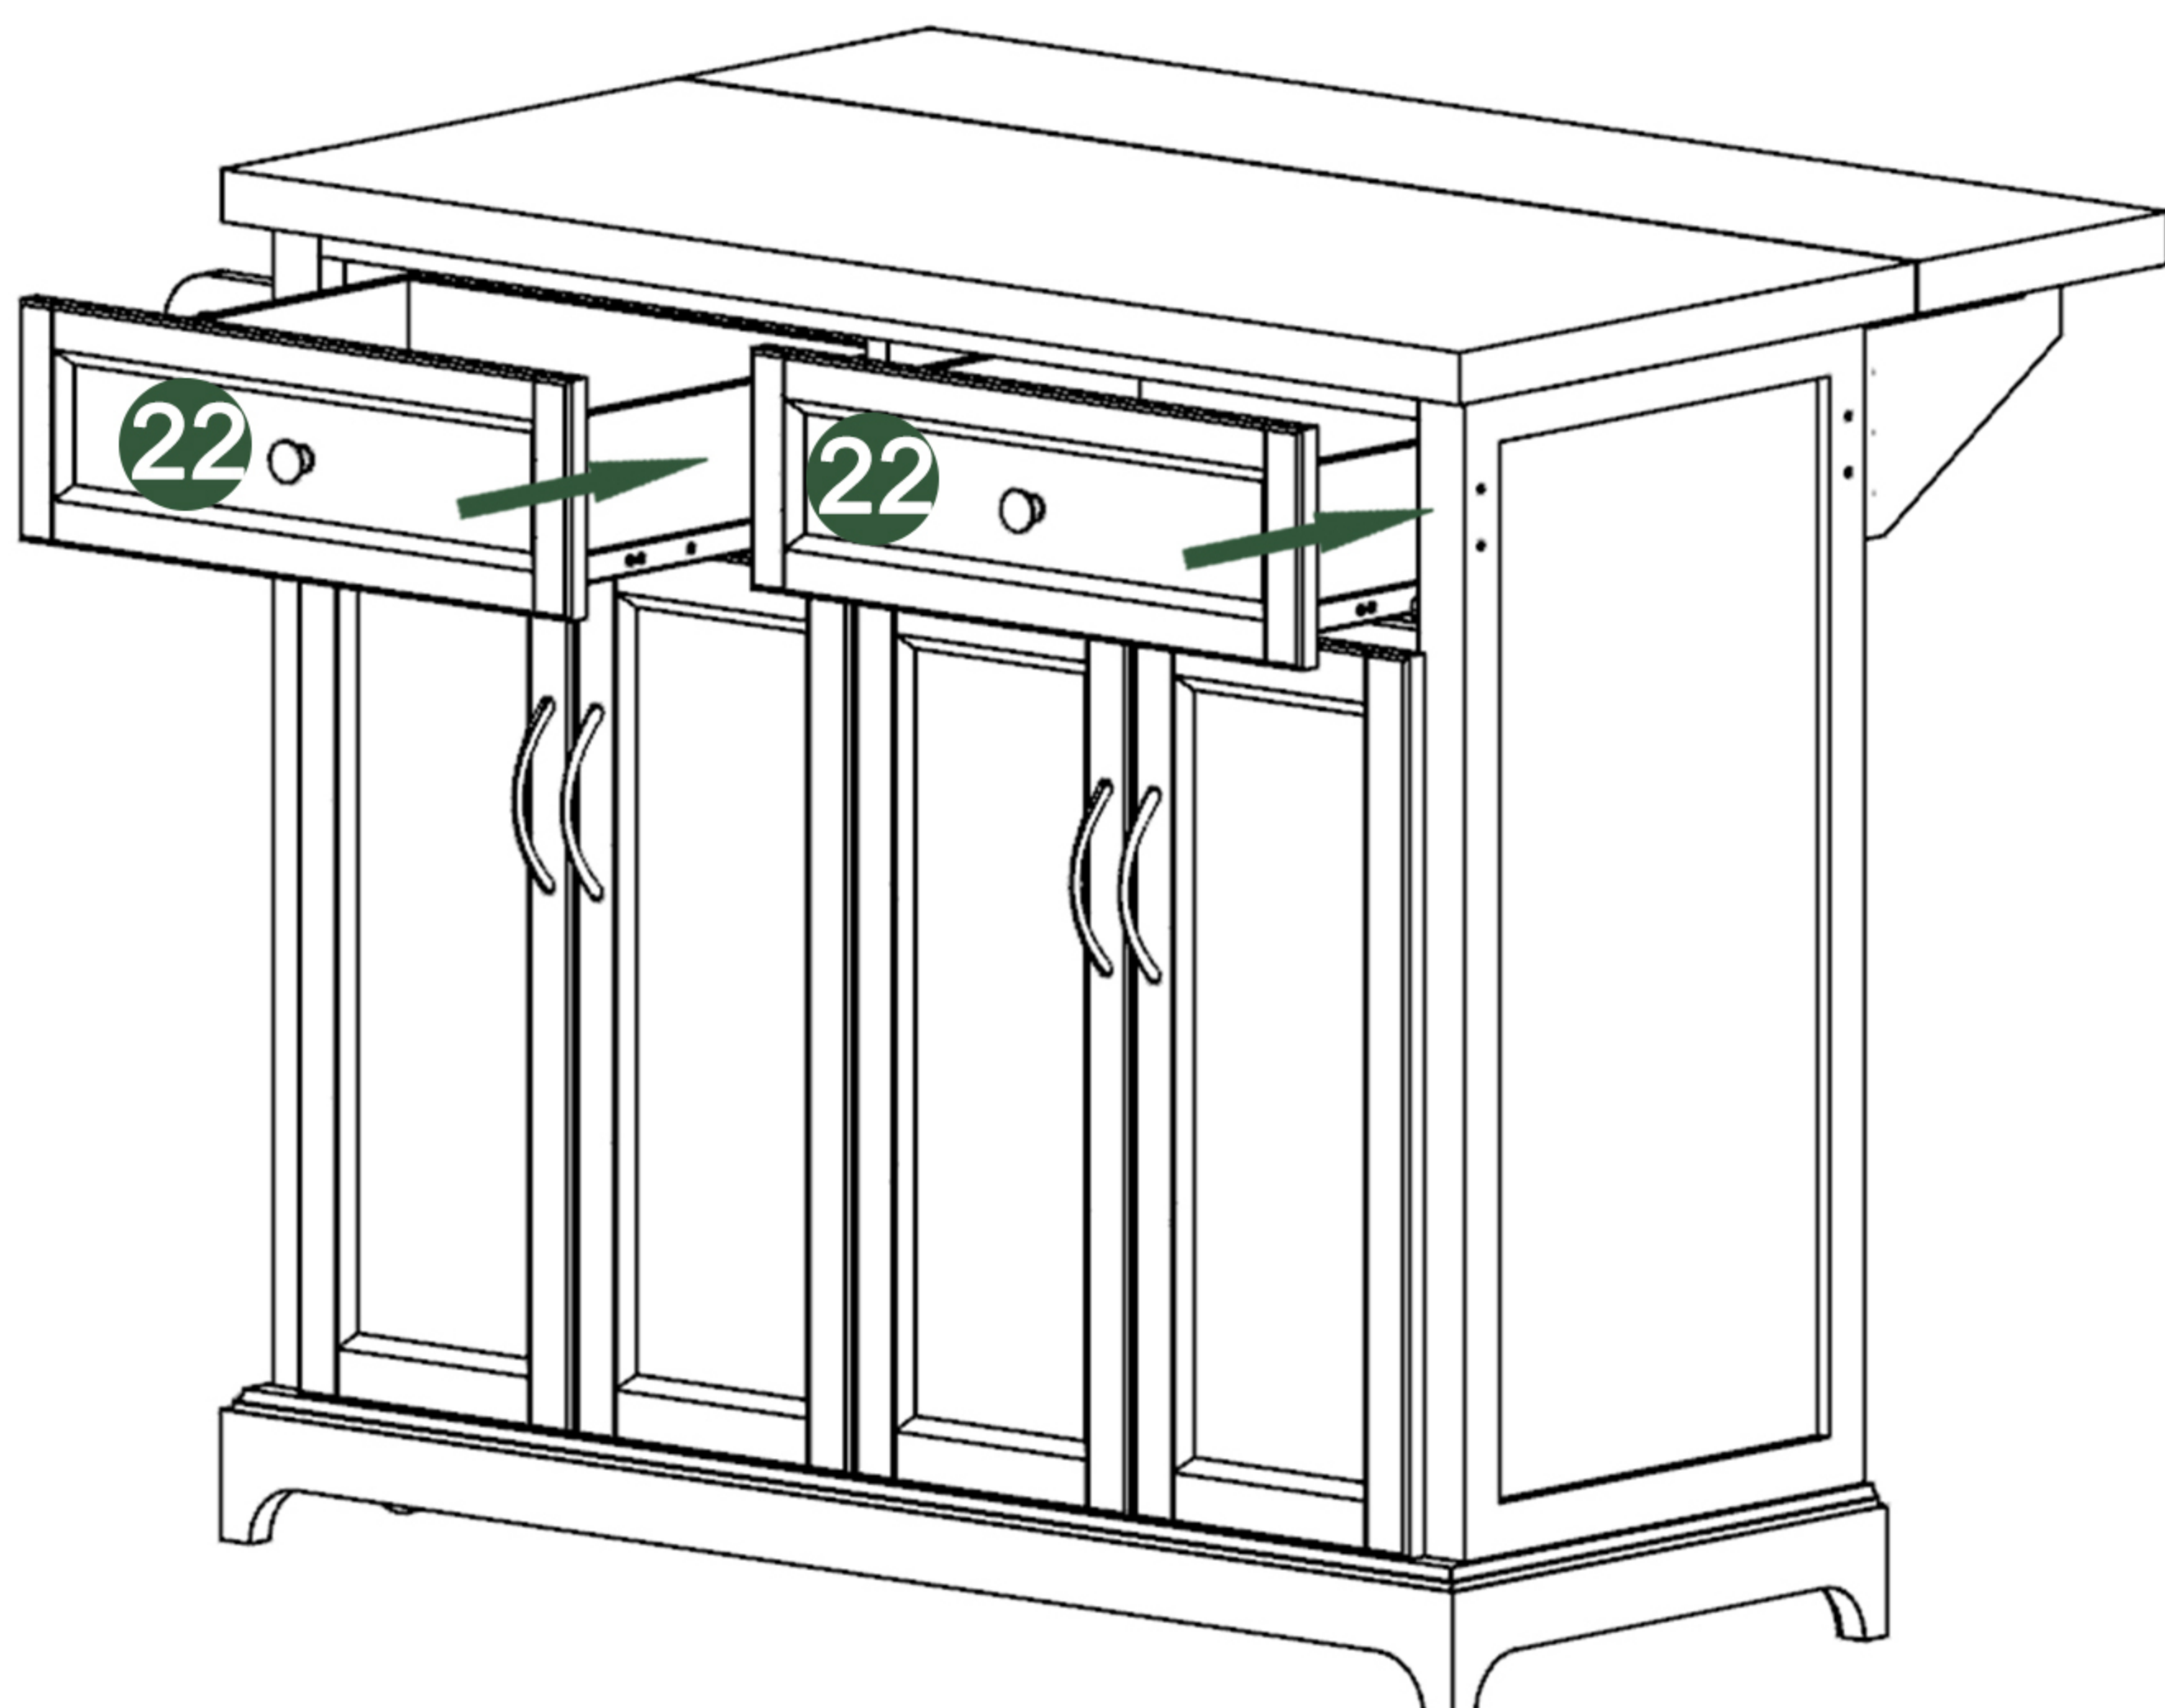


31a.

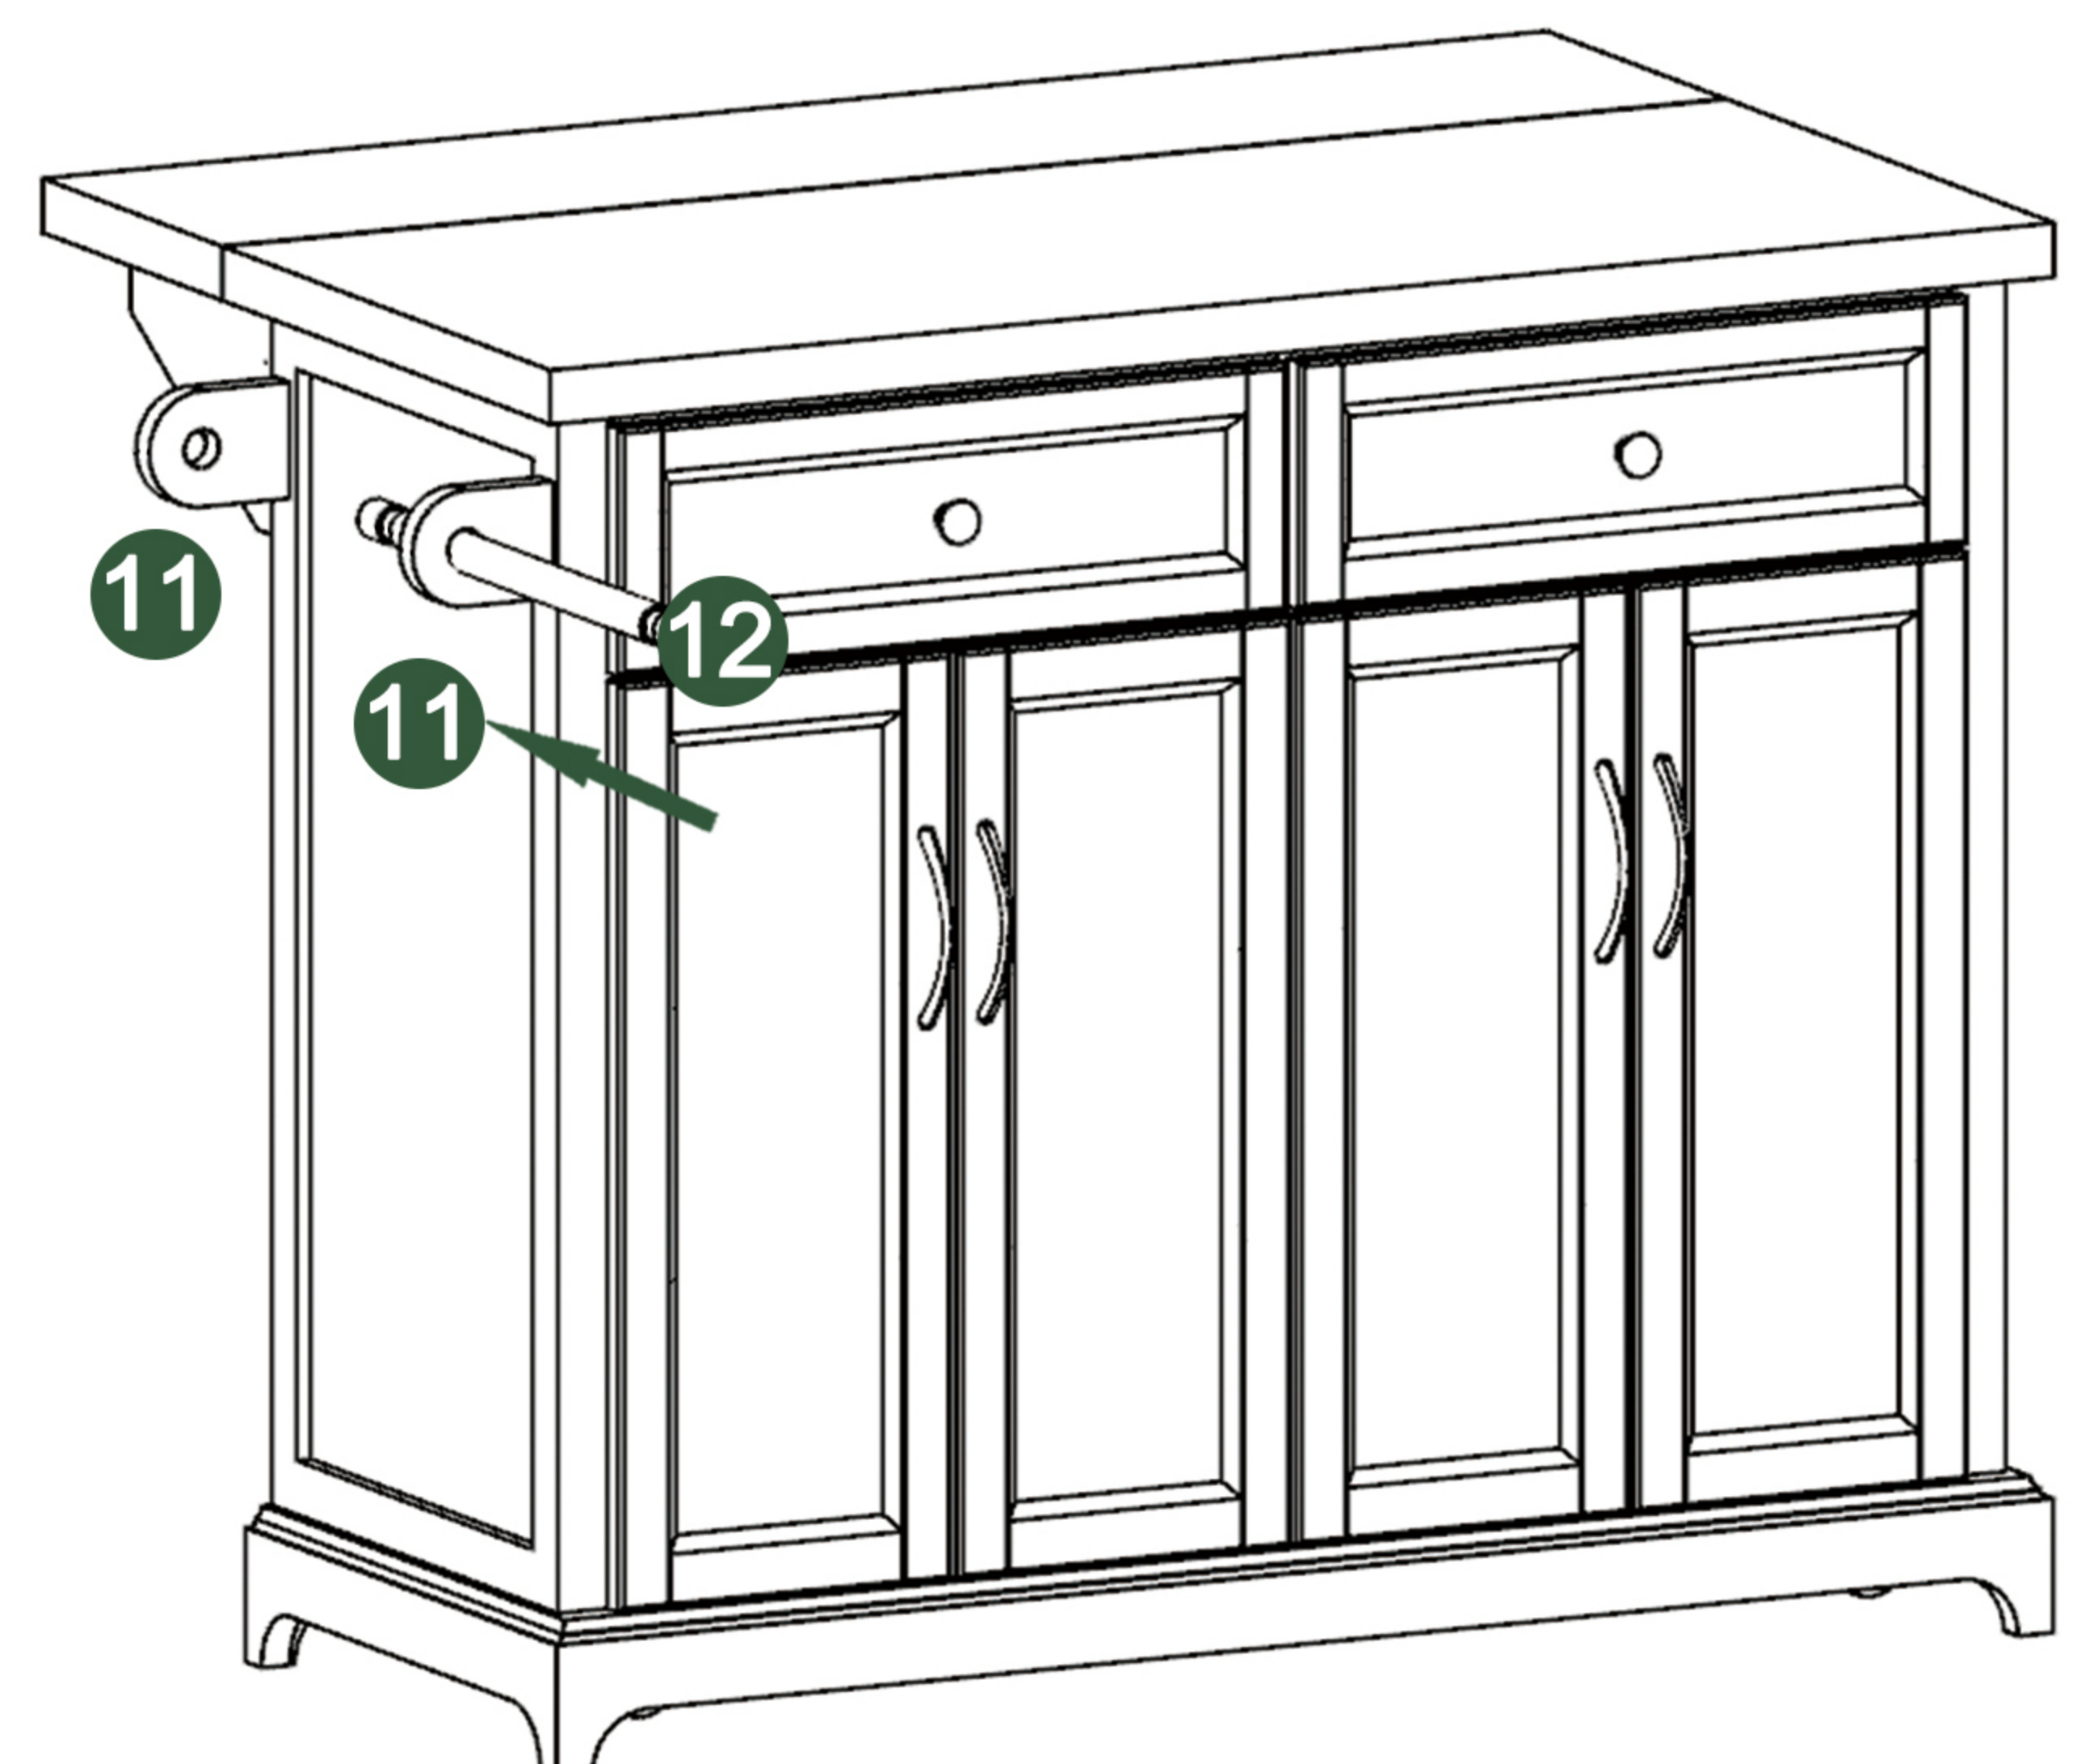


32a.

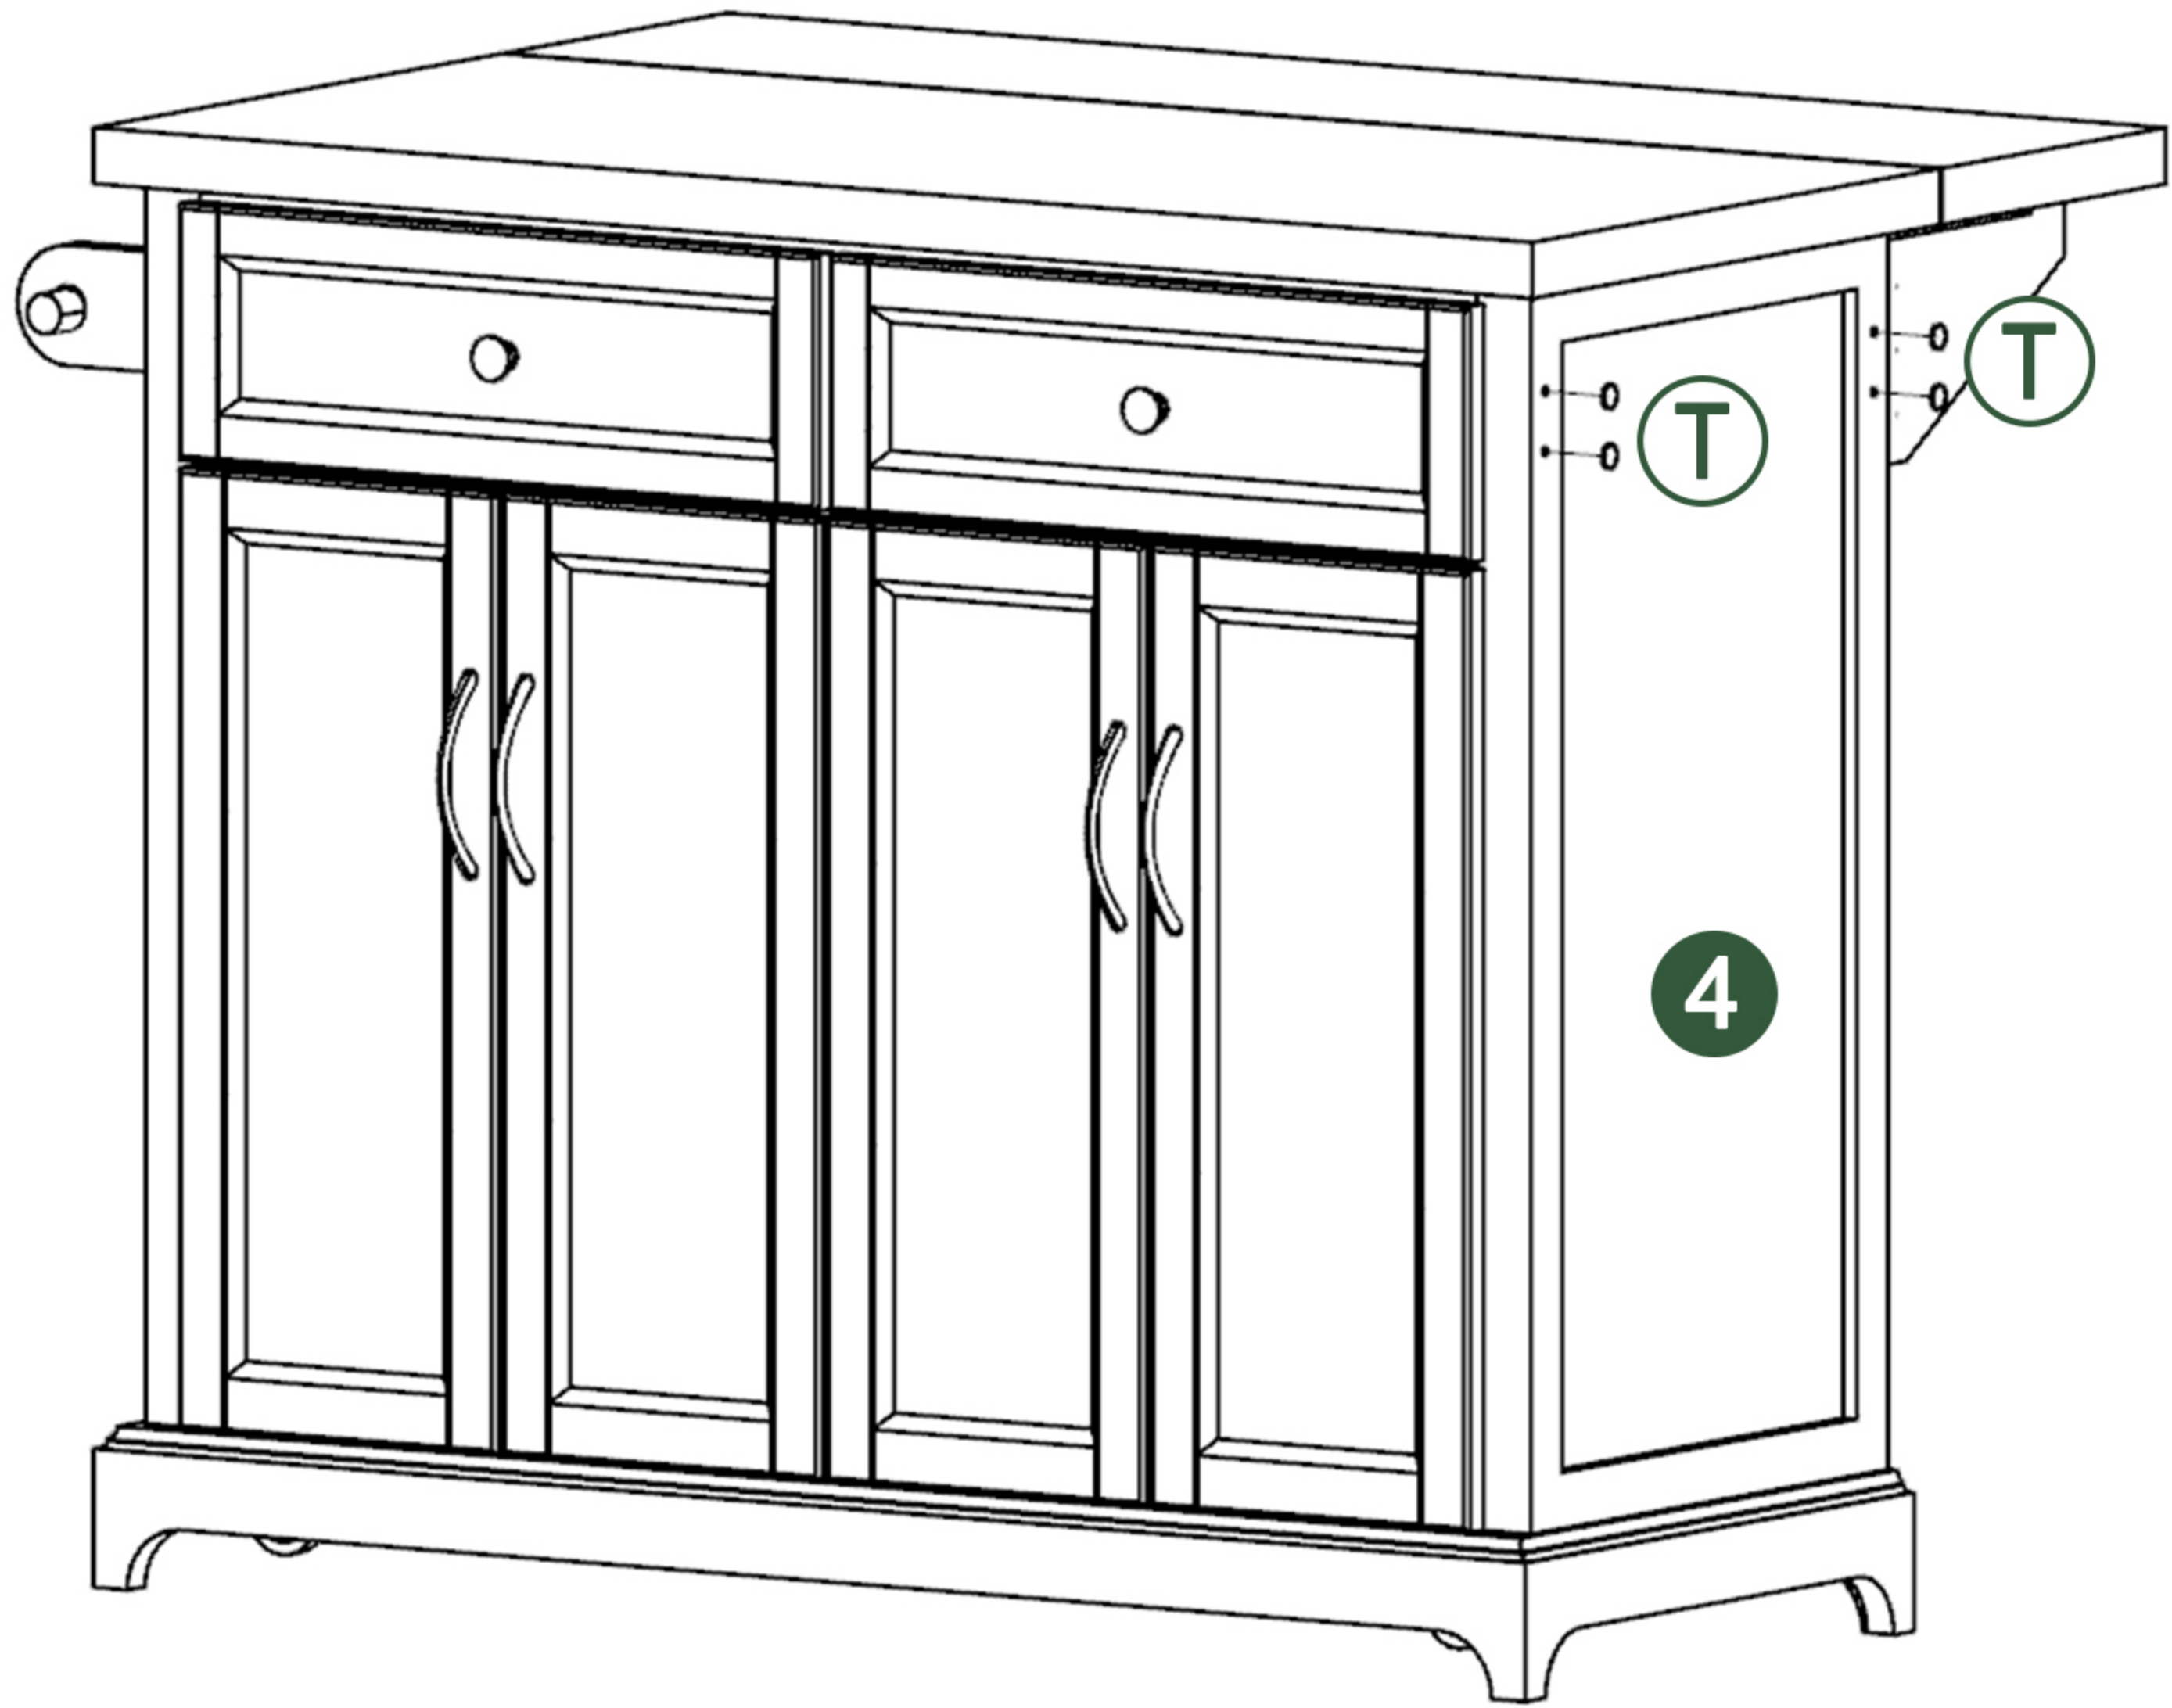


5b.

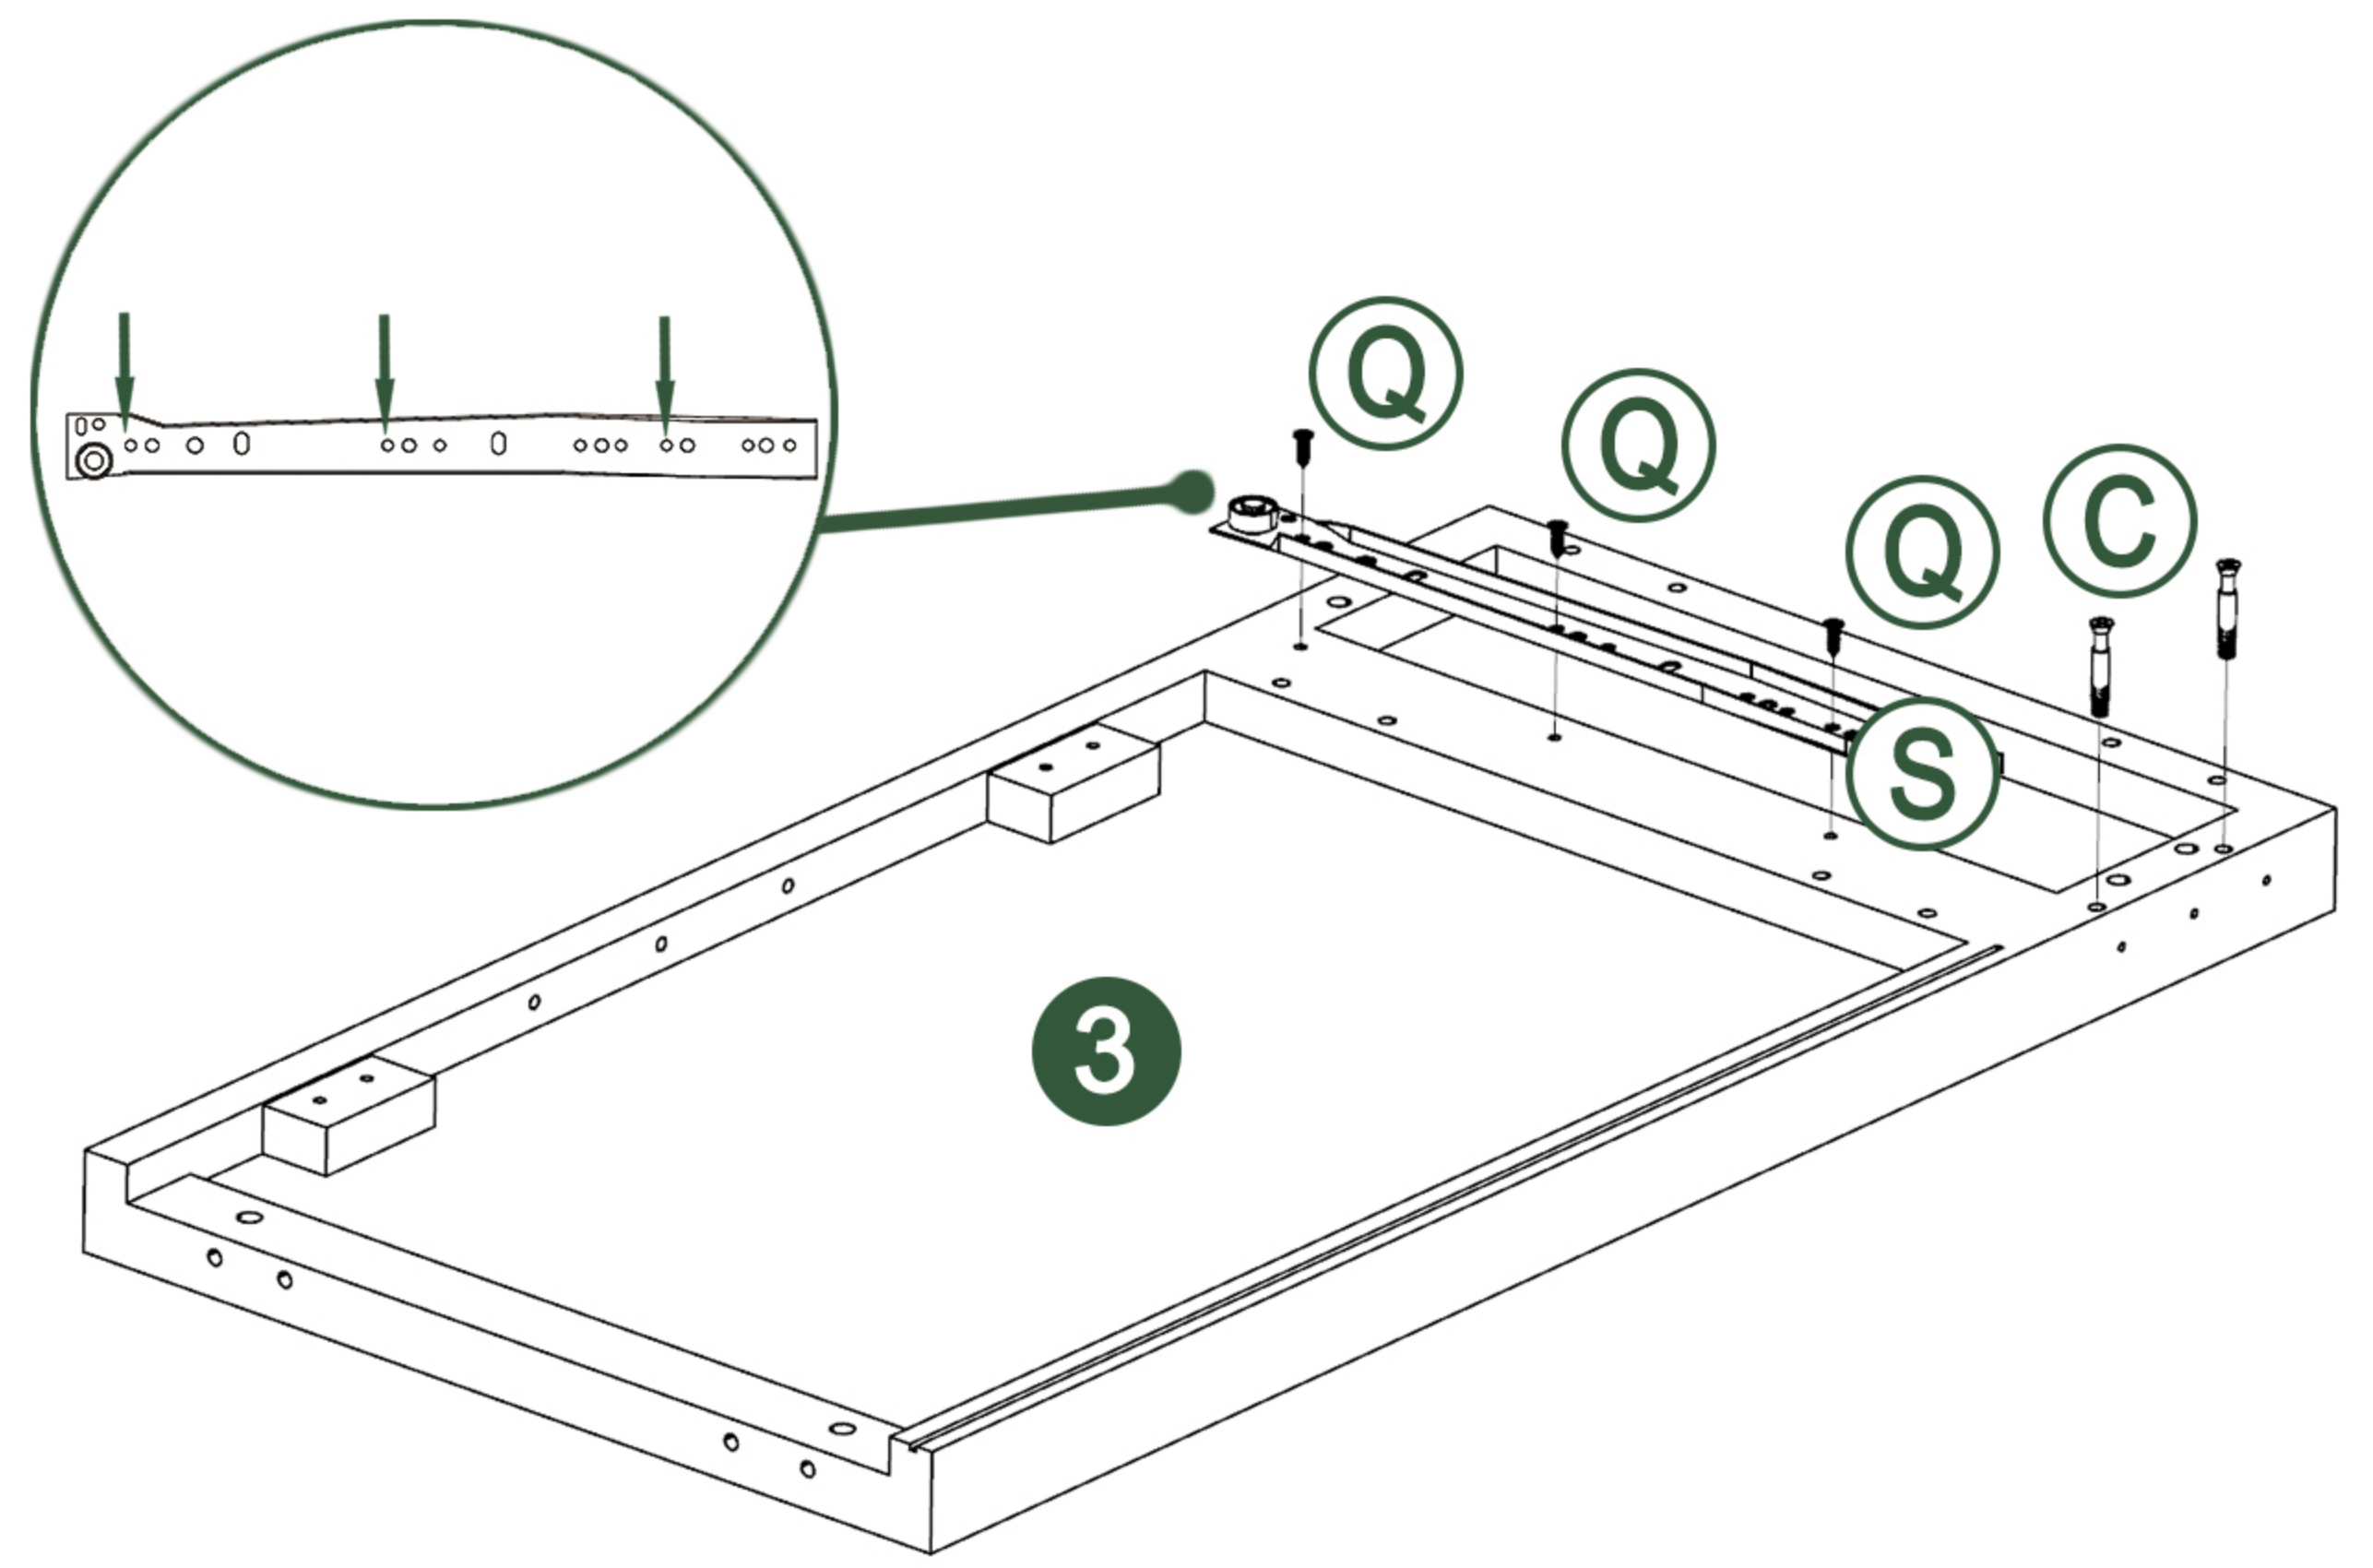


6b.

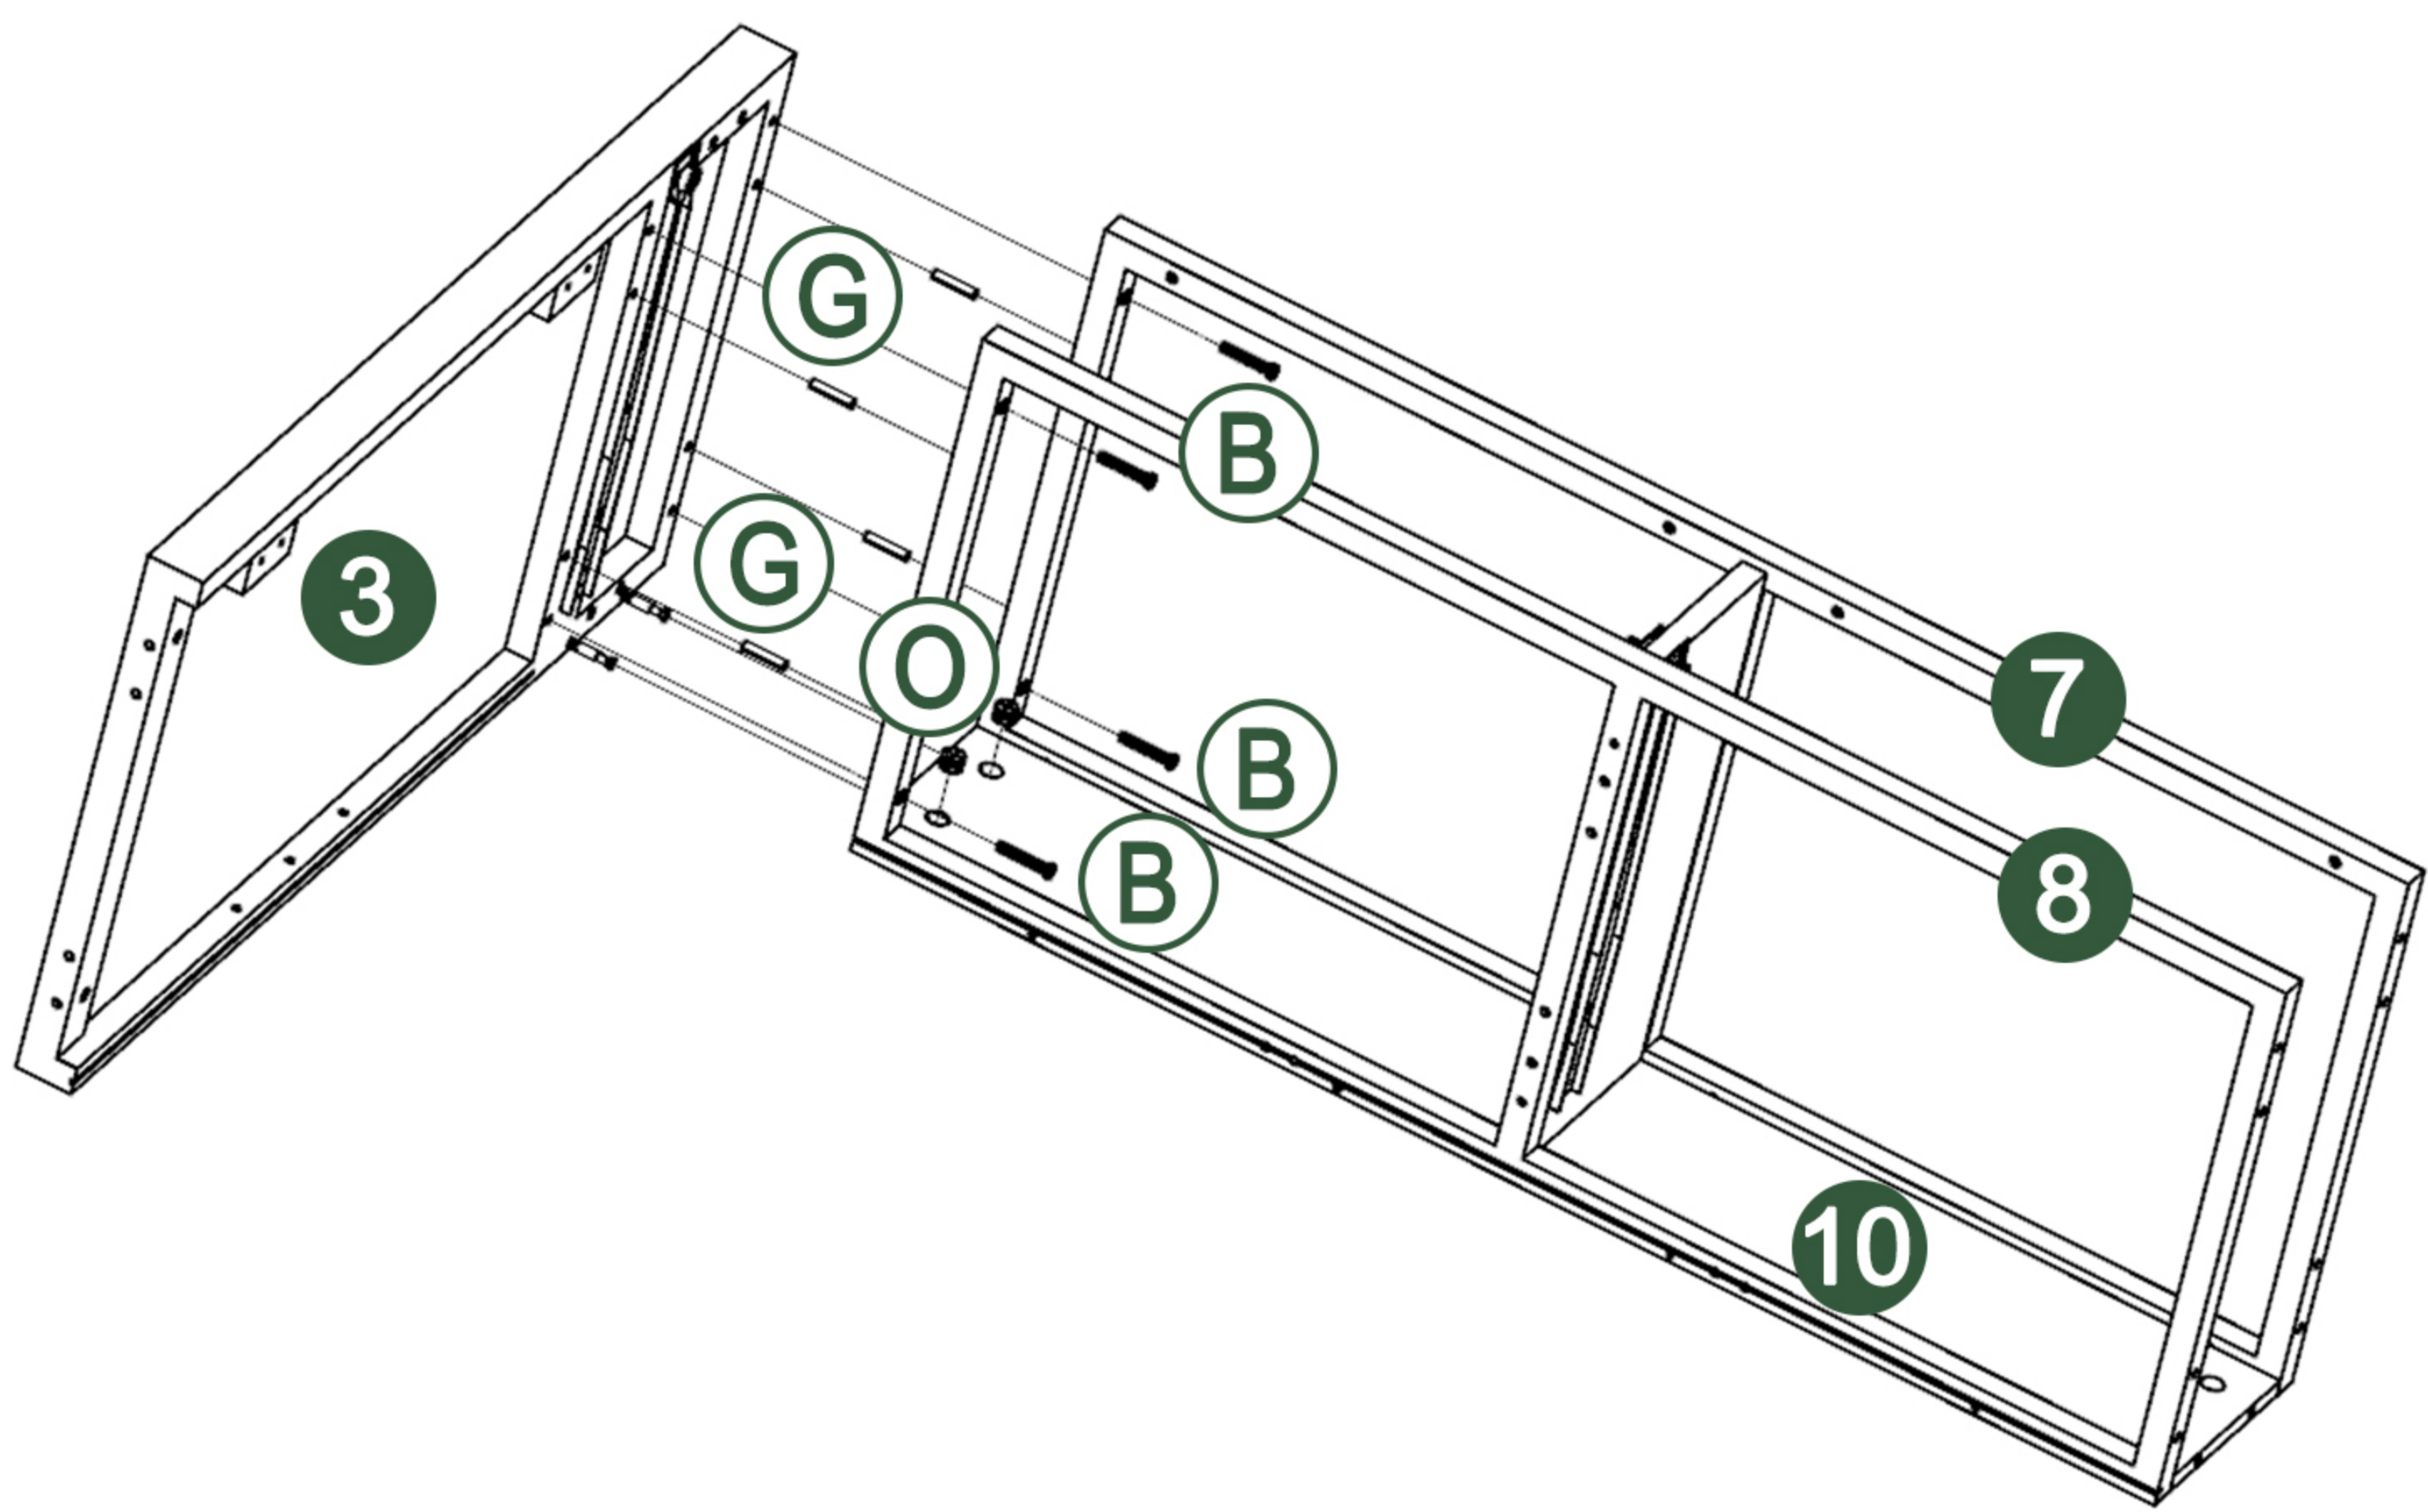


7b.

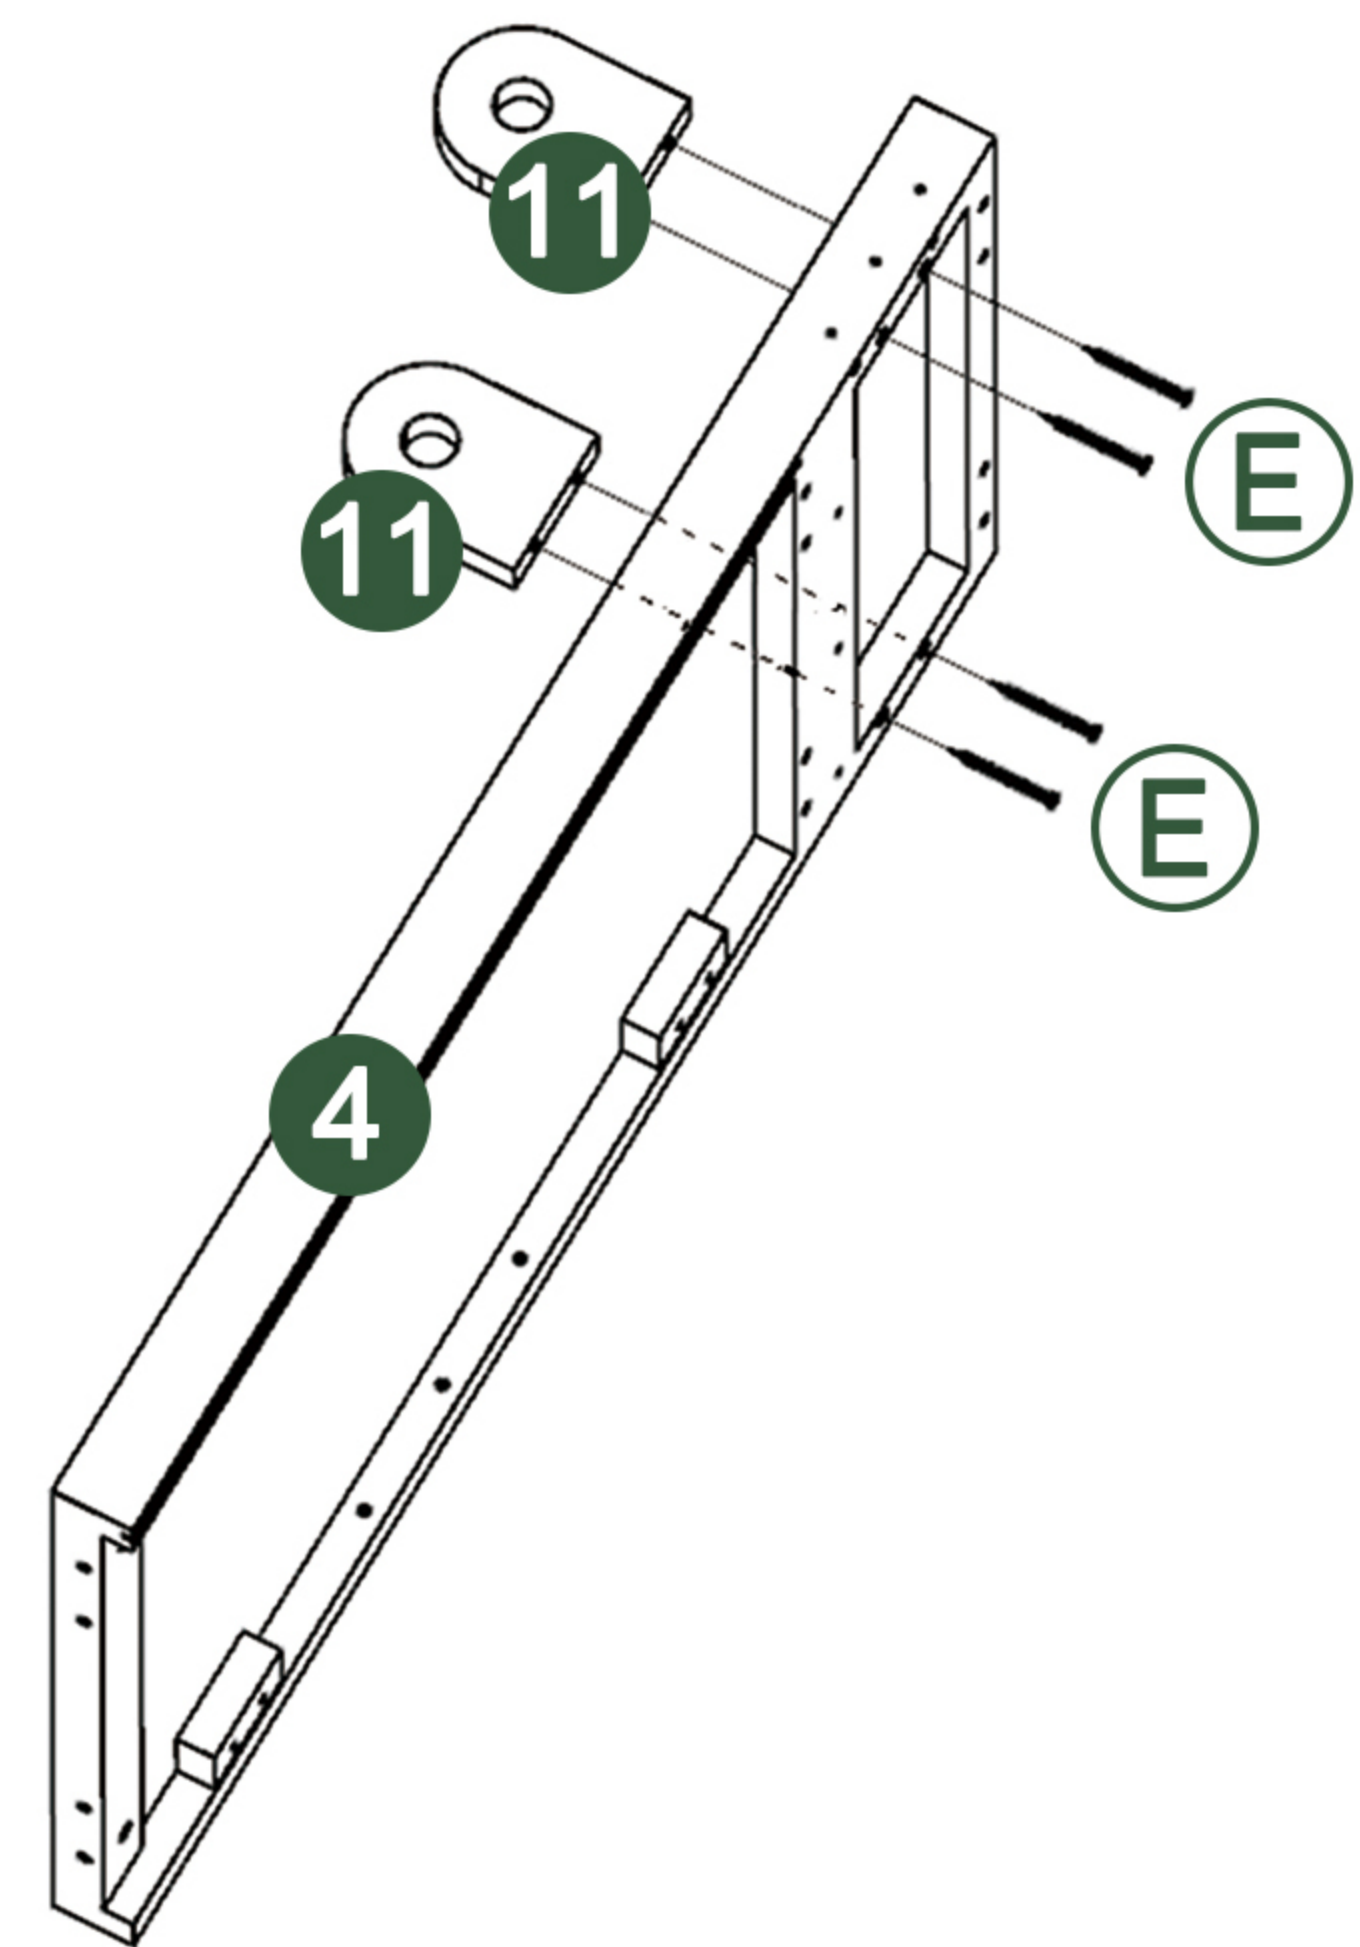


8b.

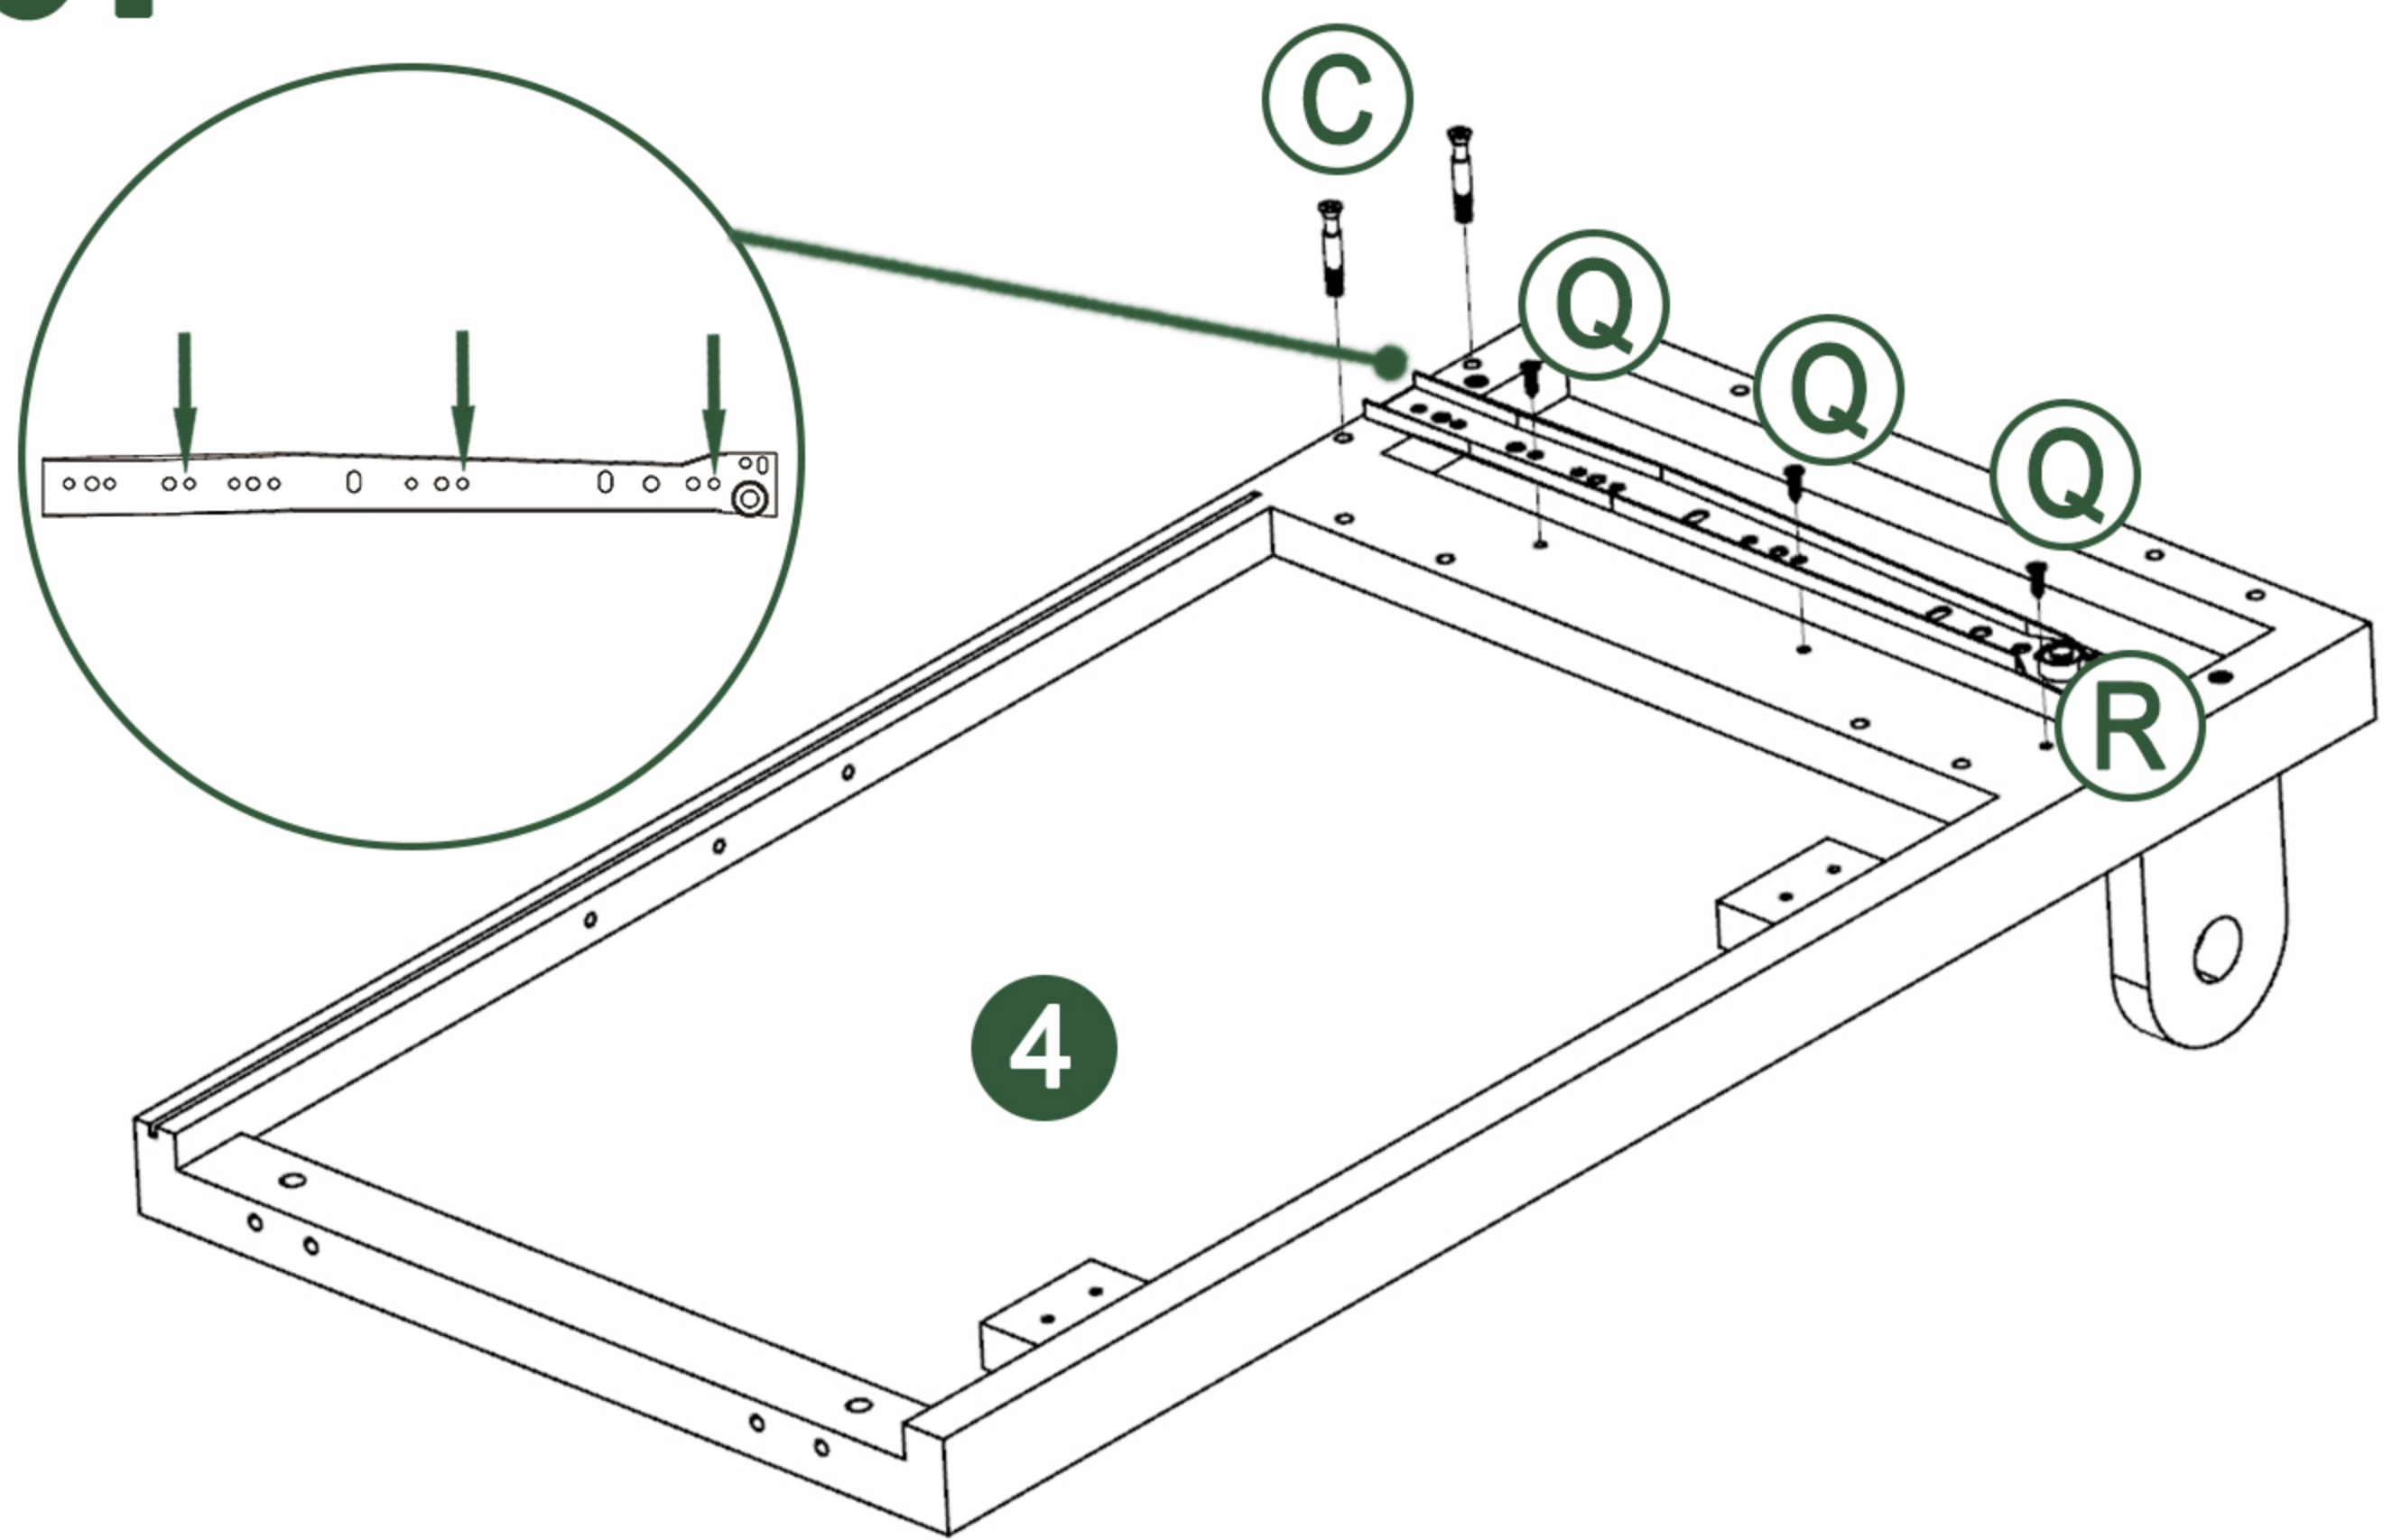


9b.

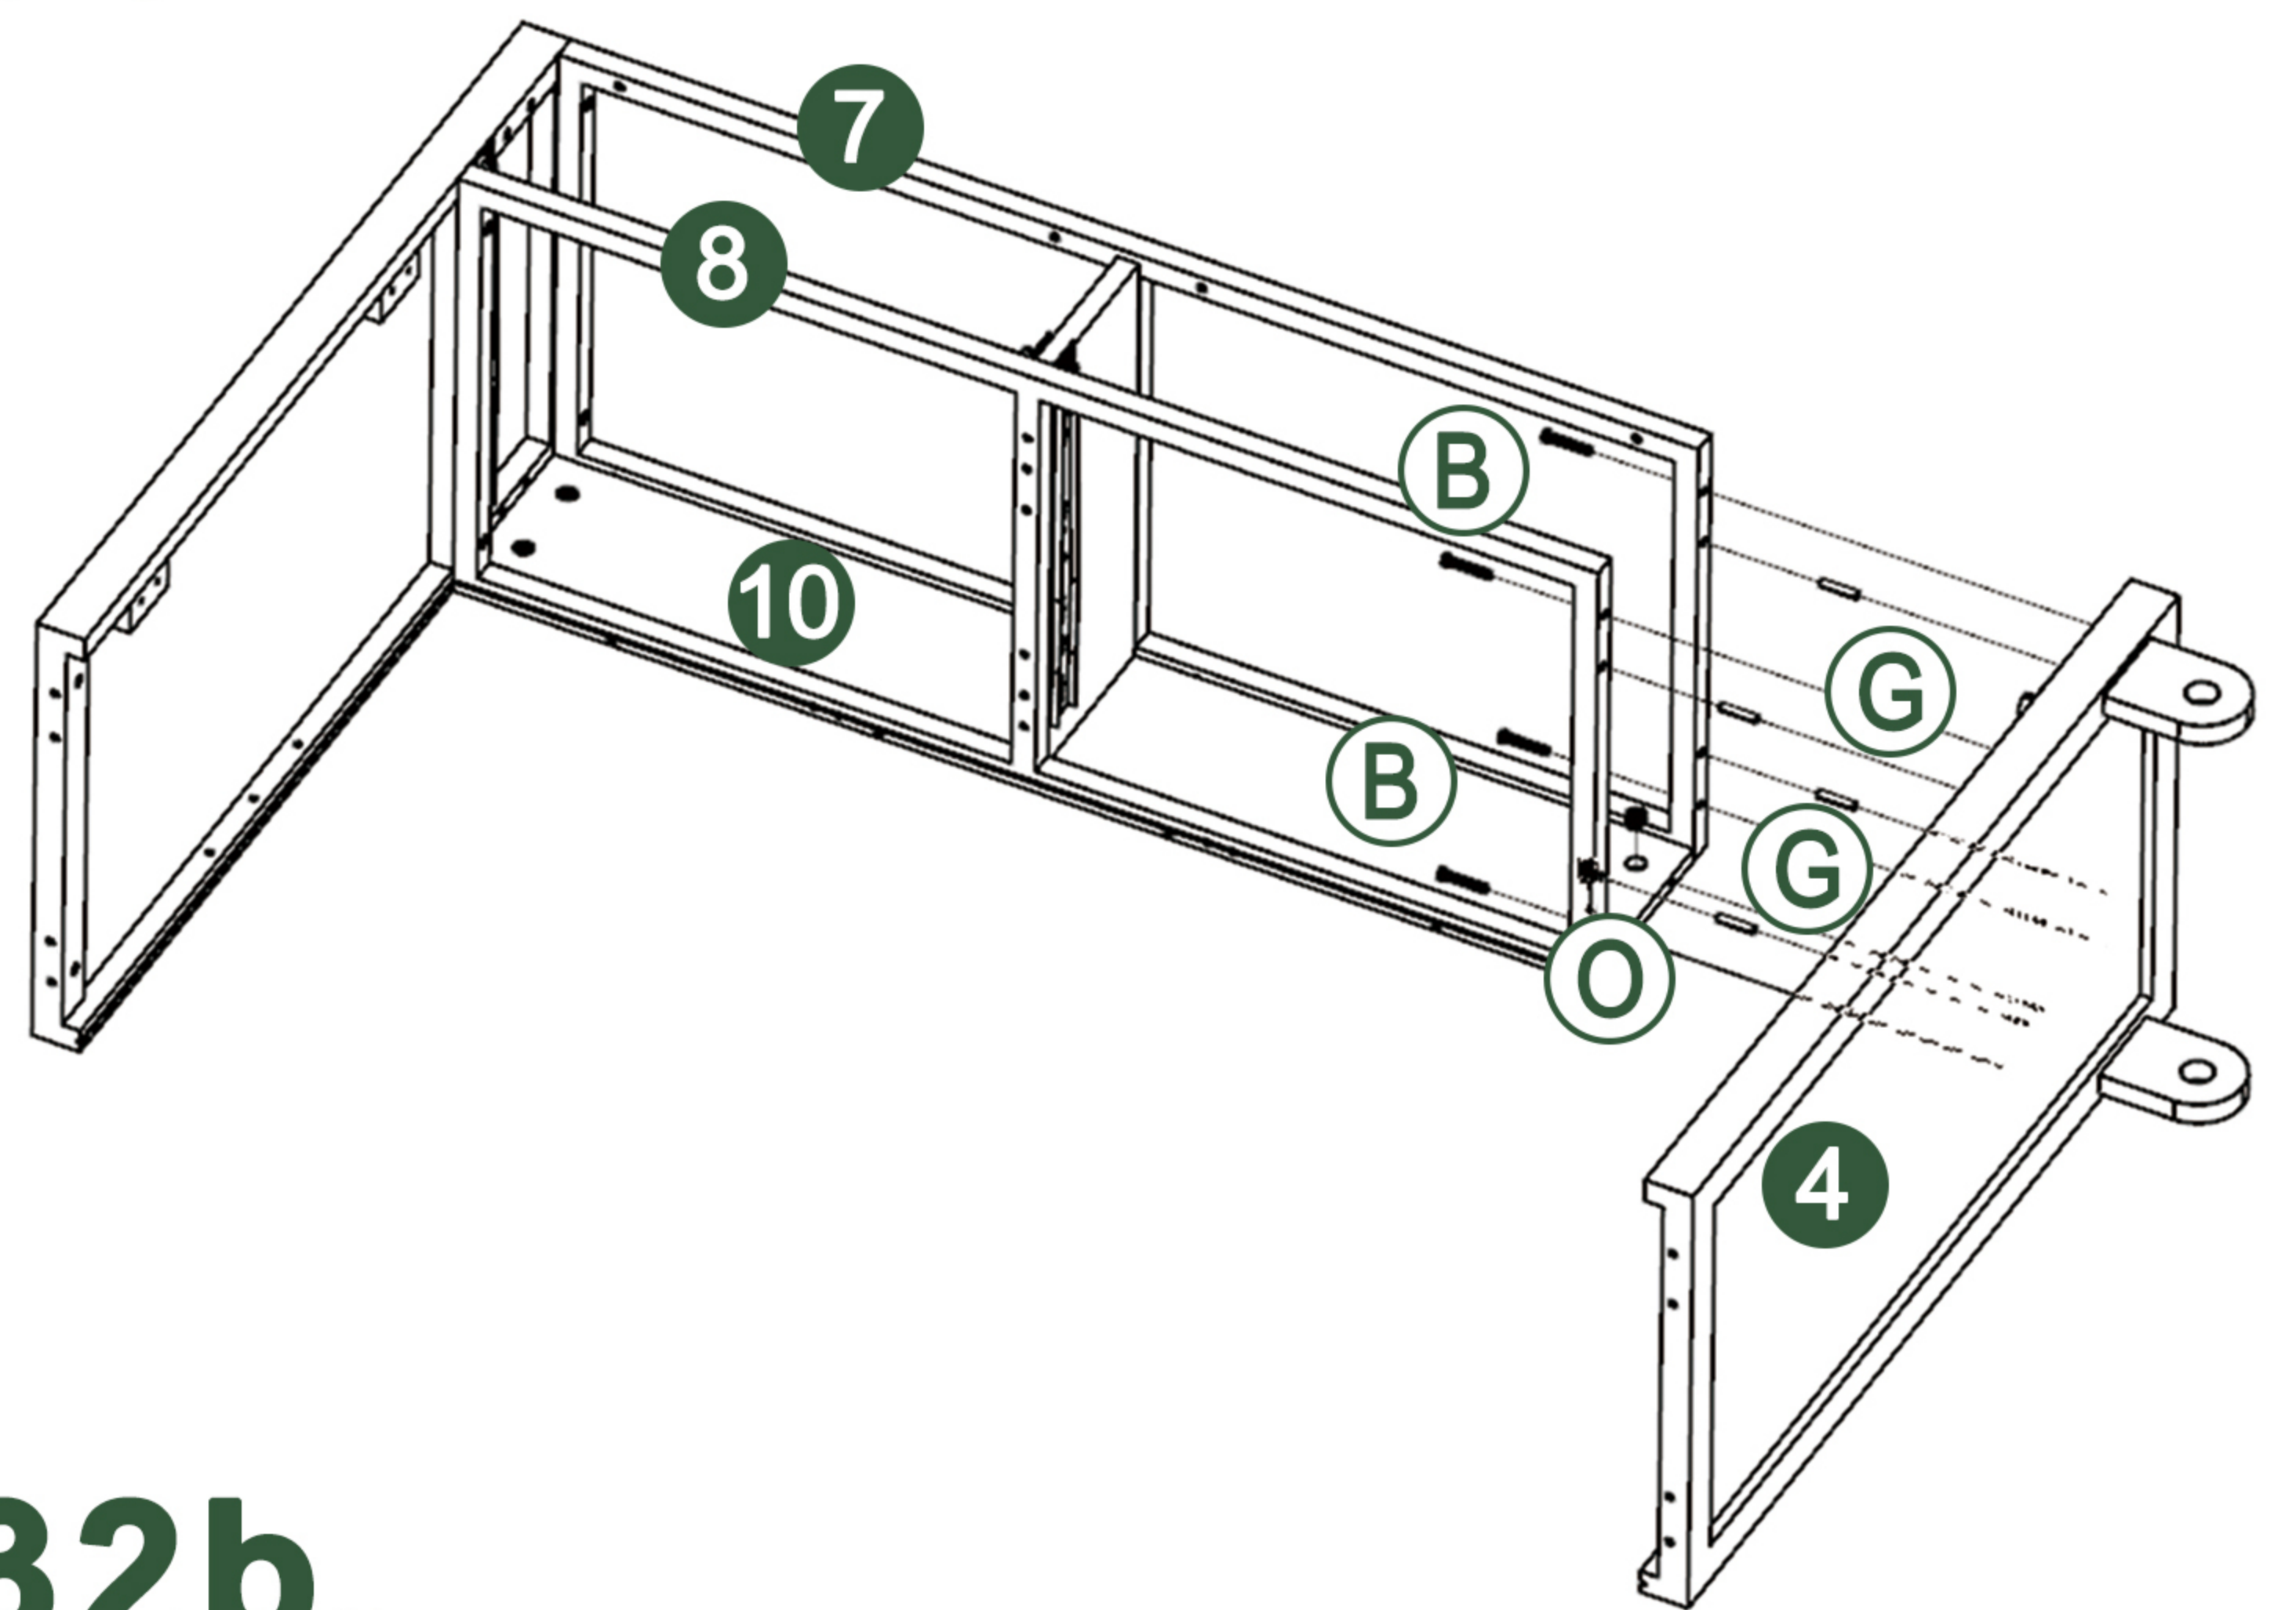

31b.

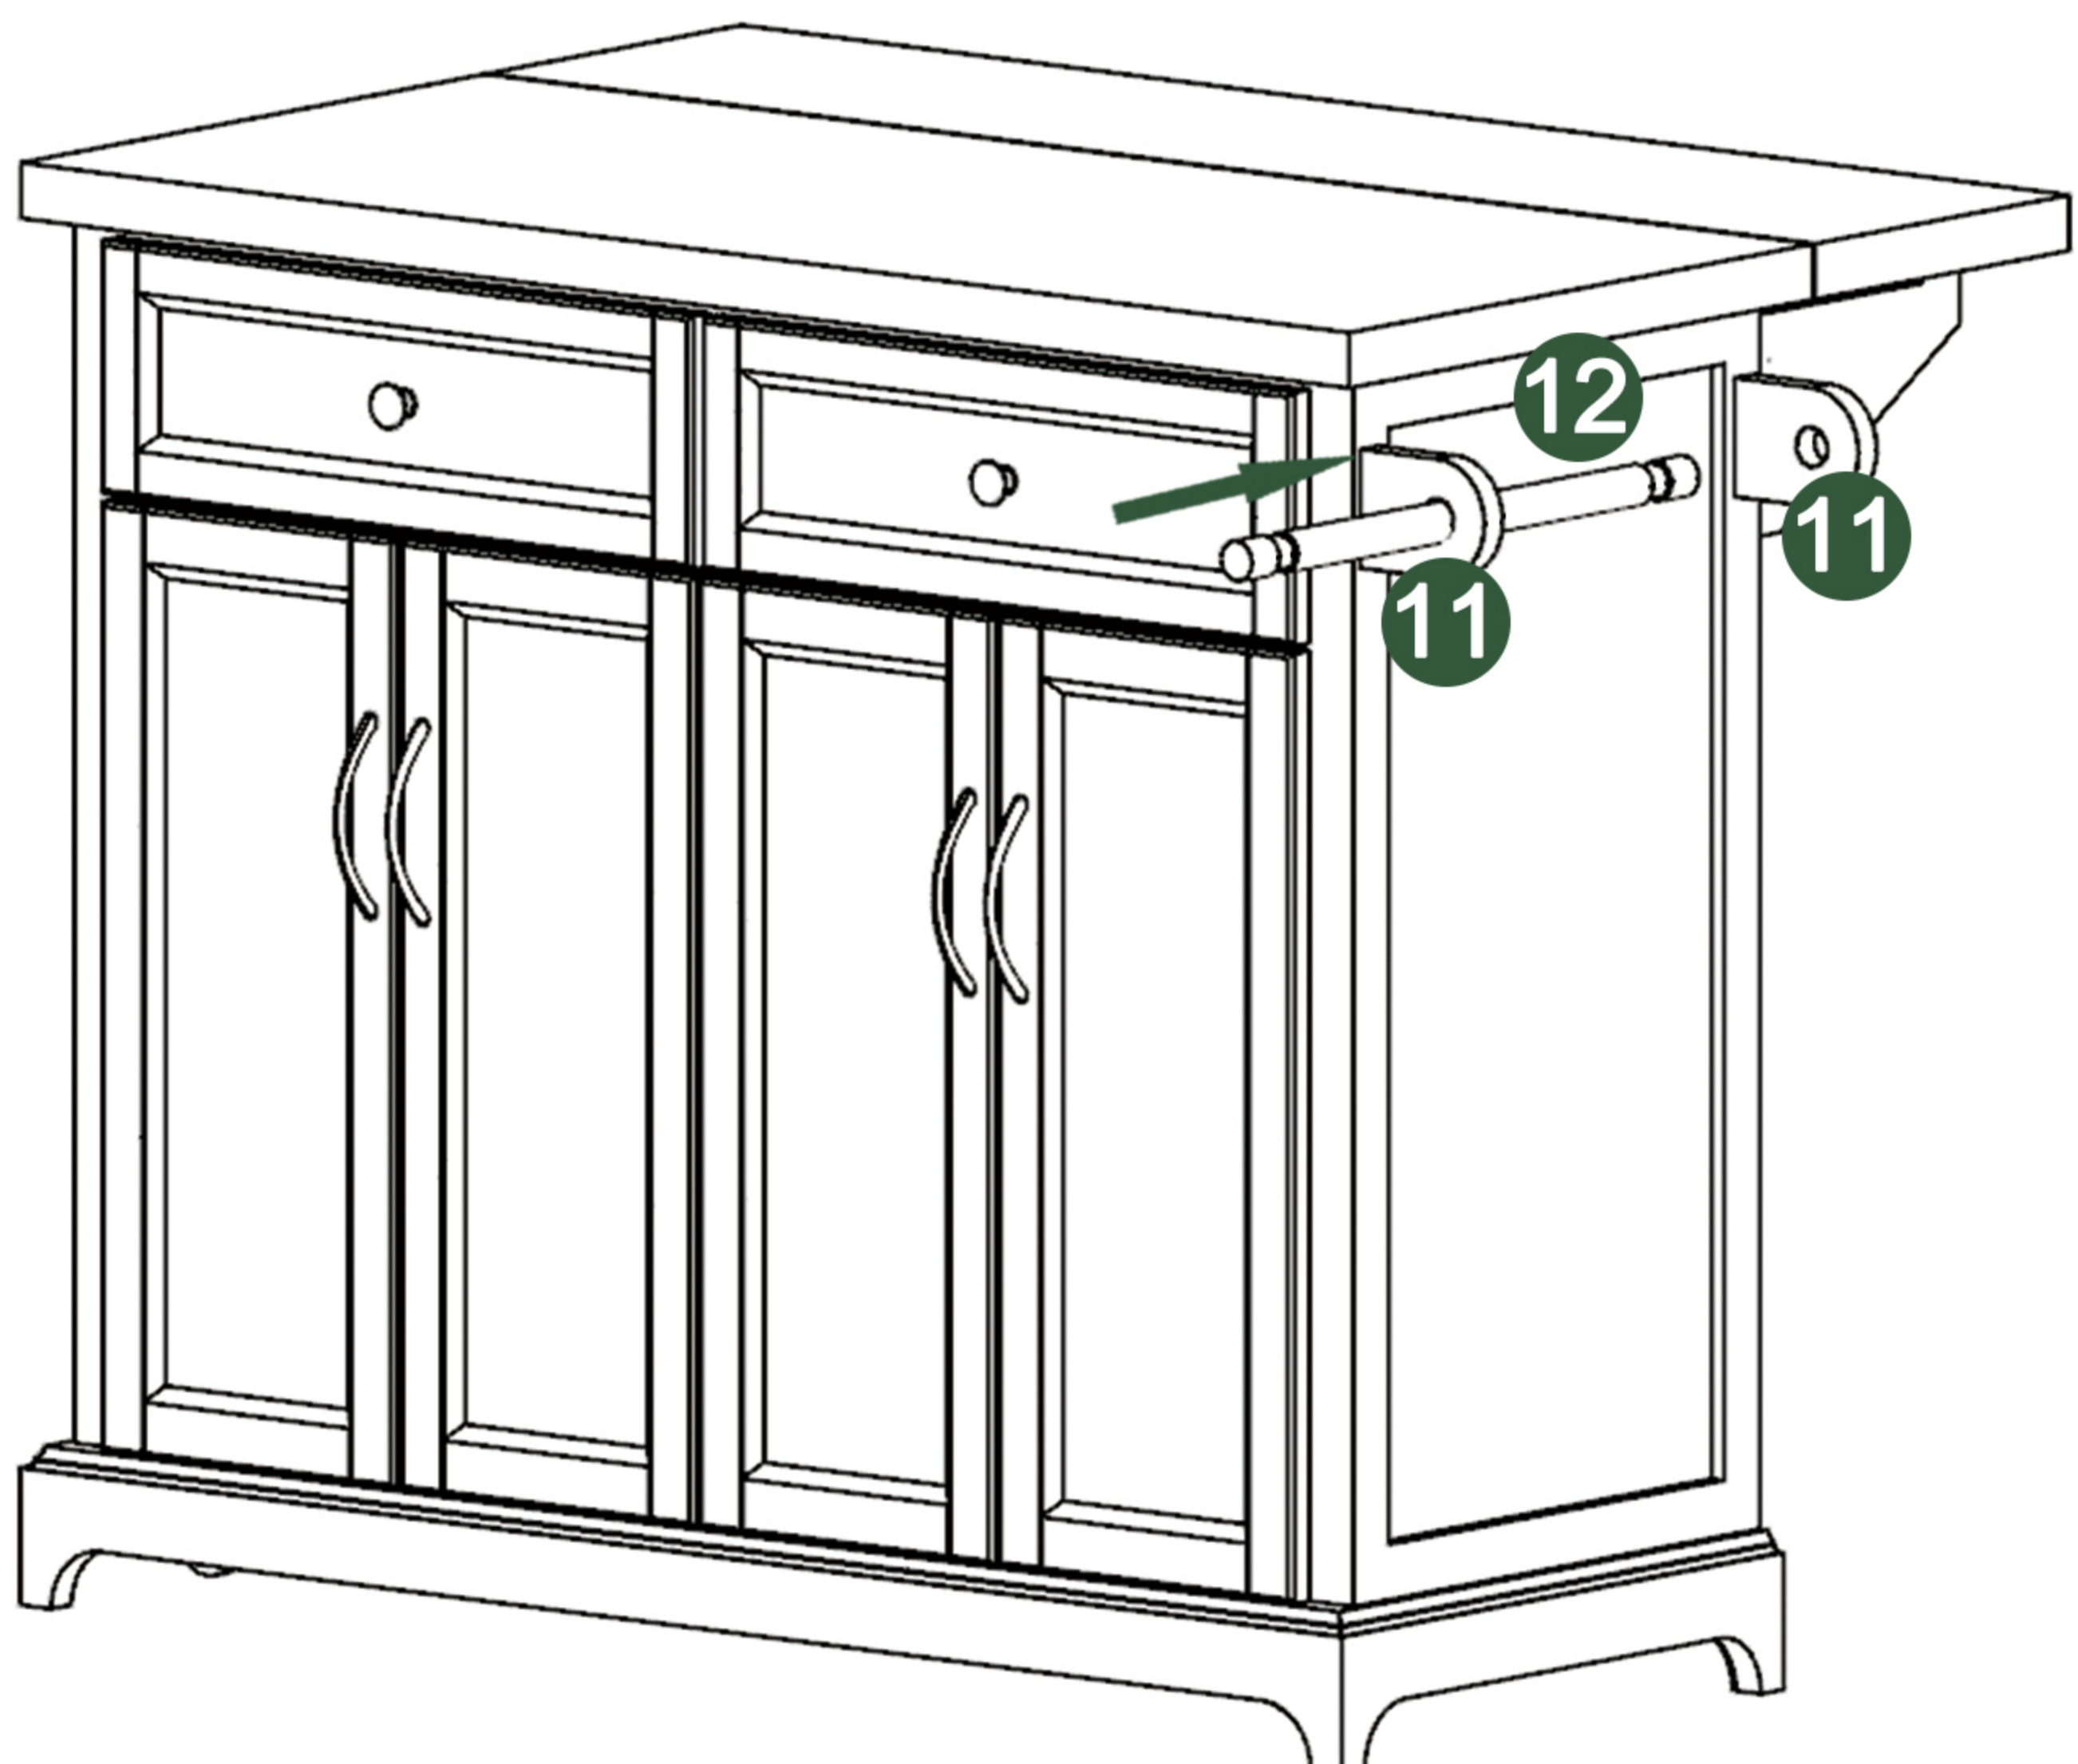

32b.

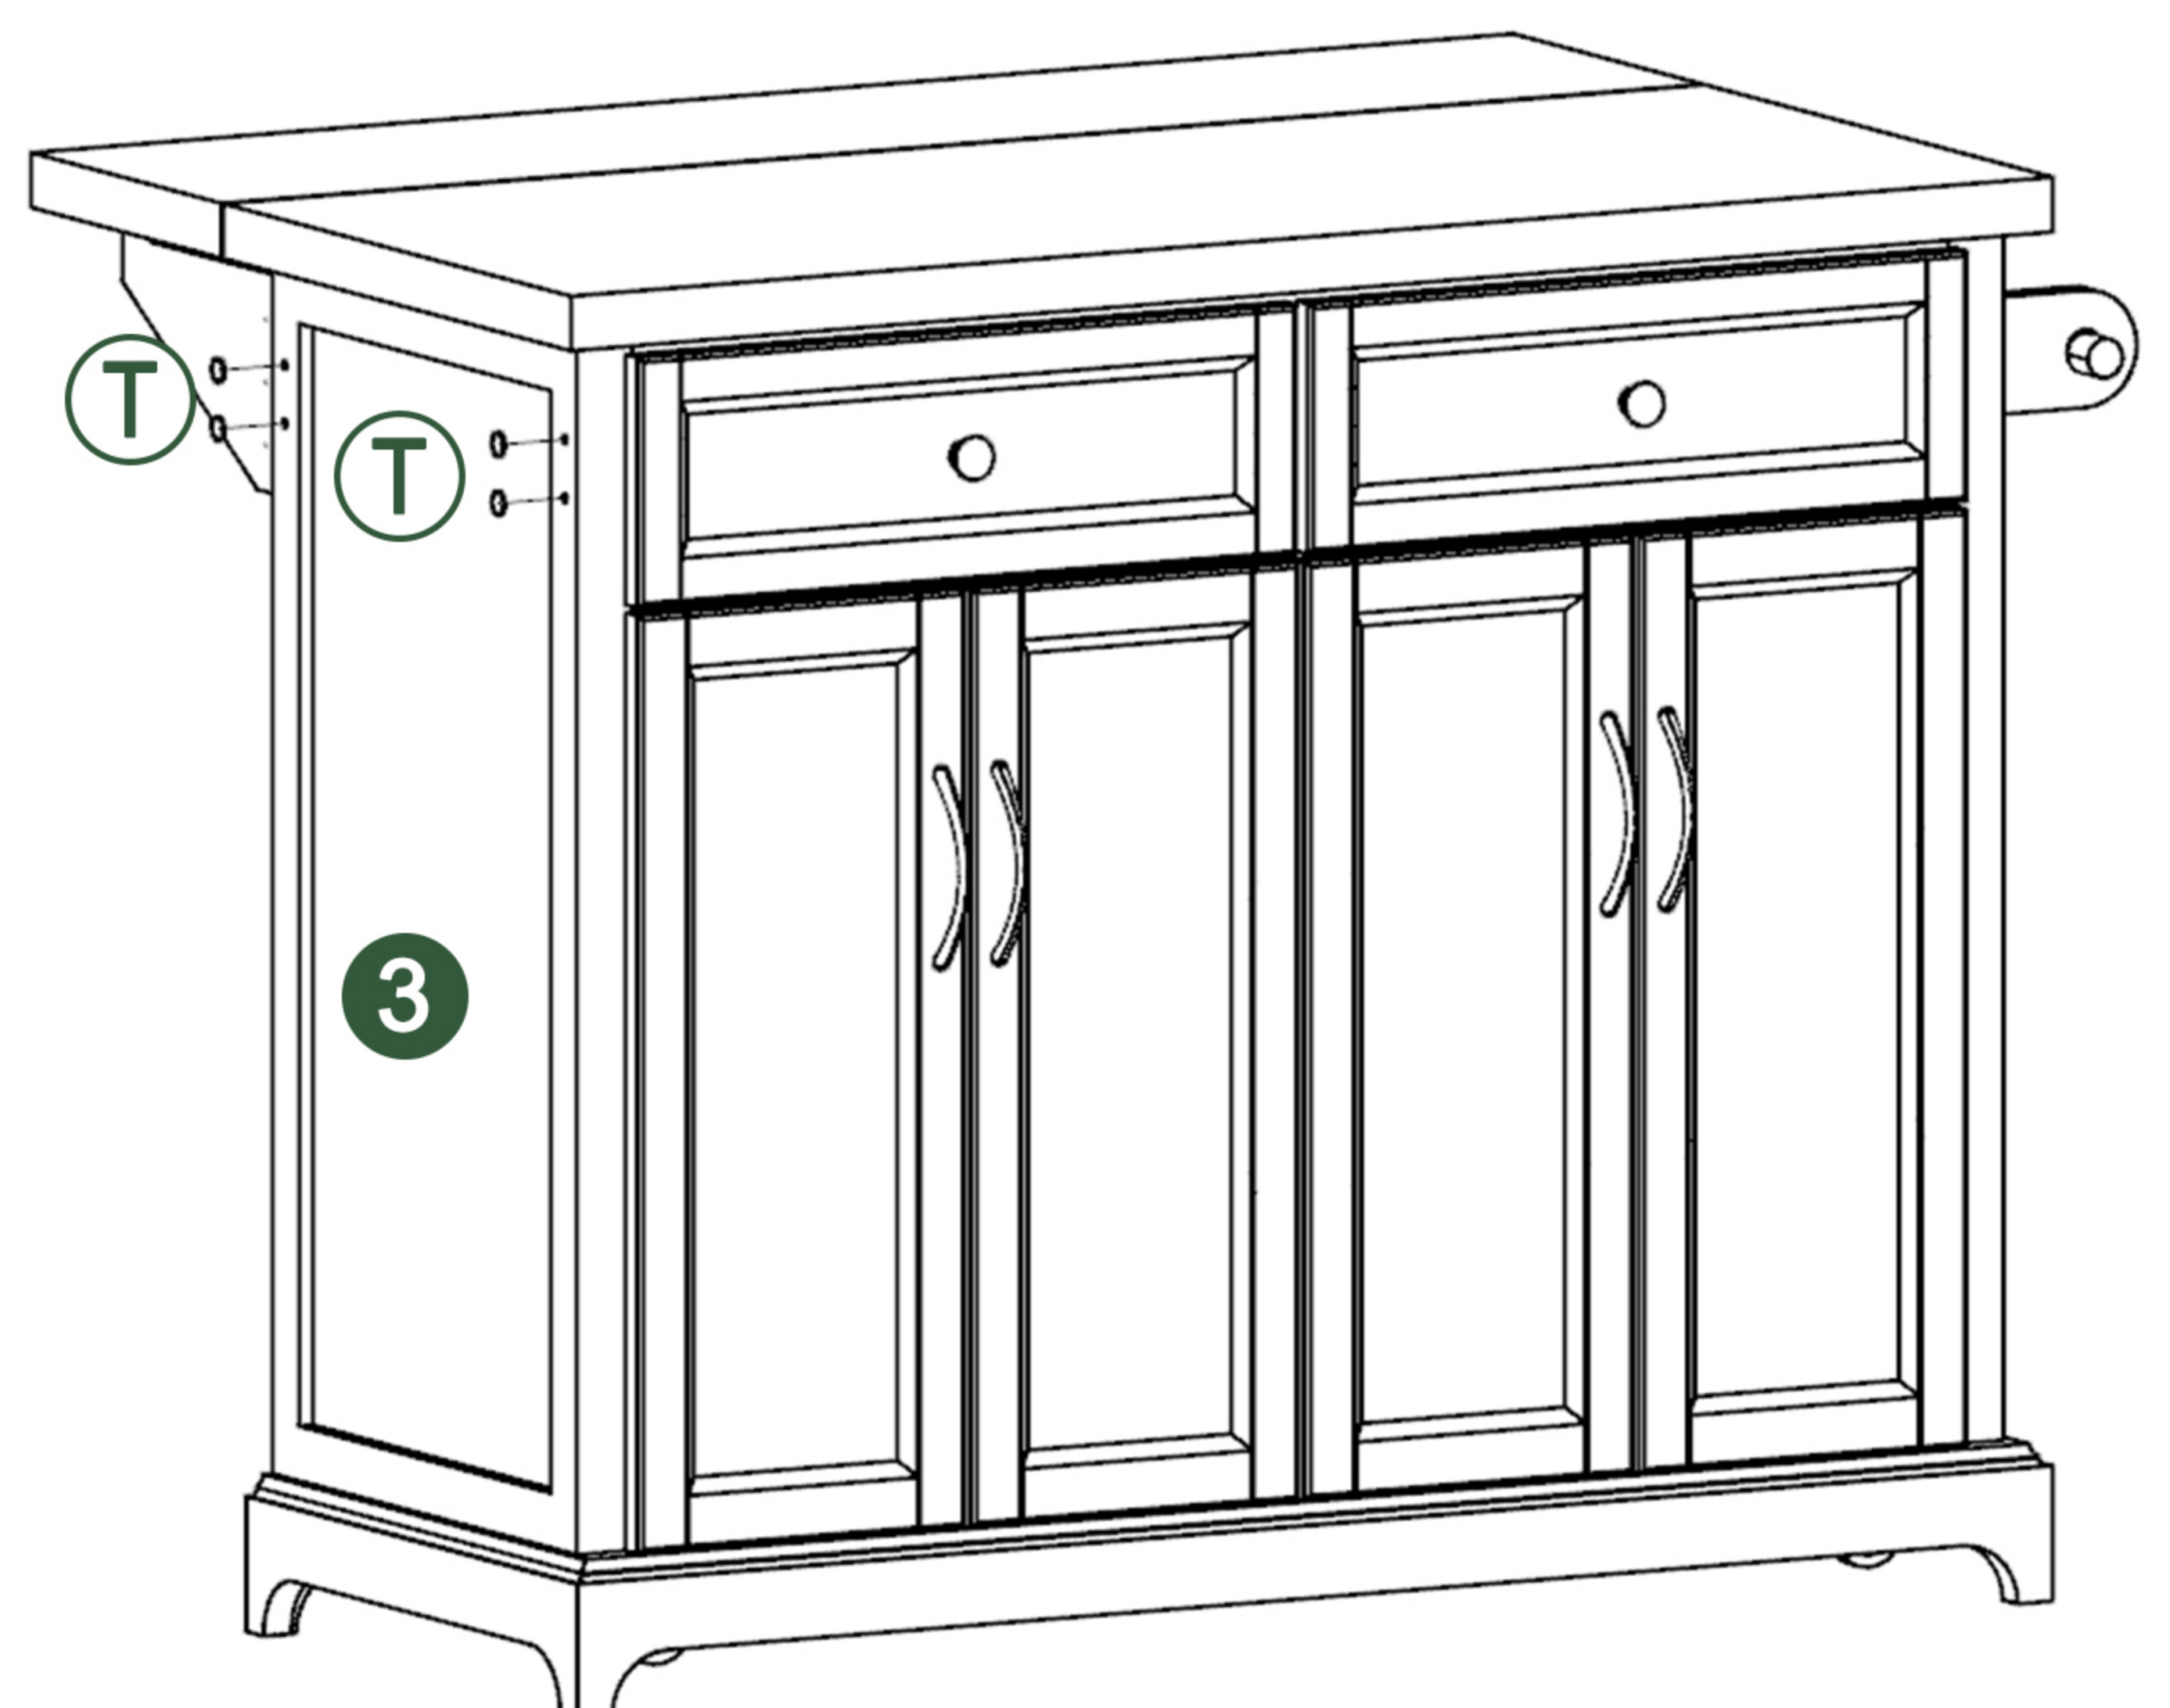



Scan the QR code to  
share your review