


ASSEMBLY INSTRUCTIONS

V-TS25-0955

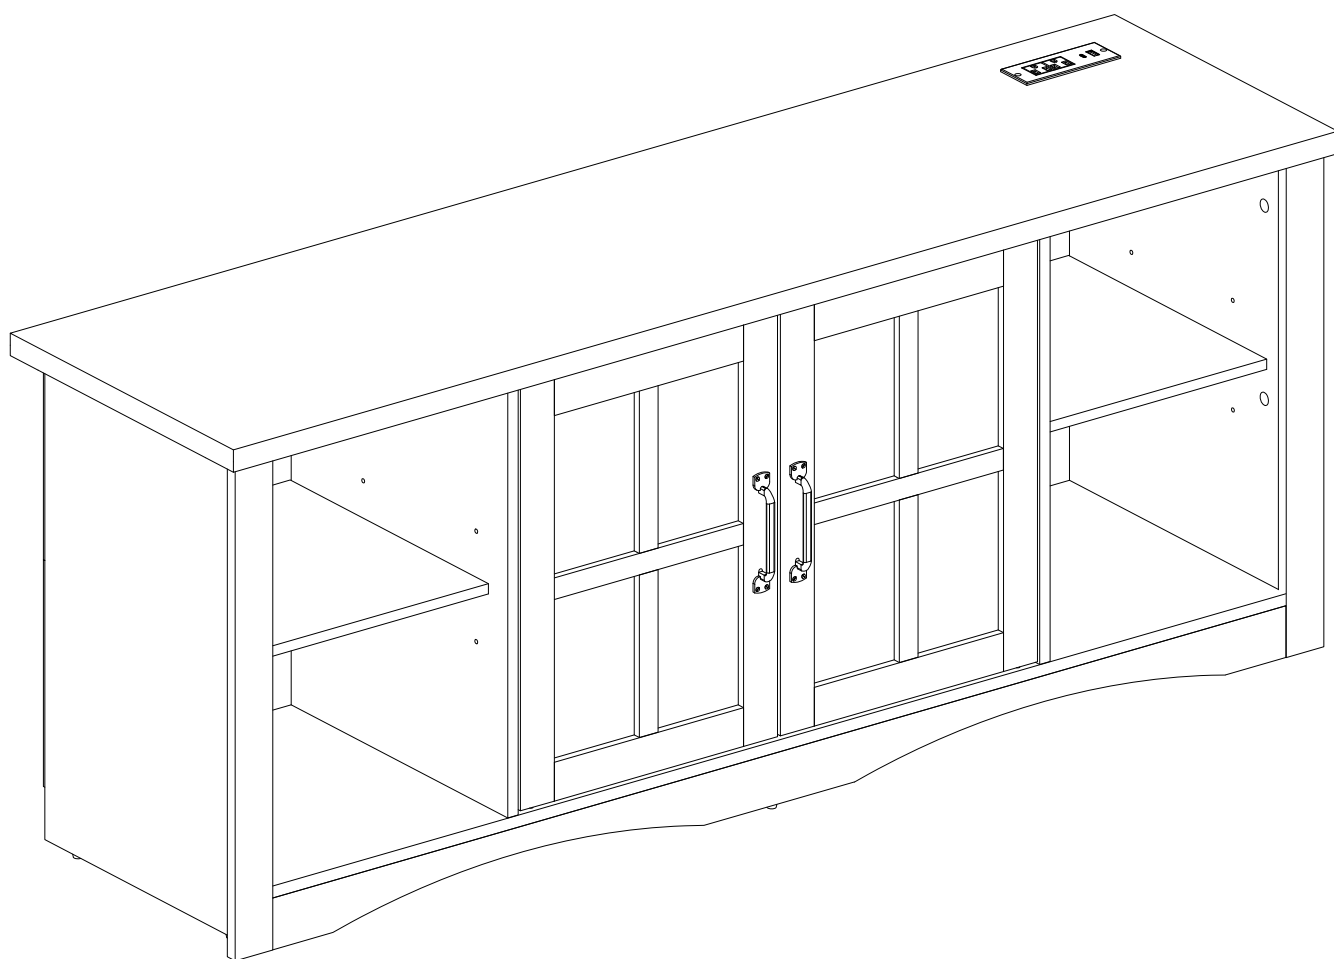


WARNING !



MAXIMUM LOAD

220 lb/100kg

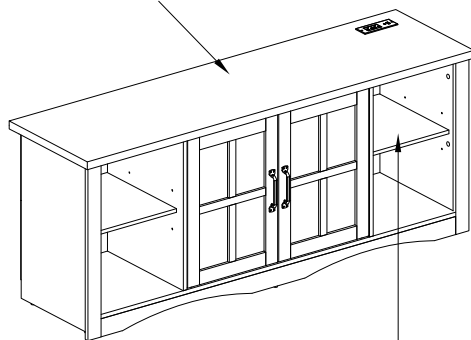


MAXIMUM LOAD

20 lb/9.1kg




Estimated Time for Assembly

45 mins

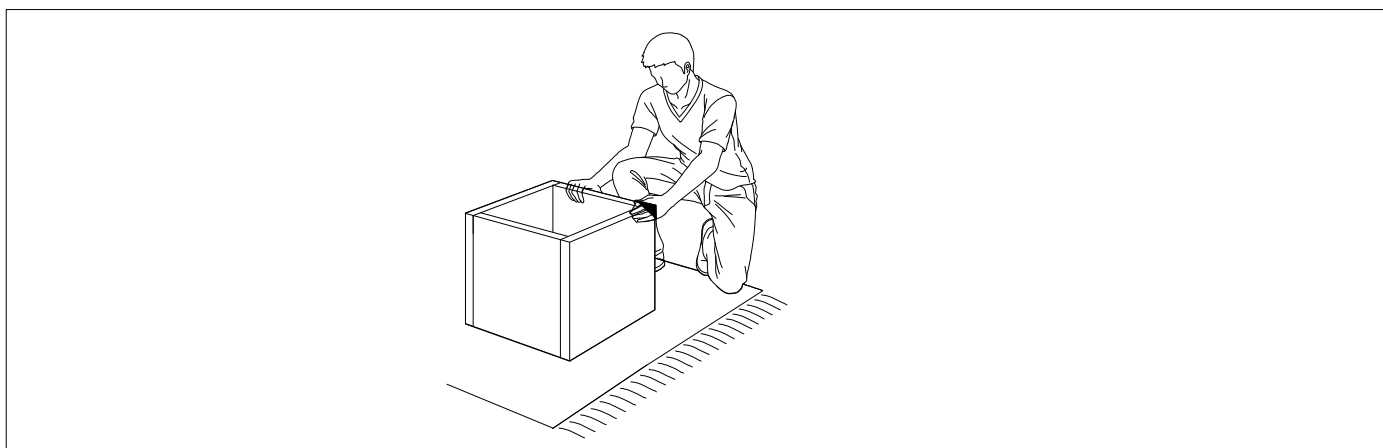


Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage

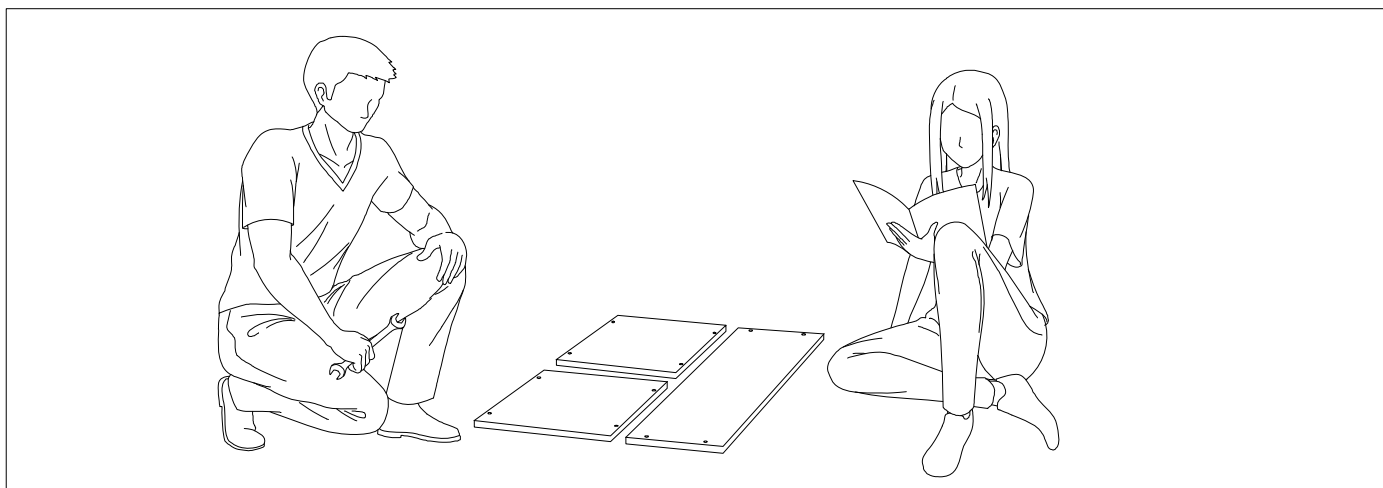


This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.


PACKAGE CONTENT

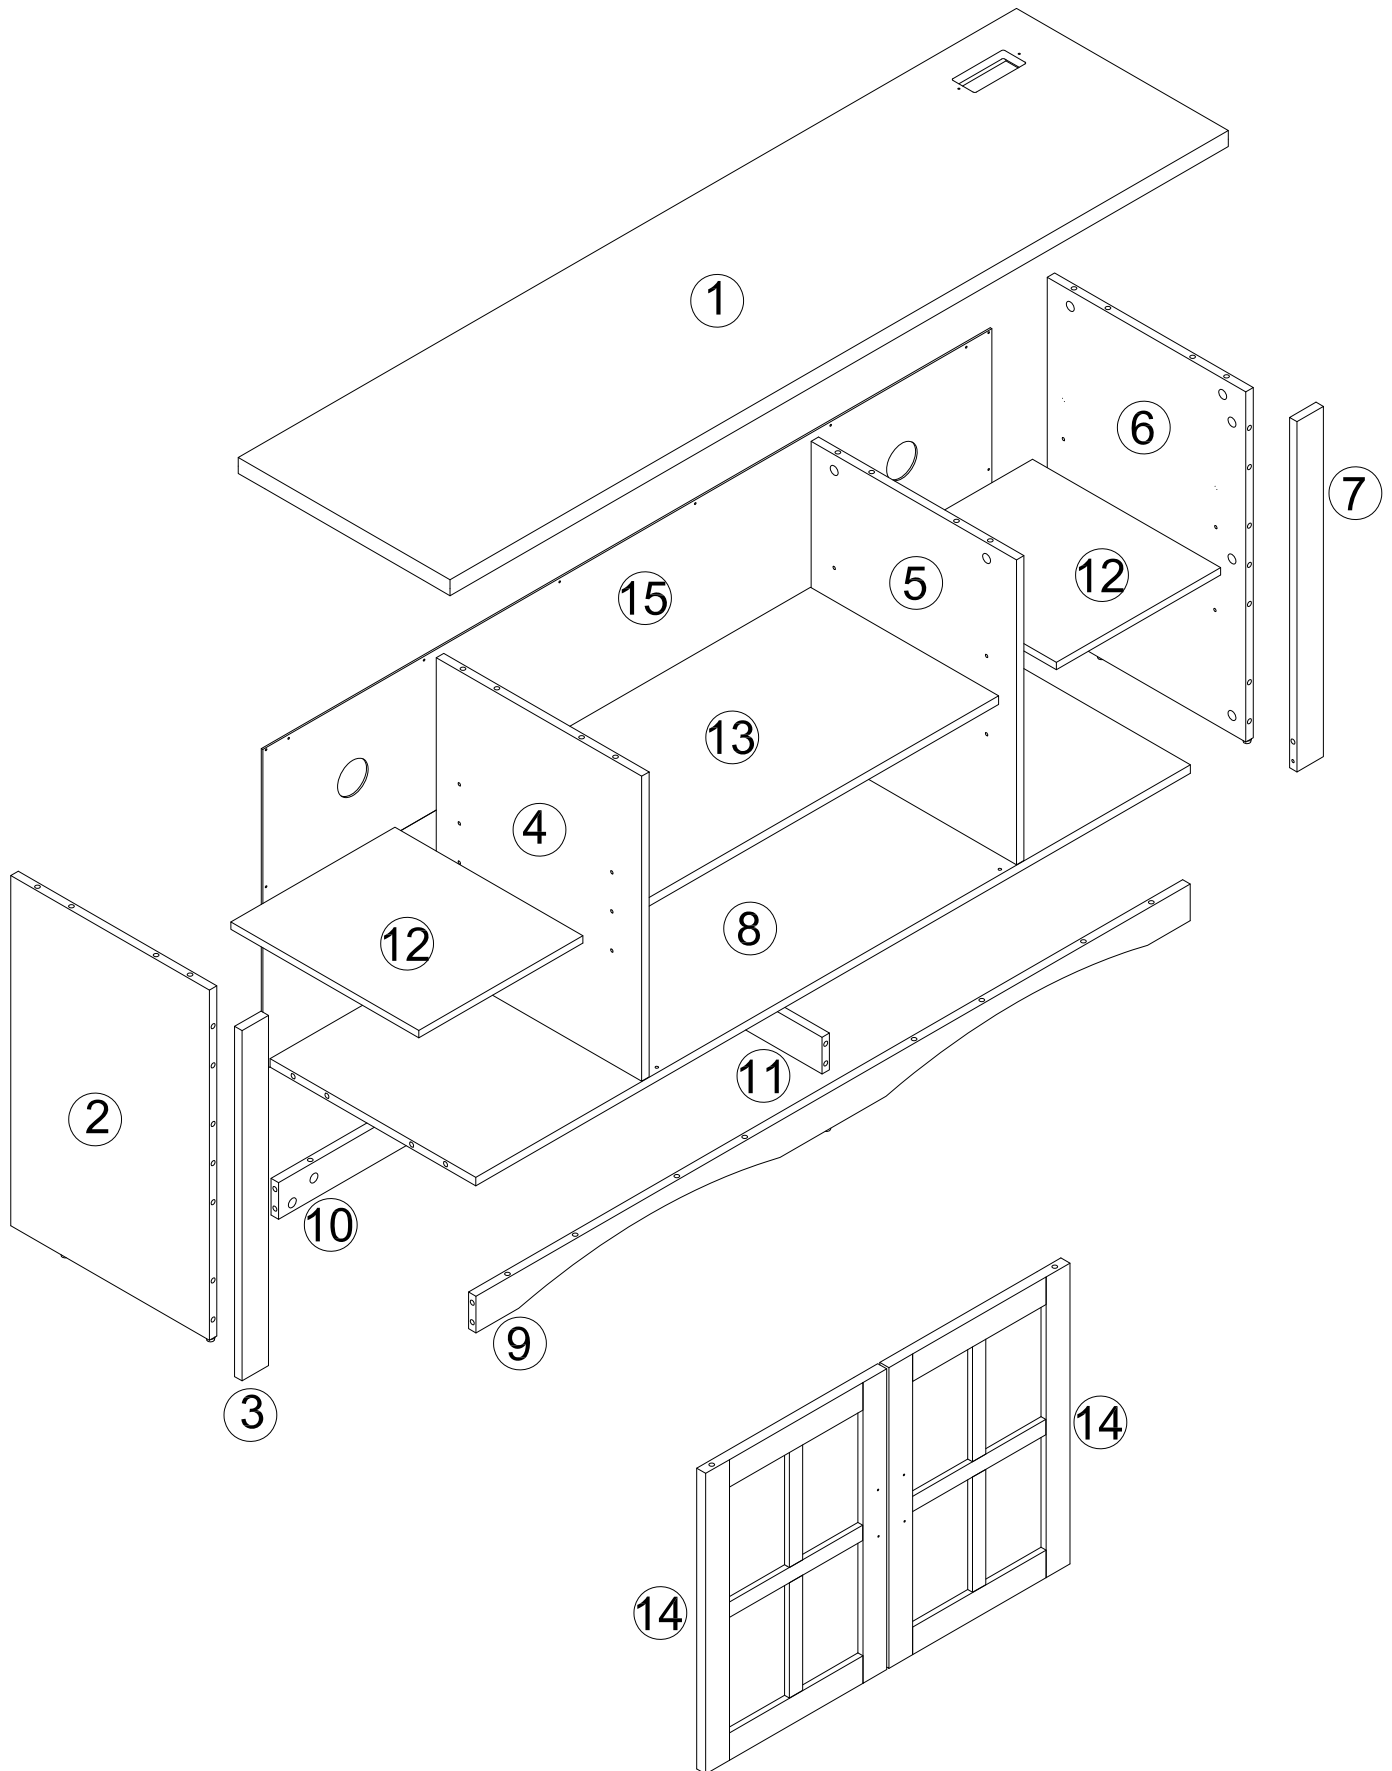


Not actual size

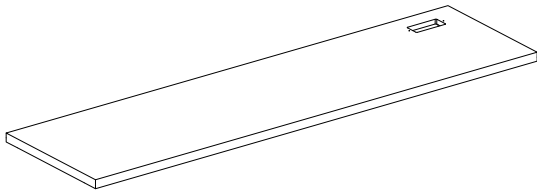


① X1

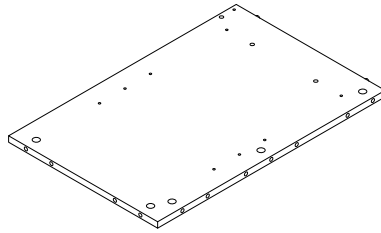


② X1

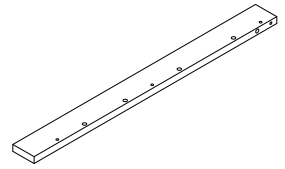


③ X1

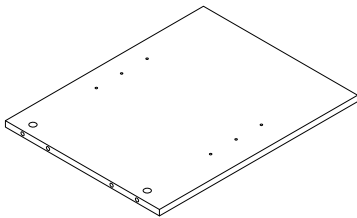


④ X1

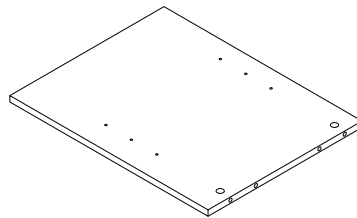


⑤ X1

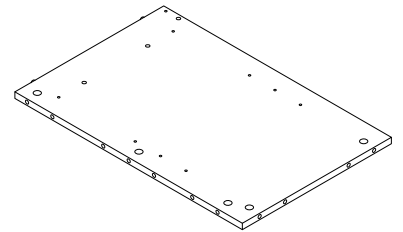


⑥ X1

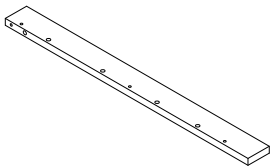


⑦ X1

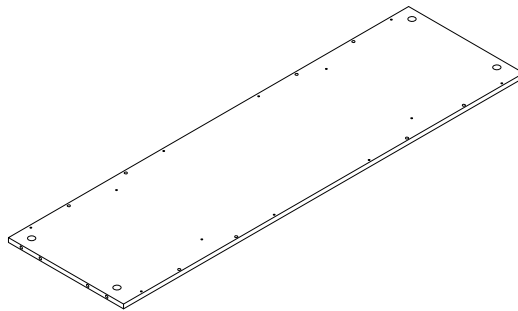


⑧ X1

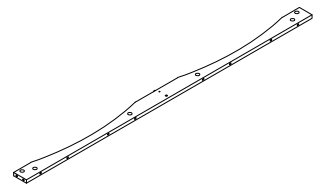


⑨ X1

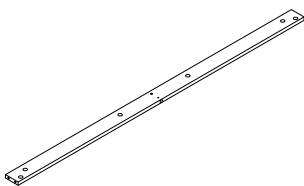

⑩ X1




⑪ X1

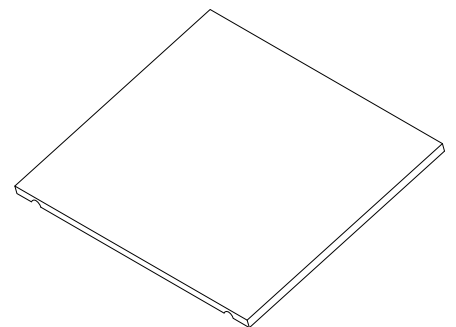


⑫ X2


Not actual size

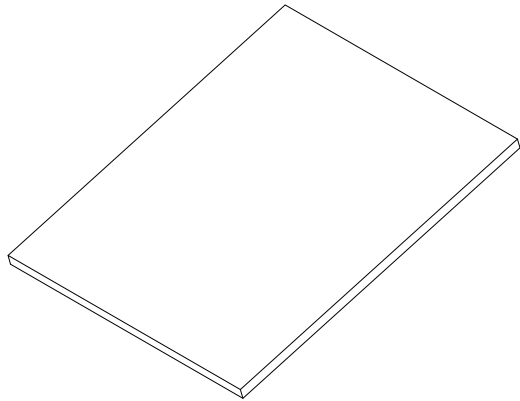

⑬ X1











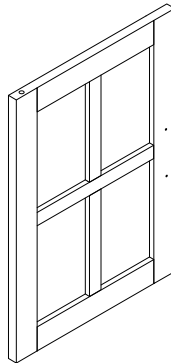


⑭ X2

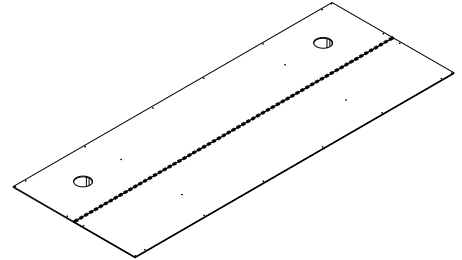


⑮ X1

HARDWARE PART LIST

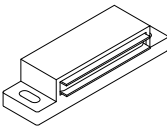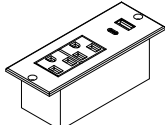
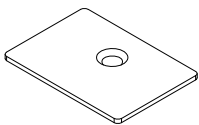


A  Ø6*33	X32+1	B  Ø15*9.5	X32+1	C  Ø8*30	X38+1	D  Ø4*38	X4
E  75*15*12	X1	F  Ø5*15	X12+1	G  Ø3*12	X4	H  Ø3.5*15	X24+1
I  	X2	J  M4*22	X4	K  Ø3*15	X2	L  	X1
M  X1	X1	N  30*22	X2	O  	X4	P  70*30*5	X1

Cam Lock Fastening System








Insert the cam bolt into the hole first, then insert the cam lock and lock it.

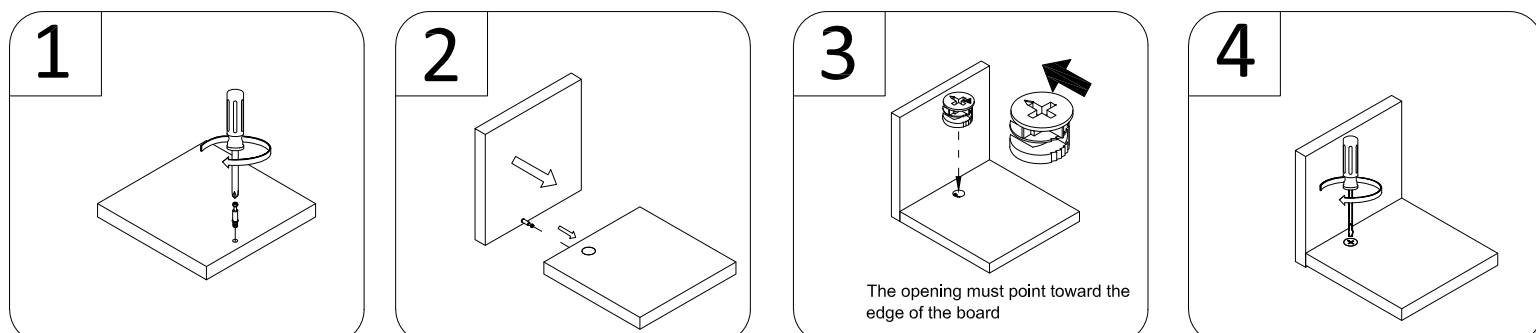





STEP 1

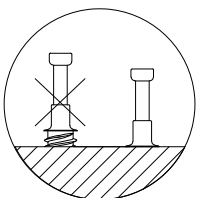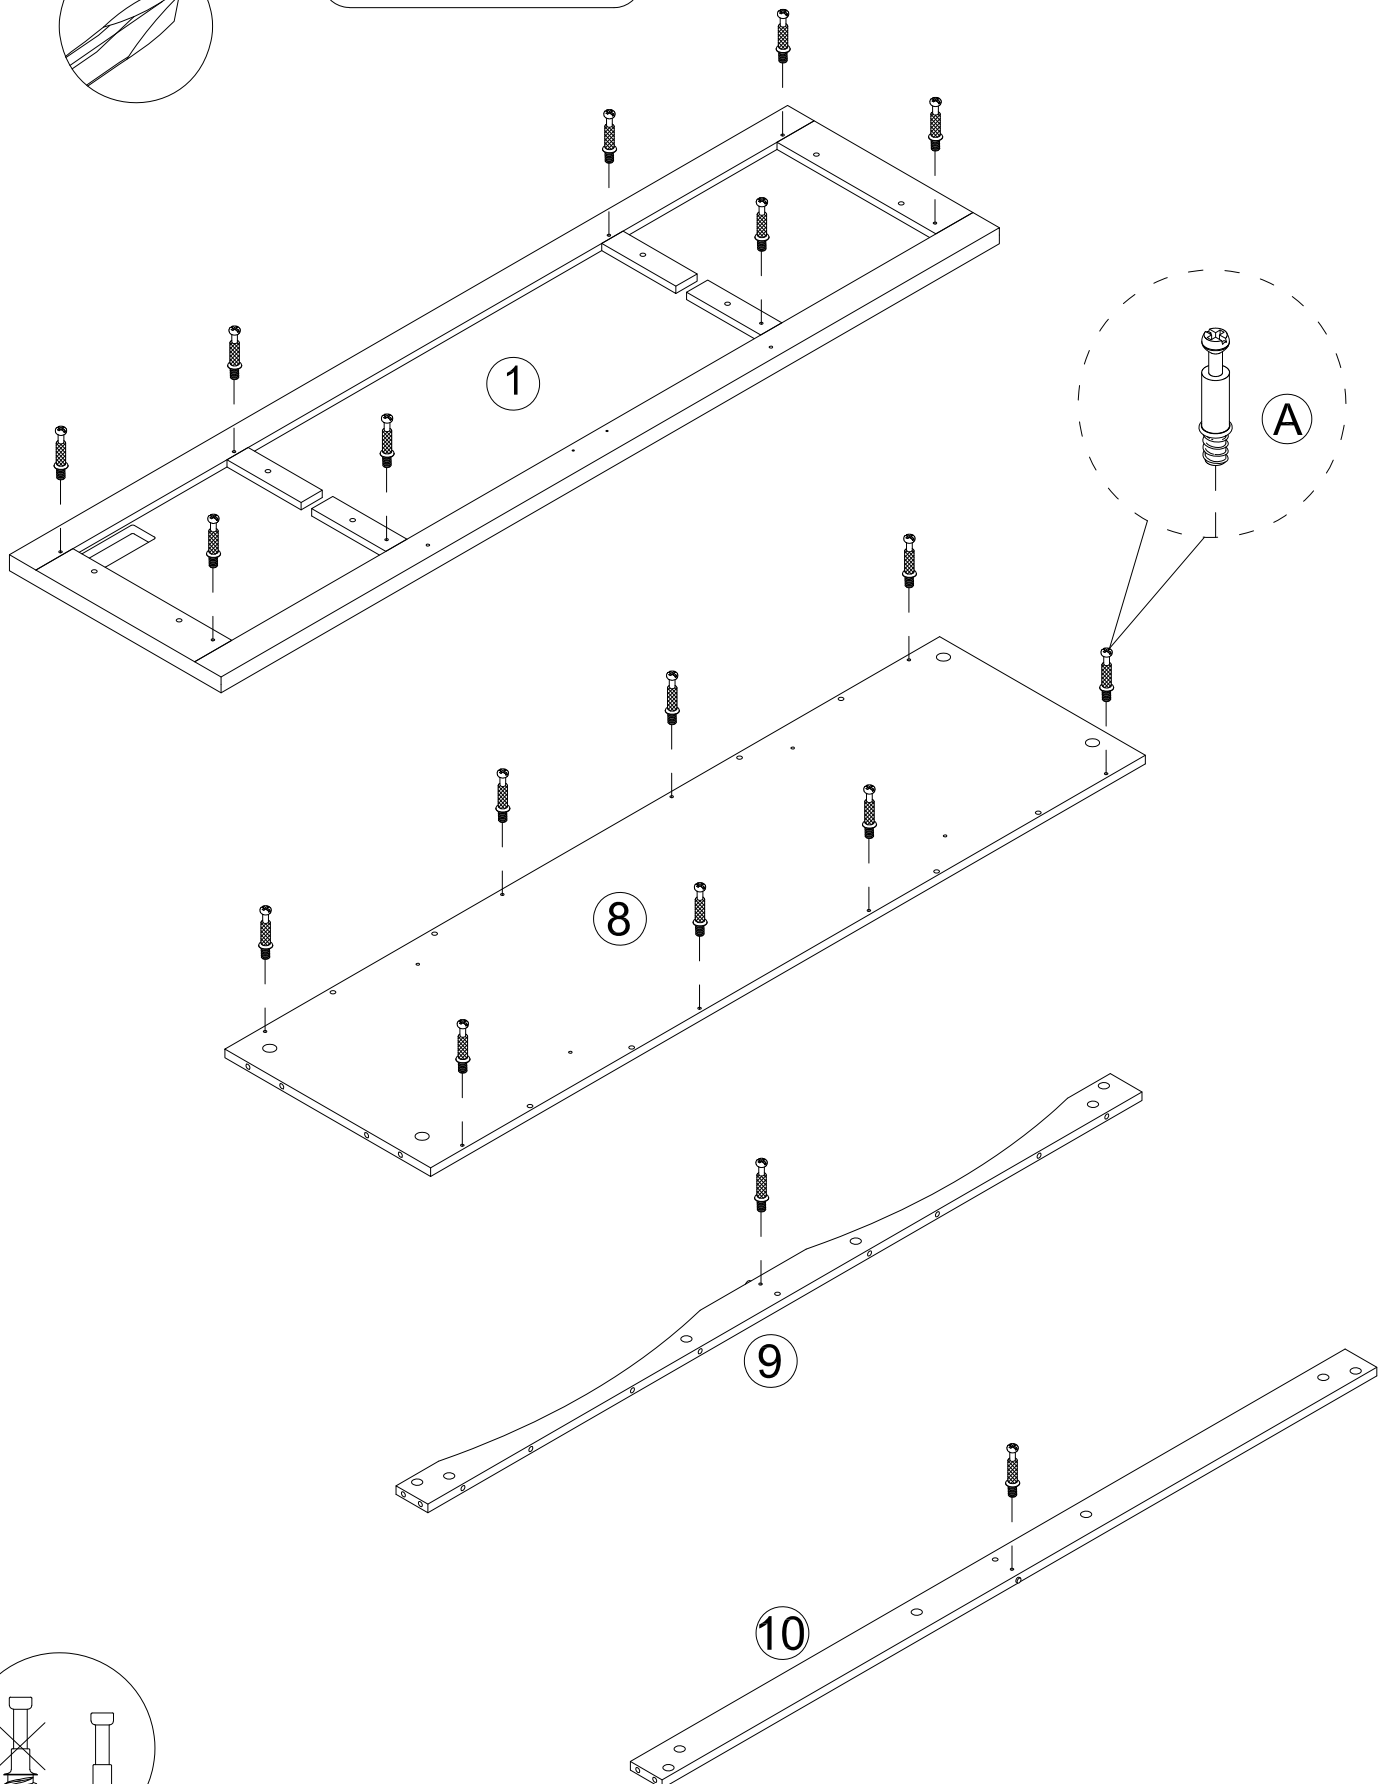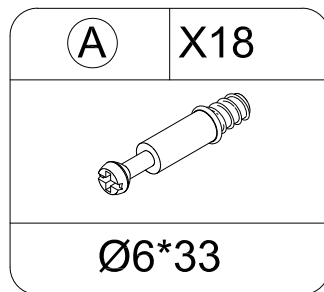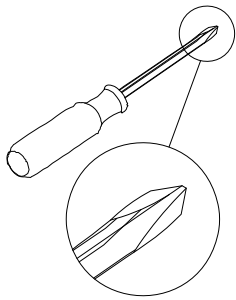


STEP 2

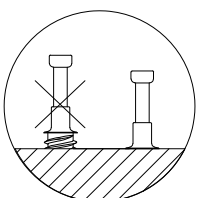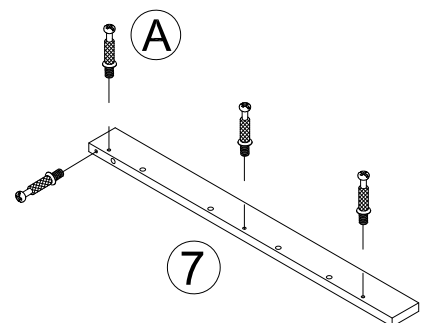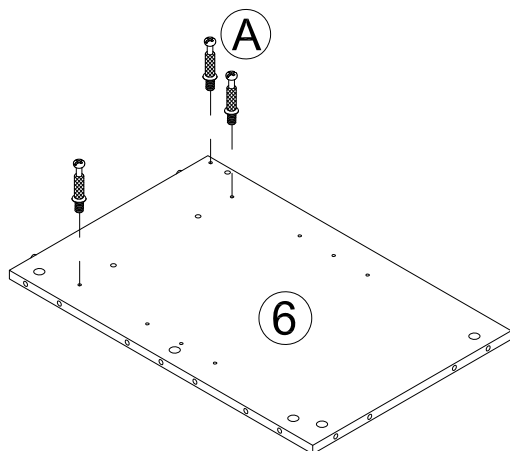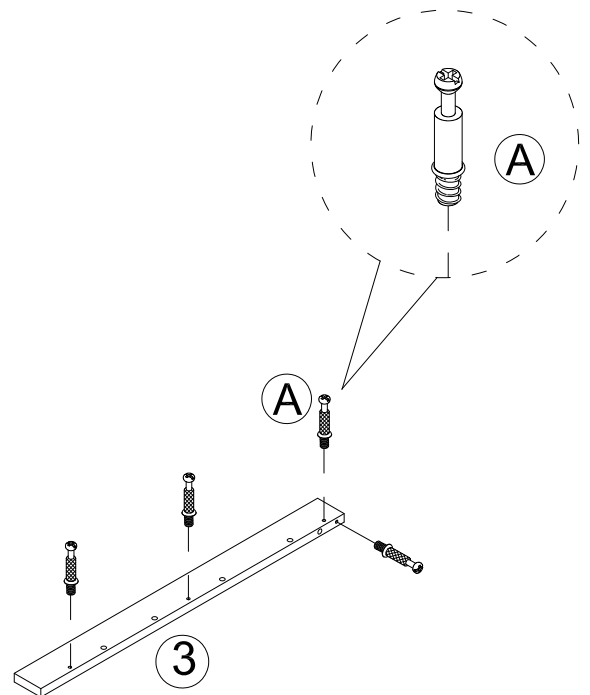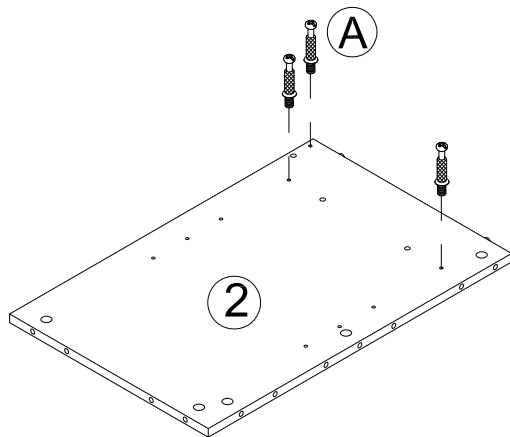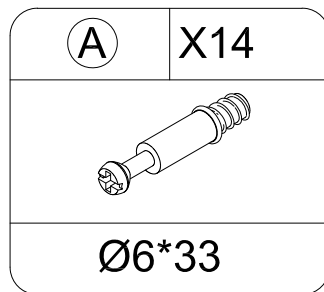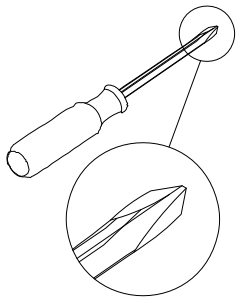





STEP 3

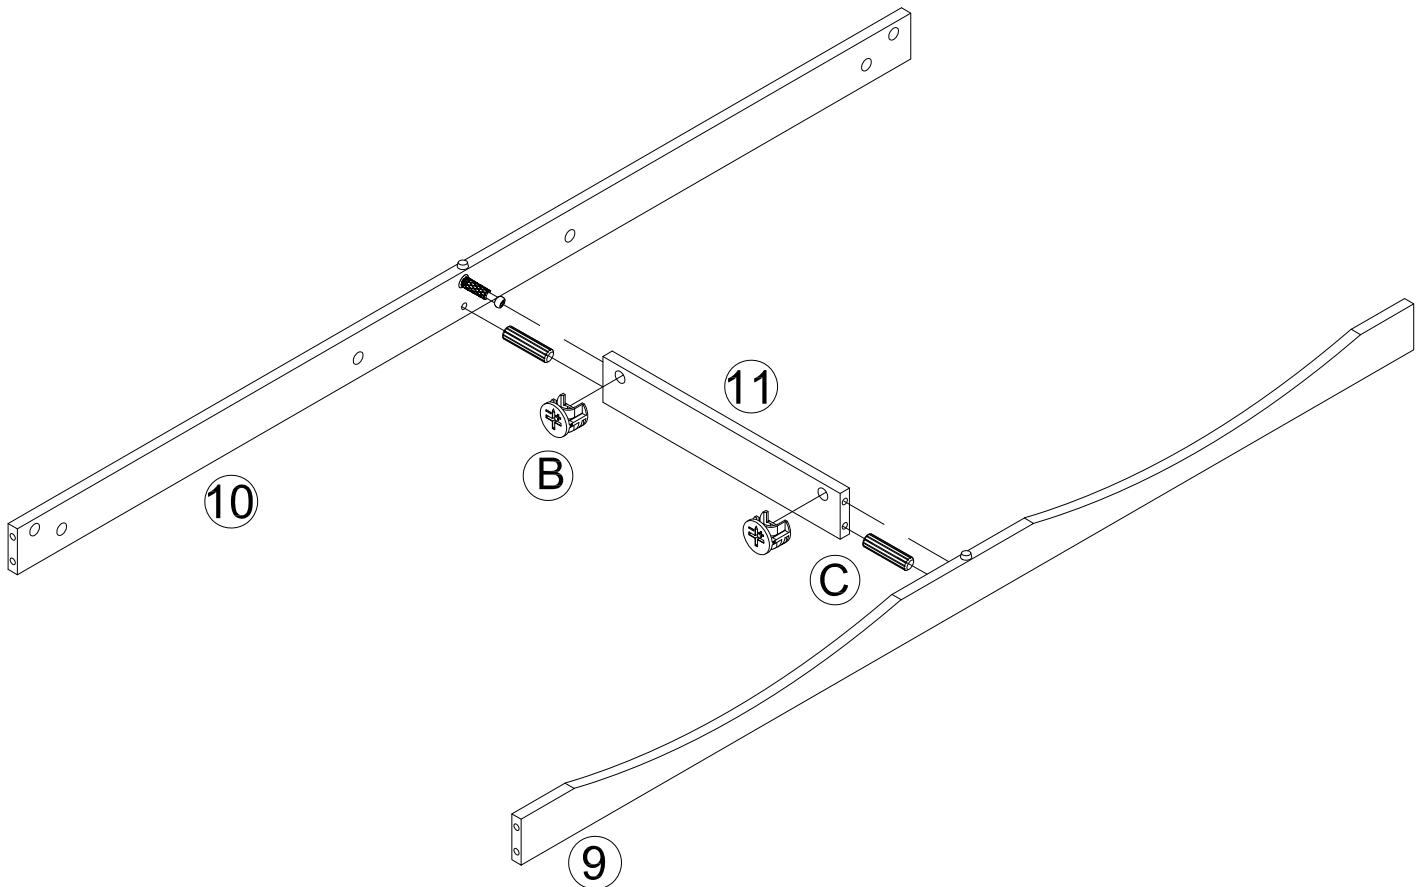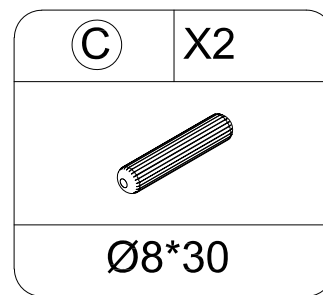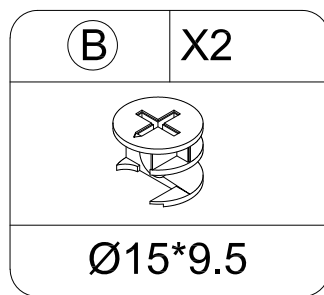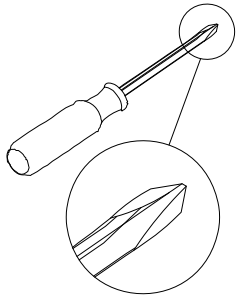


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

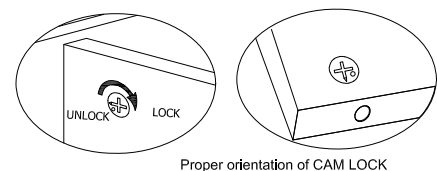

STEP 4

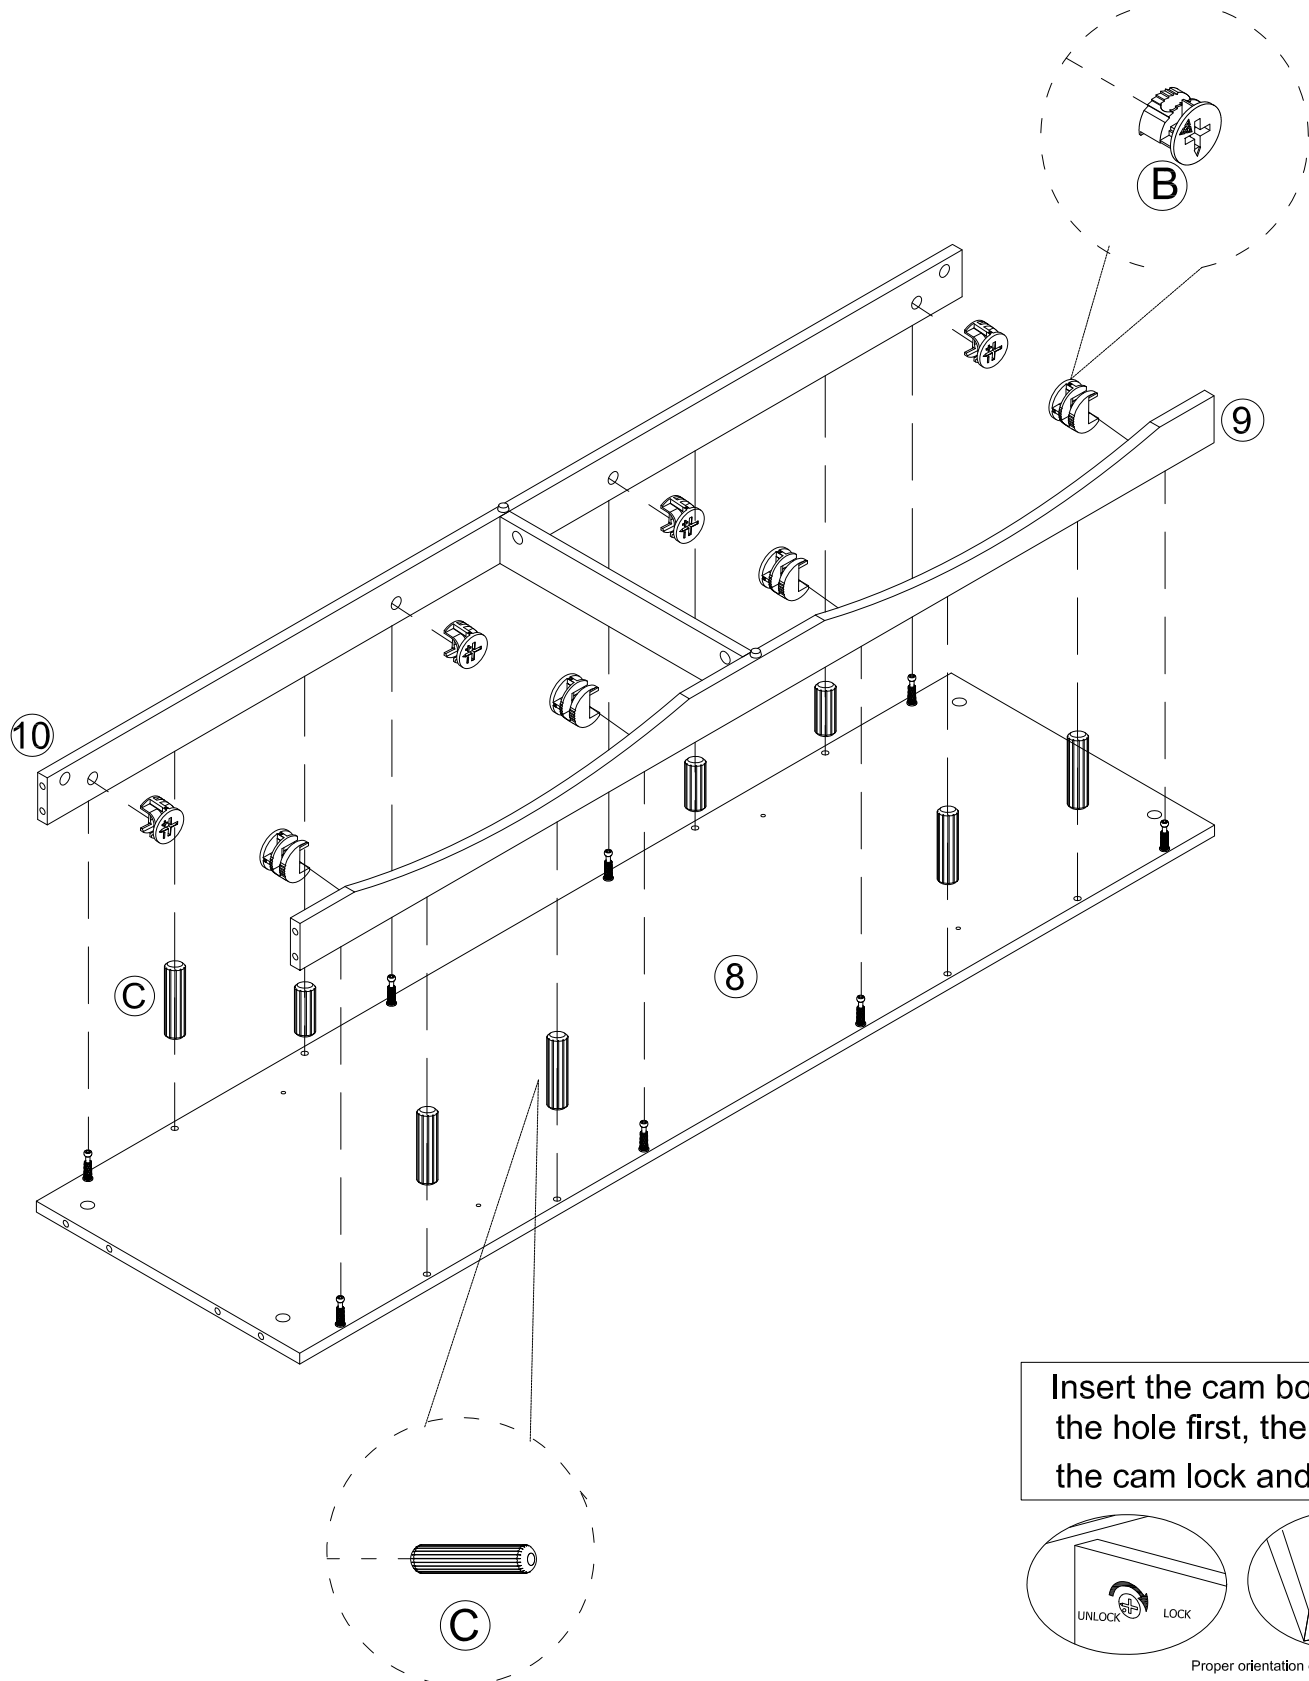
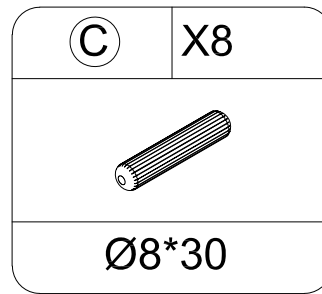
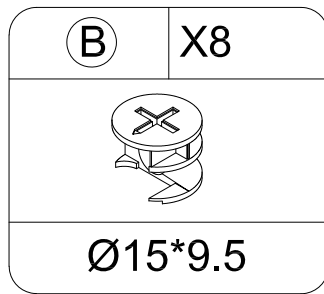
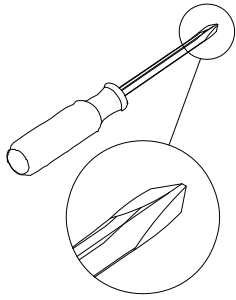


Insert the cam bolt into the hole first, then insert the cam lock and lock it.






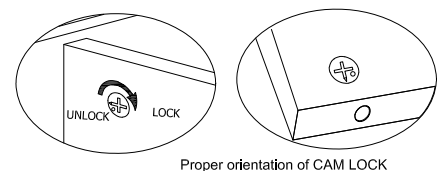


Proper orientation of CAM LOCK


STEP 5

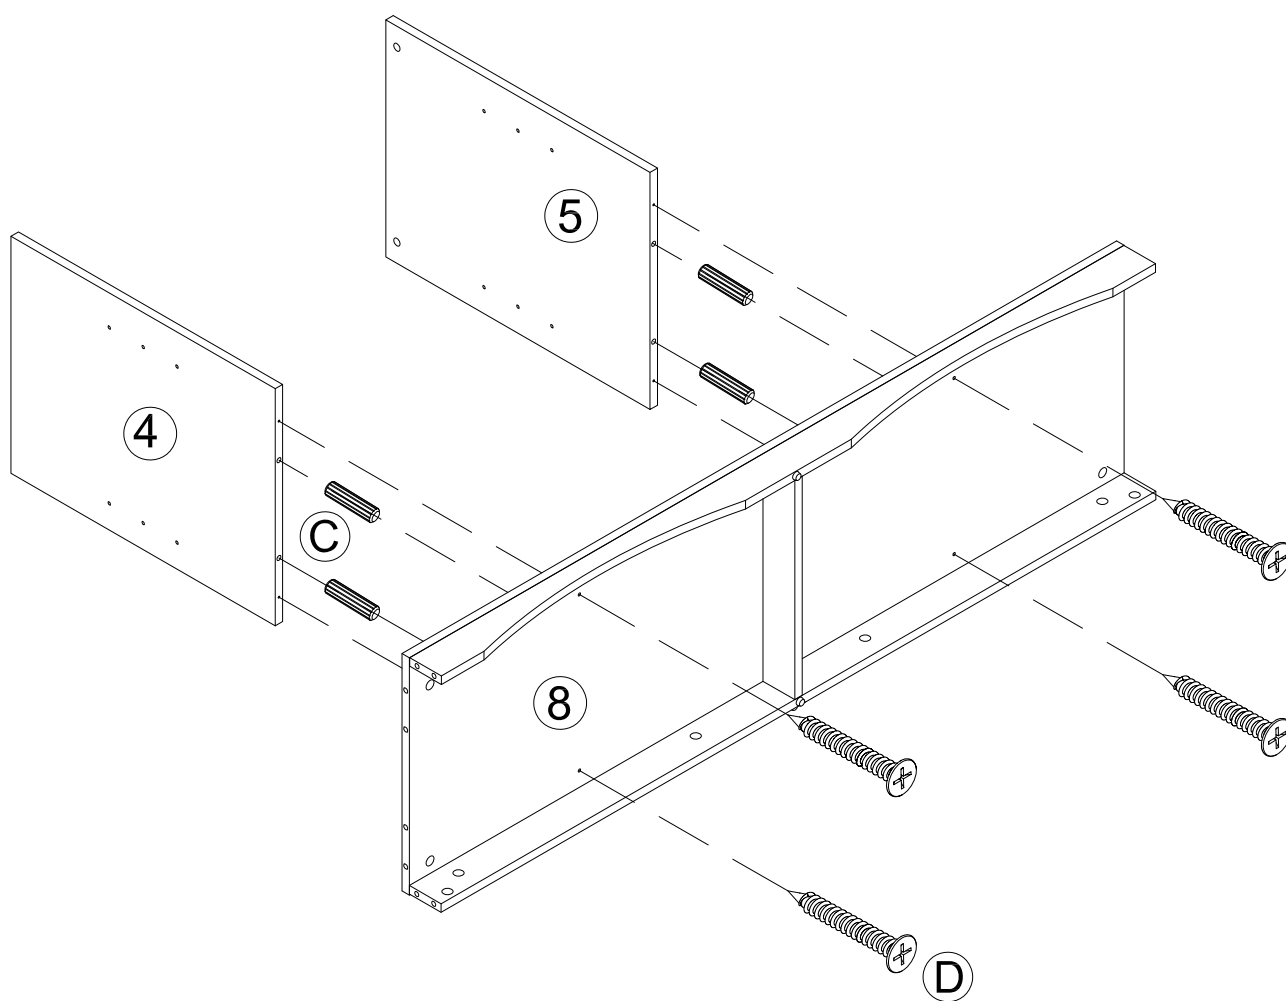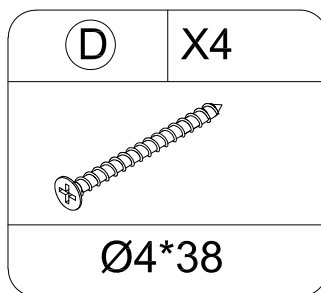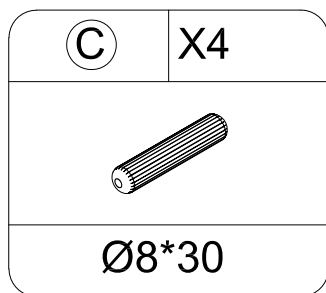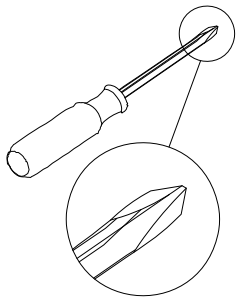

STEP 6

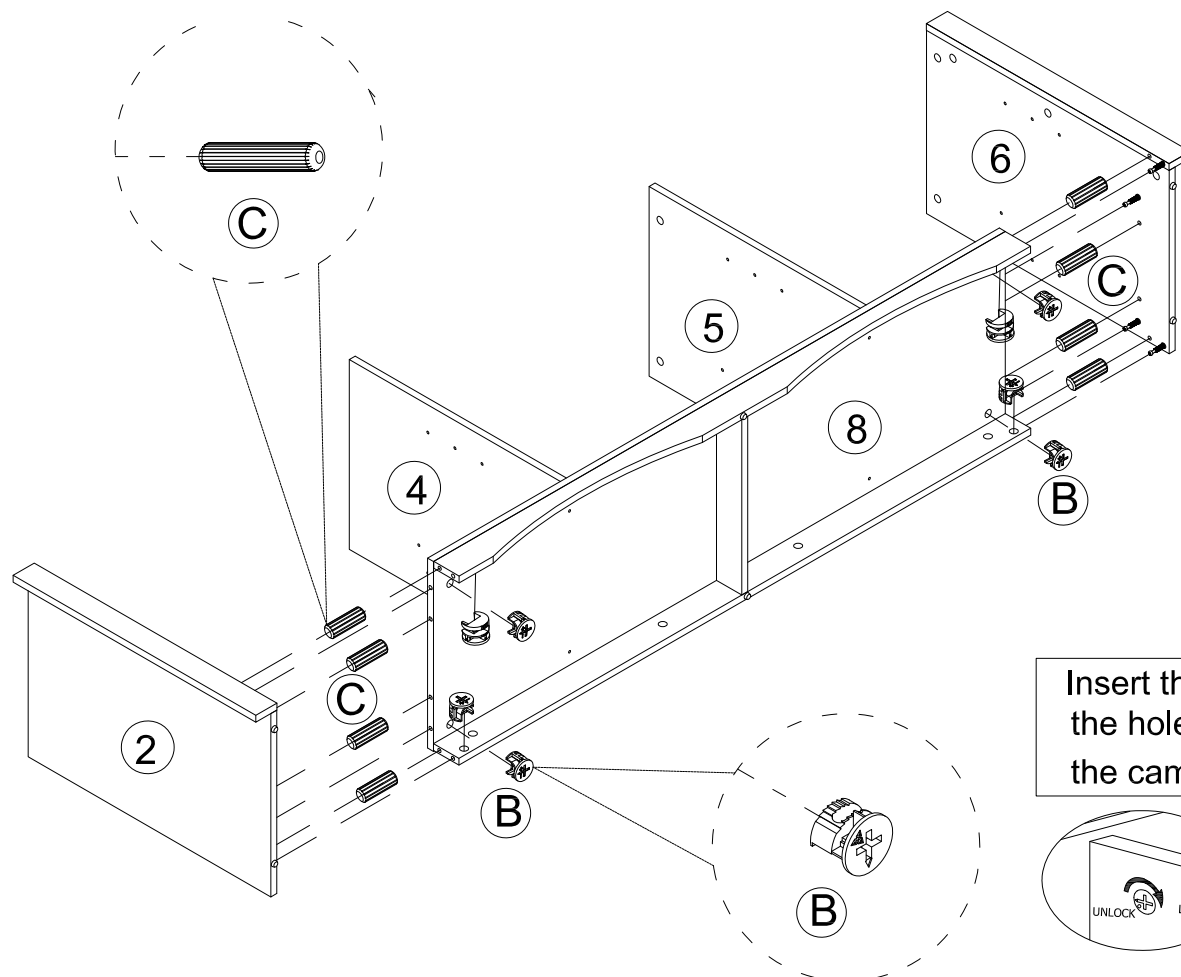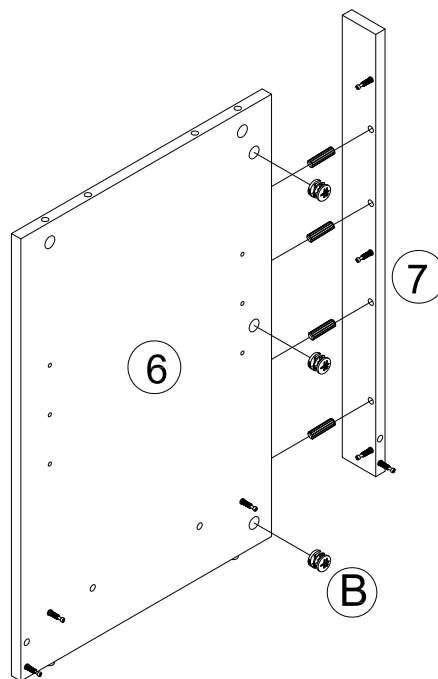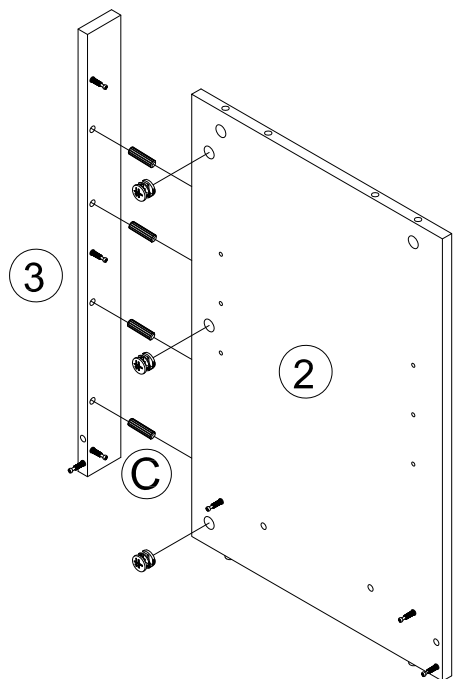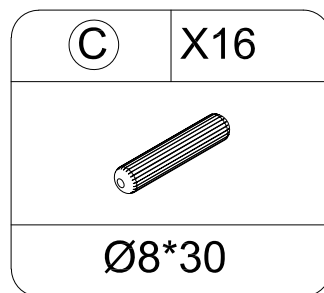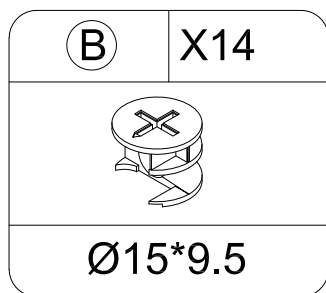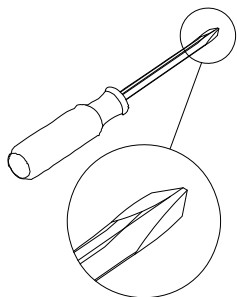

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

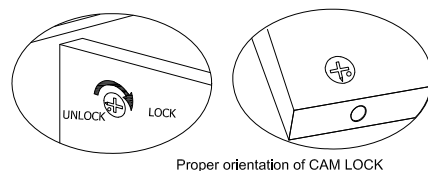


Proper orientation of CAM LOCK





A line drawing of a screwdriver. A circular callout provides a magnified view of the tip, showing a double-flute design.

(K)	X2
	
Ø3*15	


	X1
 X1	 X7

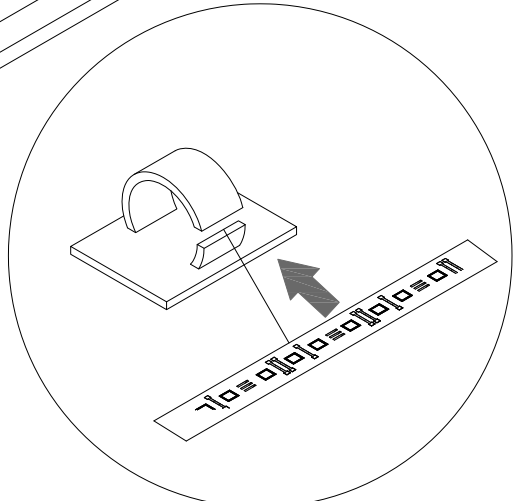



STEP 8

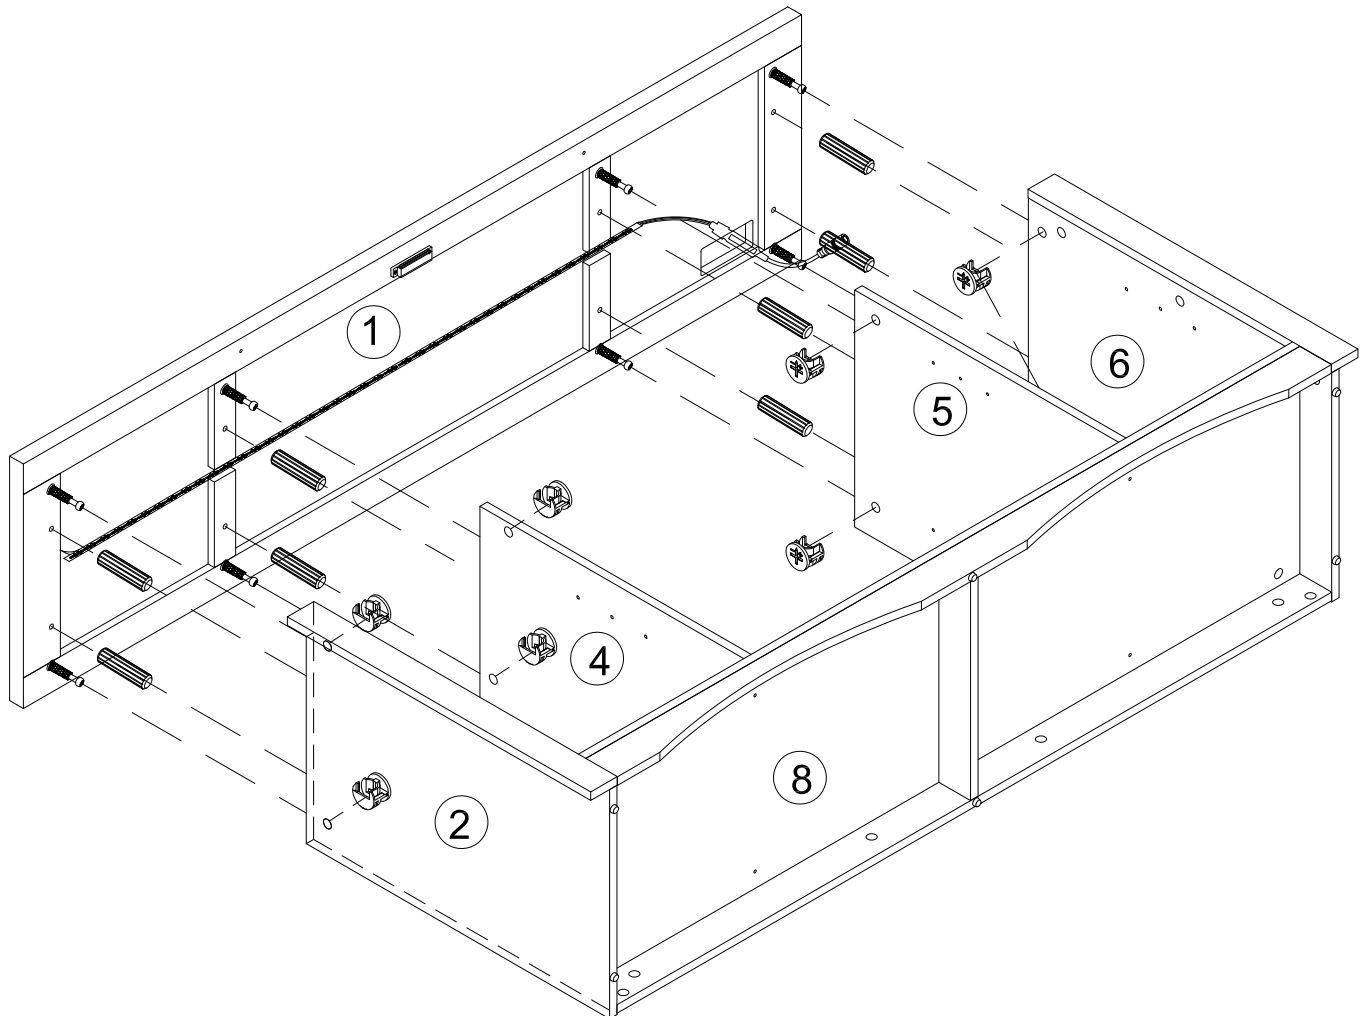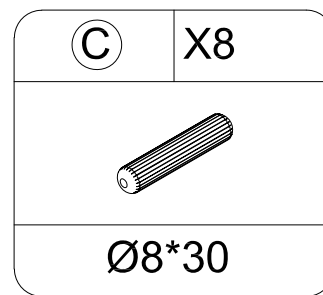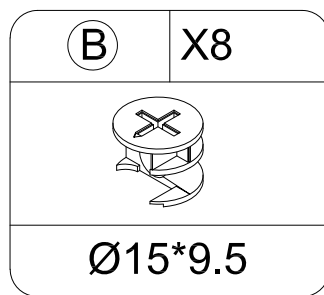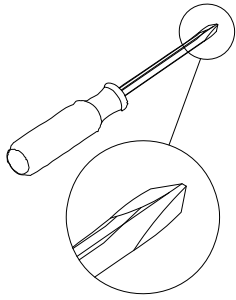


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

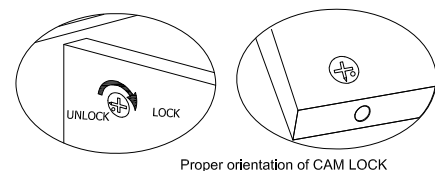




STEP 9

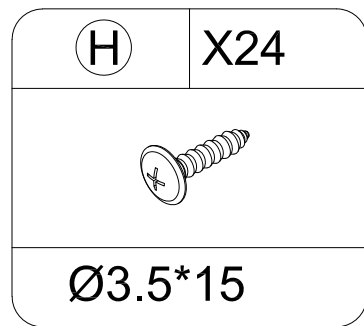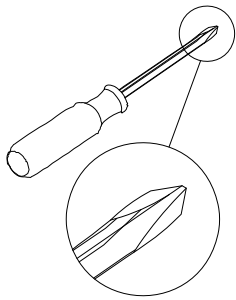


First tighten these 2 screws, then tighten all remaining screws.

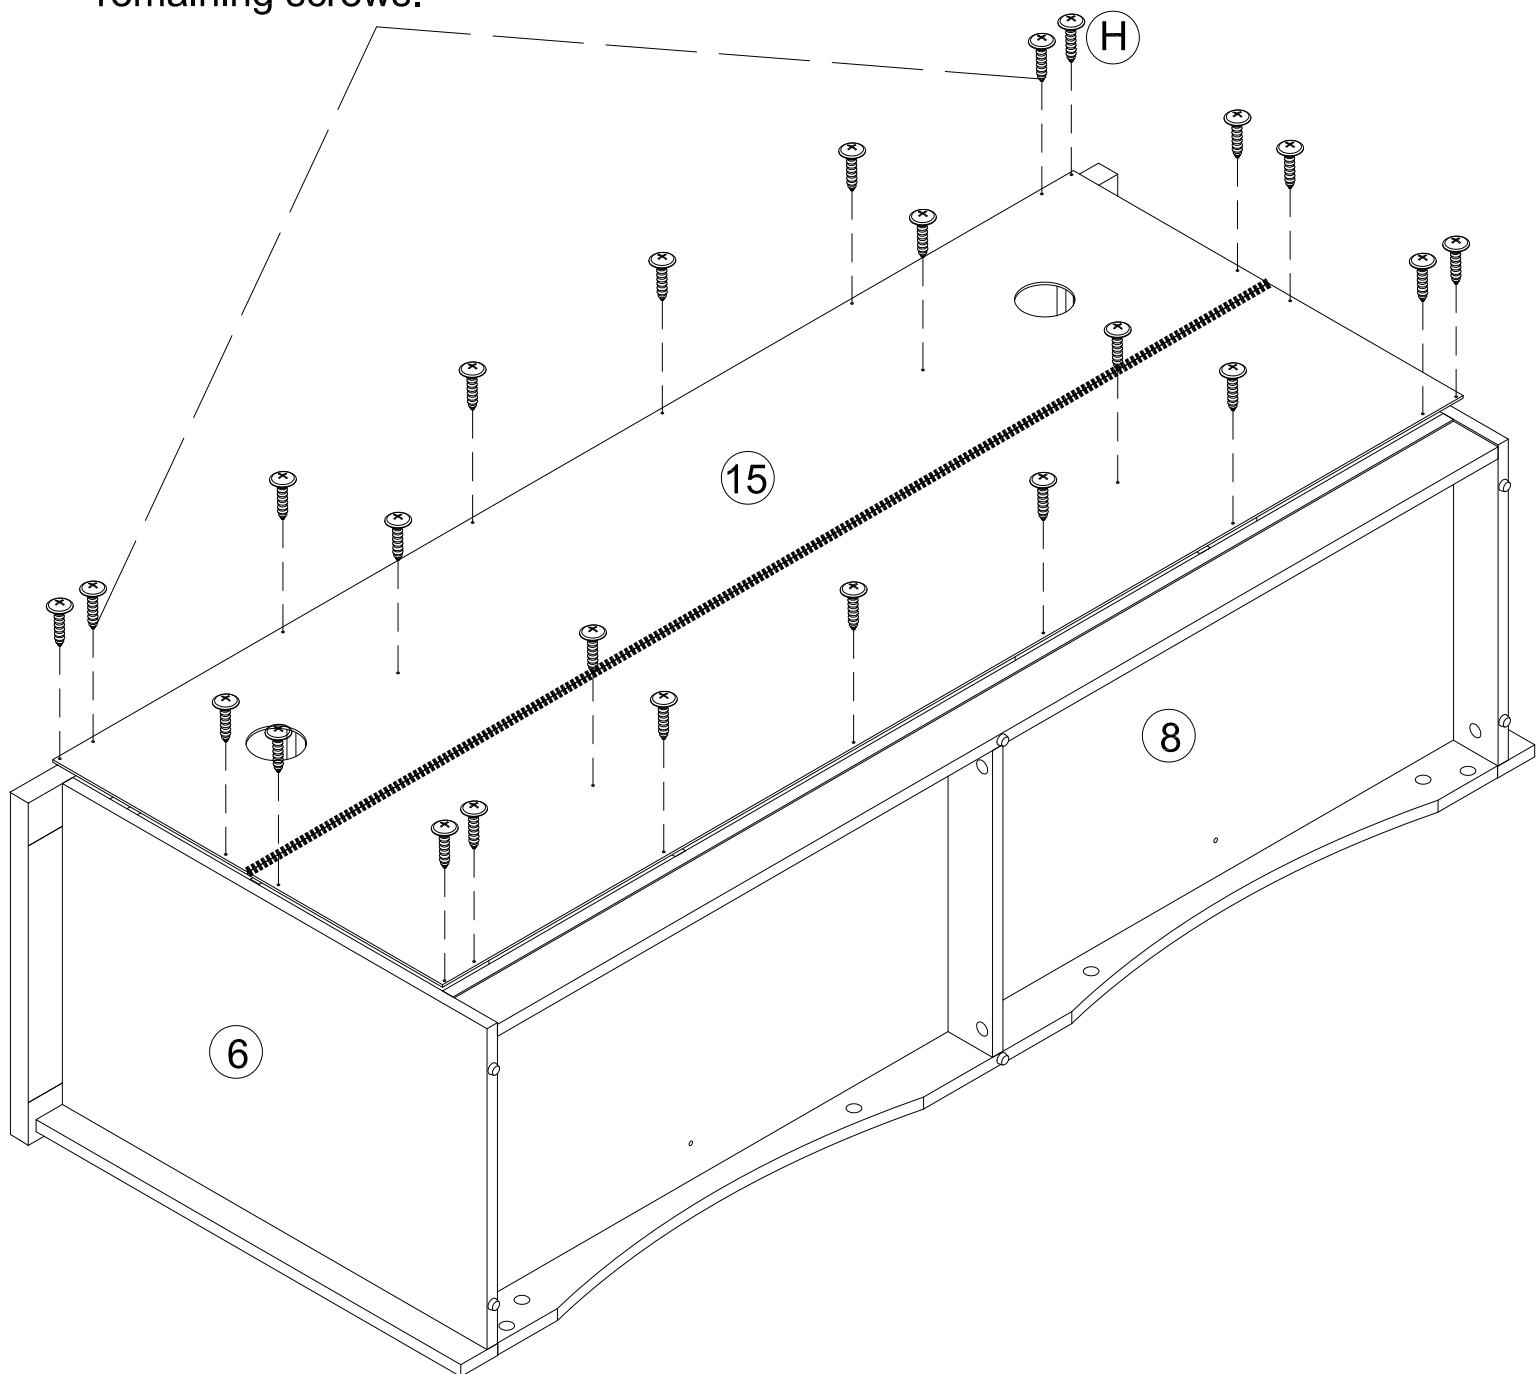




STEP 10

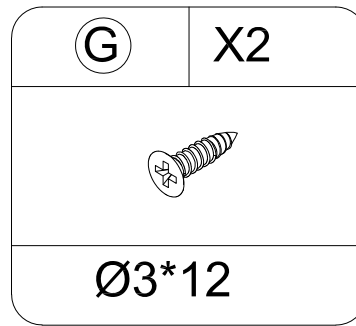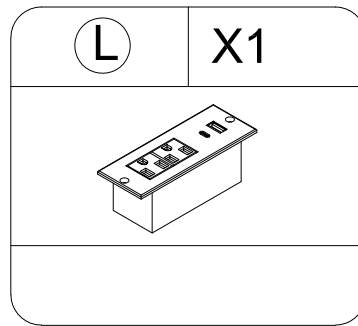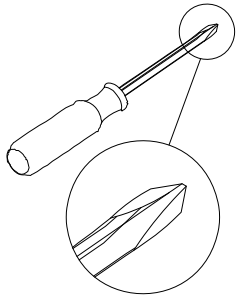











NOTE: Pass the plug through the wire hole.

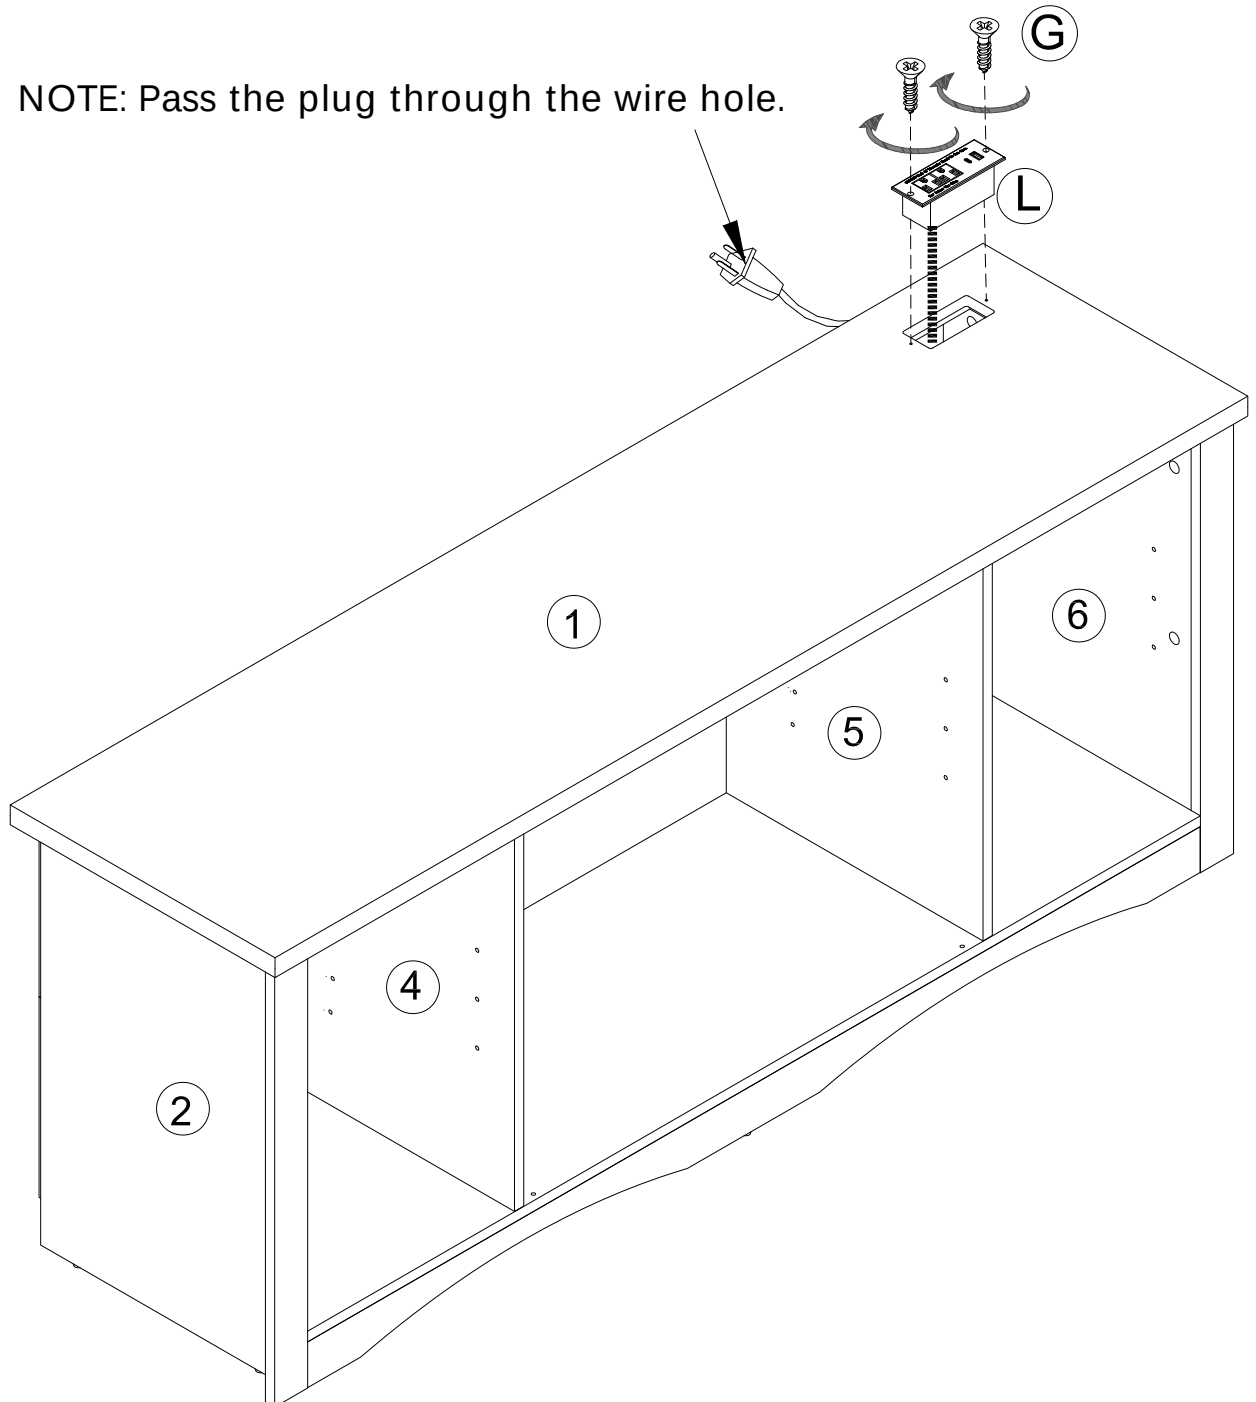

STEP 11

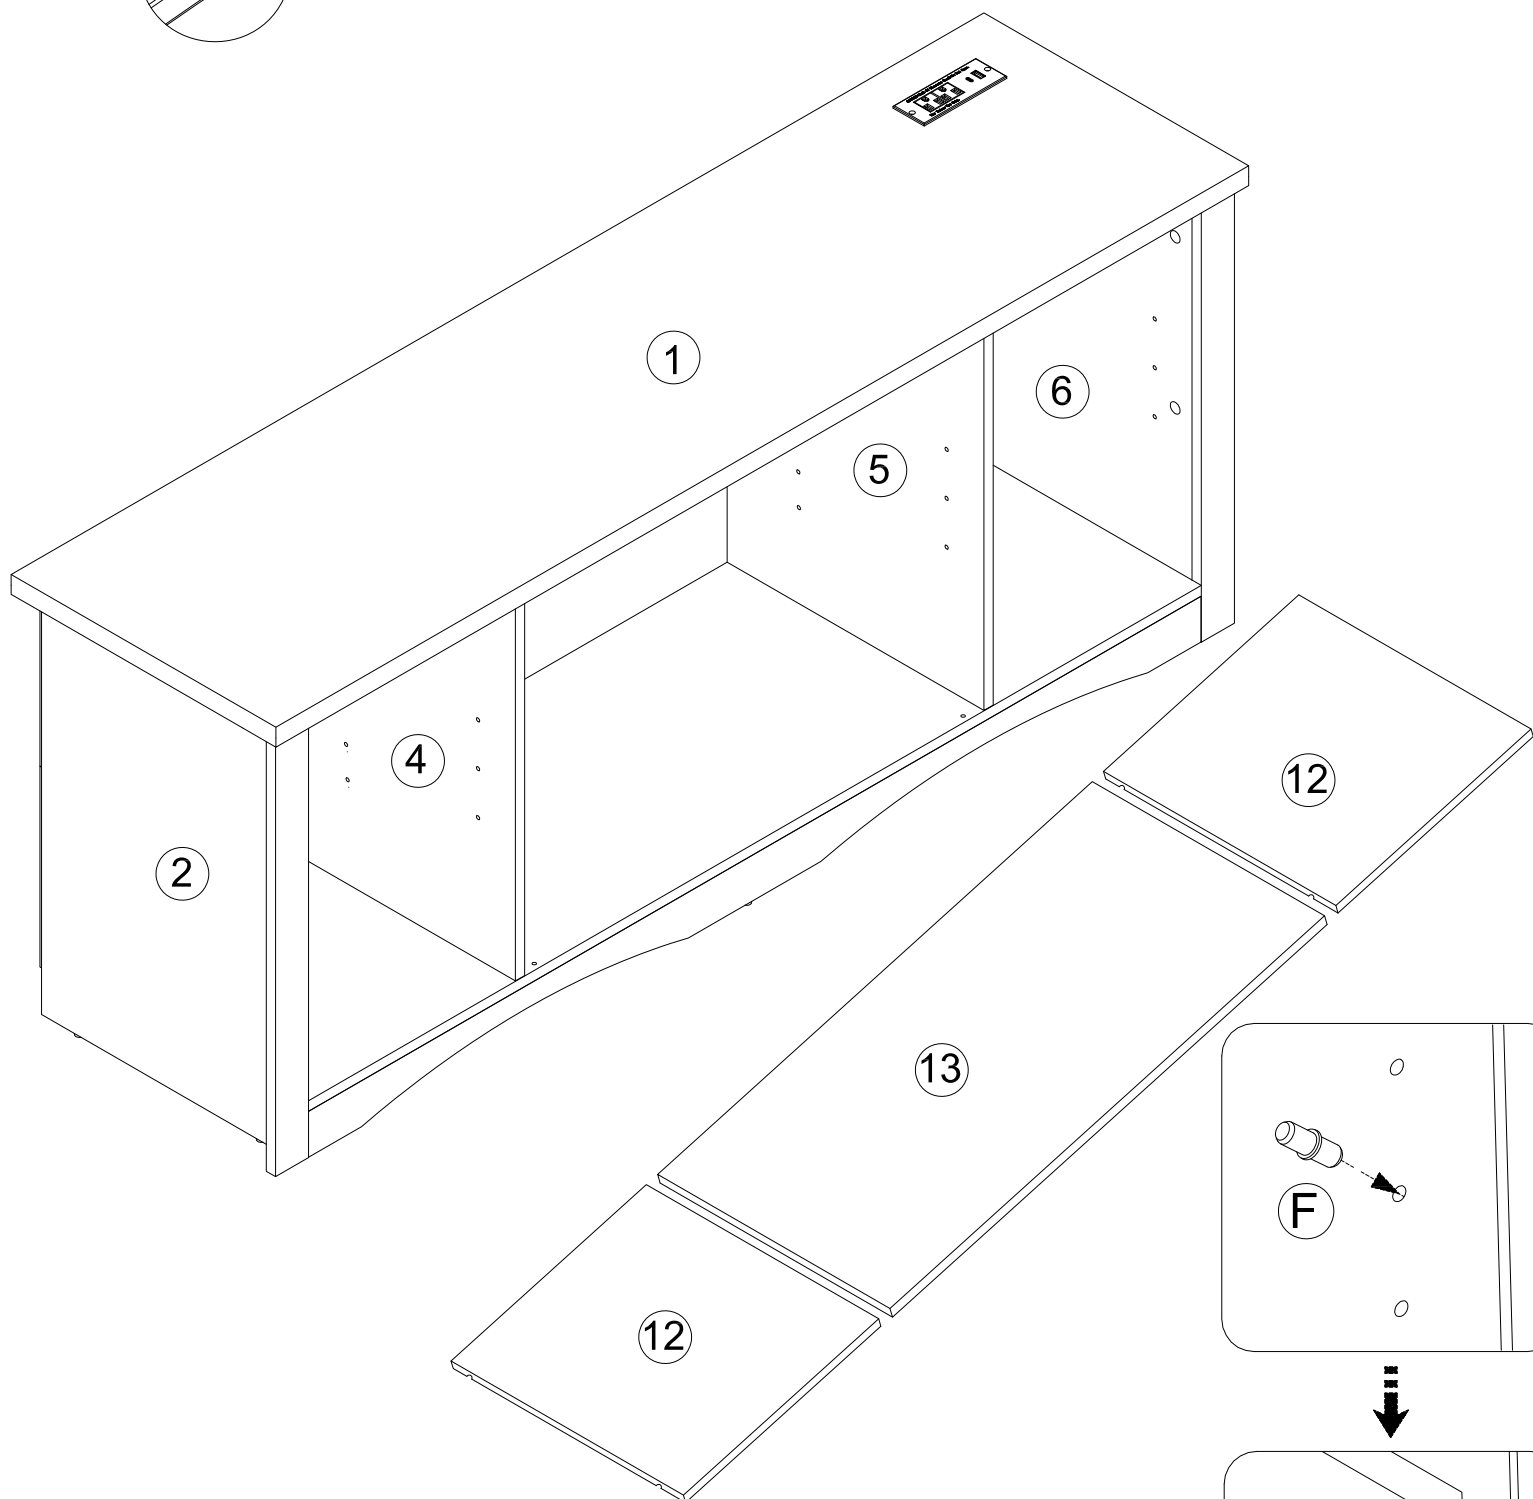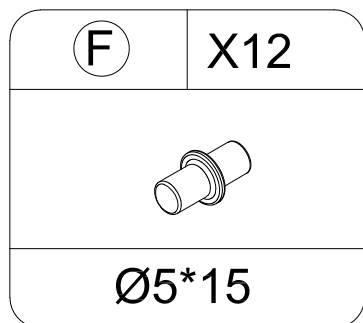
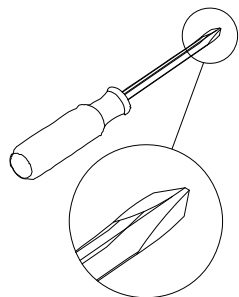


STEP 12

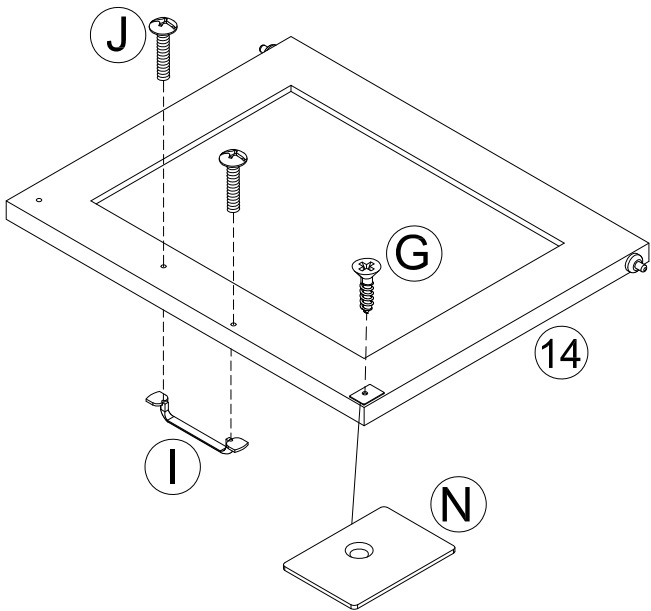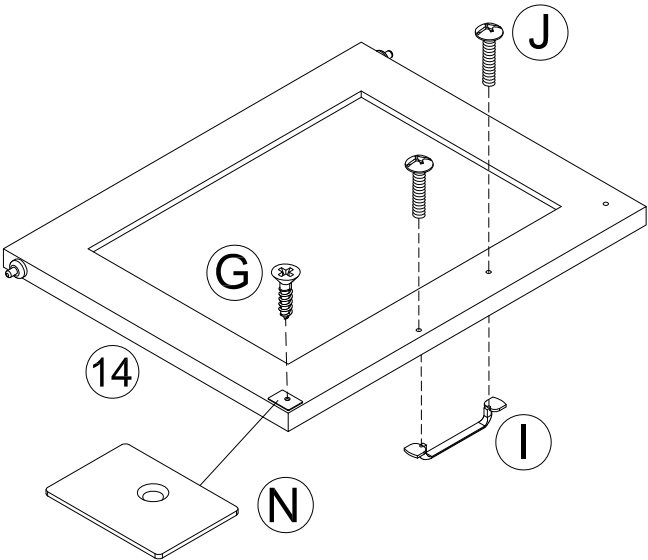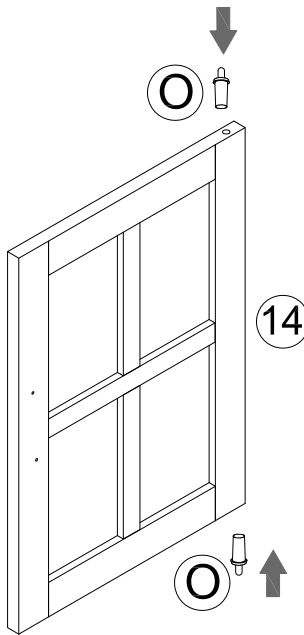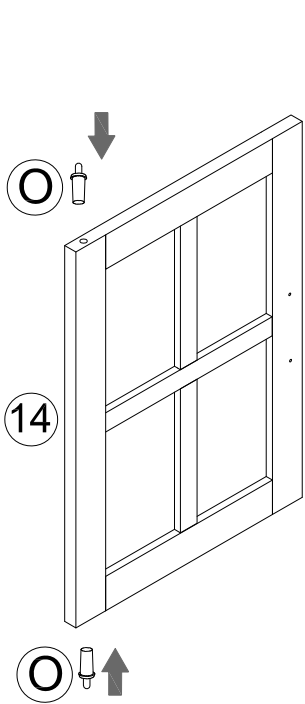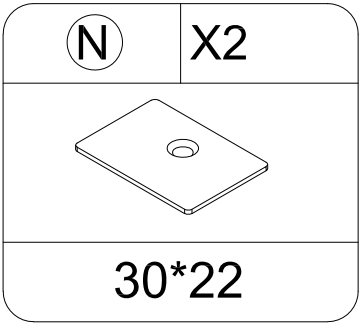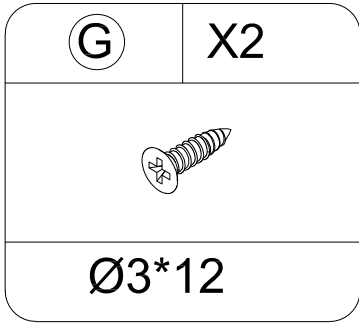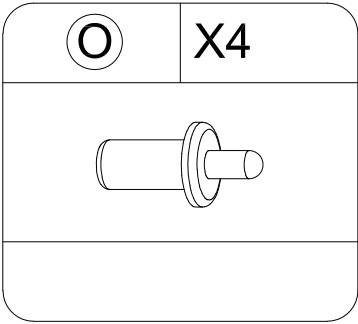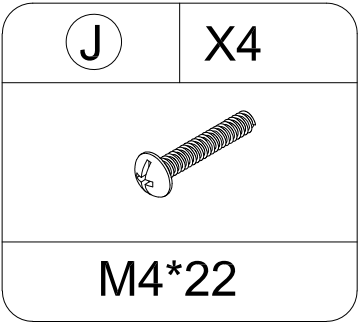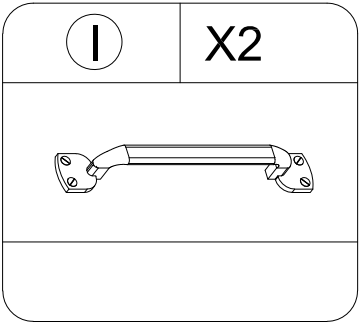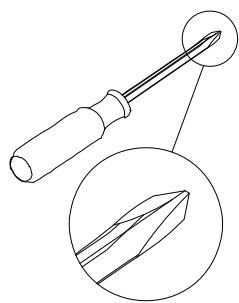

STEP 13

FINISH !

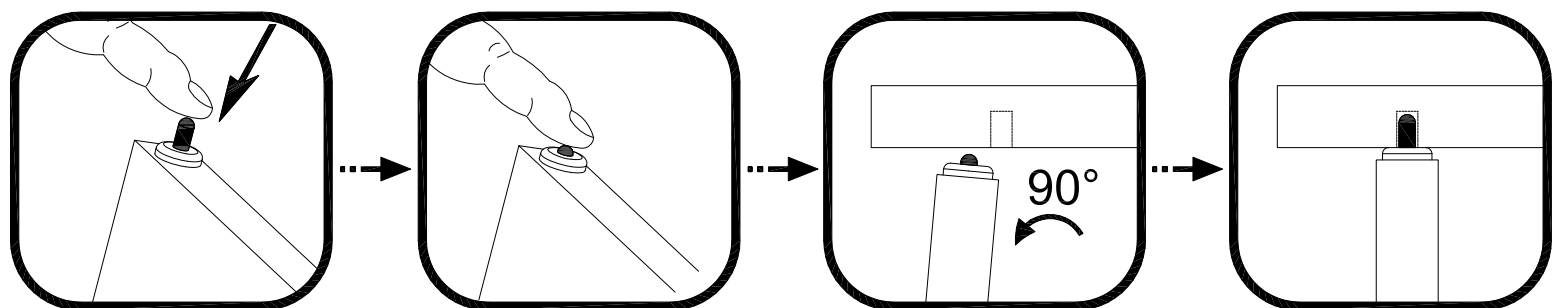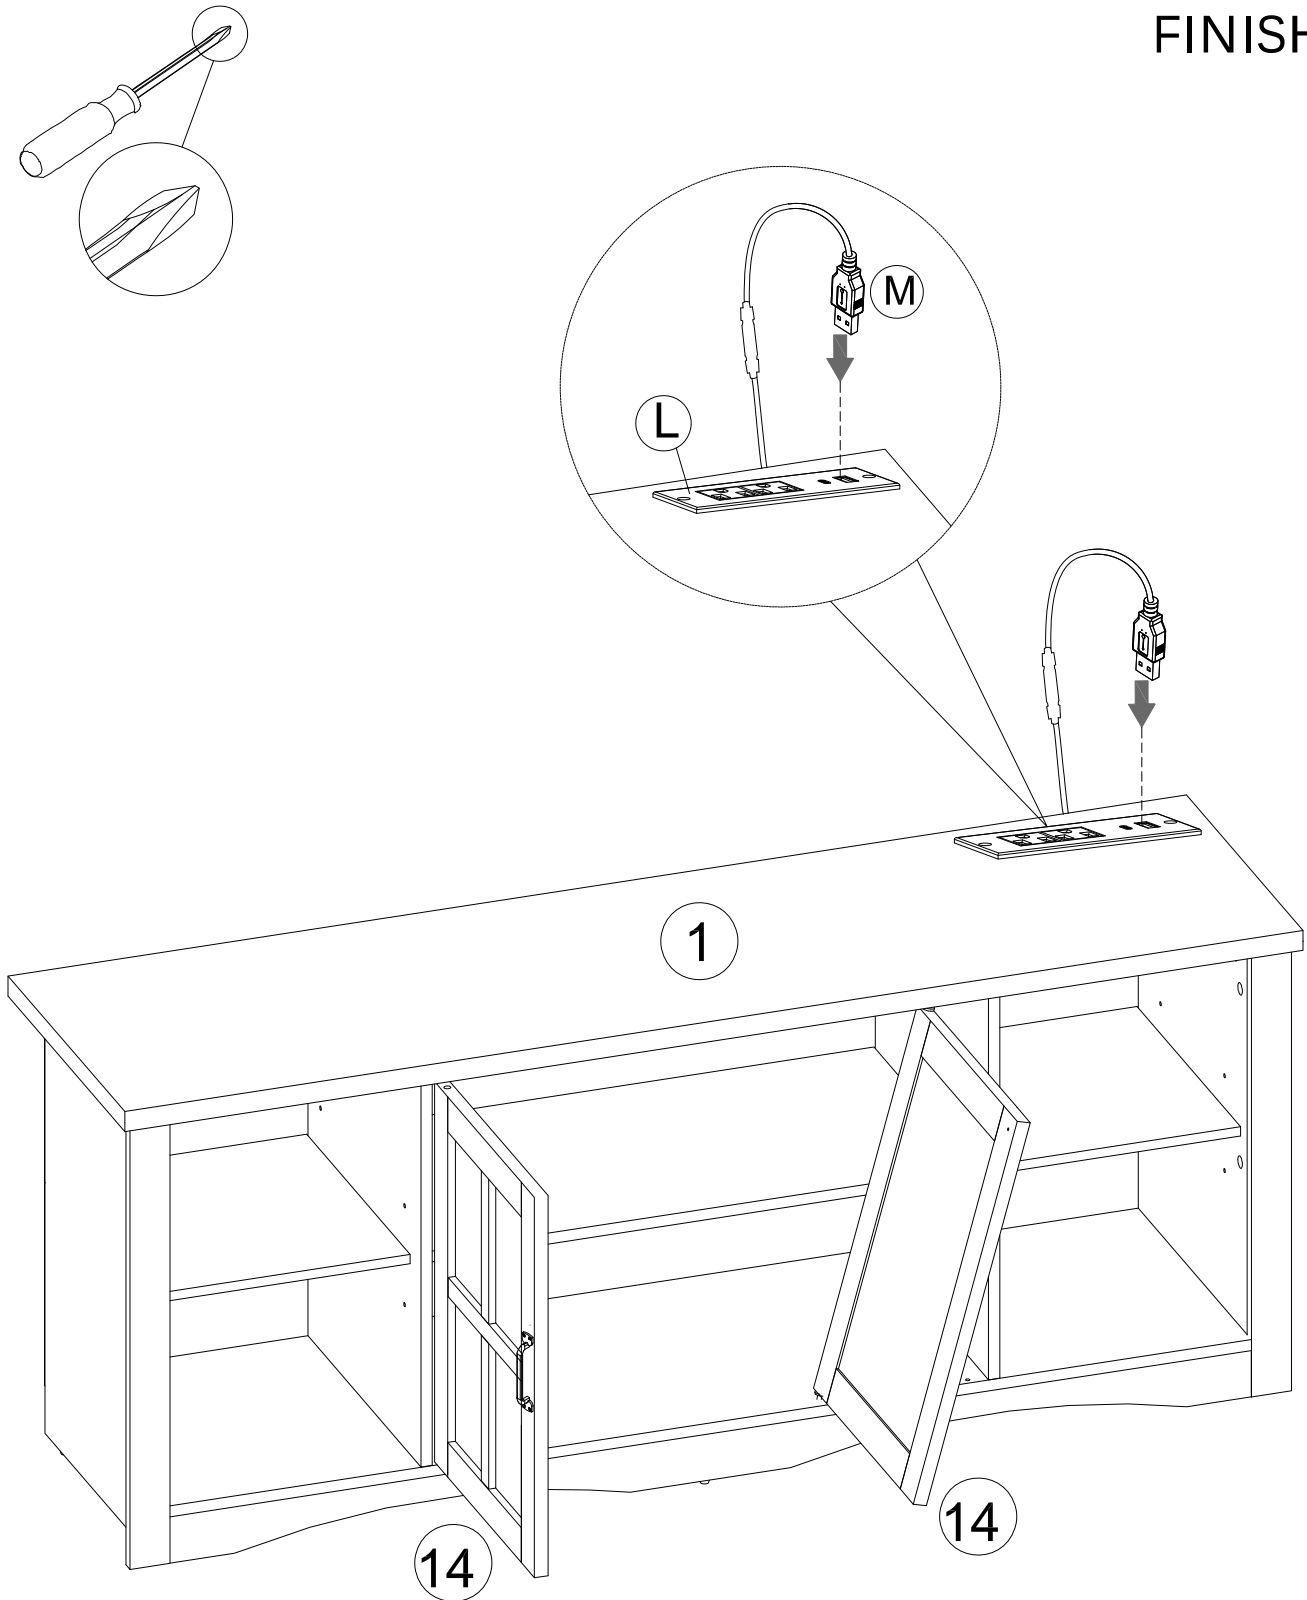

FURNITURE CARE AND MAINTENANCE

Particleboard

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- . Tighten all bolts and screws again within the first 2 weeks of assembly
- . Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- . Clean the surface of the particleboard with a lightly dampened cloth
- . Small amount of mild soap can be used if necessary
- . Dry the surface immediately after cleaning.
- . DO NOT use bleach or alcohol detergent to clean the surface.
- . DO NOT apply wood treatment on parts made with particleboard.

Particleboard will swell and distort when suffer damage.
Make sure to dry the furniture immediately after cleaning