




BARCLAY BUTERA.

PARK CITY ASSEMBLY INSTRUCTIONS 930-133C/134C/135C Sundance Panel Bed

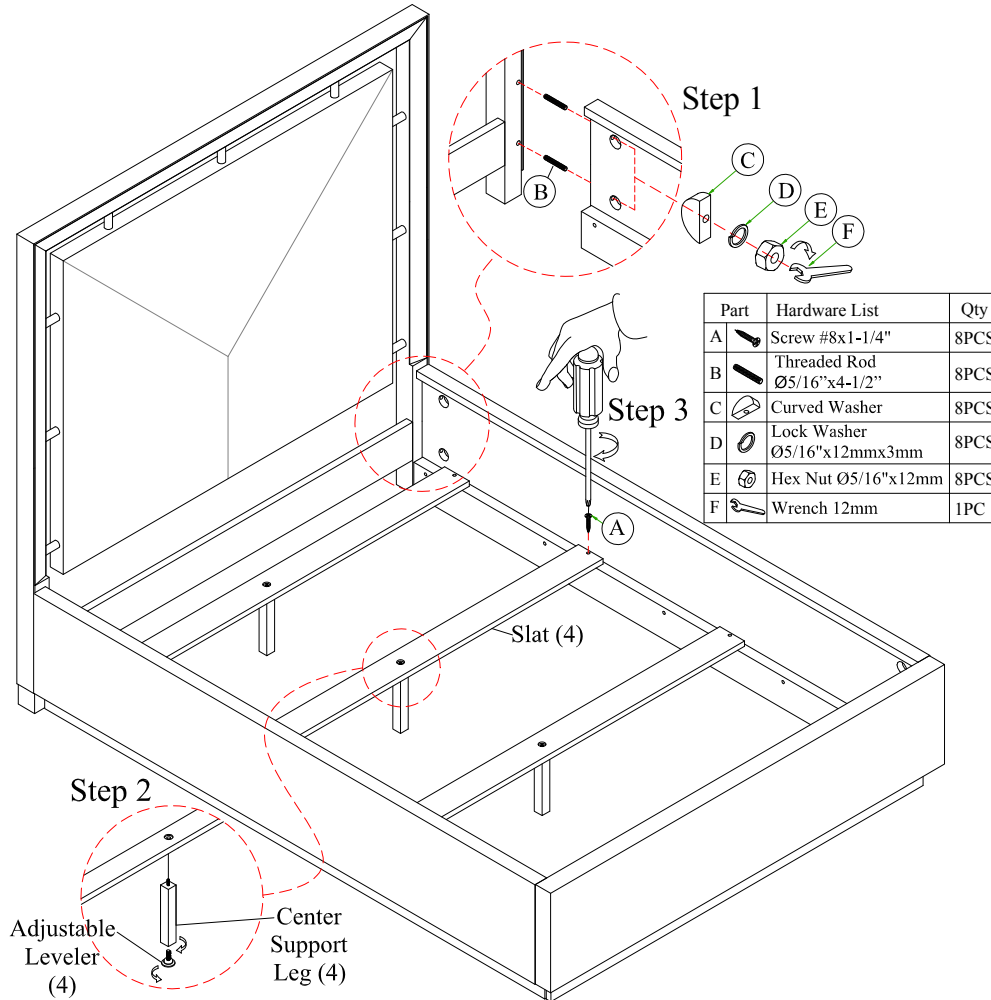

How to Attach Side Rails to Headboard/Footboard

* All needed hardware is located in a hardware bag which should be taped to inside of side rail.

1. Insert threaded rod (B) into metal dowel in post thru open hole. Twist clockwise until tight. *Step 1*
2. With both threaded rods in place, and side rail positioned with T-slots to inside, slide side rail over threaded rods.
3. Add curved washer (C), lock washer (D), and hex nut (E) with barrel end towards washer.
4. Tighten hex nut with wrench (F) until tight. Repeat process for other three corners.

How to Attach Slats to Side Rails

1. Insert bolted end of adjustable leveler into bottom of center support leg and twist until tight. Insert bolted end of support leg into bottom of slats where there is a T-nut in the center of the board. Note that top side of slat has larger hole. Rotate clockwise until tight. *Step 2*
2. Adjust leveler so that support leg and leveler sit 1/2" above floor.
3. Place a slat 3" to 5" inward from each end of wood cleats. Place two slats between two end slats so that there is an equal amount of space between all four slats. Secure slats with wood screws (A) provided. *Step 3*

LEXINGTON®
HOME BRANDS

For additional consumer assistance please contact your Lexington dealer or call our Consumer Services Department at 1-336-474-5300, Monday-Friday, 8-5 EST. www.lexington.com

05/29/2020