

10036 CT ASSEMBLY INSTRUCTION

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.

IMPORTANT : PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

"DO NOT OVERTIGHT ANY HARDWARE"

WARNING : SMALL PARTS AND HARDWARE NOT FOR CHILDREN UNDER 3 YEARS. ADULT ASSEMBLY REQUIRED.

PLEASE TAKE NOTE

****This product requires assembly by two adults.**

****Some assembly steps require additional support from a second person.**

TABLE OF CONTENTS

HARDWARES LIST

PAGE 2 - 3

PARTS LIST

PAGE 3 - 4

PARTS' LOCATION

PAGE 5

ASSEMBLY COFFEE TABLE

PAGE 6 - 18

ASSEMBLY NIGHT STAND


PAGE 18 - 21

COMPLETED ASSEMBLY

PAGE 21

ASSEMBLY TOOLS REQUIRED


1. Screwdriver (not provide)



2. Hammer (not provide)













Skip the power trip this time.

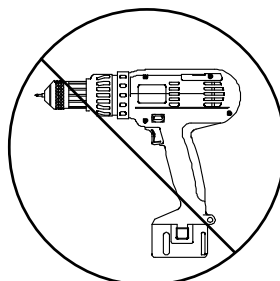



10036 CT ASSEMBLY INSTRUCTION

HARDWARES LIST

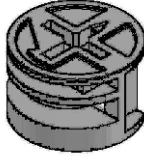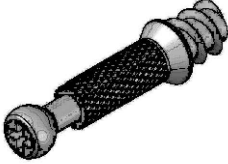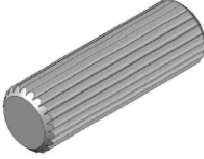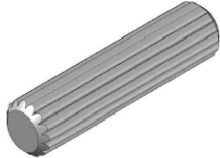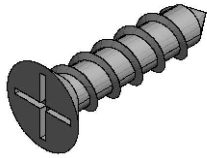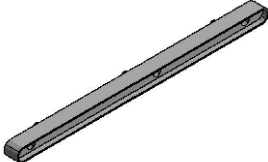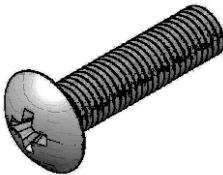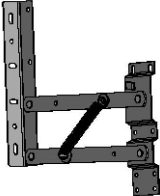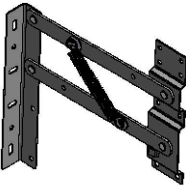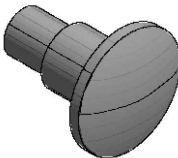ITEM	DESCRIPTION	DRAWING	QTY
A	MINIFIX CAM LOCK		52 PCS
B	MINIFIX CAM BOLT		52 PCS
C	WOOD DOWEL (M8 x 25MM)		8 PCS
D	WOOD DOWEL (M6 x 25MM)		16 PCS
E	CSK SCREW M4 x 15MM		32 PCS
F	DRAWER SLIDE		4 PCS
G	TRUSS M SCREW (20MM)		2 PCS
H	LEFT HINGES		1 PC
I	RIGHT HINGES		1 PC
J	DRAWER STOPPER		4 PCS











10036 CT ASSEMBLY INSTRUCTION

HARDWARES LIST

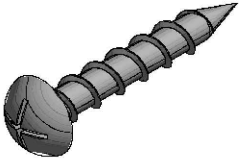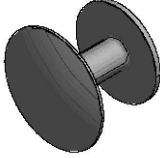ITEM	DESCRIPTION	DRAWING	QTY
K	PANHEAD SCREW M4 x 25MM		16 PCS
L	HANDLE		2 PCS











10036 CT ASSEMBLY INSTRUCTION

PARTS LIST COFFEE TABLE

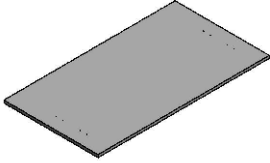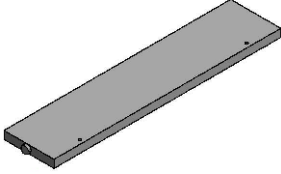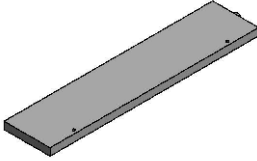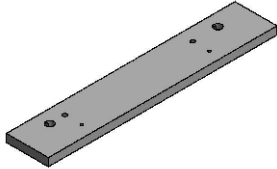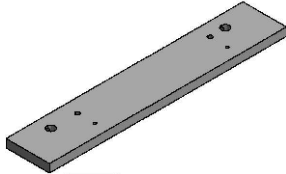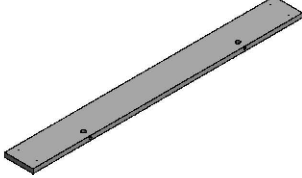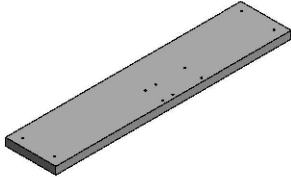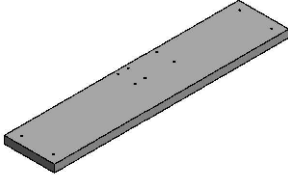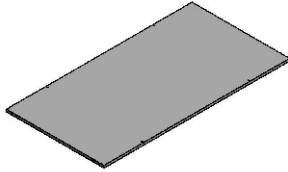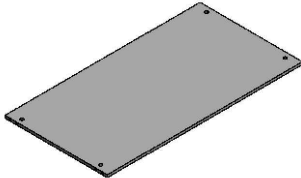ITEM	DESCRIPTION	DRAWING	QTY
1	TOP PANEL		1 PC
2	LEG A		2 PCS
3	LEG B		2 PCS
4	LEG C		2 PCS
5	LEG D		2 PCS
6	FRONT/BACK PANEL		2 PCS
7	LEFT SIDE PANEL		1 PC
8	RIGHT SIDE PANEL		1 PC
9	BOTTOM MIDDLE PANEL		1 PC
10	BOTTOM PANEL		1 PC

10036 CT ASSEMBLY INSTRUCTION


PARTS LIST NIGHT STAND

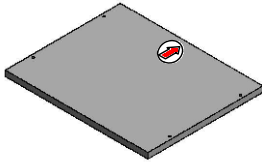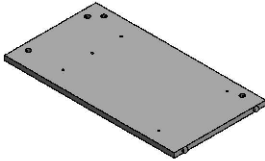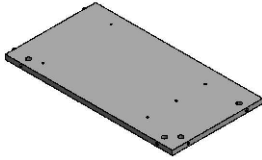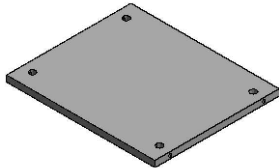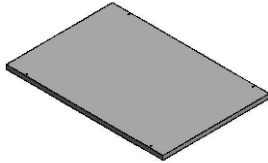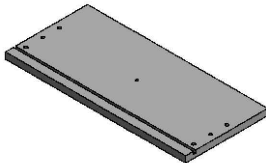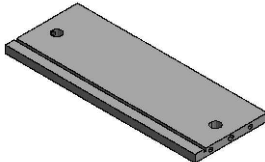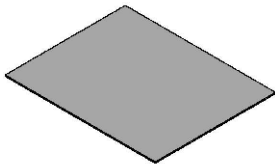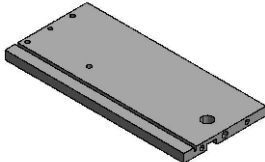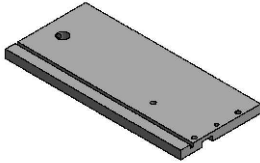ITEM	DESCRIPTION	DRAWING	QTY
11	TOP PANEL		2 PCS
12	SIDE LEFT PANEL		2 PCS
13	SIDE RIGHT PANEL		2 PCS
14	BOTTOM PANEL		2 PCS
15	BACK PANEL		2 PCS
16	DRAWER HEAD PANEL		2 PCS
17	DRAWER BACK PANEL		2 PCS
18	DRAWER BOTTOM PANEL		2 PCS
19	DRAWER LEFT PANEL		2 PCS
20	DRAWER RIGHT PANEL		2 PCS


10036 CT ASSEMBLY INSTRUCTION

PARTS ' LOCATION


COFFEE TABLE x 1 PC

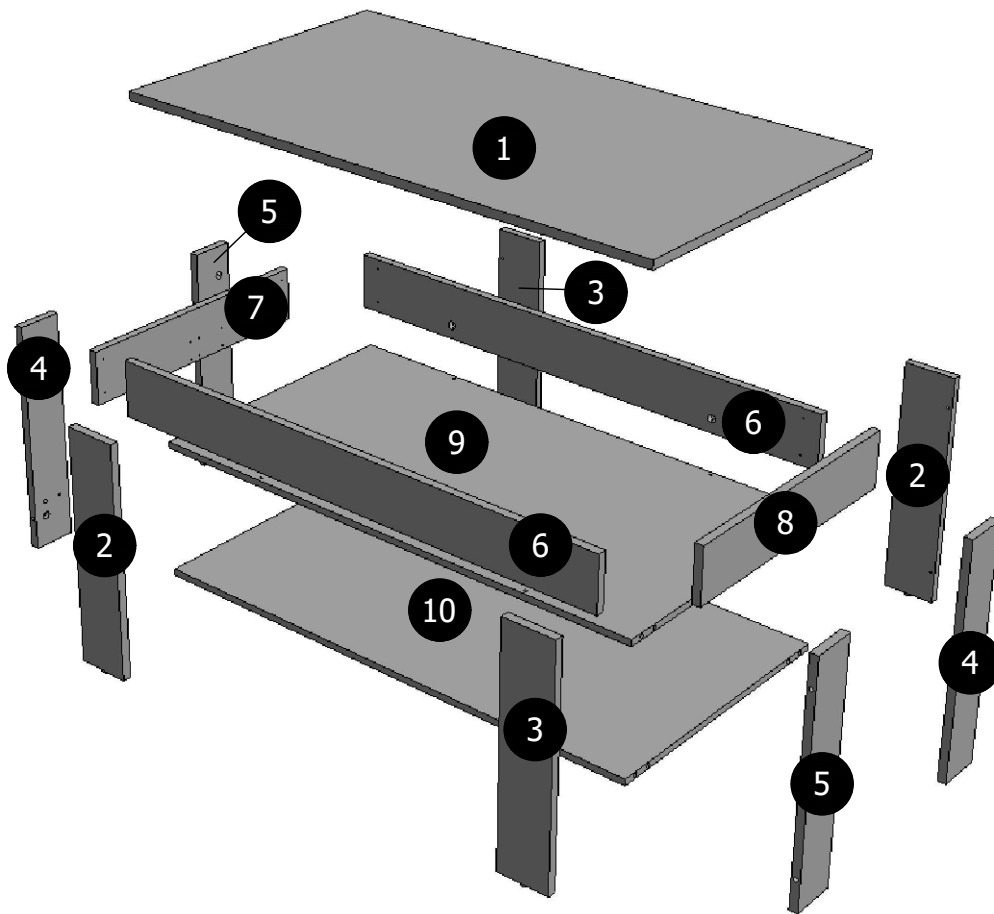

NIGHT STAND x 2 PCS

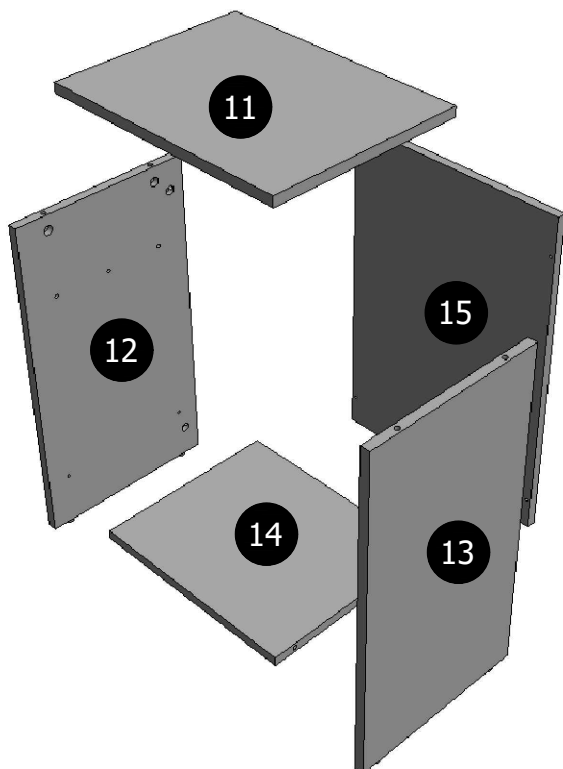


DRAWER x 2 PCS

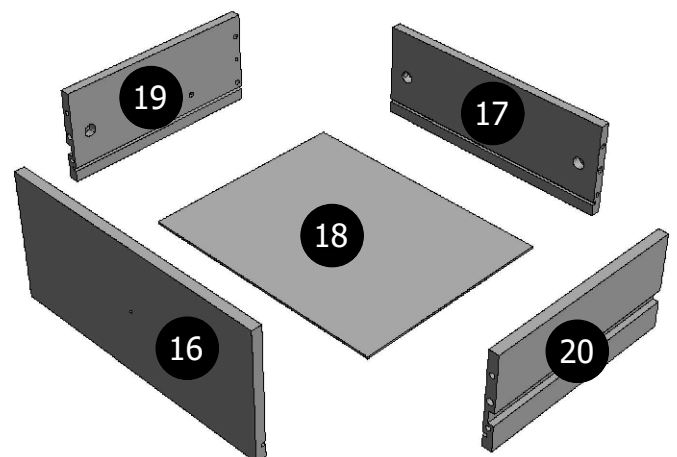


10036 CT ASSEMBLY INSTRUCTION



STEP 1

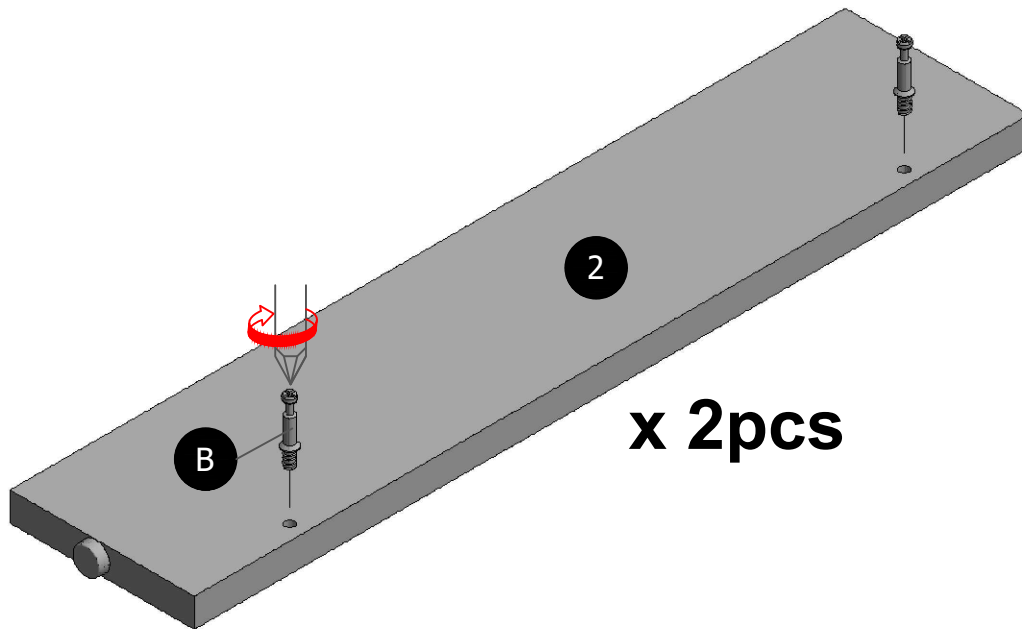

STEP 2

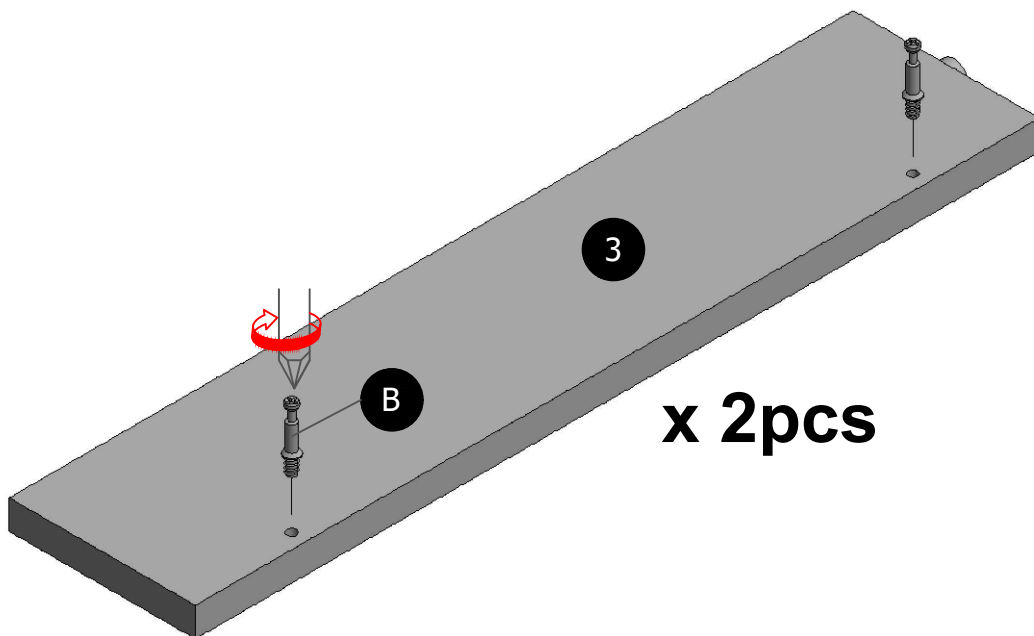


STEP 3

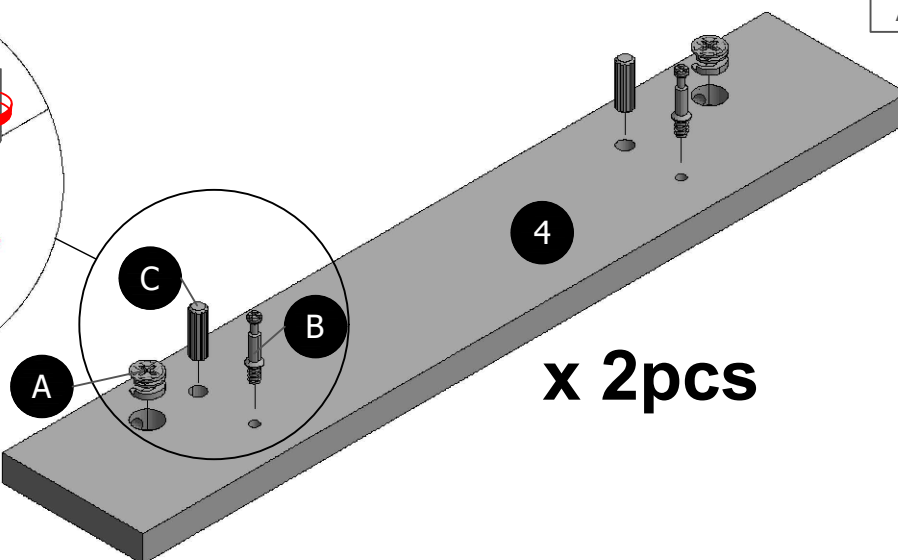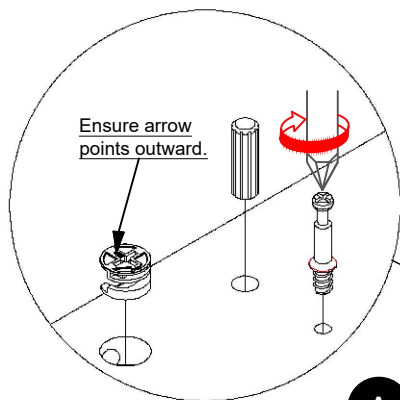


10036 CT ASSEMBLY INSTRUCTION


STEP 4

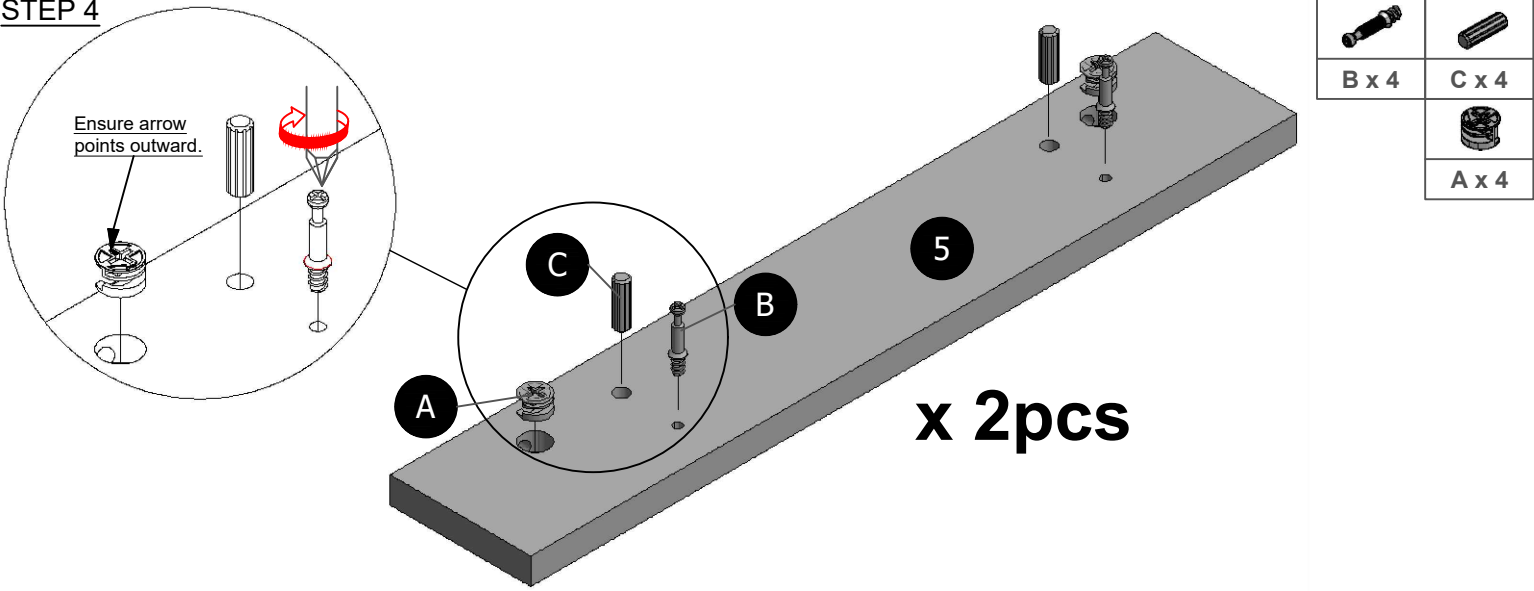

STEP 5

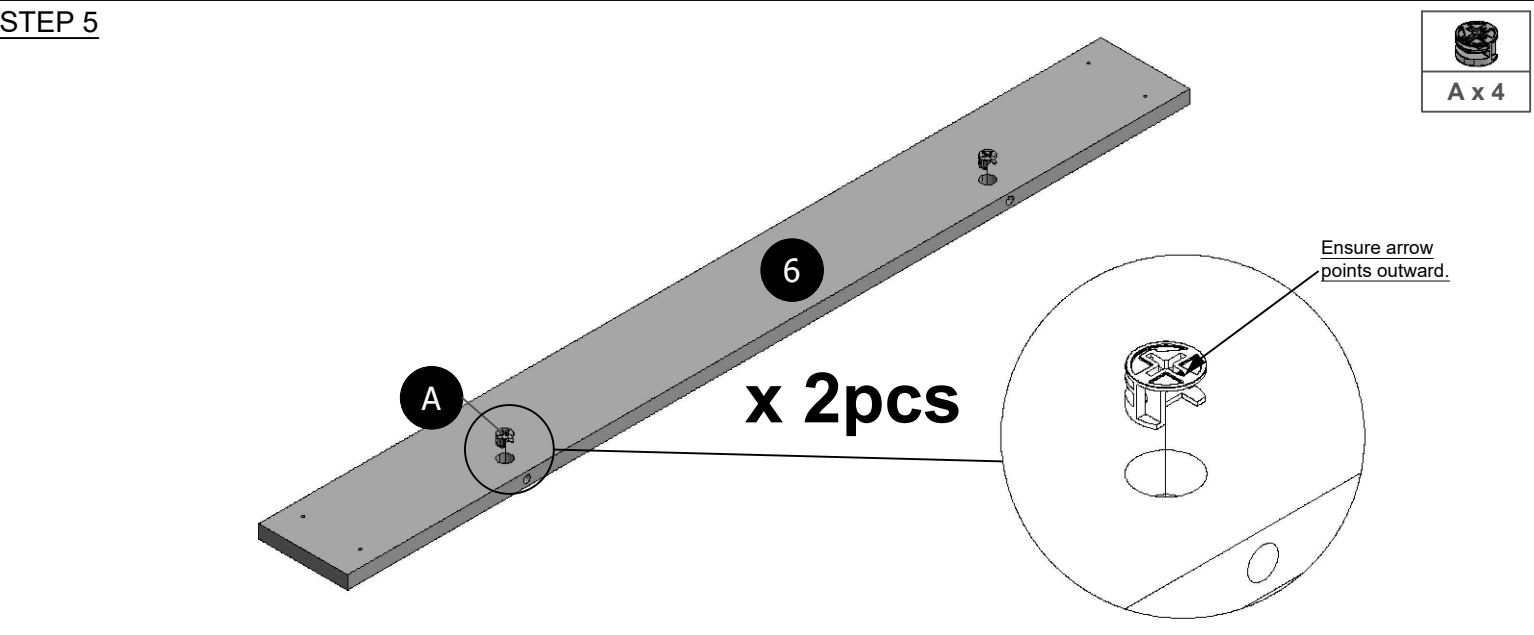


STEP 6

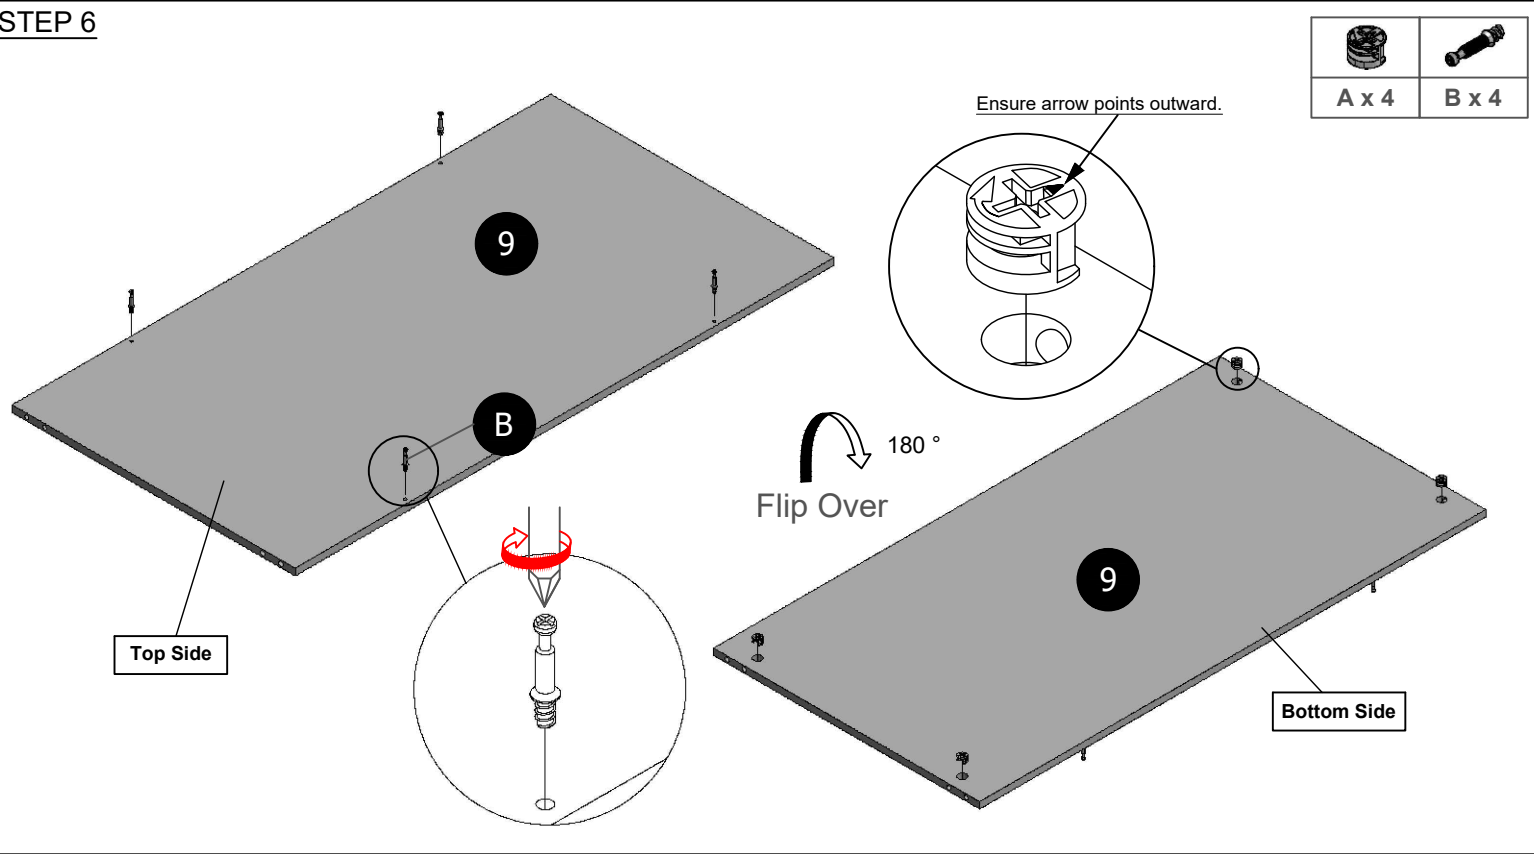


10036 CT ASSEMBLY INSTRUCTION

STEP 7

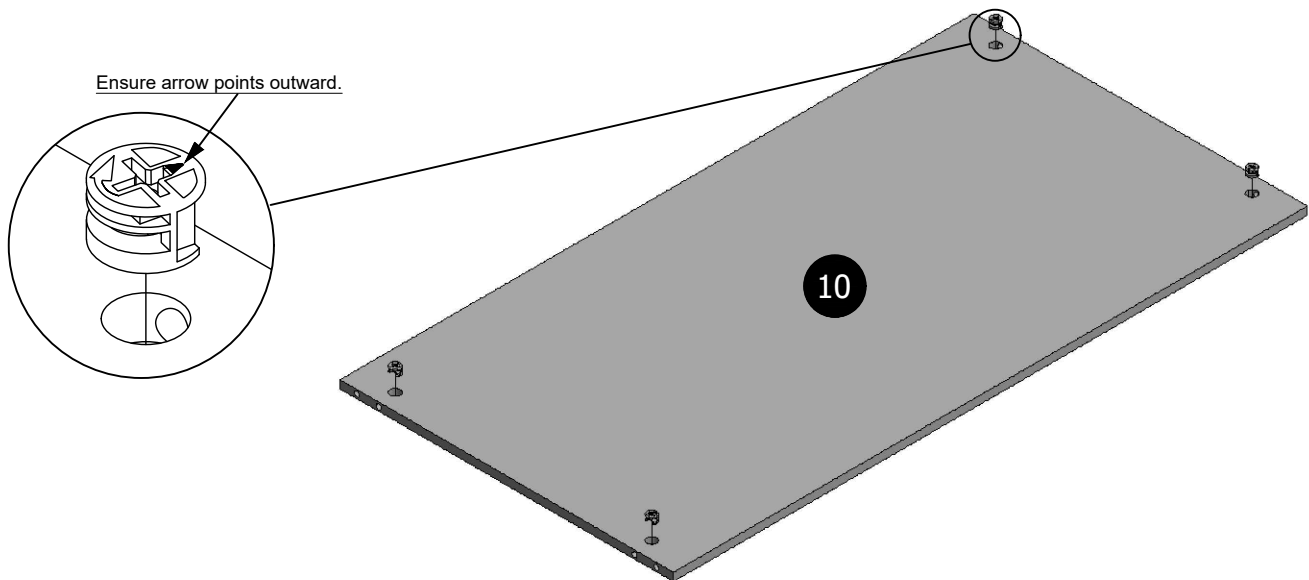


STEP 8

Combine (3) into the (5), then tighten 2pcs (A) as shown .

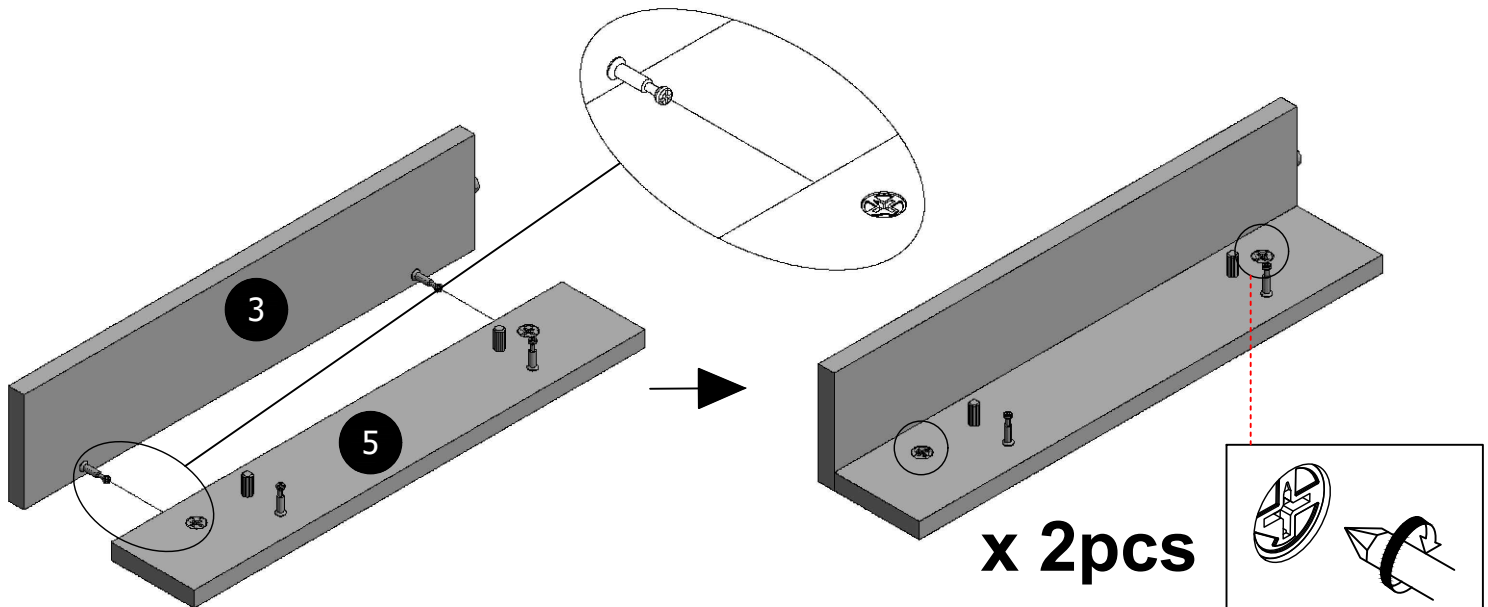

STEP 9

Combine (2) into the (4), then tighten 2pcs (A) as shown .

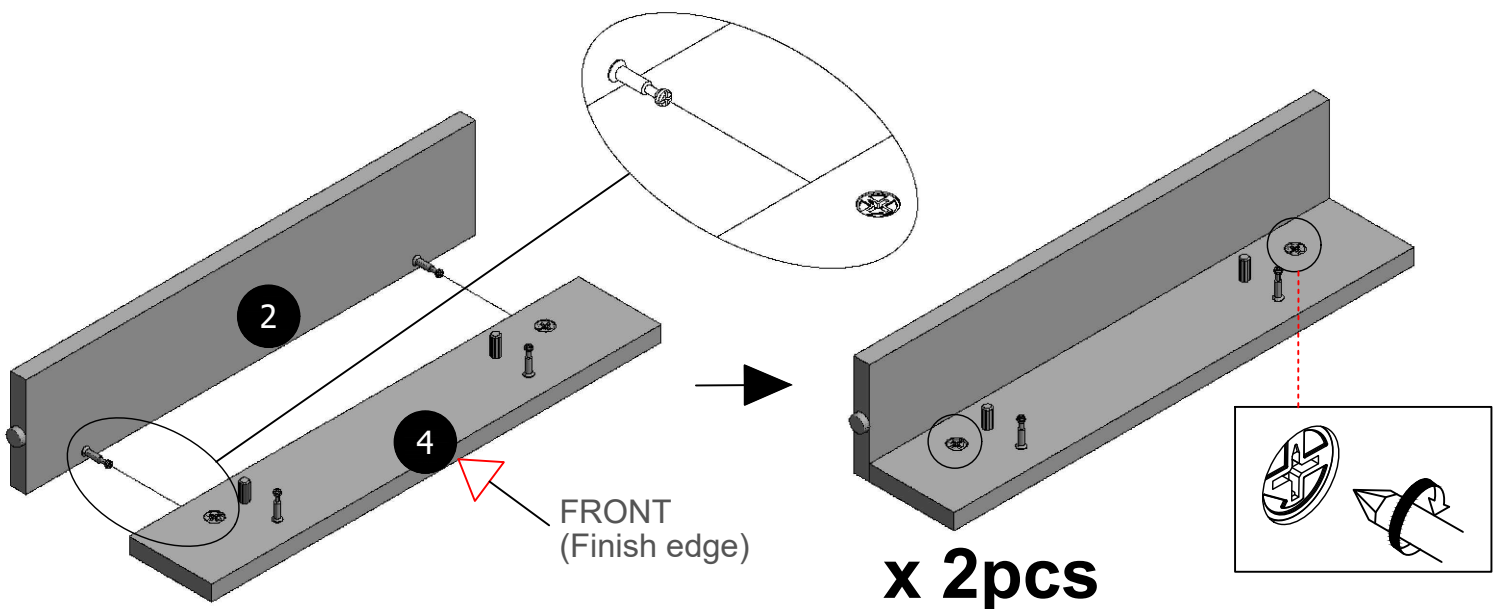


10036 CT ASSEMBLY INSTRUCTION

STEP 10



Align (H) & (I) on the hole mark . Then, screw in 8pcs (E) to secure (H) & (I) as shown.

		
H x 1	I x 1	E x 8

STEP 10.1

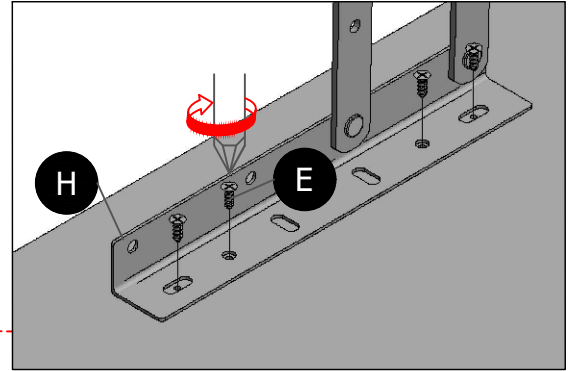


STEP 10.2

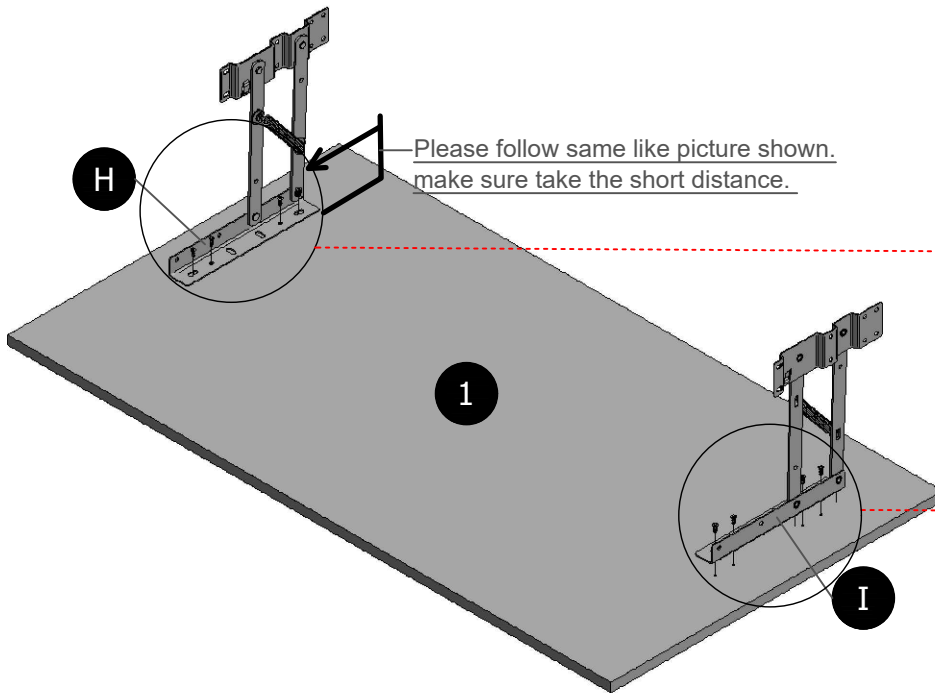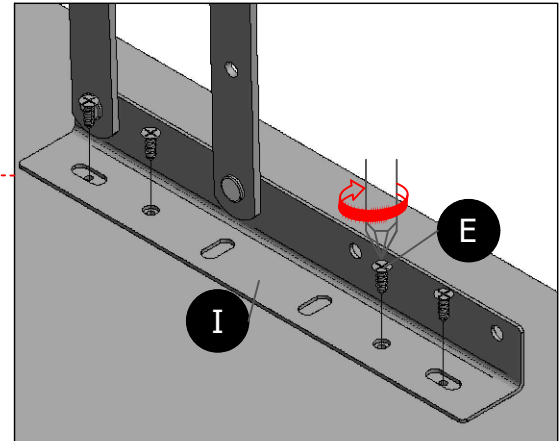

STEP 11


Combine (6) into the (9), then tighten 4pcs (A) as shown .

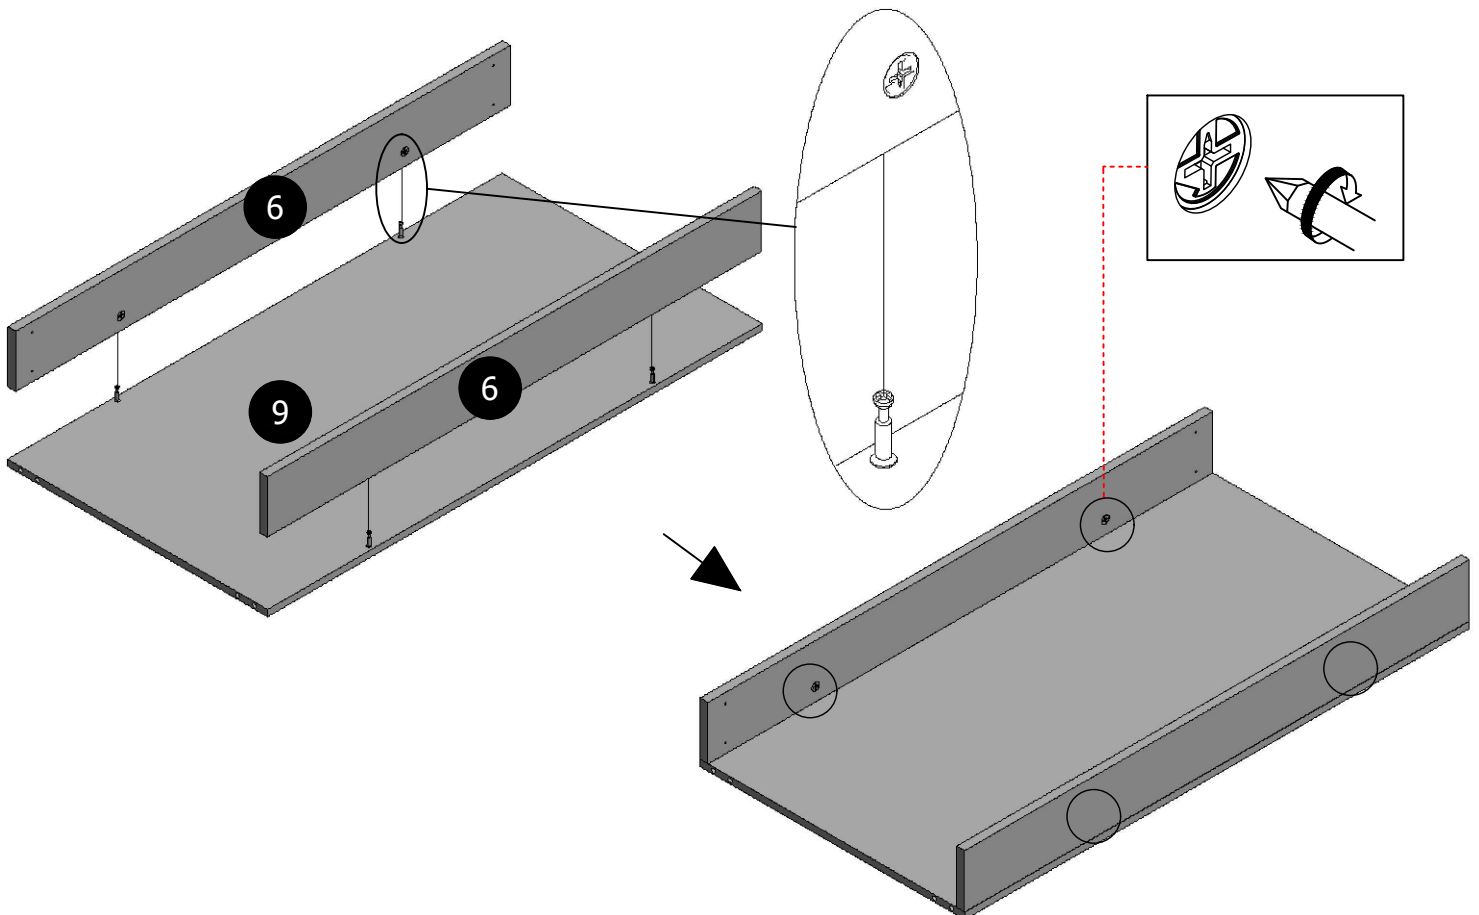

10036 CT ASSEMBLY INSTRUCTION


STEP 12

Combine (9) into the (4) & (5), then tighten 2pcs (A) as shown .

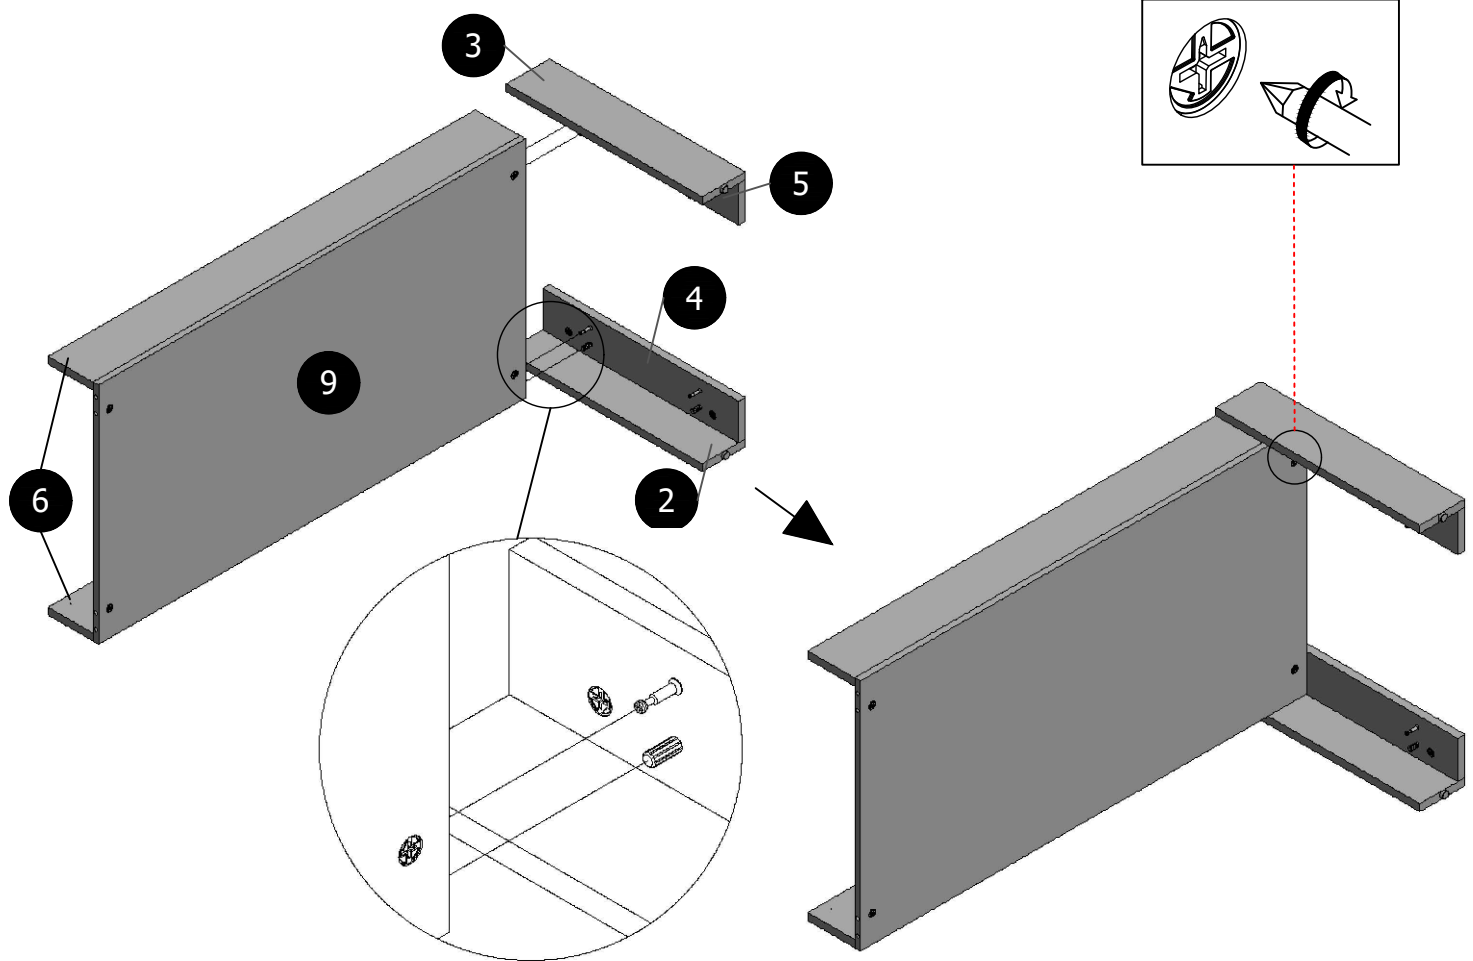

STEP 13


Combine (10) into the (4) & (5), then tighten 2pcs (A) as shown.

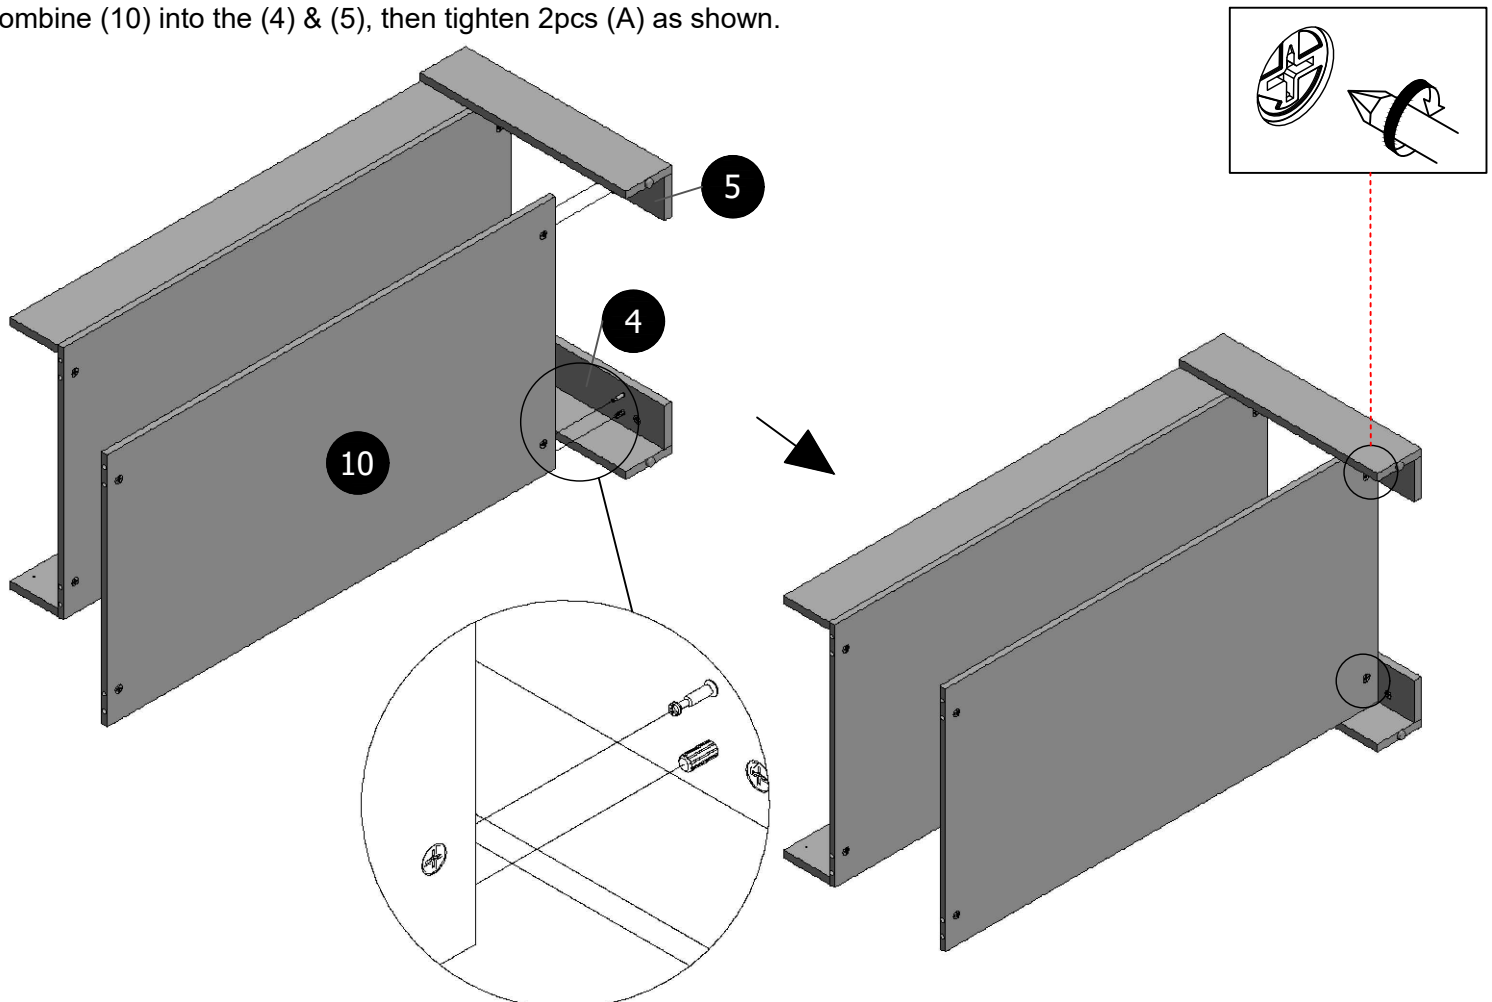

10036 CT ASSEMBLY INSTRUCTION

STEP 14



Combine (5) & (4) into the (9) & (10), then tighten 4pcs (A) as shown .

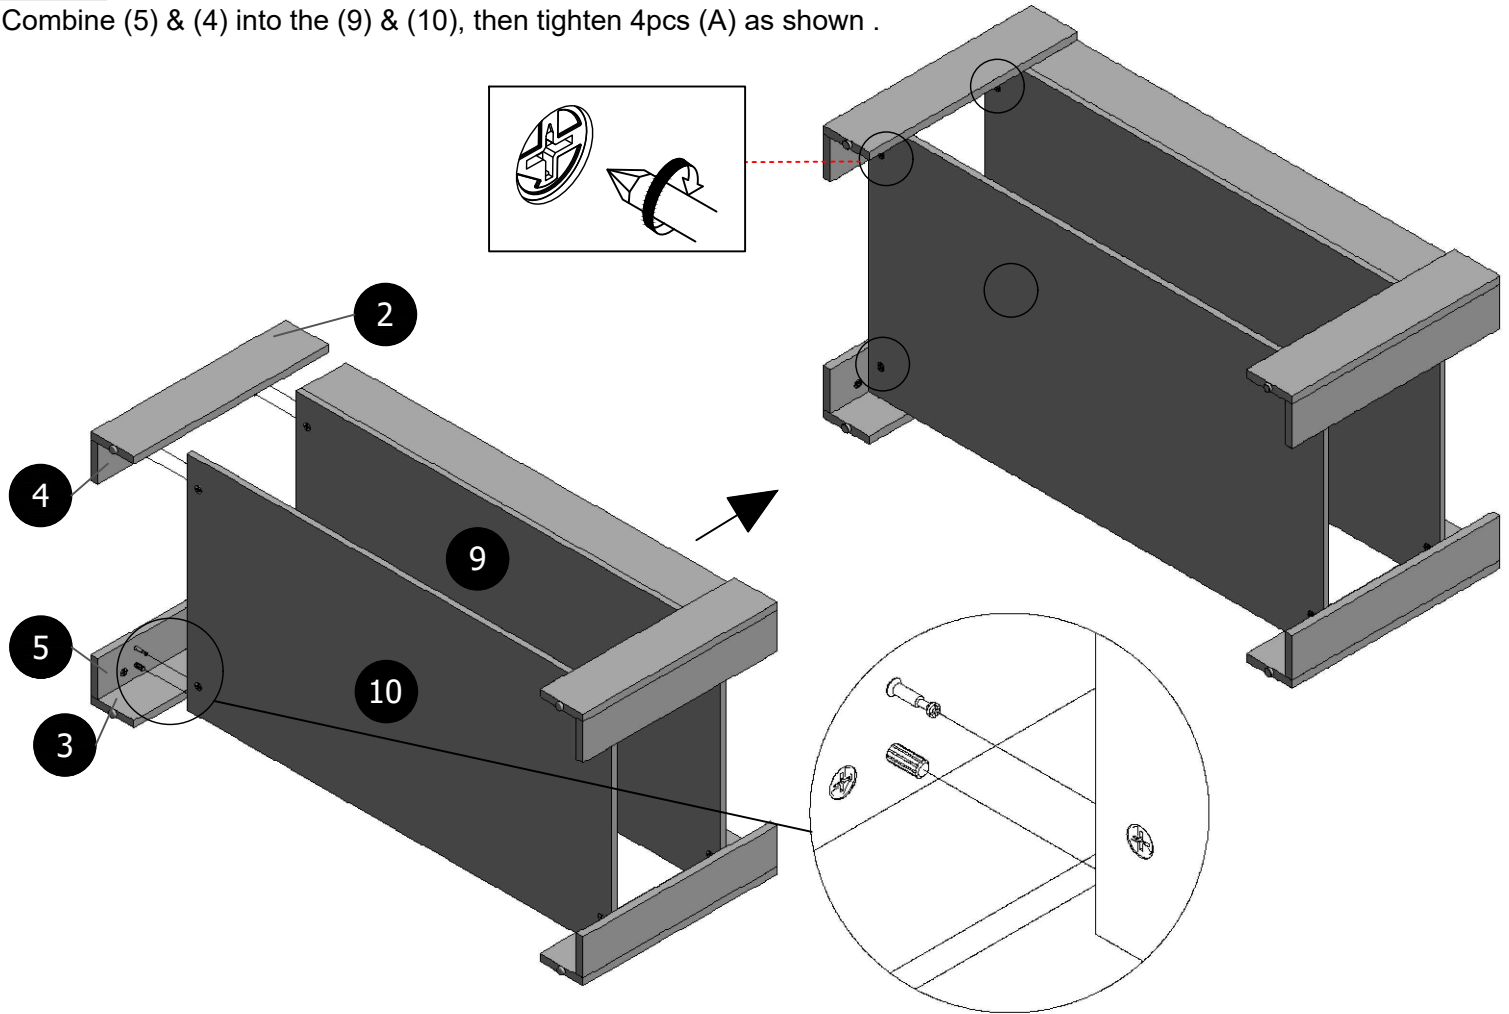

STEP 15

Screw in 8pcs (K) to secure (6) as shown.

This line should stand in an angle 90° degree when screw in.

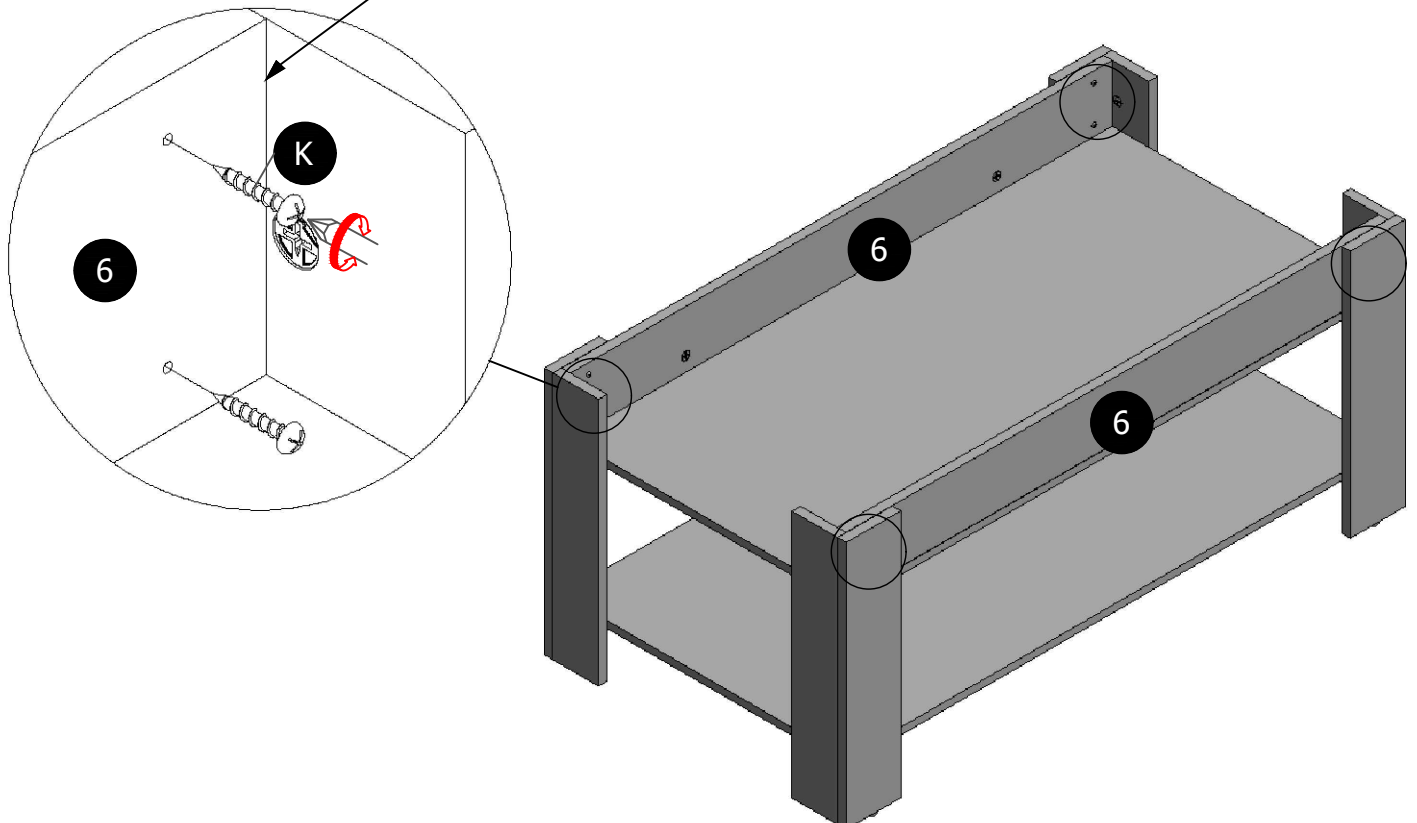

STEP 16
Insert the (7) & (8) to the frame as shown, then screw in 8pcs (K) to secure it.

(TOP)
Finished edge

7 & 8

K

This line should stand in an angle 90° degree when screw in.

K x 8

STEP 17.1
LEFT

STEP 17.2
RIGHT


SIDE VIEW

****This step require additional support from a second person.**


10036 CT ASSEMBLY INSTRUCTION

STEP 18



Use both hands when opening and closing the table top.

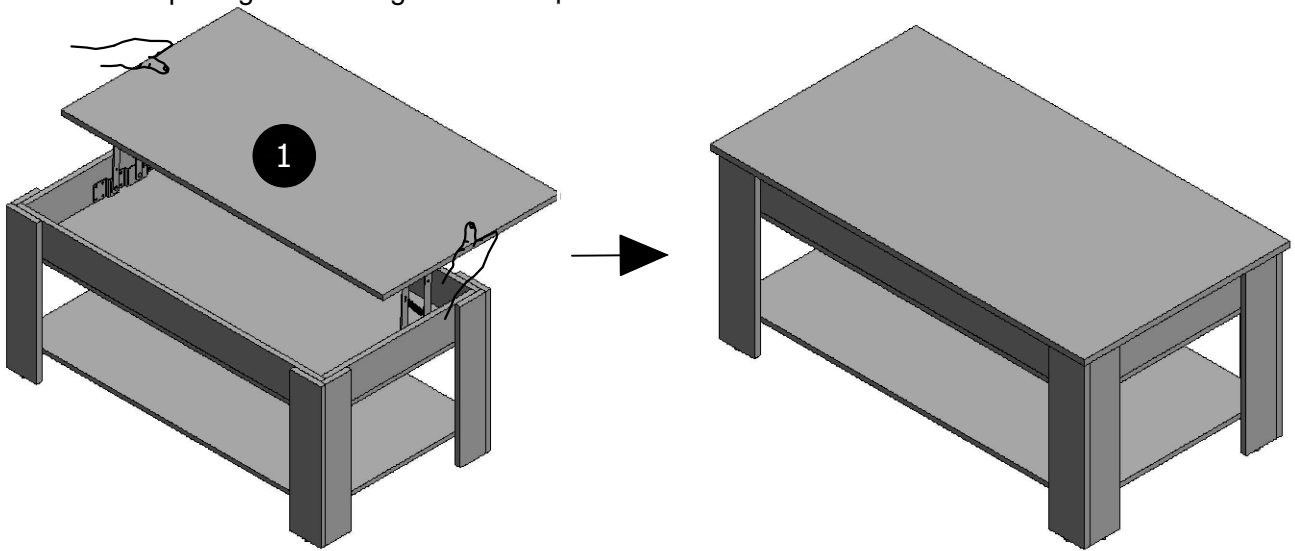

STEP 19

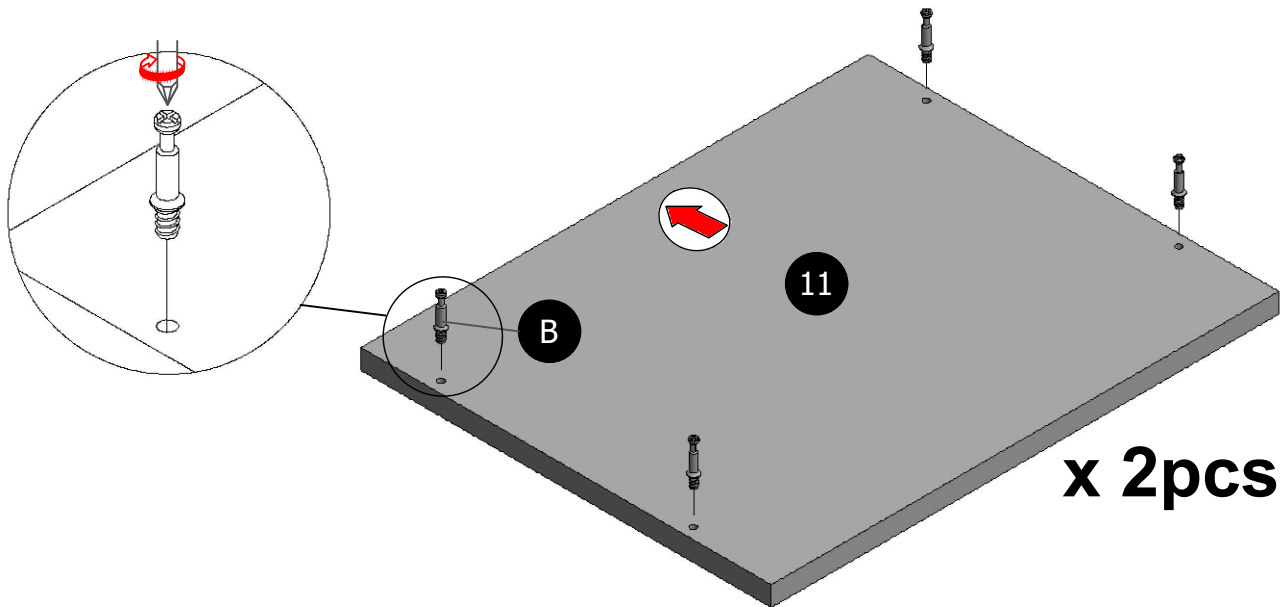


STEP 20

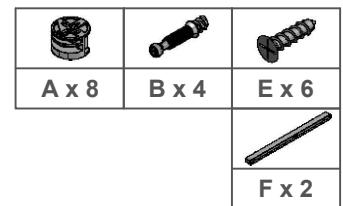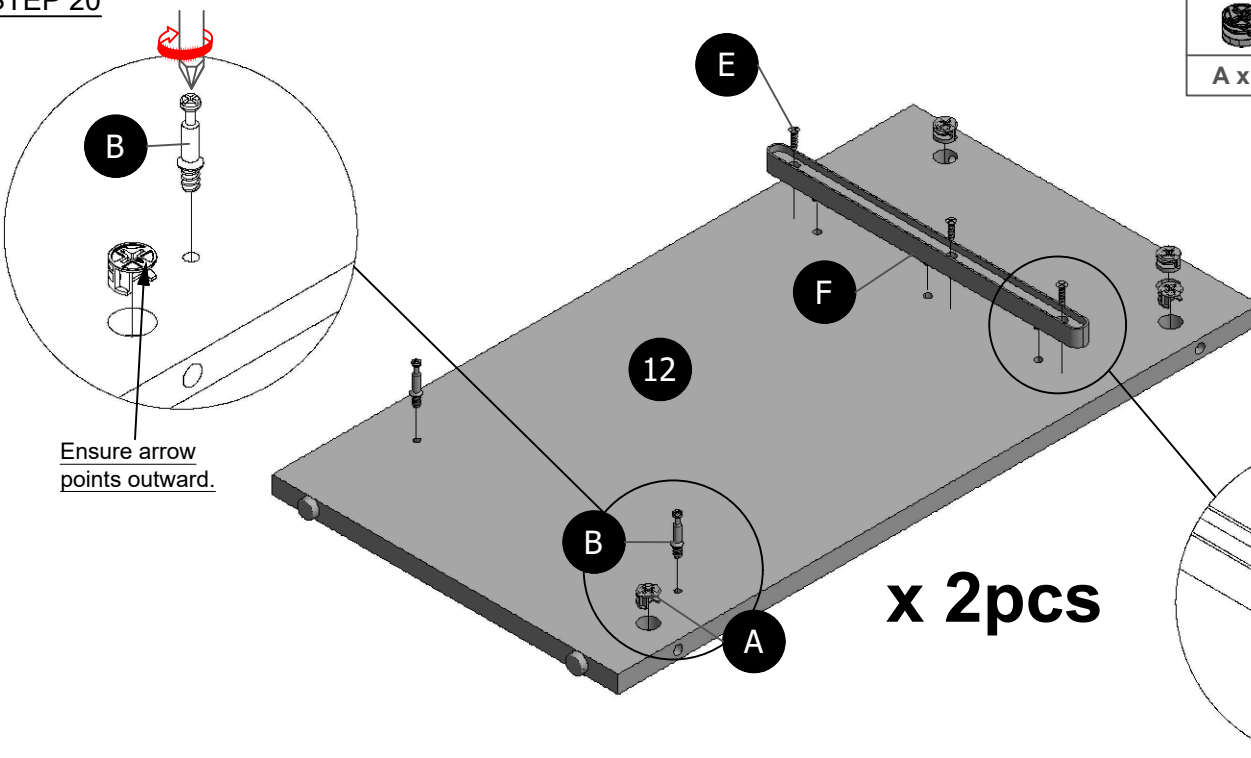


Ensure arrow points outward.

10036 CT ASSEMBLY INSTRUCTION


STEP 21

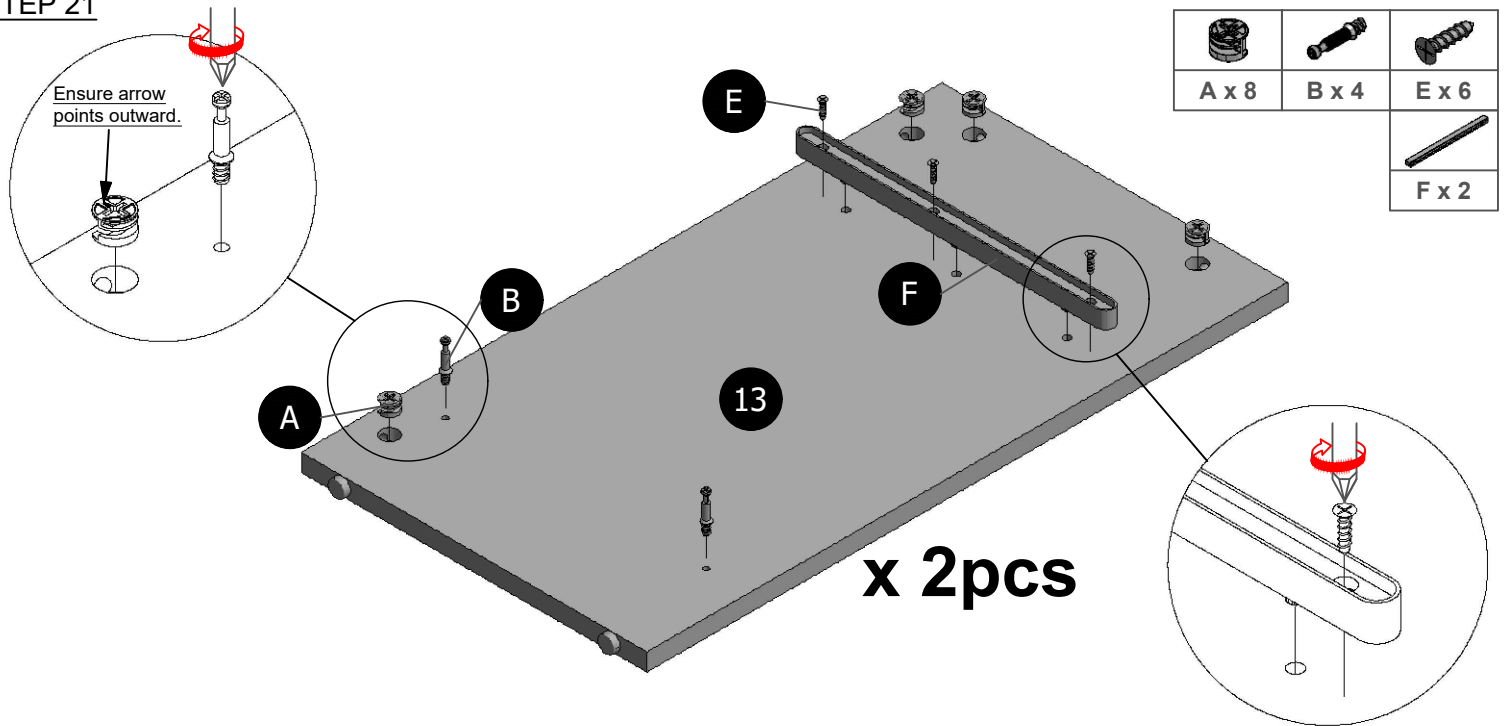

STEP 22

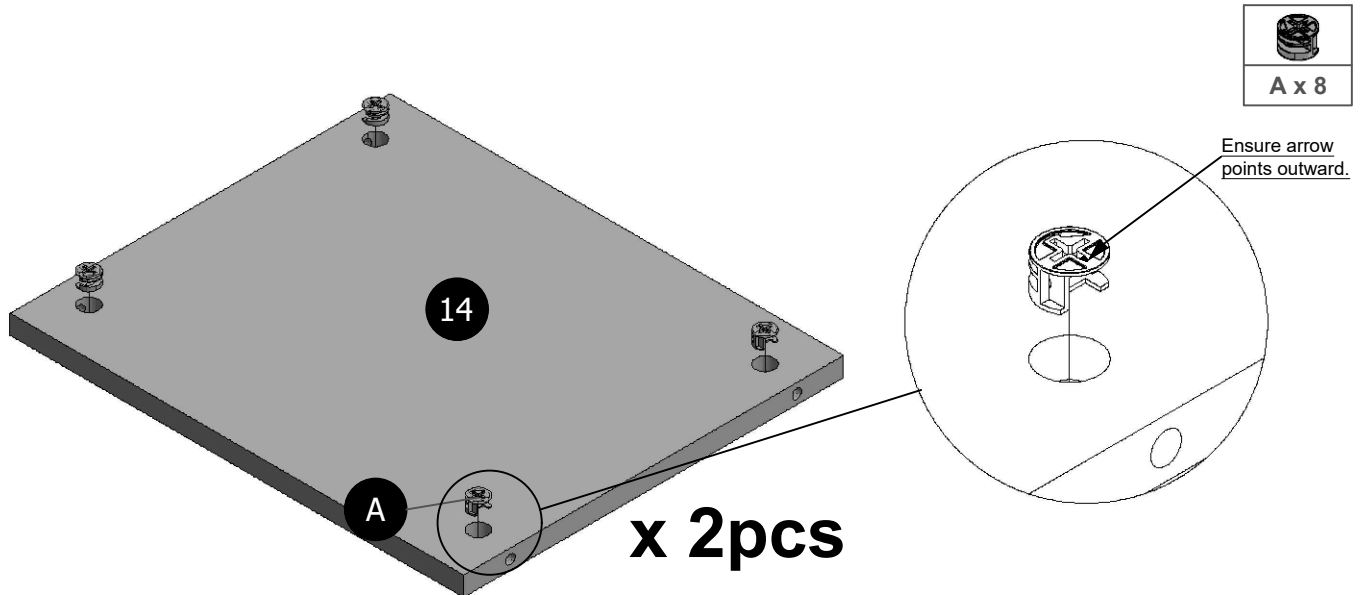


STEP 23

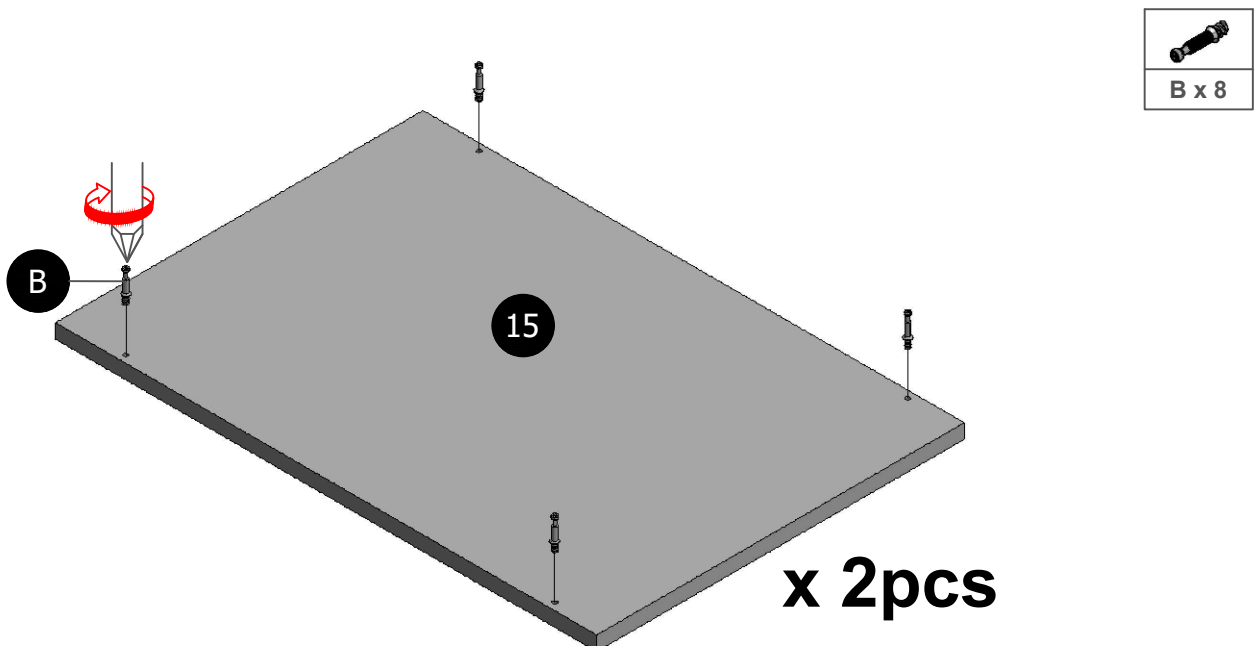

10036 CT ASSEMBLY INSTRUCTION


STEP 24

Combine (14) into the (12) , then tighten 2pcs (A) as shown.

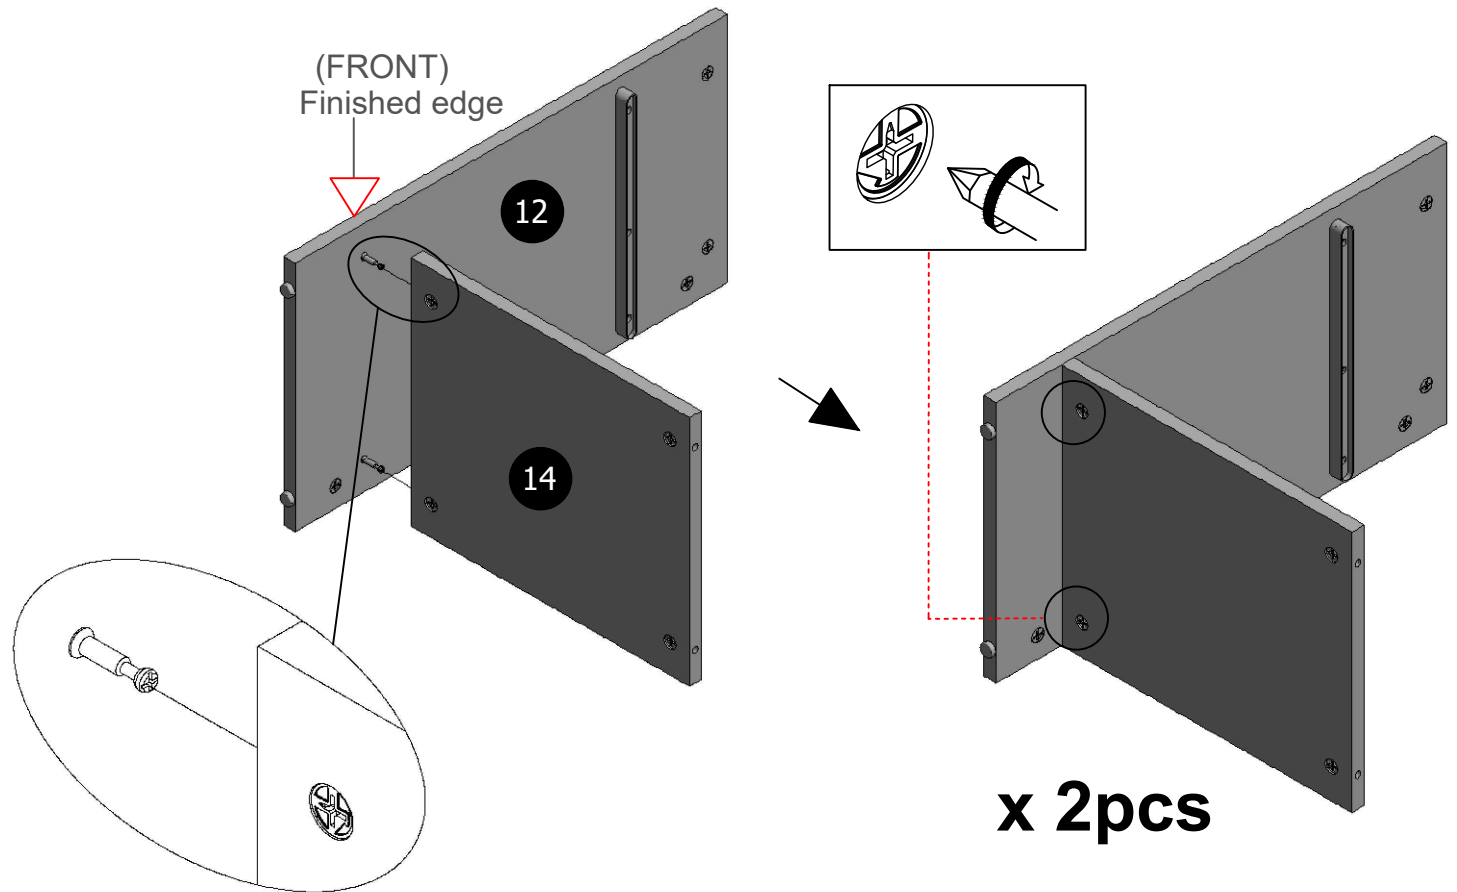

STEP 25


Combine (13) into the (14) , then tighten 2pcs (A) as shown.

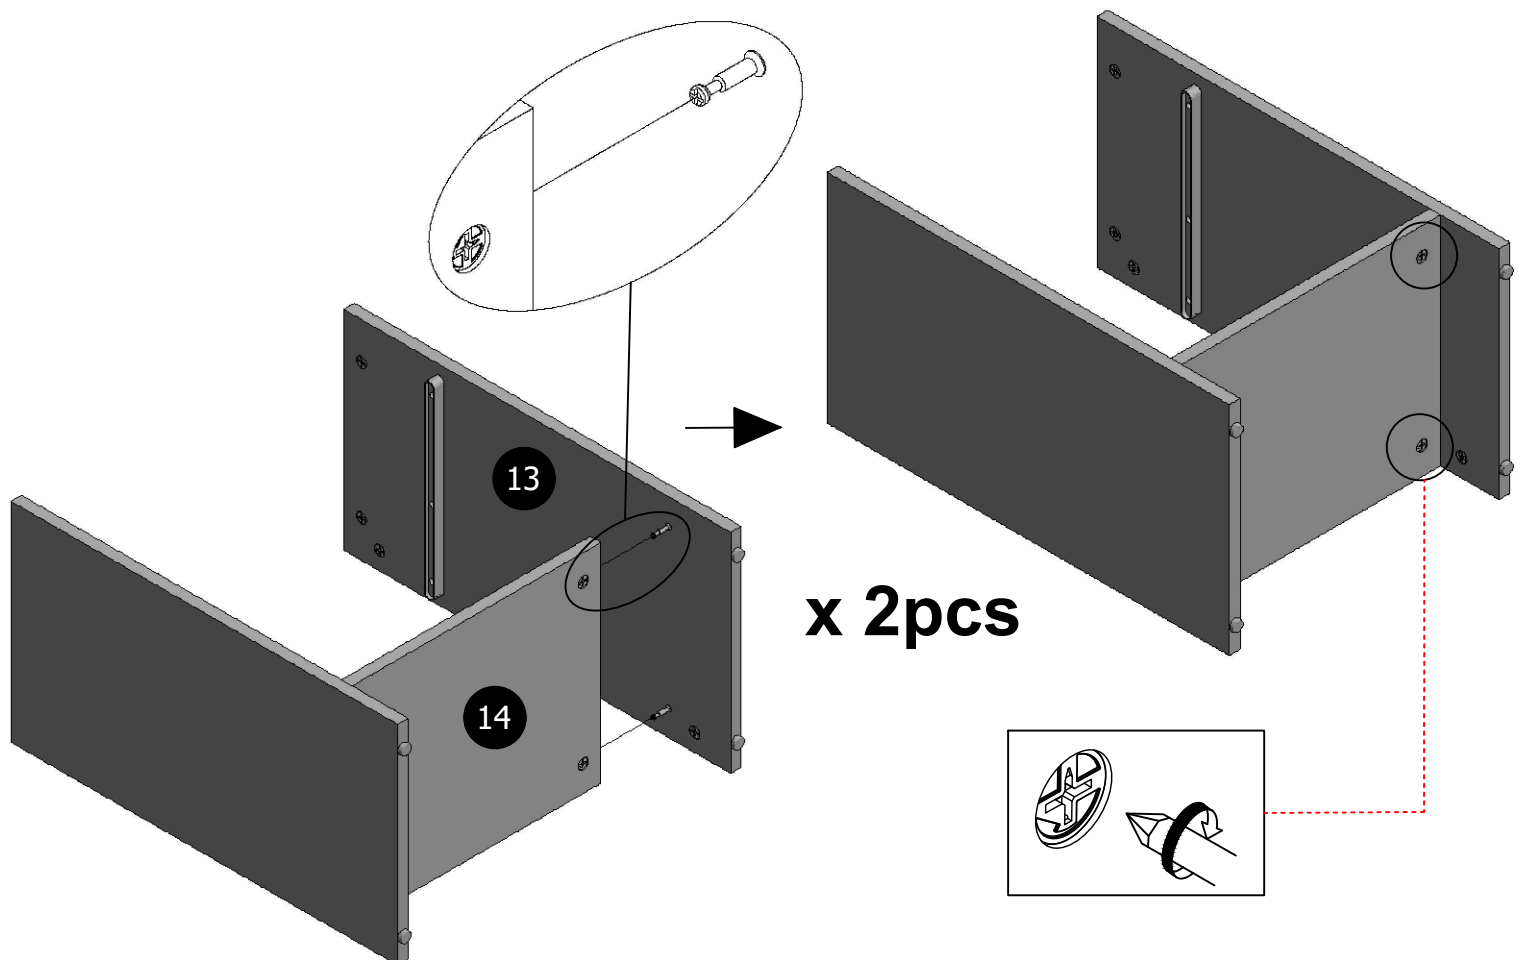

10036 CT ASSEMBLY INSTRUCTION


STEP 26

Combine (15) into the (12) & (13) , then tighten 4pcs (A) as shown .

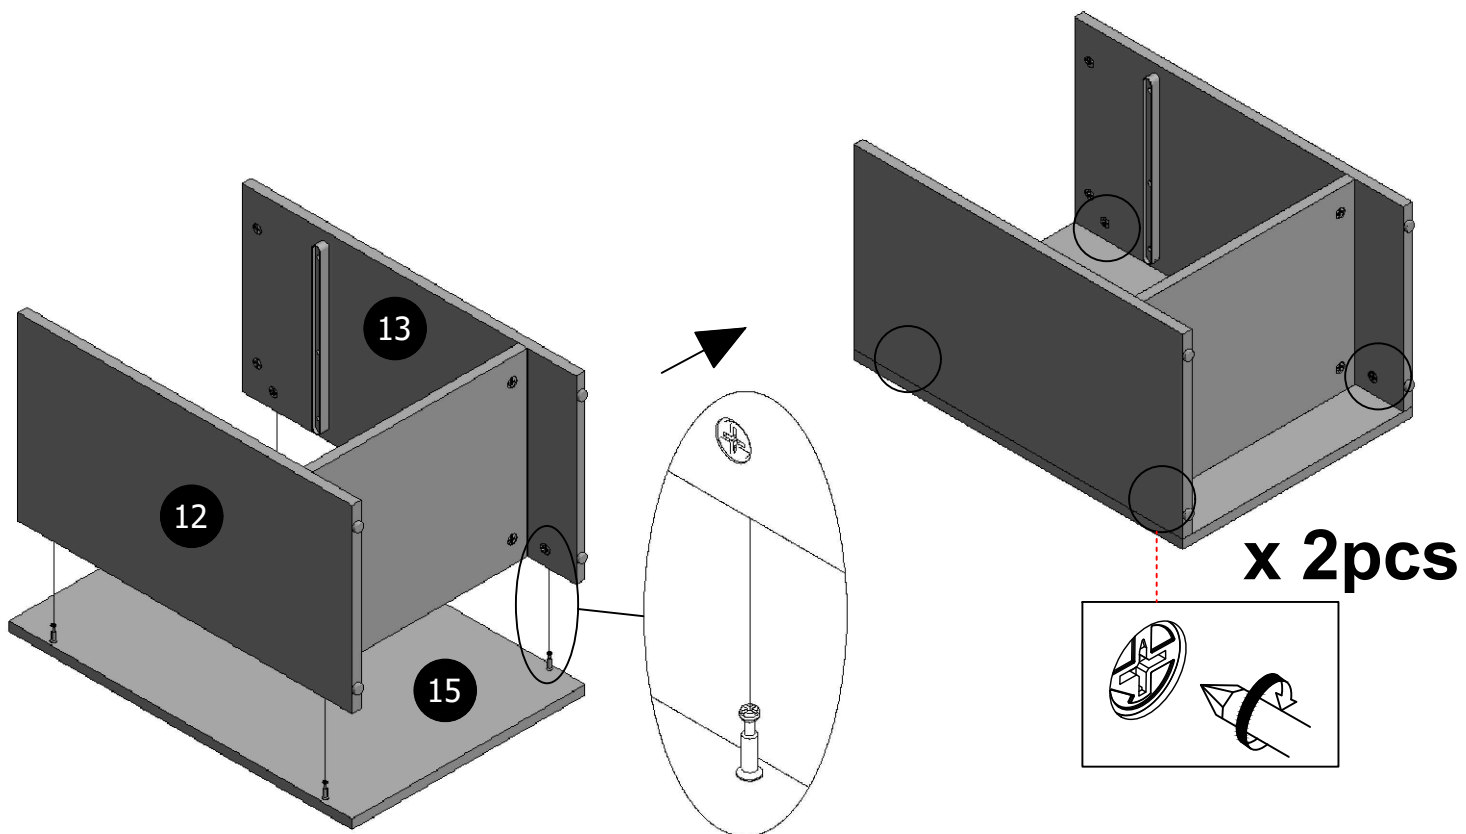


STEP 27

Combine (11) into the (12) & (13), then tighten 4pcs (A) as shown .

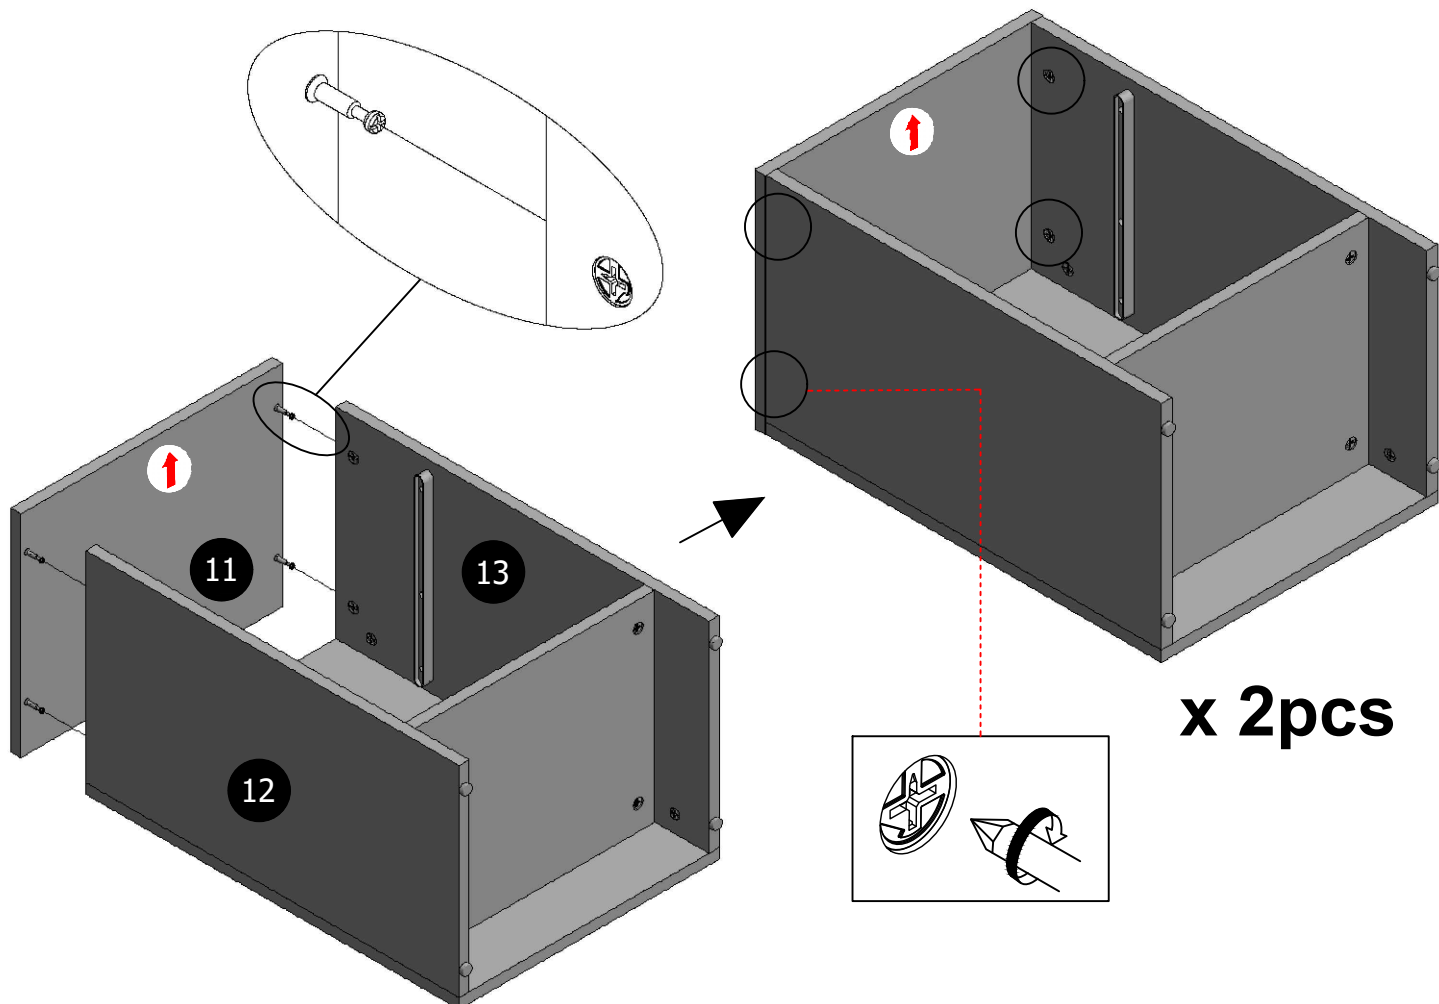



10036 CT ASSEMBLY INSTRUCTION

STEP 28

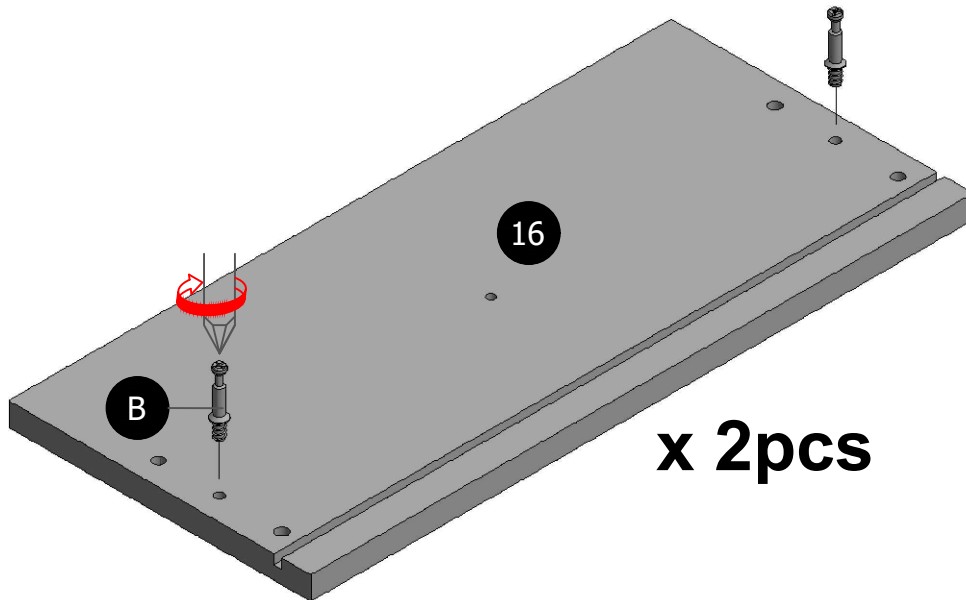



STEP 29

Ensure arrow points outward.

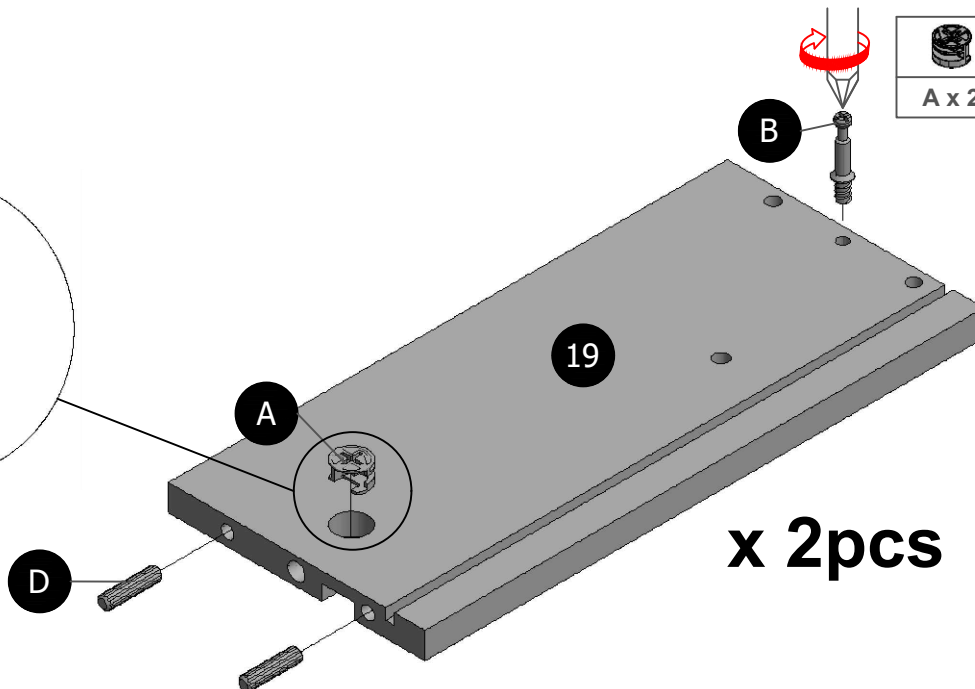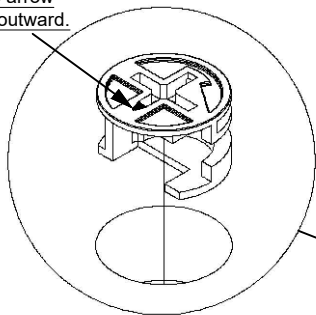

STEP 30


Ensure arrow points outward.

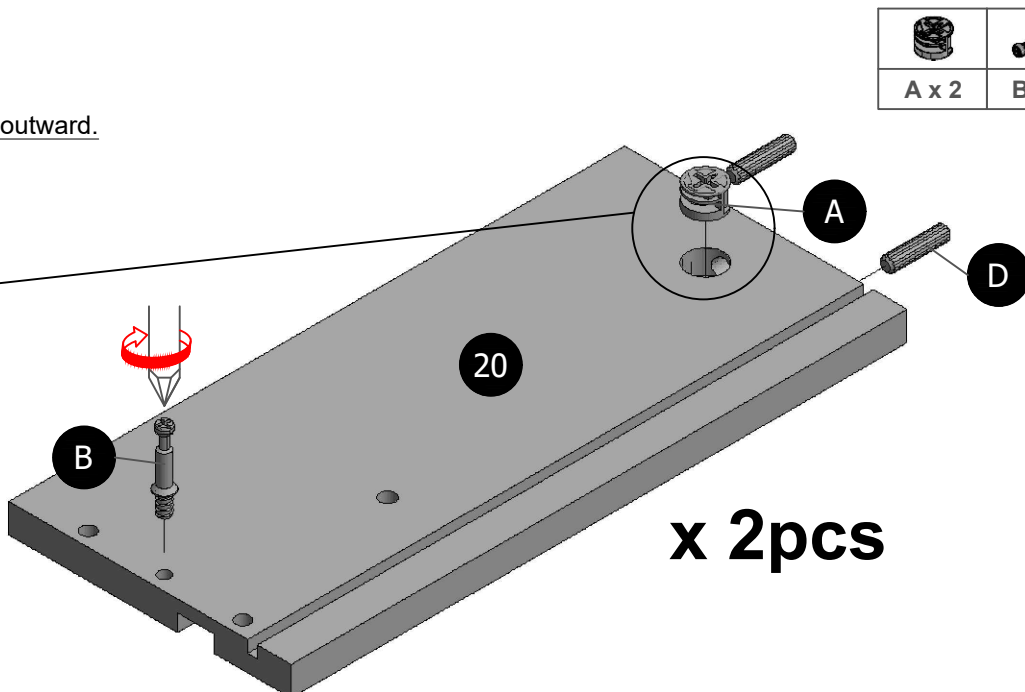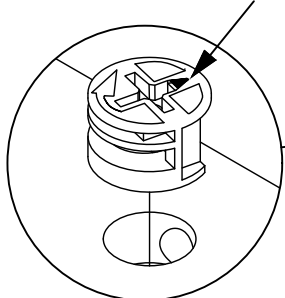

10036 CT ASSEMBLY INSTRUCTION



STEP 34

Combine the (16) into the drawer frame, then tighten 2pcs (A) as shown.

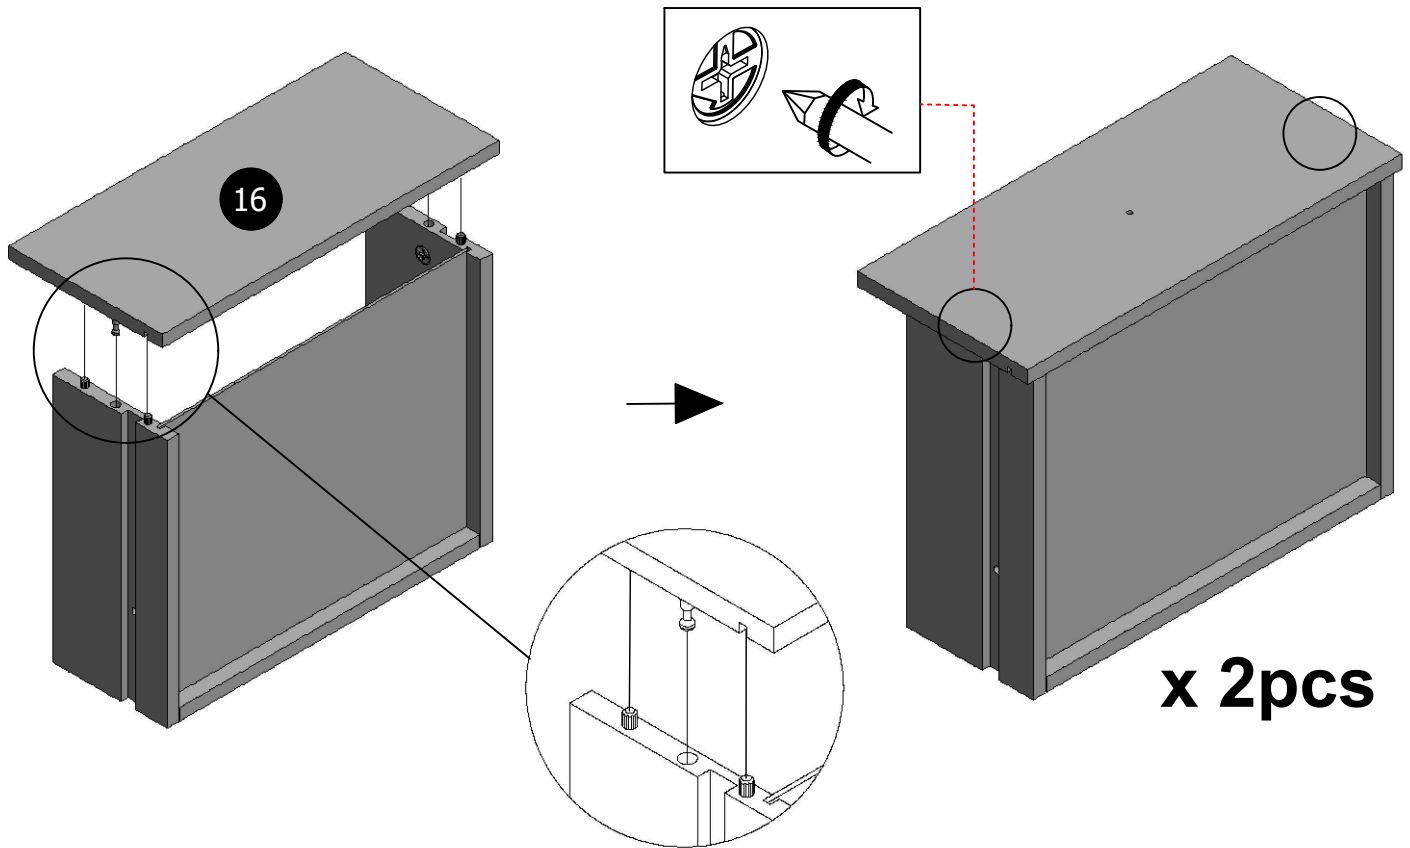

STEP 35


Secure (M) to the drawer head using 1pc (G) as shown.

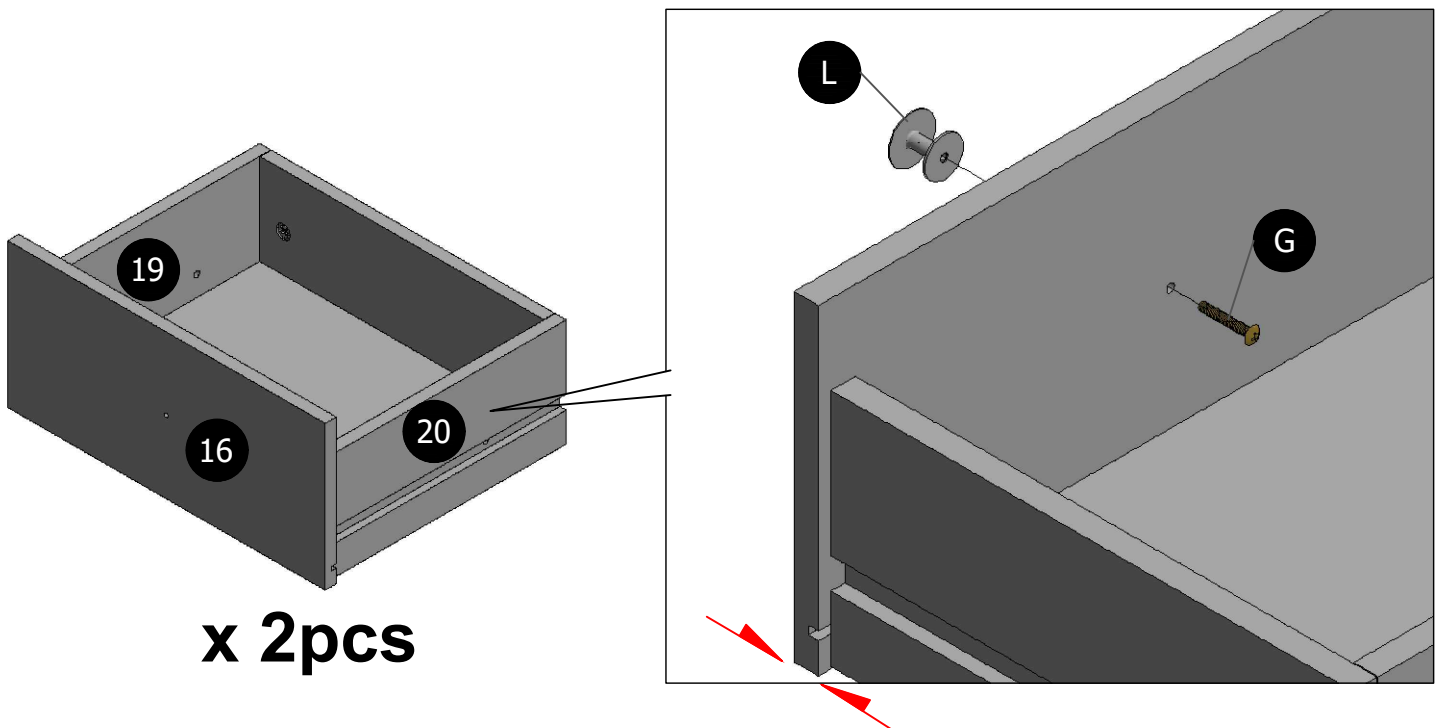


10036 CT ASSEMBLY INSTRUCTION

STEP 36

Align the position then push the drawer to inside exactly by your hand. Then, insert J into (19) & (20) as shown.

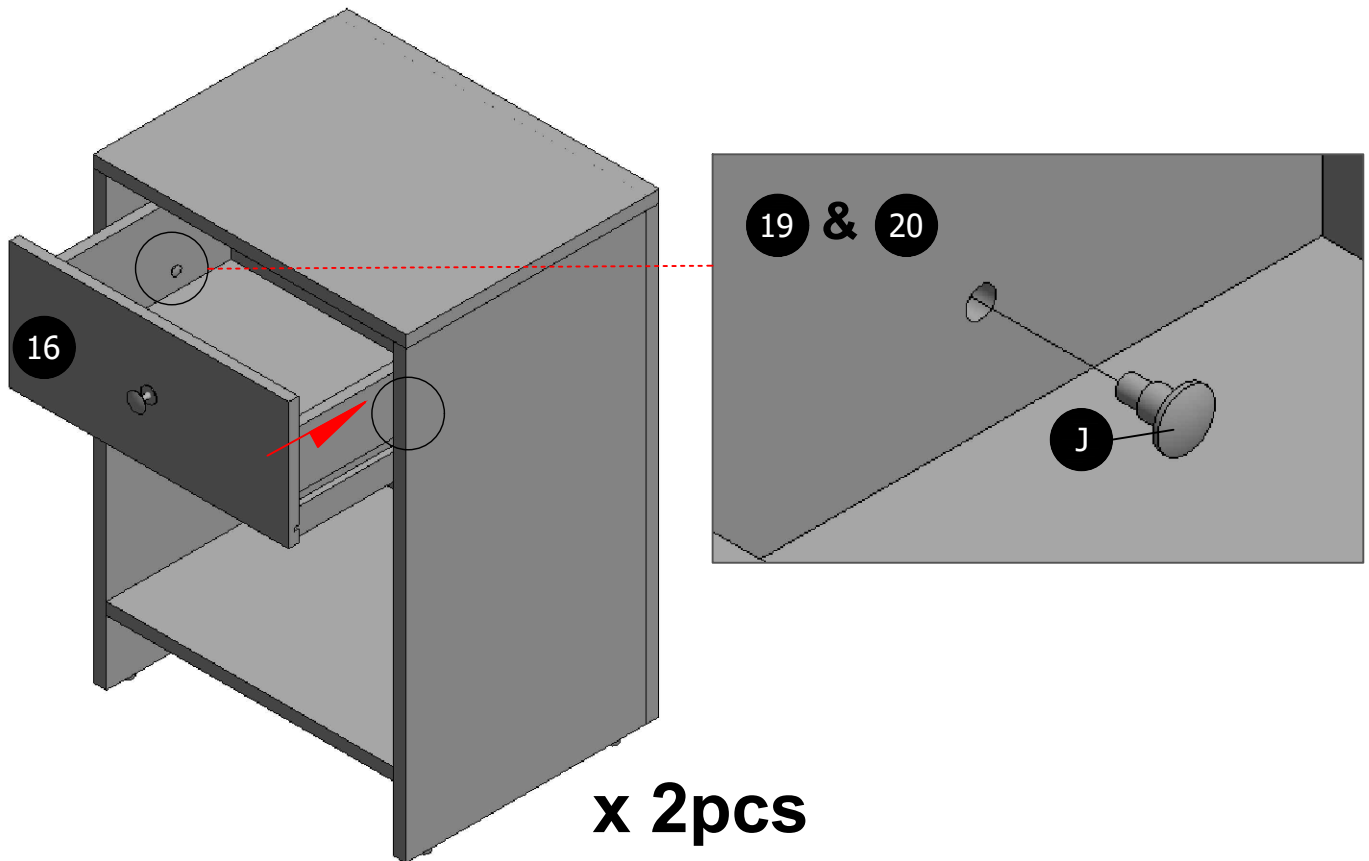

STEP 37

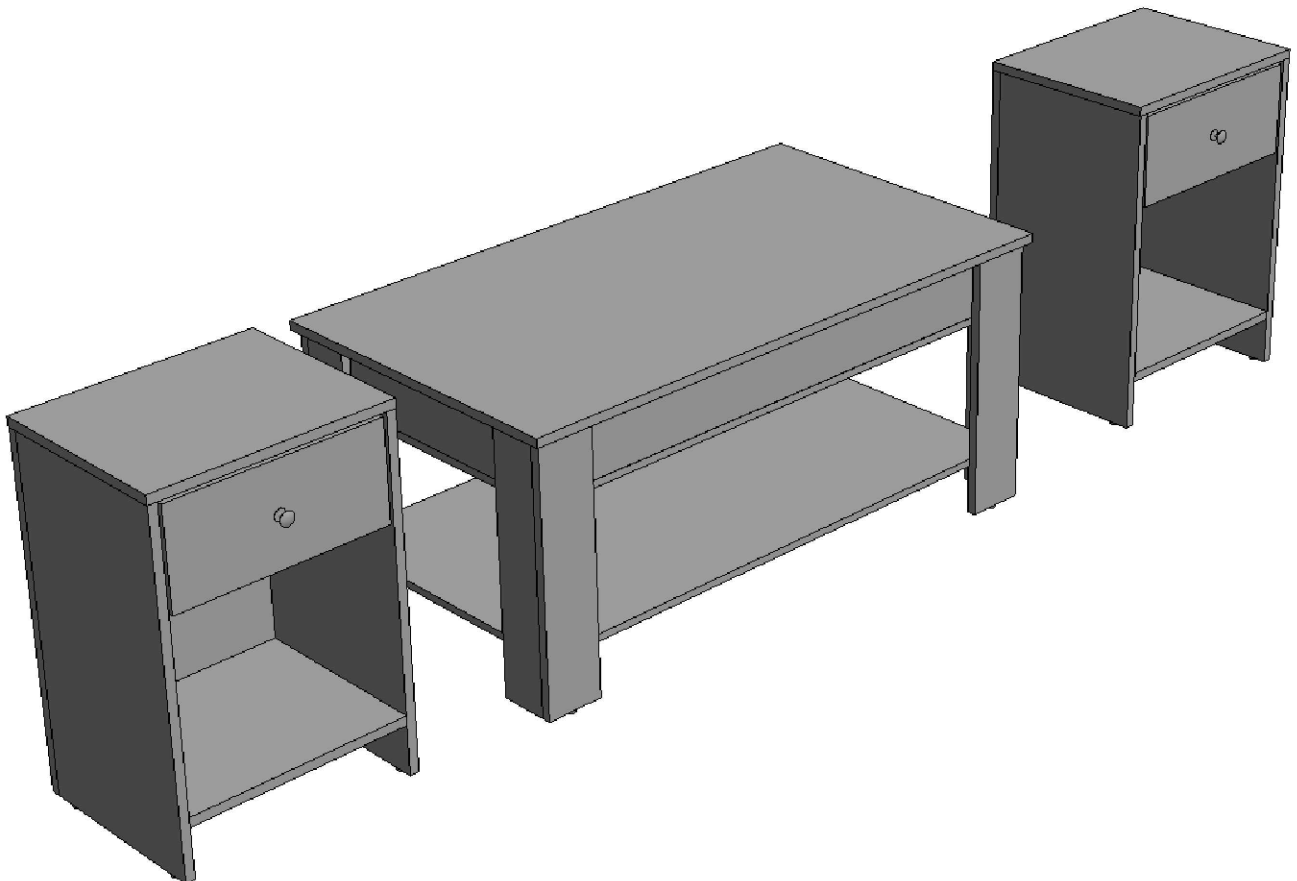

ASSEMBLY COMPLETED