




ASSEMBLY INSTRUCTIONS

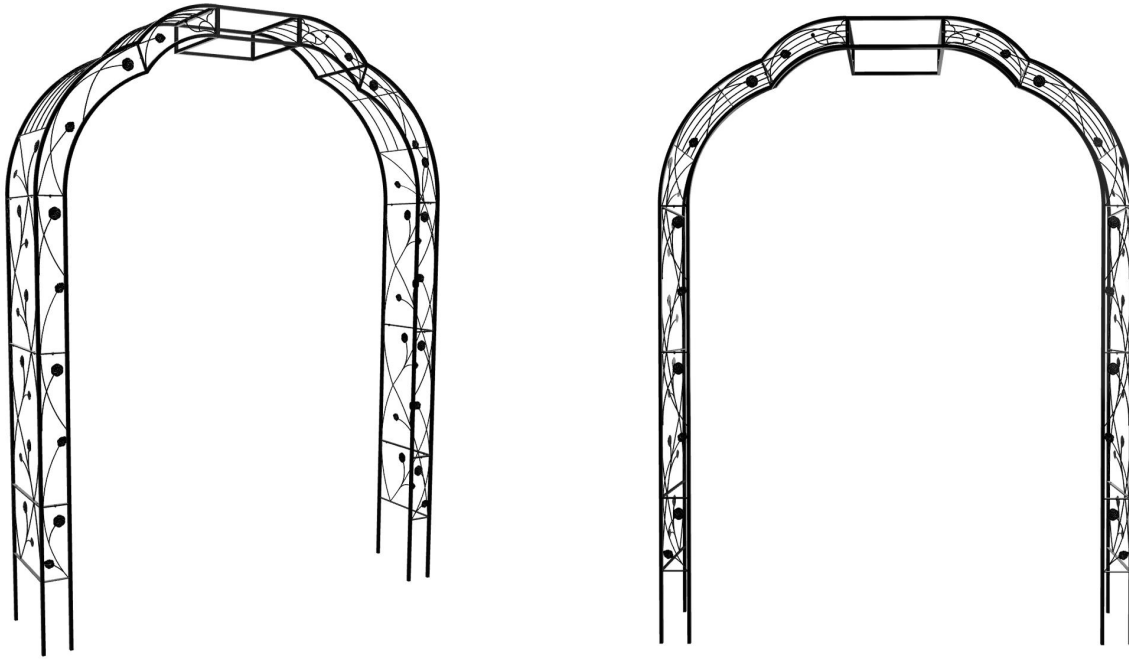

① 1pc	② 1pc	③ 2pcs	④ 1pc
⑤ 1pc	⑥ 1pc	⑦ 2pcs	⑧ 1pc
⑨ 2pcs	⑩ 4pcs	⑪ M6*25mm 6pcs	⑫ M6*20mm 8pcs
⑬ M6*12mm 24pcs			

Step1: Assemble the top.




Parts: ⑨x2, ⑩x4, ⑫x8.

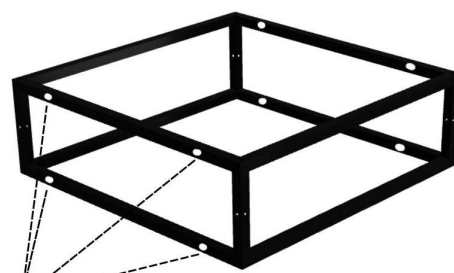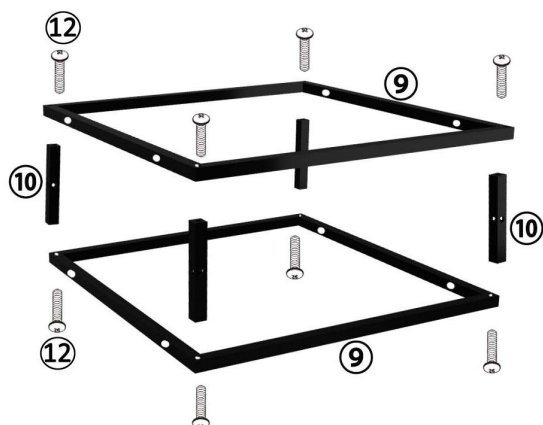

Make sure all four holes are on the same side.




Step2: Assemble the 2 side parts. Place parts ①~⑧ on the ground as shown.

Use ⑬x24.

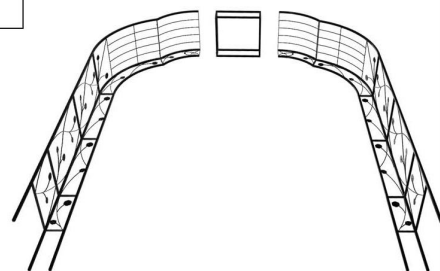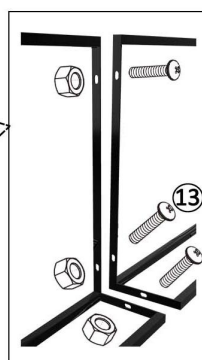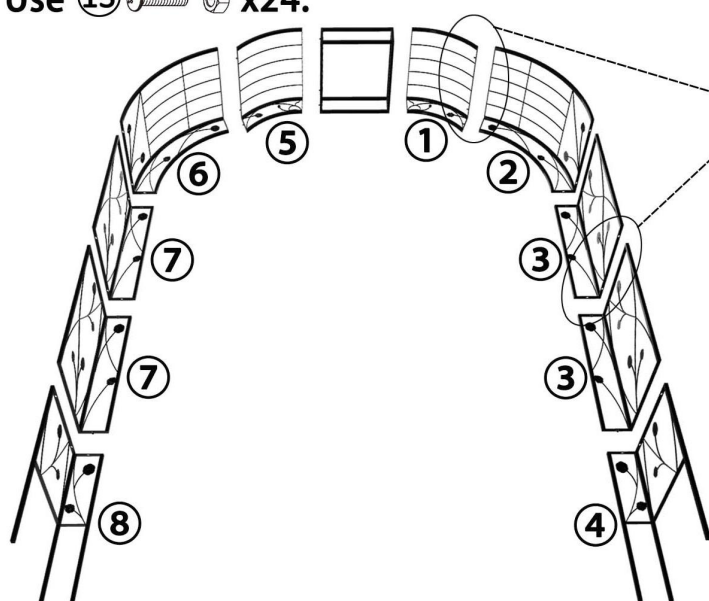

Step3: Connect the 2 parts with the top.

Use ⑫x6.

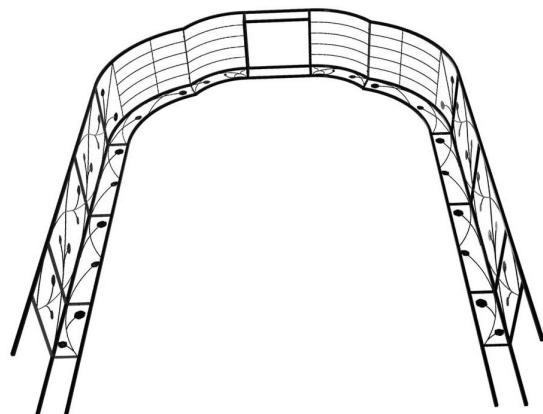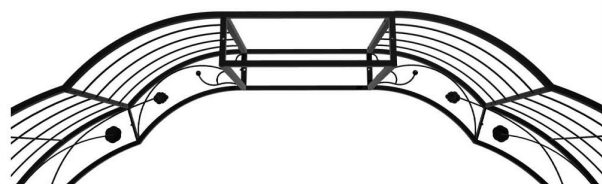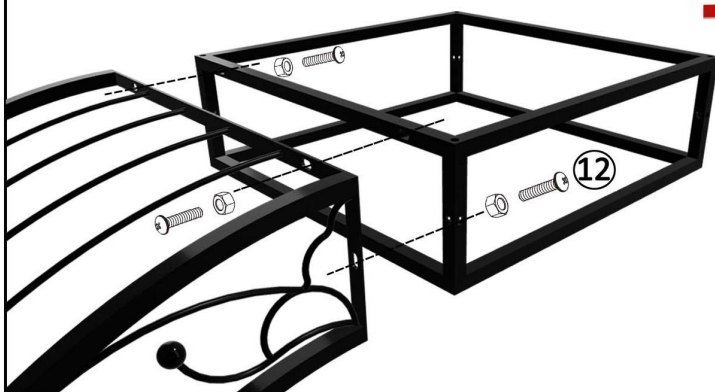

Before setting up the arch, all the screws must be 100% tightened with wrench and screwdriver.