


CARE AND MAINTENANCE

Spot clean using a mild water-free solvent. Only a professional cleaner should undertake a complete overall cleaning.
The use of steam or water-based cleaners may cause excessive shrinking or staining.

NOTICE

- * Please make sure that you have all parts indicated before you begin assembly of this item
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly
- * This item may require periodic tightening

Part List and Hardware List

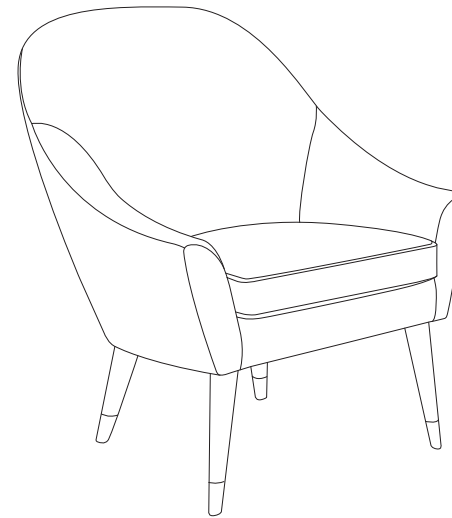
PIECE	DESCRIPTION	PICTURE	QUANTITY
A	SEAT		1X
B	FRONT LEGS		2X
C	BACK LEGS		2X
HW1	ALLEN KEY		1X
HW2	SOCKET SCREWS 10 X 1.5 X 60MM		4X
HW3	FLAT WASHER 10MM		4X

SAFAVIEH

COUTURE

SFV7510A / SFV7510B / SFV7510C / SFV7510D

DIMENSIONS: 29"L x 31"D x 35"H



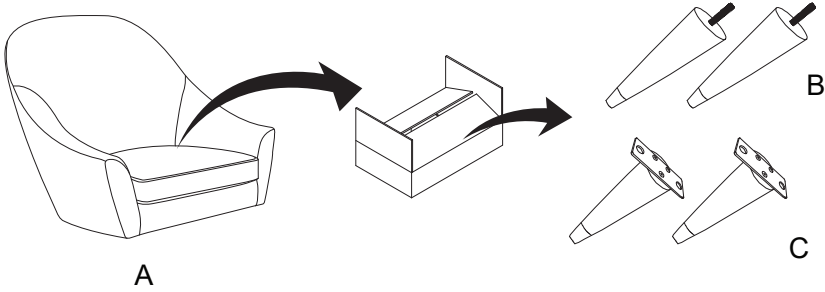
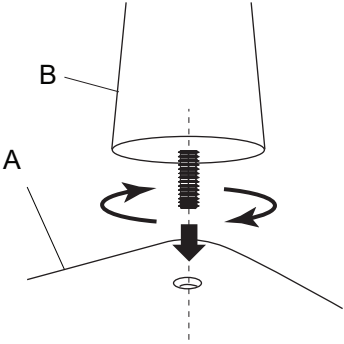
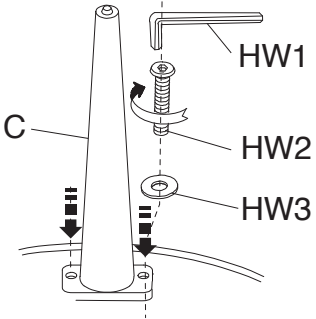
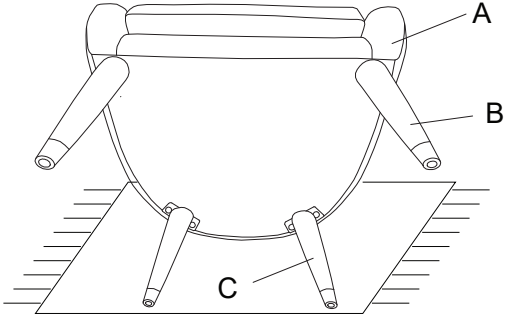
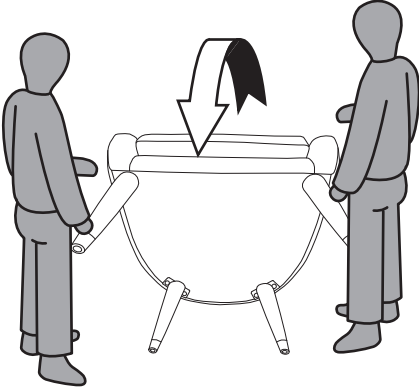
WEIGHT CAPACITY: 250 LBS

WARNING: DO NOT STAND ON CHAIR
WARNING: DO NOT OVER TORQUE
BOLTS/SCREWS

The legs and hardware are located in the carton box.

PREPARATION

Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 15 minutes.
Tools Required for Assembly (included): Allen Key

	<div><div>FRONT LEGS</div></div> <div><div>BACK LEGS</div></div>
STEP1 TAKE OUT LEGS AND HARDWARE FROM THE BOX	STEP2 INSERT THE FRONT LEGS IN CLOCKWISE
	
STEP3 INSERT THE BACK LEGS, PUT THE WASHER ON THE SOCKET SCREW IN THE ORDER SHOWN IN THE PICTURE	STEP4 PUT THE CHAIR UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, THEN FIRMLY TIGHTEN SOCKET SCREW WITH ALLEN KEY WHILE THE CHAIR IS UPRIGHT AS PICTURED ABOVE

The legs and hardware are located in the carton box.