
# Lorin 72"

BATHROOM VANITY SET
SKU: LORIN72WQZ-OAK

Colors/Finishes: OAK
Nominal Dimension:72W*22D*35H inches

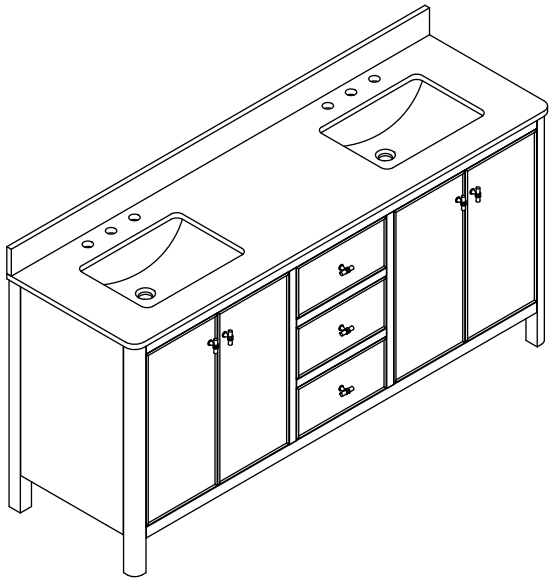

**VANITY FEATURES:**

1.Material: Oak wood frame, high-quality venner plywood.

2.Doors: 4 soft-close doors, Austria BLUM Soft-close hinges system.

3.Drawers: 3 soft-close drawers ,DTC concealed soft-close sliders.

4.Installation Type: Freestanding

5.Built-in Adjusters: Adjustable height levelers

6.Vanity Top: High-quality quartz with two undermount sinks

7.Assemble required: No


8.Vanity top Included: Yes

9.Mirror Included: Optional

10.Medicine Cabinet Included: Optional

**Contents**

72″Vanity……PAGE2
72″Vanity Top……PAGE3
Vanity Installation……PAGE4

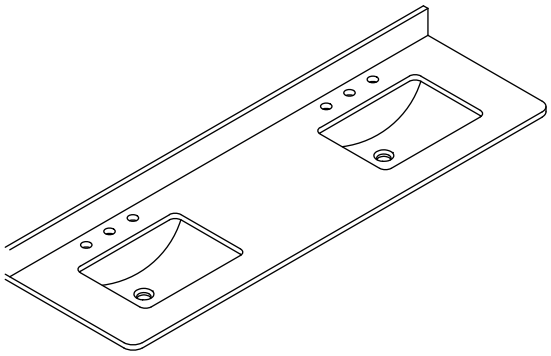

**VANITY TOP FEATURES:**

1.Material: Highly resilient, nonporous, scratch-and stain-resistant quartz.

2.Top Color: white quartz

3.Sink: 2*20”undermount rectangle sink

4.Faucet Holes: Top pre-drilled for 8”widespread faucet holes

5.Sink Certified: CUPC certified

6.Backsplash: 4”backsplash included

7.Faucet Included: No

8.Nominal Dimension(W*D*H): 72W*22D*0.79H inches



All dimensions and specifications are nominal and may vary.Use actual products for accuracy in critical situations.


# Lorin 72"

BATHROOM VANITY SET


SKU: LORIN72WQZ-OAK

## PRODUCT DIAGRAMS:


**Front**

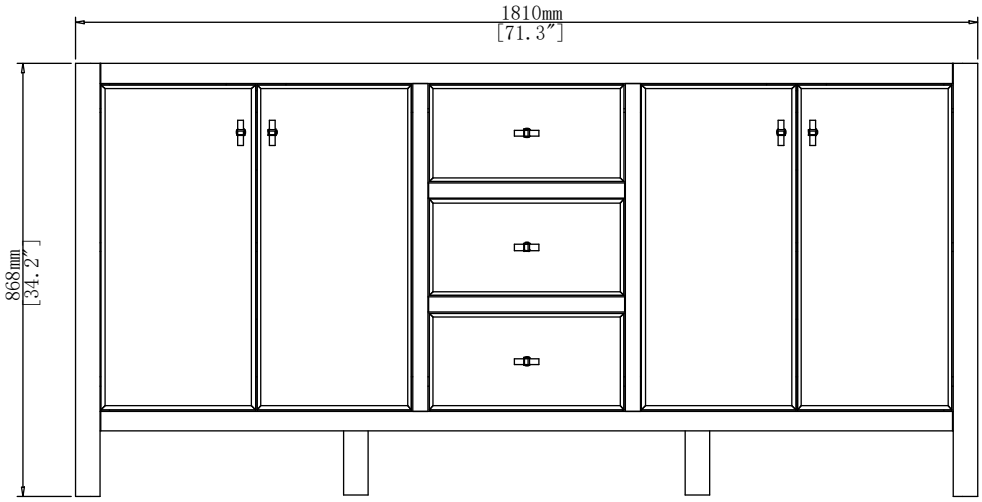



**Back**

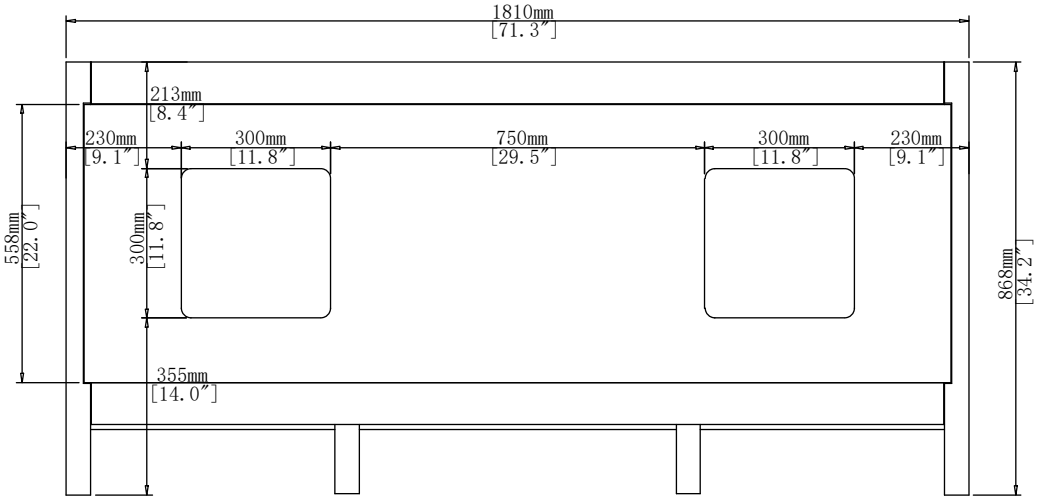


**Top**

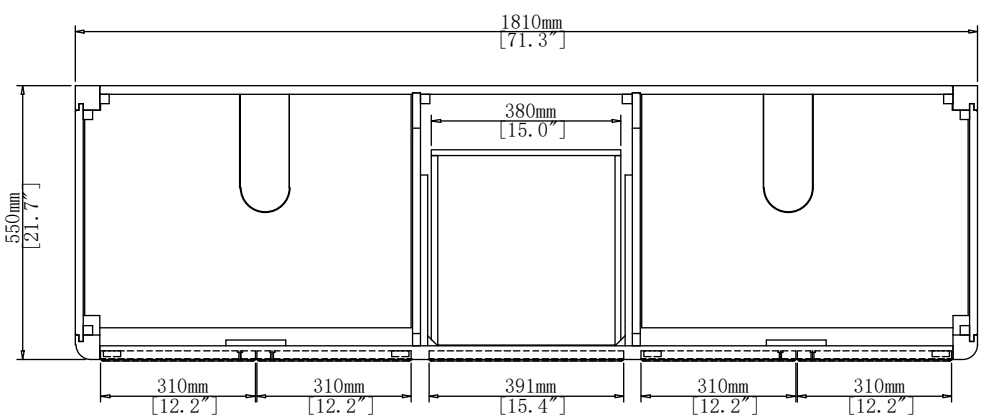


**Side**

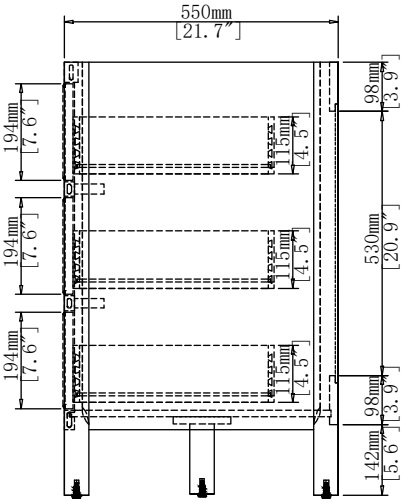





All dimensions and specifications are nominal and may vary.Use actual products for accuracy in critical situations.


# Lorin 72"

## VANITY TOP

***With rectangular undermount sink***

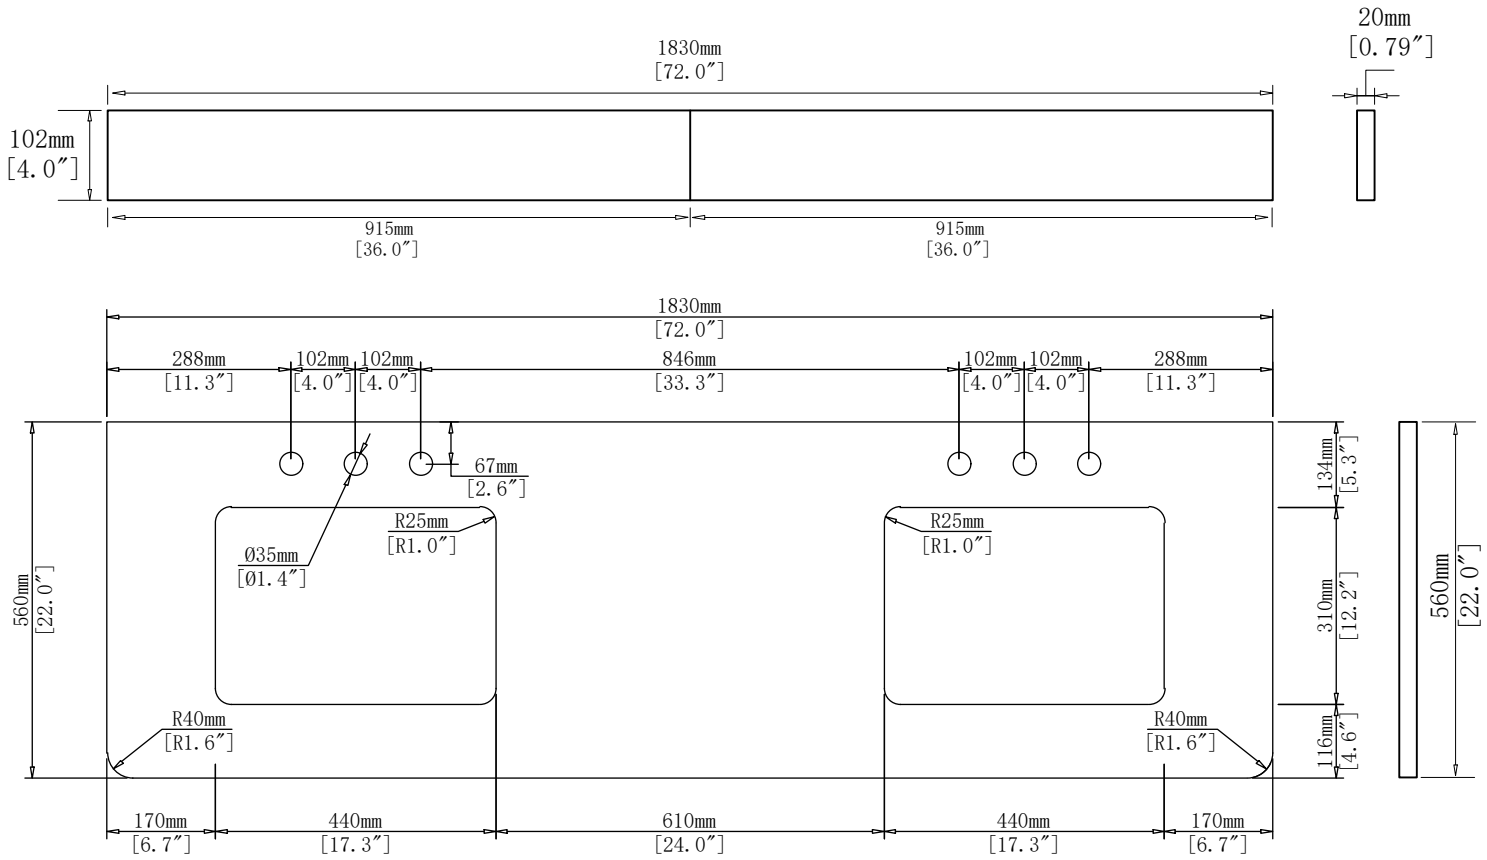


**Undermount Sink**

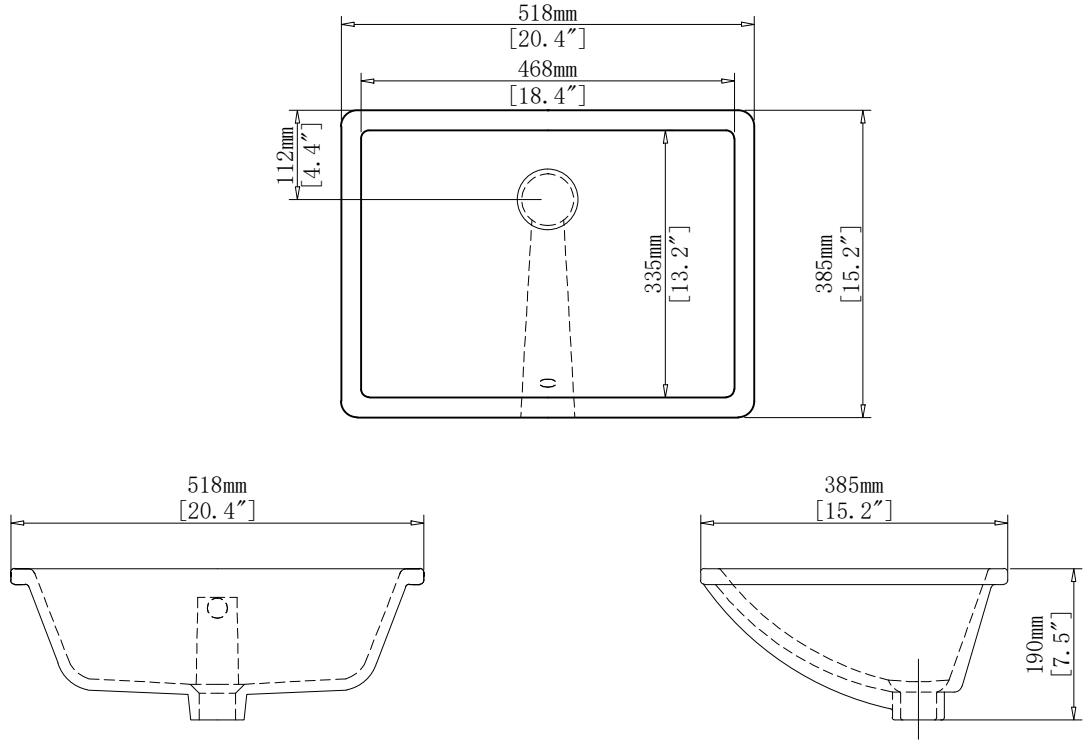





All dimensions and specifications are nominal and may vary.Use actual products for accuracy in critical situations.

# Vanity Installation

## SUGGESTED TOOLS AND MATERIALS:


Sealant


Measuring tape


Safety glasses



Rag


Level

## INSTALLATION INSTRUCTLONS


We recommend consulting a professional if you are unfamiliar with installing bathroom fixtures and plumbing .We accept no liability for any damage to the floor,plumbing,vanity cabinet,sink,counter top,or personal injury during installation.

**1**

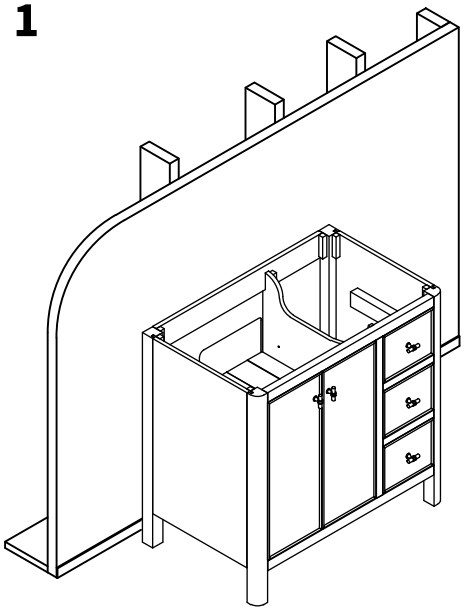


Remove vanity from box and examine vanity for any defects or damage.Carefully place vanity against wall.

**2**

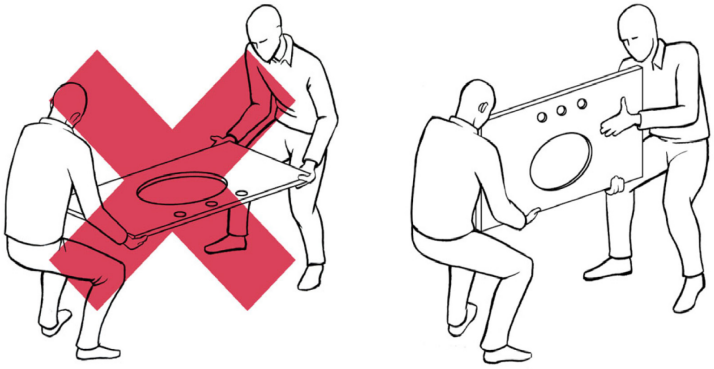


Always use a two man crew,a single person crew is much more likely to break or chip the stone top.

**3**

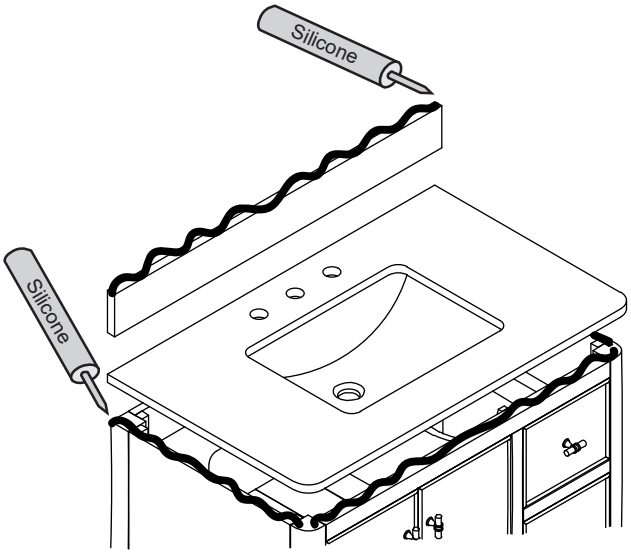


Apply bead of quality sealant evenly along the bottom of backsplash and the top of the vanity.

**4**

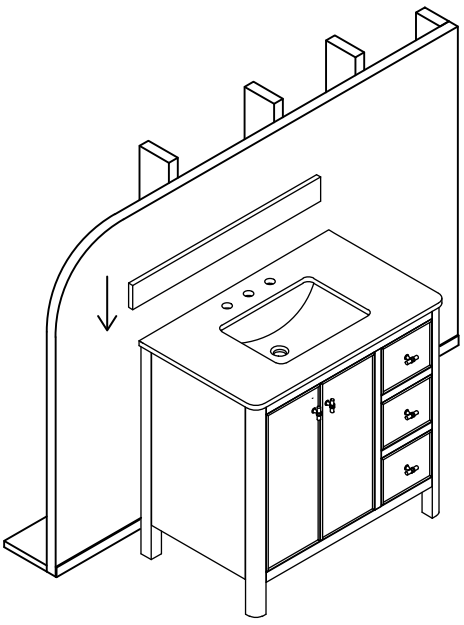

Finally,place the bottom side of back splash with sealant onto the counter top and check alignment of back splash.



*Note:sink style,shape,countertop,vanity may vary from the picture above. Instructional purpose only*