
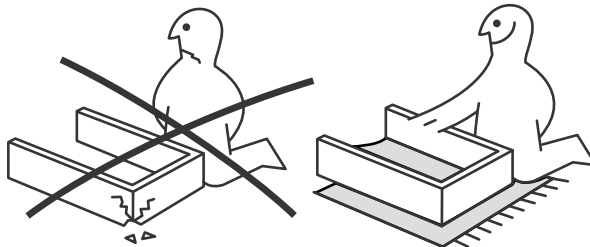
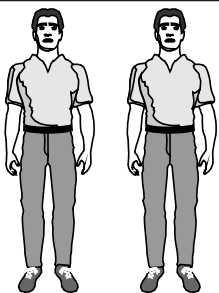


ASSEMBLY GUIDE


URBAN 2-DOOR WARDROBE

Compliant with Federal Law STURDY Act (Stop Tip-overs of Unstable, Risky Dressers on Youth). Passed 16 CFR 1262, ASTM F2057-23 Tests.

SKU 7121D - Raised Panel Doors / SKU 7121M - Mirrored Doors - White
SKU 7125D - Raised Panel Doors / SKU 7125M - Mirrored Doors - Gray
SKU 7127D - Raised Panel Doors / SKU 7127M - Mirrored Doors - Black

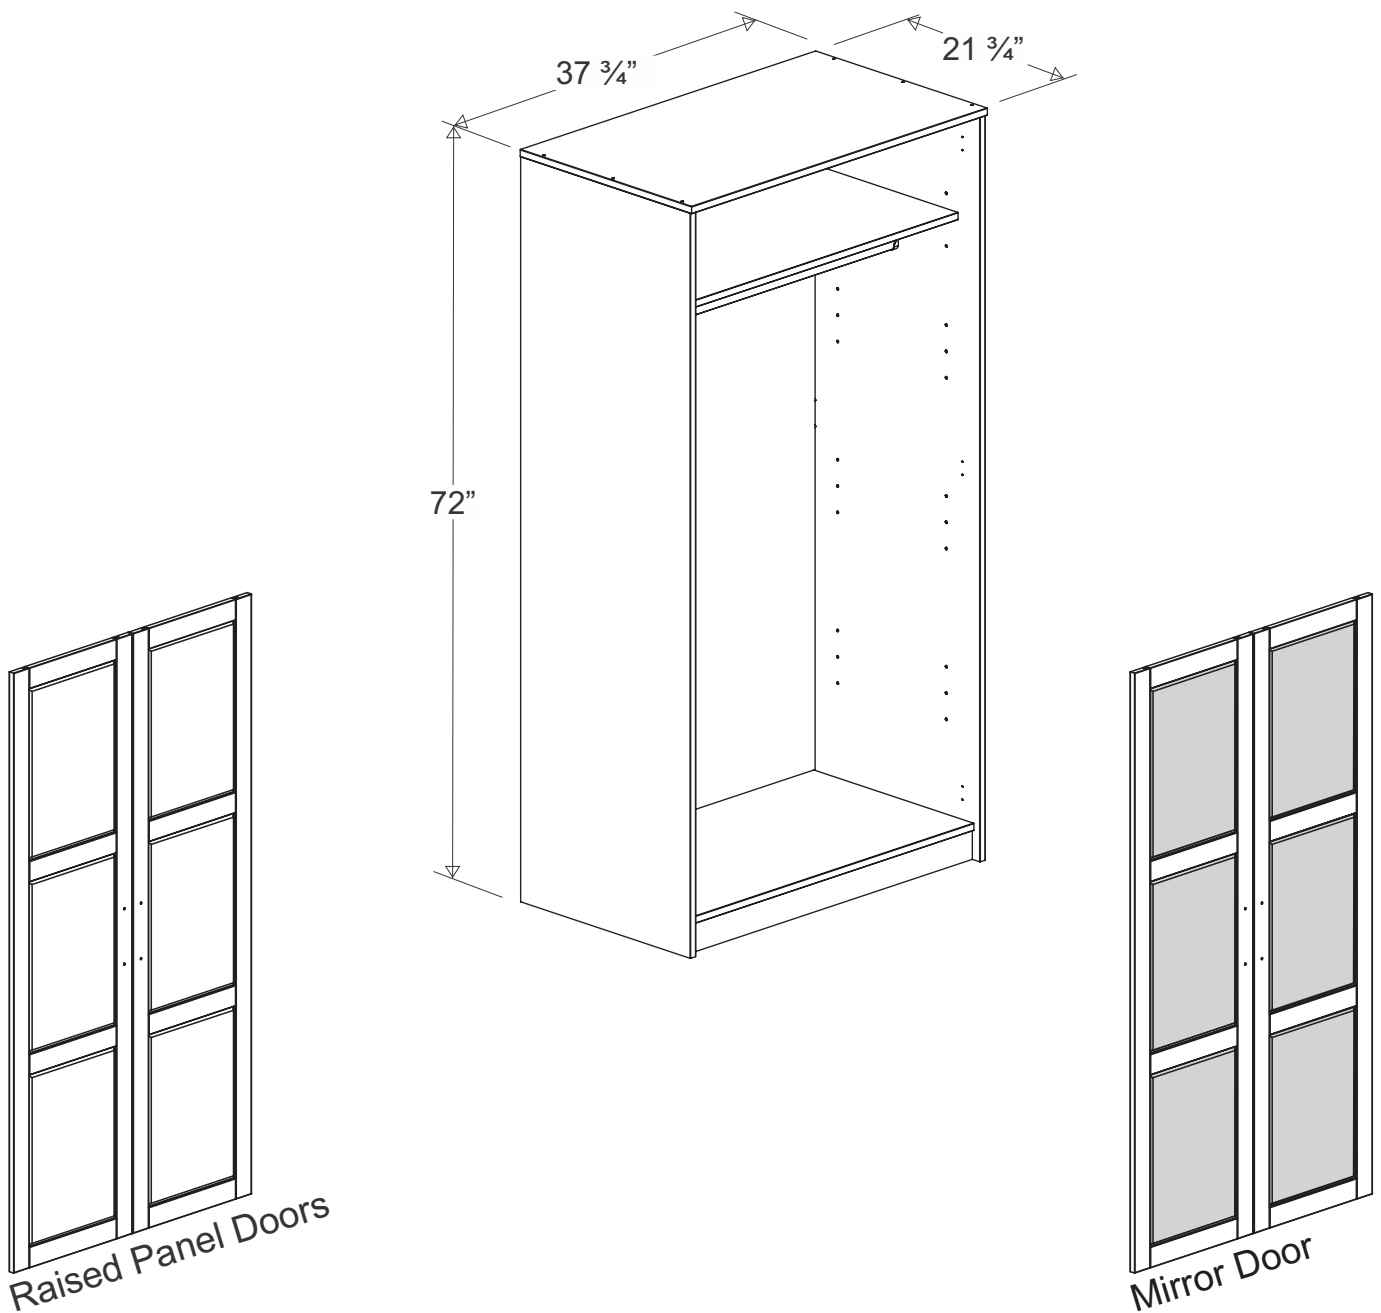

REV - 07/2025

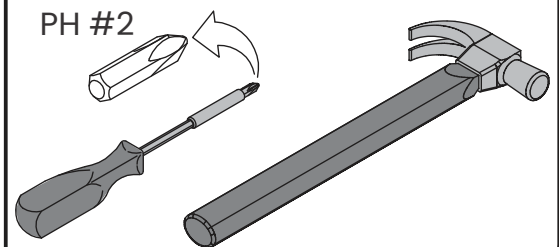

page 2/15


Before You Begin Assembly

- Carefully inspect the package contents. A complete parts checklist is provided below.
- If any parts are missing or damaged, please contact us at info@palaceimportsinc.com for assistance.










Assembly Tips


- Assemble the item on a flat, smooth surface. We recommend placing a blanket or protective covering underneath to prevent scratches.
- Use a power drill **only at a low-speed setting** to avoid damaging components.
- Assemble the product as close as possible to its final location to minimize the need for moving it later.
- Important: The hardware pack contains small parts that may pose a choking hazard.
Keep all small items out of reach of young children.

PARTS LAYOUT

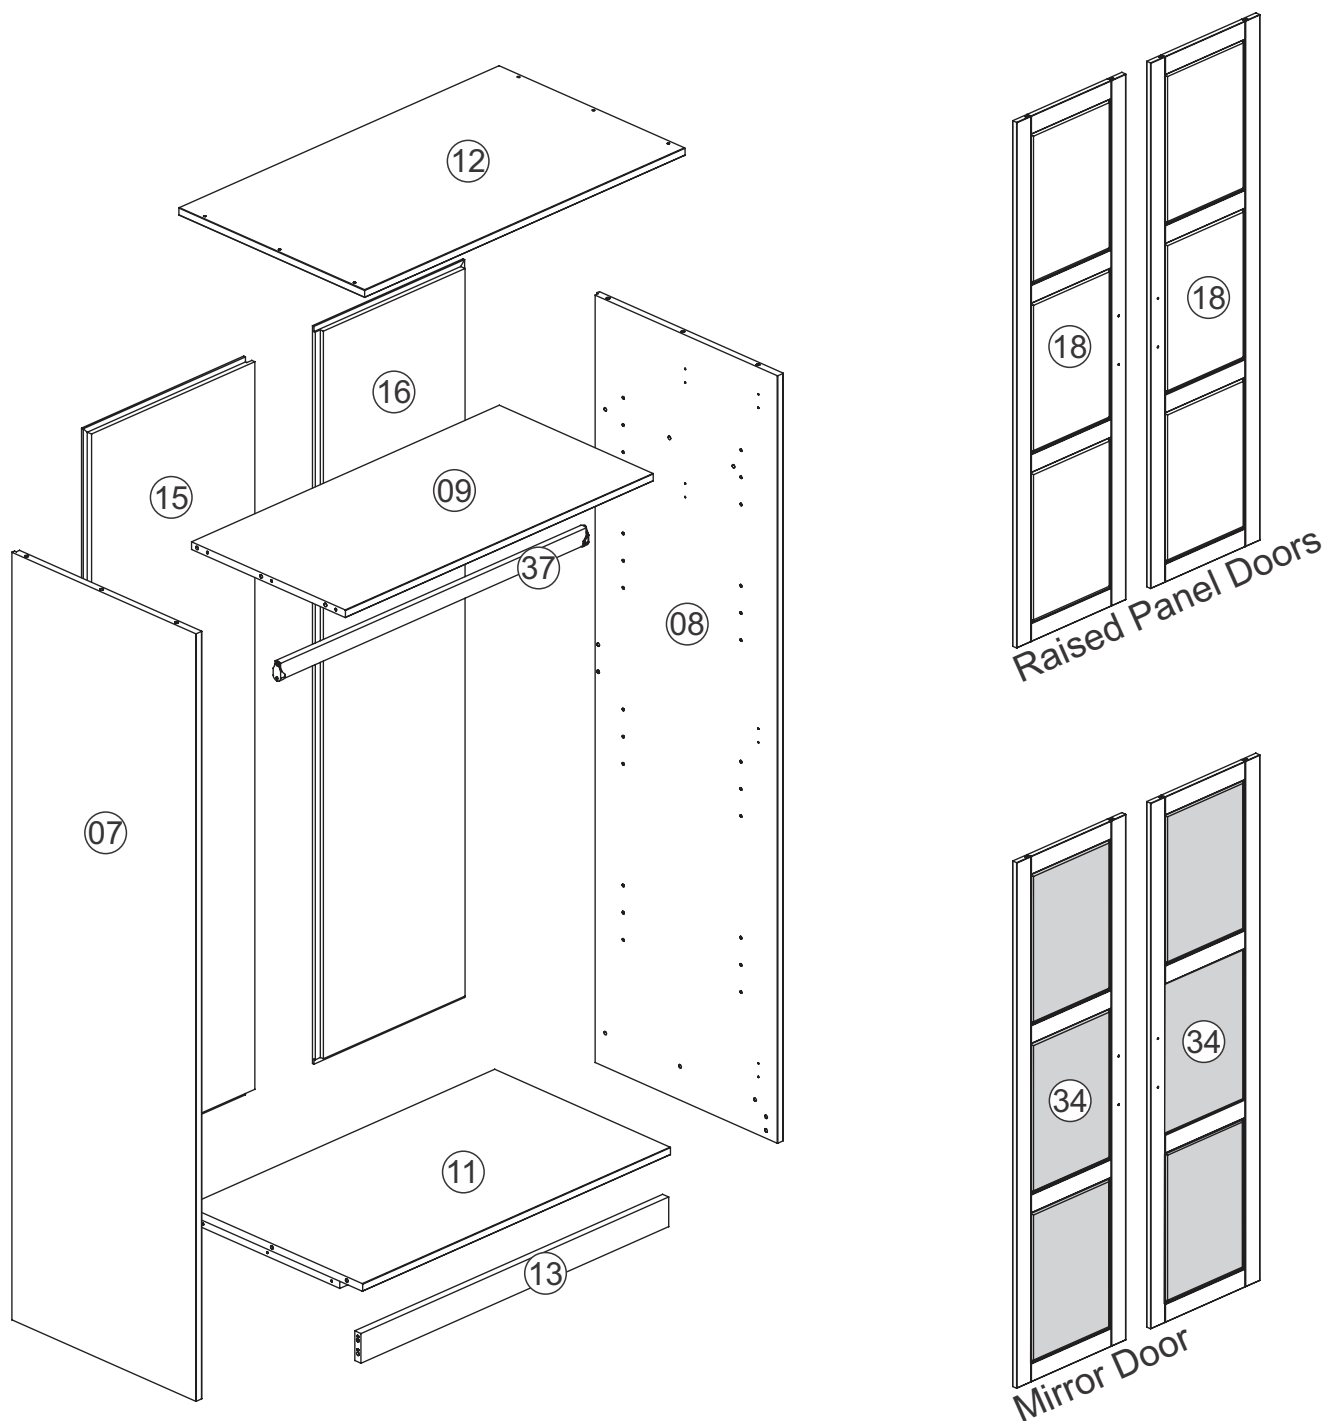

Screws Are Illustrated at Actual Size for Accurate Reference

A1	 4,0x30	17+1
A16	 4,0x40	06+1
A25	 M4x25	04+1
A44	 3,5x14	34+2
C2	 8,0x25	22+2
D3	 45x27x12	01
D10		02
D35	 50x13x1,2	02
F16		06
G1	 10x10	44
H12		02

TIPOVER RESTRAINT KIT		
A47	 3,0x20	02+1
F8	 47x20x9	02
F15	 300mm	01



**WARNING:
CHOKING HAZARD**

Contains small parts - choking hazard.
Adult supervision is required during assembly.
Not suitable for children under 3 years of age.








WARNING:

Important Safety Notice:



This furniture includes tip-over prevention hardware, which **MUST** be securely attached to the wall as outlined in the assembly instructions. Failure to do so may result in serious injury or death.


01)

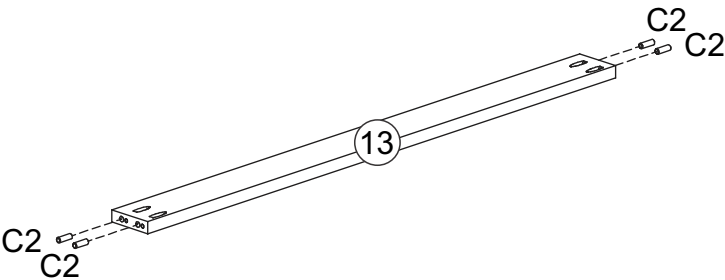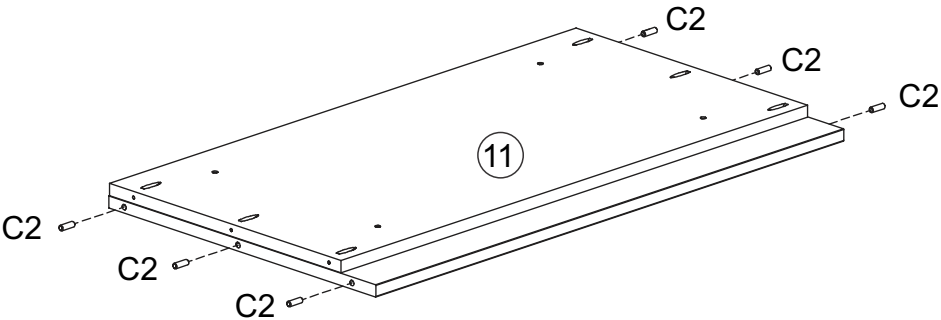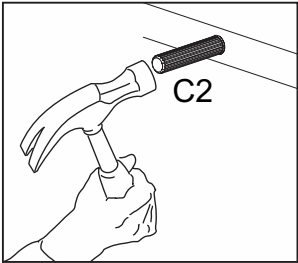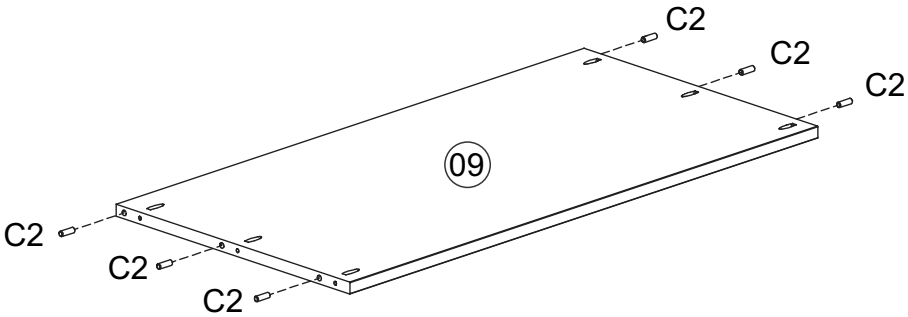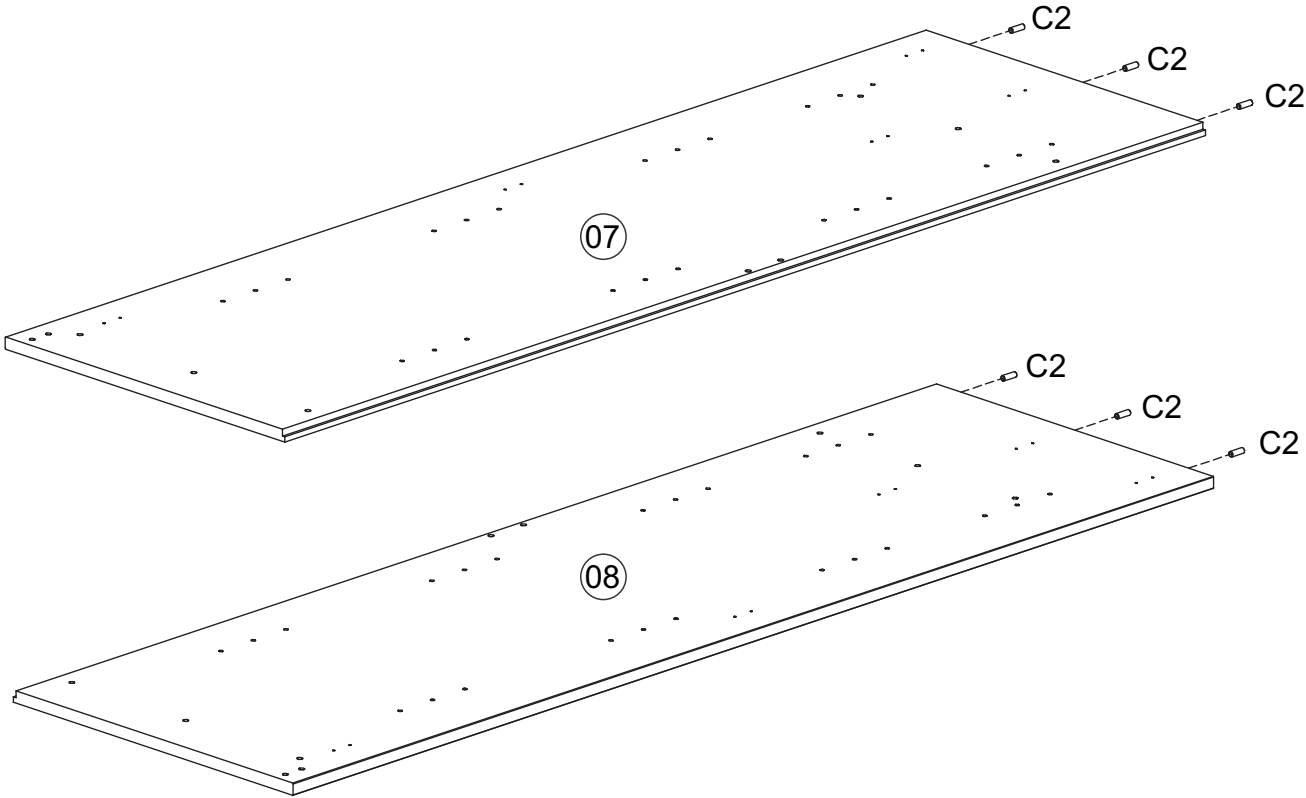



C2		22
8,0x25		


02)

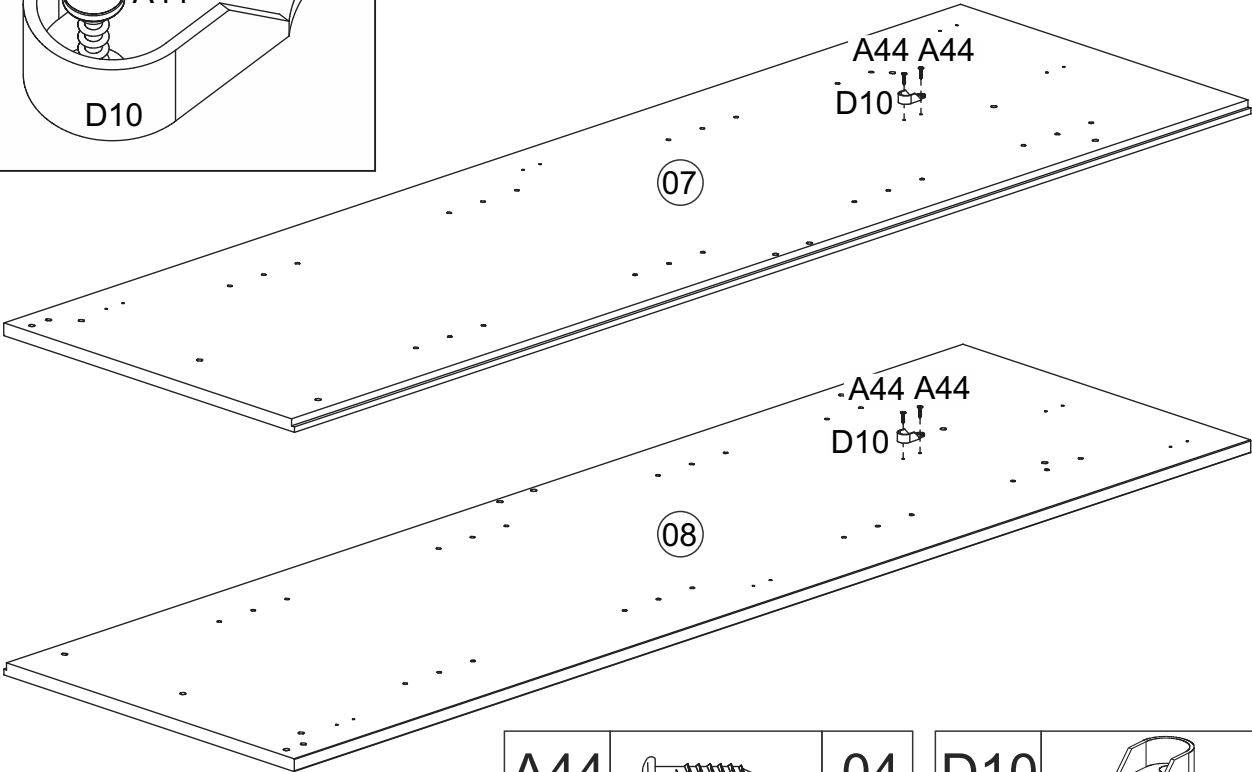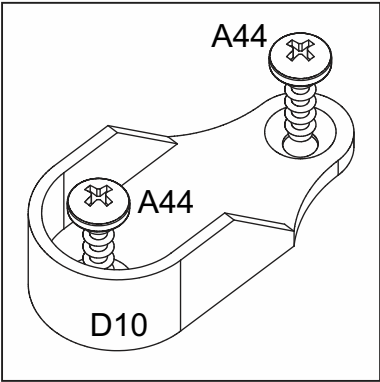


A44	 3,5x14	04	D10		02
-----	---	----	-----	---	----

03)

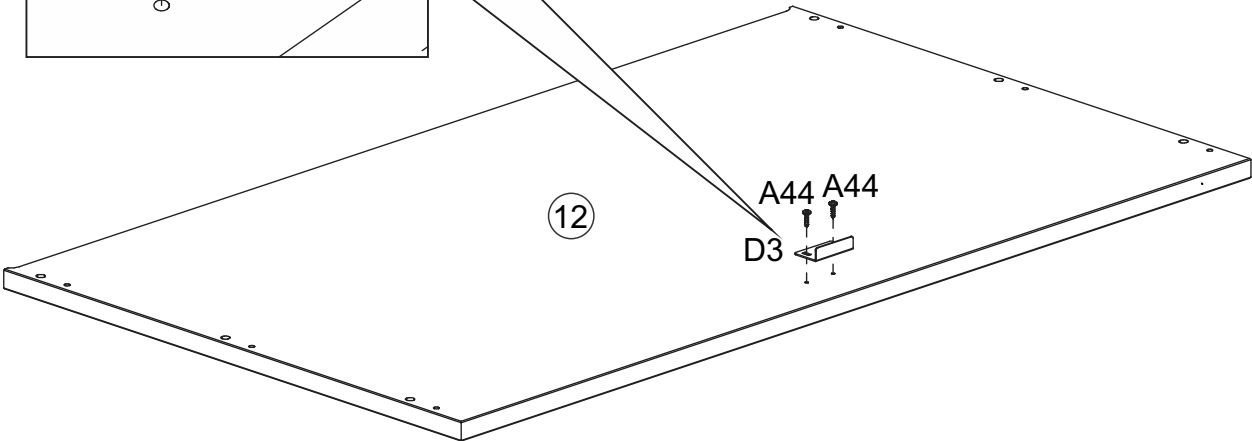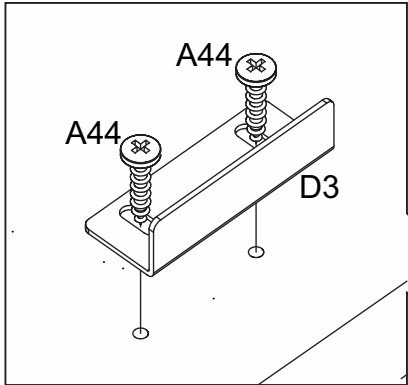


A44	 3,5x14	02	D3		01
-----	---	----	----	---	----

04)

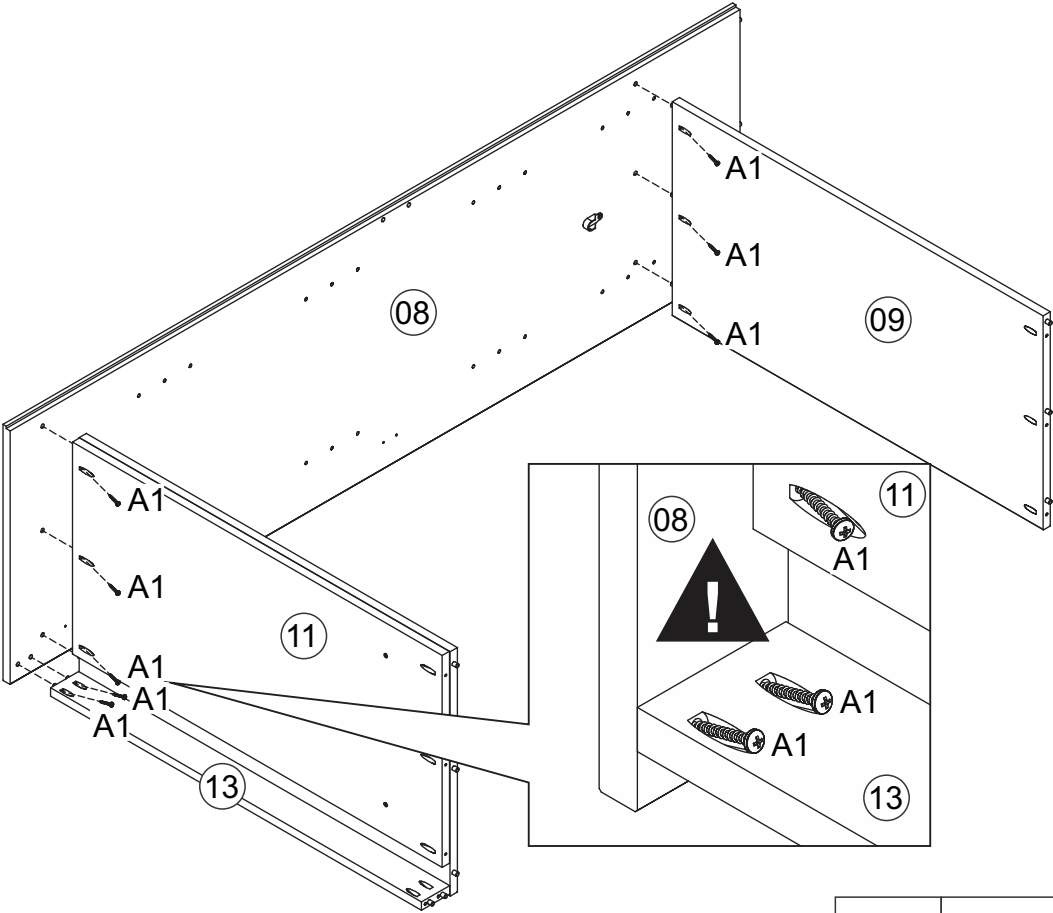


A1	 4,0x30	08
----	---	----

05)

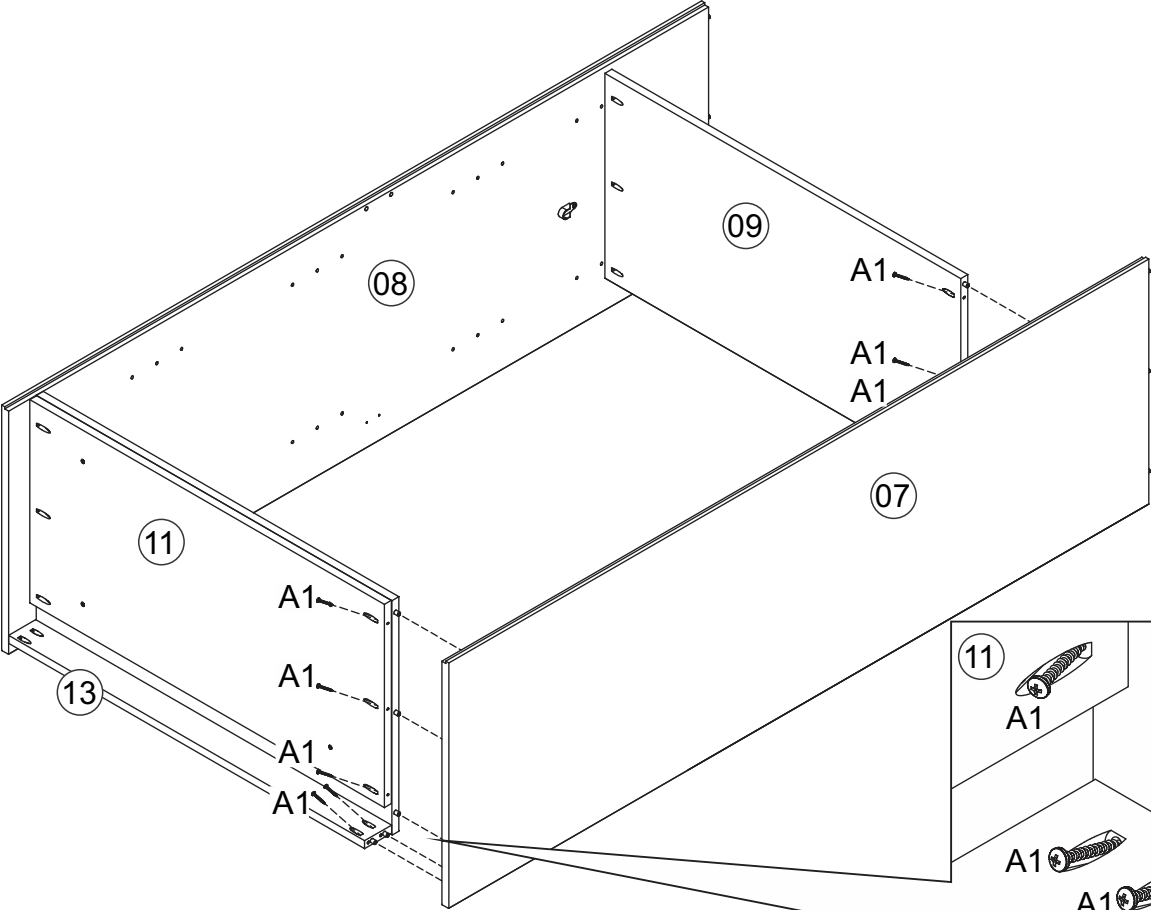


A1	 4,0x30	08
----	---	----


06)

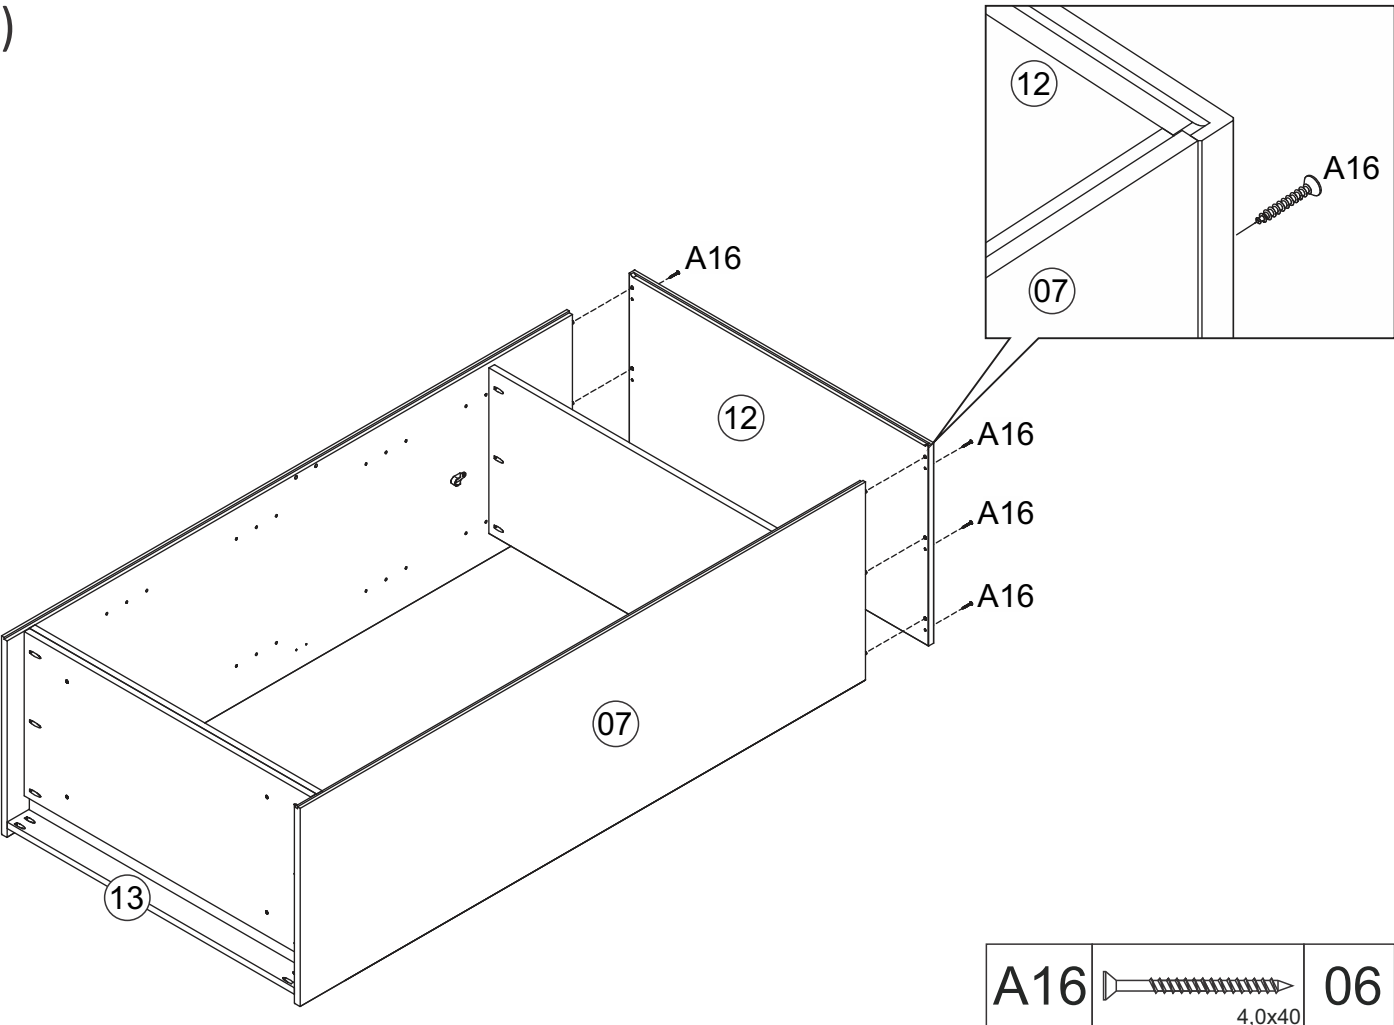


07)

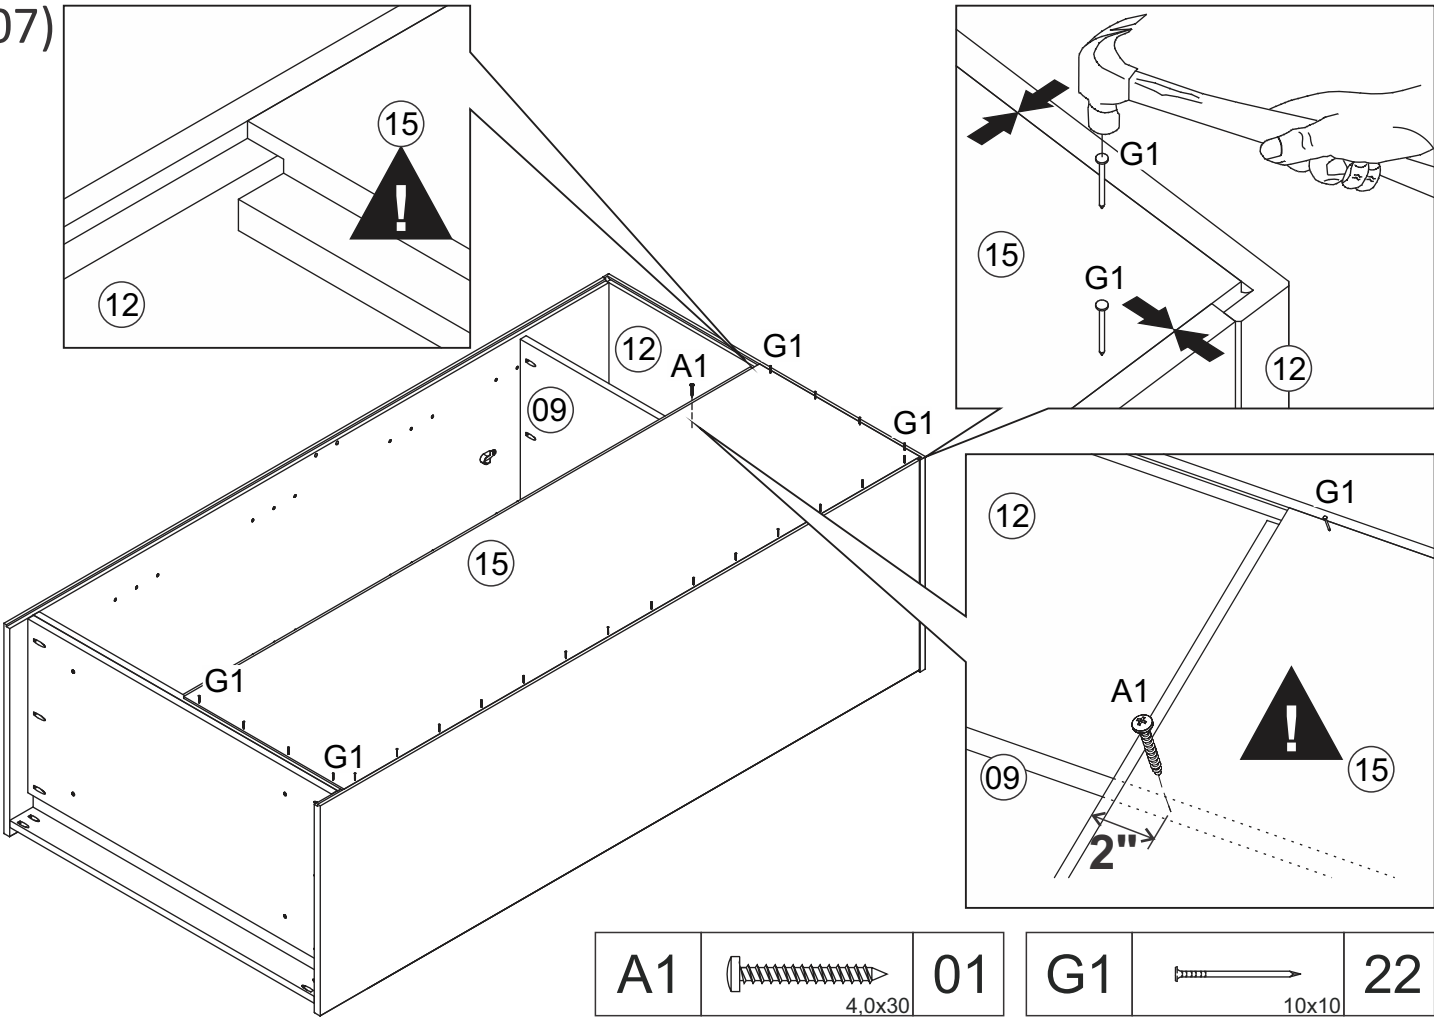

08)

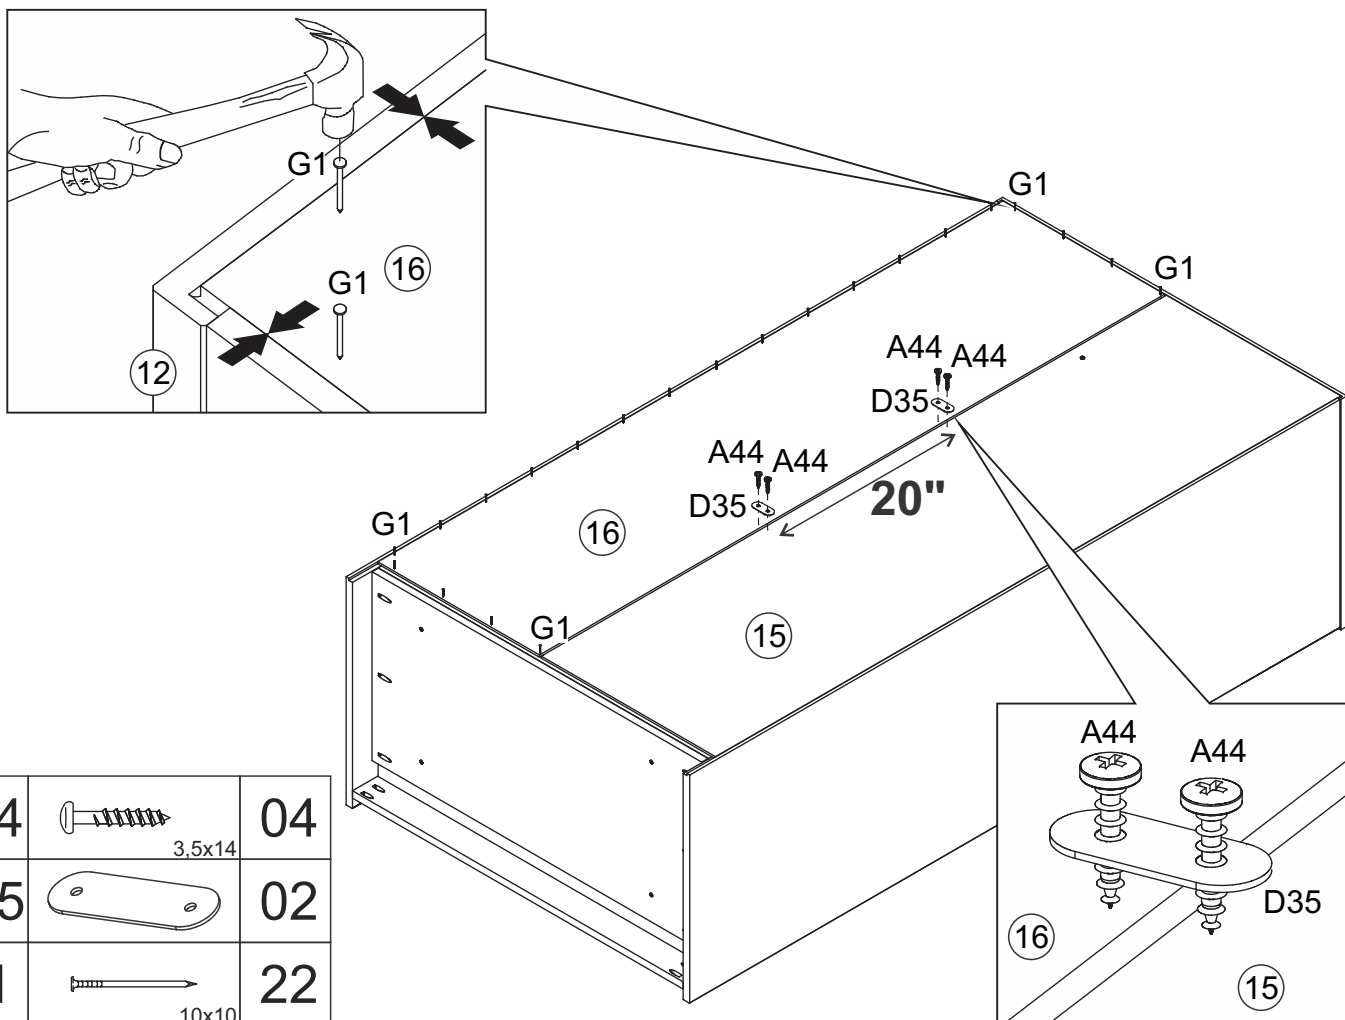


09)

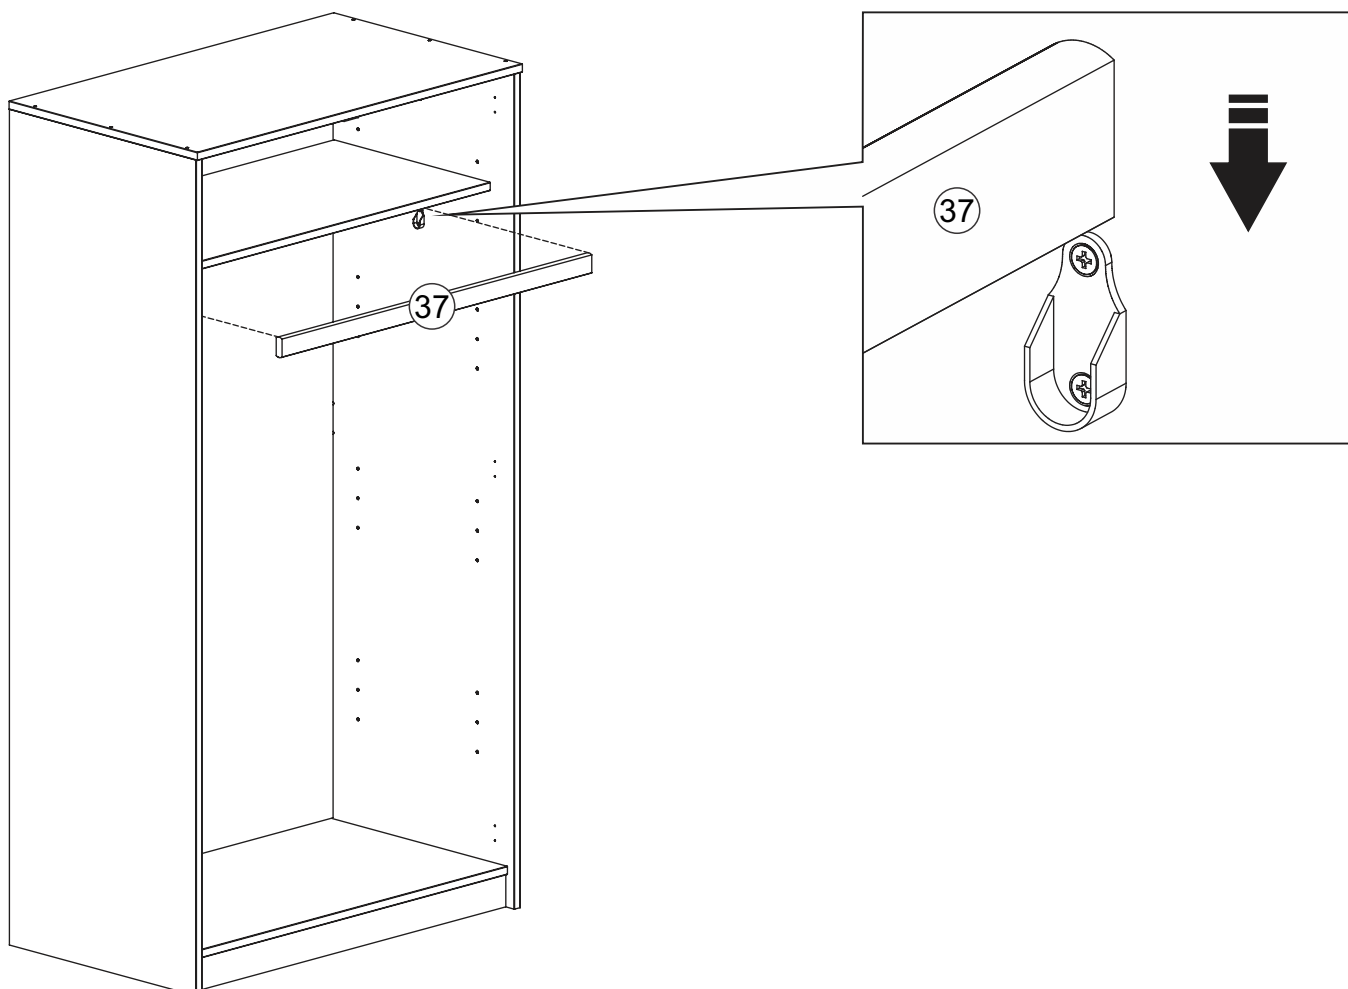


10)

If the hinge (F16) is detached, attach it to the hinge plate by aligning and pushing it in until it clicks securely into place.

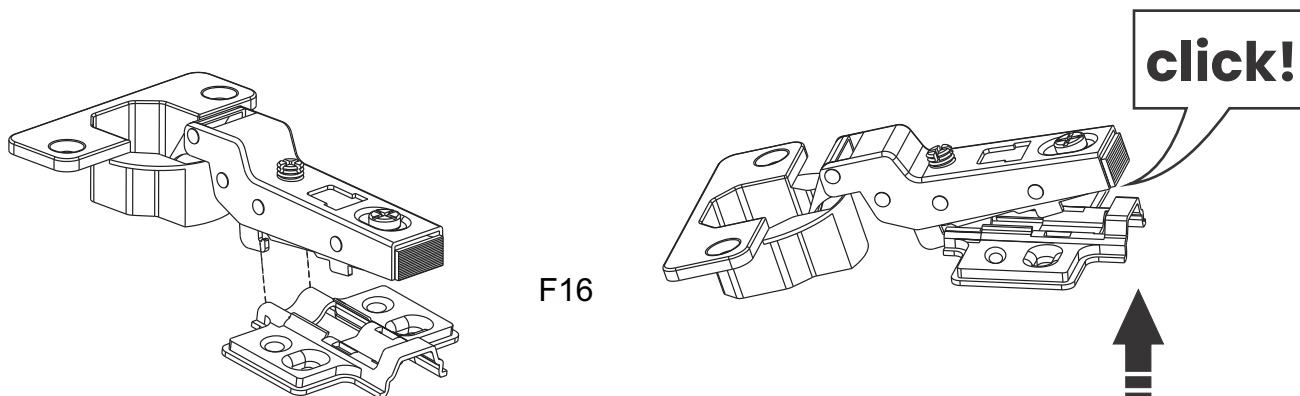


11)
2x

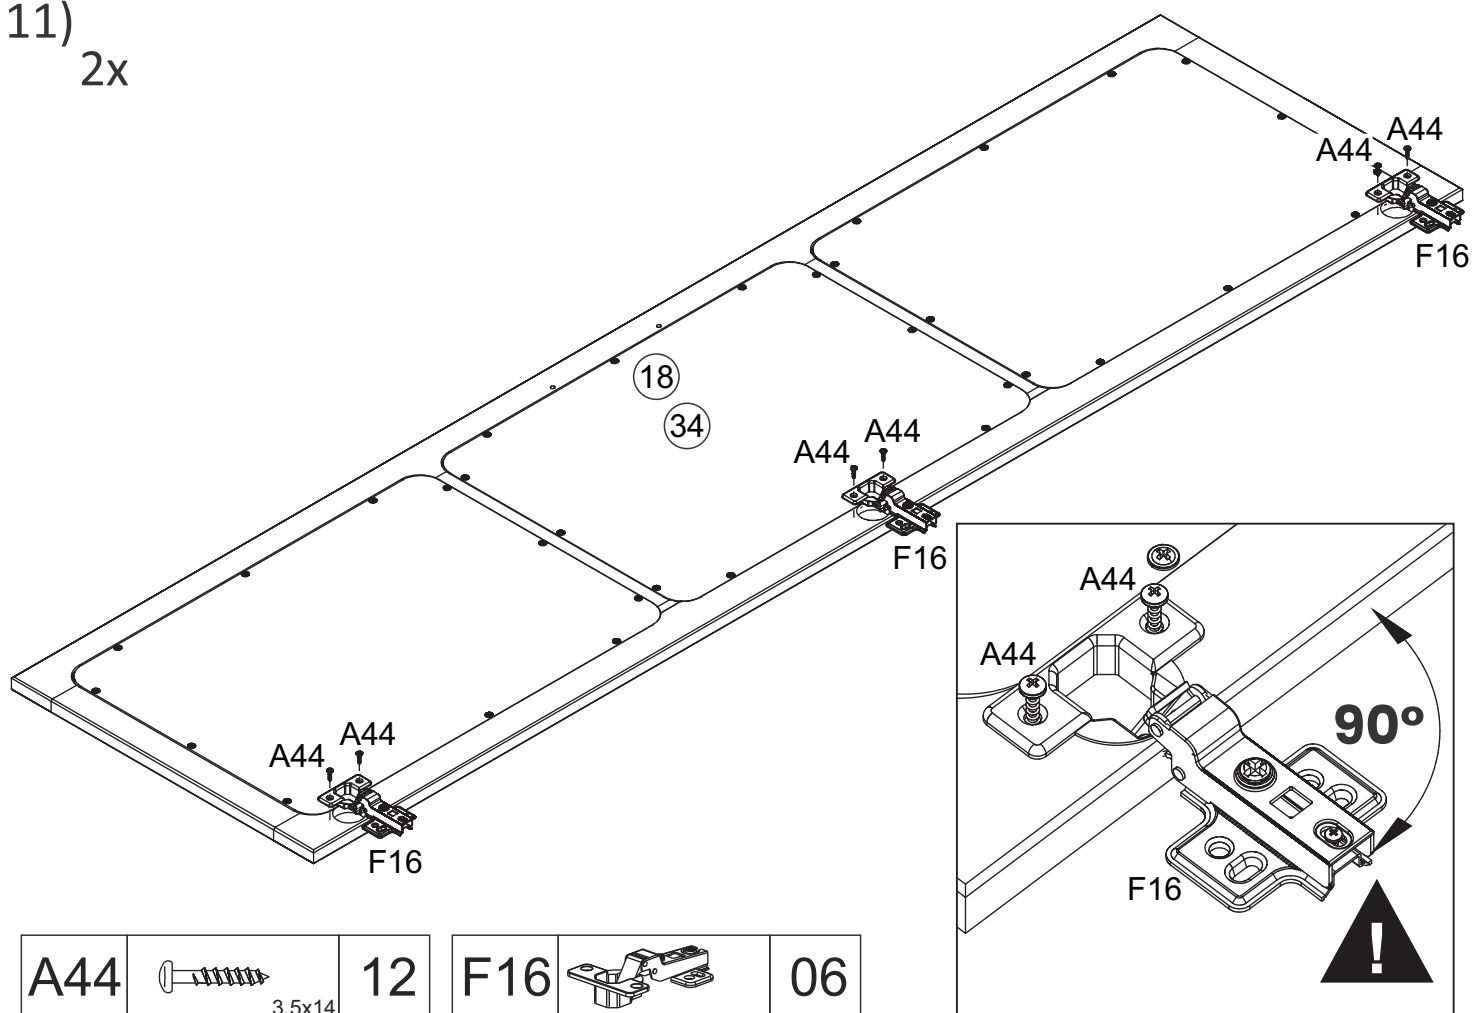

A44		12	F16		06
-----	---	----	-----	---	----


3,5x14

12)

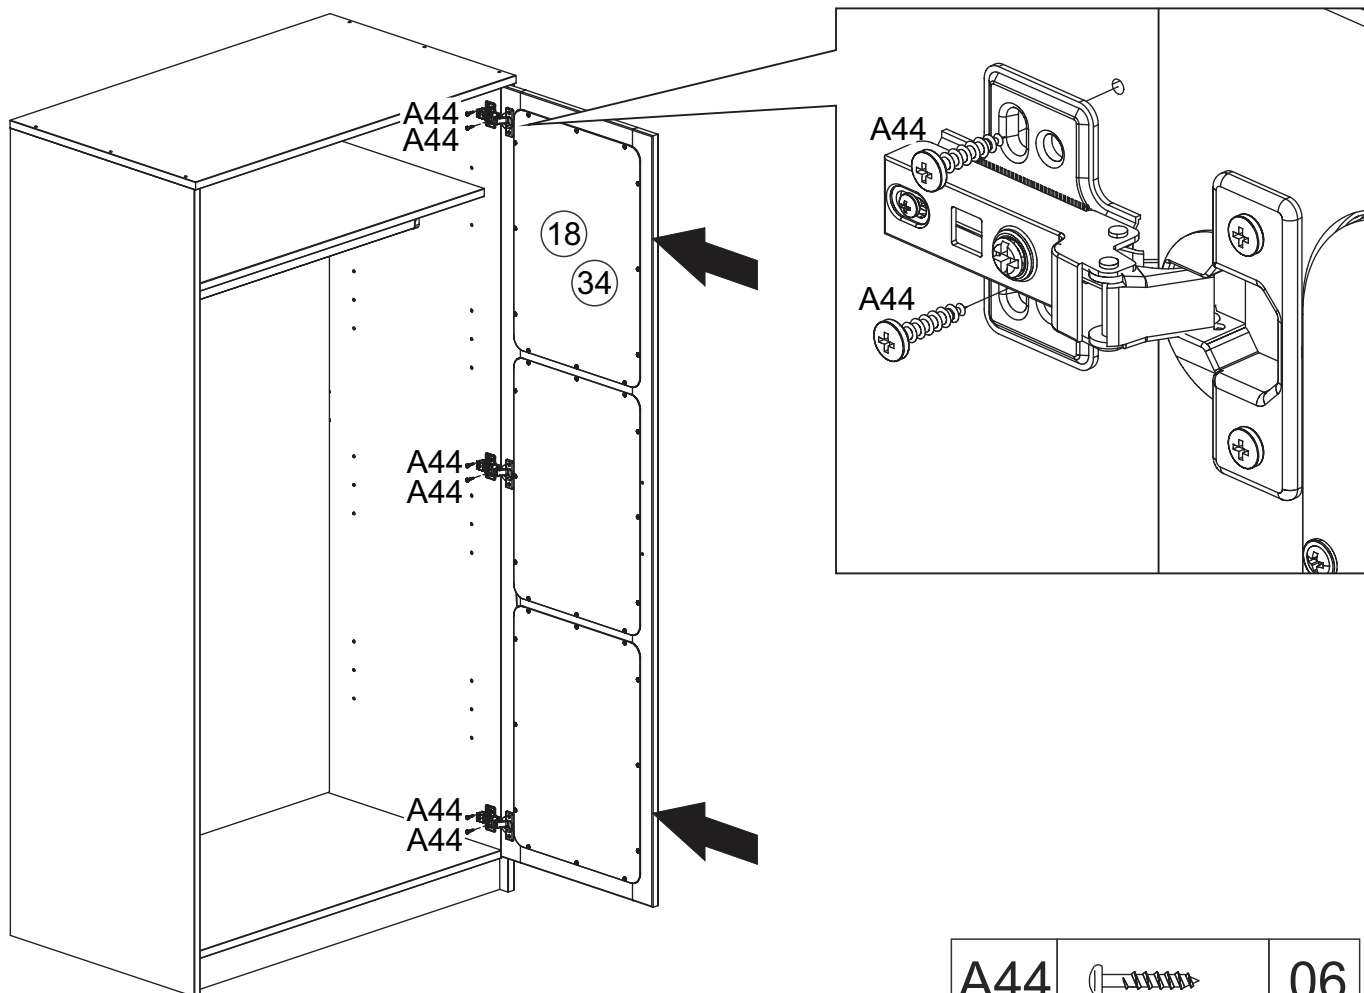


A44		06
3,5x14		


13)

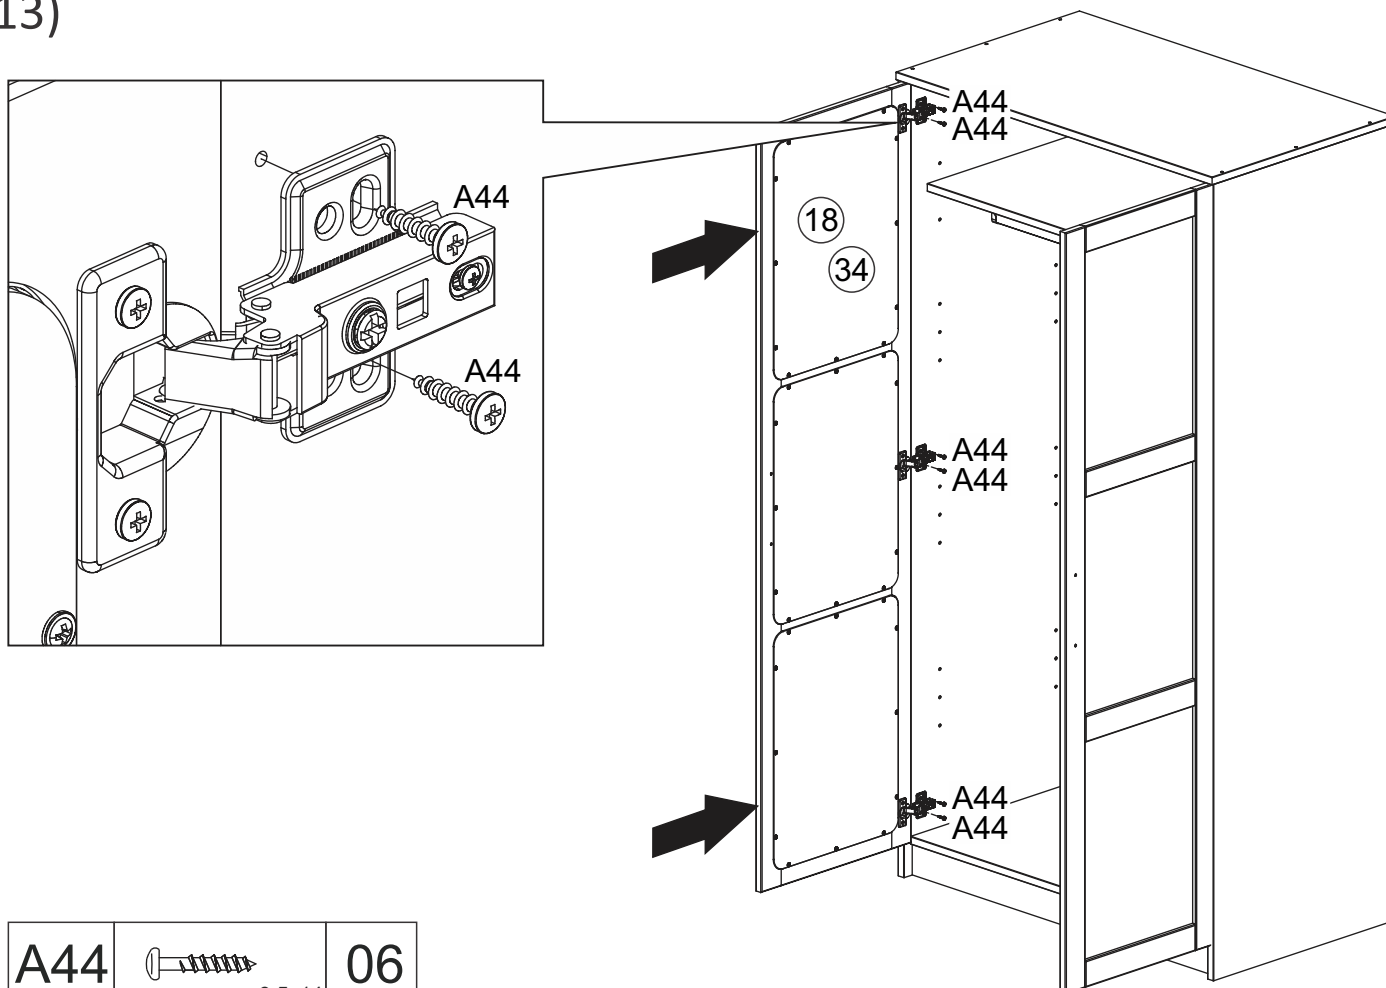


A44		06
3,5x14		

14)




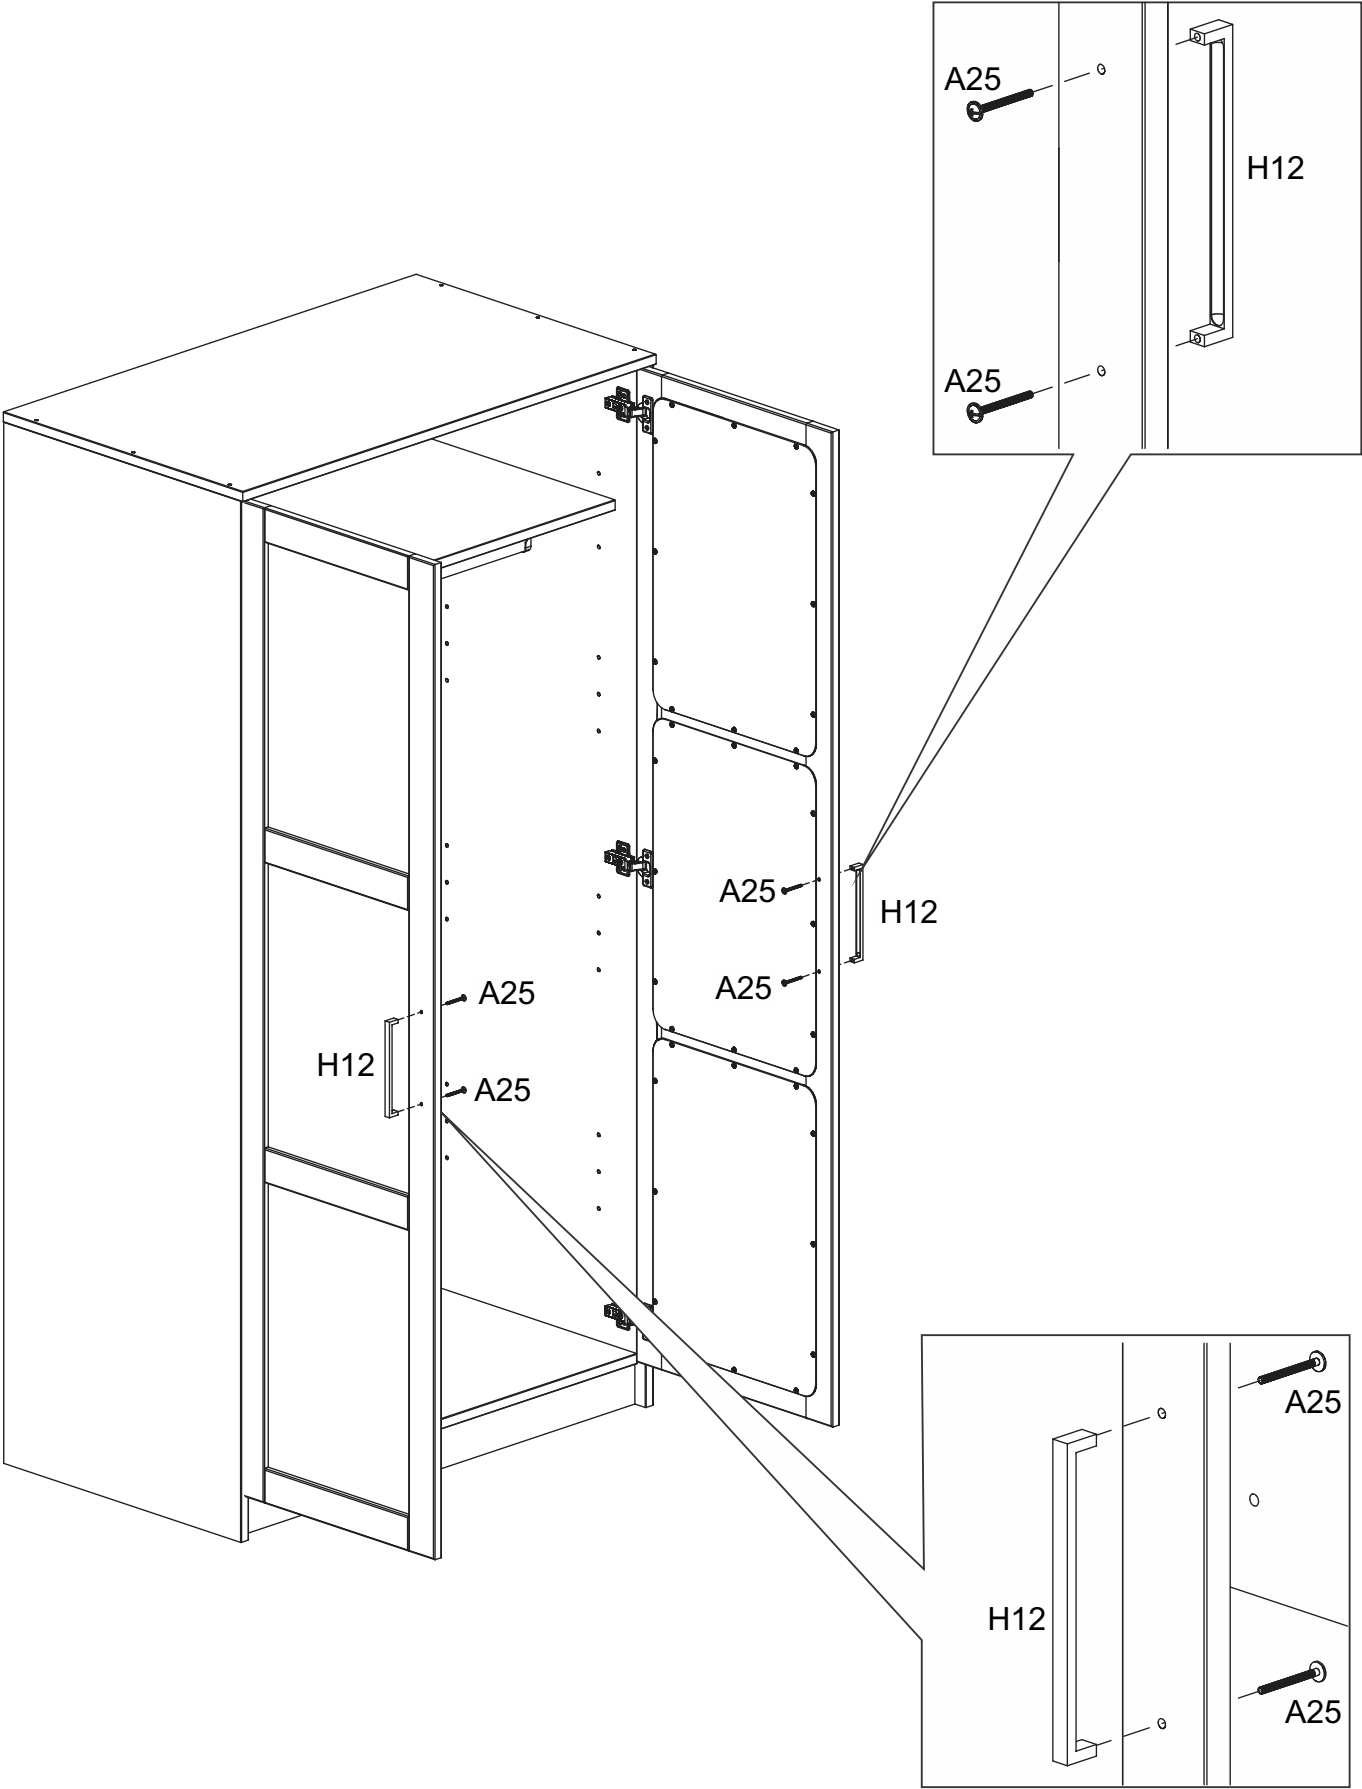


A25	 M4x25	04	H12		02
-----	--	----	-----	--	----





15) Align Crooked Doors

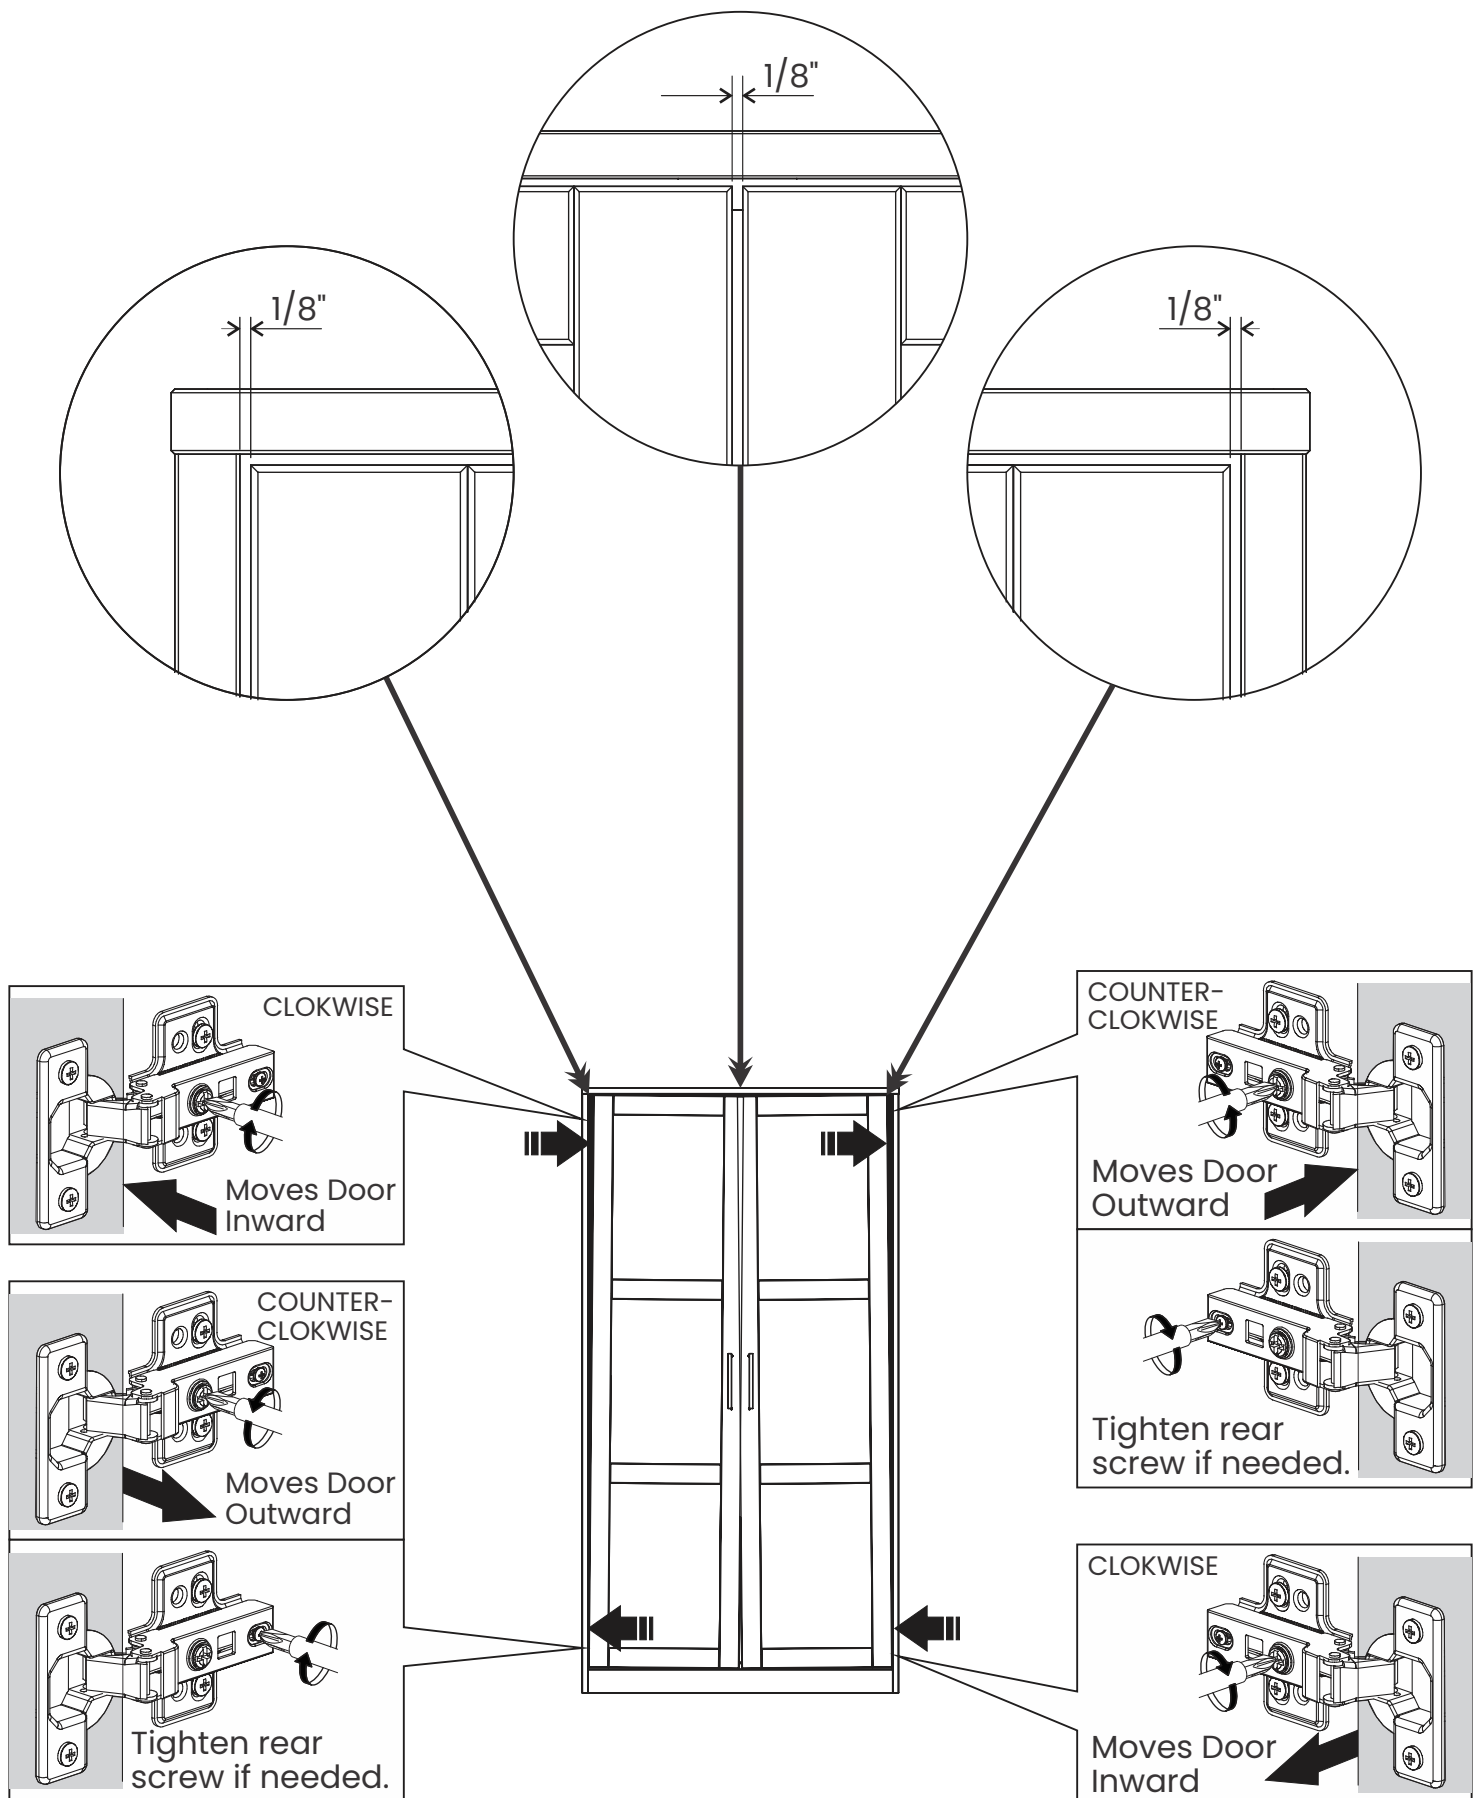







16) To align the doors with the sides of the wardrobe

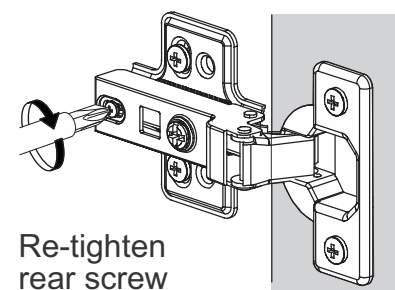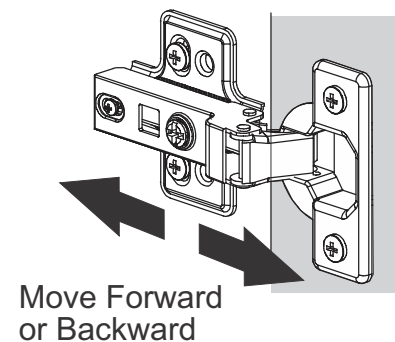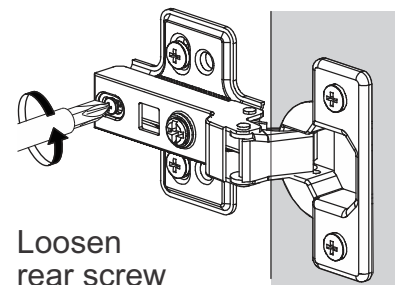
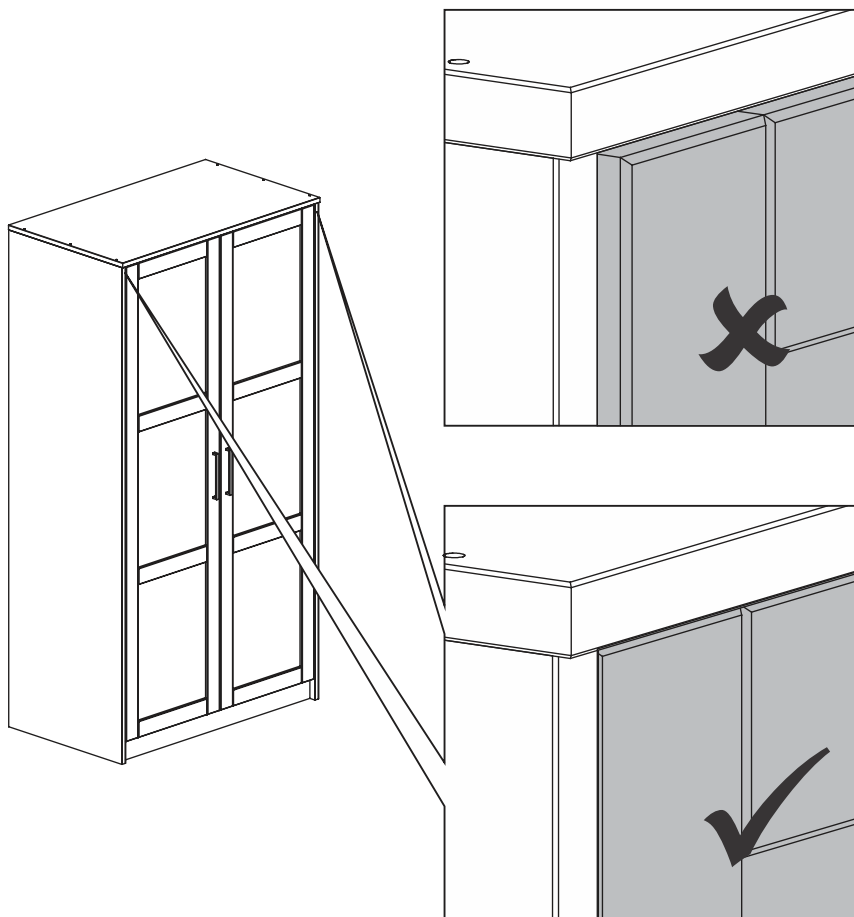


17) Adjusting the space between the door and the top.

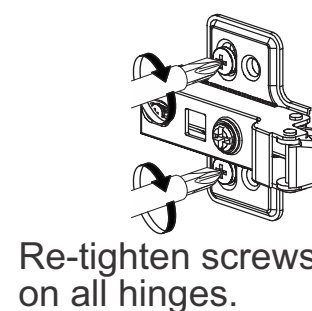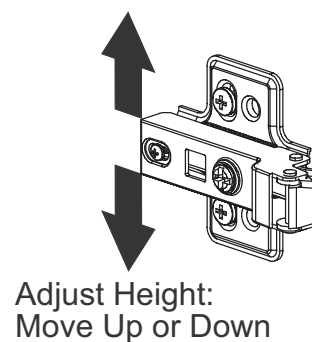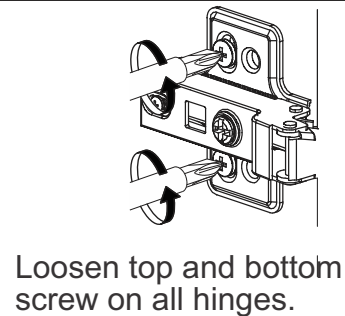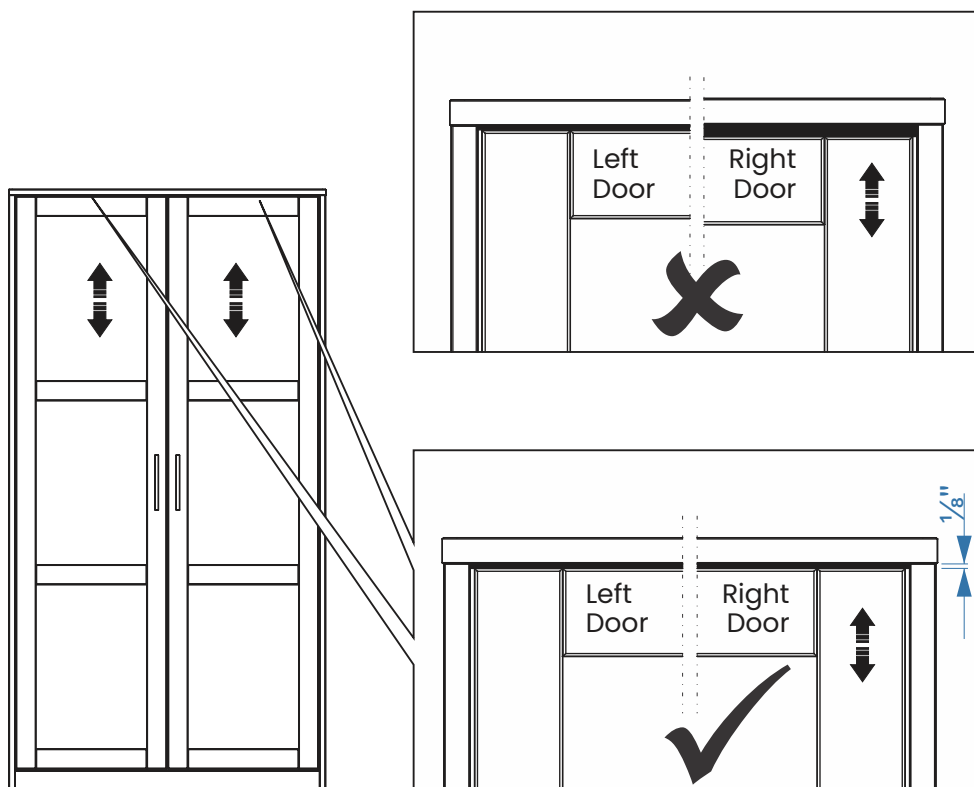

18) Tip-over Restraint Kit Installation

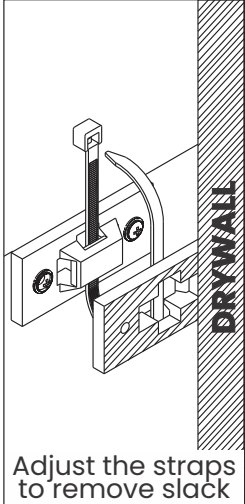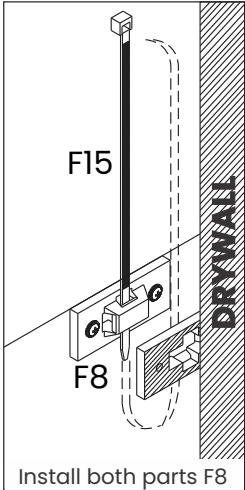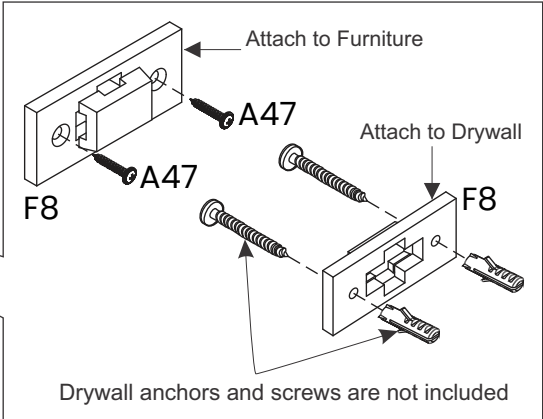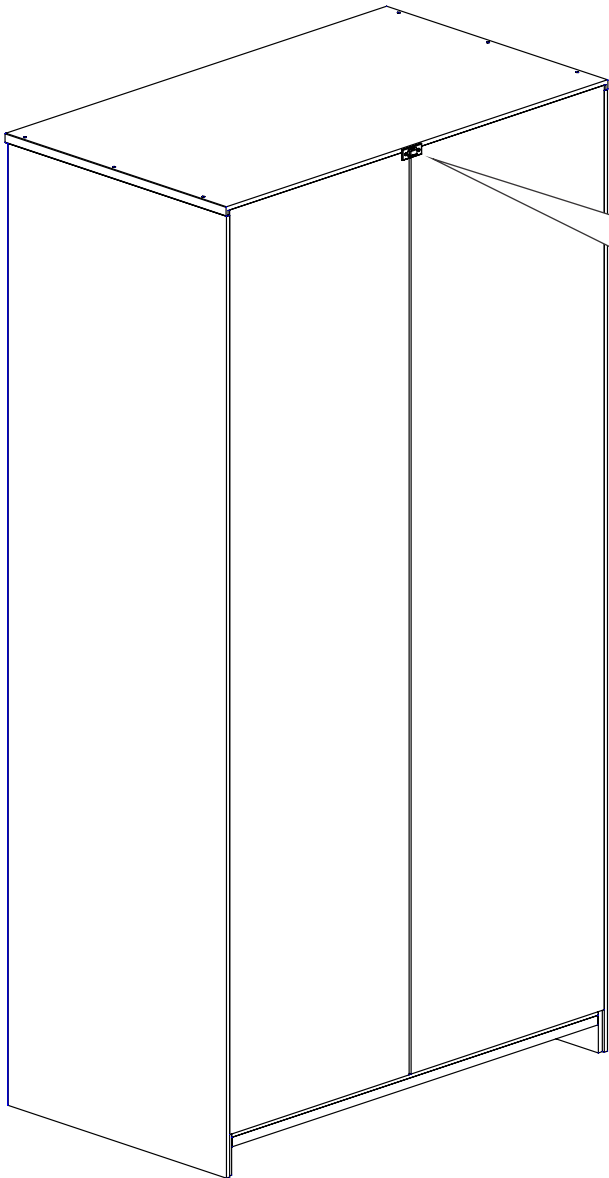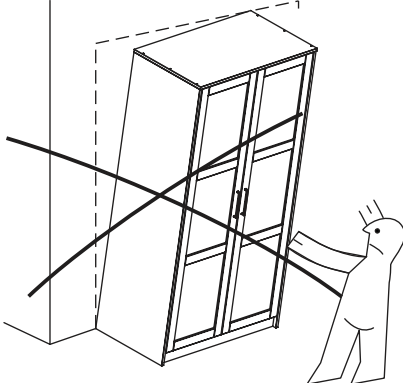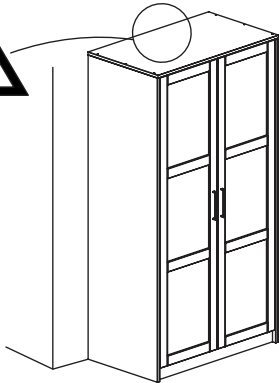

A47	 3,0x20	2
F8		2
F15		1