


Installation Guide

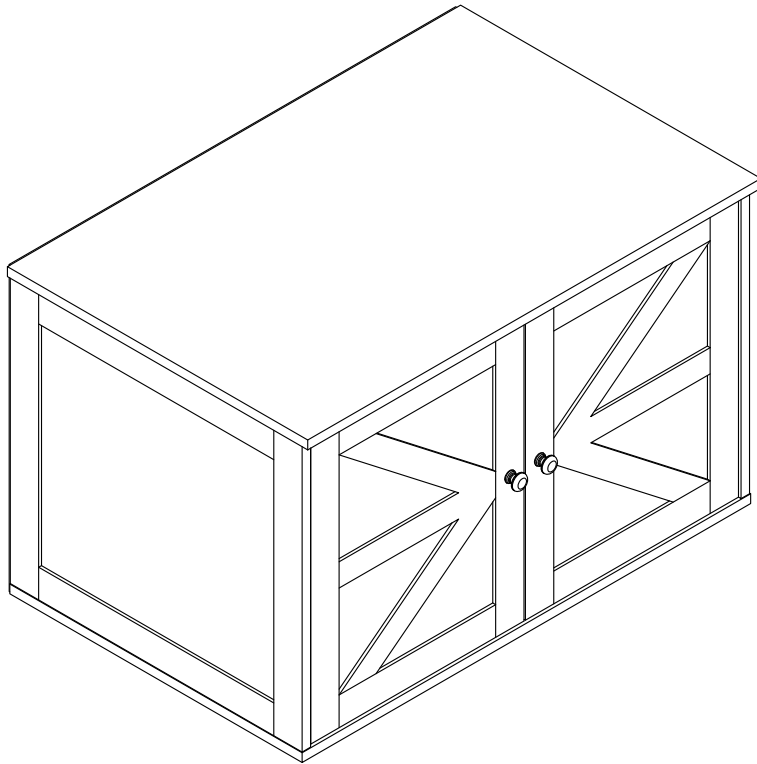

Before You Start

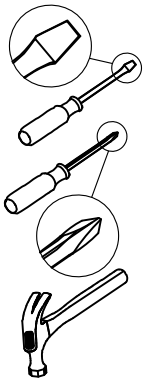

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification

Not actual size

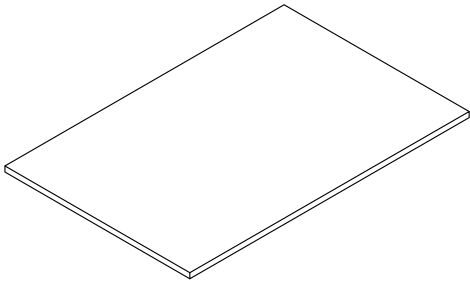


Ⓐ

TOP

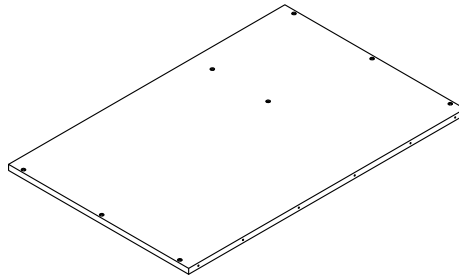


Ⓑ

BOTTOM

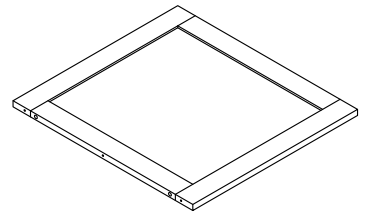


Ⓒ

LEFT SIDE PANEL

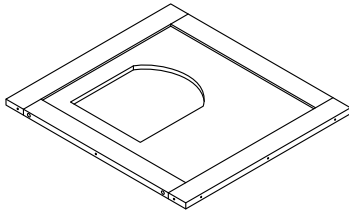


Ⓓ

RIGHT SIDE PANEL

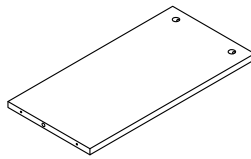


Ⓔ

MIDDLE SHELF

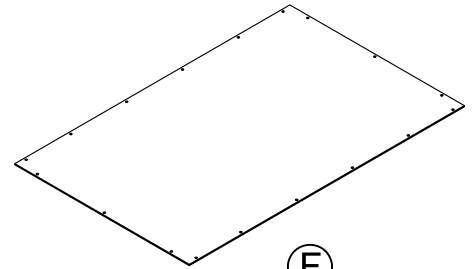


Ⓕ

BACK PANEL

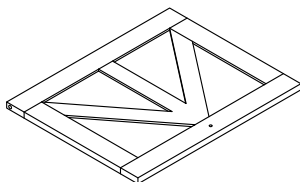

Ⓖ

LEFT DOOR

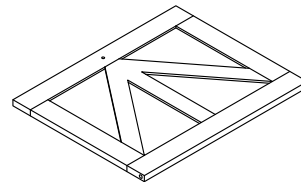


Ⓗ


RIGHT DOOR

Board Identification


Not actual size

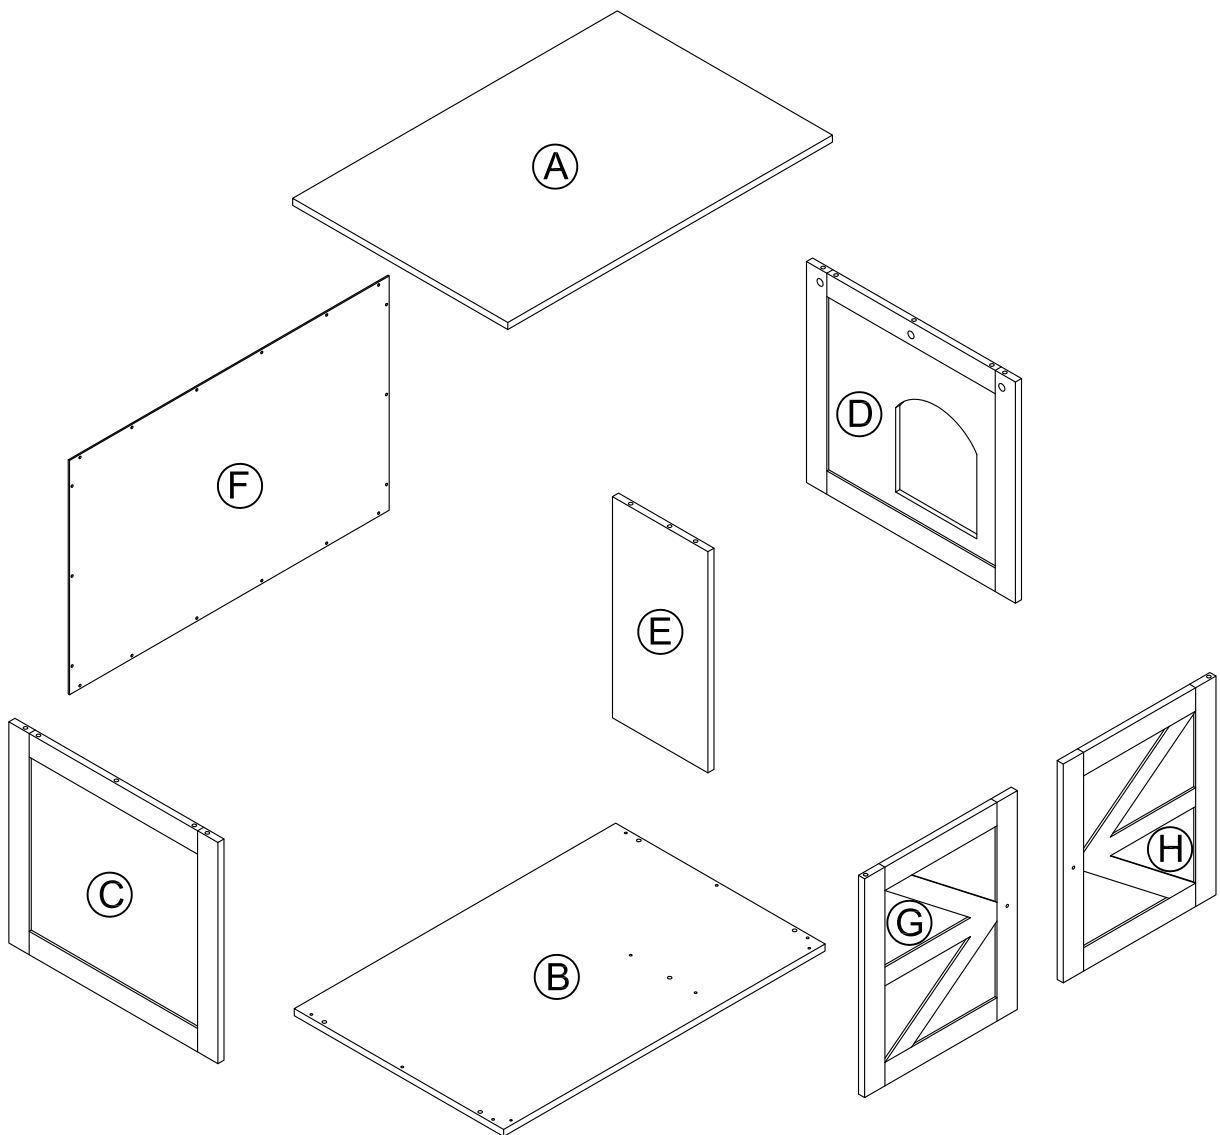


Part List

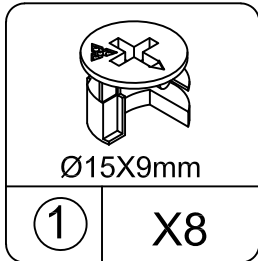


CAM LOCK
spare: 1

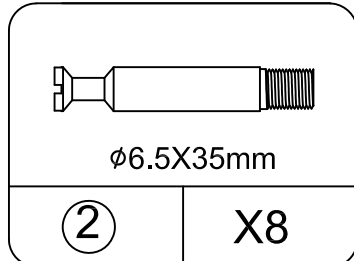


CAM BOLT
spare: 1

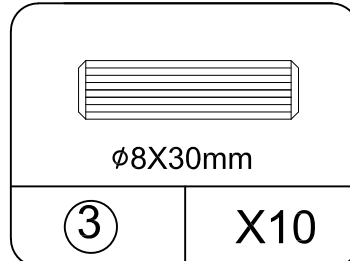


WOOD DOWEL
spare: 1

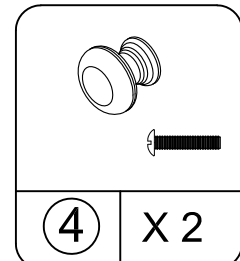


HANDLE

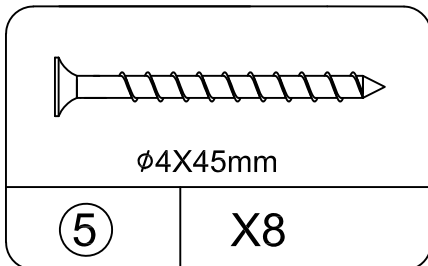


SCREW
spare: 1

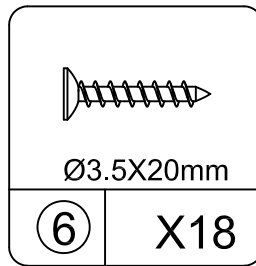


SCREW
spare: 2

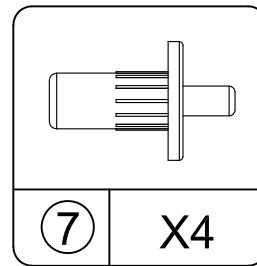


spare: 1

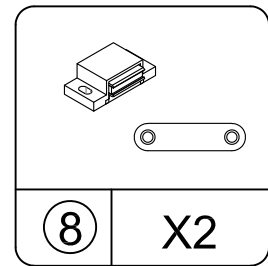

X2

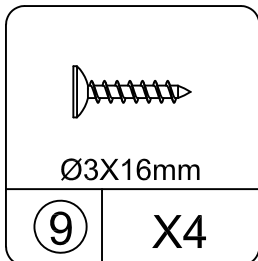


SCREW
spare: 1

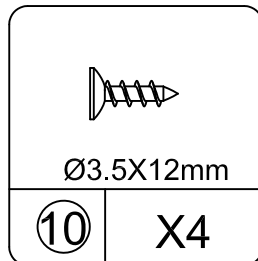









SCREW
spare: 1

Cam Lock Fastening System







Insert the cam bolt into the hole first, then insert the cam lock and lock it.

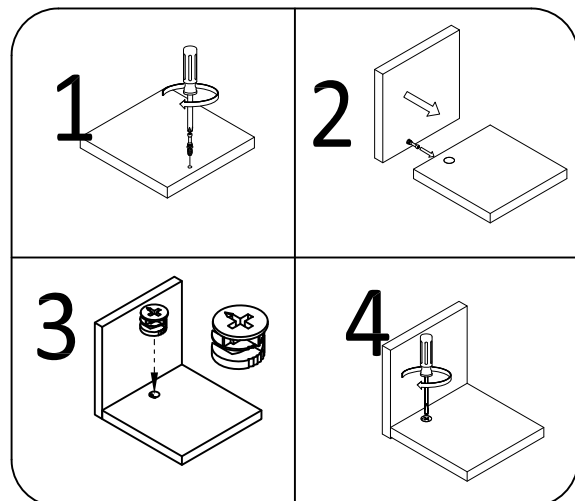









STEP 1

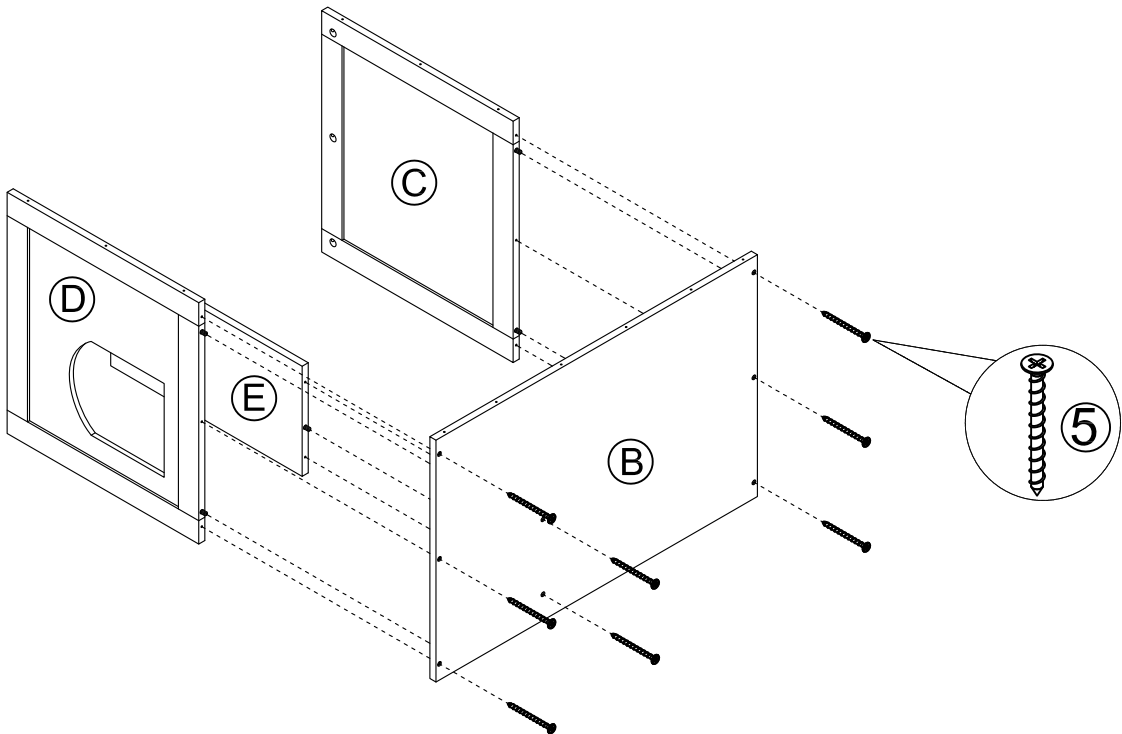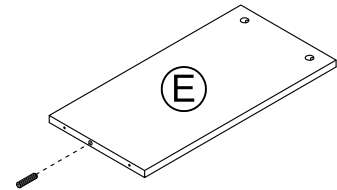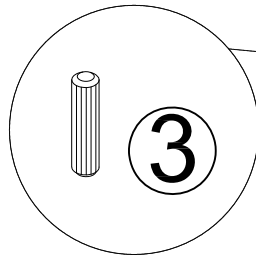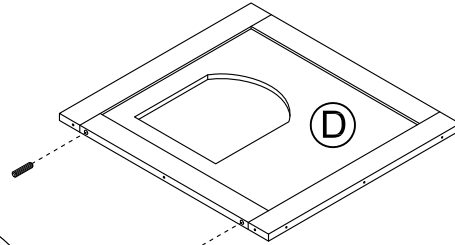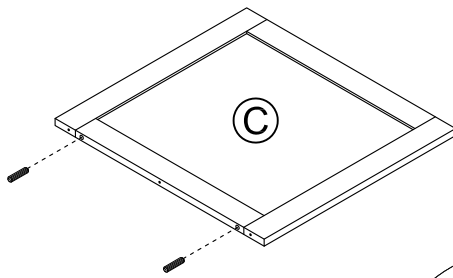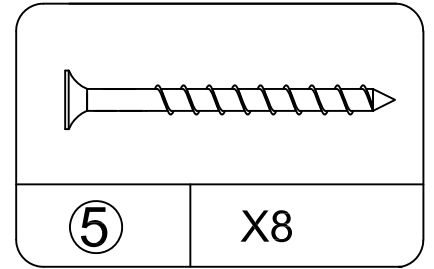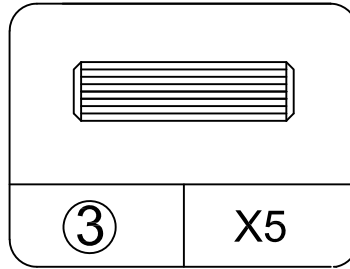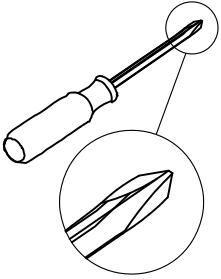

STEP2

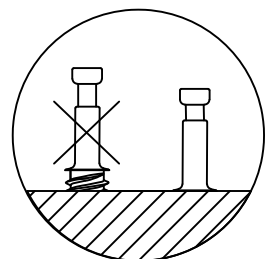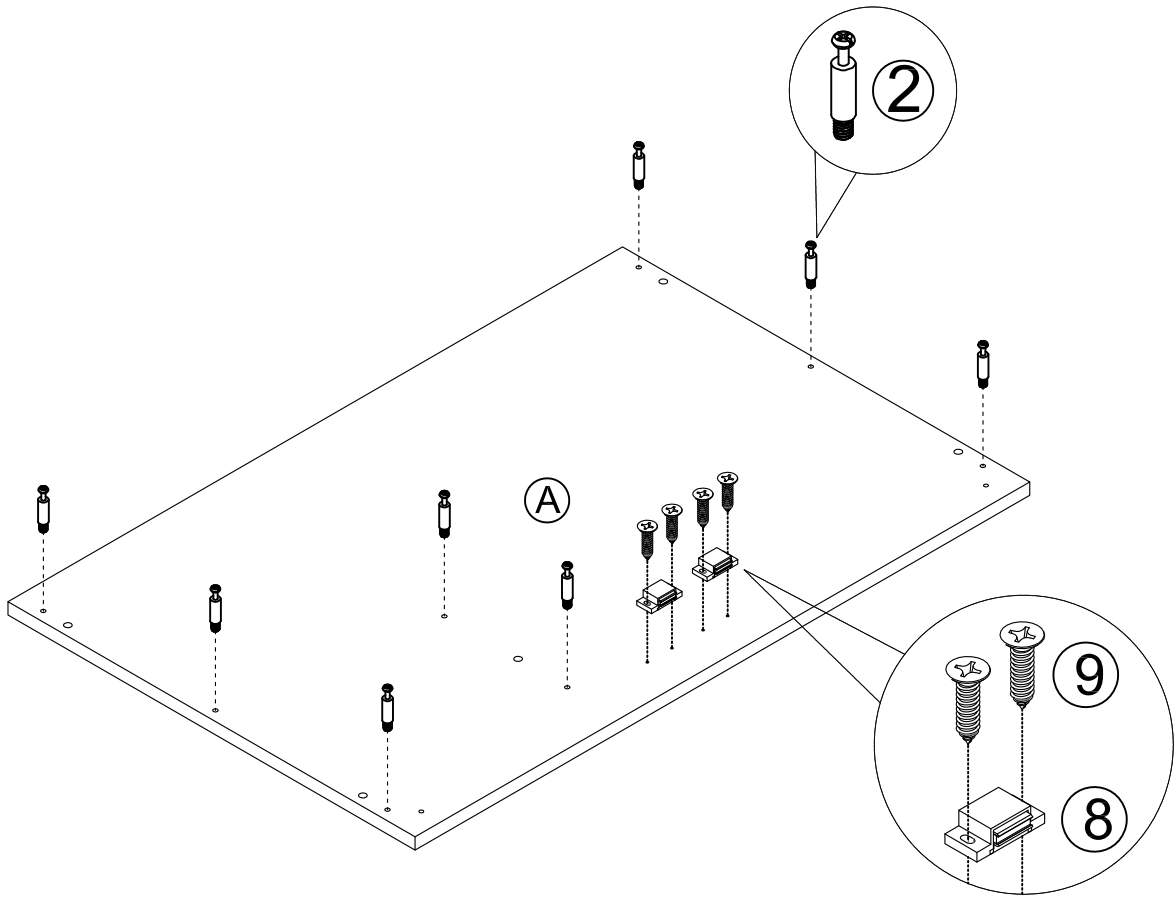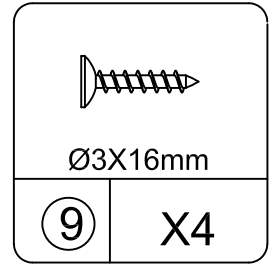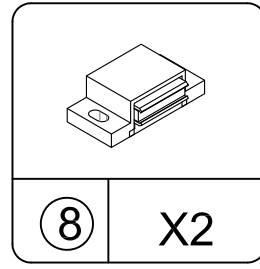
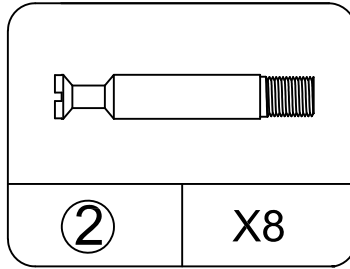
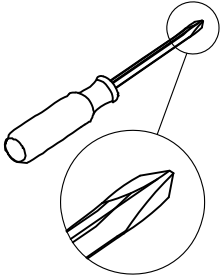


STEP 3

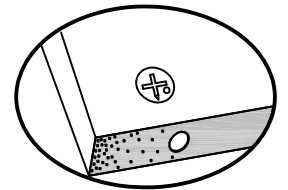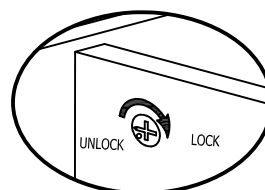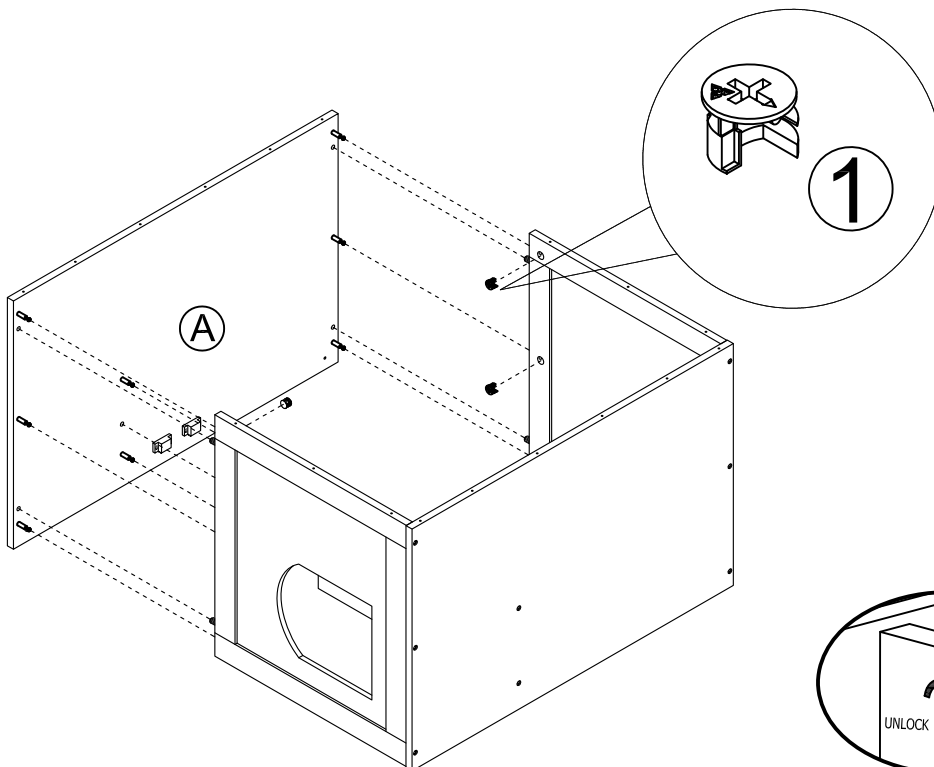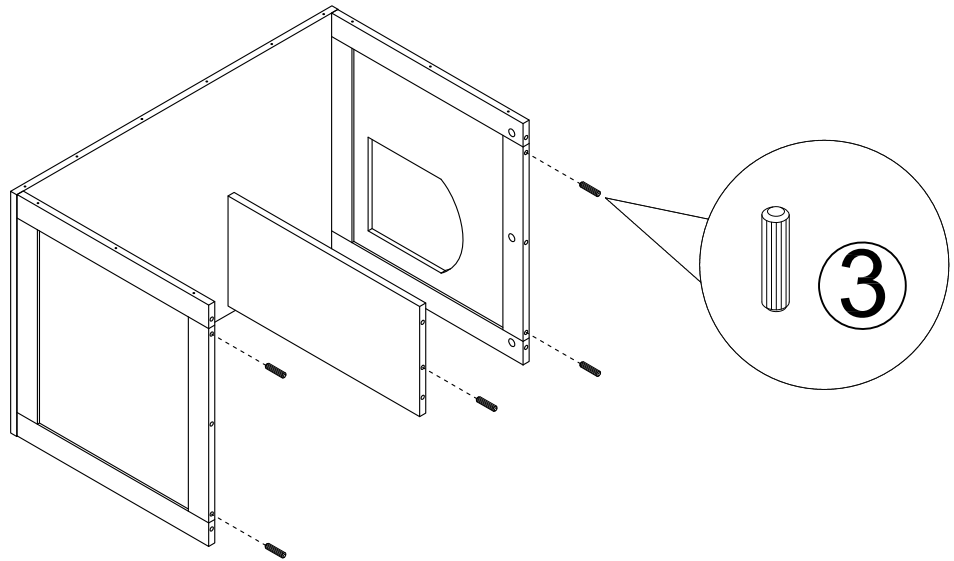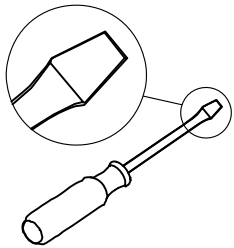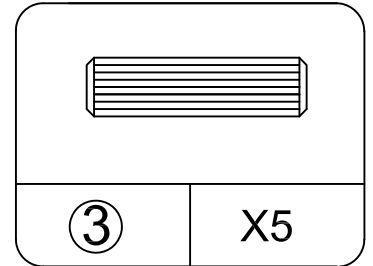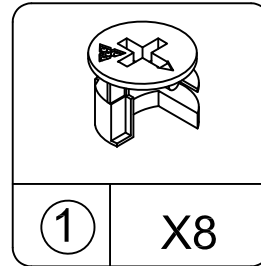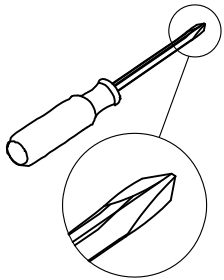











Proper orientation of CAM LOCK

STEP4

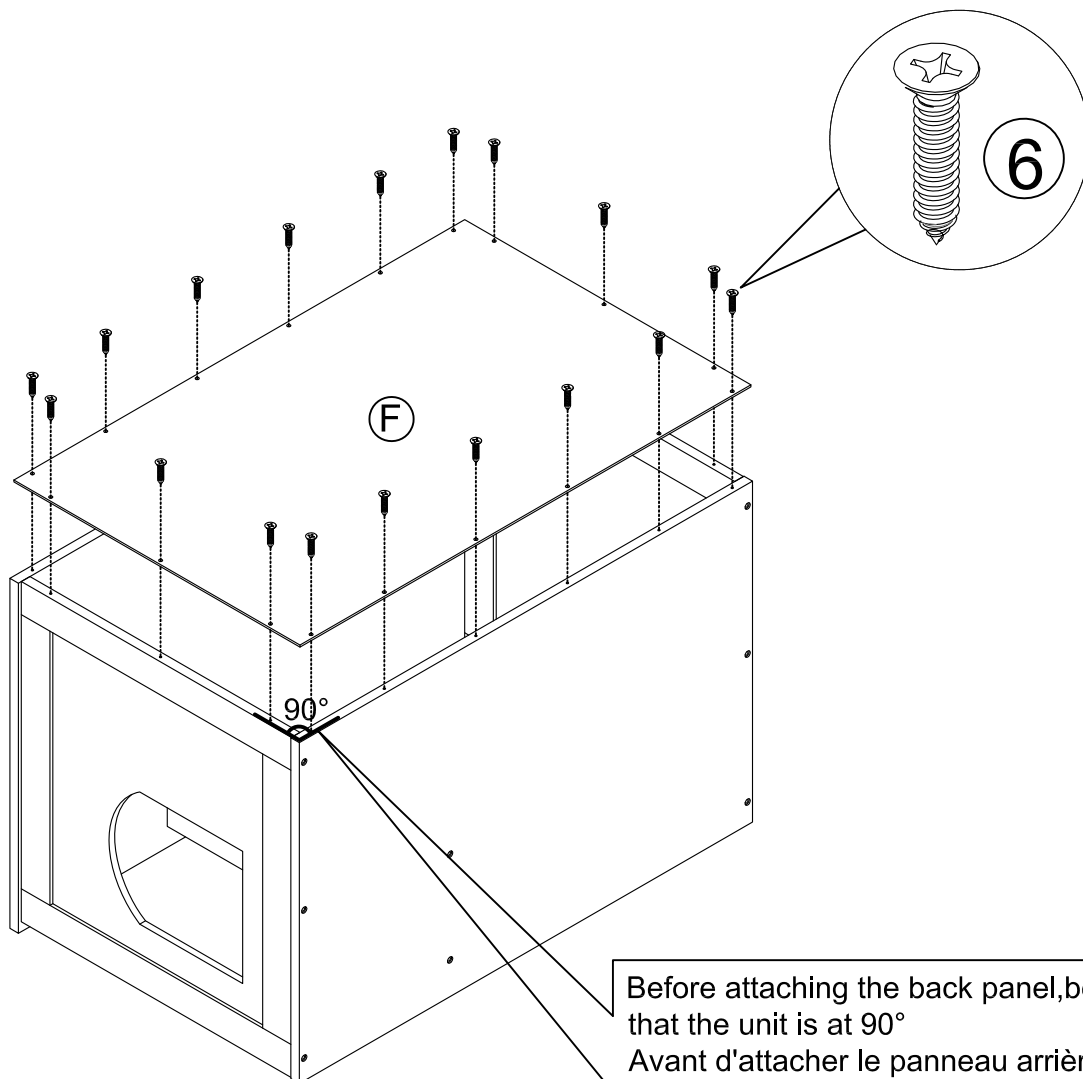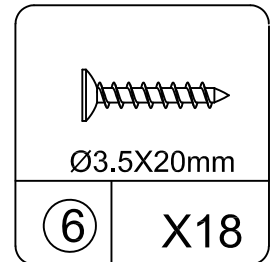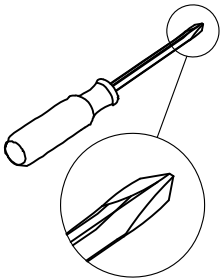

Before attaching the back panel, be sure that the unit is at 90°
Avant d'attacher le panneau arrière, assurez-vous que l'unité est à 90°
Antes de fijar el panel posterior, asegúrese de que la unidad esté a 90°

STEP 5

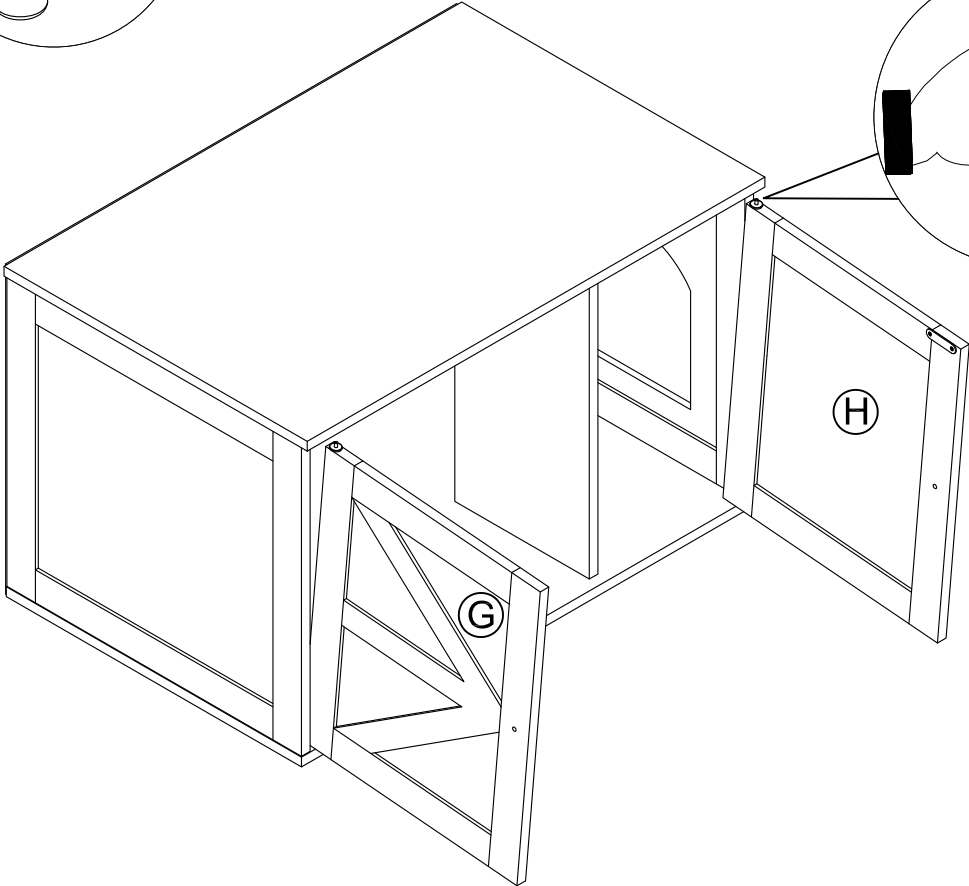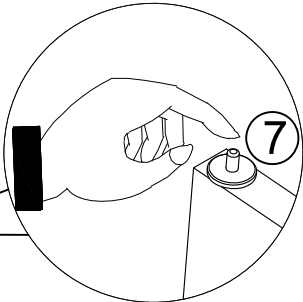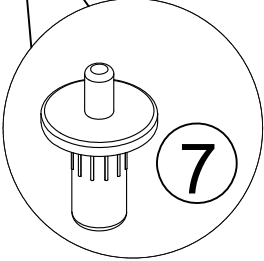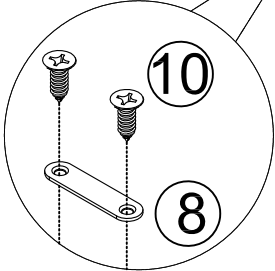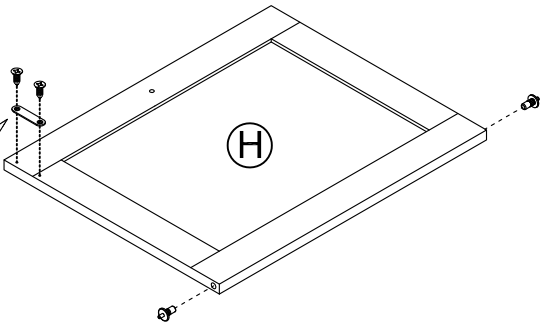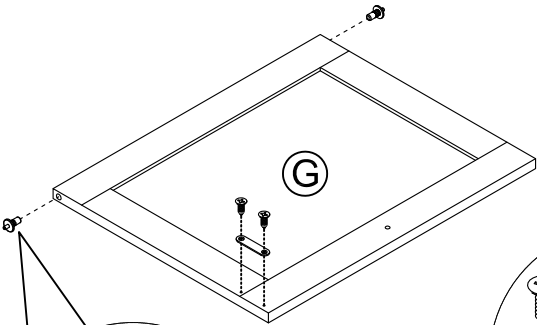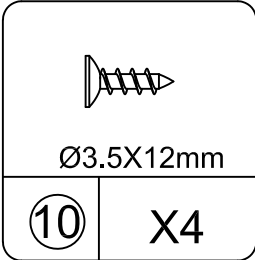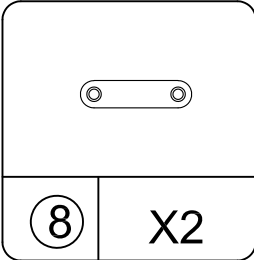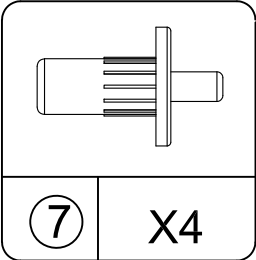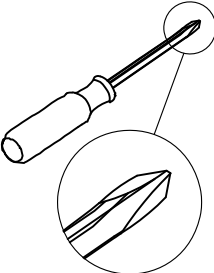

STEP 6

