


muwen



60 mins



Dual-person

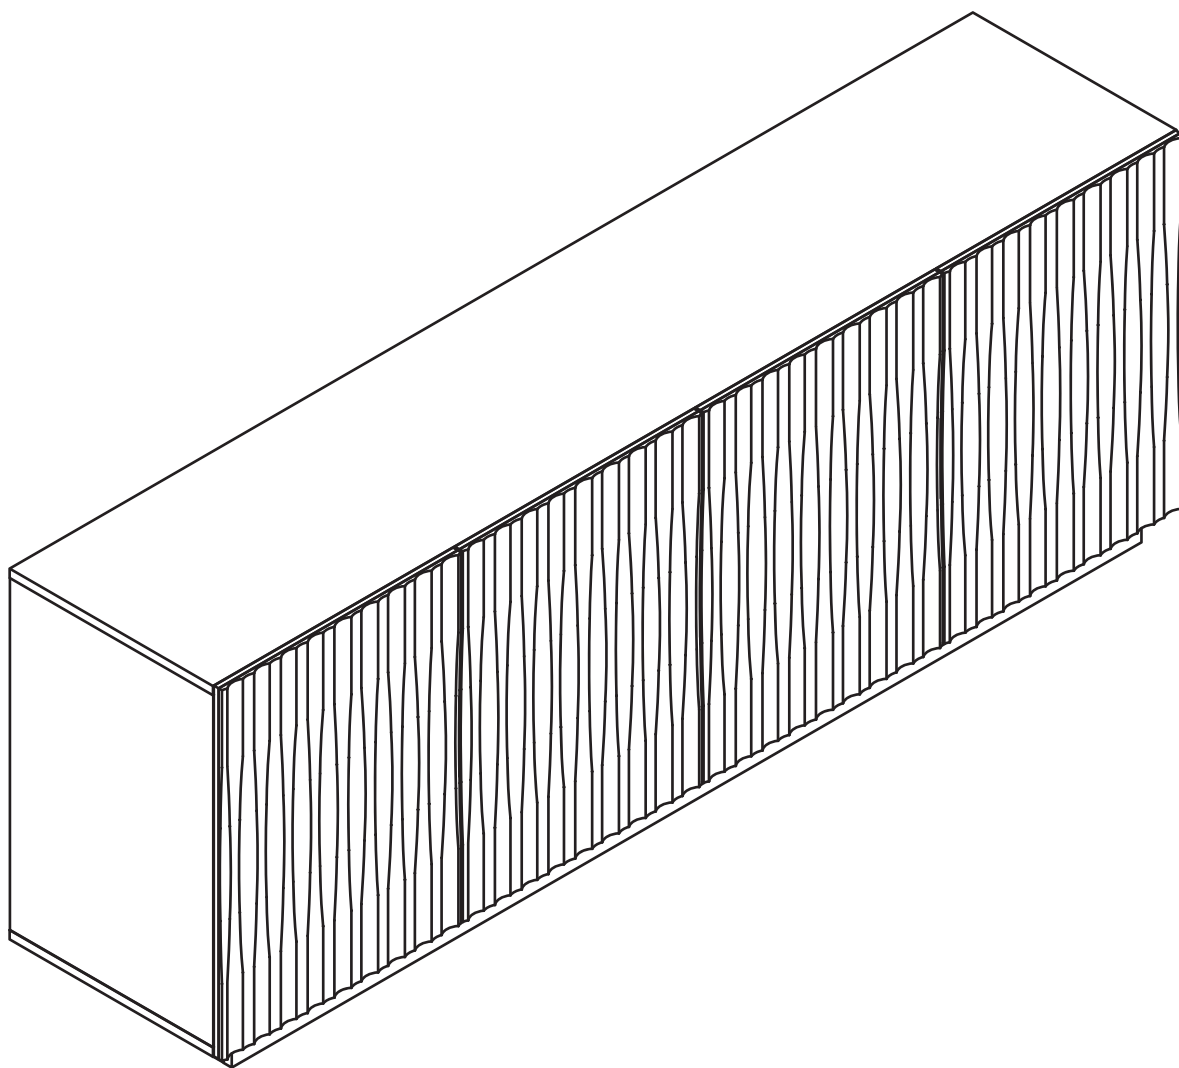


# 71" TV Stand

## MW005



**Assembly Instructions** - Please keep for future reference  
**Important** - Please read these instructions before assembly  
**Customer Support** - [support@muwenhome.com](mailto:support@muwenhome.com)



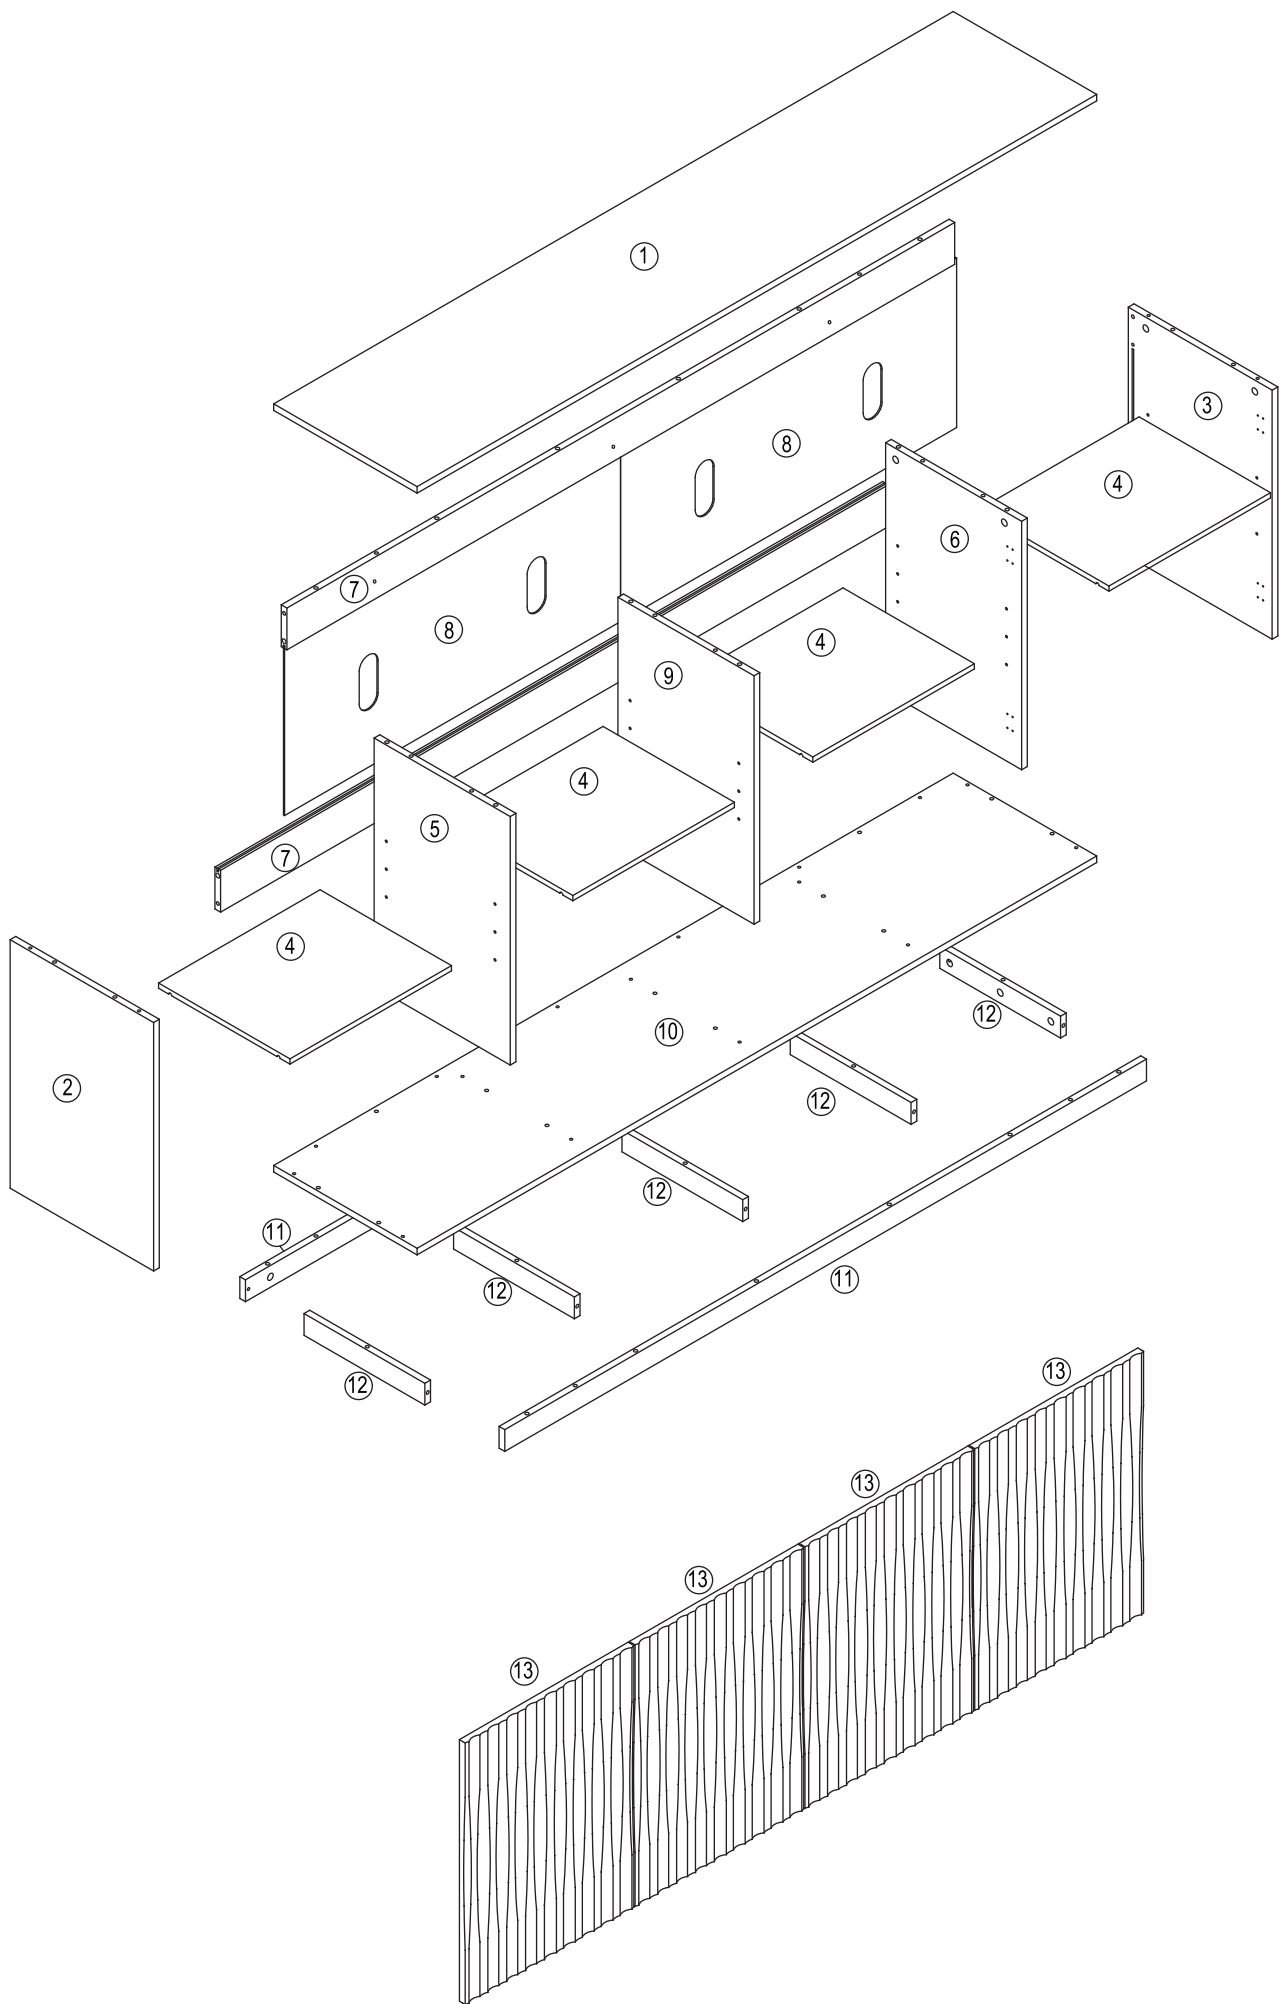

# Components

Please check if all the pieces listed below are received.

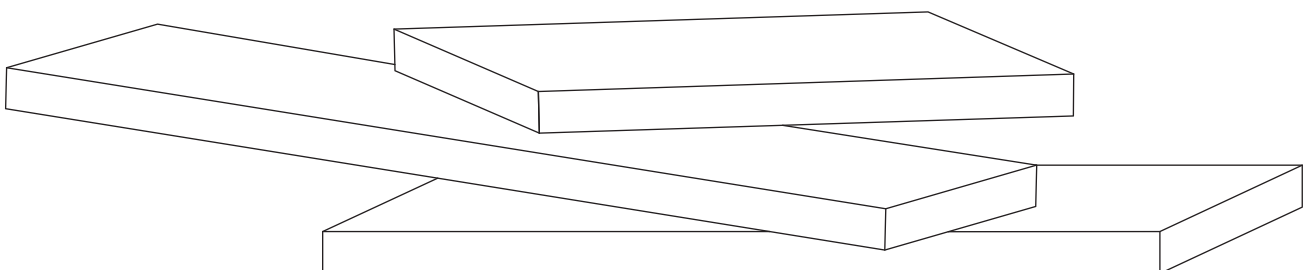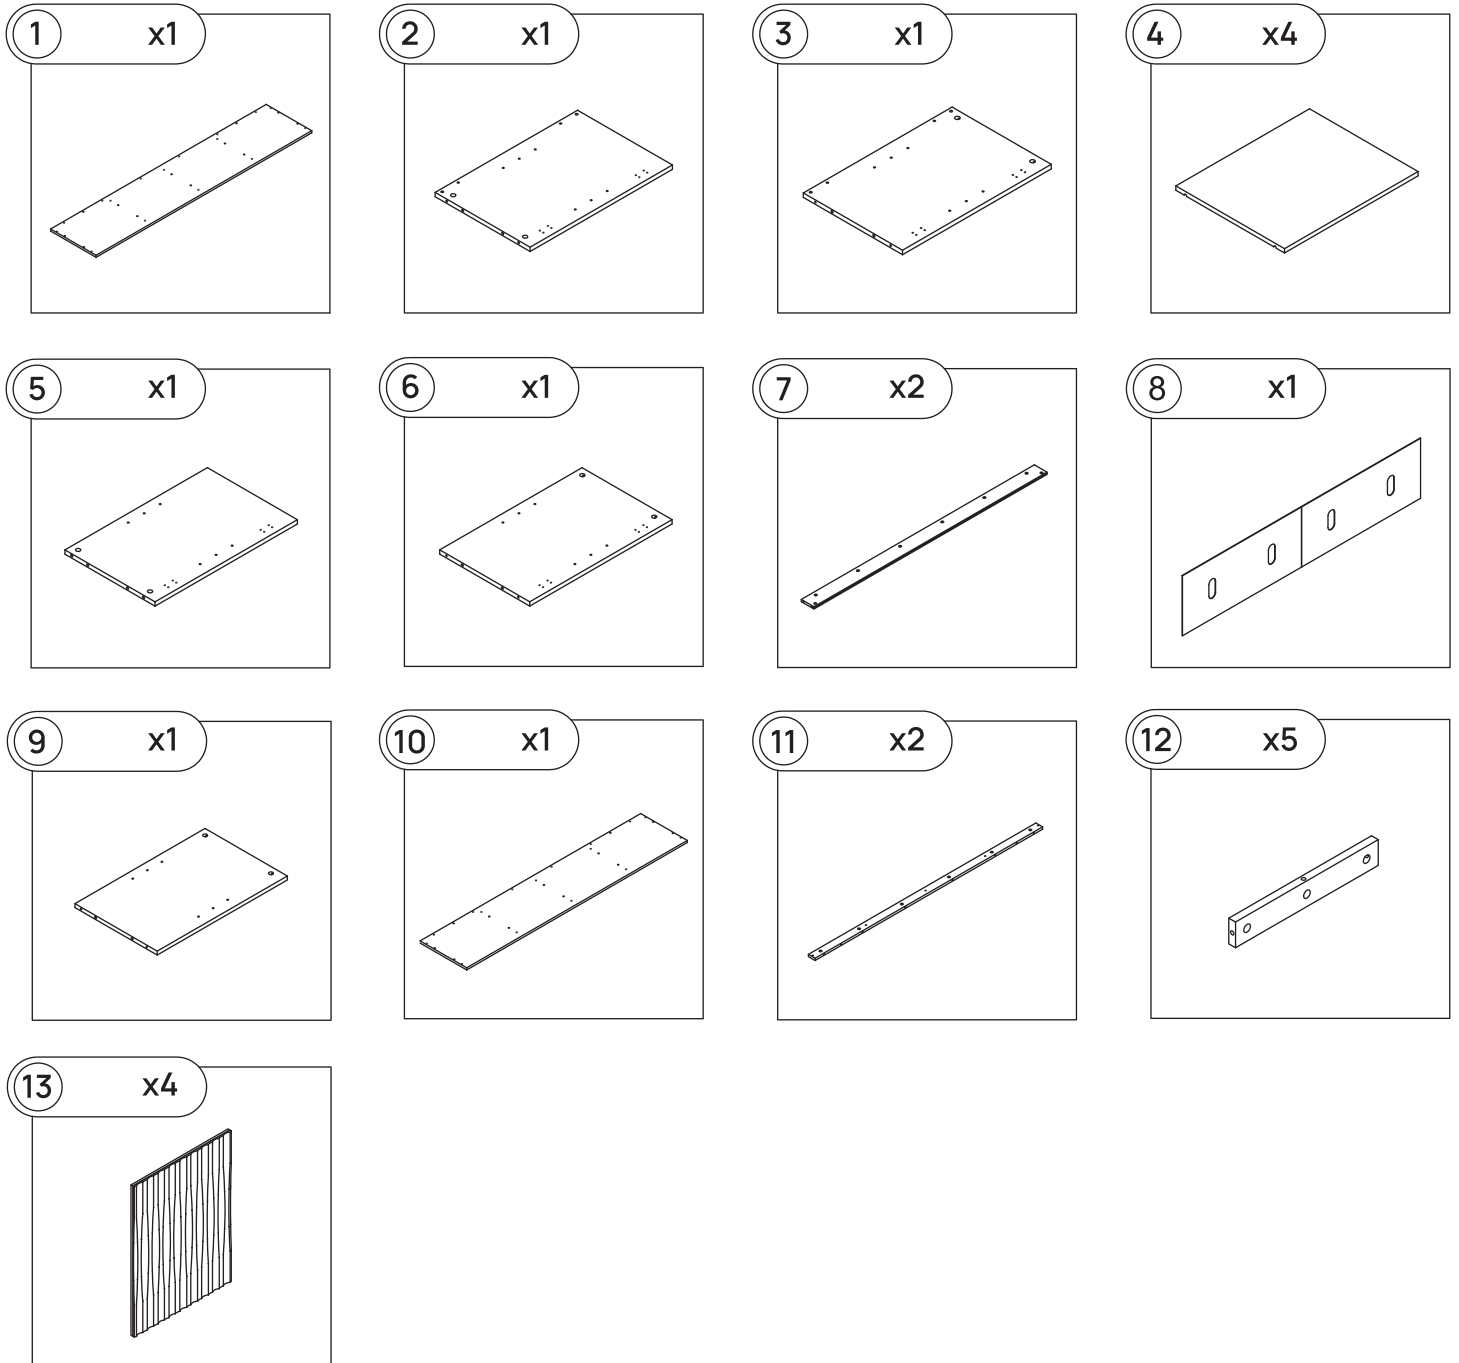




# Components

Please check if all the pieces listed below are received.

A x53+2



ø6x33.5mm

B x53+2




ø15x9.5mm

C x53+2



φ20

D x32+2




ø8x30mm

E x16+1




ø6x48mm

F x4




φ35

G x4




φ35

H x48+2




ø4 x 14mm

I x2



ø8x40mm

J x2




ø4x14mm

K x2




ø4x38mm

L x2

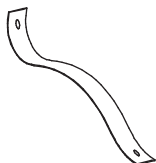

M x8




15x15x10mm

N x16+1




φ5x17 mm

O x8





ø3 x 16mm

P x1

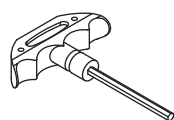


4mm


Q x1

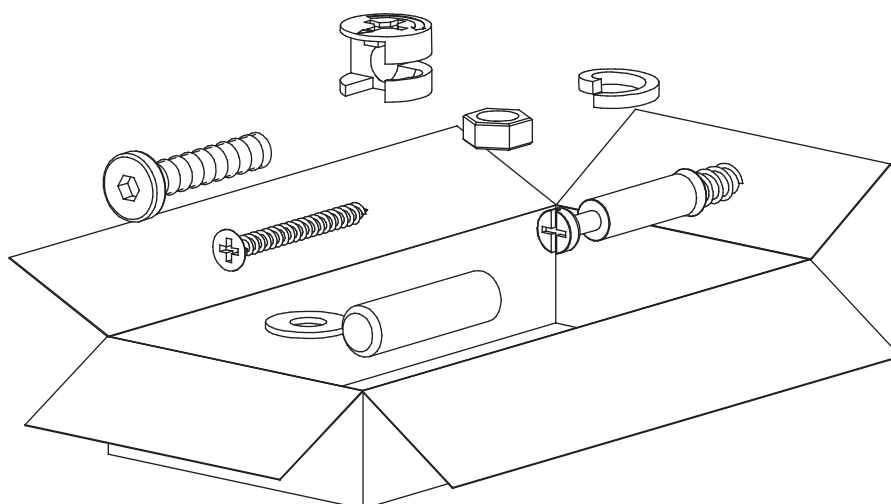

## Step 1

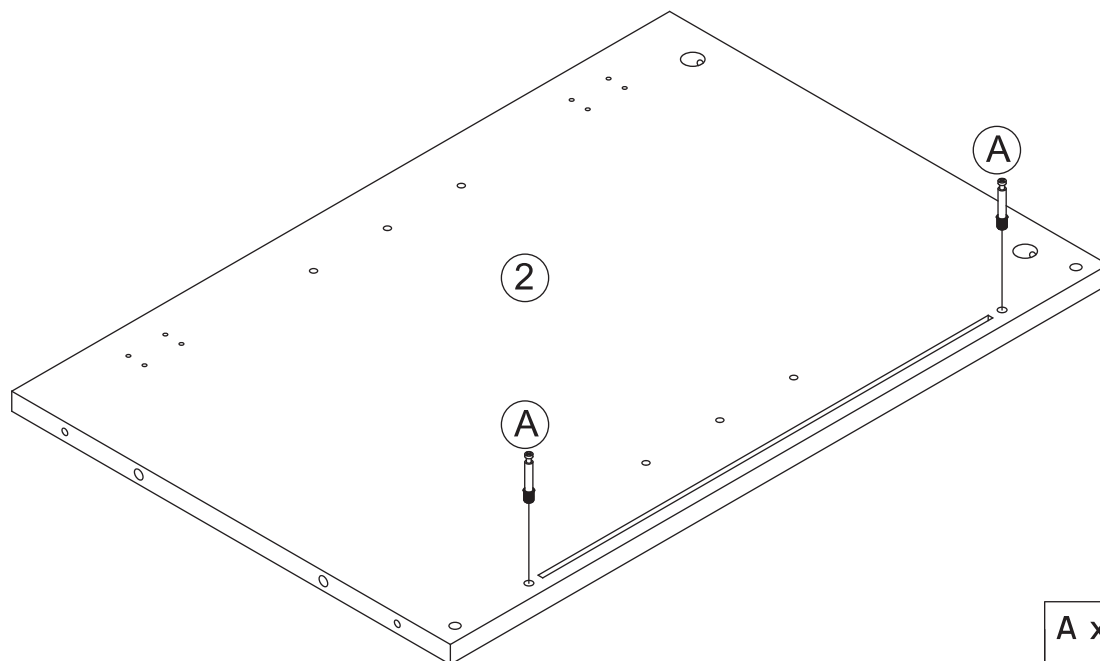


A x2




ø6x33.5mm

## Step 2

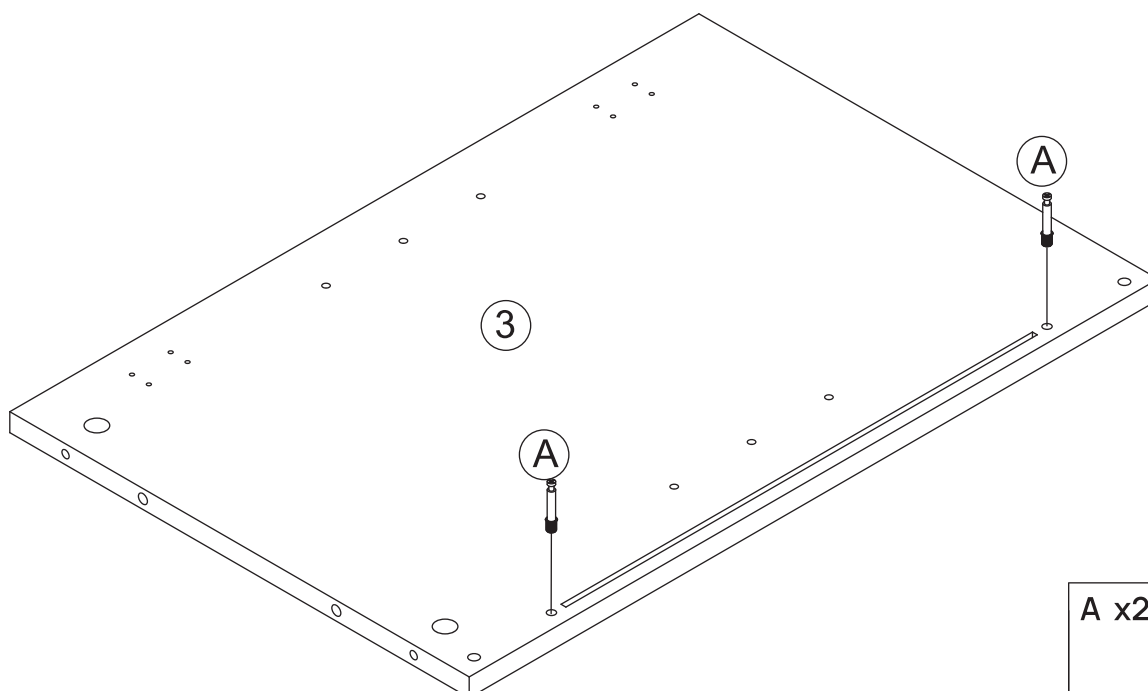


A x2




ø6x33.5mm


### Step 3

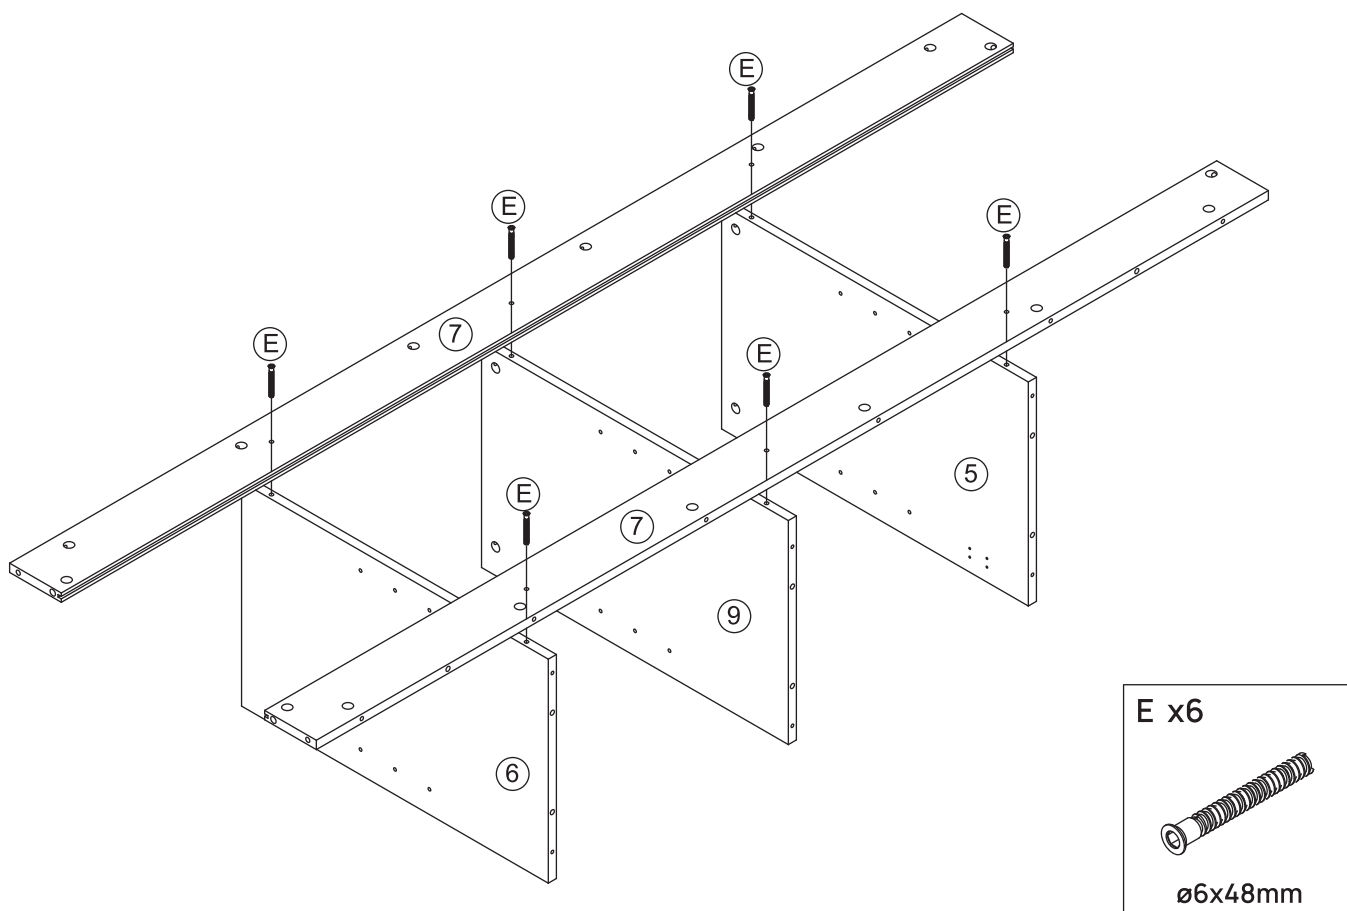


### Step 4

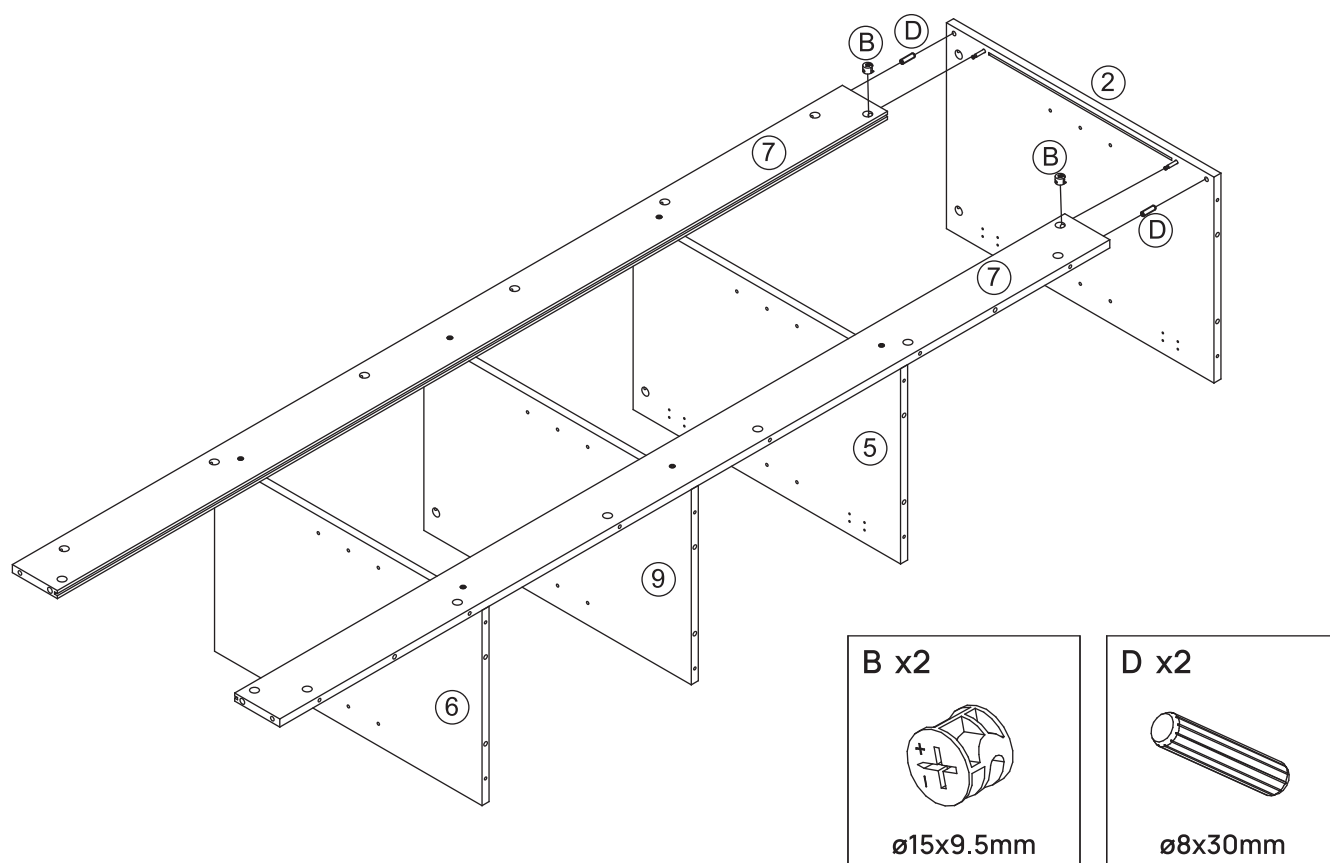

## Step 5

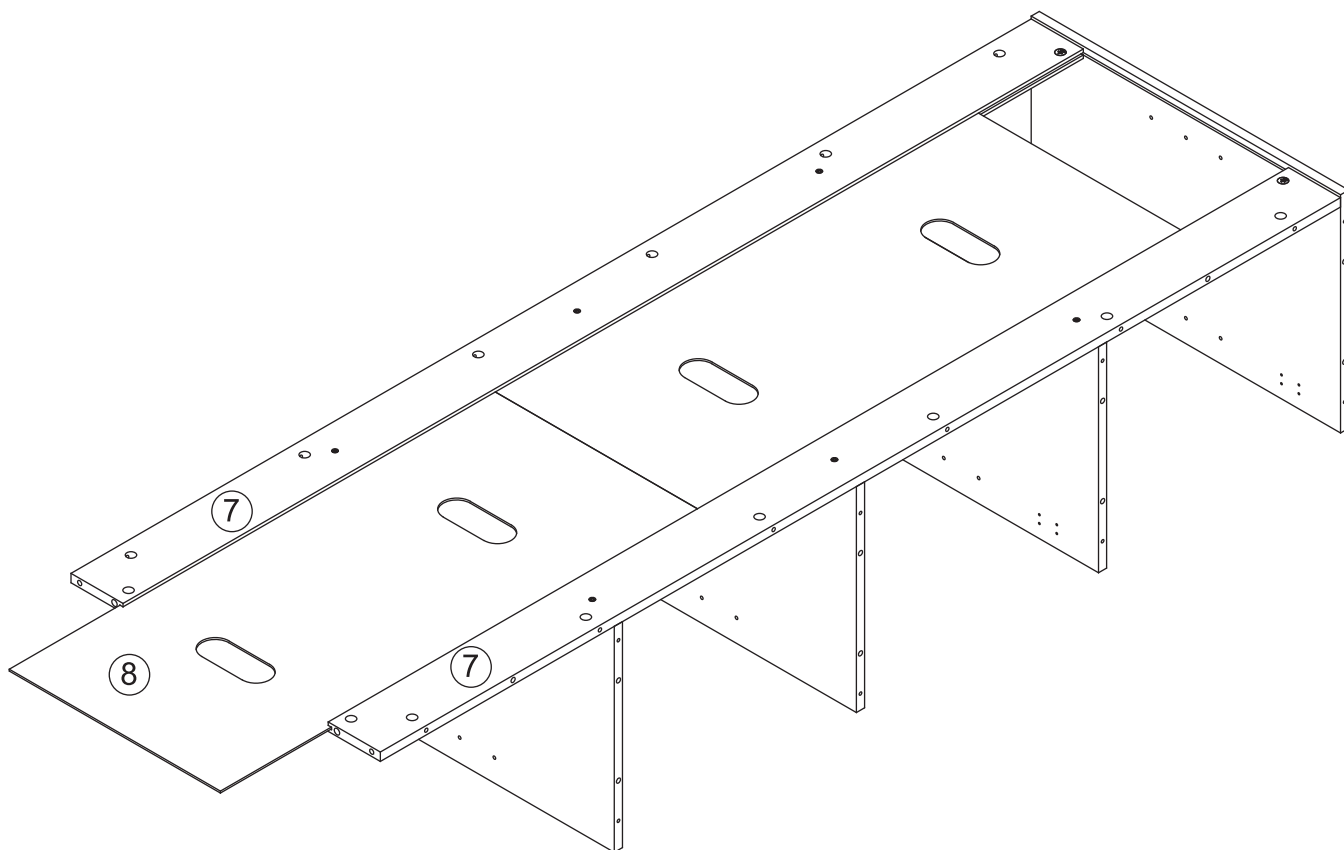

## Step 6

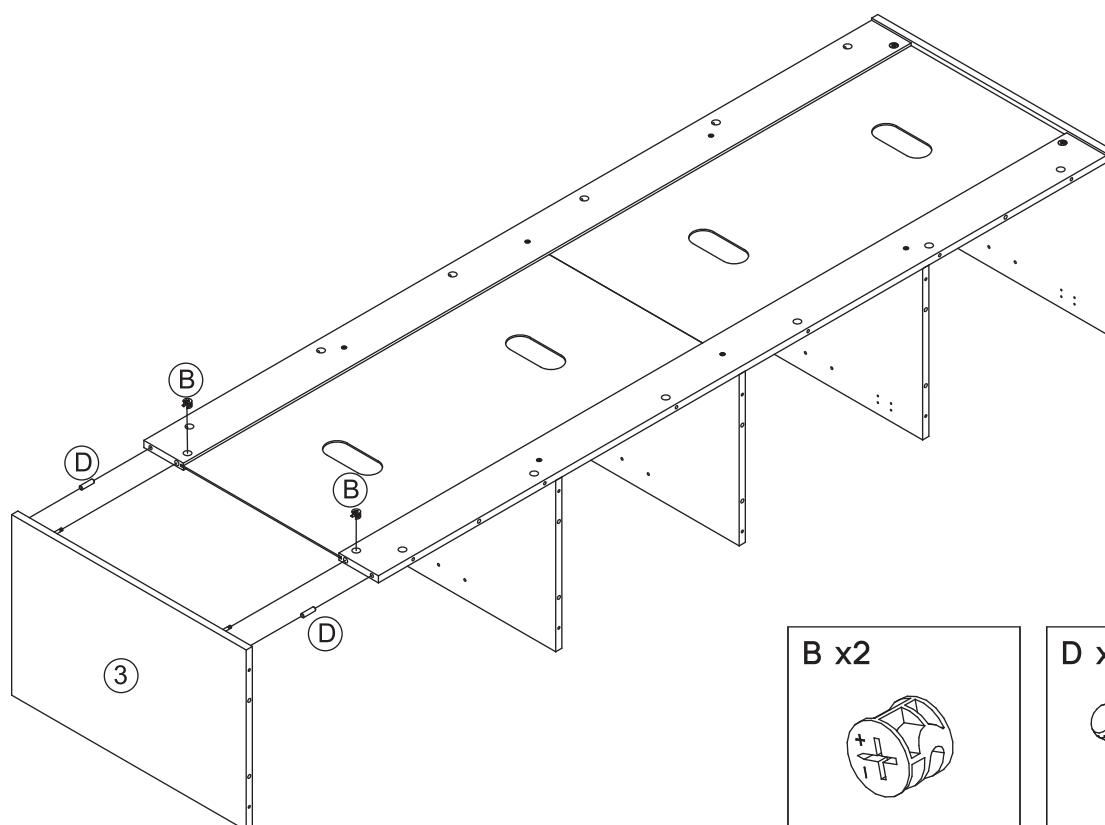


B x2




ø15x9.5mm

D x2




ø8x30mm


## Step 7

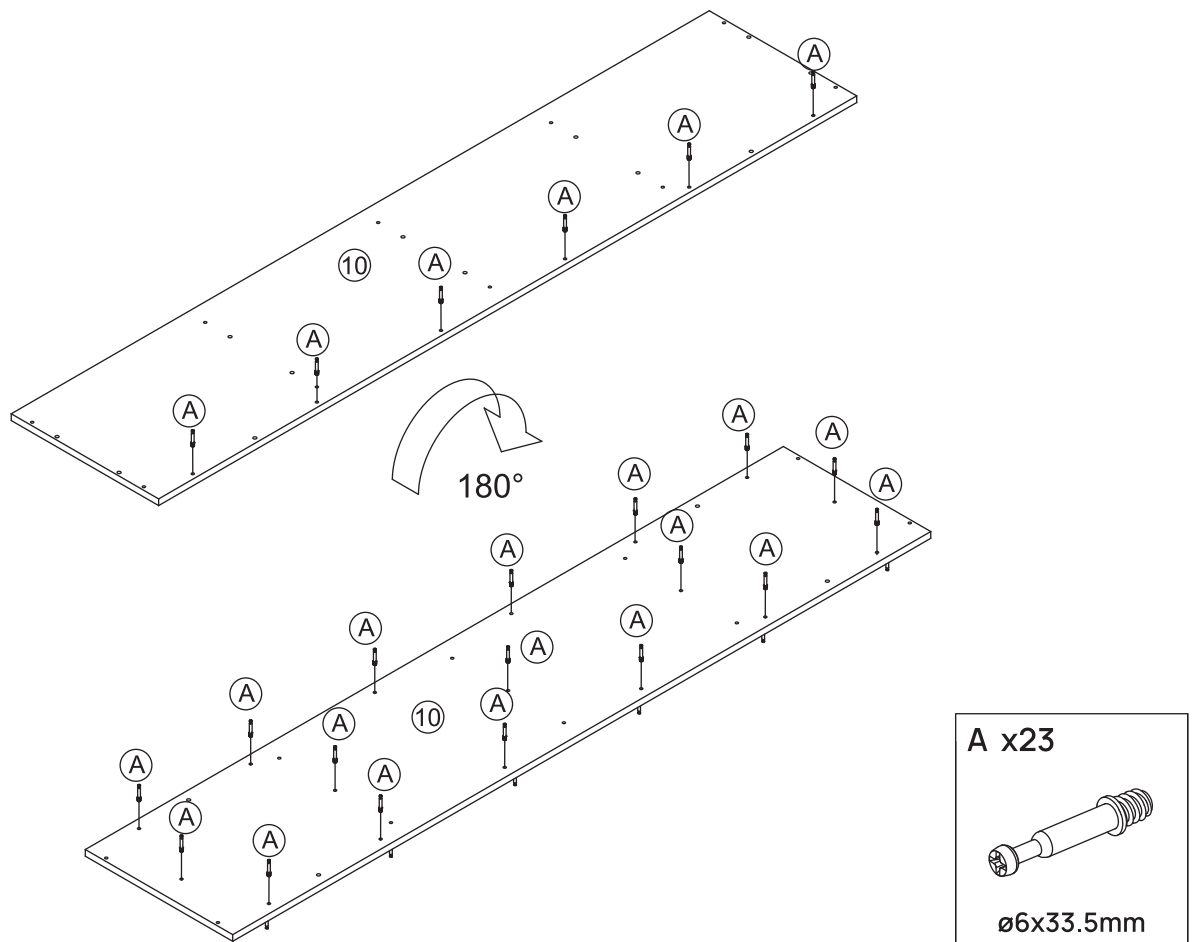


## Step 8

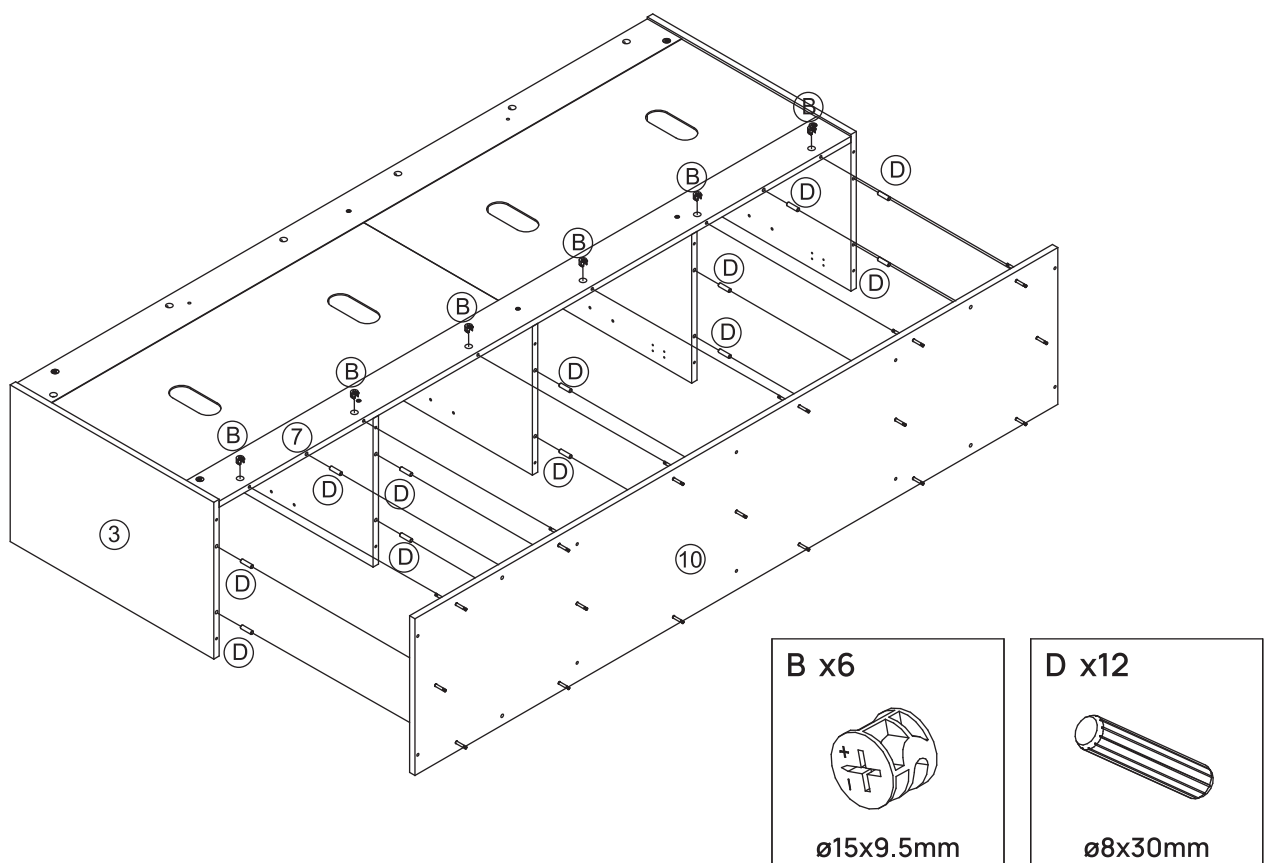


## Step 9

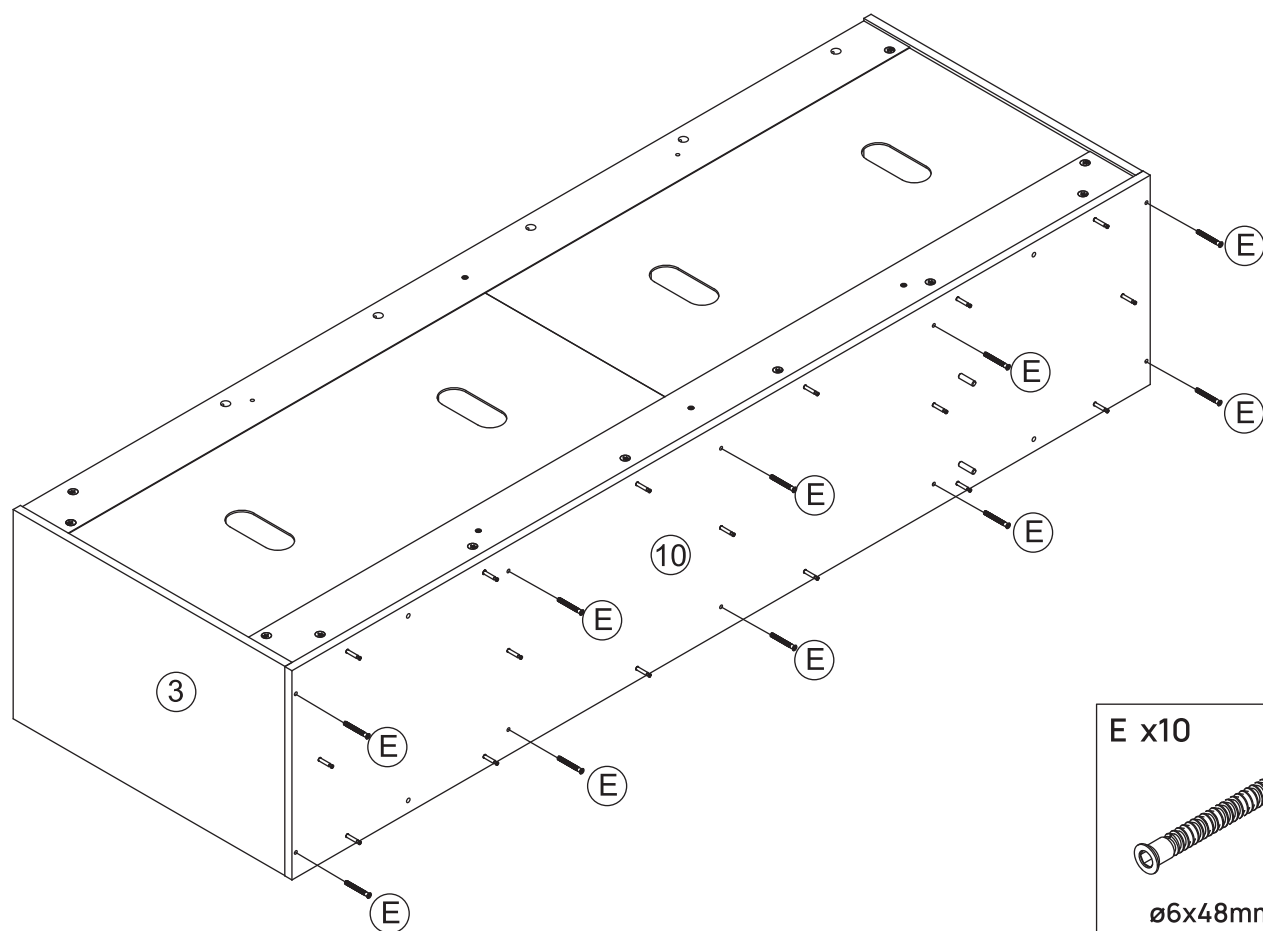


## Step 10

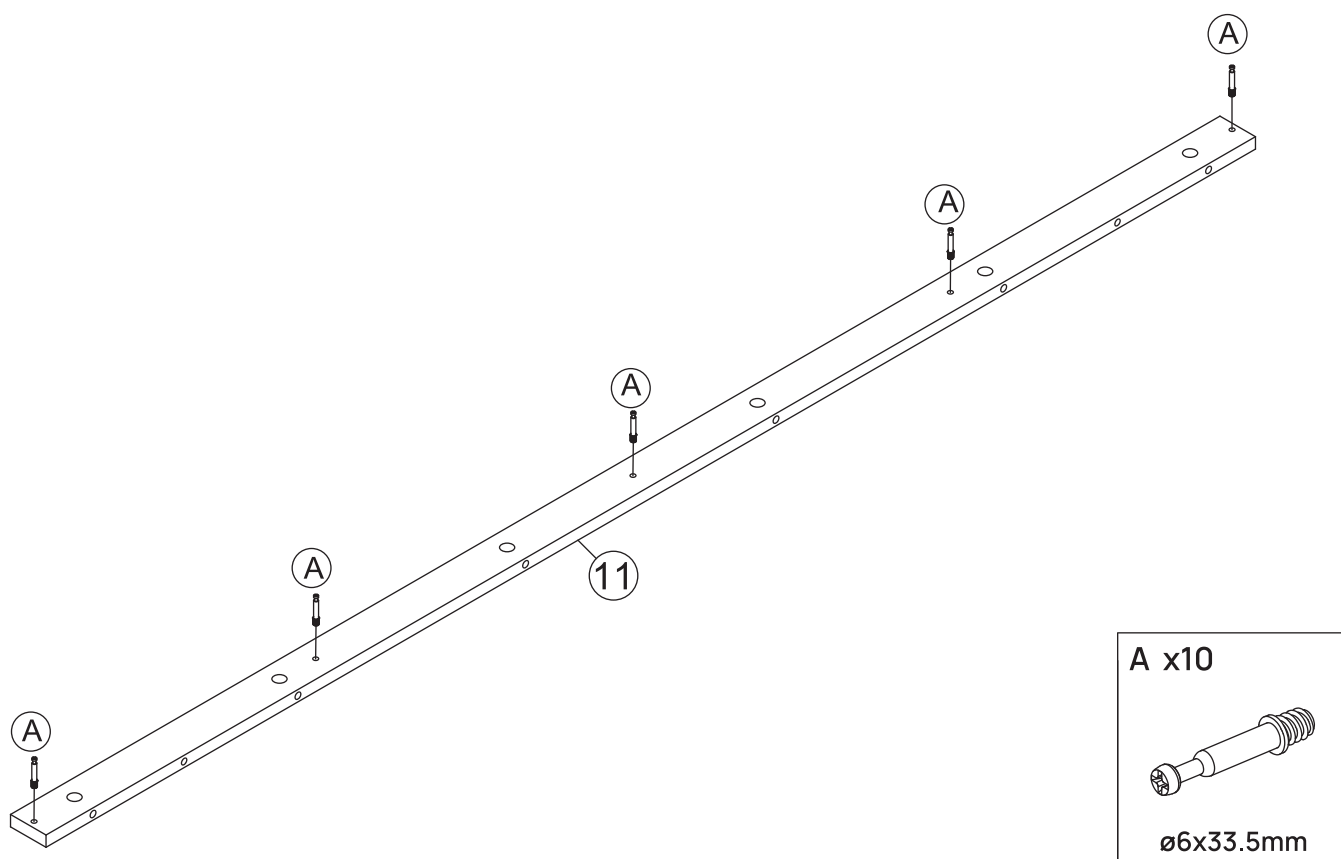

## Step 11

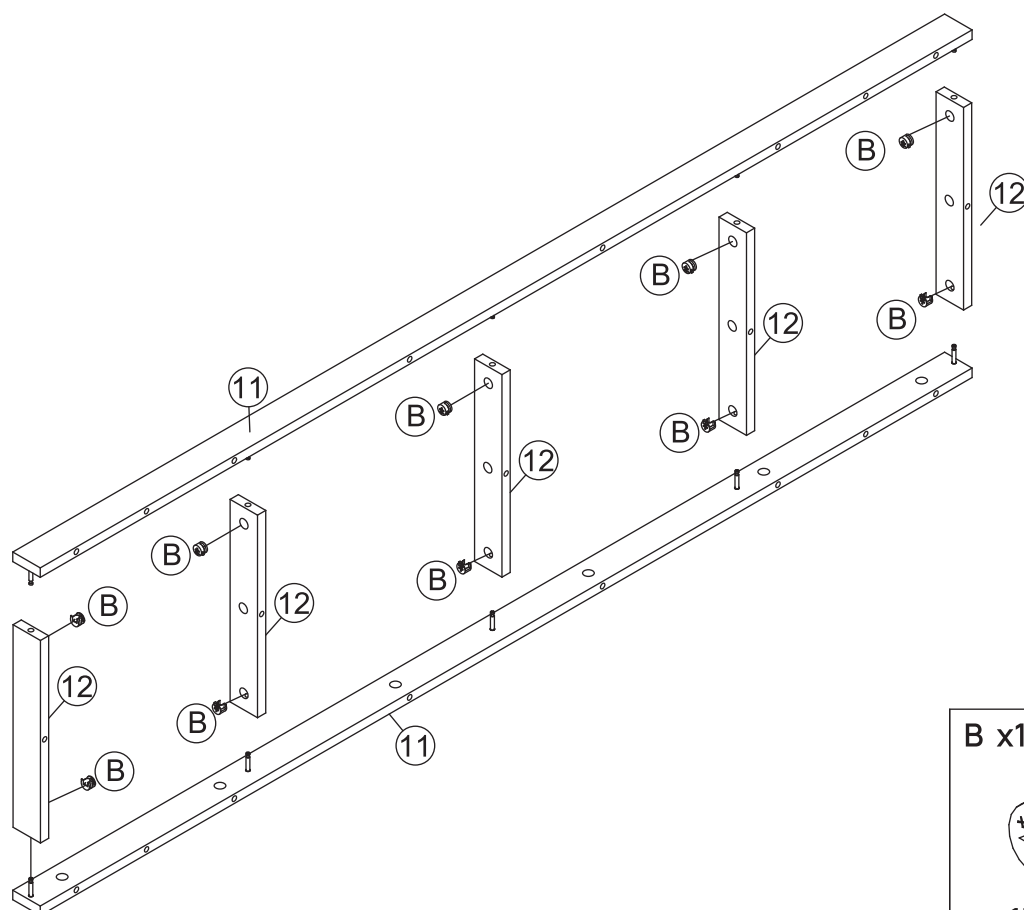


B x10



ø15x9.5mm

## Step 12

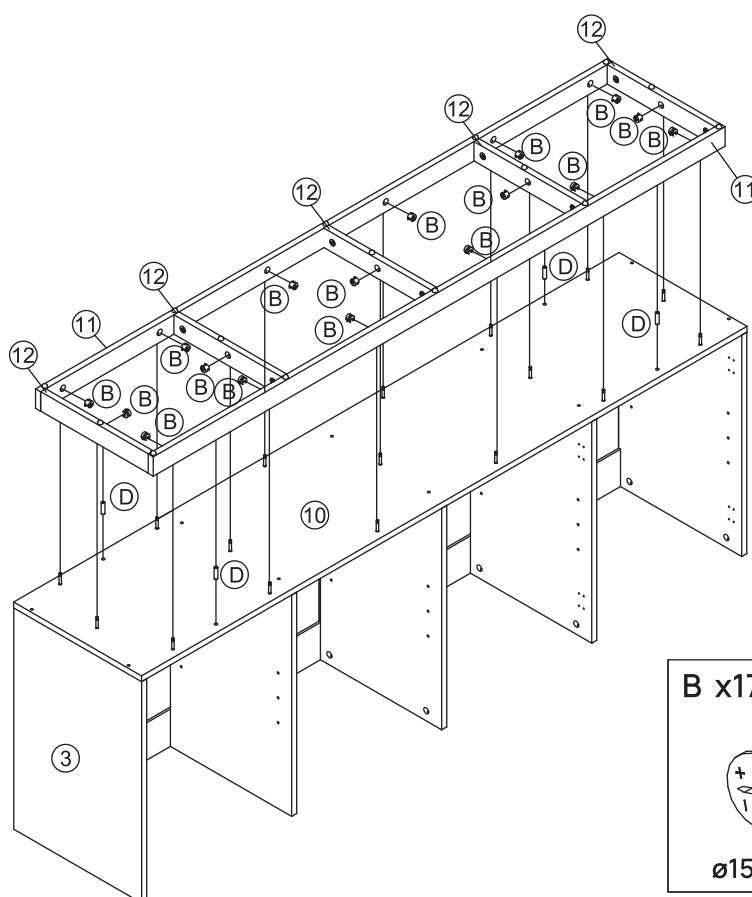


B x17




ø15x9.5mm

D x4




ø8x30mm

## Step 13

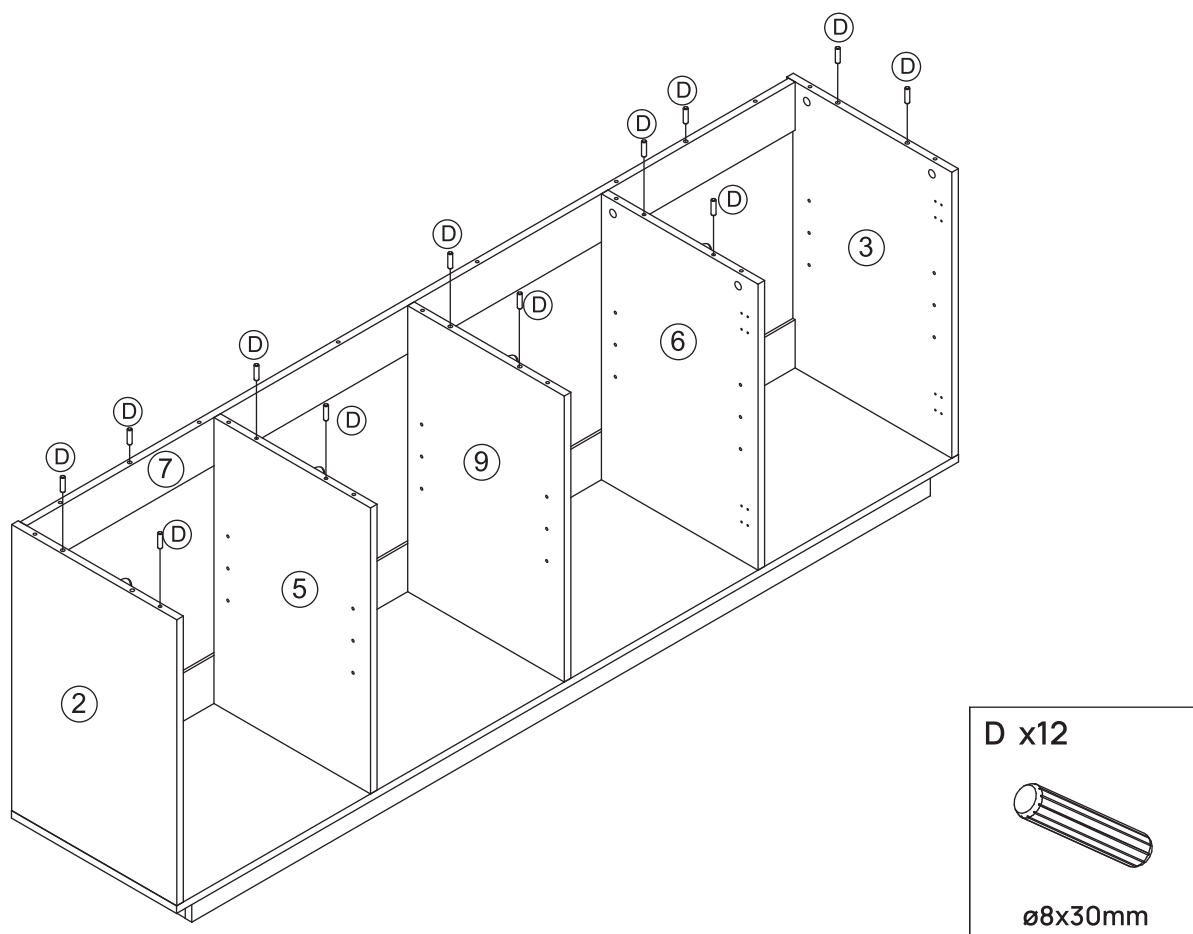


## Step 14

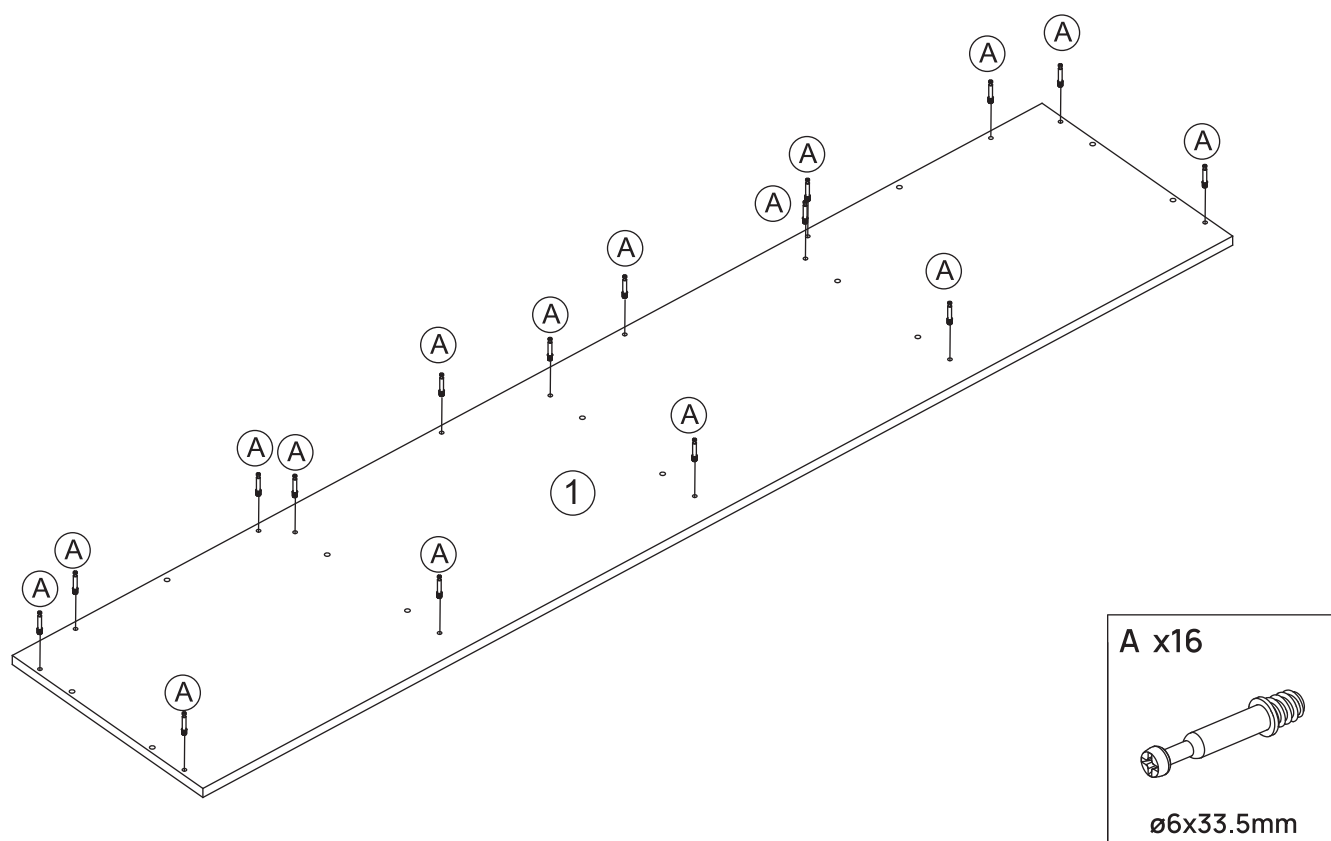



## Step 15

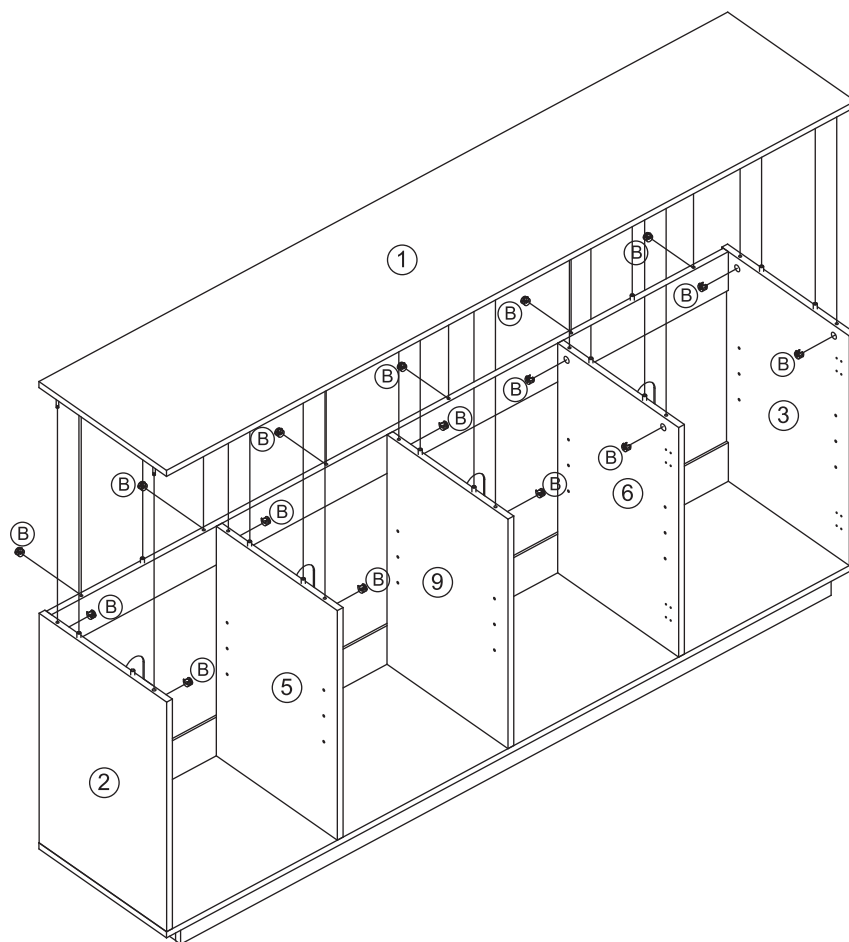


B x16




ø15x9.5mm

## Step 16

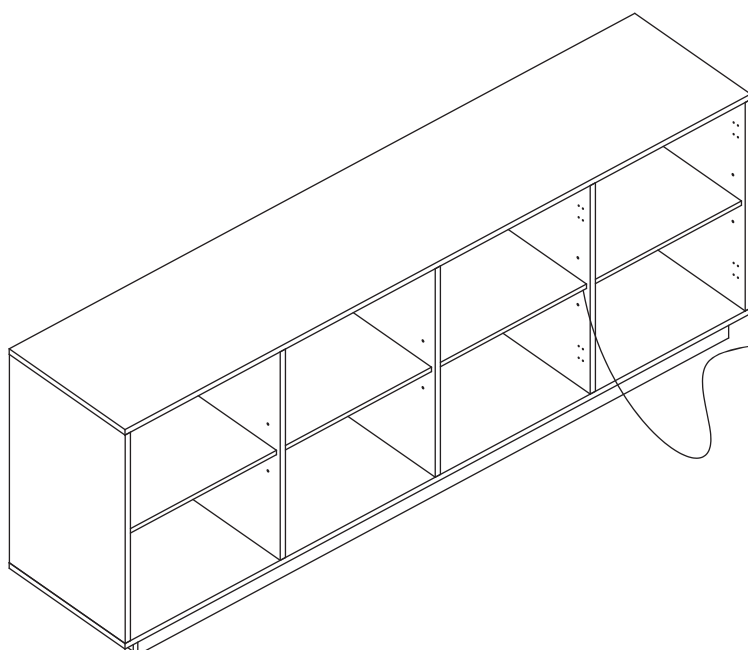

N x16

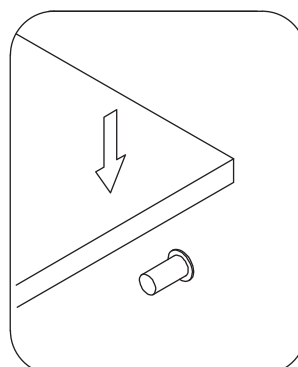


N x8




ø5x17 mm

## Step 17


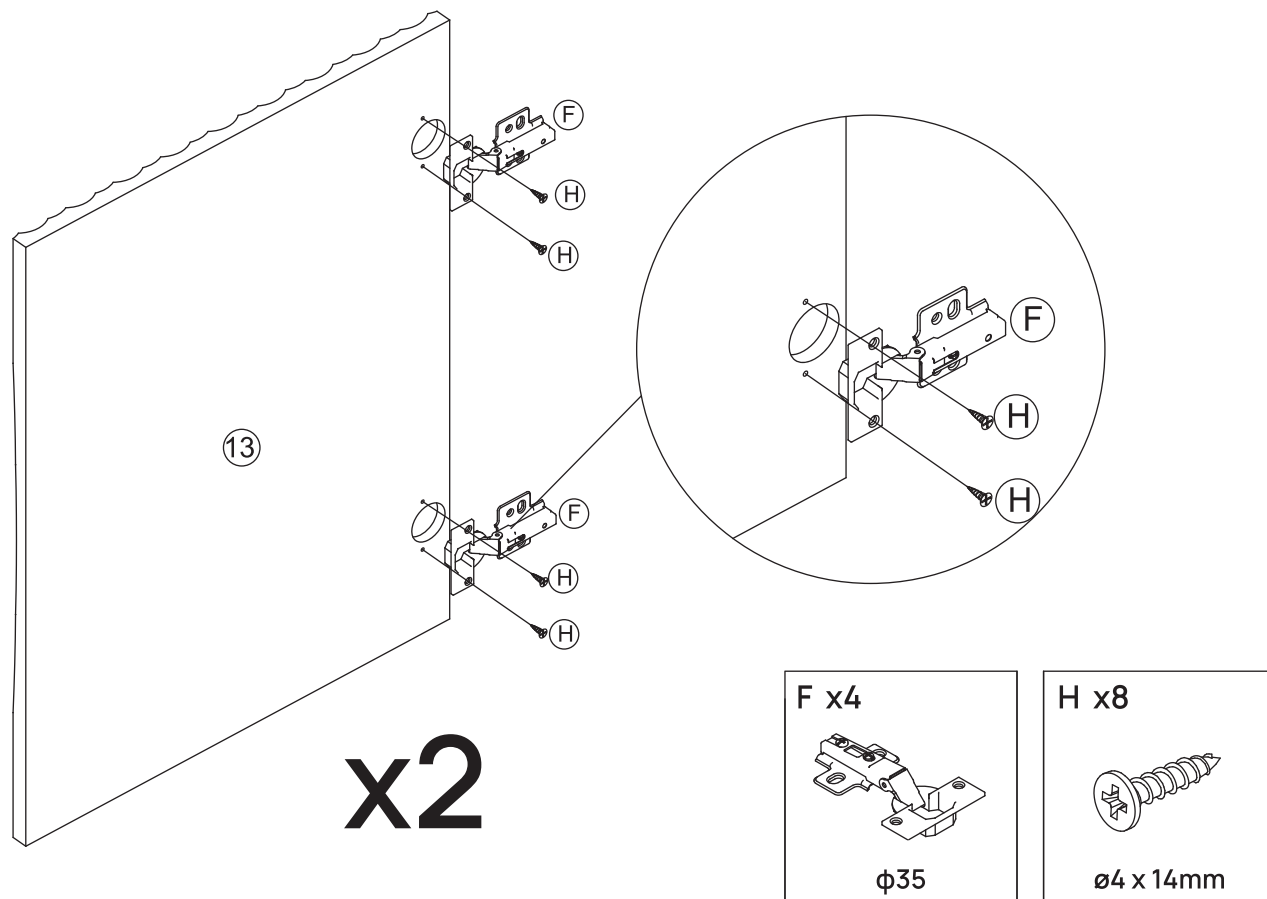


## Step 18

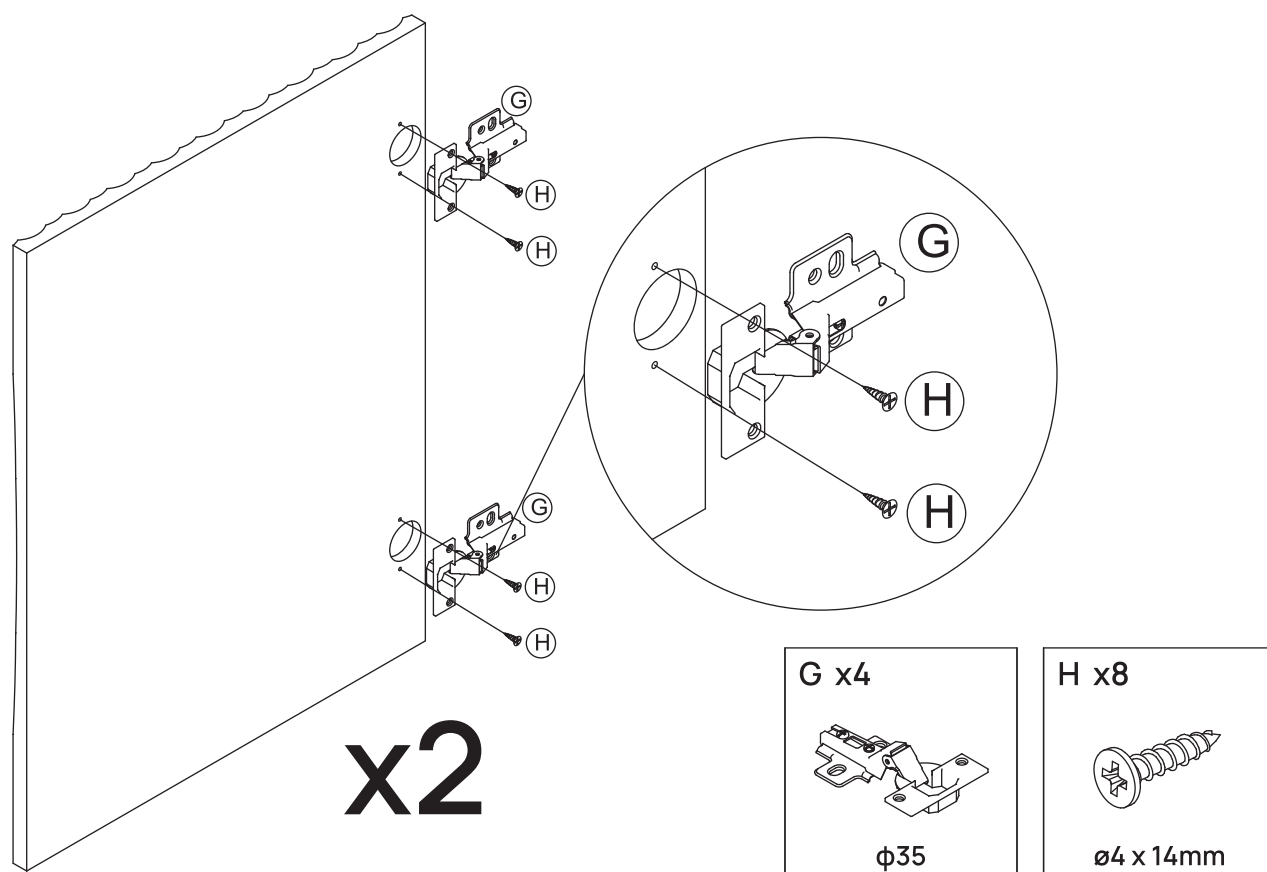


## Step 19

YOU WILL USE HINGE ADJUSTMENT INSTRUCTION ON THIS PAGE FOR THE NEXT STEP.

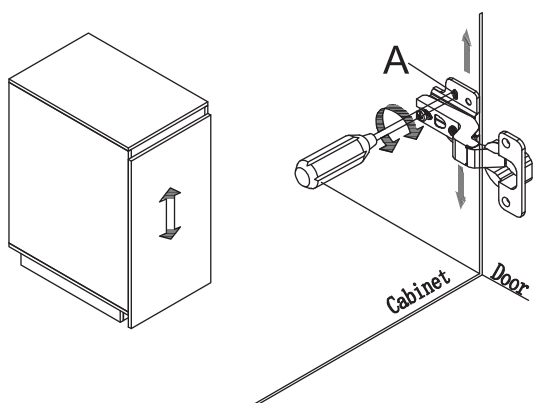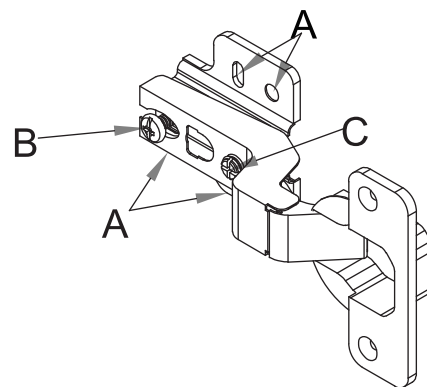



If you find a large gap above or below the door.

To adjust the vertical height.  
Loosen the four screws "A" on both hinges.  
Two of them are usually in slotted holes which allows you to adjust up or down by a few mm.  
Then tighten back up.

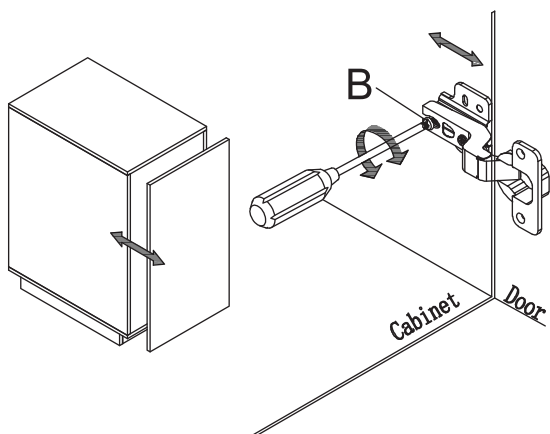


If you find the door is too protruding or too inside.

To adjust depth.  
Loosen screw "B" on both hinges and move the door to suit. If the door doesn't move, turn screw "C" on both hinges 1-2 turns and try again. Finally, tighten both screw "B" and reset both screw "C".

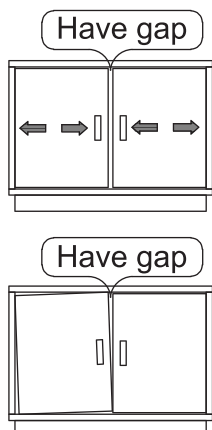
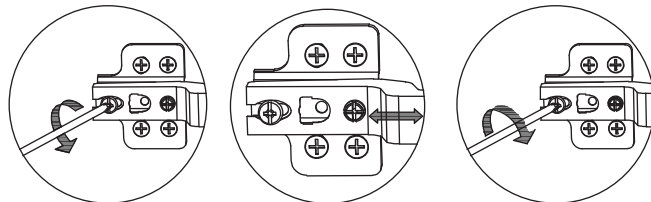


If you find a large gap between or beside the doors.  
Don't worry, it's not the problem with product.

To adjust side ways.  
Turn screw "C" clockwise or counterclockwise on both hinges until the door is in the desired position.

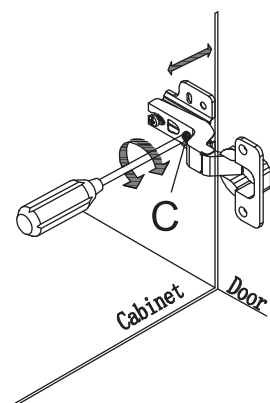


## Step 20

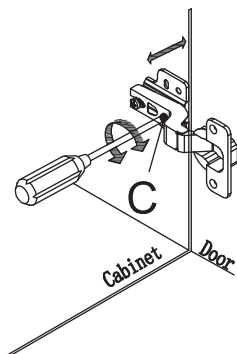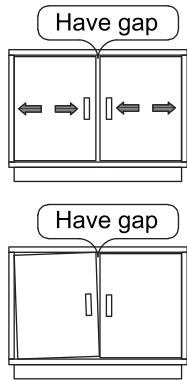


If you find a large gap between or beside the doors. Don't worry, it's not the problem with product.

To adjust side ways.

Turn screw "C" clockwise or counterclockwise on both hinges until the door is in the desired position.

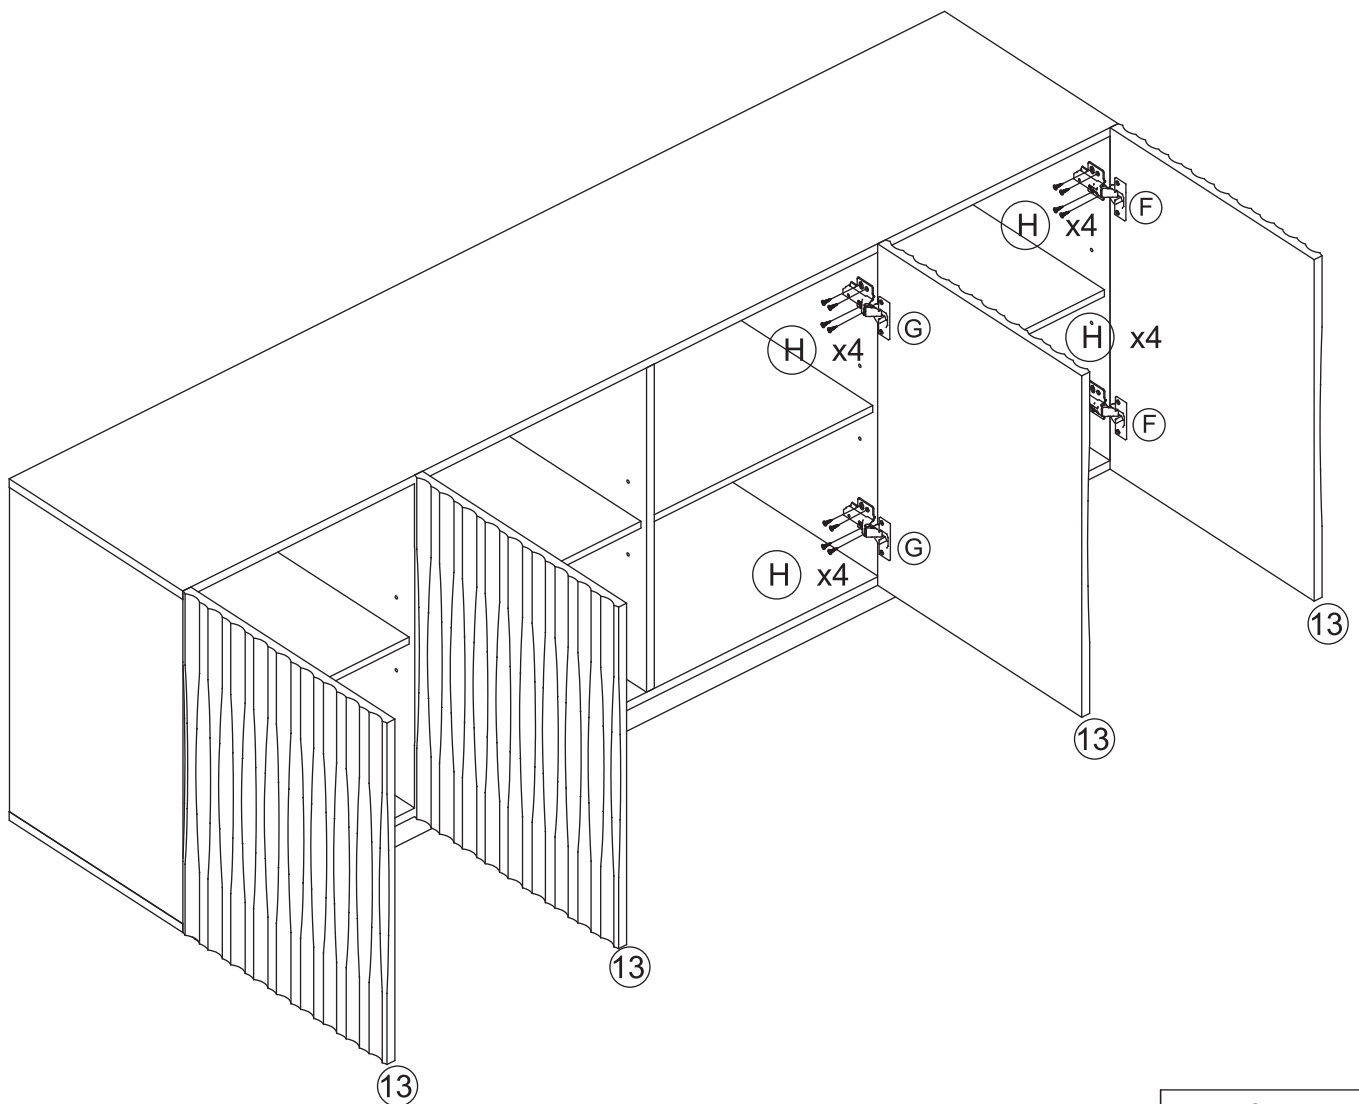

H x32



ø4 x 14mm