



ASSEMBLY INSTRUCTION

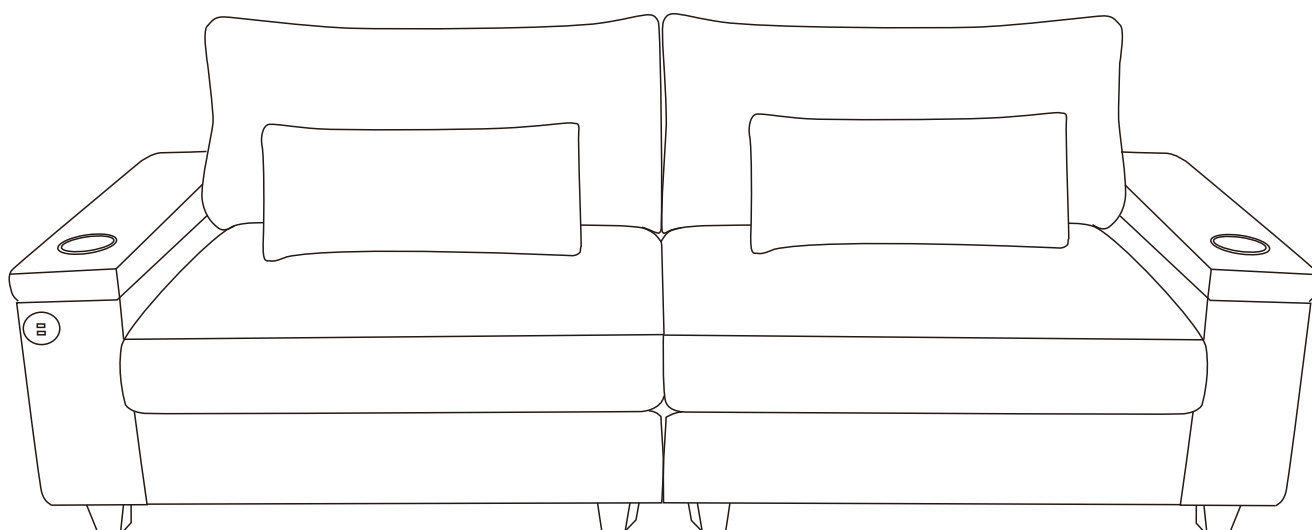


Components List


Carton:1

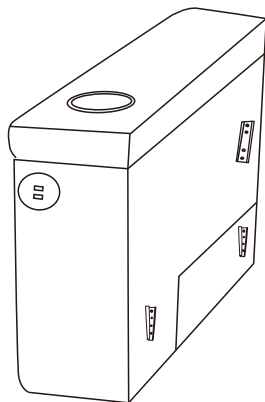


J-Lx1

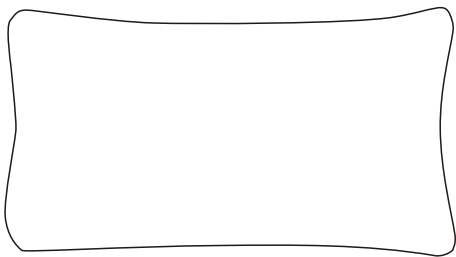


Kx1

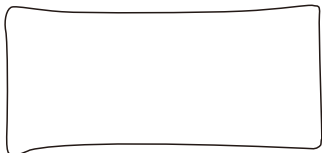

Lx1

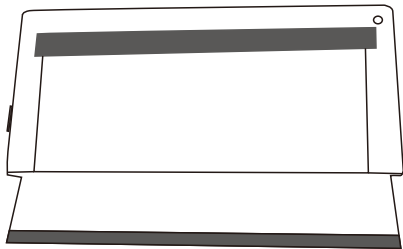

Mx1

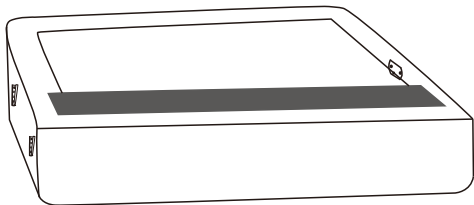

Nx1




Ox1

Hardware List


A  M8x90mm x 8	B  x 1	C  x 4	D  x 1	E  M6x16mm x 8	F  x 1	G  x 1
H  x 1	I  x 8	R  x 2	S  M6x25mm x 2	T  x 1	U  x 1	

Components List


Carton: 2

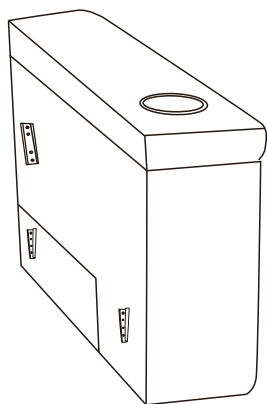

J-R×1

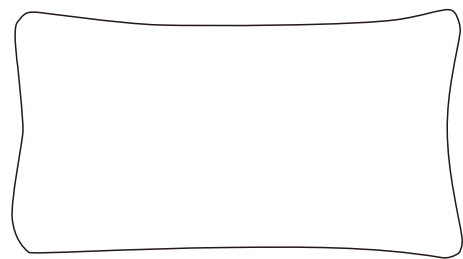


K×1

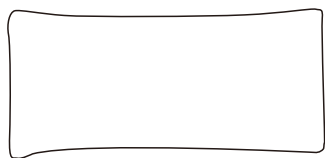

L×1



P×1

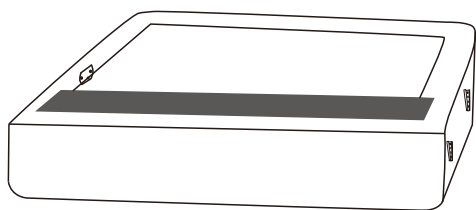

Q×1




O×1

Hardware List


C



x 4

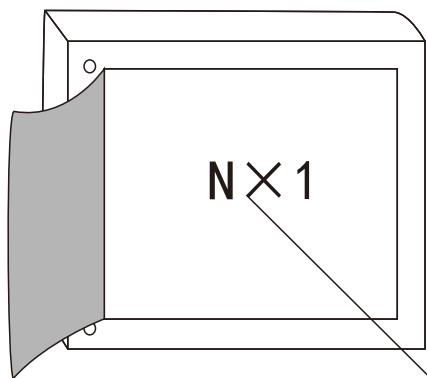

N x 1

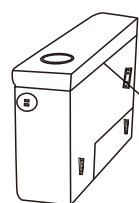

J-L x 1




K x 1




O x 1


A M8x90mm x8	B x1	C x4	D M6x16mm x1	E M6x16mm x8	F x1	G x1
H x1	I x8	R x2	S M6x25mm x2	T x1	U x1	

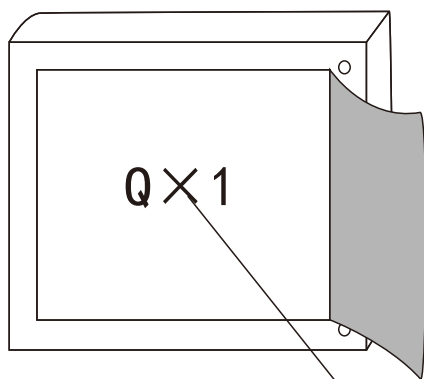

Q x 1

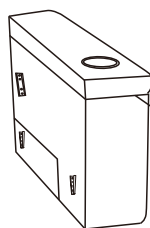


J-R x 1



O x 1




K x 1



x4

STEP 1


Connect the armrest to the seat frame.

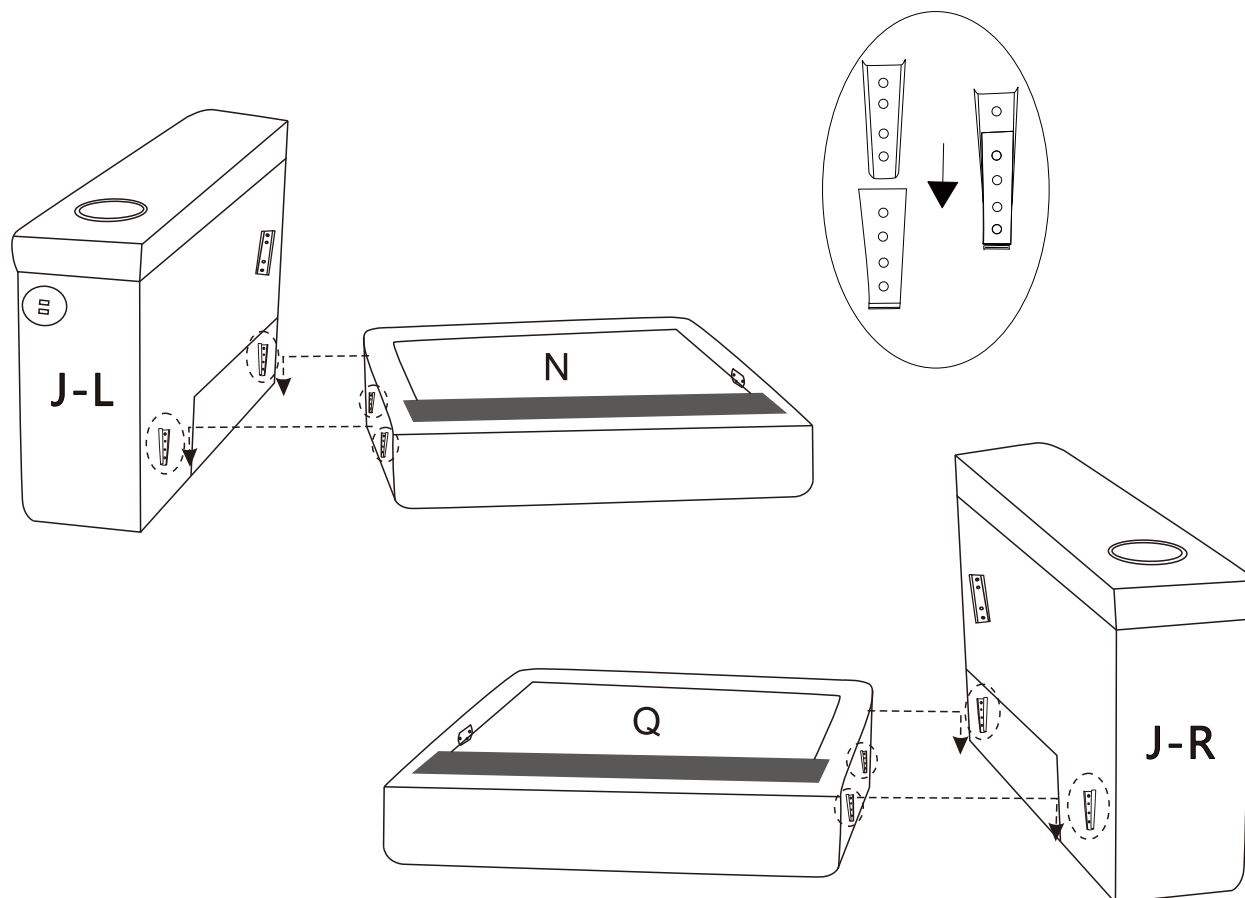

STEP 2

Attach leg to the bottom frame of the sofa.


	C x 8
 M8x90mm	A x 8
	B x 1
	I x 8

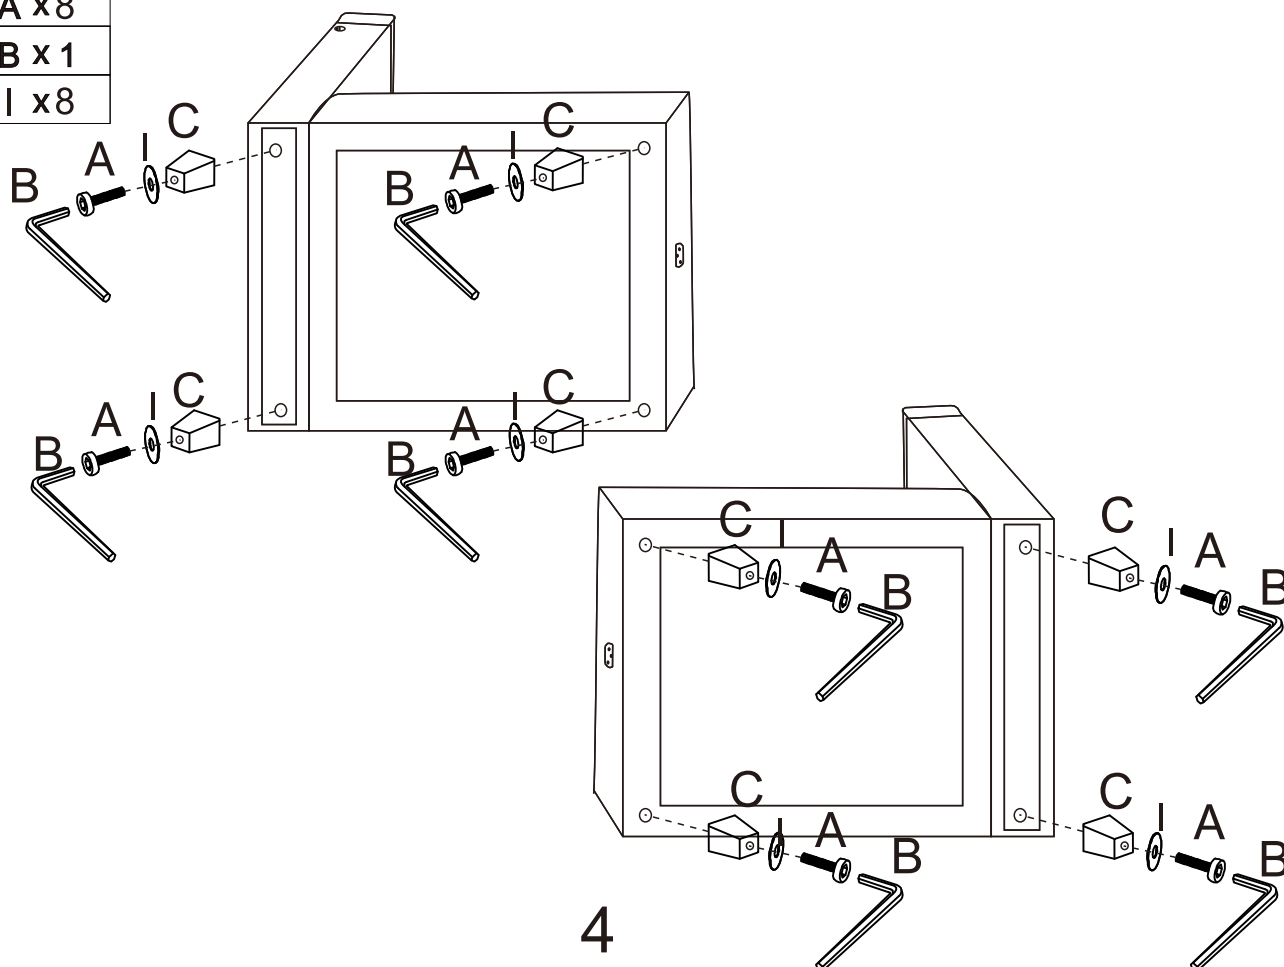

STEP 3


Connecting the backrest.

	E x 8
	F x 1
	G x 1
	H x 1

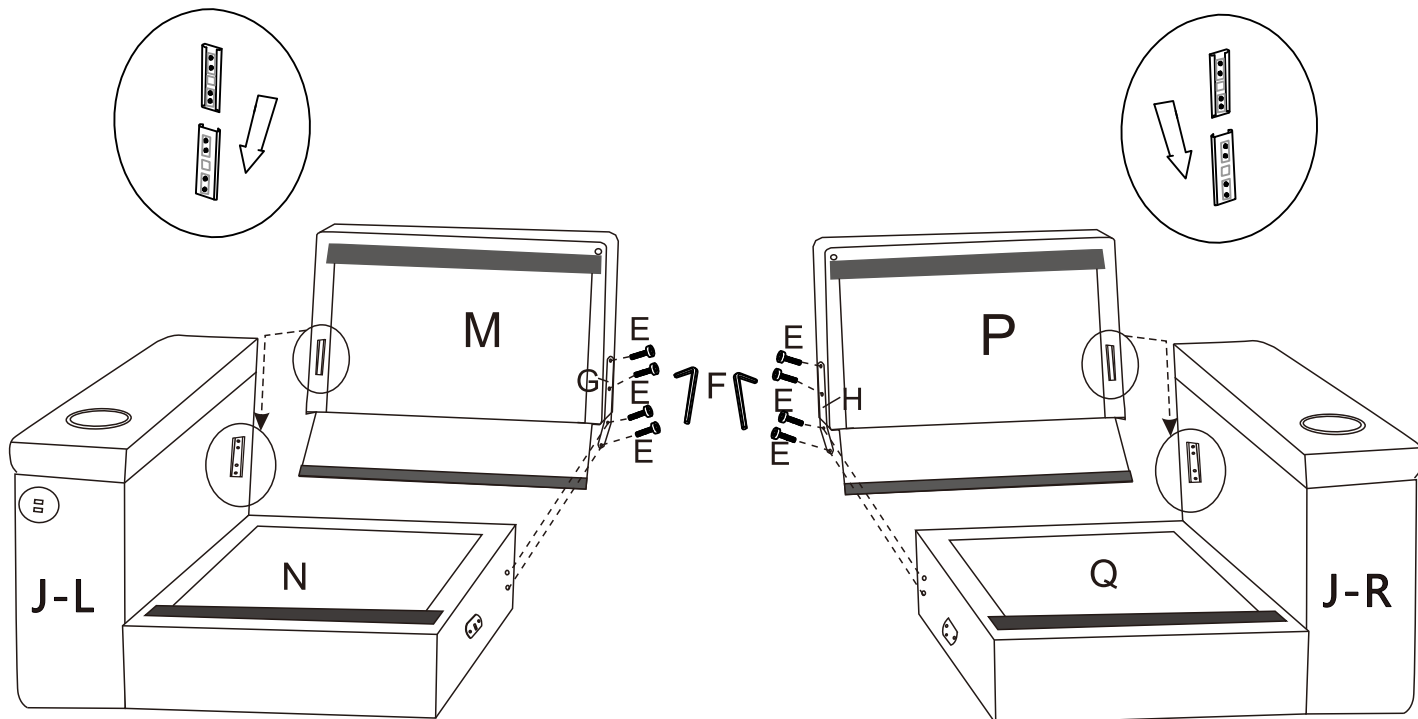


STEP 4

Connect the two seat frames.

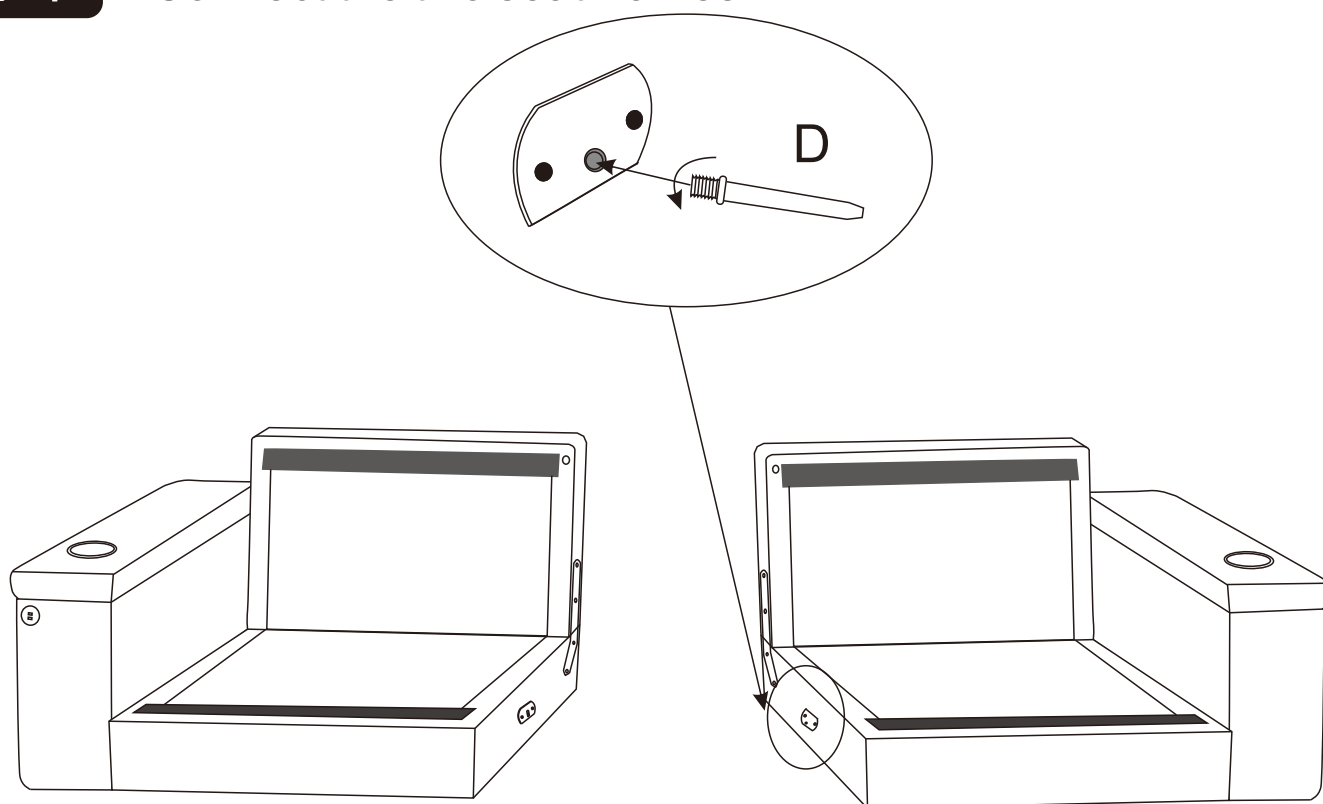


STEP 5

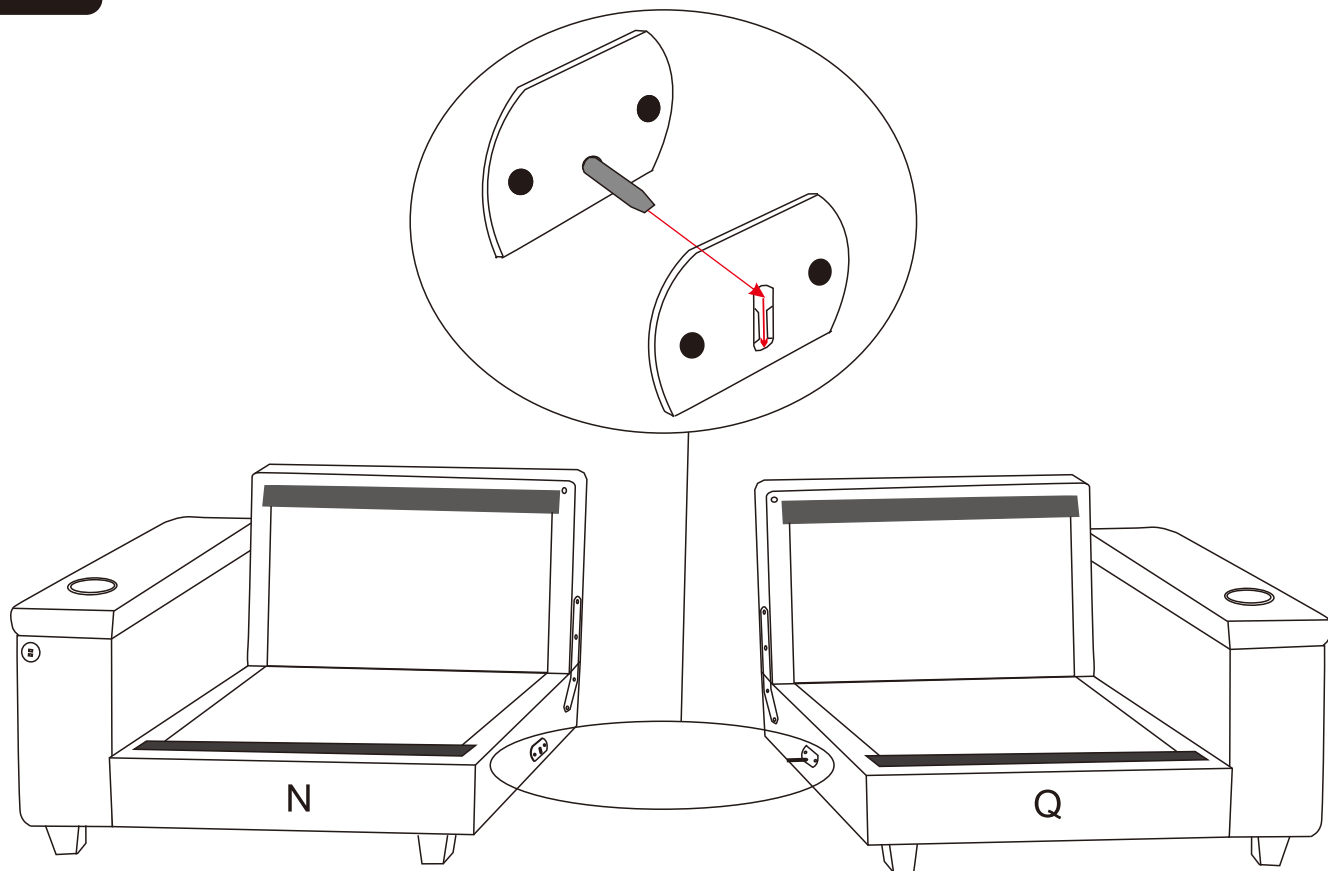

STEP 6


Connect both backrest.

	R x2
	F x1
	T x2
 M6x25mm	S x2

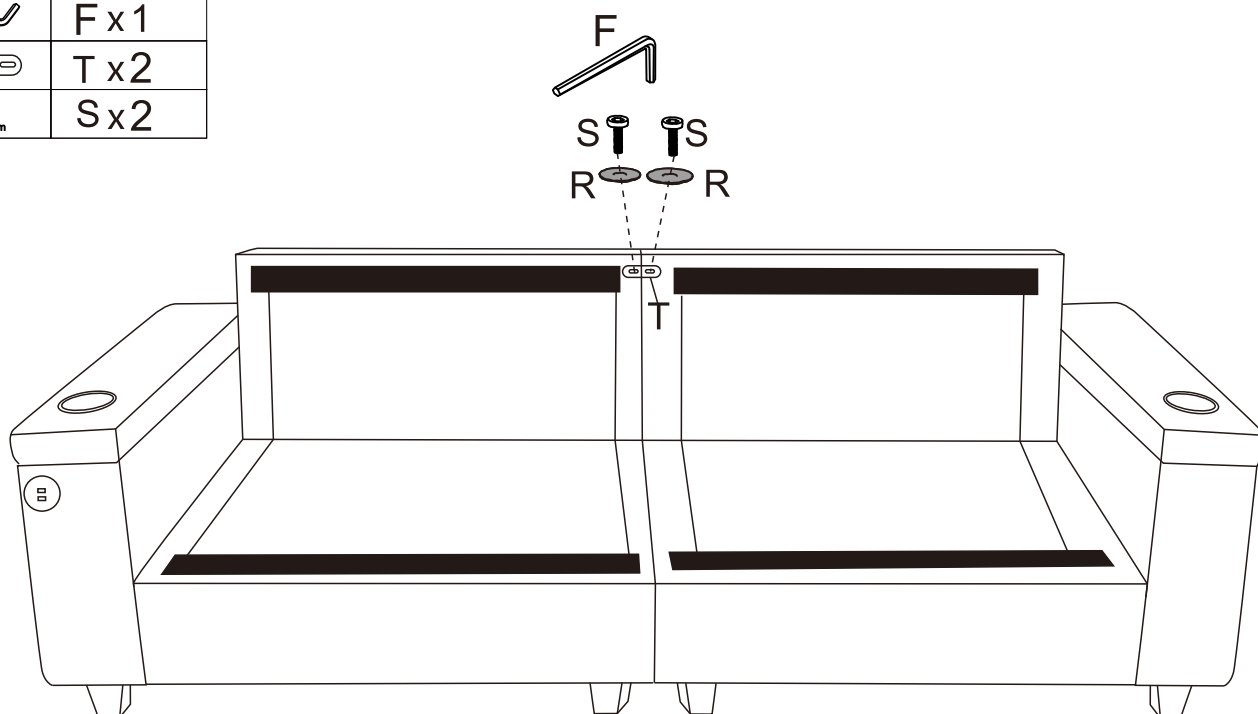


STEP 7

Tear off the Velcro.

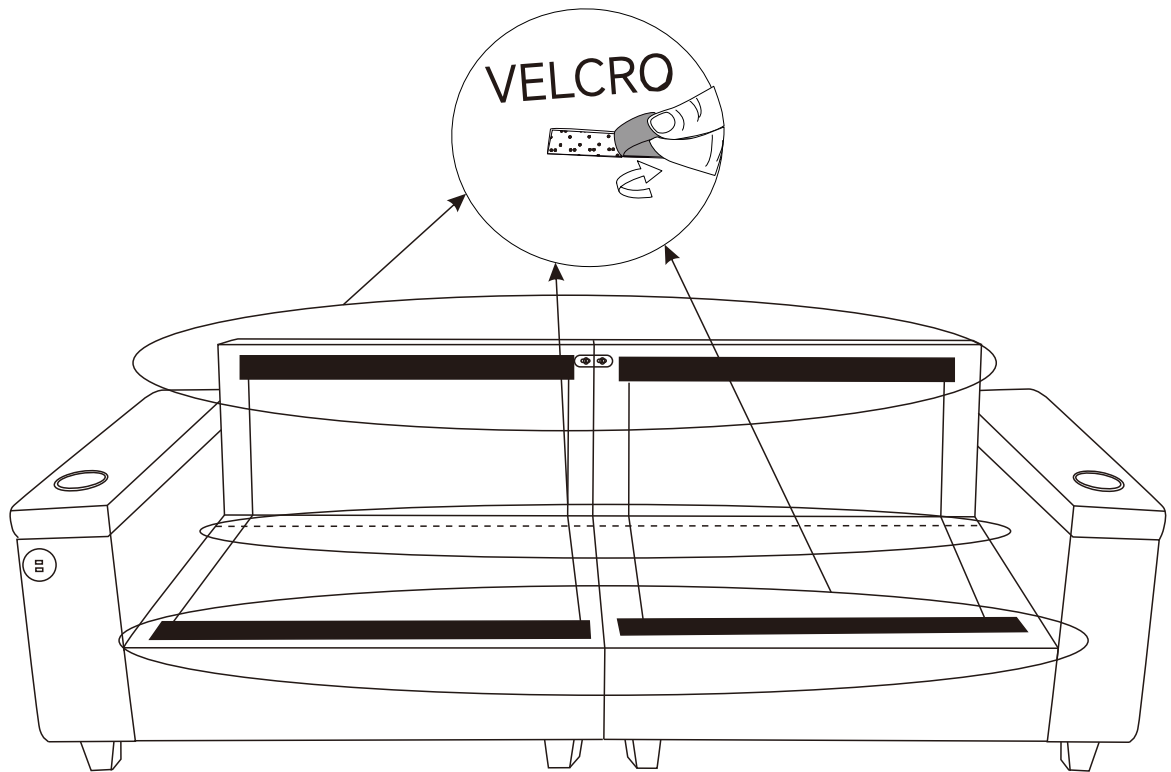
**STEP 8**

Tear off the Velcro on the back and paste the seat frame.

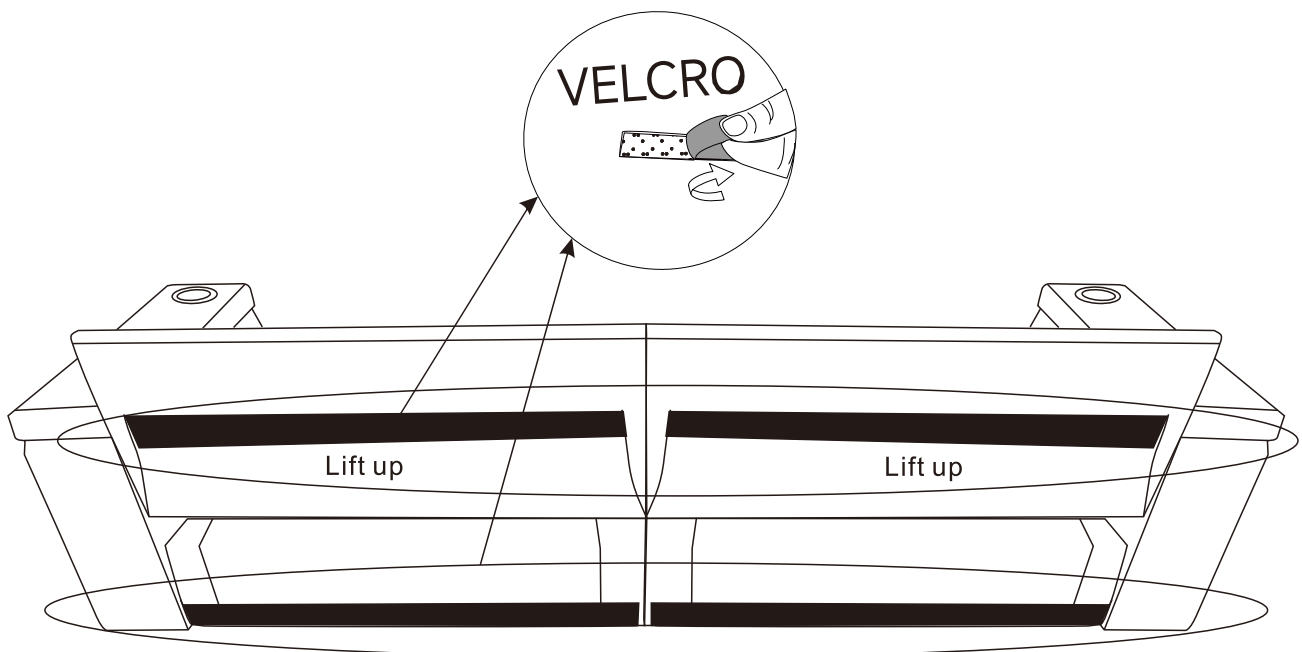


STEP 9


Put in the sofa seat cushion.

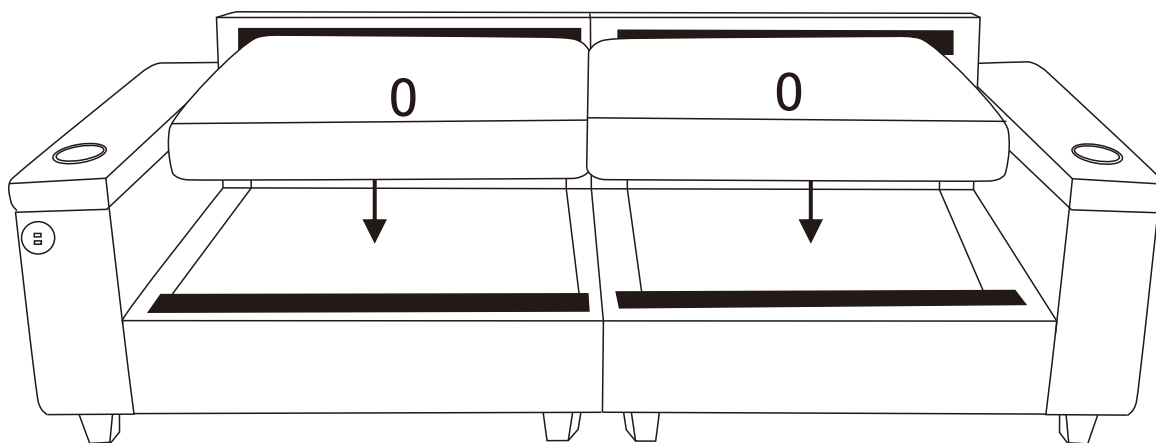**STEP 10**

Put in the back cushion.

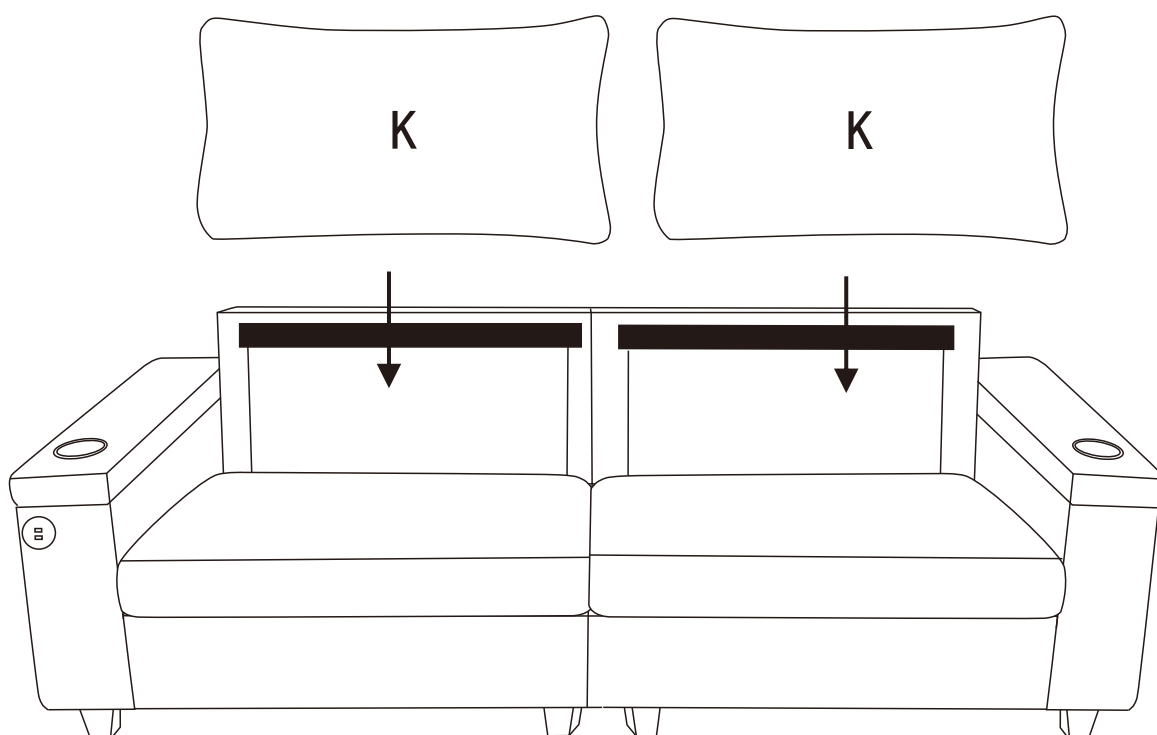

STEP11 Put in the bolster and connect the charger.

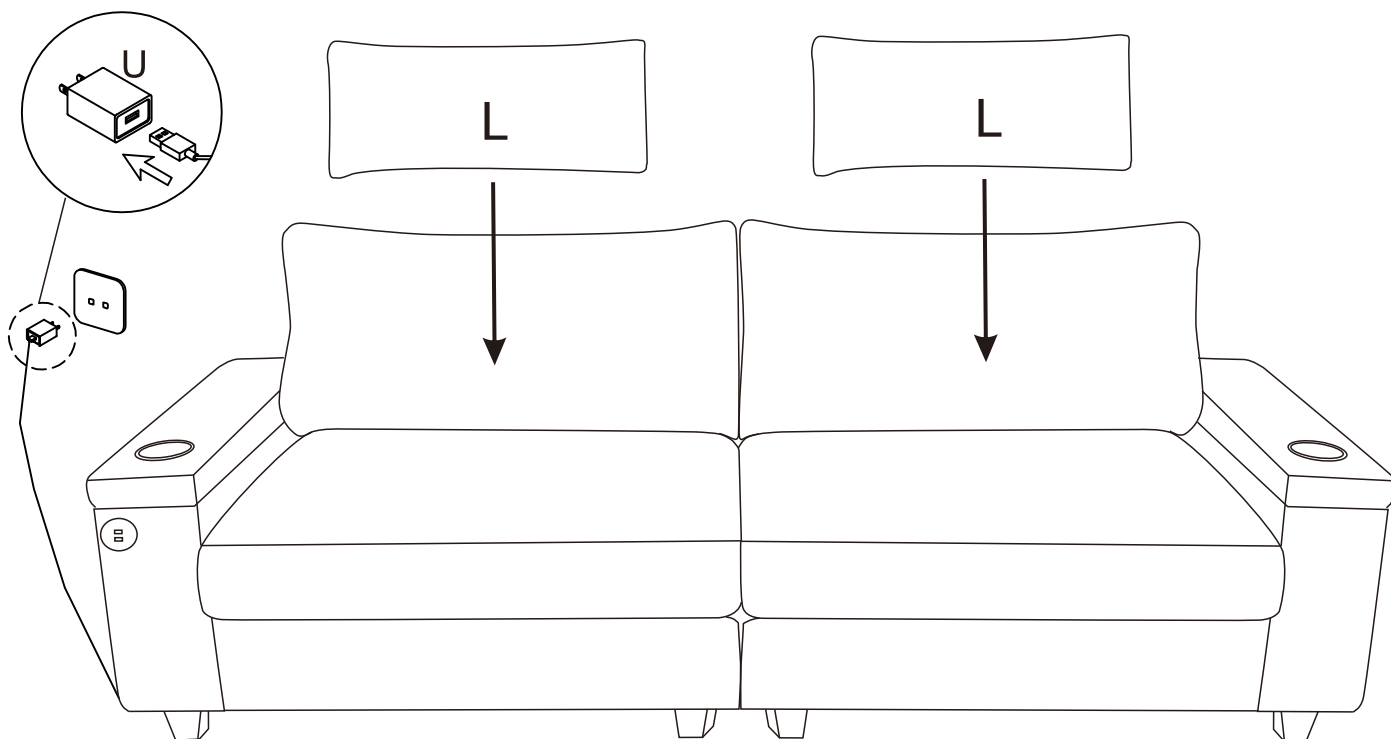

STEP12

