

Glazed Pine Ivory Plantation Oak Classic Mahogany Pair of Bookcases Assembly Instructions

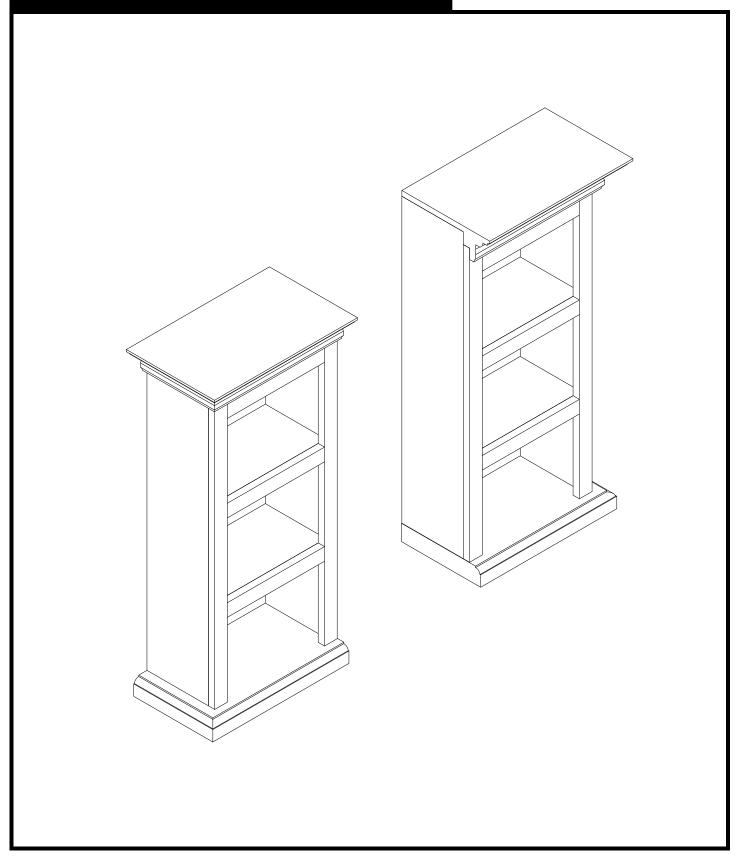

#### **Pair of Bookcases**

#### **Parts List**


Please check packaging for all parts and hardware before discarding. Unpack and lay parts on clean, padded surface like carpet or blanket. Check that you have all parts indicated. Call customer service if hardware is missing. Before beginning assembly, carefully study the diagrams below and sort your hardware according to the pictures.

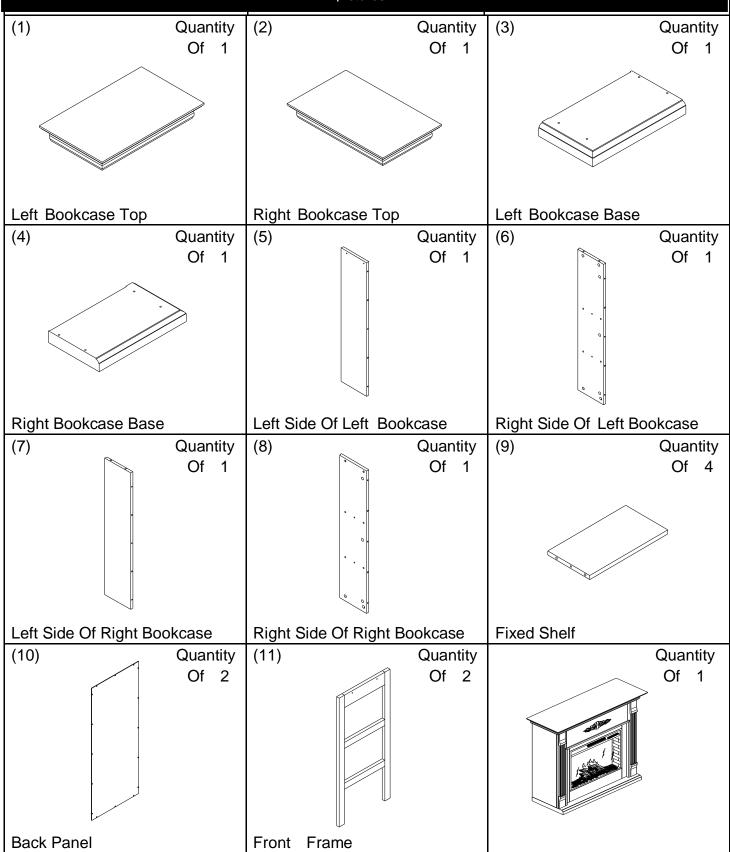

А	Quantity Of 24	В	Quantity Of 32	С	Quantity Of 32	
0						
Wood Dowel Dia	8 x 30mm	Cam Bolt		Cam Lo	ck	
D	Quantity Of 20	Е	Quantity Of 32	F	Quantity Of 8	
Plastic Cover		Screw [	Dia 1/8" x 1/2"L	Screw	Dia 1/8" x 1"L	
G	Quantity Of 4	H	Quantity Of 4	I	Quantity Of 4	
Bracket		Anchor		Screw	Dia1/8"x1-1/2"L	
J	Quantity Of 4	К	Quantity Of 2			
	>					
Screw Dia1/8"	x5/8"L	Plastic Strap				
Care and Cleaning Instructions:  Before using, wipe with a clean, dry cloth.  Periodically apply furniture wax to renew the finish. Avoid rubbing or scratching the surface with rough or abrasive objects.						
Assembly No.2 Philli (Not	/driver					

### **Pair of Bookcases**

## **Assembly Instructions**



"Please do not over tighten cambolts. Please stop when you feel tight"

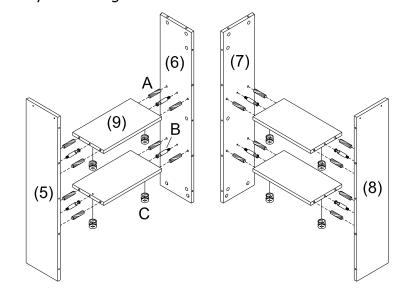


Figure 1


Start tightening Cam Bolts with fingers to help with alignment.

Insert Cam Locks (C) into holes on Fixed Shelves (9).

Screw Cam Bolts (B) and insert Wood Dowels (A) into holes on Side Panels (5), (6), (7) and (8).

Attach Fixed Shelves (9) to Side Panels (5), (6), (7) and (8) by inserting Wood Dowels (A) and Cam Bolts (B) into corresponding holes until Side Panels (5), (6), (7), (8) and Fixed Shelves (9) meet.

Tighten by rotating Cam Locks (C) clockwise with Phillips screwdriver.

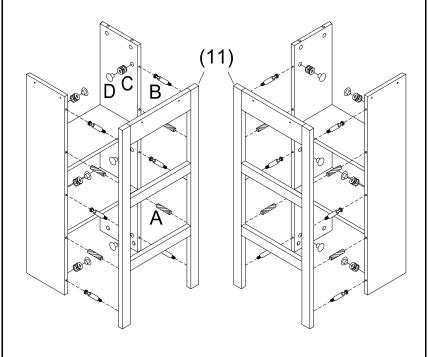

Start tightening Cam Bolts with fingers to help with alignment.

Insert Cam Locks (C) into holes on assembled unit.


Screw Cam Bolts (B) into holes on Front Frames (11).

Attach assembled unit on figure 1 to Front Frame (11) by inserting Wood Dowels (A) and Cam Bolts (B) into corresponding holes until Front Frame (11) and assembled unit on figure 1 meet.

Tighten by rotating Cam Locks (C) clockwise with Phillips screwdriver.

Plug Plastic Cover (D) into Cam Locks (C)

Figure 2

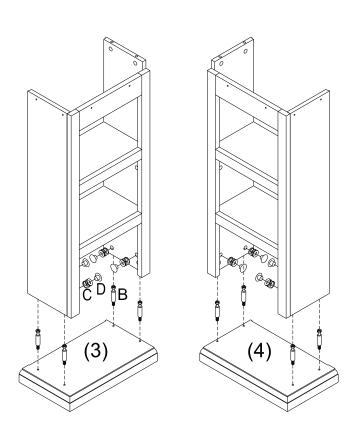

Start tightening Cam Bolts with fingers to help with alignment.

Insert Cam Locks (C) into holes on assembled unit on figure 2.


Screw Cam Bolts (B) into holes on Left Bookcase Base (3) and Right Bookcase Base (4).

Attach assembled unit on figure 2 to Left Bookcase Base (3) and Right Bookcase Base (4) by inserting Cam Bolts (B) into corresponding holes until Left Bookcase Base (3), Right Bookcase Base (4), and assembled unit on figure 2 meet.

Tighten by rotating Cam Locks (C) clockwise with Phillips screwdriver.

Plug Plastic Cover (D) onto Cam Locks (C).

Figure 3

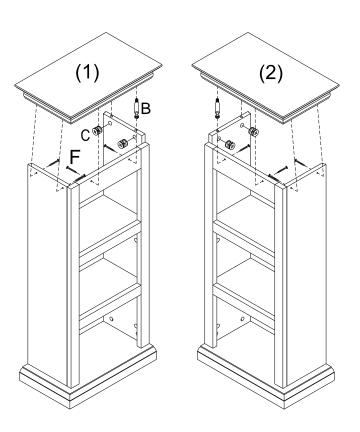

Start tightening Cam Bolts with fingers to help with alignment.

Screw Cam Bolts (B) into holes on Bookcase Top (1) and (2).

Insert Cam Locks (C) into holes on assembled unit on figure 4.


Attach assembled unit on figure 3 to Bookcase Top (1) and (2) by inserting Cam Bolts (B) into corresponding holes until Bookcase Top (1) and (2) and assembled unit on figure 3 meet.

Tighten by rotating Cam Locks (C) clockwise with Phillips screwdriver.

Connect Bookcase Top (1) and (2) to assembled unit on figure 3 with Screws (F).

Tighten Screws (F) with Phillips screwdriver.


Figure 4

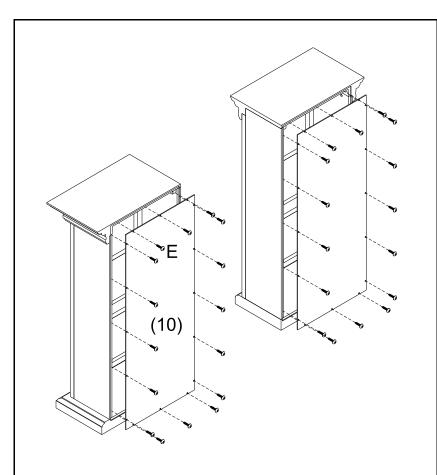

Connect Back Panels (10) to assembled unit on figure 4 with Screws (E).

Tighten Screws (E) with Phillips screwdriver.

Figure 5

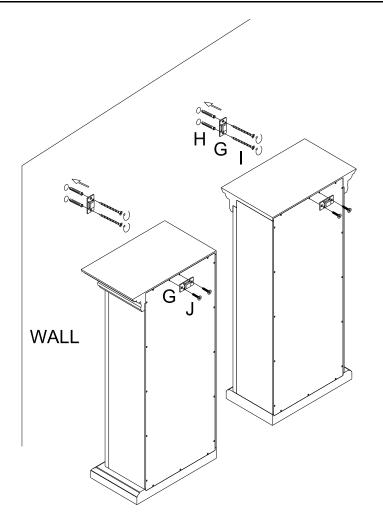

Attach Brackets (G) to the Left Bookcase Top (1) and Right Bookcase Top (2) with Screws (J).

Tighten Screws (J) using Philips screwdriver.


Mark two desired locations on the wall and drill two 3/16" holes.

Insert Anchors (H) into the two holes on wall as shown. Use a hammer to insert the Plastic Anchors until they are flush with the wall.

Then attach the Brackets (G) onto the wall using Screws (I).

Tighten Screws (I) using Philips screwdriver.


Figure 6

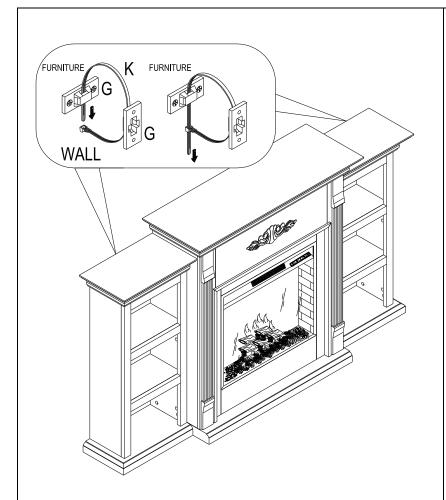

Place the bookcase beside and move this item close to the Wall Brackets (G) and tie in all Brackets (G) together with Plastic Straps (K) as shown in diagram.

Anti-tipping hardware must be used for this product to avoid tipping and injury.

Figure 7

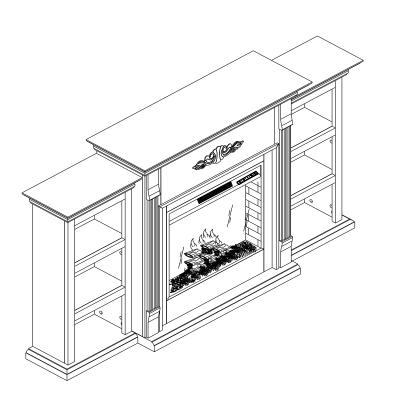

Now your new bookcase fireplace is ready to use.

Figure 8

# Parts Replacement Form

Customer Information							
Name							
Address							
City/State/Zip Code							
Phone Number							
Please indicate where you purchased this item: Store/Website/Catalog							
Please indicate color/s	size/style number:						
Style No F	Parts Letter	Parts Description	Quantity Needed				

Please immediately examine this product carefully. Parts will not be available for items arriving fully assembled. We do not recommend modifying product(s) and we are not responsible for any damages due to product modification(s).

Please ask for customer service representative for issues involving damages or replacement parts. Please ask for technical assistance representative for any issues with product and assembly/construction. Please contact the retailer that you purchased from for returns.