

Wall Conditions Prior to Application:

- For the best adhesion, wall must be cleaned of all lint, oils, and other debris prior to application. Cleaned wall must be allowed to dry for 24H prior to application.
- To clean the wall: scrub with a general, all purpose cleaner, wash with water, wash with isopropyl alcohol (70%), before a final scrub with a microfiber, lint-free cloth. Make sure any all-purpose cleaner is properly washed off of the wall.
- Product is not recommended for textured walls. Textured walls do not allow for proper bonding of the adhesive to the drywall. Please sand down the texture and re-seal the wall before proceeding for best results.
- Vinyl is a soft film and will take on the texture of the underlying wall. For better adhesion on a textured surface: heat the vinyl until warm with a hair dryer after installation and smooth into the wall a second time. This will make the vinyl more pliable and allow it to reach nooks it previously would not have reached.
- Lay down the panels in front of the wall in the order they will be placed. If hanging from corners, make sure the wall dimensions are straight before applying. If hanging in middle of wall, use a pencil, a yardstick, and a level to measure out a straight horizontal or vertical line from which to base your first panel. It is extremely important for the initial panel to be hung straight as small deviations will cause tilting for the rest of the image.
- If panels have an overlap, start with the highest numbered panel and work your way right to left.

Drywall Installation Tips:

- Raw drywall is an extremely porous surface and sealing it up is critical to a good application
- Different paints require different cure times. Heavily pigmented paints take significantly longer time to cure. **We recommend a minimum of 8 week cure time.** Consult with your paint manufacturer for the proper primer and paint to use and their respective cure time.
- Environmental conditions can speed up or retard cure times. Graphics applied to un-cured paint may fail.
- Uncured paints continue to off-gas solvent vapors as they cure. Even paints dry to the touch continue to off-gas as the paint cures. These solvent vapors can dissolve the adhesive used in the peel-and-stick product, resulting in product failure.
- Never wet-apply film – wall must be completely dry.
- Apply only at room temperature (72F) or slightly higher. At 50F or lower the vinyl becomes more rigid and difficult to apply.
- **Take care not to stretch the vinyl during application.** Any deformations will make aligning the seams and edges difficult.
- Pay attention to all edges and seams

Wallpaper Installation Instructions

We recommend installing wallpapers with two people and a step ladder.

Take your time, go slow, and remember that the Peel-and-Stick wallpaper can be peeled, repositioned, and reapplied.

Most mistakes can be resolved by peeling and reapplying correctly. Air bubbles can be smoothed out during installation.

We cannot guarantee optimal product performance on textured or freshly painted walls.

Product may or may not have an overlap. Please disregard if item has butt ends.


Product will have a weak initial bond with a stronger bond over time. Do not remove supporting masking tape until a few hours after installing for best results

Installation Instructions:

1. Carry the first panel to your wall. Peel the horizontal edge of the wallpaper off the backing the first 2-3 inches. Apply this line to your wall, making sure it is straight. If doing in a two-person team, person one will be responsible for applying the wallpaper to the wall and for peeling off the backing as they advance. Person two is responsible for maintaining slight tension on the wallpaper (wallpaper + backing) and holding it at a 15-30 degree angle from the wall.
2. Brush air bubbles out with a soft, flat applicator such as an ID or credit card. A wallpaper applicator can also be used for this application. Be gentle, excessive force can mar your image, especially over textured surfaces.
3. Work your way down, brushing down into the line applied and outward along the edges. Air bubbles will brush out.
4. For your convenience, our panels may have a small overlap. These ends allow for a seamless transition between panels. Overlaps are repeated sections of your image on each of the panel's seams. Line up overlaps on top of one another from the top and as you work your way down.
5. In order to guarantee a perfect, flush fit between seams, one can cut the underlying overlap or leave as is. We recommend leaving the overlaps overlapped on the seams to prevent shrinking during temperature changes.
6. If you choose to cut the overlaps; do not cut overlaps until you have hung up the whole image. It is easier to peel back and cut once everything is up.
7. Trim at baseboard, outlets, and other fixtures using a sharp blade or razor. If the mural is larger than the wall, trim at edges AFTER application.
8. With a bundle of cloth or wallpaper squeegee in hand, apply force into the wall against the wallpaper. Use circular motions and work your way through the mural. This guarantees an even sticking to the wall and works out air bubbles. If applying to textured walls, please heat the vinyl with a fan and repeat the process.

Overlaps:

1. Wallpaper may come in three options: overlapped (with black guiding line), overlapped (without black guiding line), and butt ends (no overlap).
2. **Lay out all panels in front of the wall face up before applying.** This will tell you whether or not you have an overlap and the order of installation.
3. Overlaps are not found on the first numbered panel. They are only found on the left edge of panels 2+.
4. For easiest installation, start with the highest numbered panel and install right to left. This will leave the overlap as a guide for installing the neighboring panel.

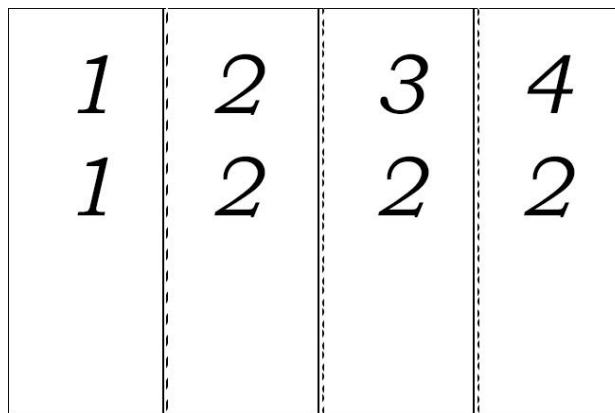

The diagram above shows the overlaps are located on the **left** edge of panels 2+ or, in patterned wallpaper, panels 2.

Do Not:

- Apply to walls within two months of painting*
- Apply to textured or moist walls
- Apply in high moisture or low temperature areas
- Apply excessive force to the wallpaper. Vinyl will stretch if roughly handled. Be gentle
- Peel off the backing from the whole panel prior to application; peel only the top few inches of the panel, apply to the wall, then work your way down the panel

*paints continue off-gas solvent vapors for up to two months after painting. These VOCs will interfere with any adhesive properties. Paints may seem dry but will continue to give off gases. Please contact the paint manufacturer for proper cure times.