
Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- Not for commercial use. For residential use only.
- Do not put hot items directly on furniture surface.
- Do not clean furniture with harsh cleansers or polish.
- Do not place furniture under direct sunlight.
- Do not place furniture near heating or cooling vents.
- Do not write on furniture without a padded barrier to protect the surface.
- Do not place furniture outside . For indoor use only.
- Stains may be removed with mild soap solution and damp cloth.
- Children should not climb or jump on the furniture.
- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

King Bed

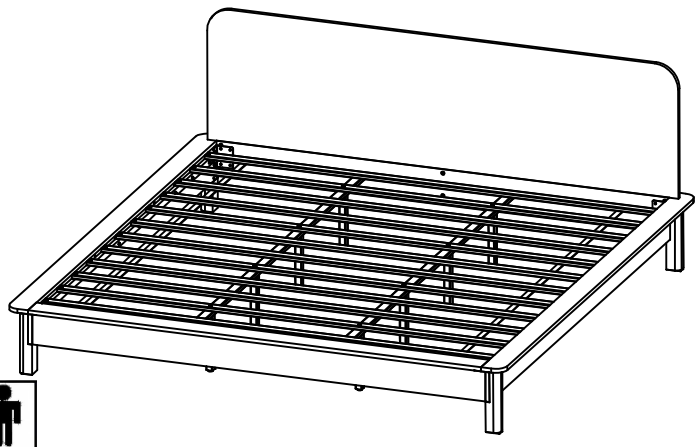



WARNING

STRANGULATION HAZARD.

NEVER place bed near windows where cords from blinds or drapes may strangle a child.

NEVER suspend strings over bed.
NEVER place items with a string, cord, or ribbon, such as hood strings or pacifier cords, around a child's neck. These items may catch on bed parts.
ALWAYS follow assembly instructions.




WARNING!



Not intended for children under the age of six.INFANTS HAVE DIED FROM BECOMING ENTRAPPED IN BEDS. Openings in and between bed parts can entrap the neck and head of a small child. NEVER use bed for child under the age of six.

The mattress must be appropriately sized for the bed. If the mattress is undersized, dangerous gaps can exist and a person can become entrapped or entangled in the frame and suffocate.










NOTE: This Bed is NOT a TOY.
Keep your child/children at bay during the assembley process.
The BED is HEAVY.
To prevent injury to yourself or damage to the product a mininium of two adults are required whenever moving or lifting it.

Parts List

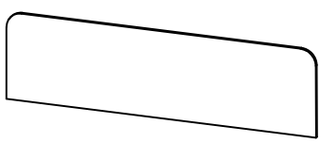Label	Picture	Description	QTY
A		Headboard	1
B		Headboard Back Support	3
C		Headboard Bottom	1
D		Side Rail - L	1
E		Side Rail - R	1
F		Side Rail Top Panel	2
G		Footboard Front Panel	1

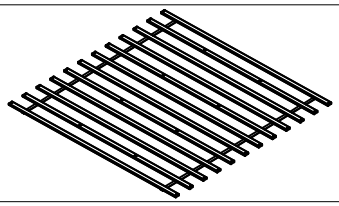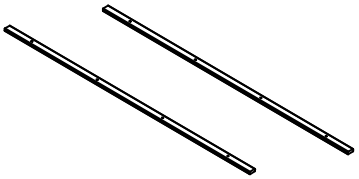
H		Footboard Top Rail	1
I		Slats	1 SET
J		Vertical Leg	8
K		Center Slats	2


Hardware

Label	Picture	Description	QTY
①		JCBC (M6 X 40MM)	22 pcs
②		SPRING WASHER (M6)	22 pcs
③		FLAT WASHER (M6 X 13MM)	22 pcs
④		ALLEN KEY (M4 X 110MM)	1 pc
⑤		JCBB (M8 X 16MM)	8 pcs
⑥		FLAT WASHER (M8 X 18MM)	8 pcs
⑦		ALLEN KEY (M5)	1 pc
⑧		WOOD DOWEL (M8 X 30MM)	12 pcs
⑨		PANHEAD SCREW (M4 X 30MM)	24 pcs
⑩		MINIFIT BOLT	7 pcs
⑪		MINIFIT CAM - 1512 (15MM X 11.5MM)	7 pcs
⑫		HOOK BRACKET (5037)	2 SETS
⑬		CSK SCREW (M3.5 X 16MM)	20 pcs
⑭		4H METAL PLATE (44 X 70MM)	2 pcs
⑮		PHWF (M4 X 12MM)	8 pcs
⑯		Screwdriver (Not provided)	

Assembly Preparation


Before Begining Assembly:

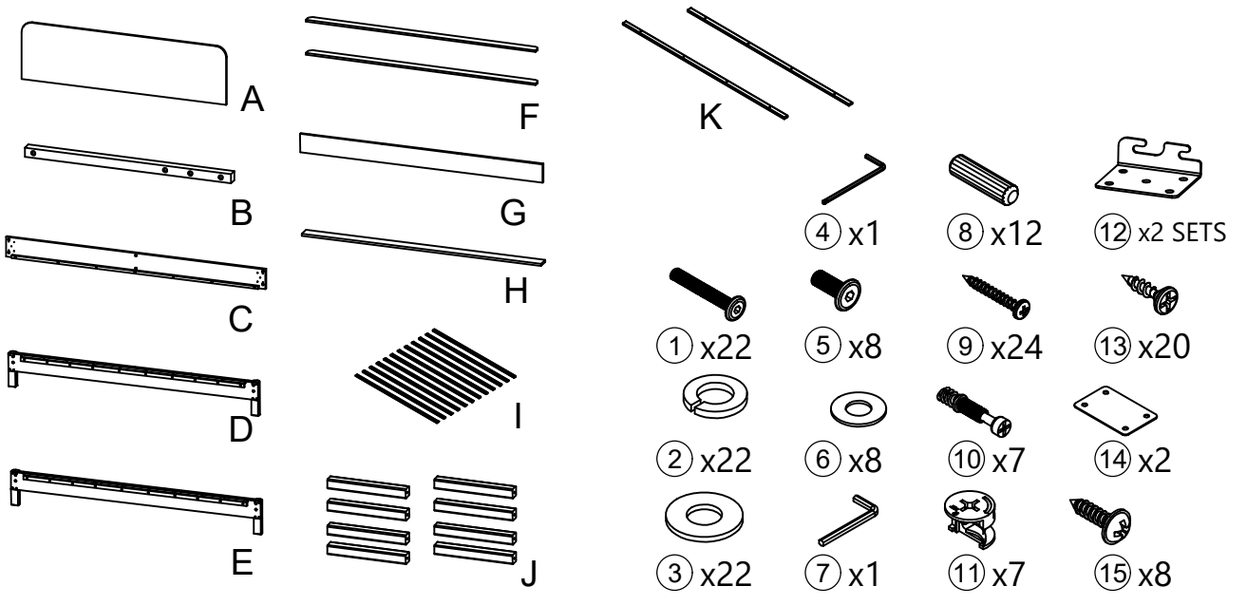

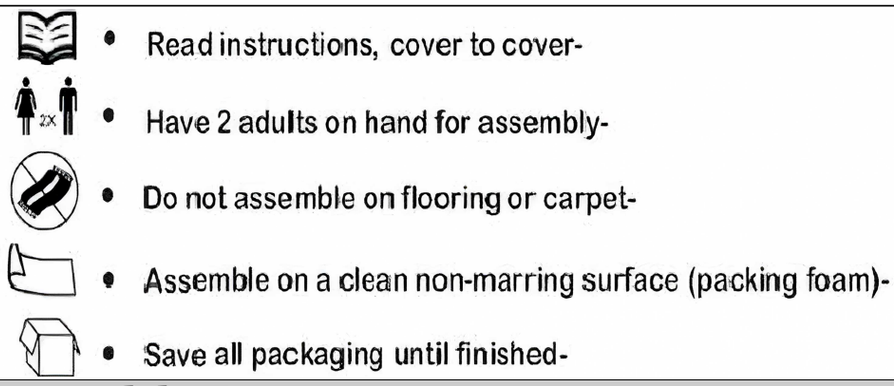

Assembly Steps


Overview

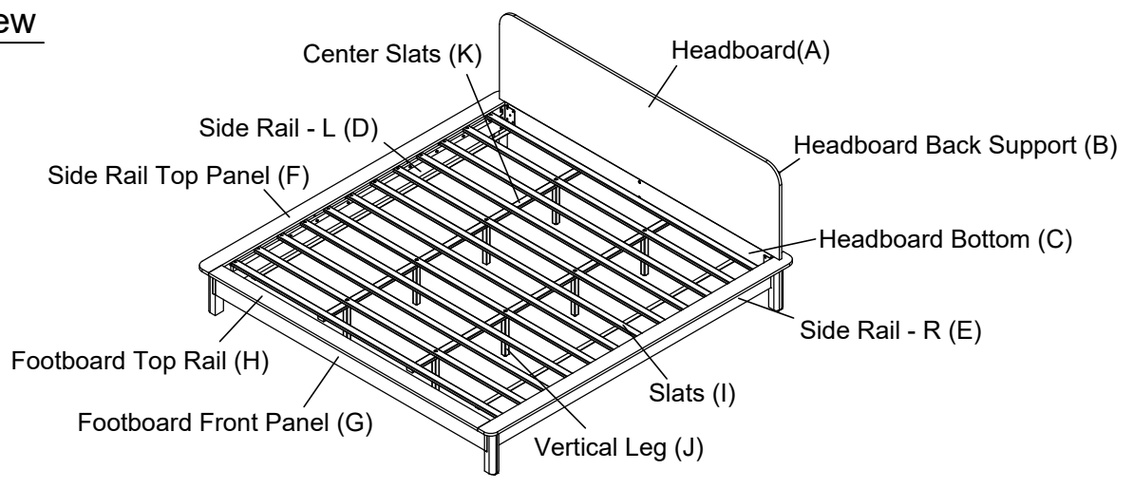

FRONT FACING


This Bed has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Bed parts, the above picture is provided to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Step 1

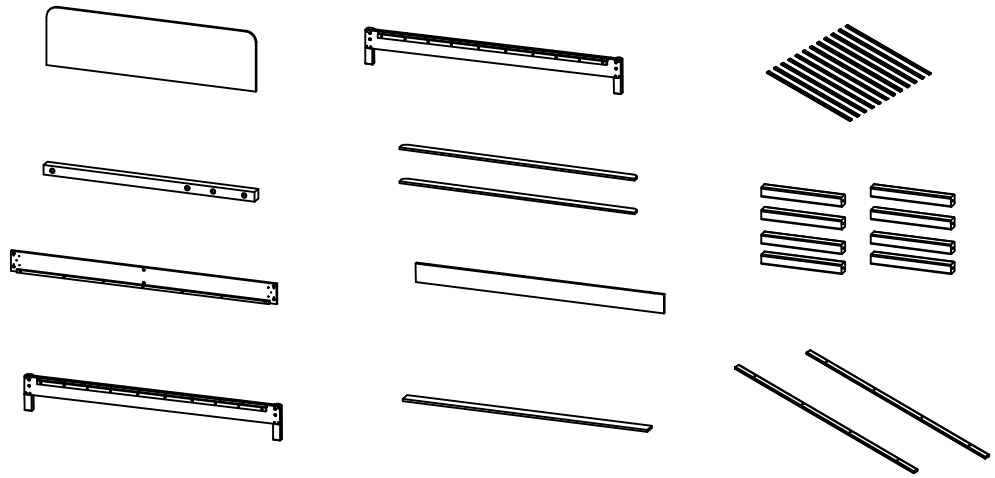

Unpack and place all parts on a clean,non-marring surface.


Step 2

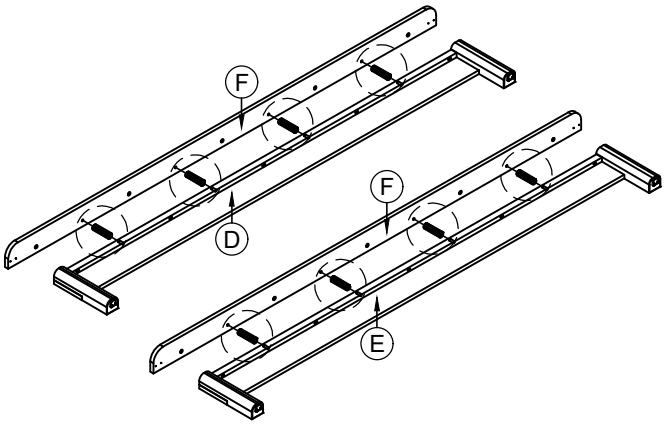


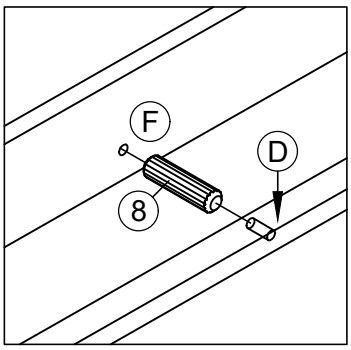

Place the Side Rail - L **(D)** and Side Rail - R **(E)** with its inner side face skywards onto a clean, soft surface to avoid any scratches or damages to the product.
Attach Side Rail Top Panel **(F)** to Side Rail - L **(D)** and Side Rail - R **(E)** by using Dowel **(8)**


Step 3

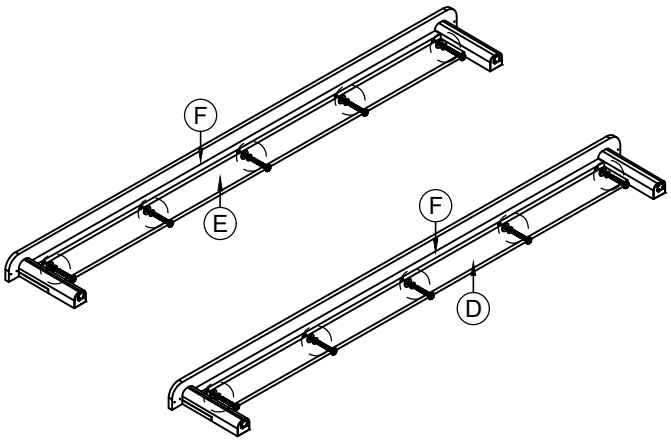

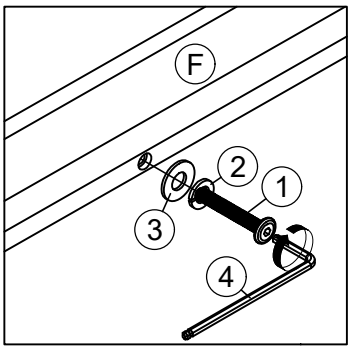


Attach Side Rail - L **(D)** and Side Rail - R **(E)** to Side Rail Top Panel **(F)** by using JCBC **(**1**),** Spring Washer **(2)** and Flat Washer **(3)** with M4 Allen Key **(4)**.

Step 4

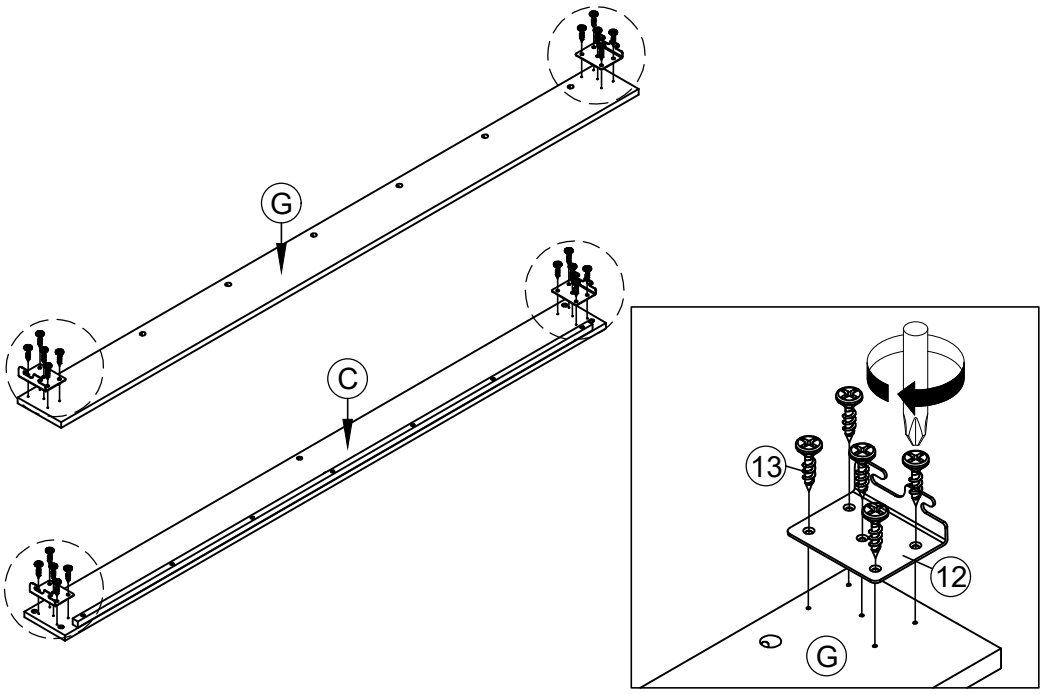


Fit Hook Bracket **(12)** to Footboard Front Panel **(G)** and Headboard Bottom **(C)** by using Screwdriver **(NOT PROVIDED)**.

Step 5

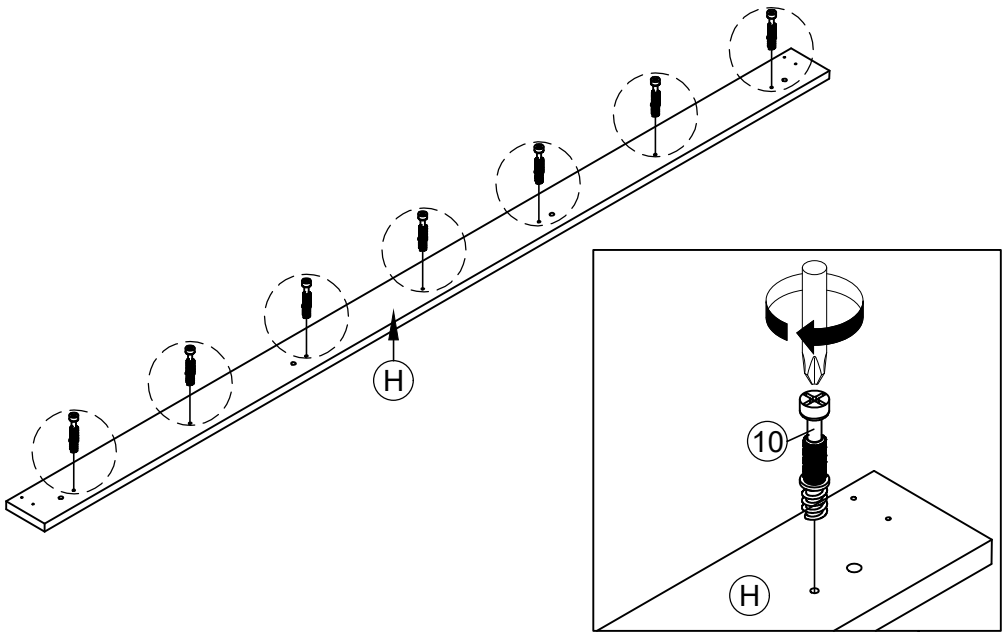


Insert Minifit Bolt **(10)** to Footboard Top Rail **(H)** by using Screwdriver **(NOT PROVIDED)**.

Step 6

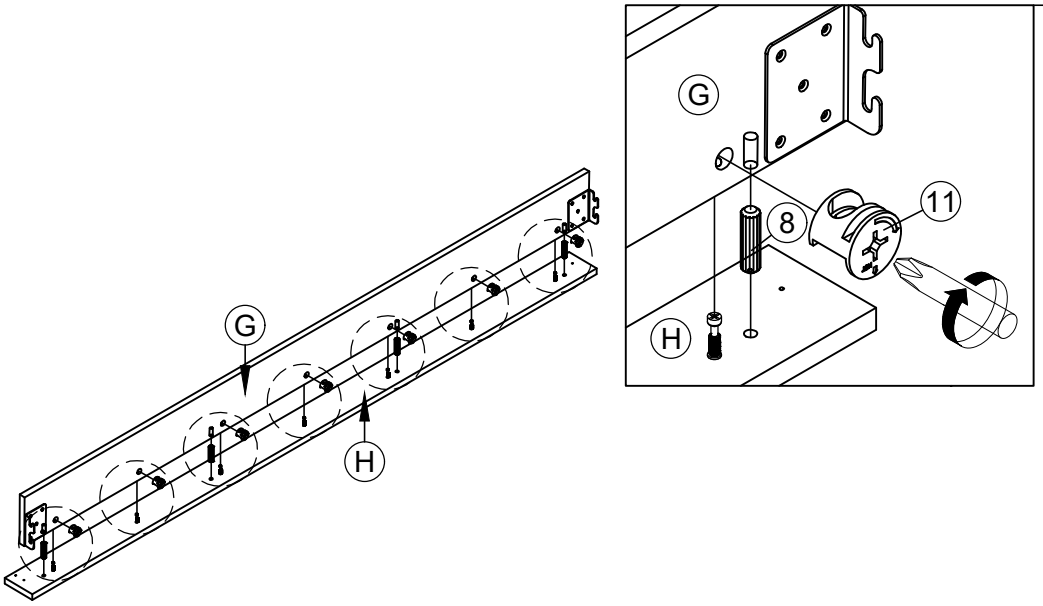


Attach Footboard Front Panel **(G)** to Footboard Top Rail **(H)** by using Wood Dowel **(8)** and Minifit Cam **(11)** with Screwdriver **(NOT PROVIDED)**.

Step 7

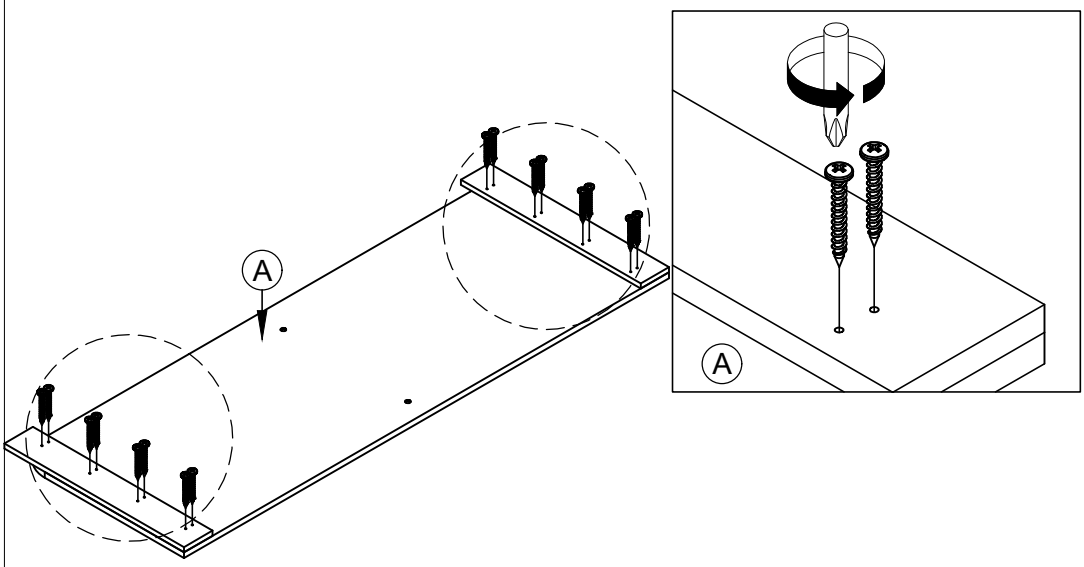


Unlock the Panhead Screw **(9)** and move cover board by using Screwdriver **(NOT PROVIDED)**.
***(REMOVE COVER BOARD)**

Step 8

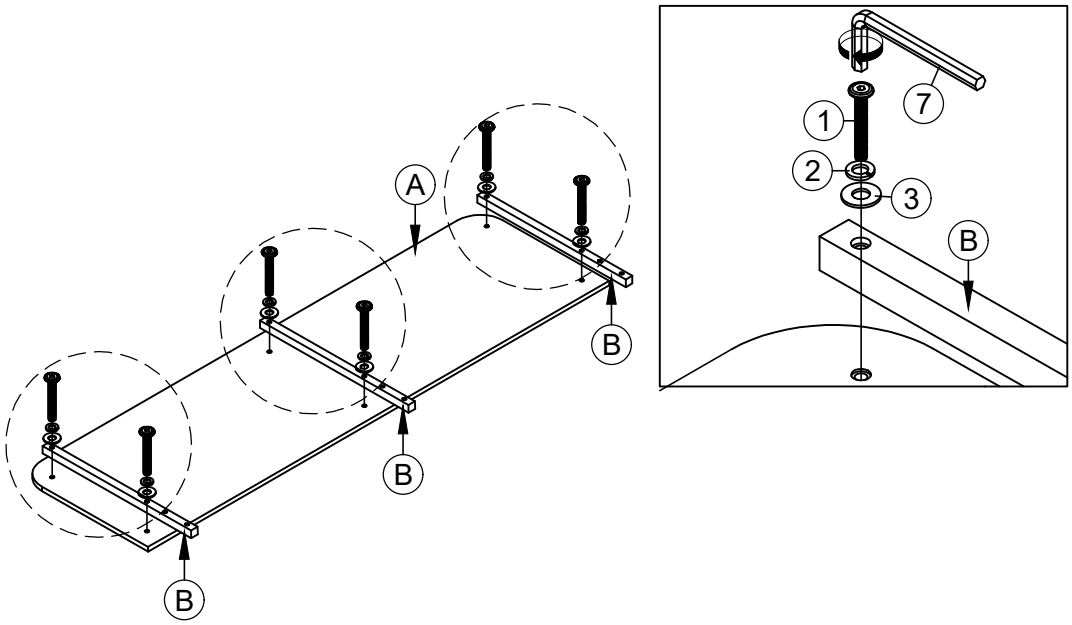


Attach Headboard Back Support **(B)** to the Headboard **(A)** by using JCBC **(1) ,** Spring Washer **(2)** and Flat Washer **(3)**.

Step 9

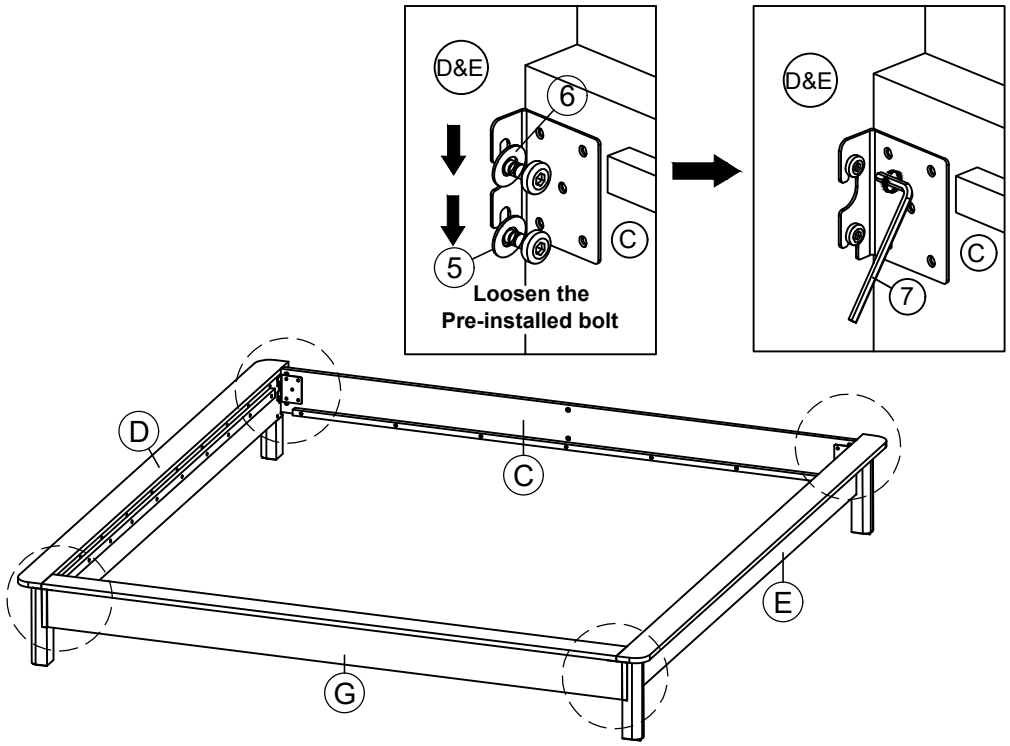


With the help from you partner, stand the assembled Headboard Bottom **(C)** standing as shown in picture above.
Lightly loose the JCBB **(5)** and Flat Washer **(6)** on Headboard Bottom **(C)** and Footboard Front Panel **(G)**,then attach the
Side Rail **(D/E)** to the assembled Headboard Bottom **(C)** and Footboard Front Panel **(G)**, tighten the JCBB **(5)** and Flat Washer **(6)** using with M5 Allen Key (7).
DO NOT FULLY TIGHTHEN JCBC.

Step 10

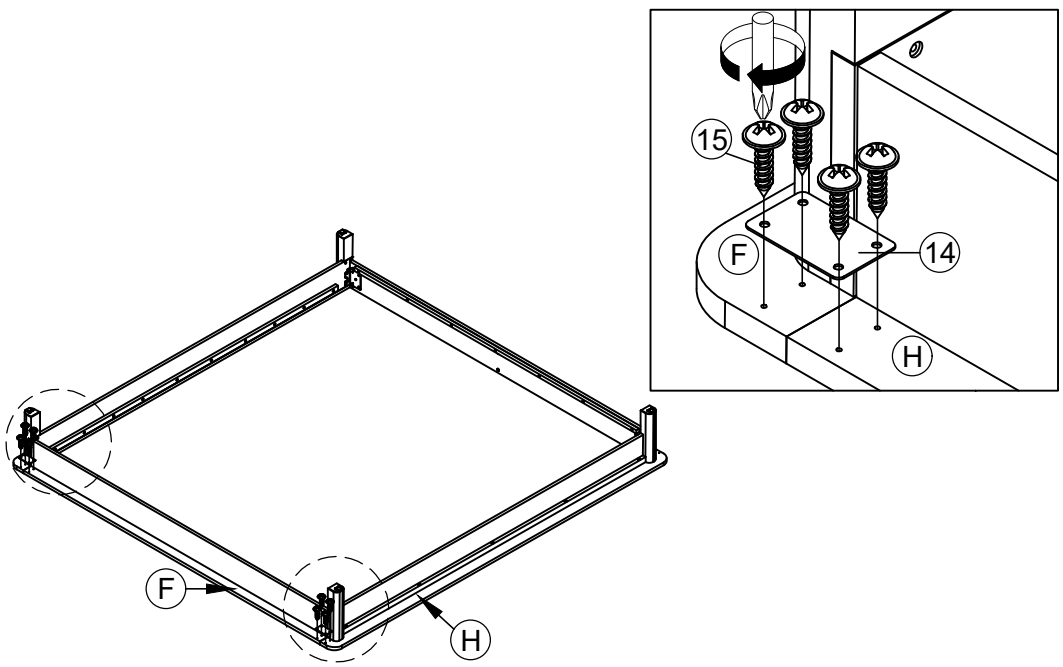


With the help from you partner, flip the assembled part from step **(9)** upside down as shown in picture above.
Align 4H Metal Plate **(14)** to the pre-hole on Side Rail Top Panel **(F)** and Footboard Top Rail **(H)**.
Attach all 4H Metal Plate **(14)** by using PHWF **(15)** with Screwdriver **(NOT PROVIDED)**.

Step 11

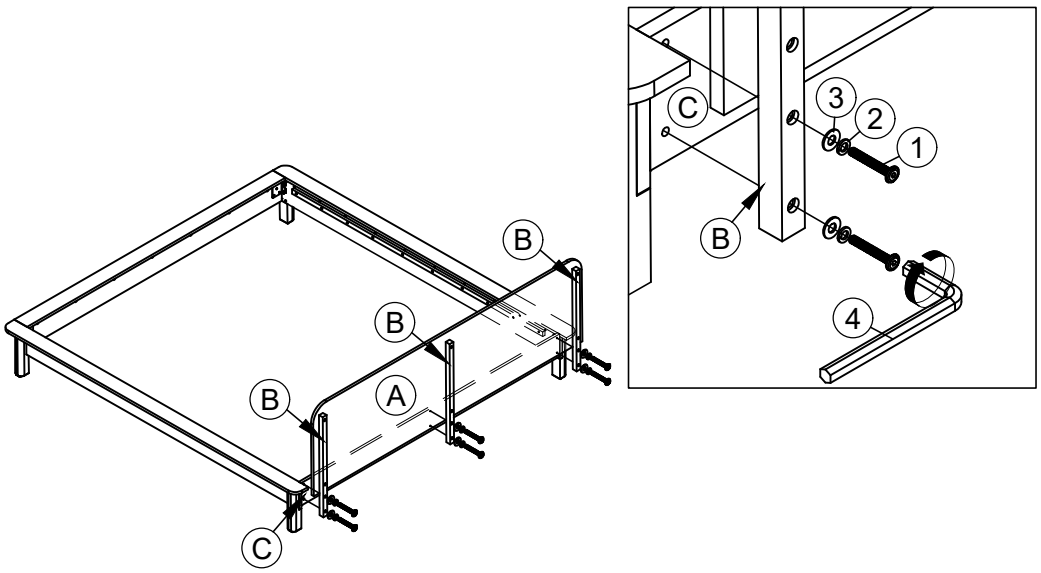


With the help from you partner, flip back the assembled part from step **(10)** as shown in picture above.
Align assembled part from step **(8)** on top of Headboard Bottom **(C)**.
Attach all Headboard Back Support **(B)** to Headboard Bottom **(C)** by using JCBC **(1)**, Spring Washer **(2)** and Flat Washer **(3)** with M4 Allen Key **(4)**.

Step 12

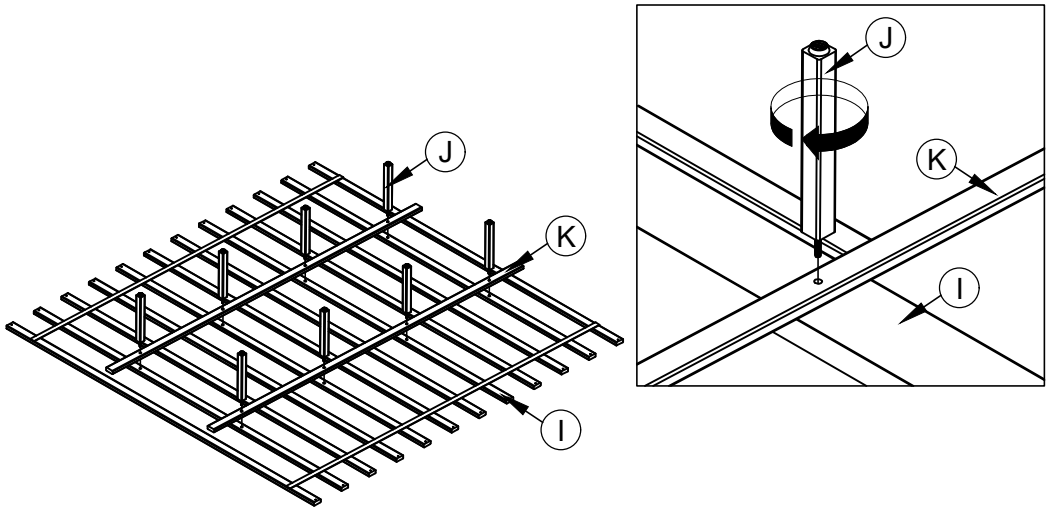


Align the Mounting Position on the Center Slats **(K**) to the Vertical Leg **(J)** and the Slats **(I)**. Rotate all Vertical Leg **(J)** until tight.

Step 13

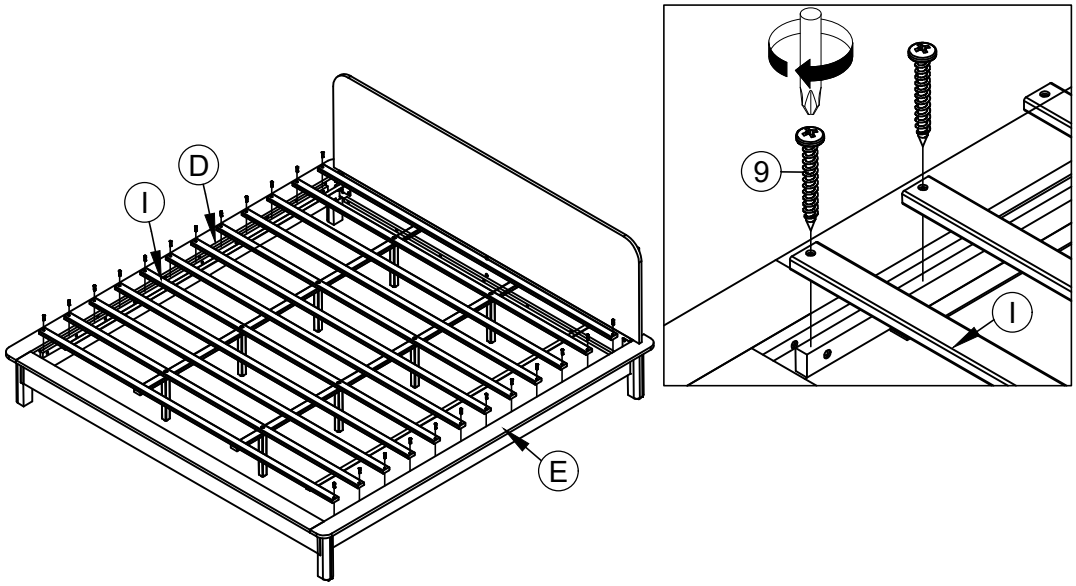

Attach all Slats **(I)** to the rail on Side Rail **(D)** and Side Rail **(E)** by using Panhead Screw **(9)** with Screwdriver **(NOT PROVIDED)**.

Step 14

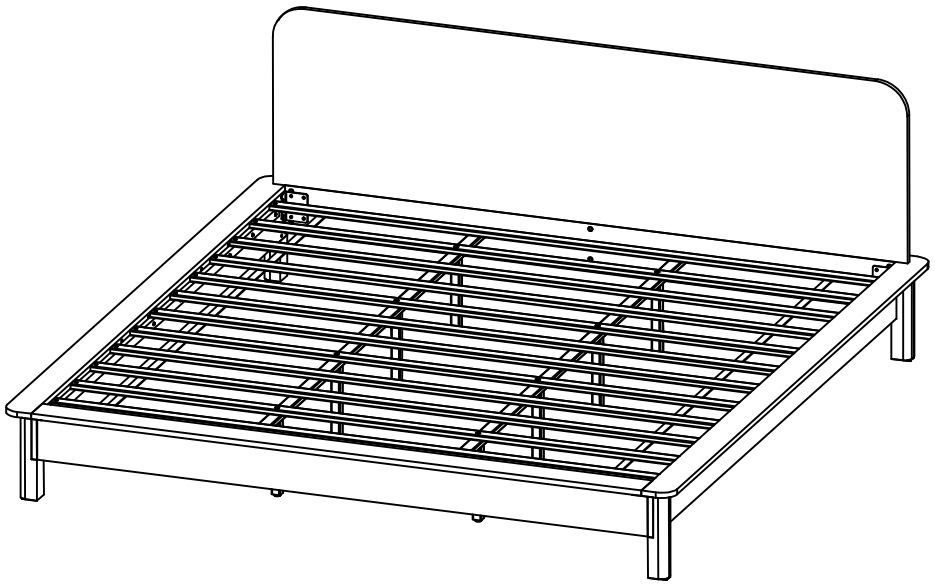

Place the Bed on a LEVEL SURFACE.
Inspect it and make sure all parts are adequately connected.
Don't push too hard, shake on the bed.
This would help to align all the parts at all the joint areas.

CAUTION 1: When tightening these screws, tighten sequentially.
DO NOT tighten any screw fully and then towards the next one.
This would cause the frame to warp.
If there is still wobbles, loosen the screws and execute this same process.DO NOT tighten any screw fully and then towards the next one.
WARNING!! IF BED IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.
Ensure all screws are fully locked into position.
The bed is ready to be used.
Caution 2: This bed can only be used on a flat, level surface.