


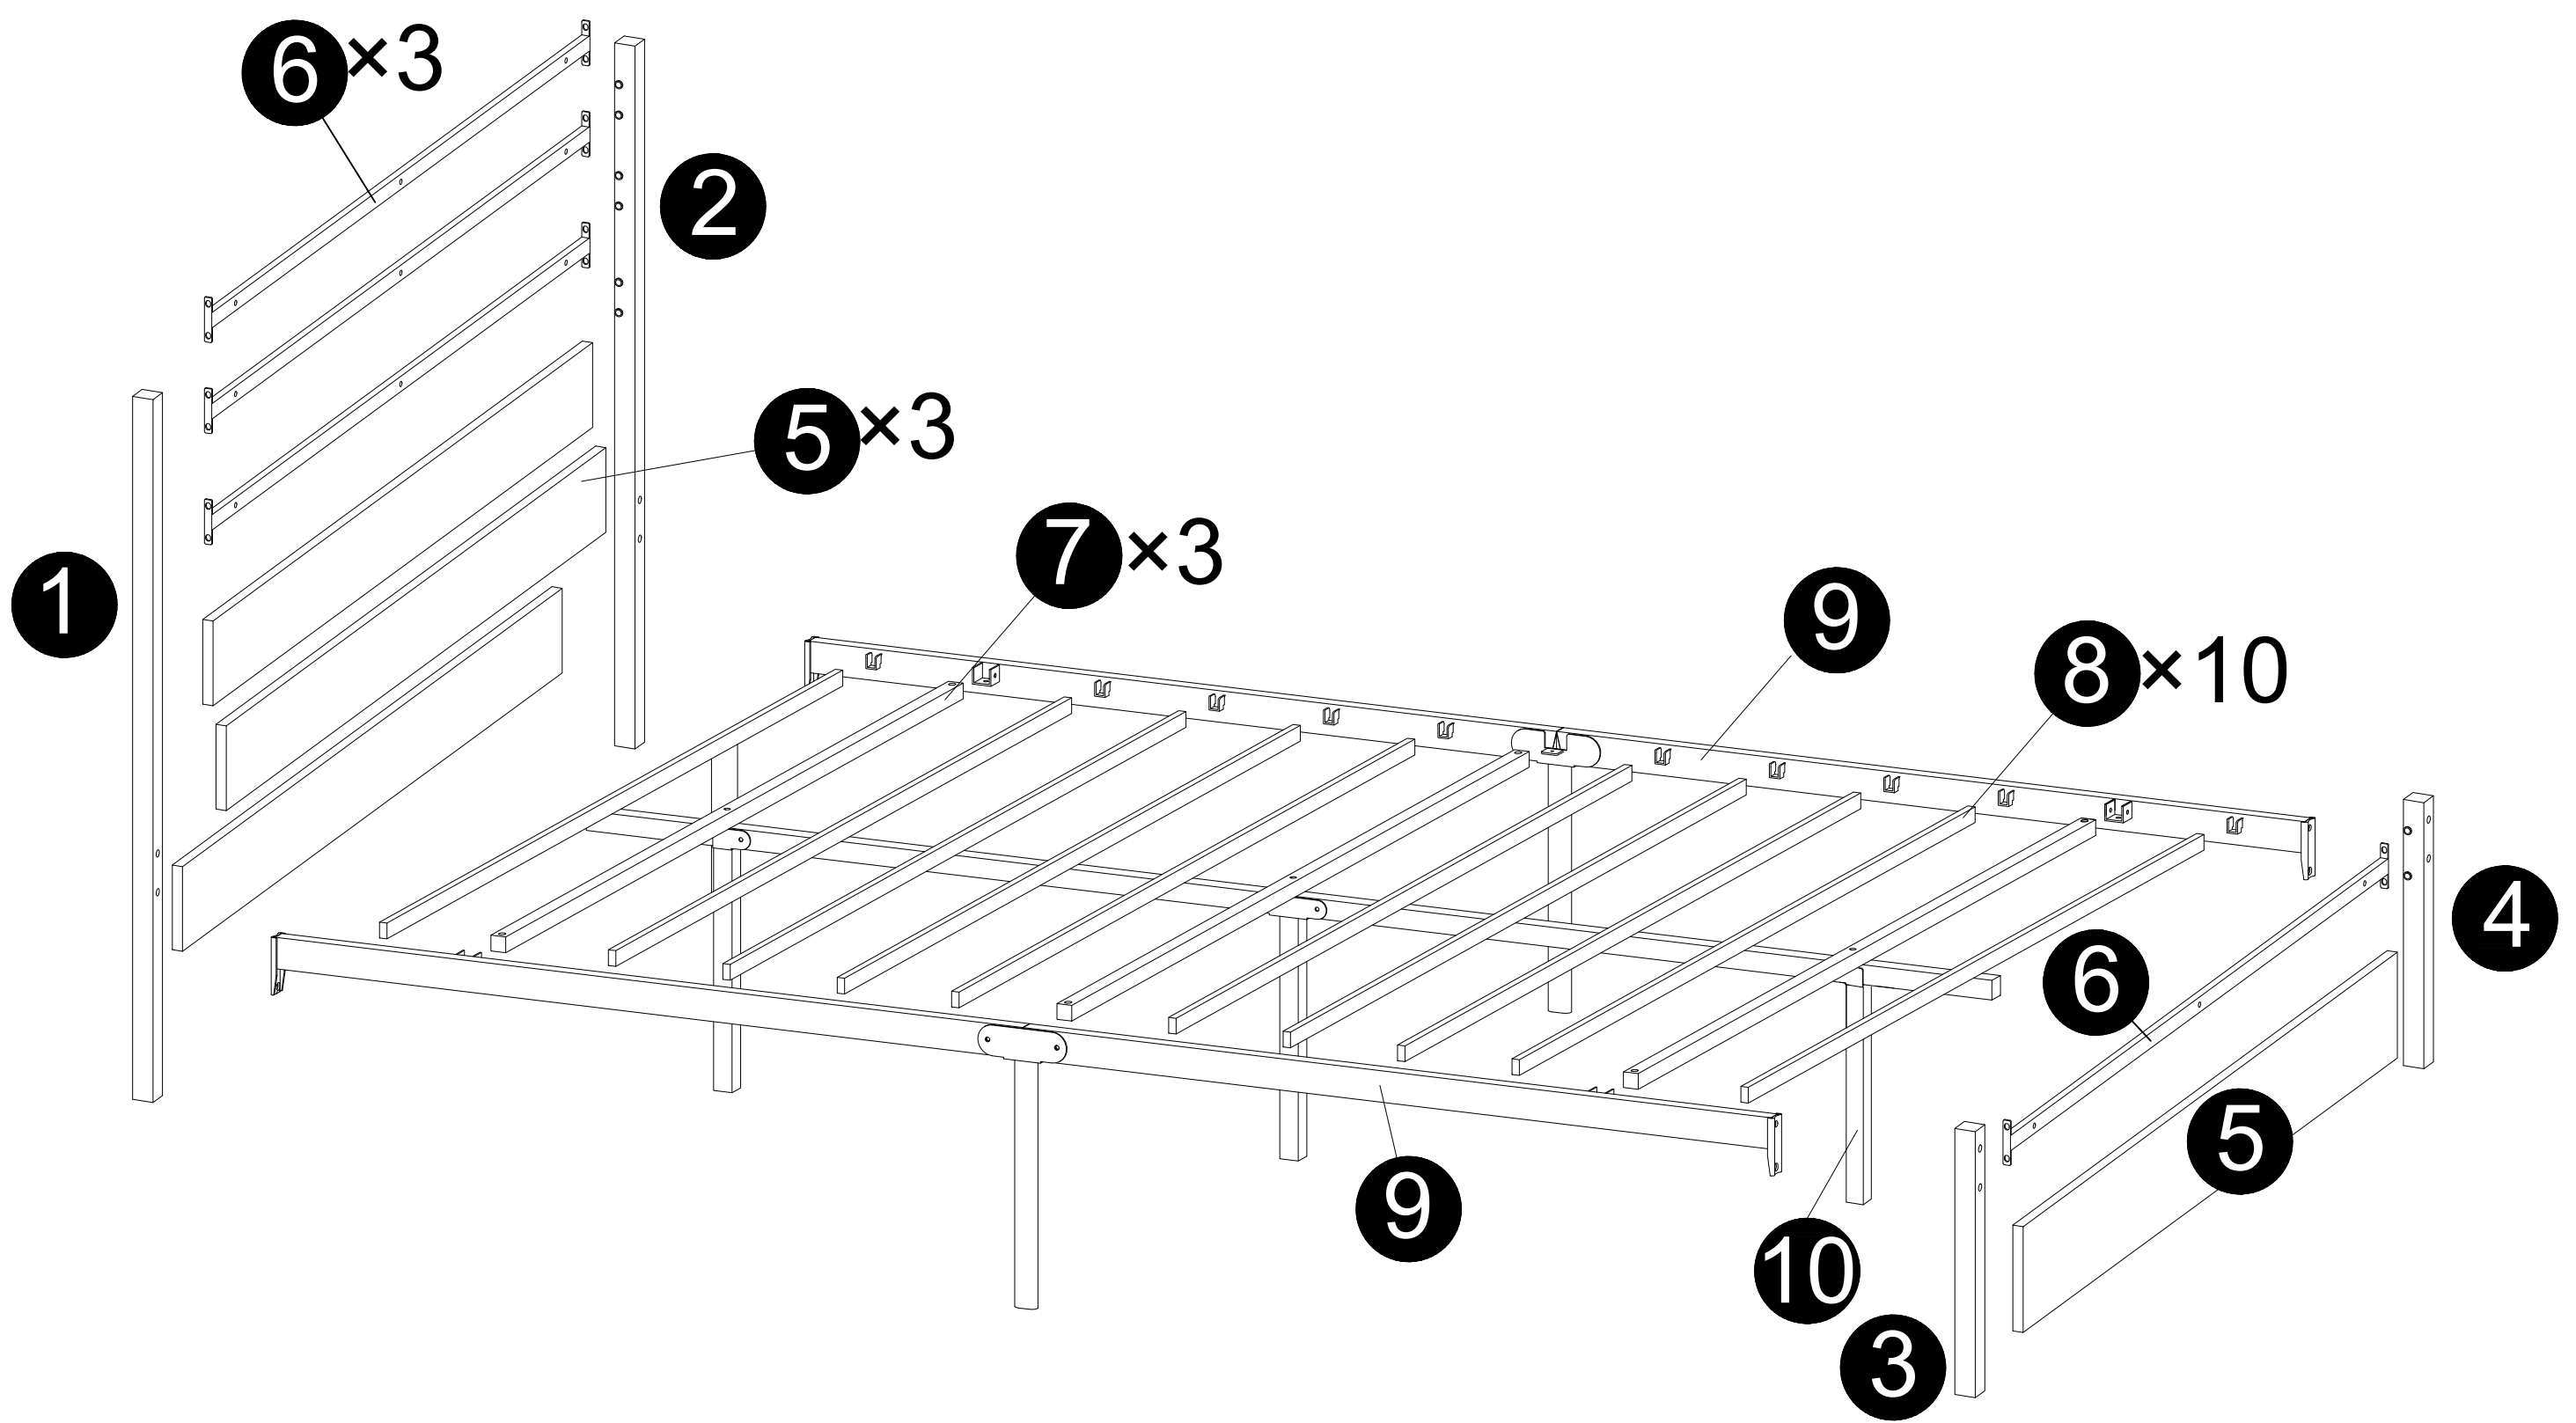


Installation Manual

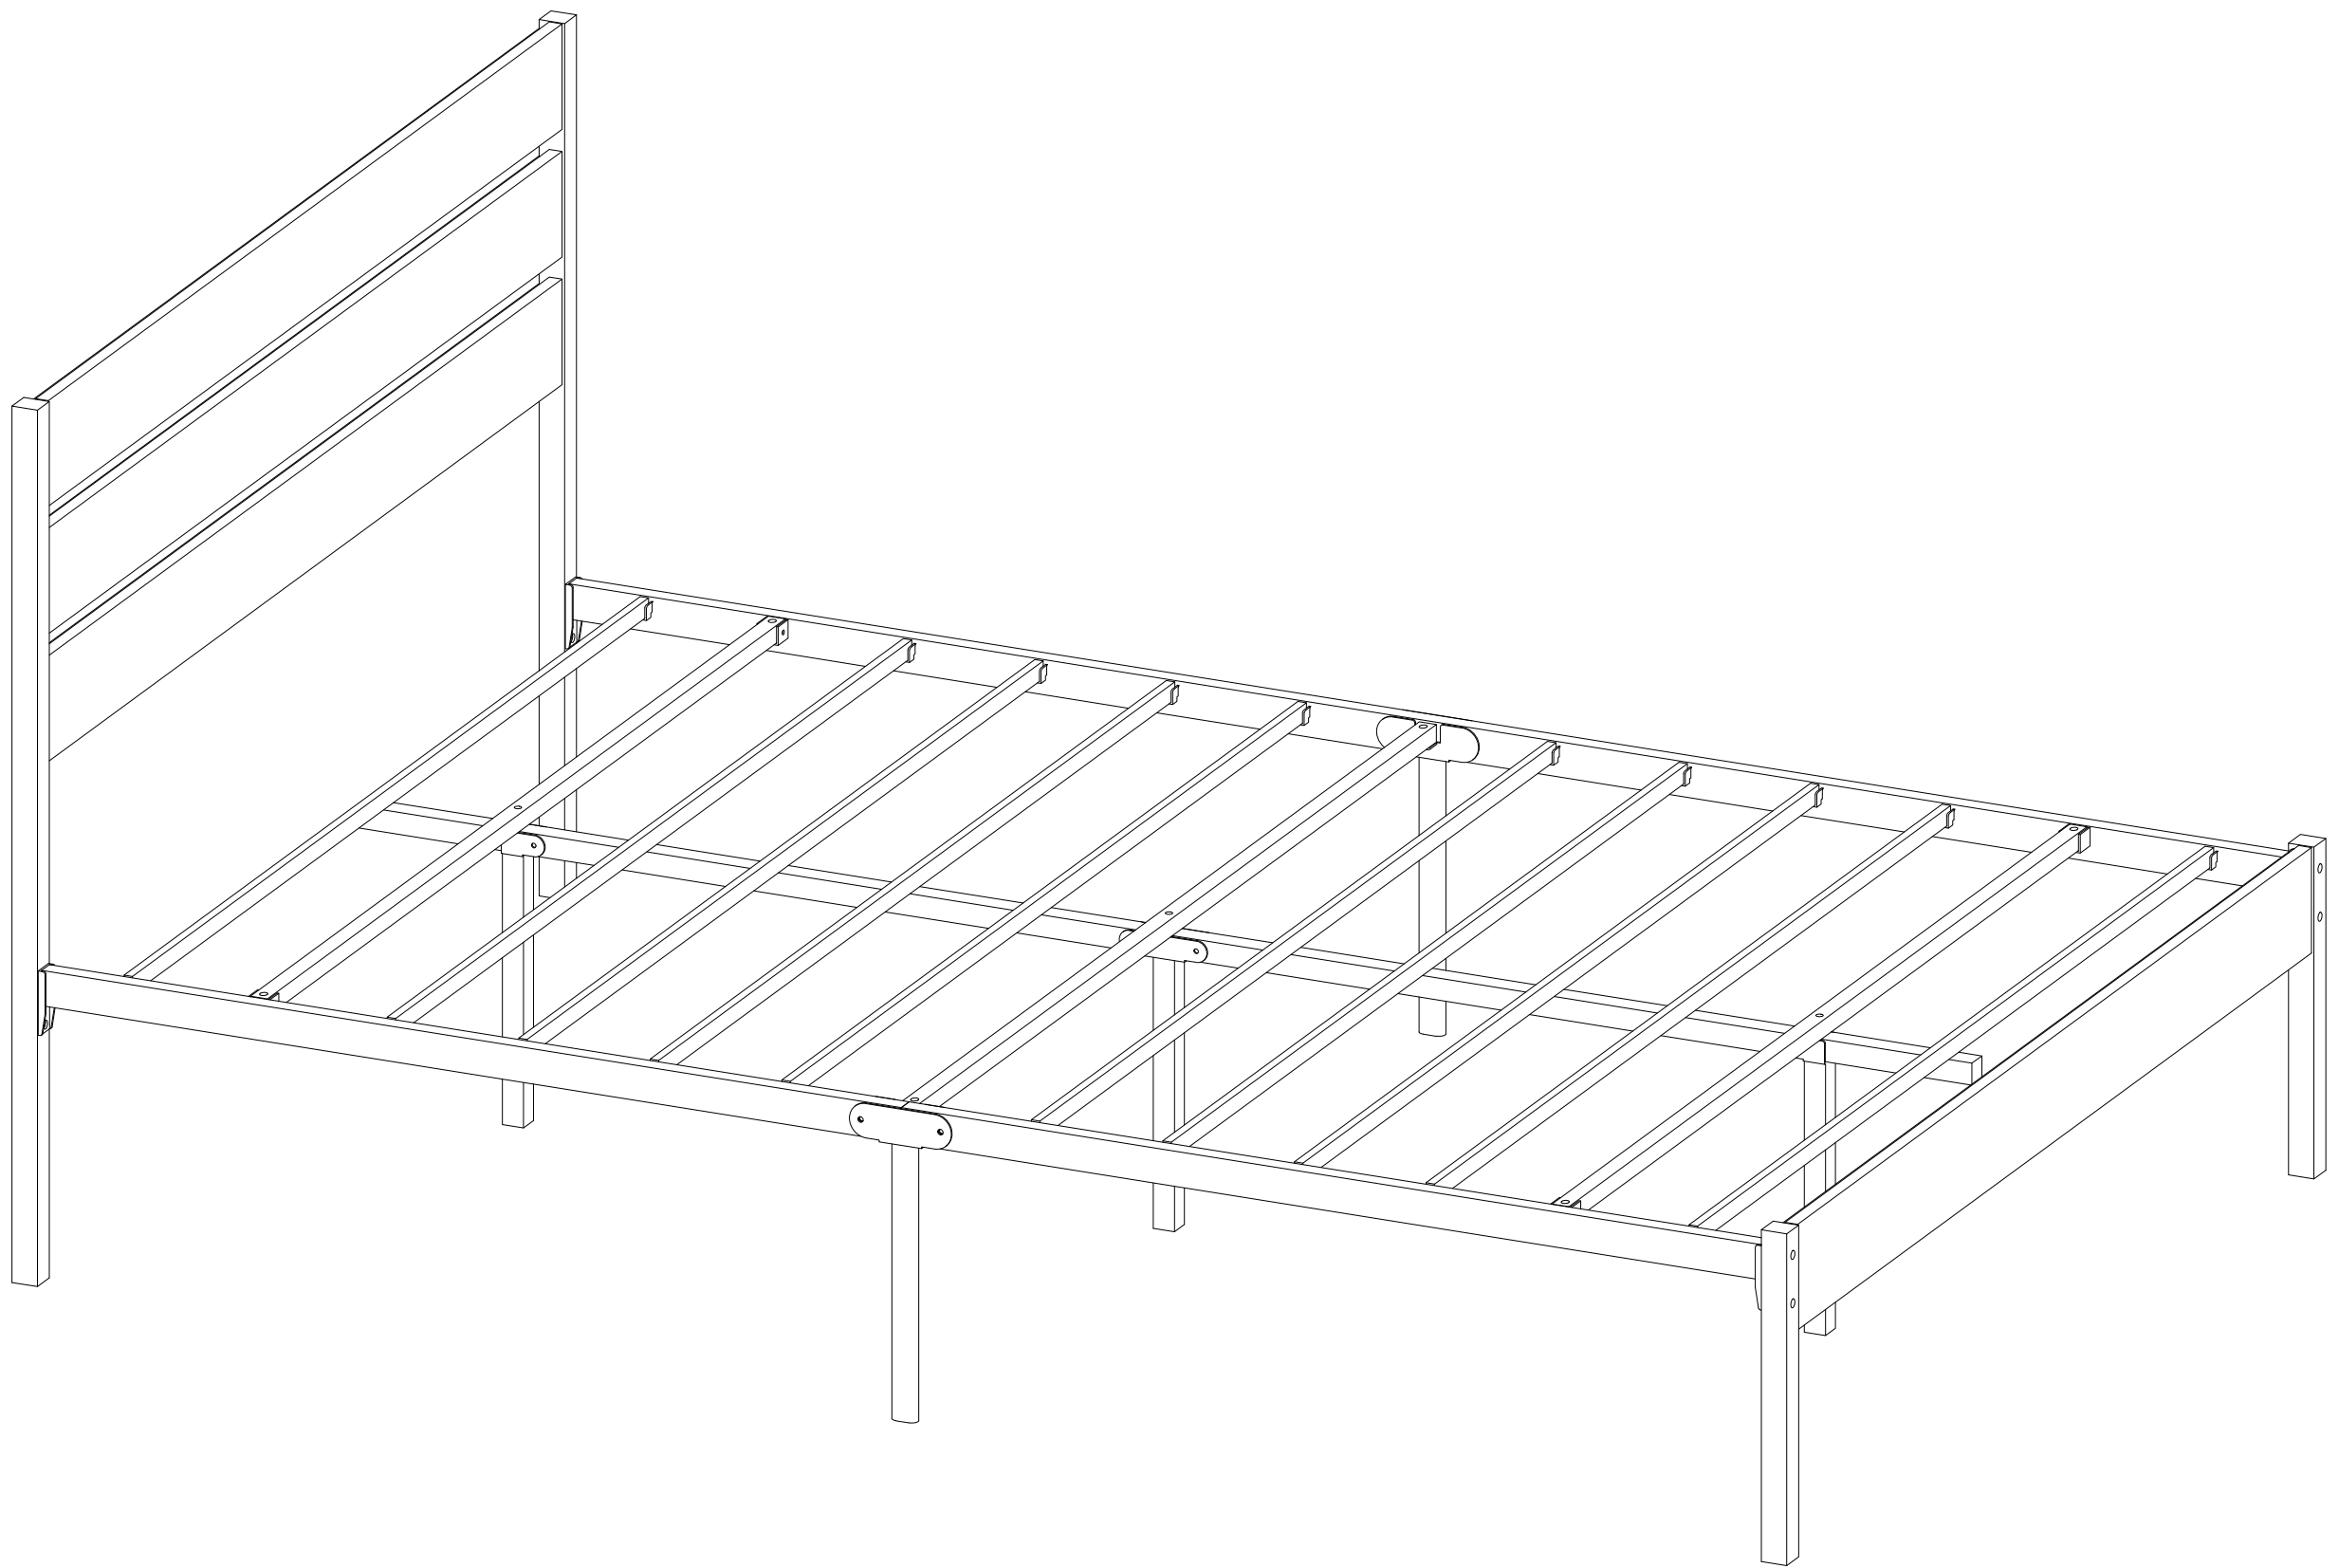





① × 1pc




② × 1pc




③ × 1pc



④ × 1pc



⑤ × 4pcs

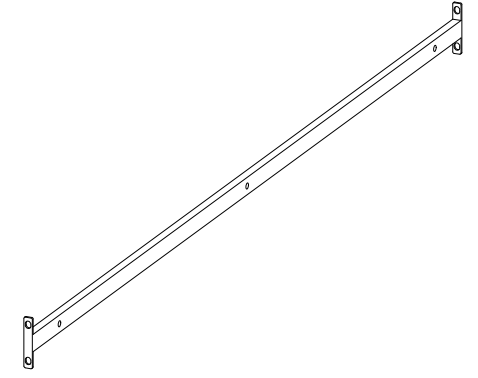


⑥ × 4pcs




⑦ × 3pcs




⑧ × 10pcs

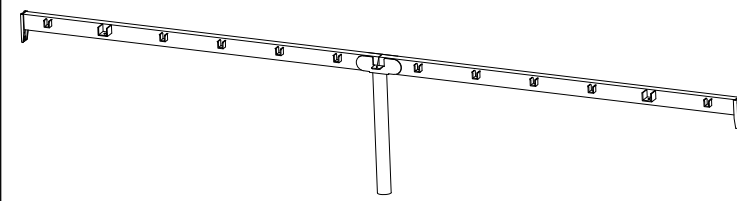

⑨ × 2pcs

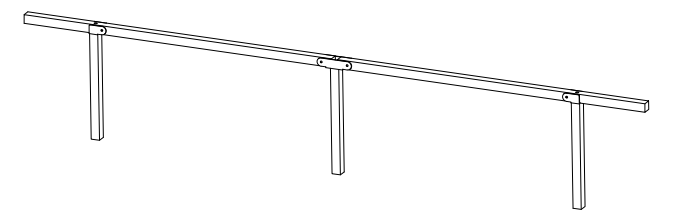


⑩ × 1pc

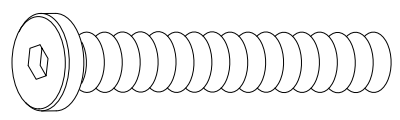


M8×50mm

① × 4pcs

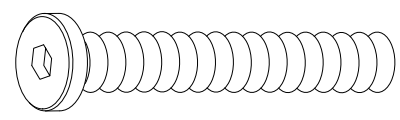


M6×55mm

② × 3pcs

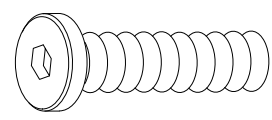


M6×25mm

③ × 4pcs

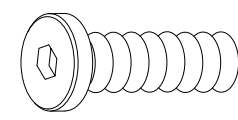


M6×20mm

④ × 12pcs




⑤ × 8pcs

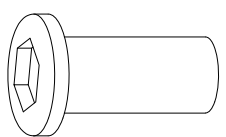

M6×12mm


⑥ × 4pcs



⑦ × 16pcs




⑧ × 2pcs



M6×30mm


⑨ × 6pcs

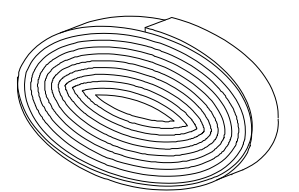

⑩ × 1pc


1

Note: For easy setup intention,
do not tighten screws during
the installation process




M6×12mm

G × 16pcs

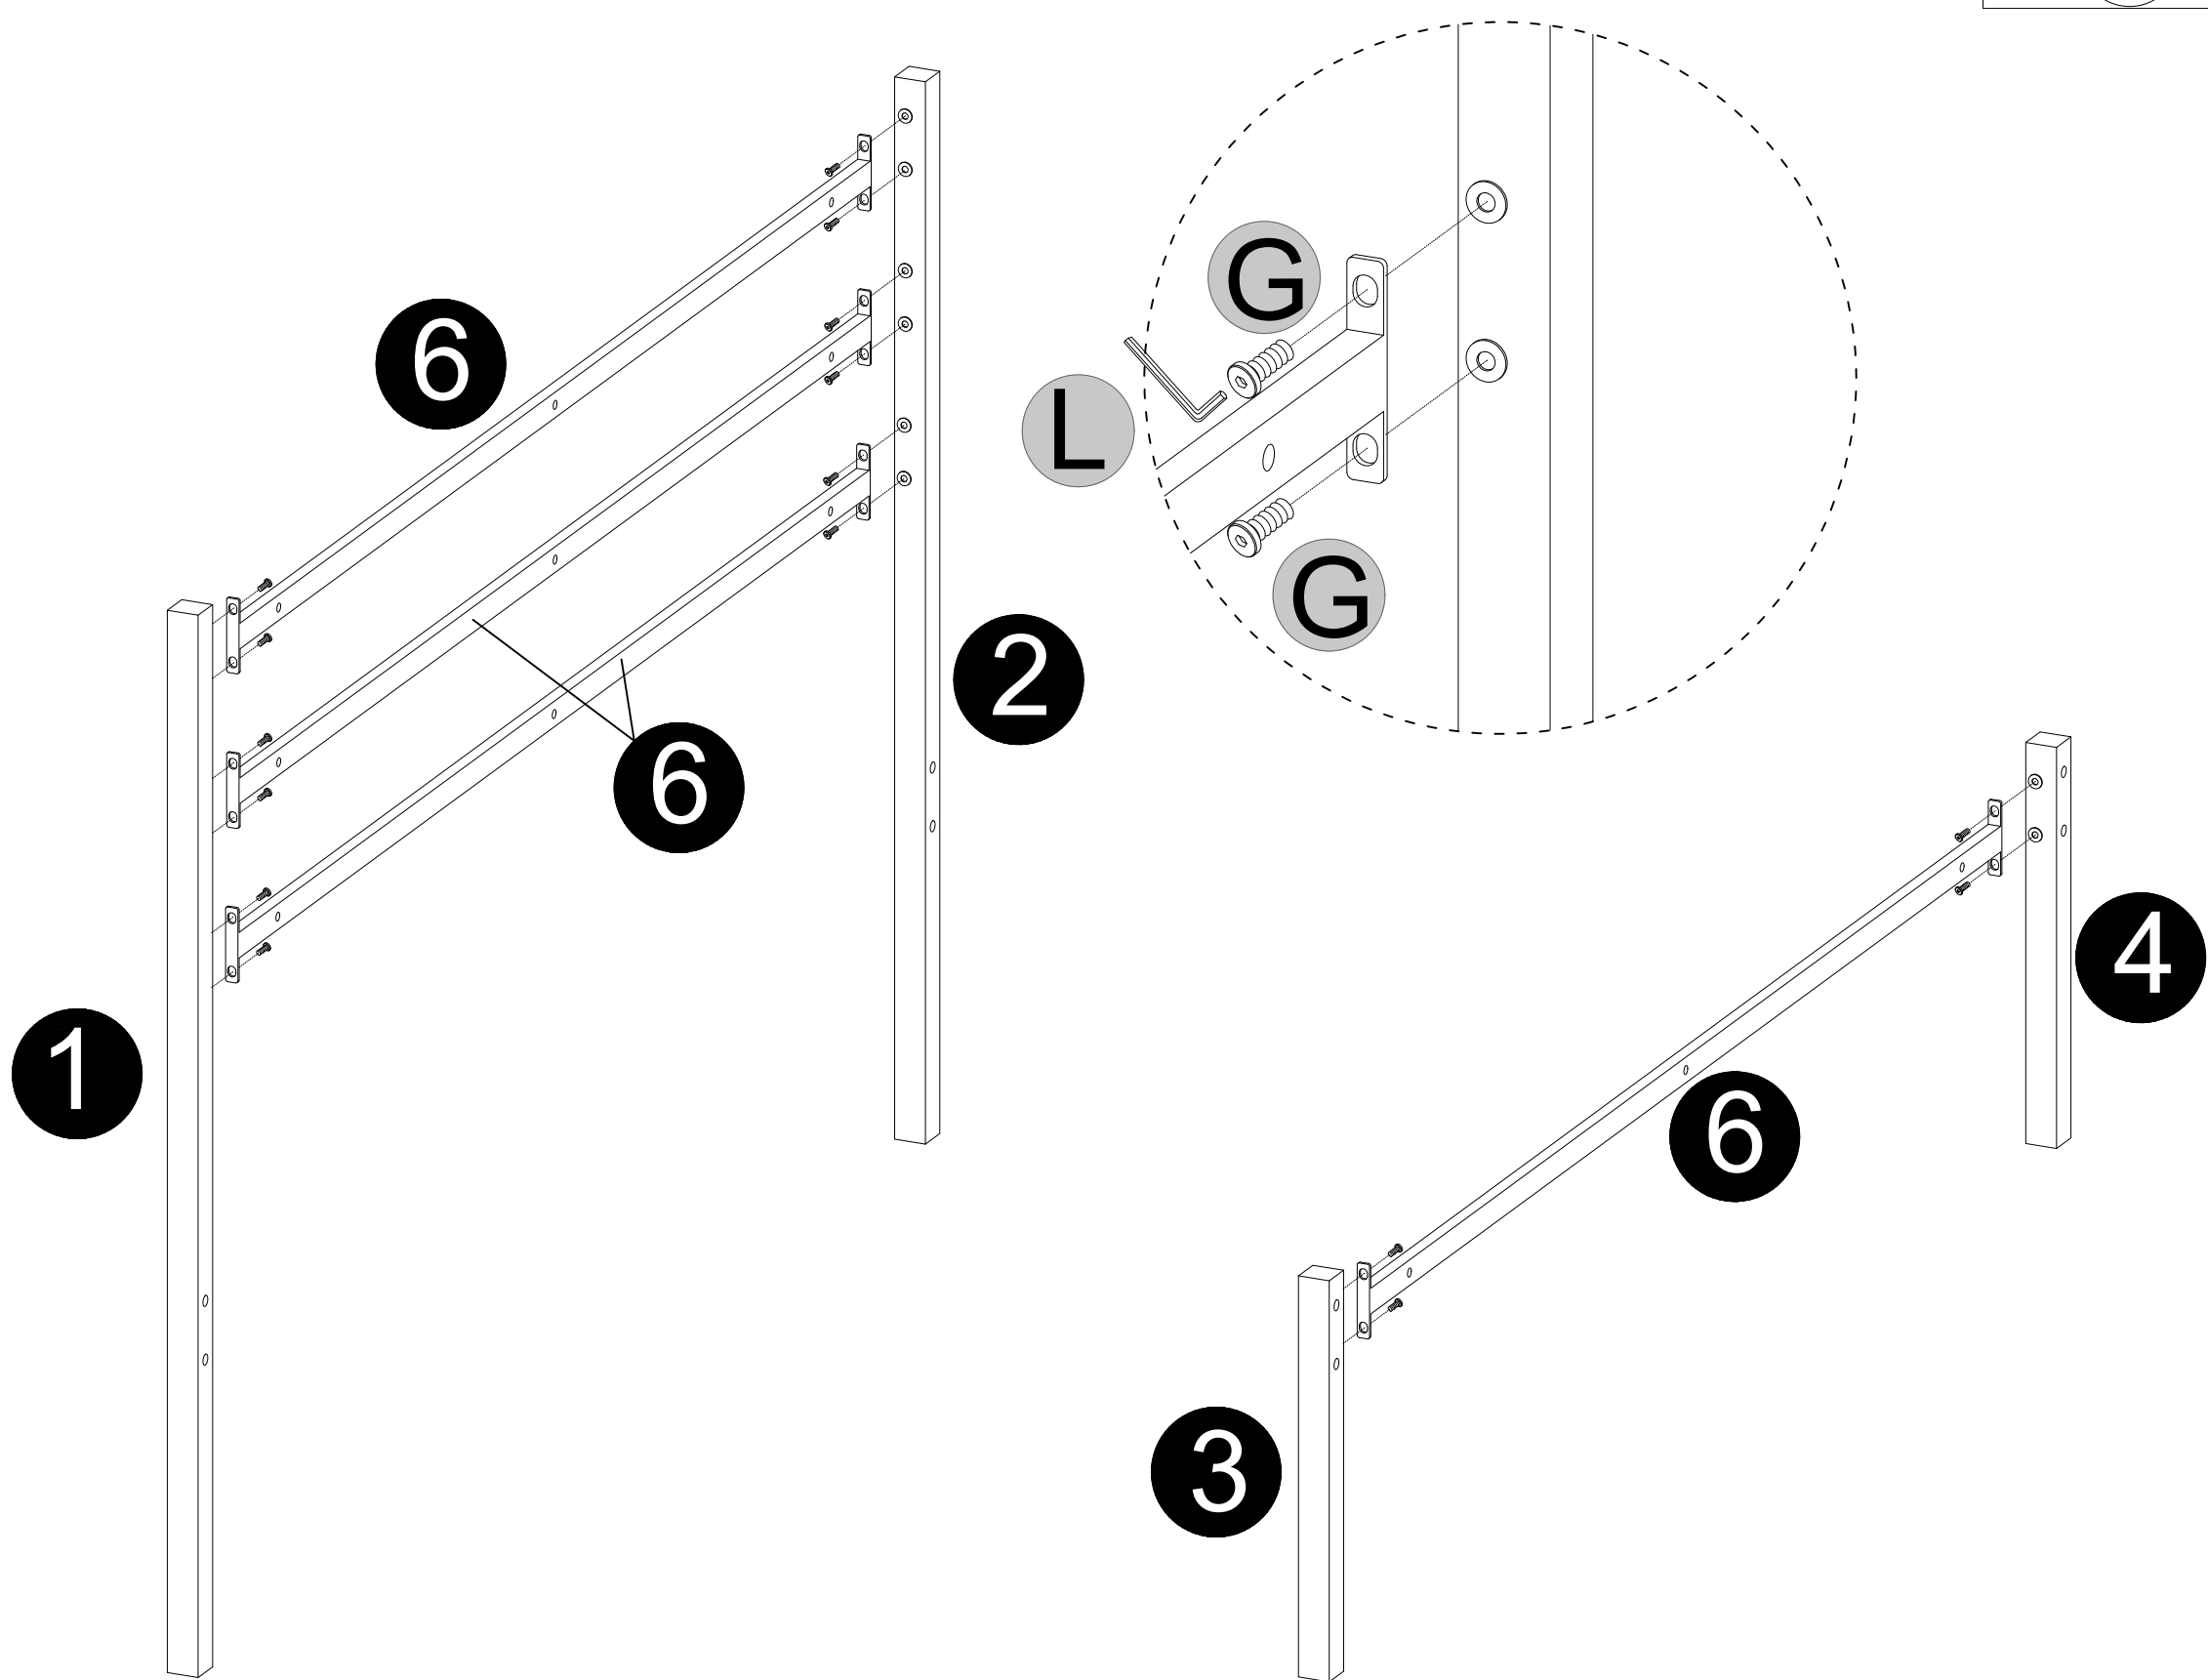


2




M6×20mm


D × 12pcs

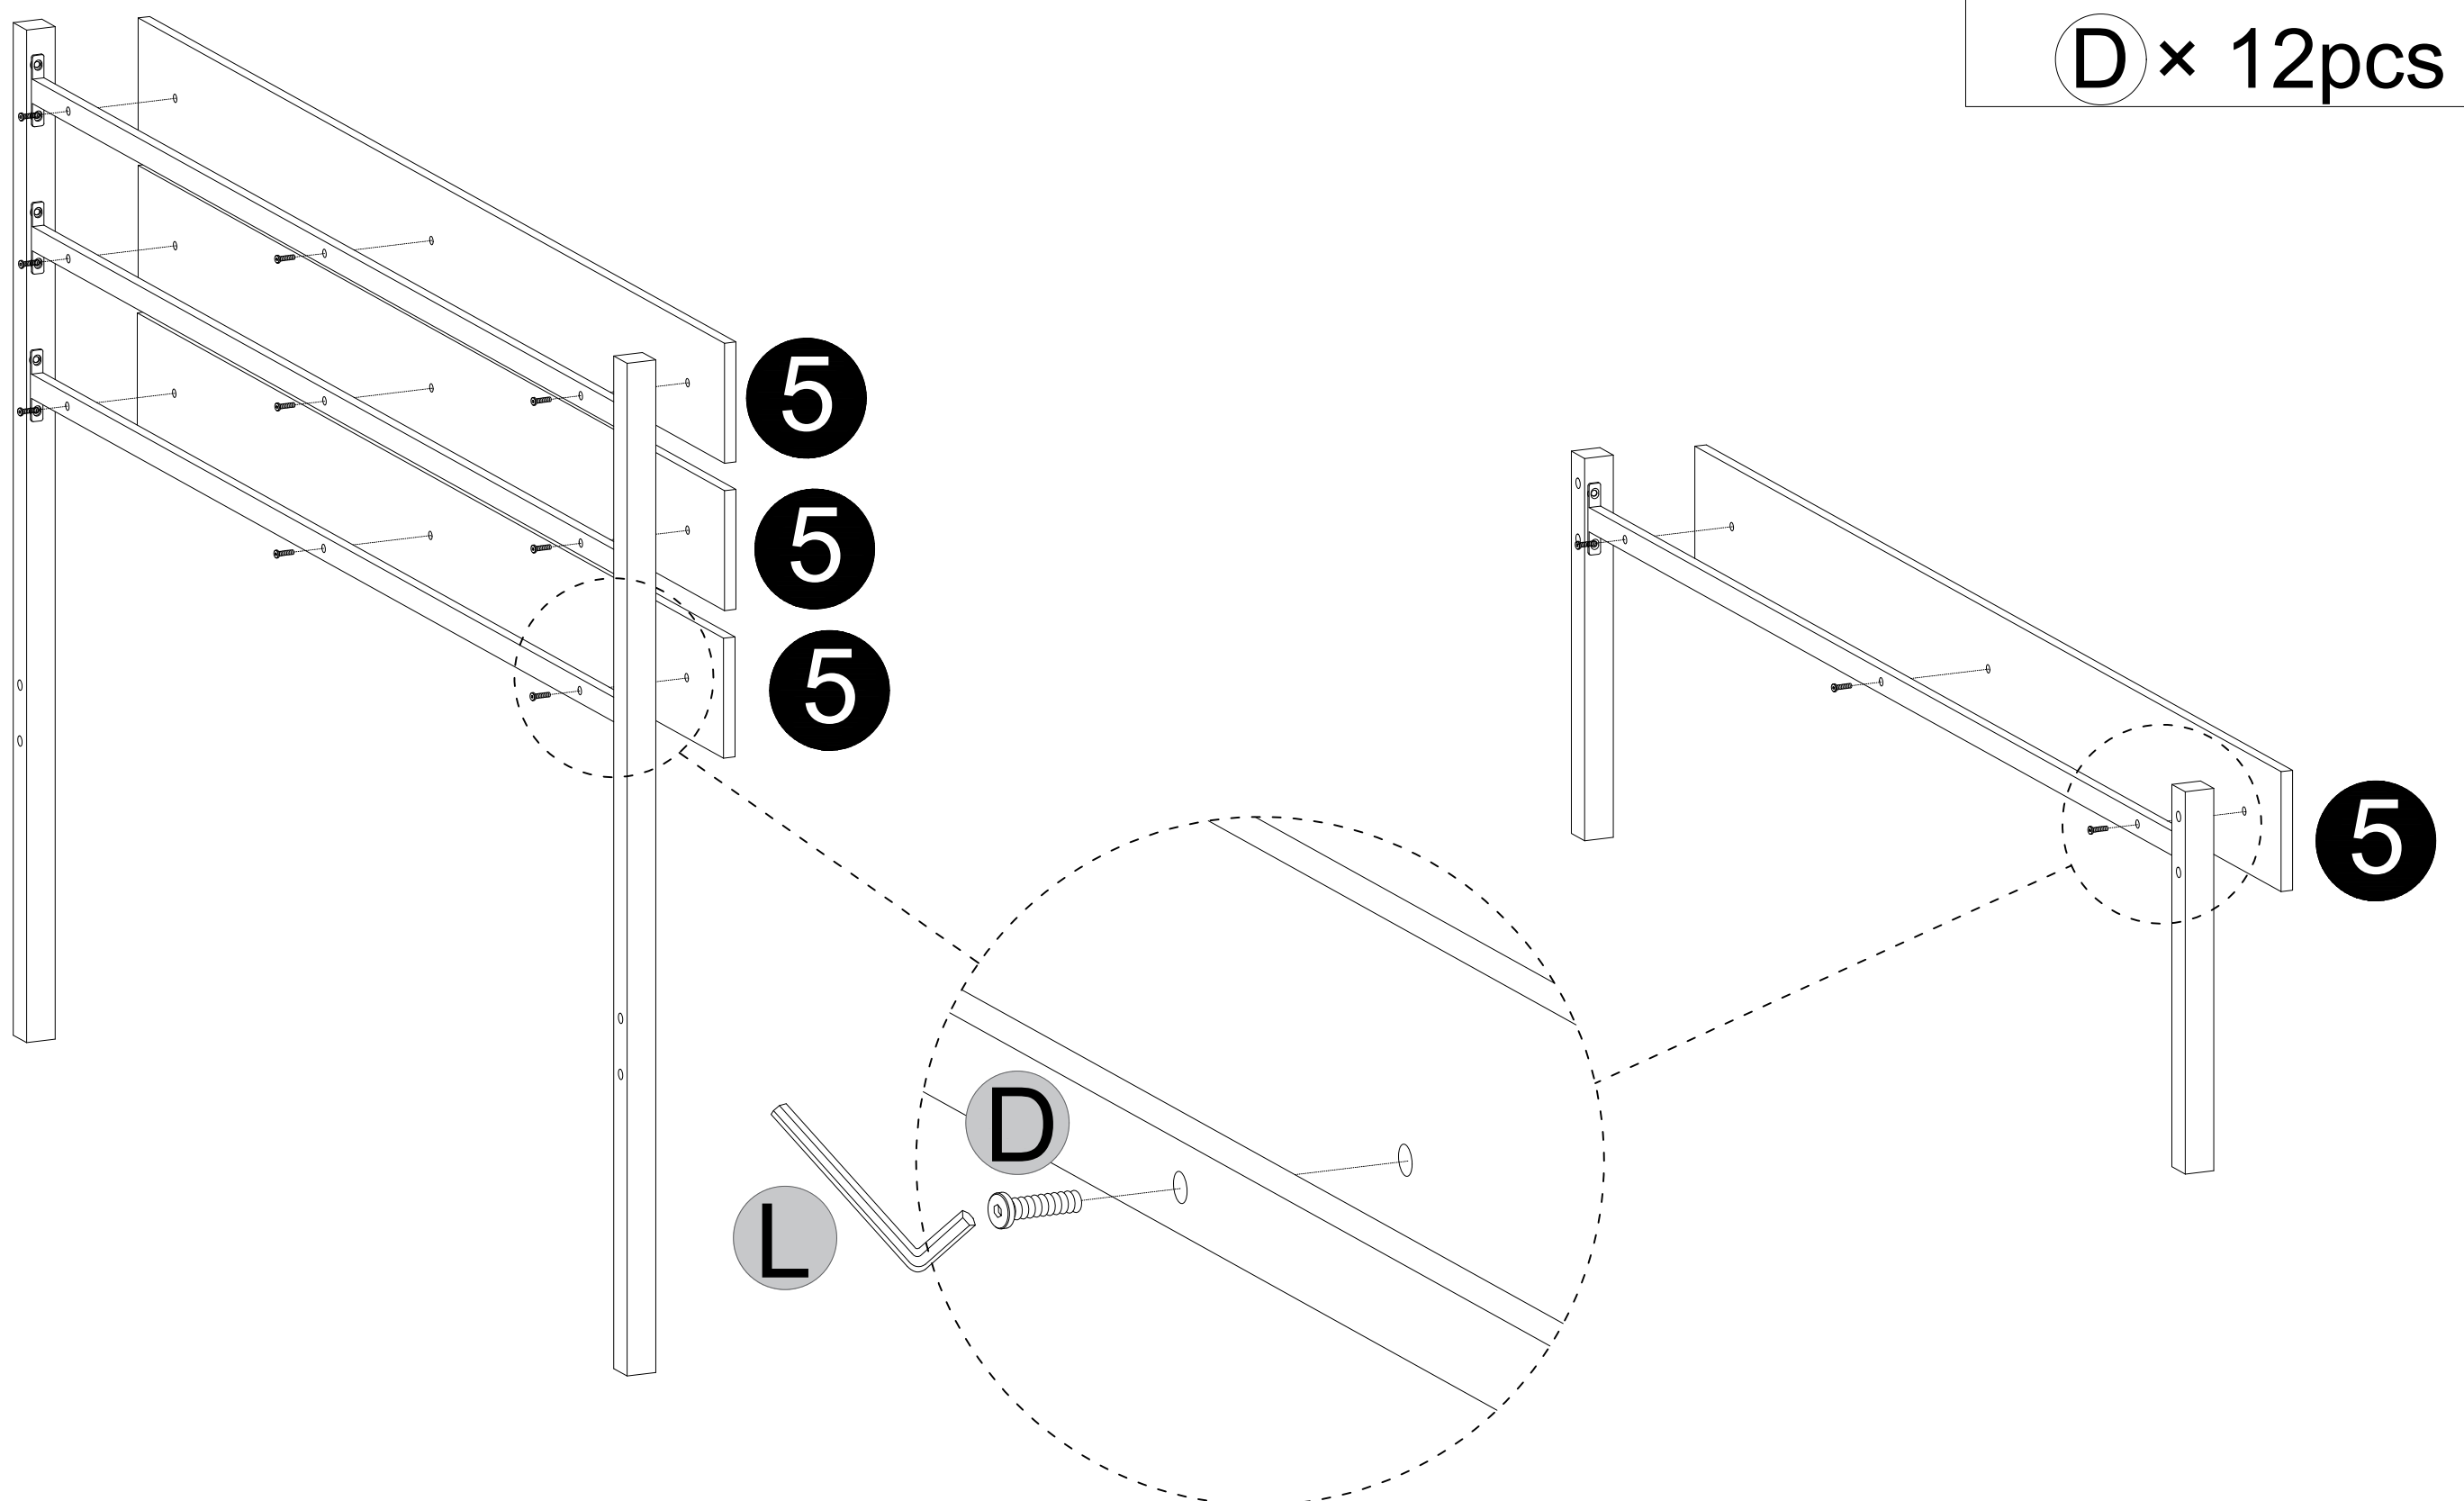

3

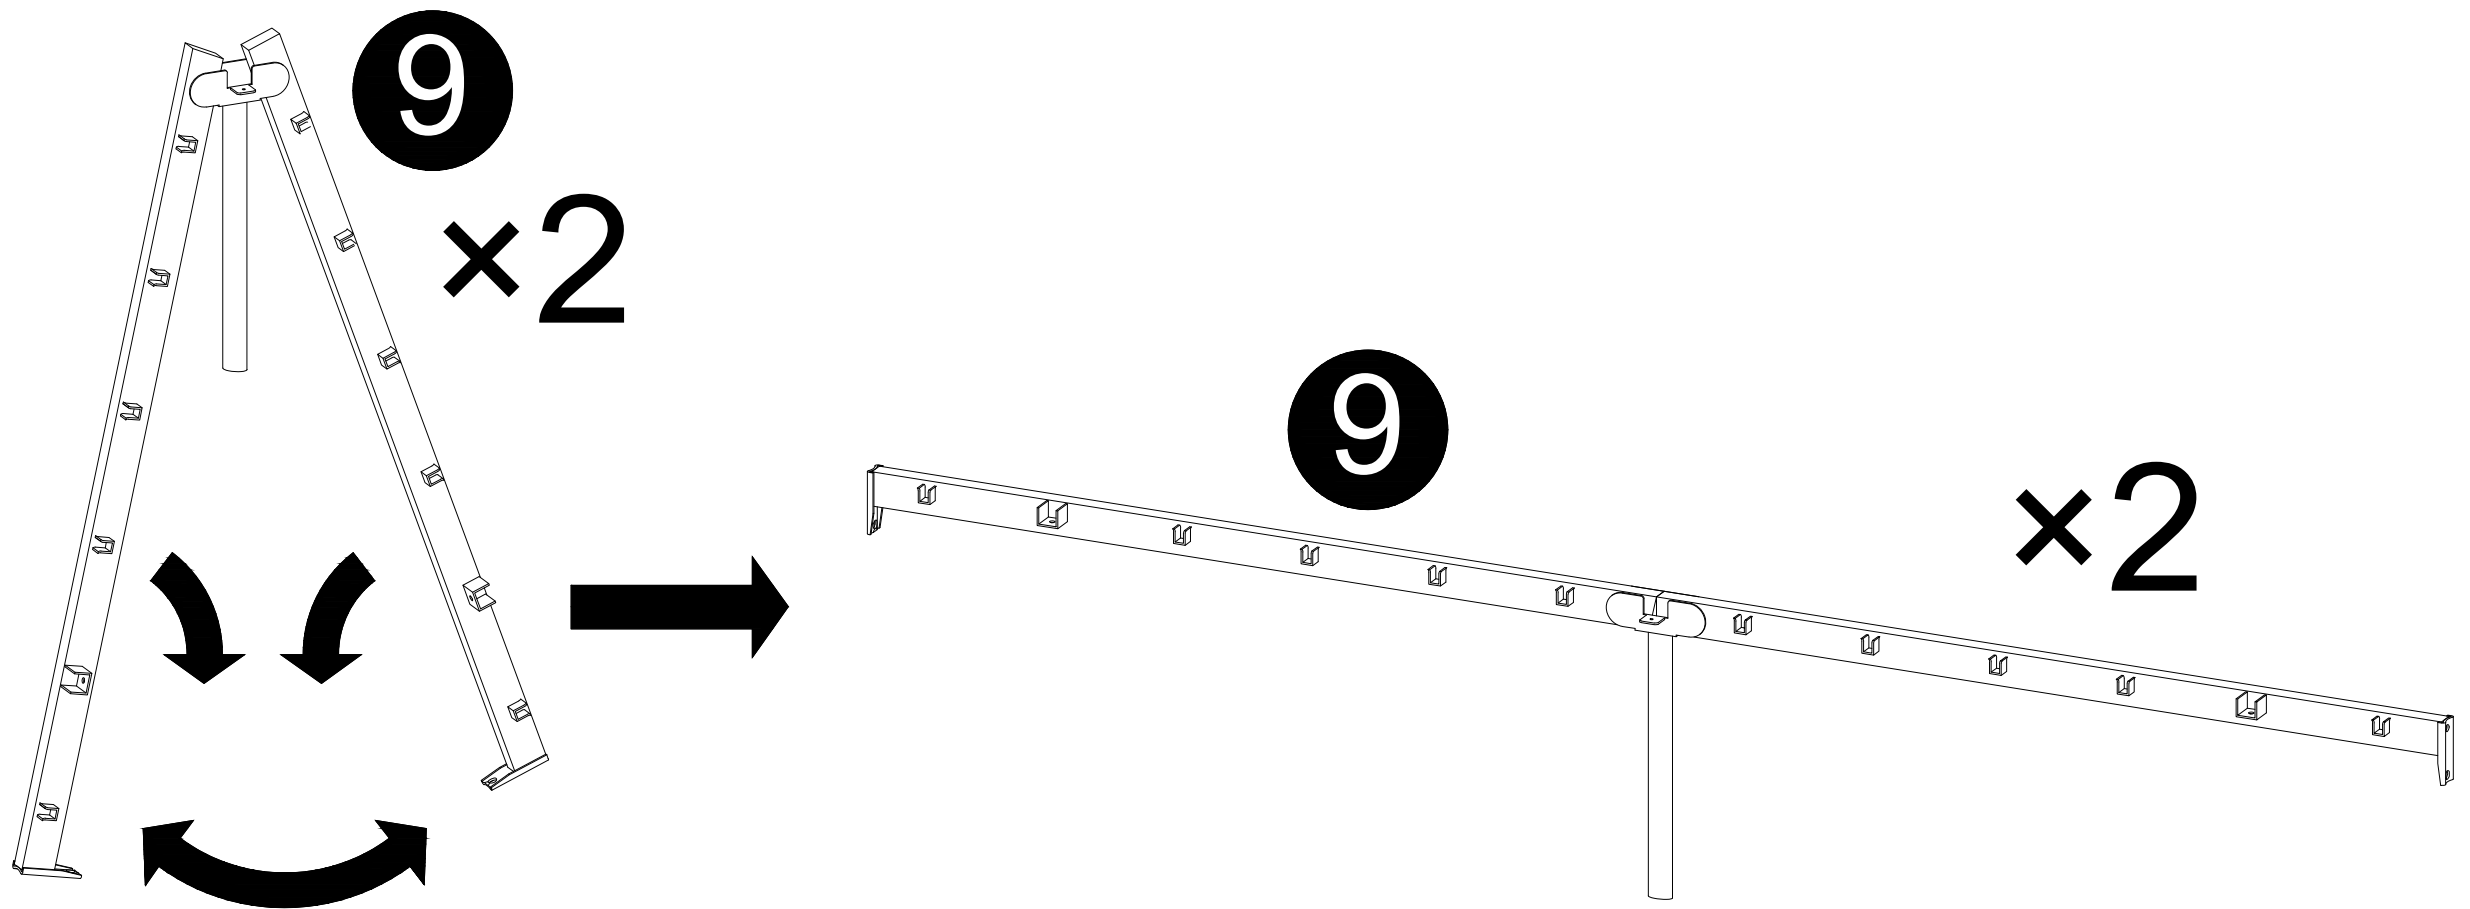


4




M8x50mm

A x 4pcs




M6x25mm


C x 4pcs




F x 4pcs



E x 8pcs


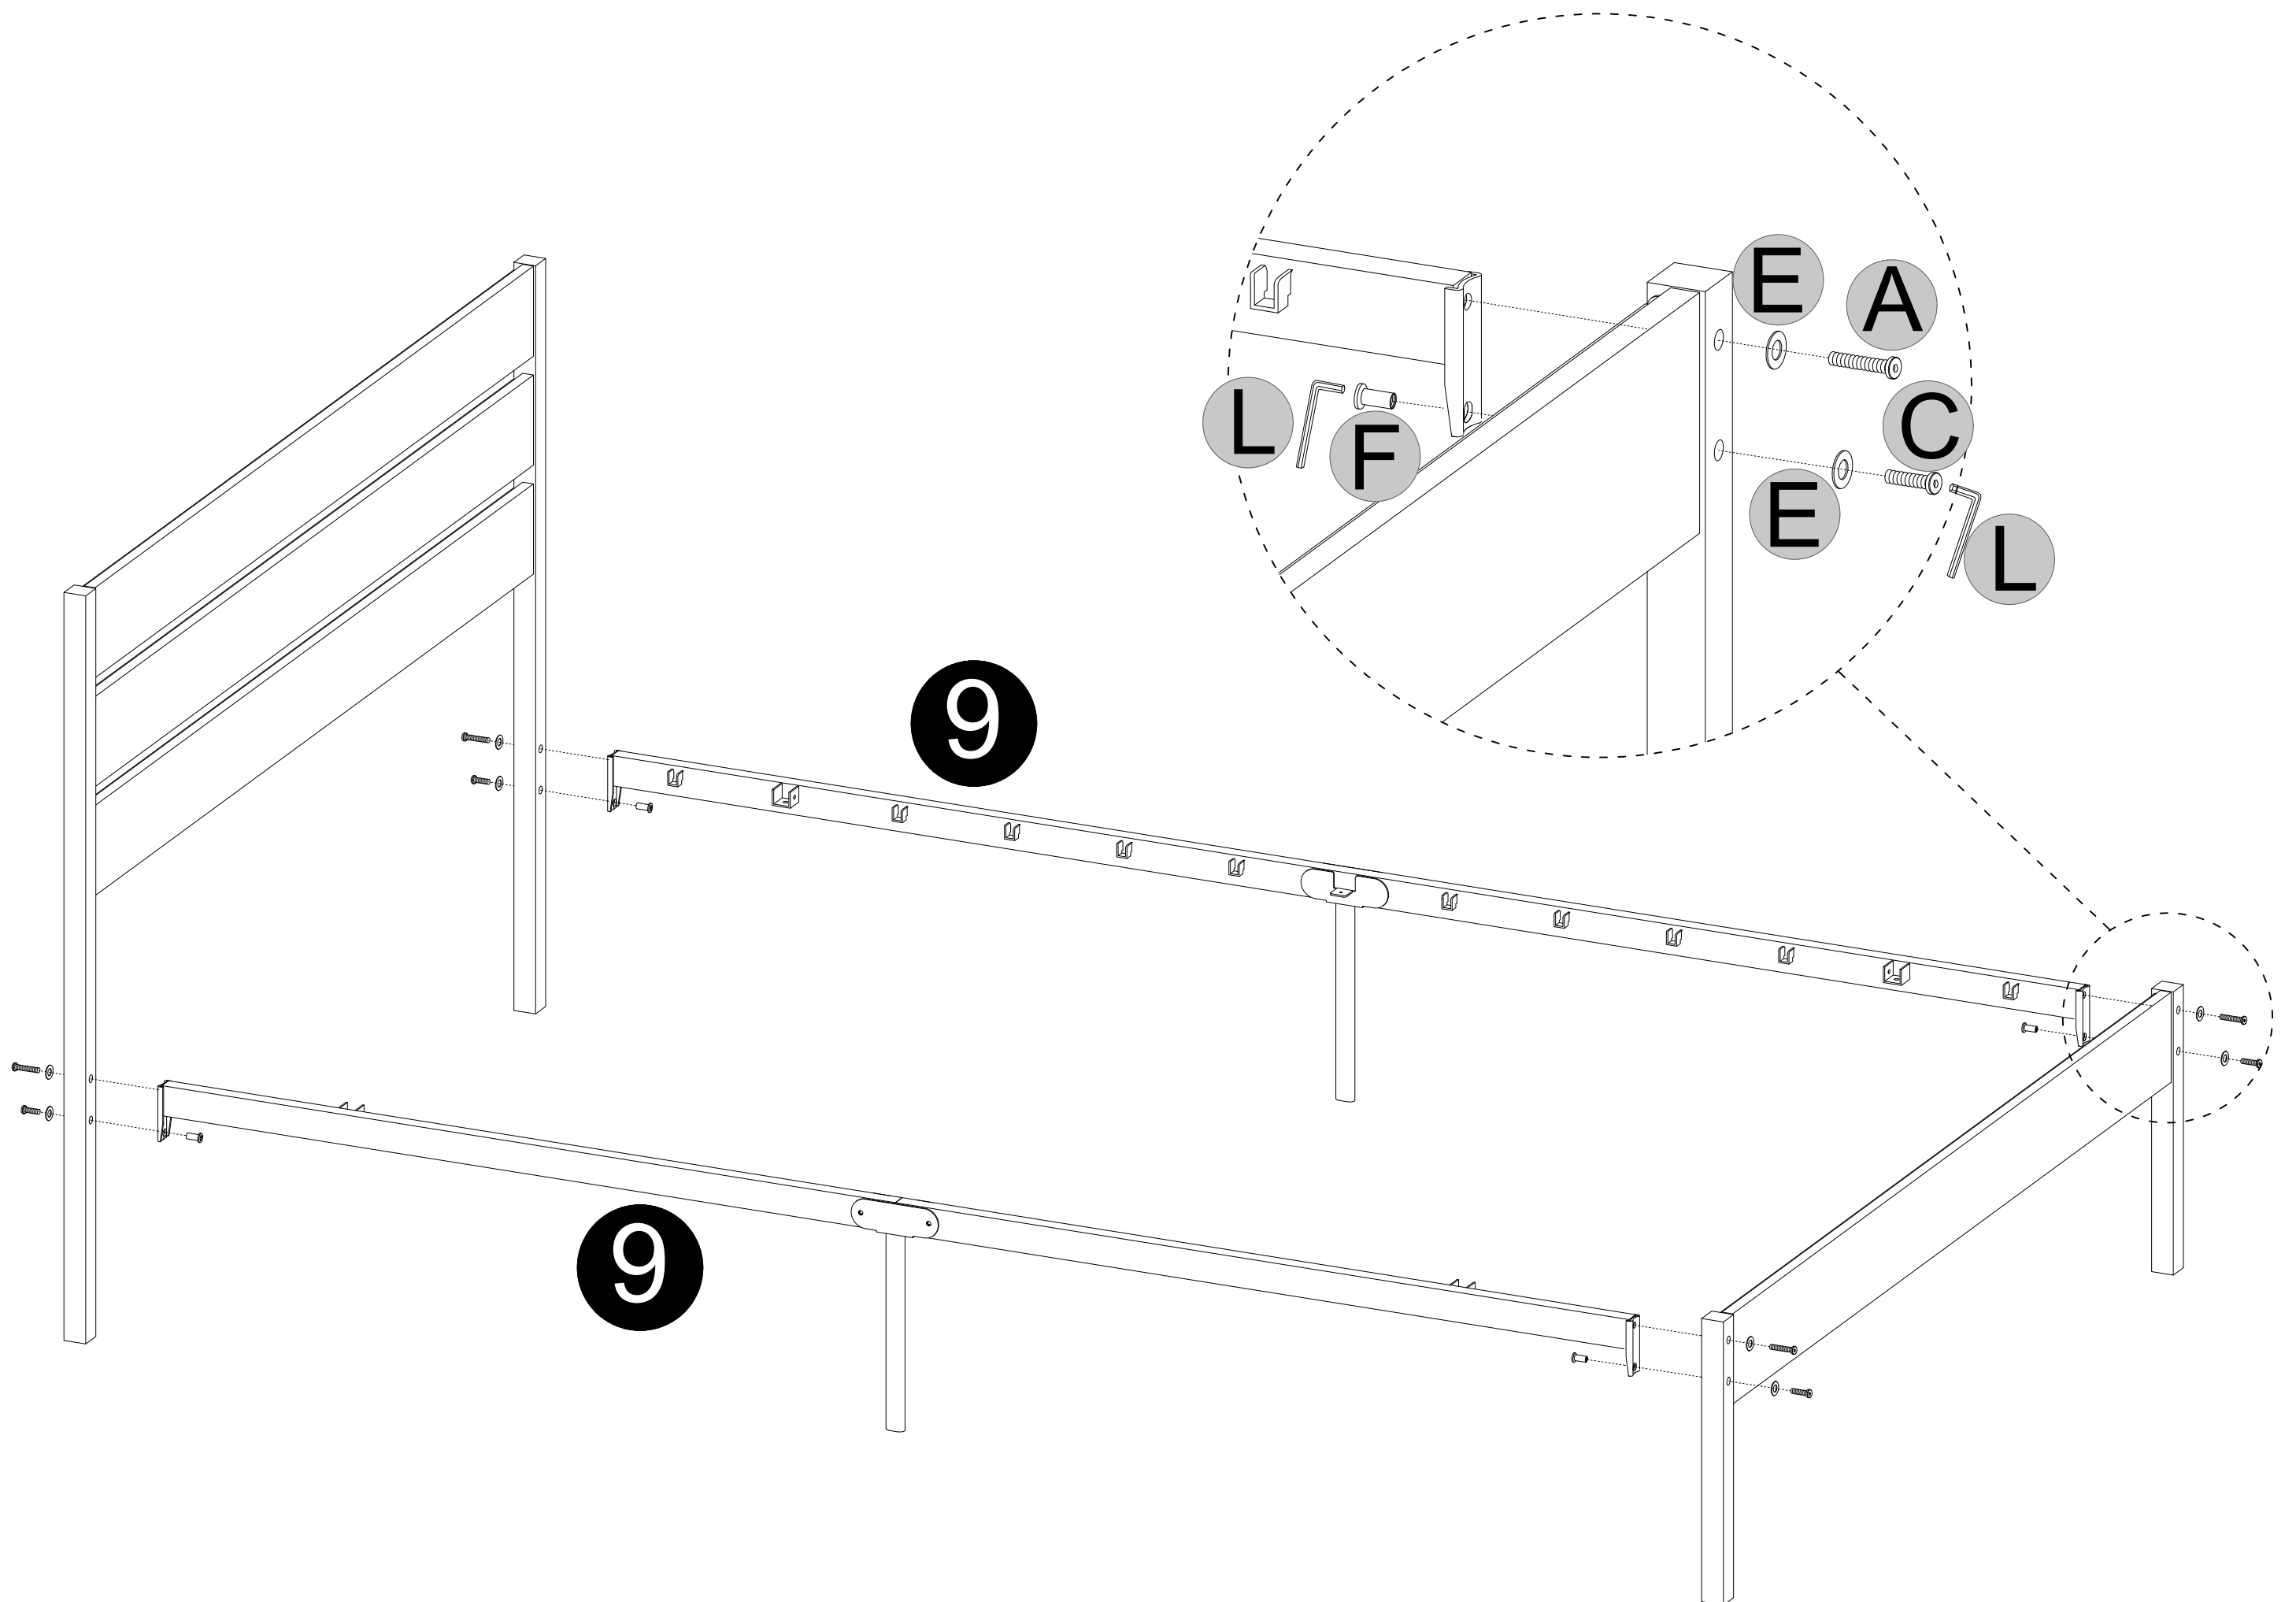


5




M6×30mm


M × 6pcs

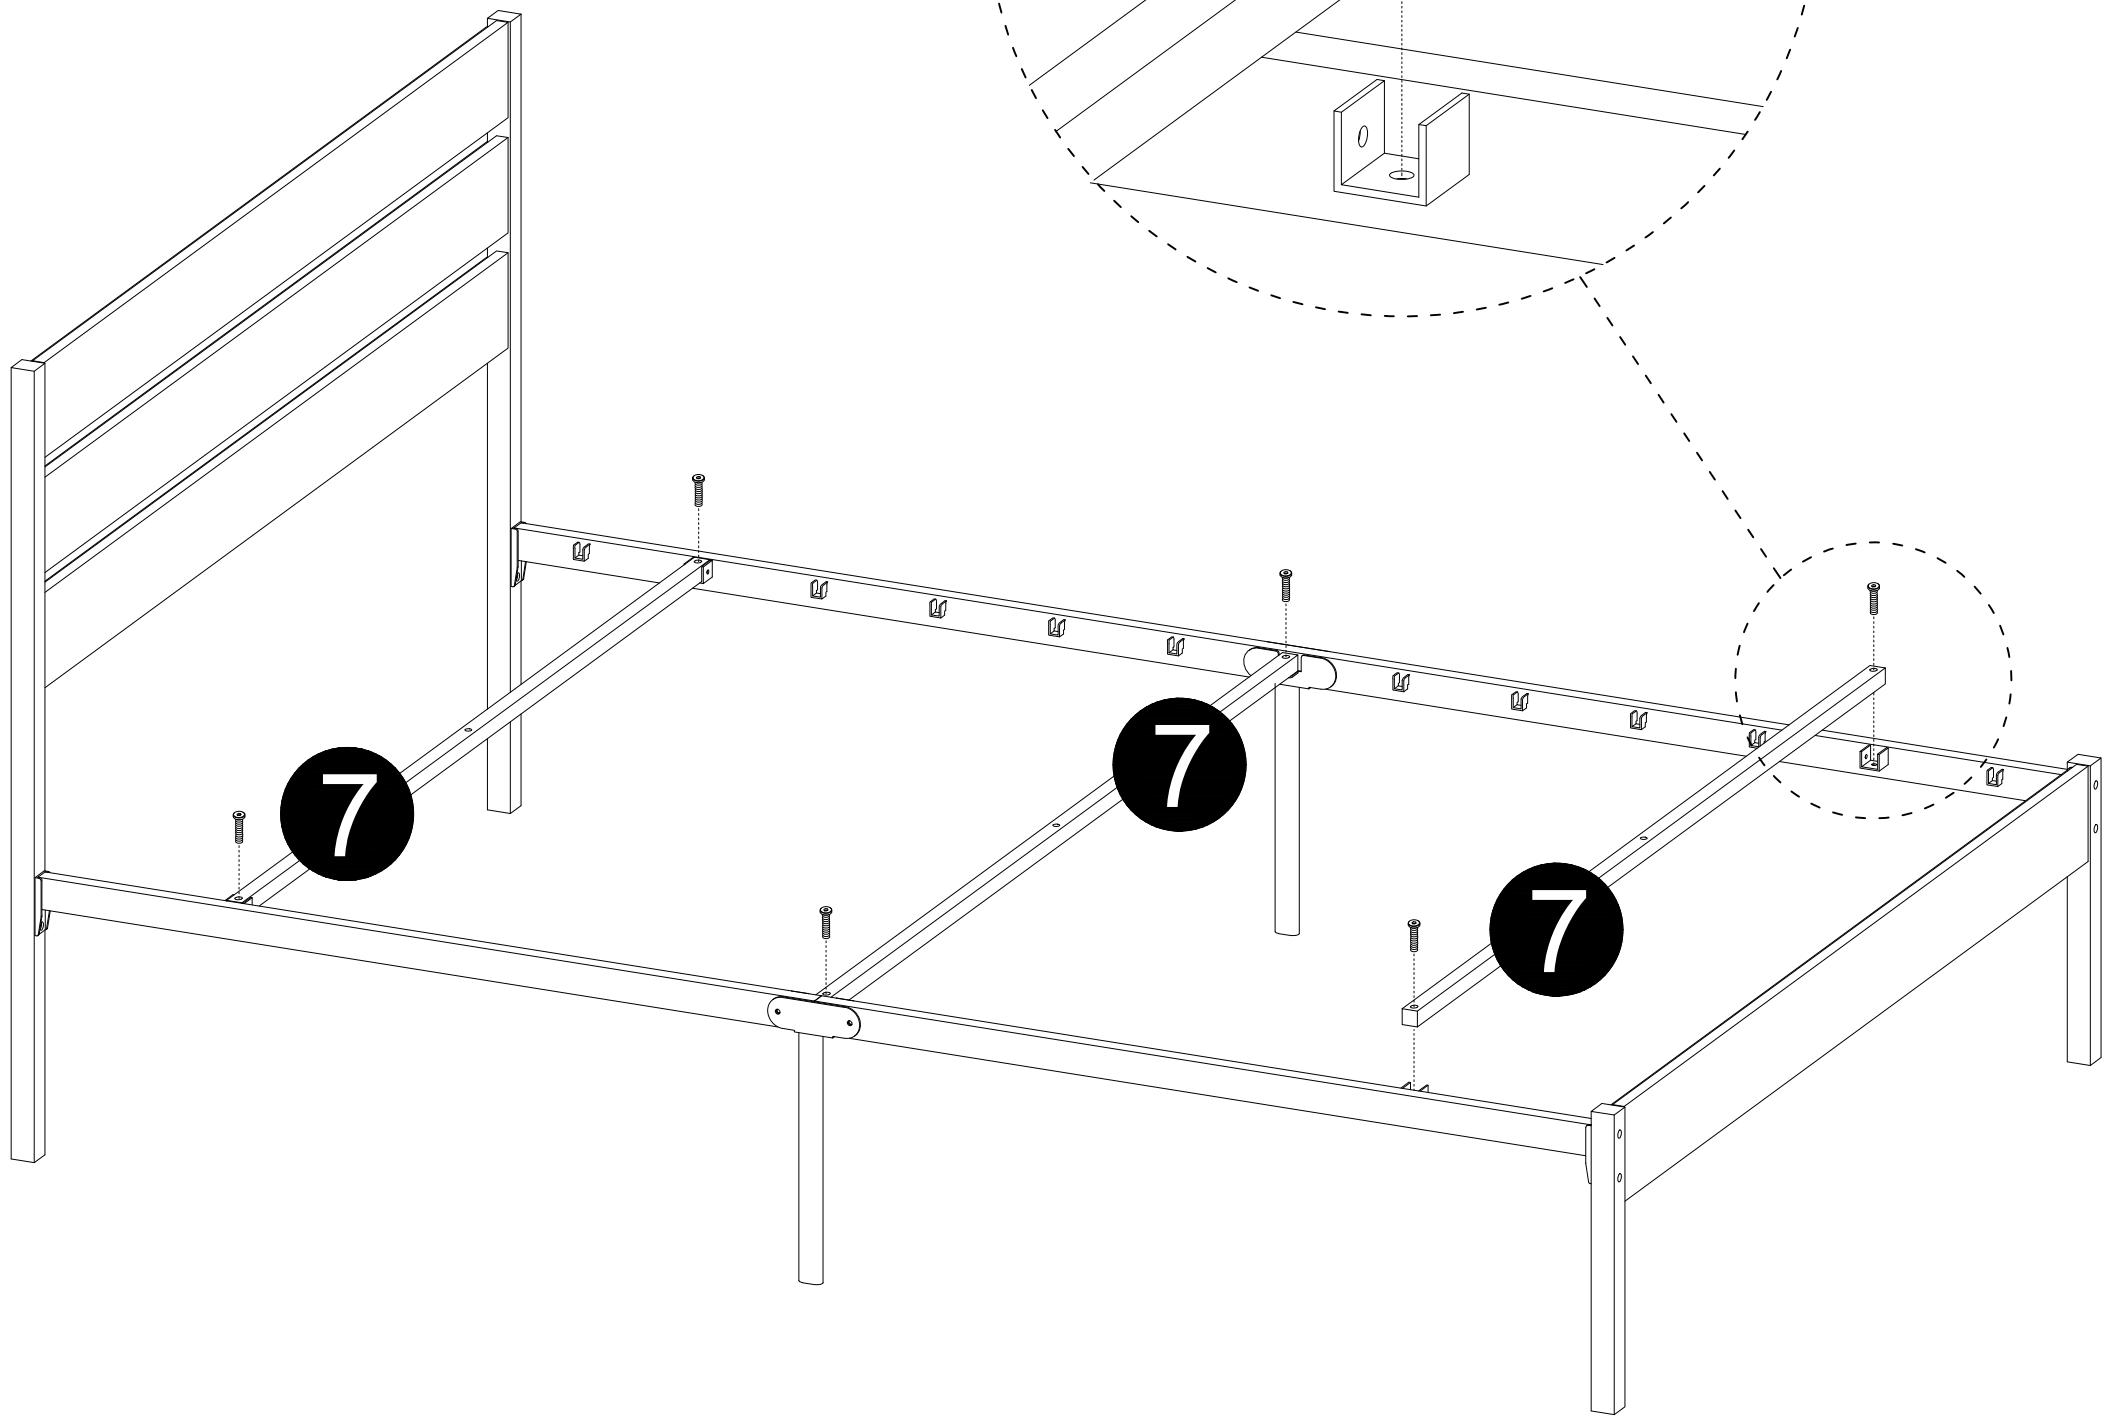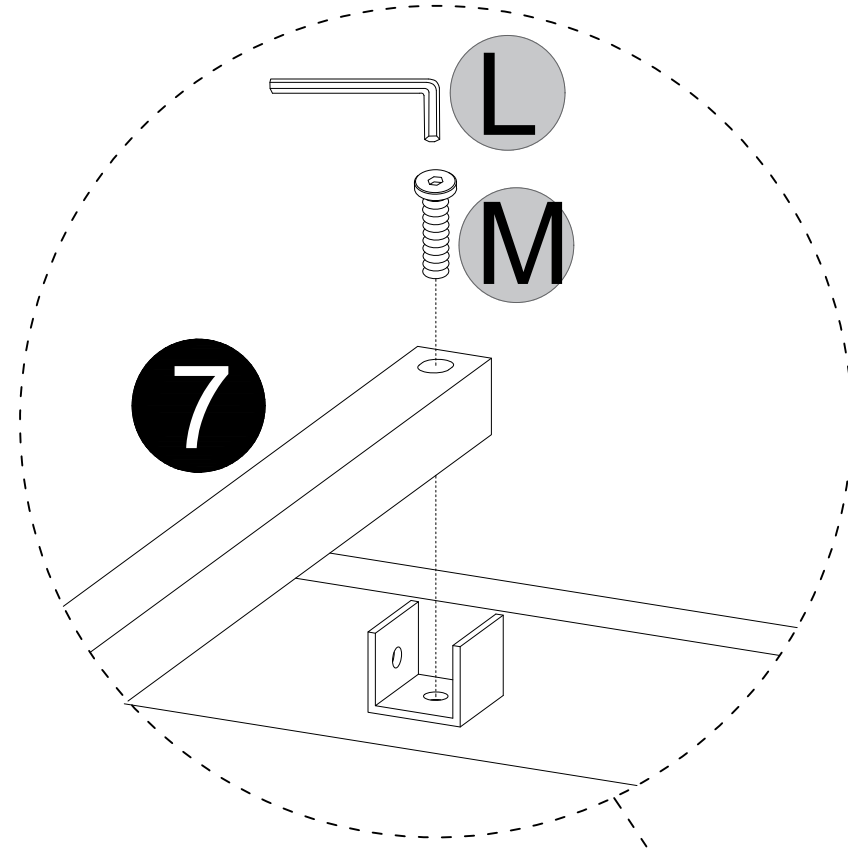

6

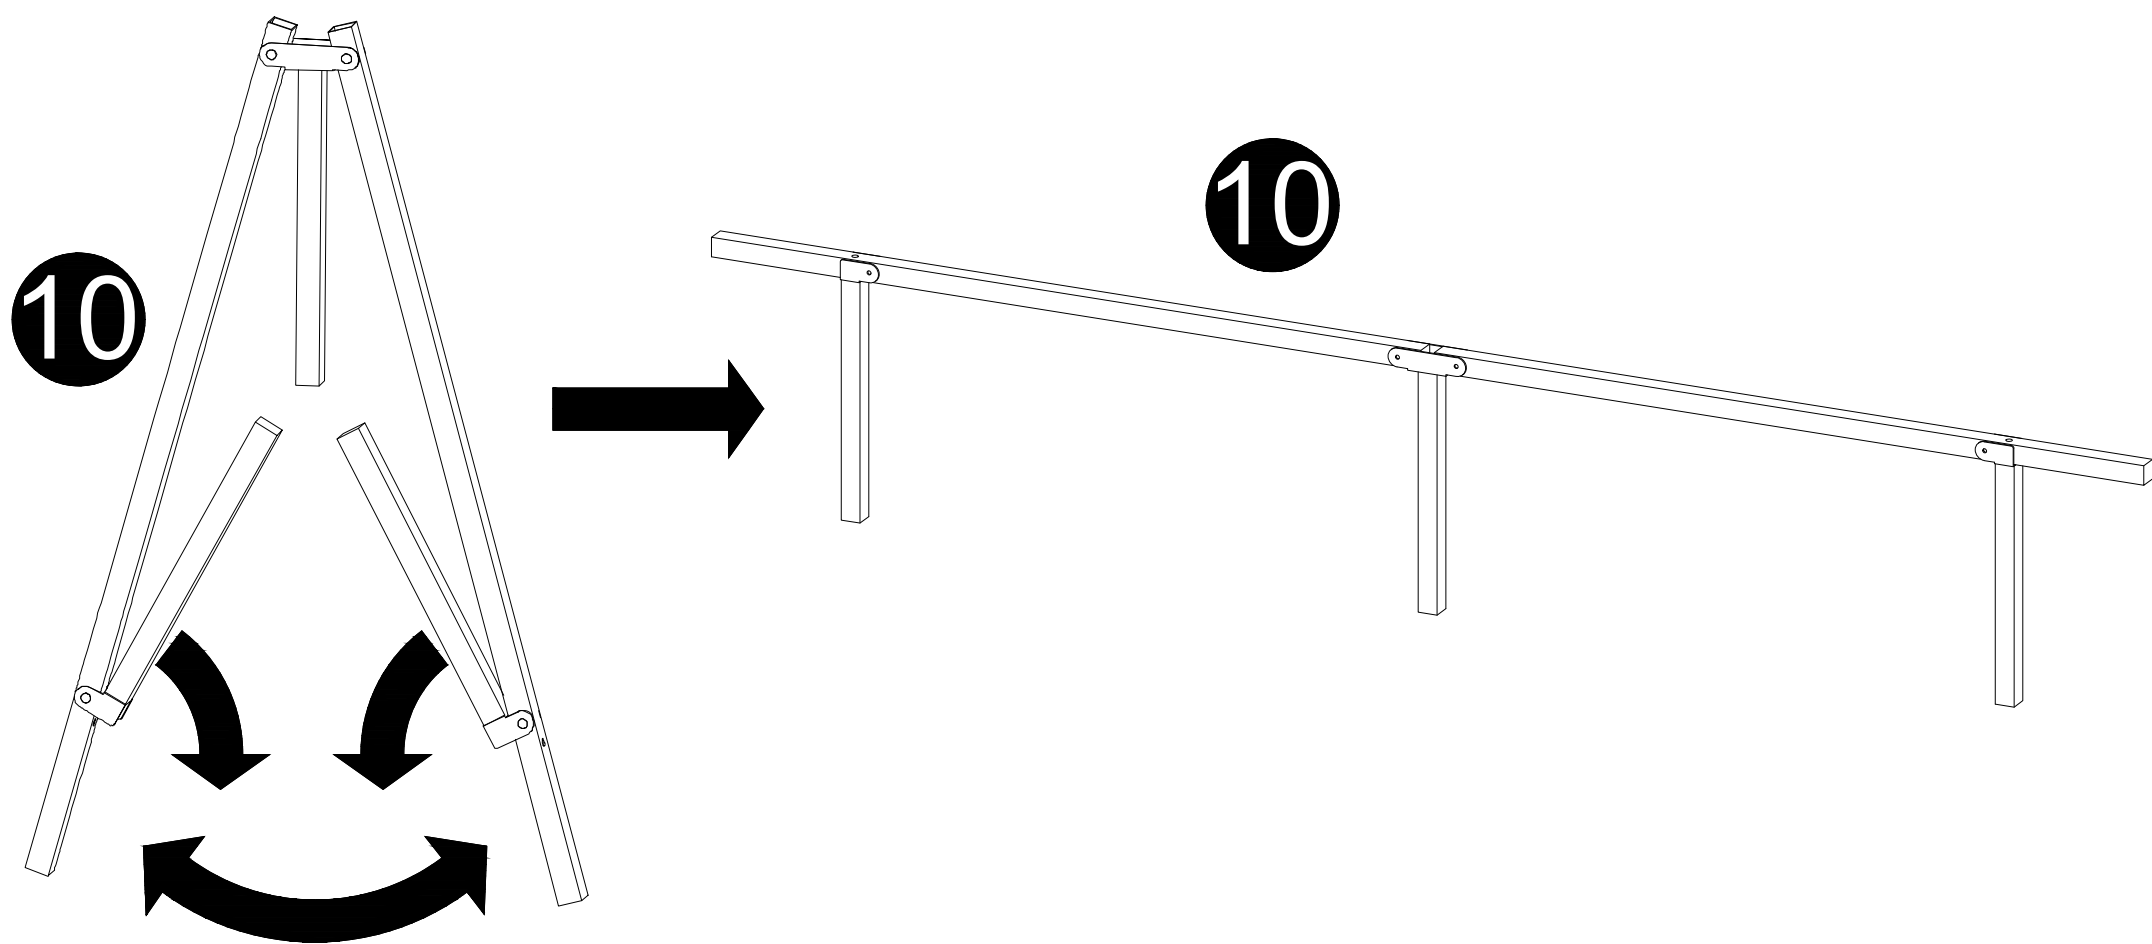


7

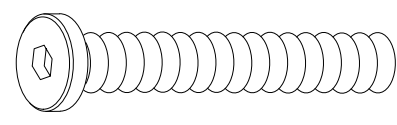


M6×55mm


B × 3pcs

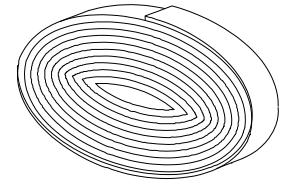

N × 1pc

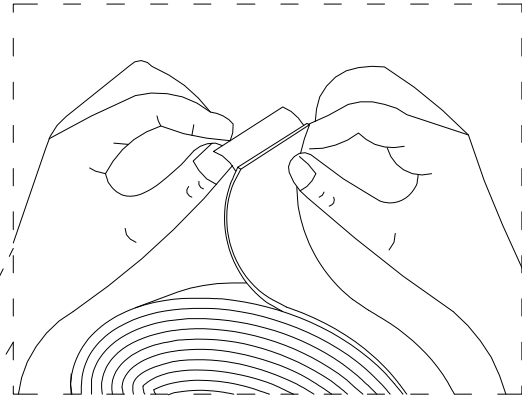


step2.To prevent friction noise, unroll part N and fit it on part 10 ,the lenght of part N can cut as you will.

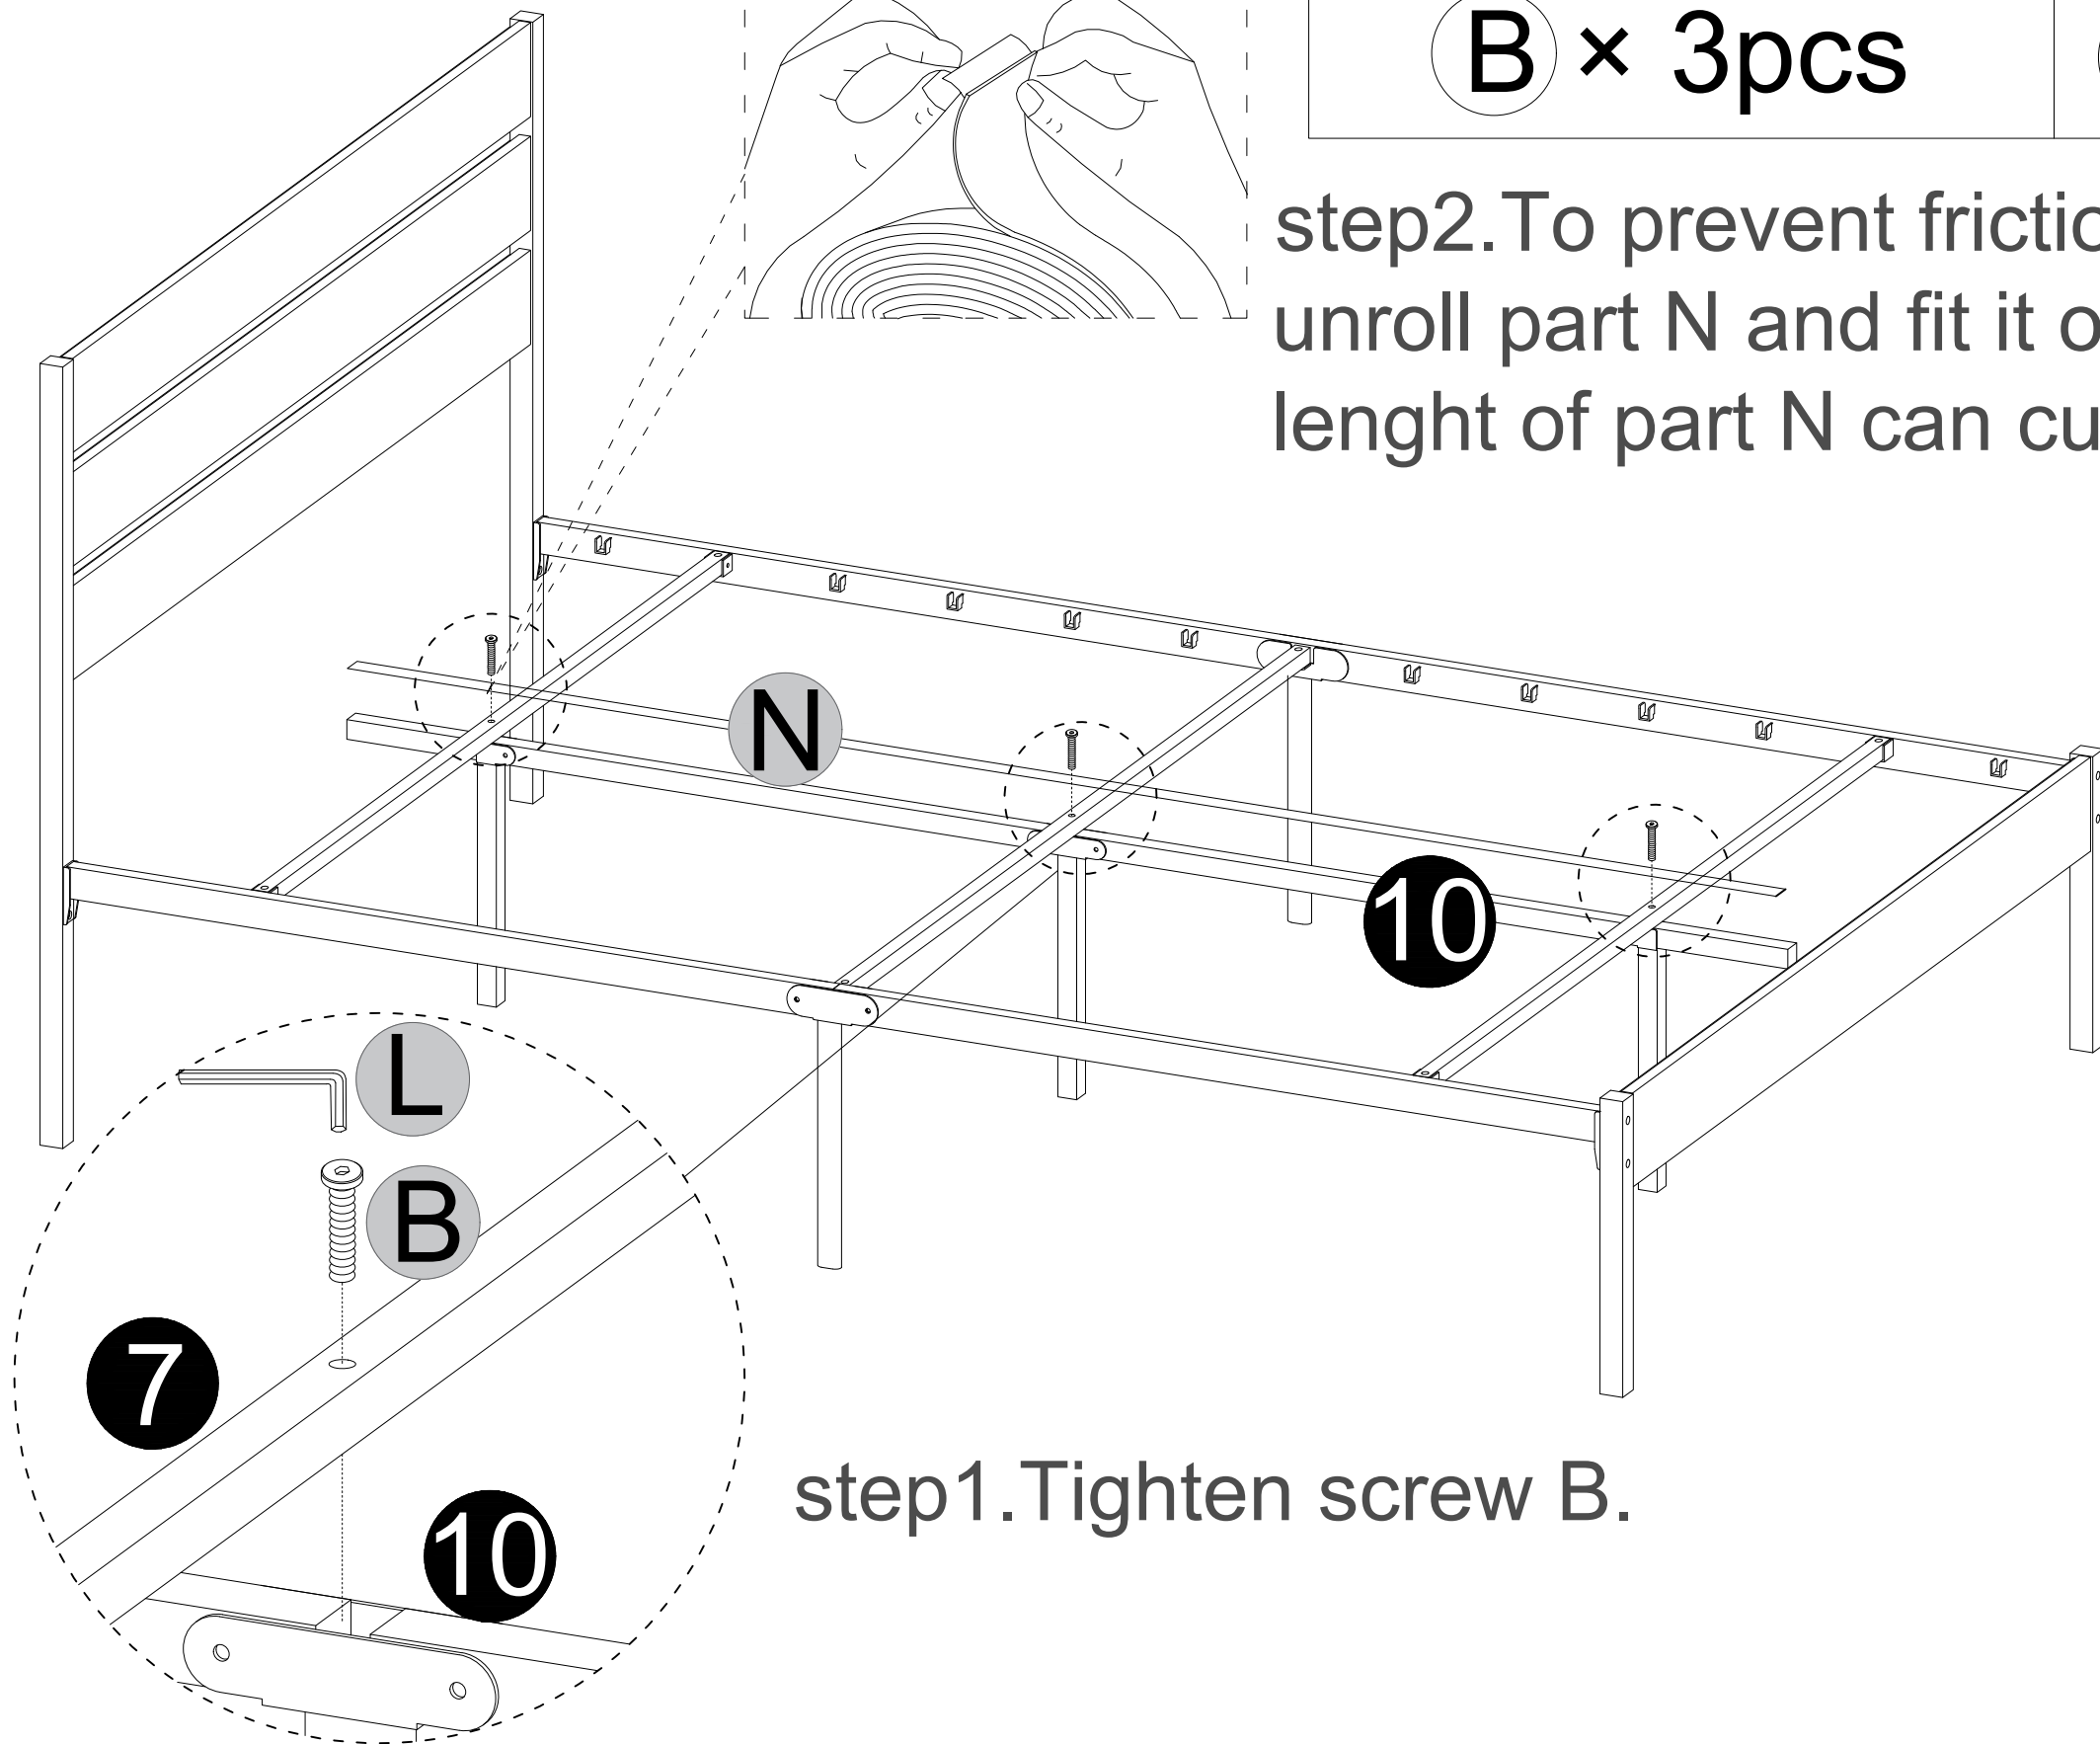


step1.Tighten screw B.

8

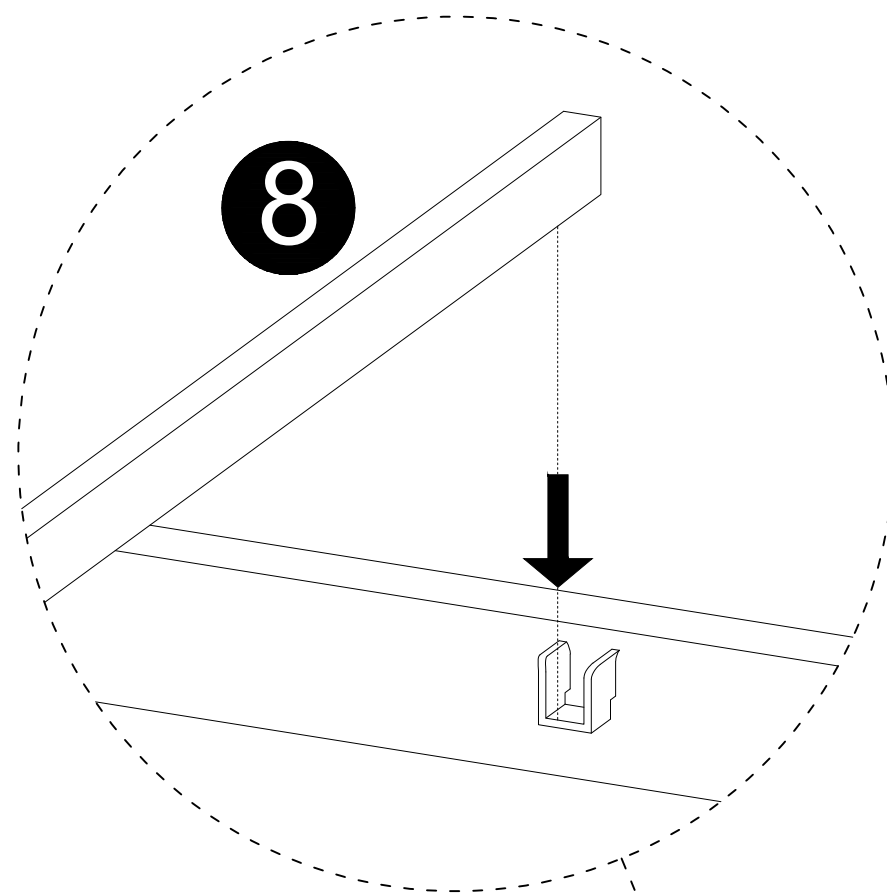

×10

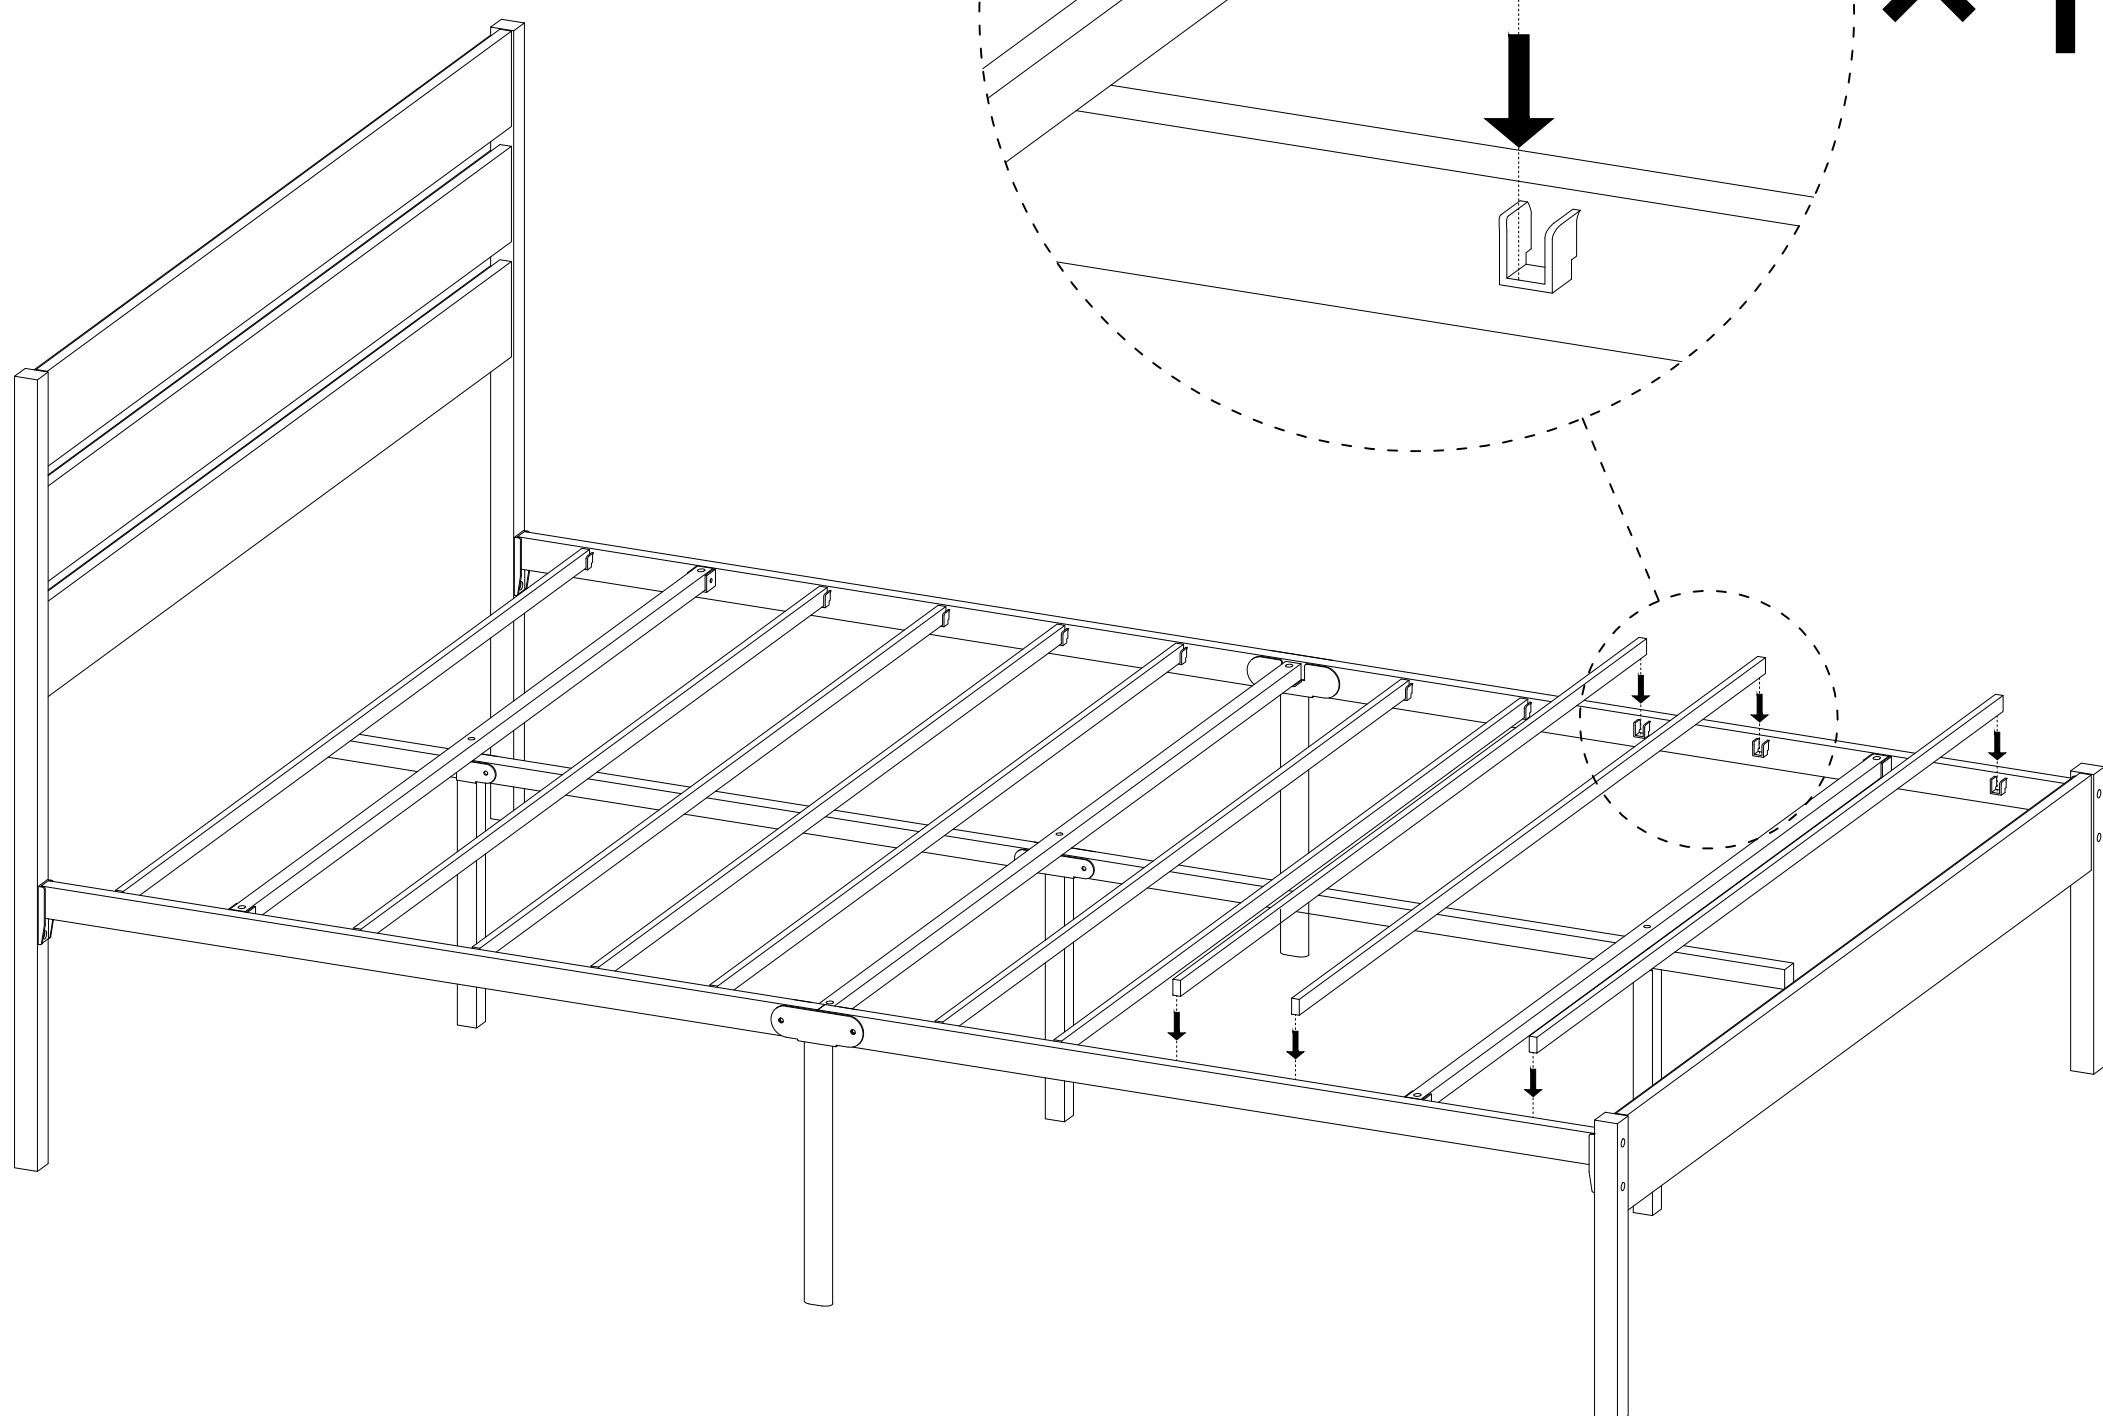

9

Check and tighten all screws

