

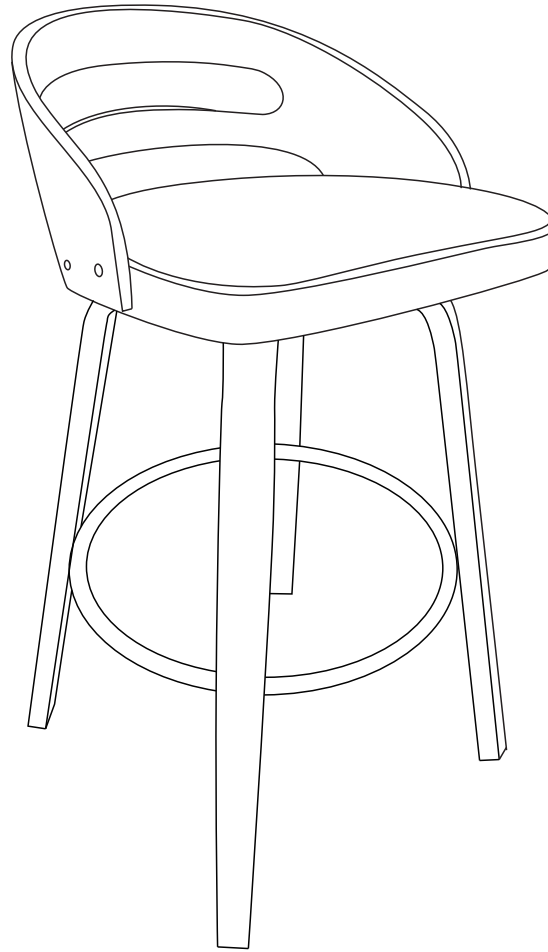
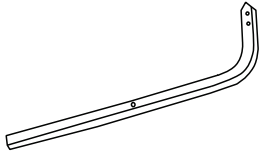


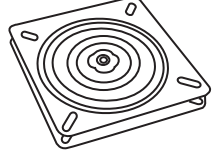







<p>A×1</p> 	<p>B×4</p> 	<p>C×1</p> 	<p>D×1</p> 	<p>E×1</p> 
<p>F×4+1EXT</p>  <p>M6×30mm</p>	<p>G×12+1EXT</p>  <p>M6×20mm</p>	<p>H×1</p>  <p>M6</p>	<p>I×2</p>  <p>SPARE FOOTNAIL</p>	

1

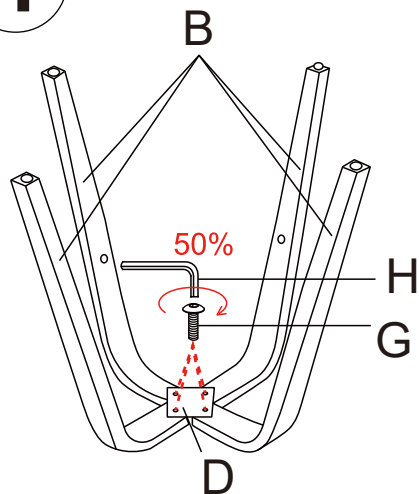


Note: DO NOT tighten the screws (G) in step 1

2

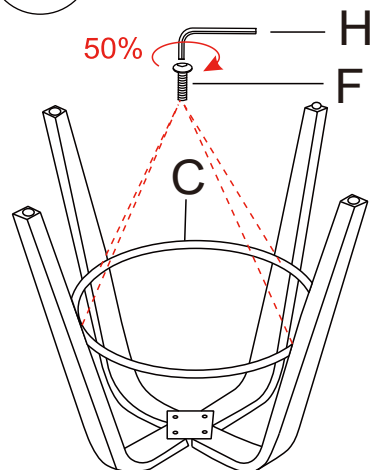


Note: DO NOT tighten the screws (F) in step 2

3

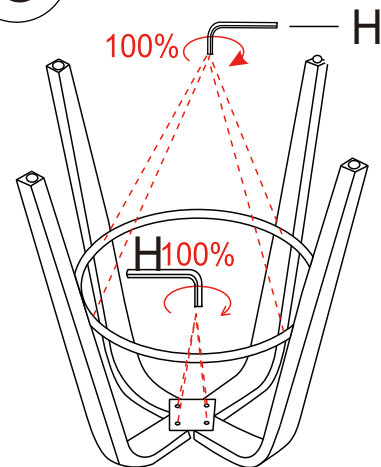


Note: Tighten the screws (G) and screws (F) in step 3

4

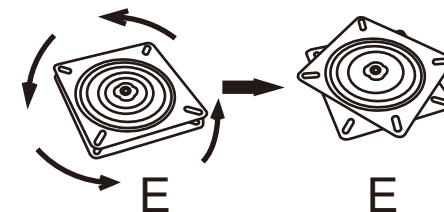


Note: Part E can be swivel



5

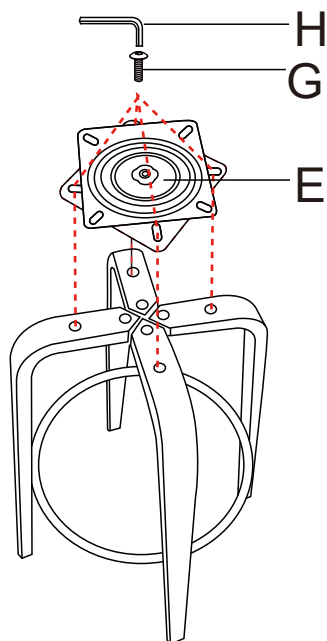

6

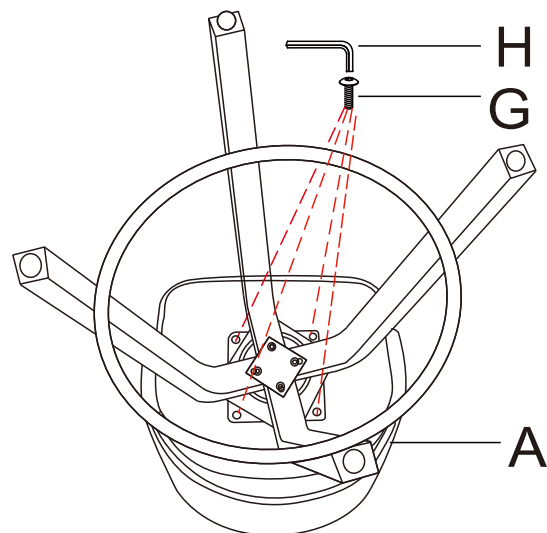

7

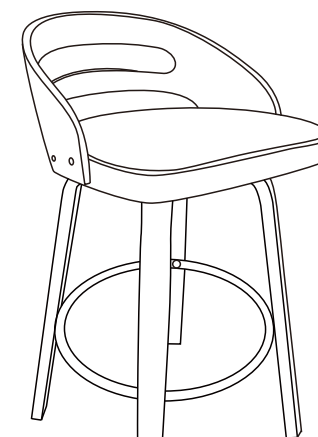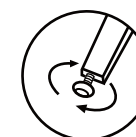

Note: if the installation of legs were not smooth and steady enough, please try to adjust the foot nails to make the chair balance.