






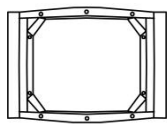
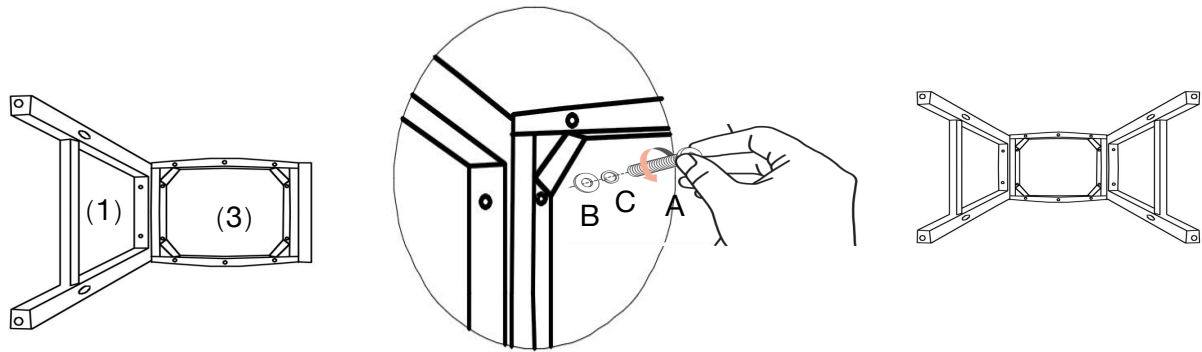


Assembly Instructions				
3900088/3900089				
Hardware				
A x 4	B x 4	C x 4	D x 8	E x 1
 5/16"X50MM	 M*8X12MM	 M*8X12MM	 M*5X50MM	 M*5
Parts				
(1) Leg x2	(2) Crossbar x2	(3) Top x1		
				


Step 1

Fit the legs (1) to the opening on the seat (3) bottom and line up the holes, fit a B spring washer to a bolt A followed by a flat washer C. Insert the bolt into a hole and tighten it with your hand. Repeat this for the other hole and then repeat the process for the other leg. Leave the legs loosely attached.




Step 2


Attach the crossbar (2) to both legs and make sure the screw holes on the crossbar are facing you (In the direction toward the ground when standing upright).

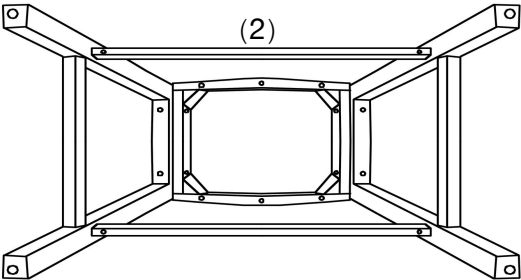

Step 3 Tighten all the Bolts with the Allen Key E until it is tight

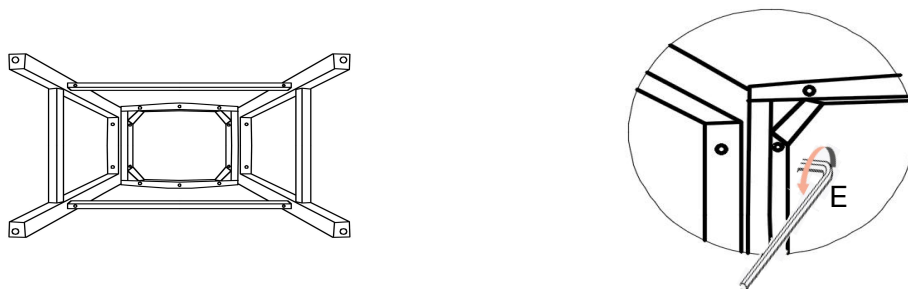

Step 4 Insert the screw (D) into a hole on the crossbar and tighten it with a drill or a screw driver. Repeat this for all holes on the other crossbar.

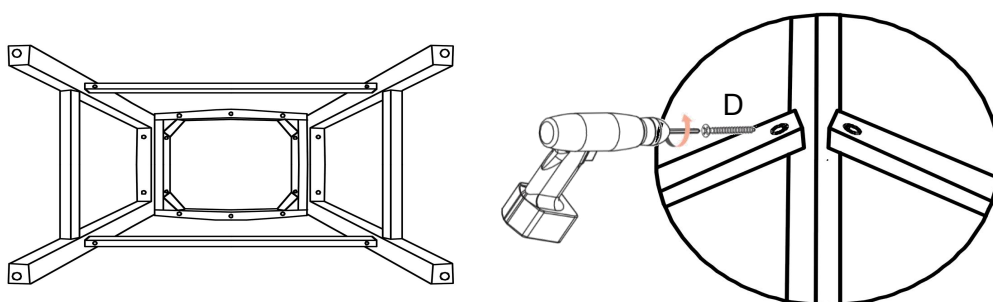

Step 5 Turn the stool over, check there are no gaps between legs and seat. If there is, please insert the screws into the holes under the legs. And finish the products.

