

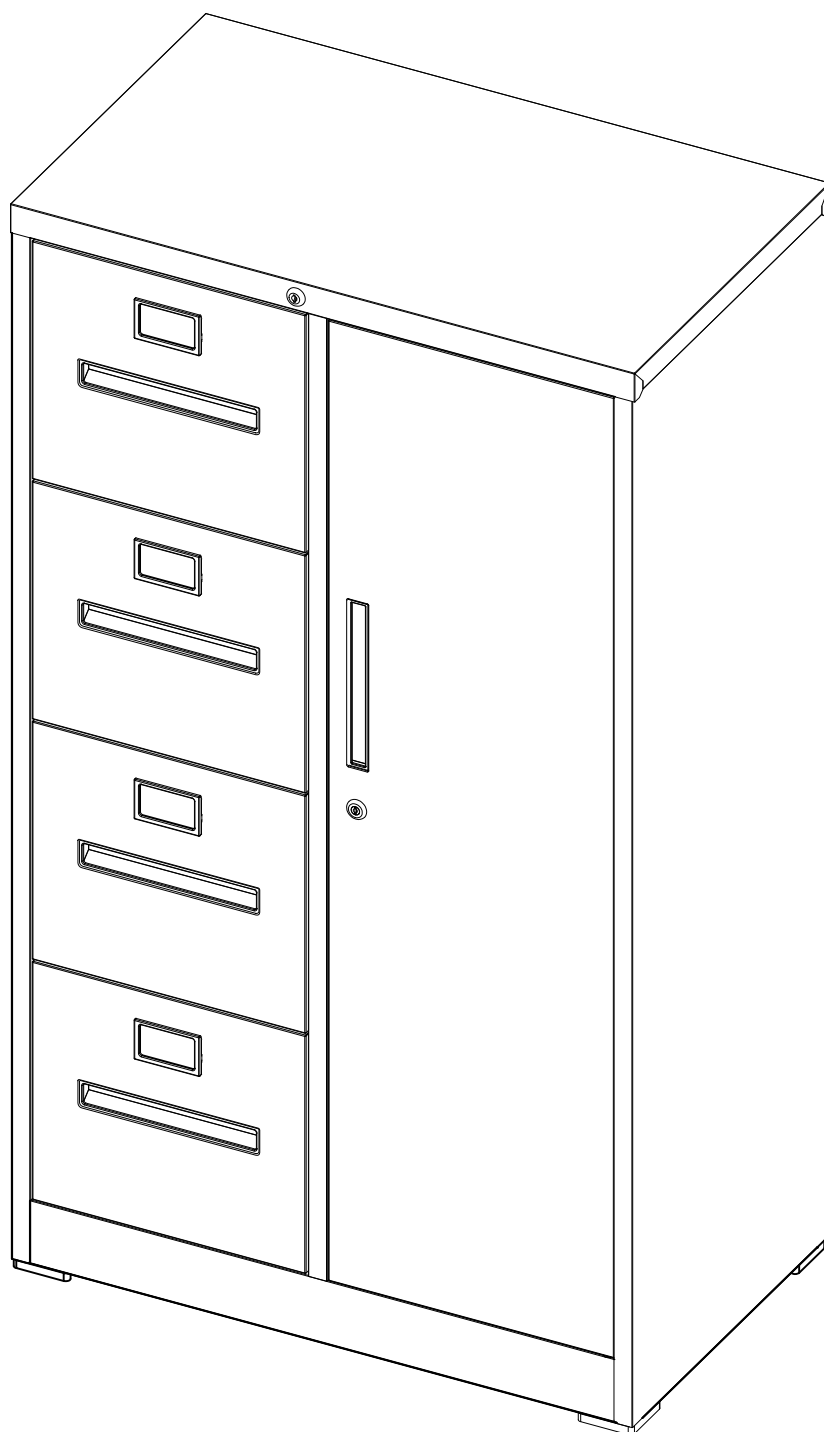
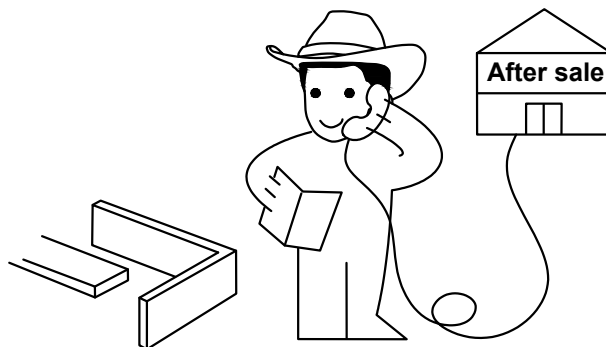
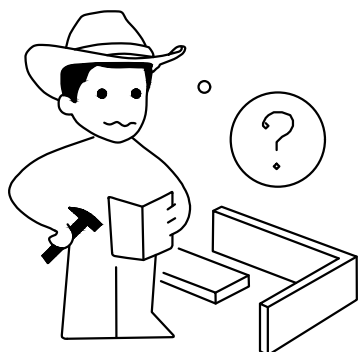
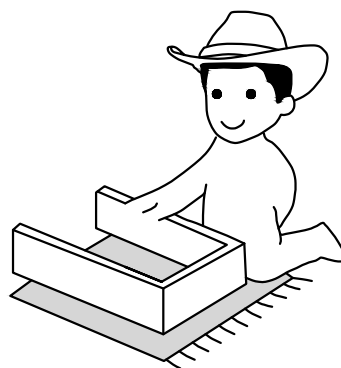
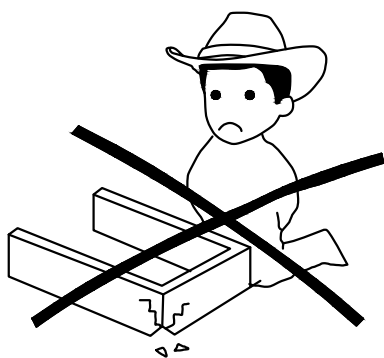
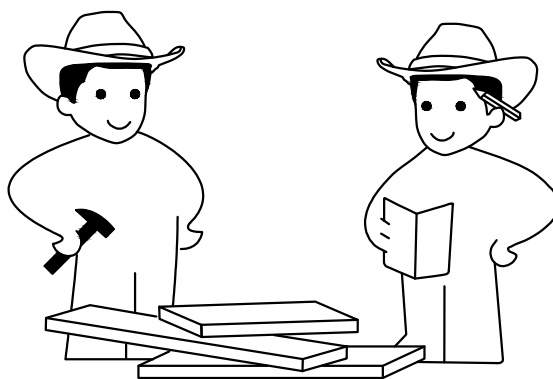
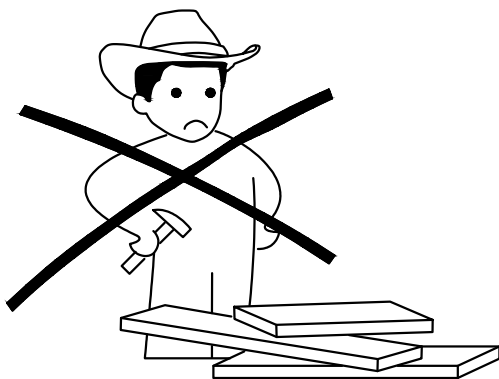
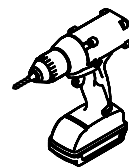


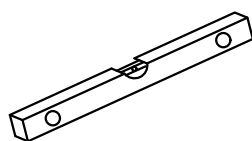
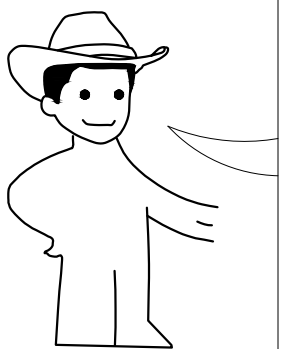

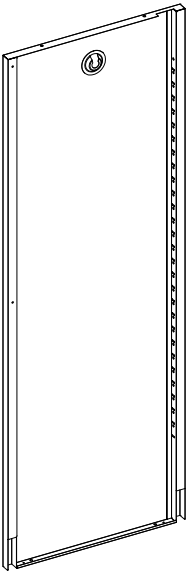

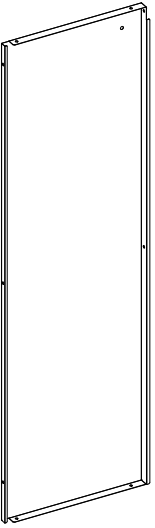
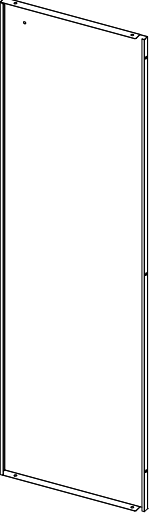
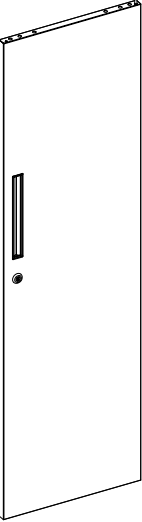
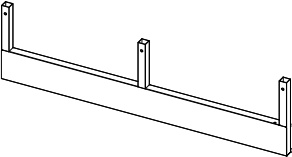
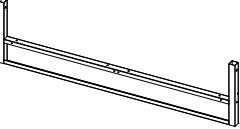
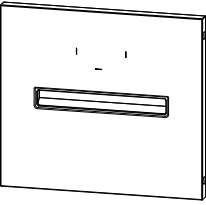
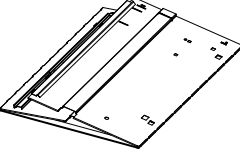
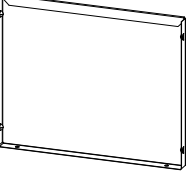
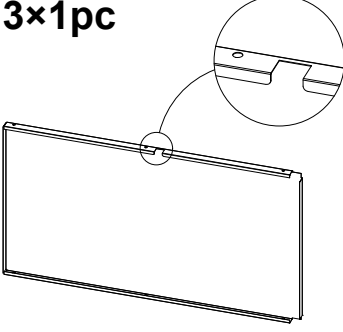
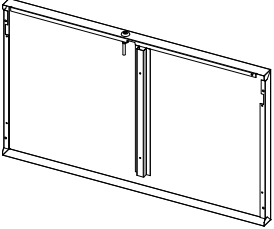
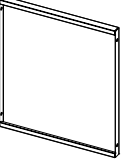









Installation video




1×1pc 	2×1pc 	3×1pc 	4×1pc 
5×1pc 	6×1pc 	7×1pc 	8×1pc 
9×4pcs 	10×4pcs 		
11×4pcs 	12×4pcs 	13×1pc 	14×1pc 
15×3pcs 	16×1pc 		

A×26pcs	B×12pcs	C×24pcs	E×4pcs	F×4pcs	G×2pcs	R×1pc	I×12pcs
					 M8  M5×30mm  M5		
M4× 8mm 0.3inch	M5× 12mm 0.6inch	M4× 8mm 0.3inch					


			
---	---	---	--

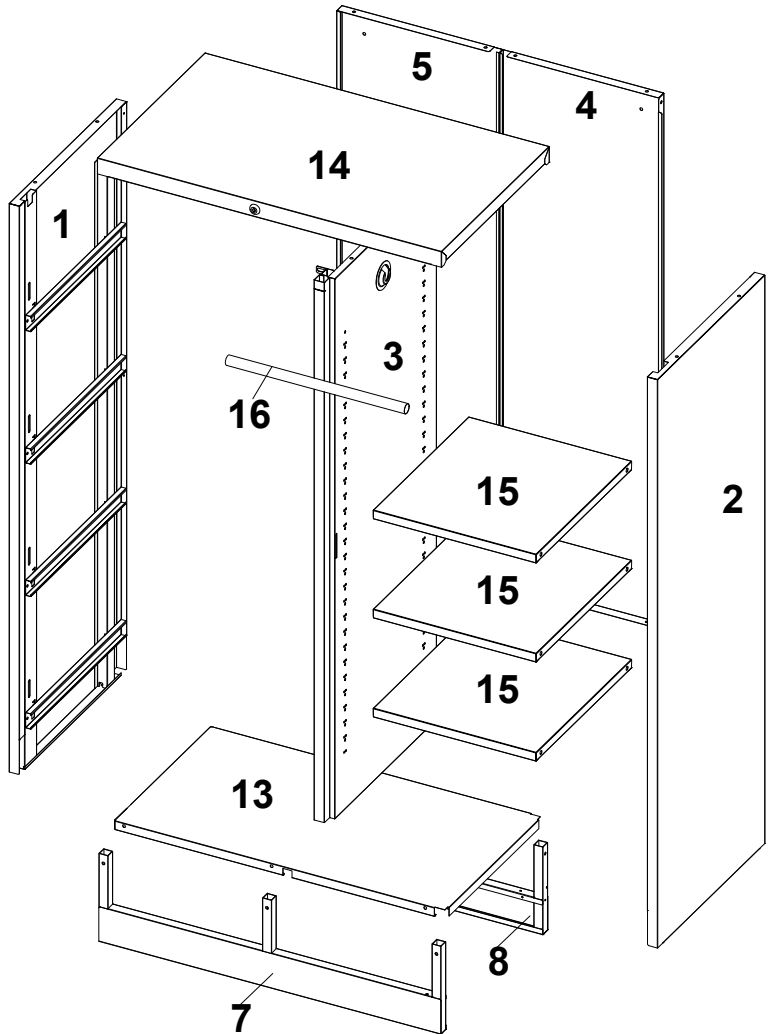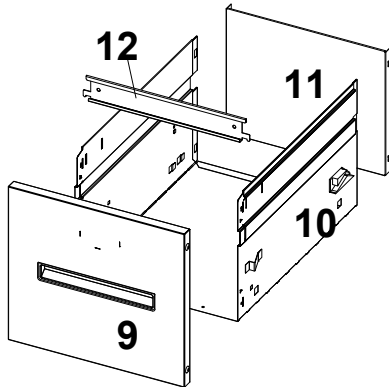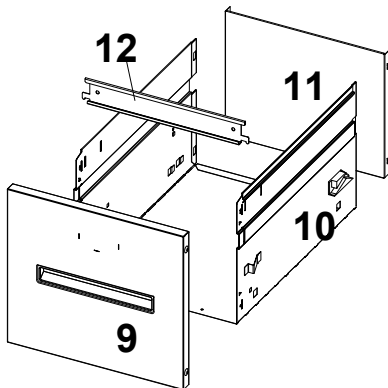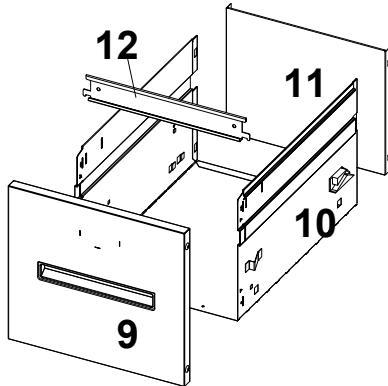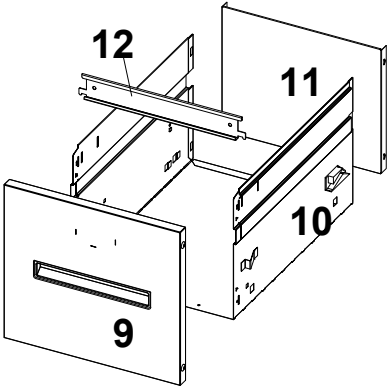


1

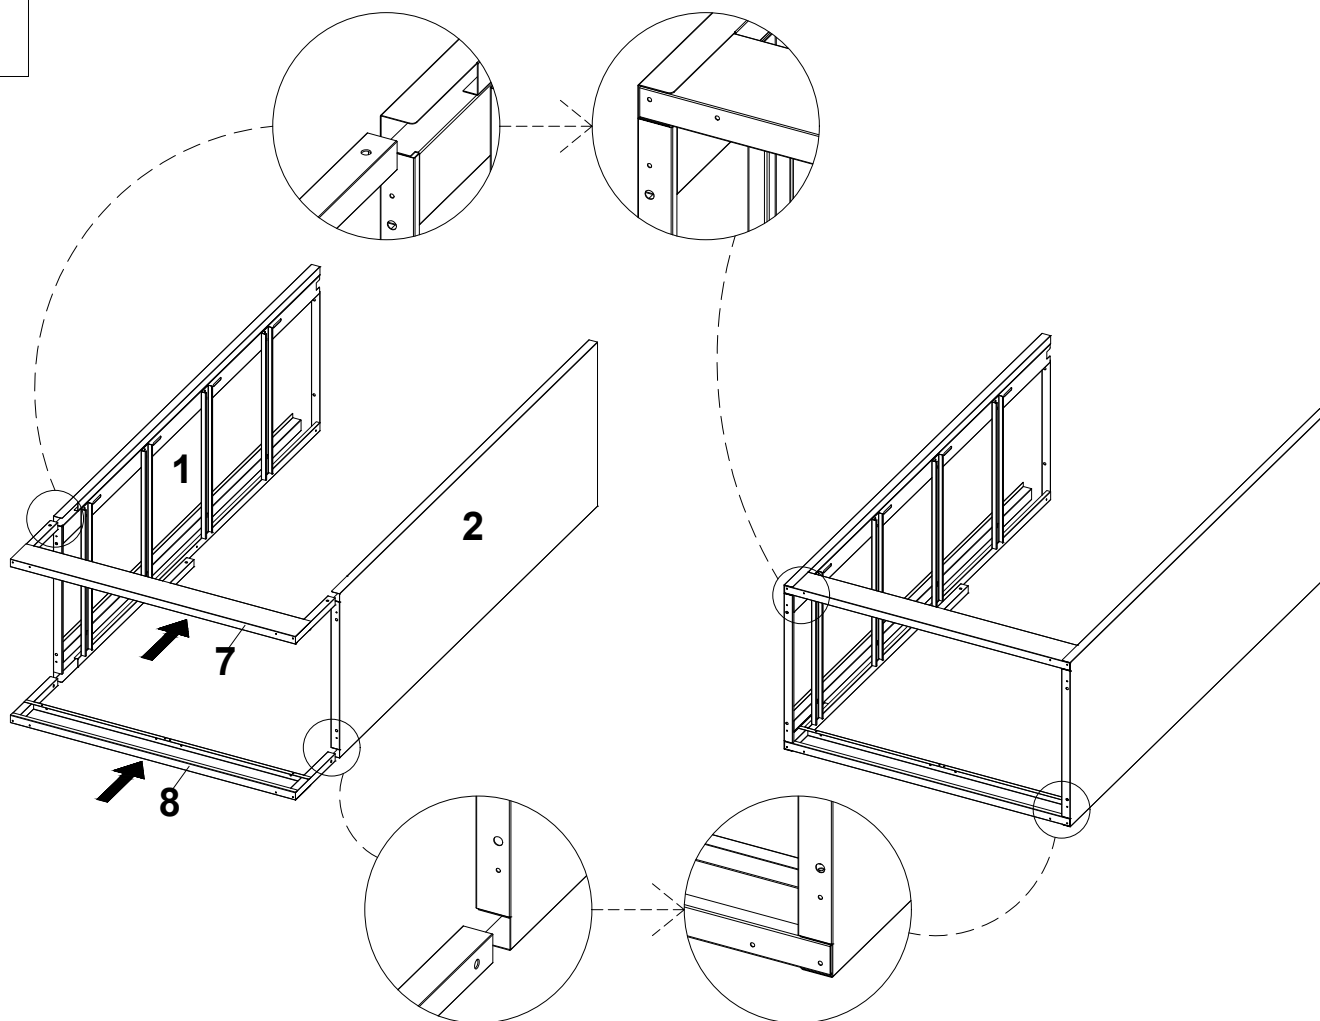

2

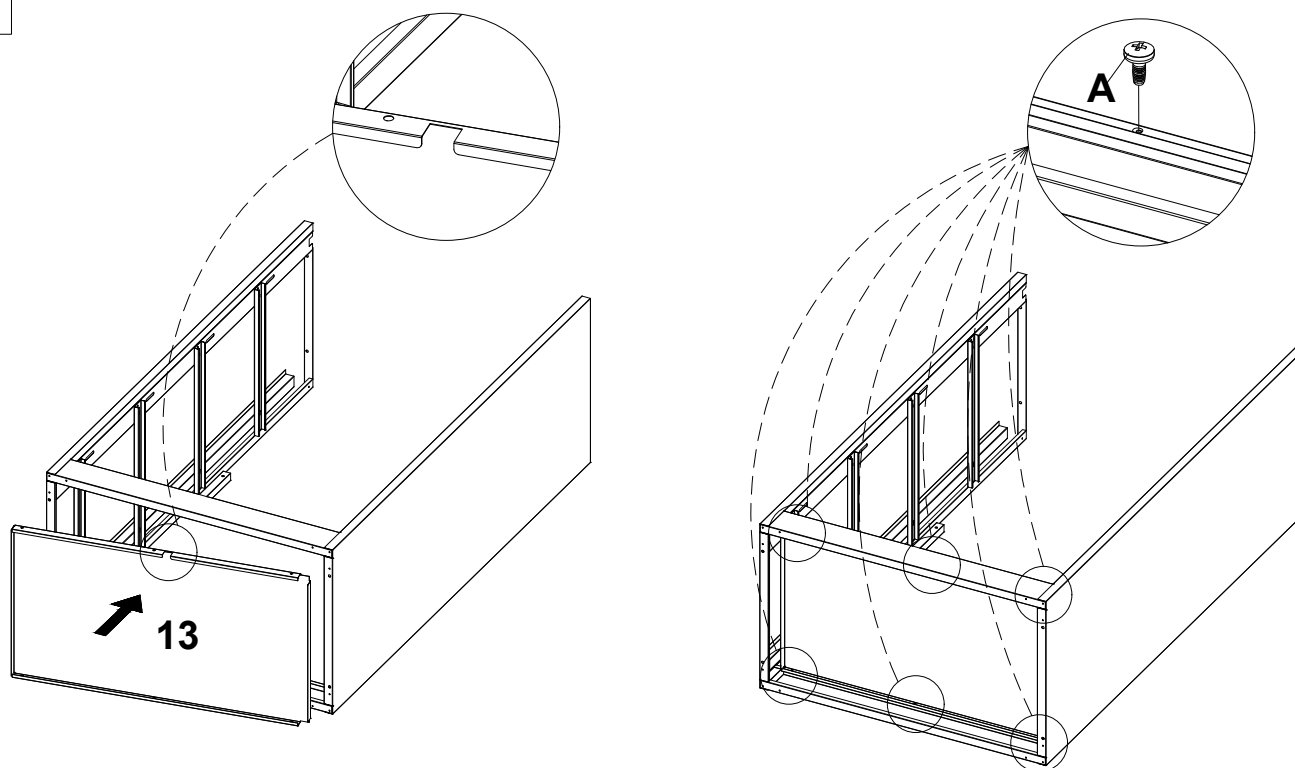

3

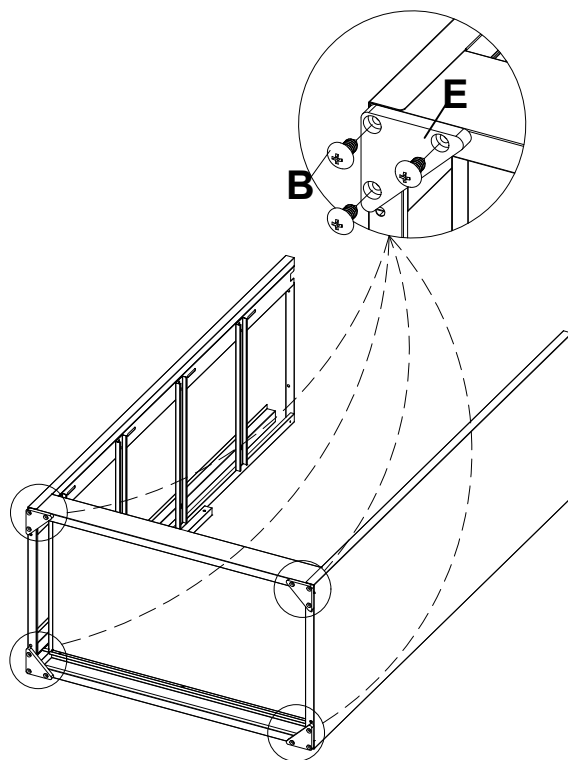


B×12




E×4


4

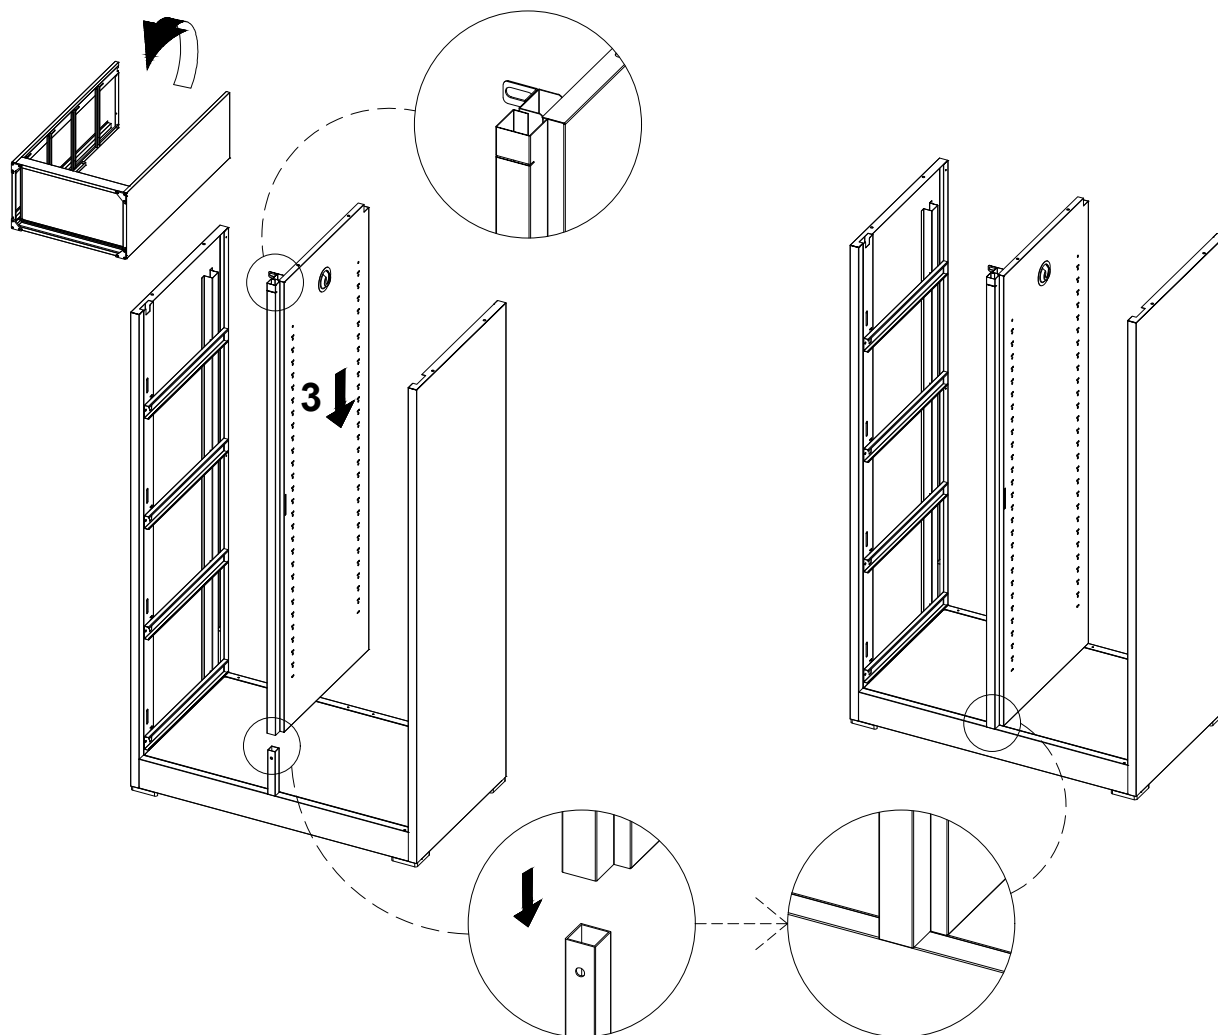


5

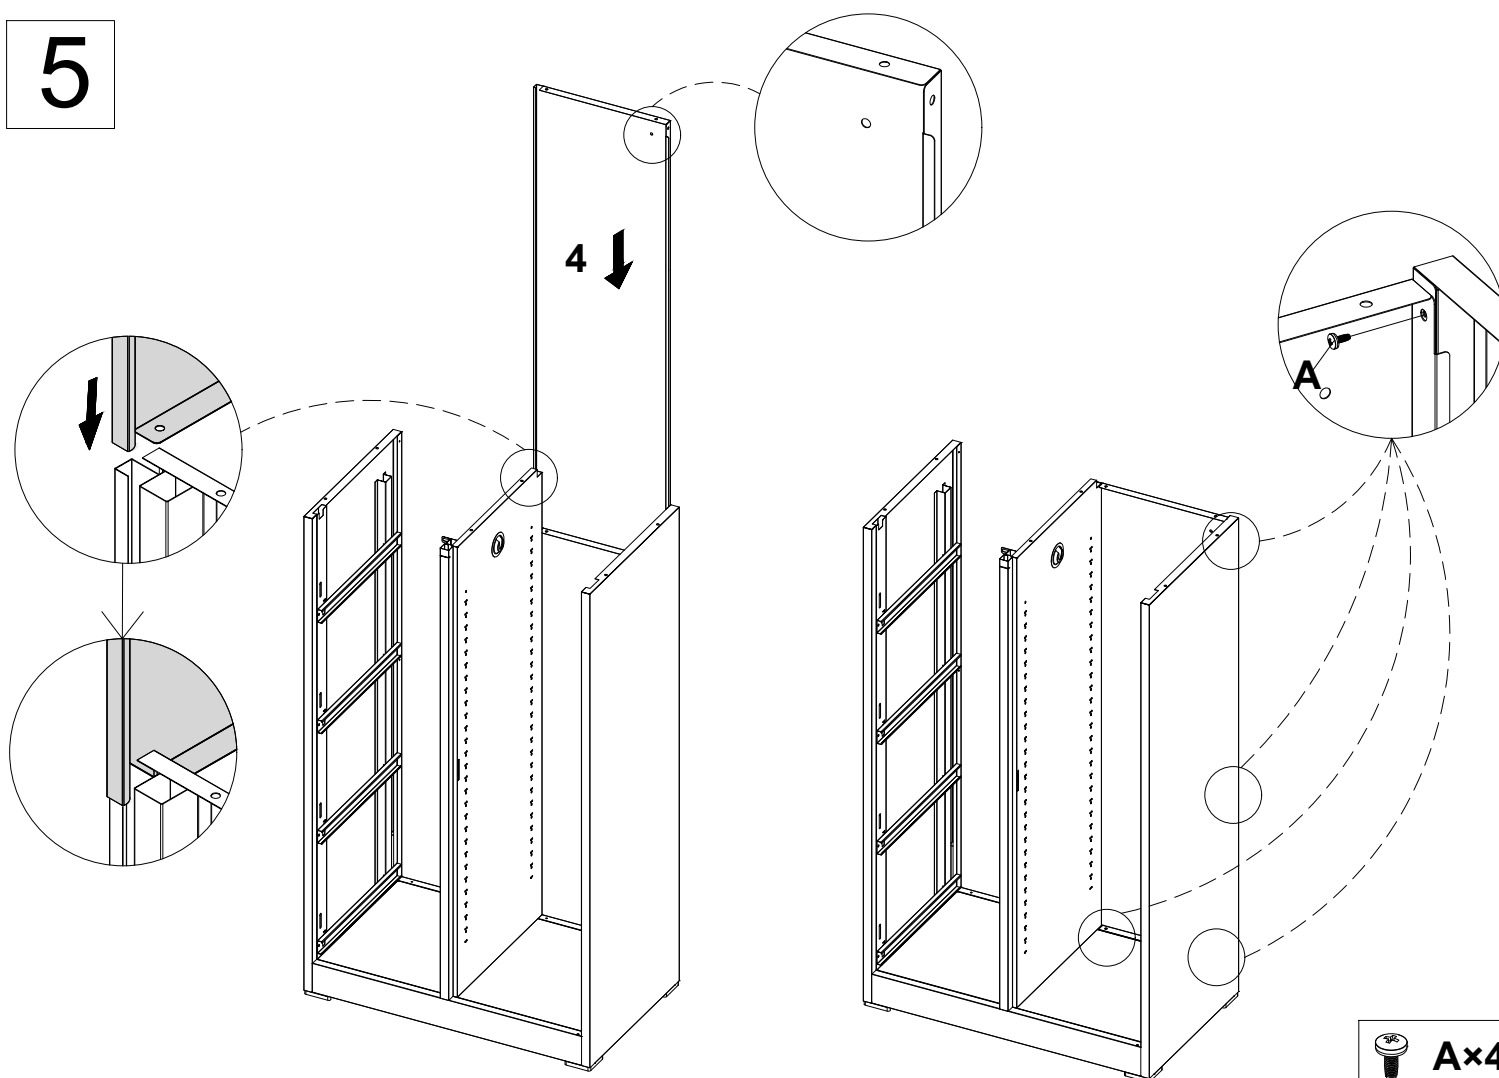


6

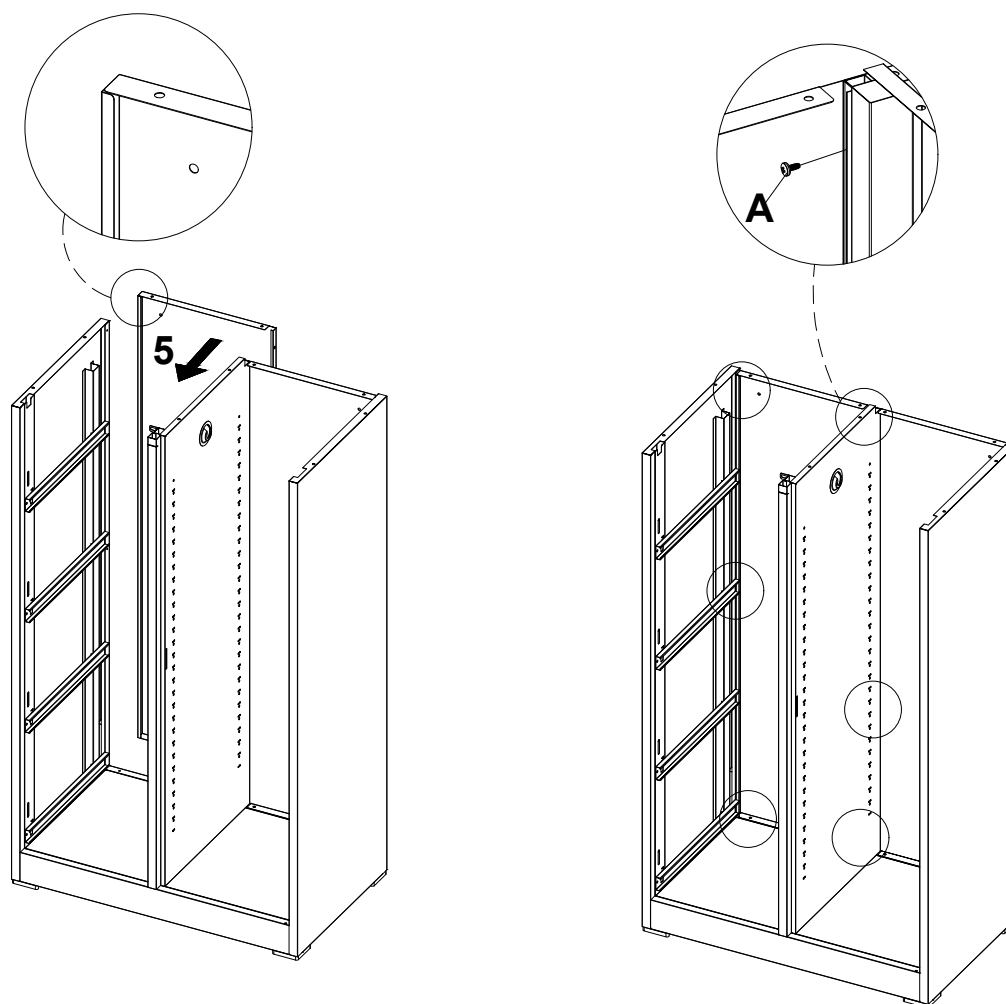

7

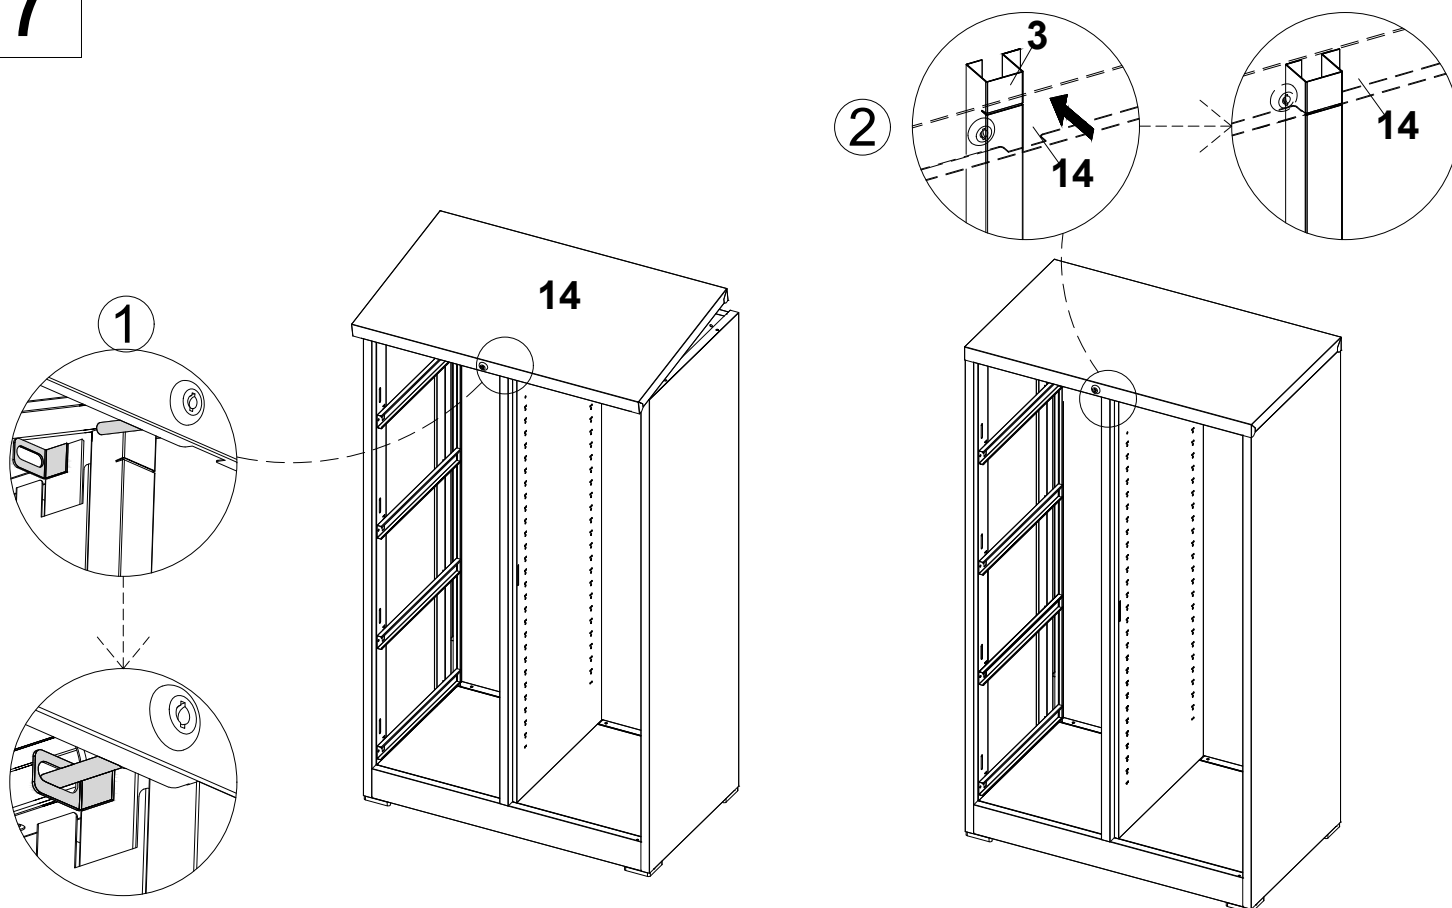

8

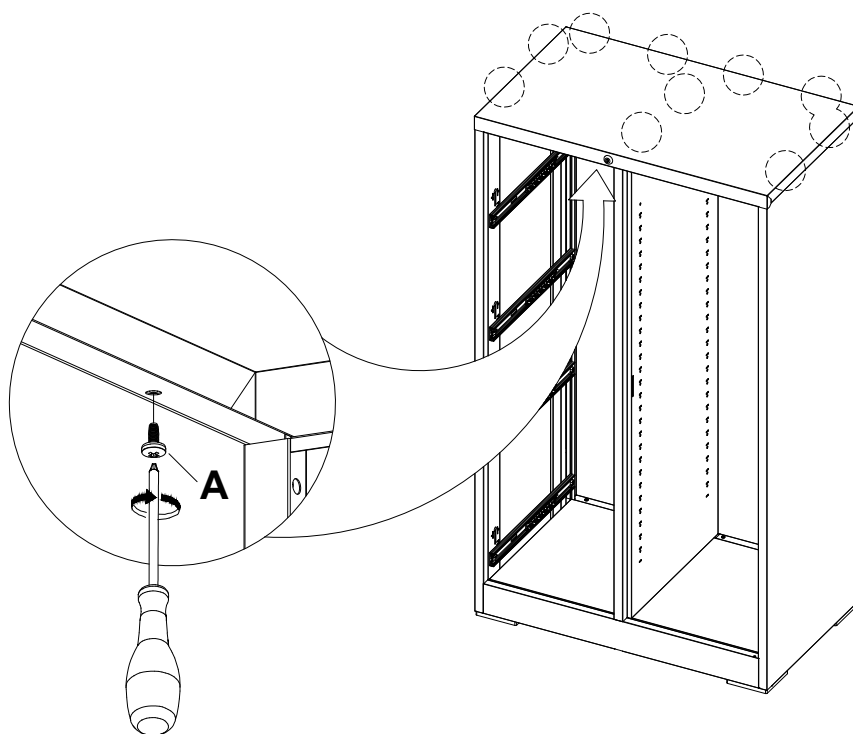






 A×10

9





This step is to connect the cabinet to the wall, if you do not need to ignore it

back

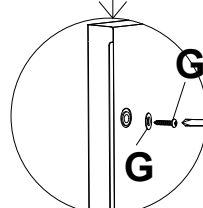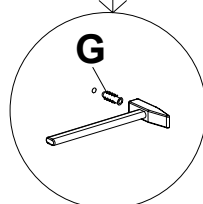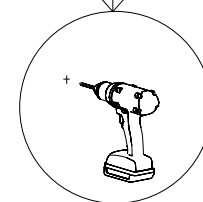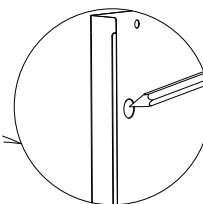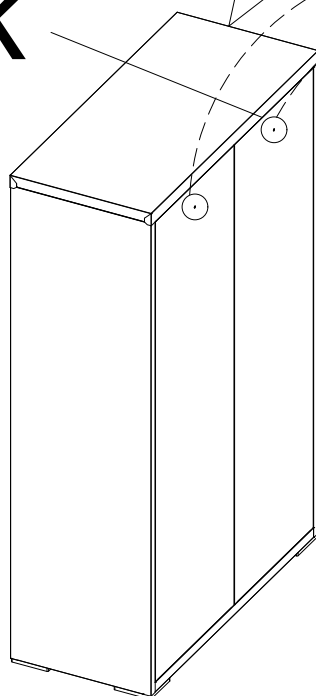





10

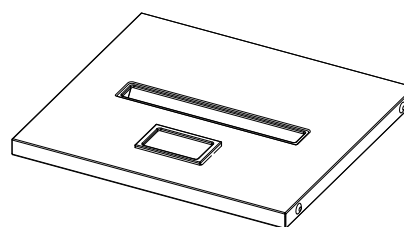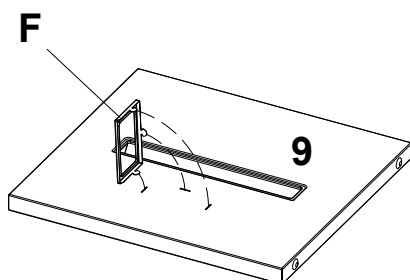


Place the part F according to the drawing







11

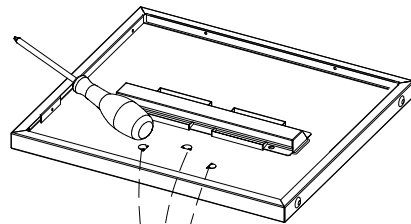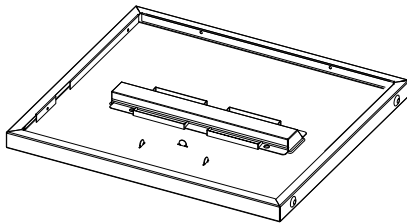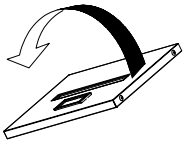

Flat the iron sheet with a screwdriver

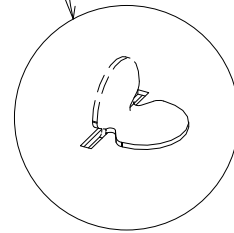


12

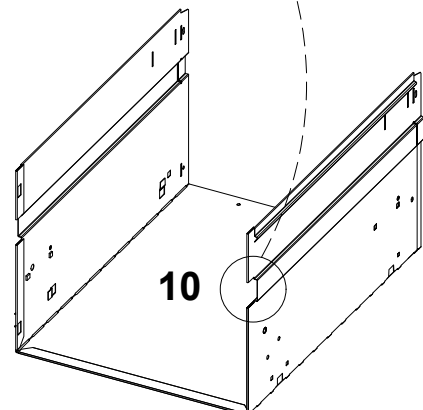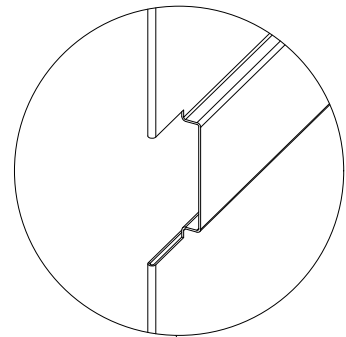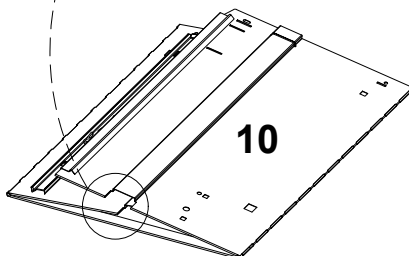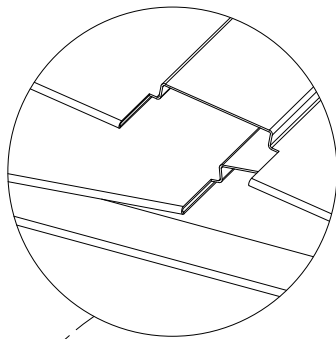


Bend the side walls of the drawer to vertical

13

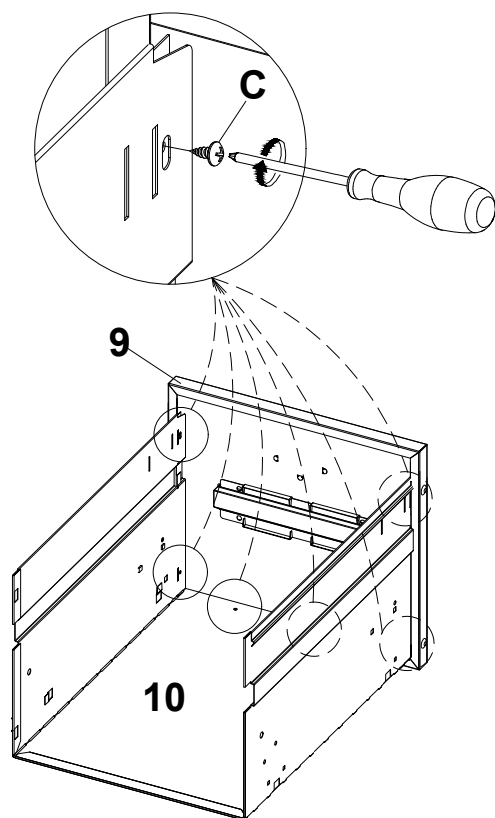

put six screws to hold part 10 into place.




Tap lightly Rear plug

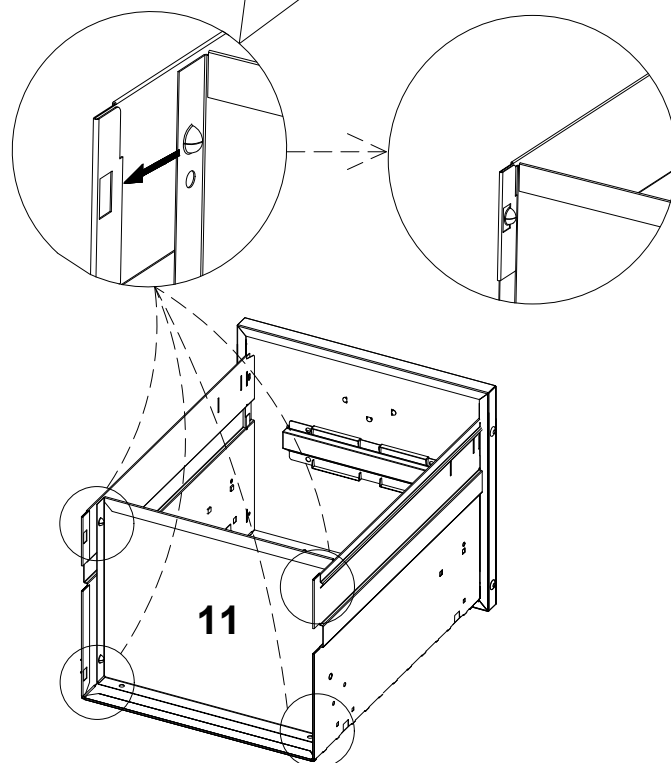



 **C×24**

14


the file hanging bar can be put inside

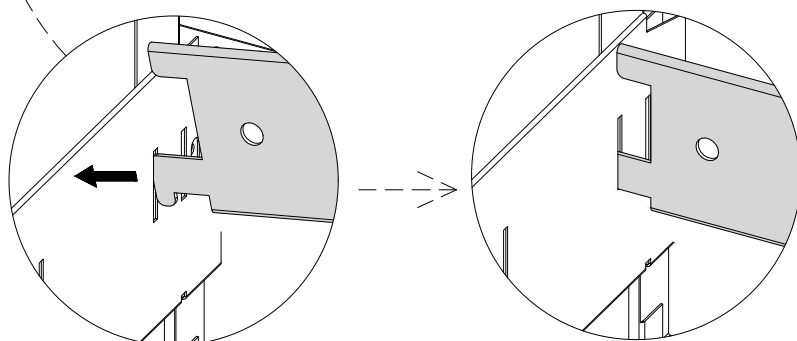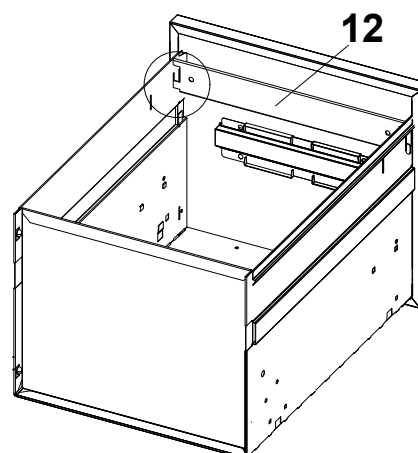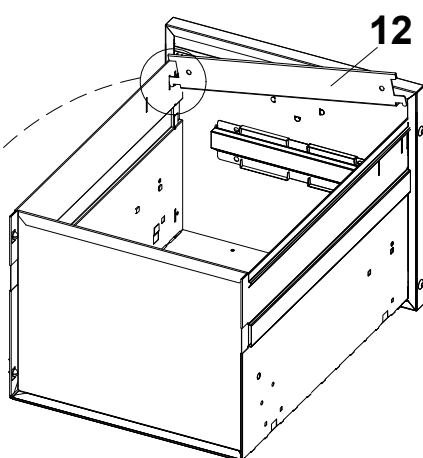

15

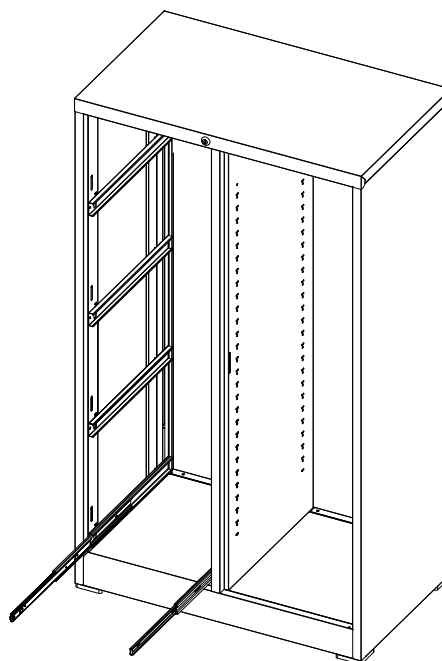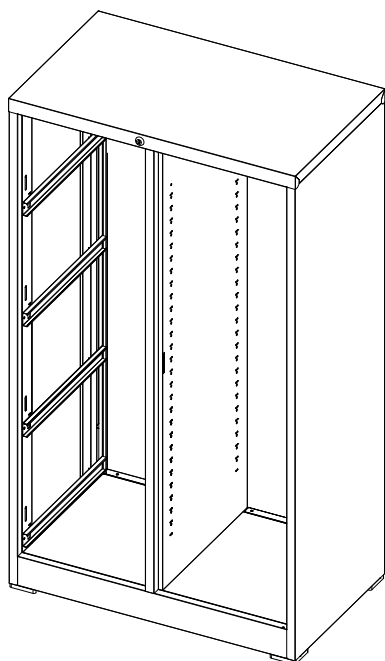


16

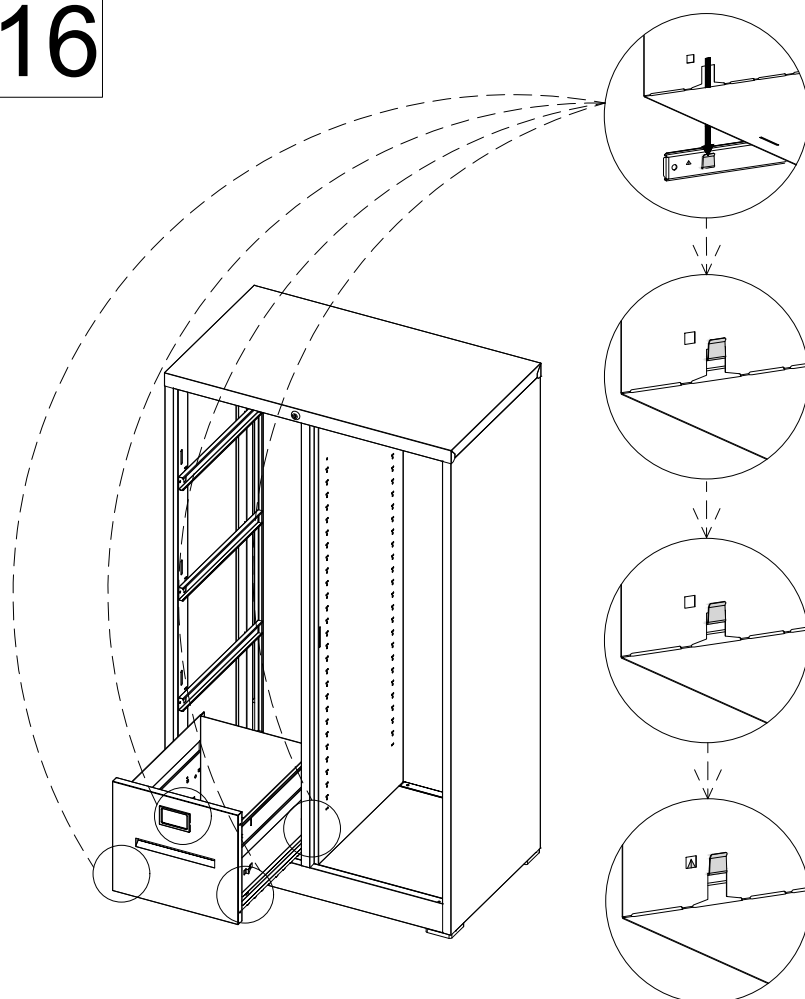

1. pull out the small rails in the slide rails on the side walls completely. with two people lifting each side of the drawer, align the four divots on the bottom with the two rail clips on the rails on each side and insert them into the rail clips.


2. After placing the drawer on the rail, press the drawer base down hard enough, paying attention to check the position of the four clips inside until you hear a click four times, which means the drawer is in place

17

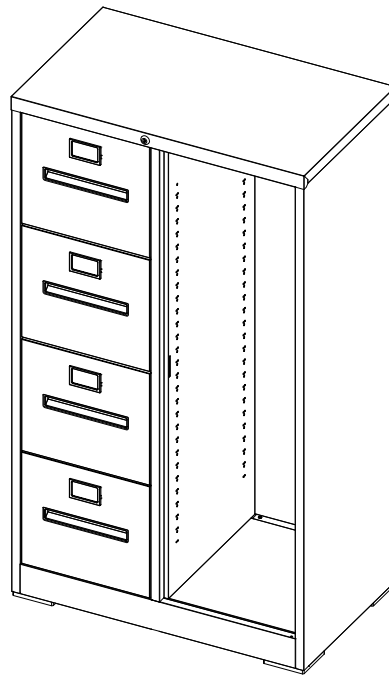



18

Install the door on one side by first installing the door shaft screw R, then by pressing the spring screw on the top of the door.

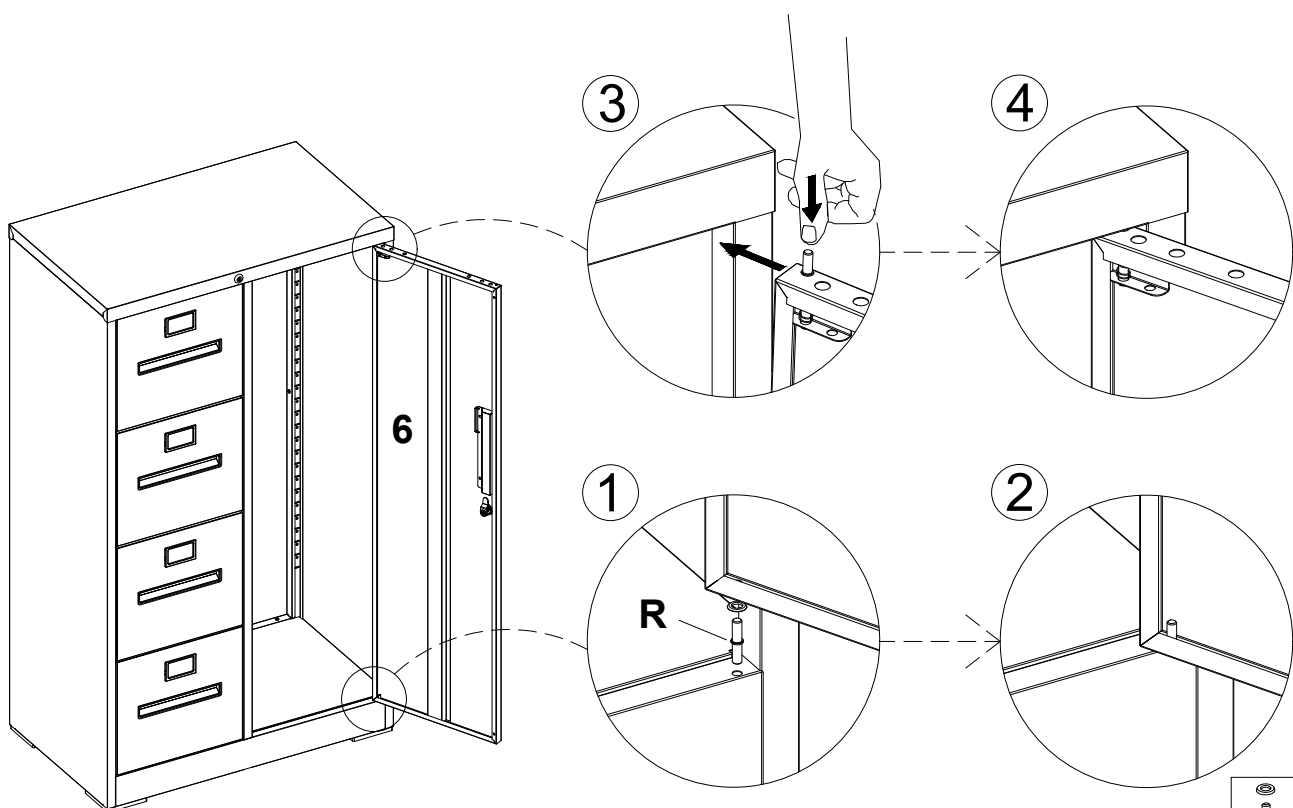

 R×1

19

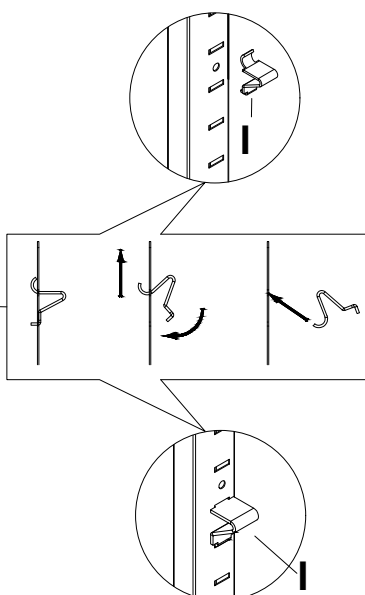
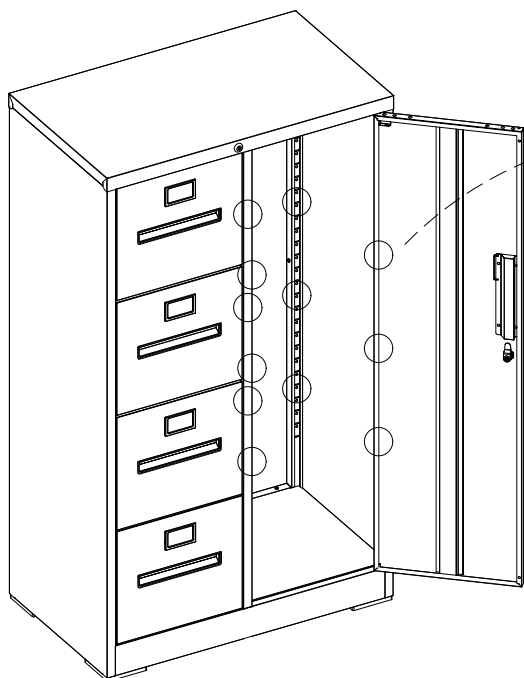


the file hanging bar can be put inside

 **1x12**


20

Install part 15 in place as shown in the diagram.

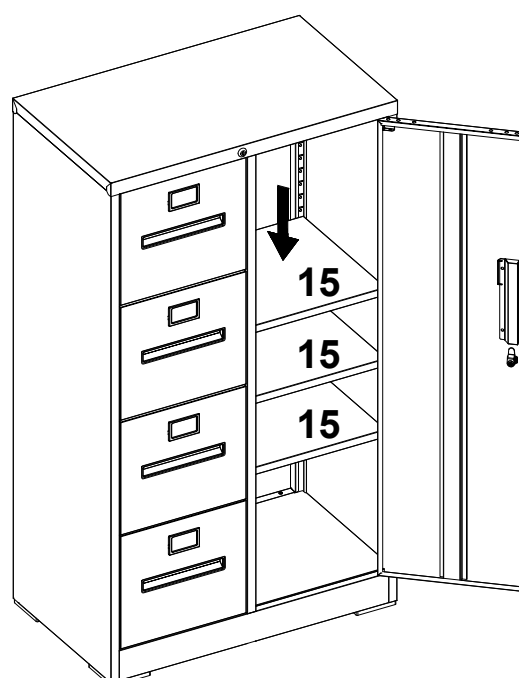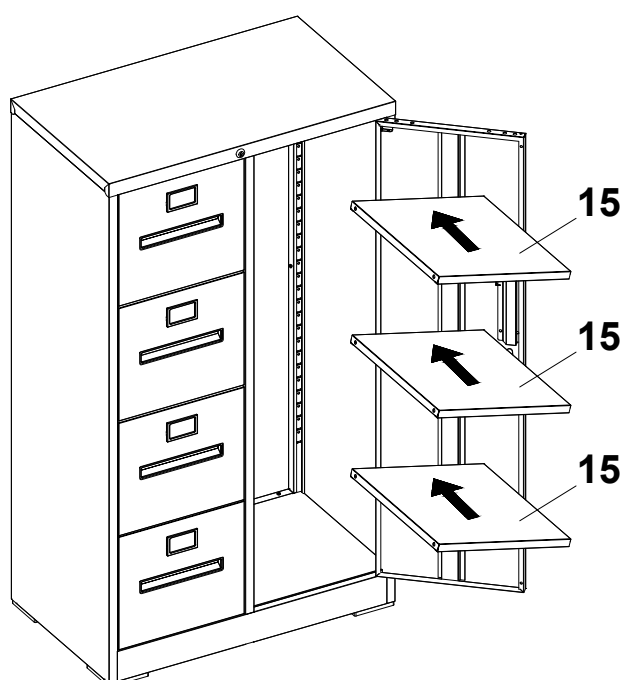

21

Install part 16 in place as shown in the diagram.

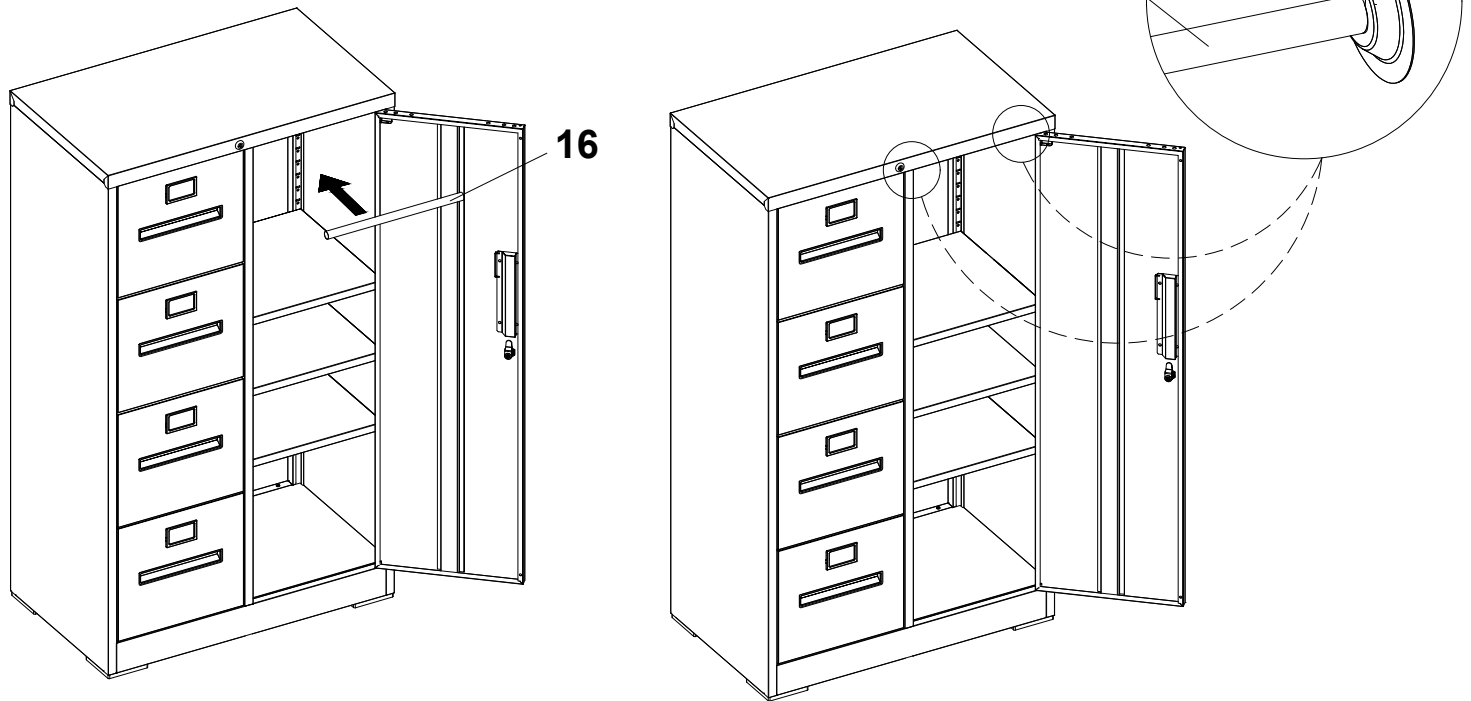

22

