

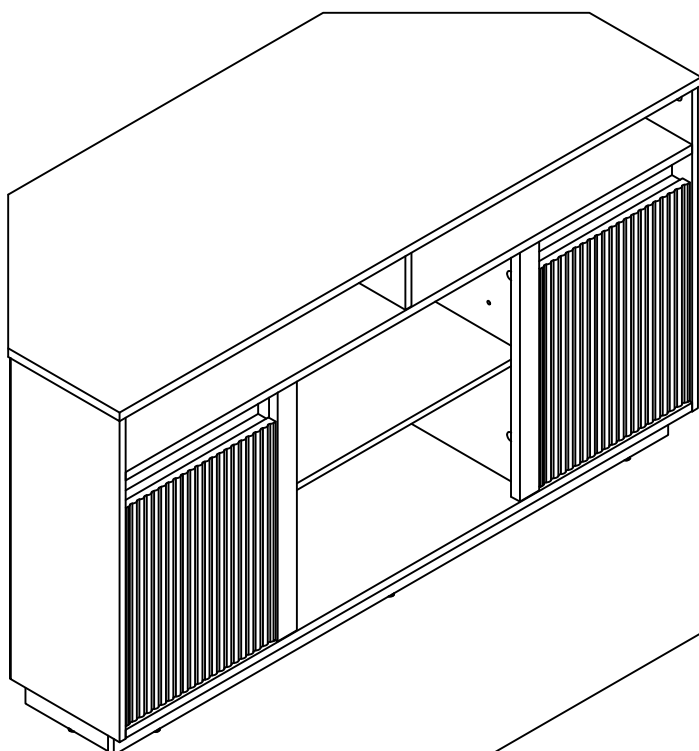


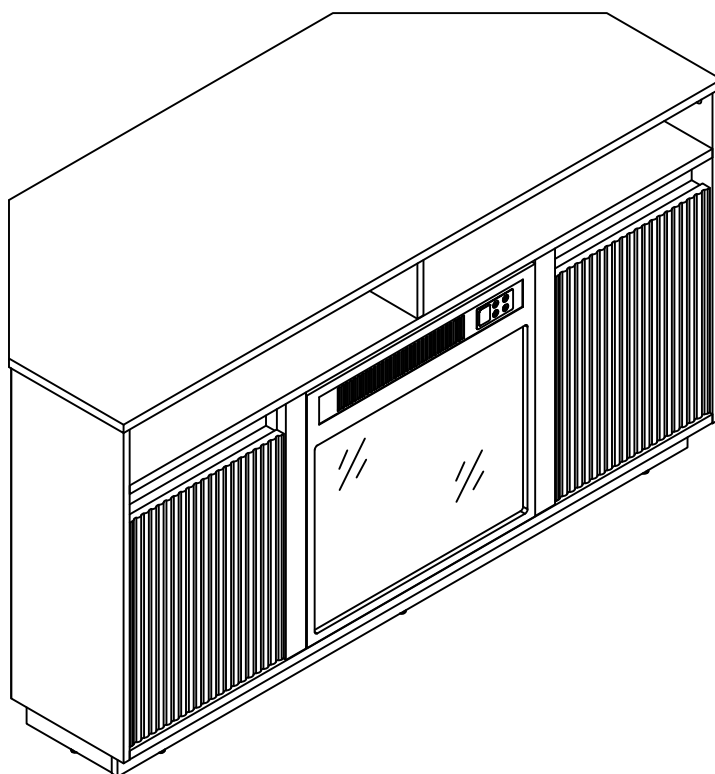

Installation Method 1


Installation Method 2

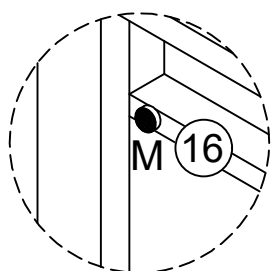


After installing the cabinet door of this product, attach the anti-collision rubber pad to Panel 16.




1

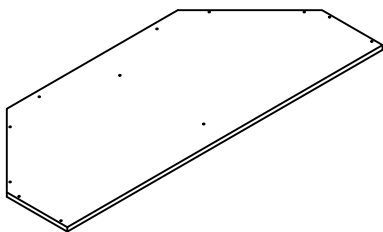


2

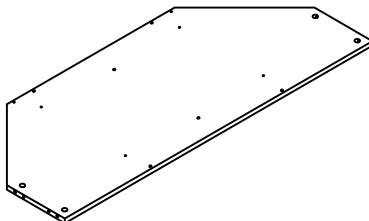


3

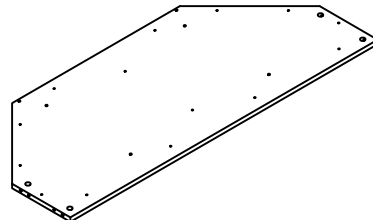

4




5

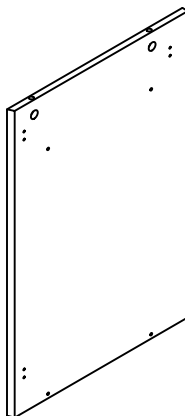


6




7

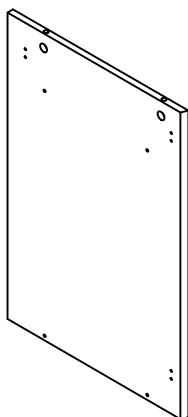

8

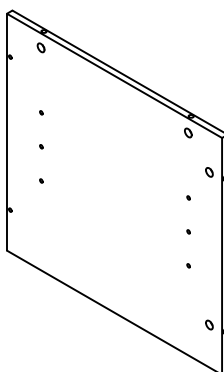


10

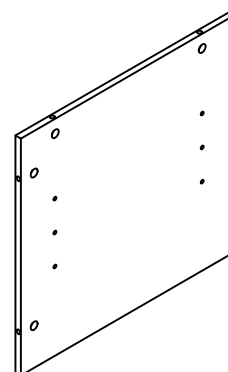


11














12



13

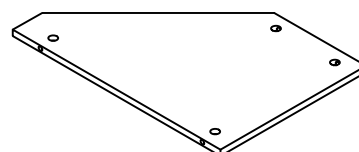


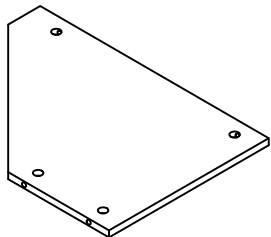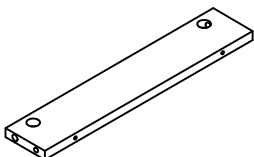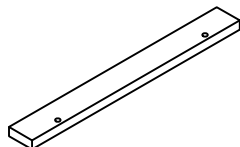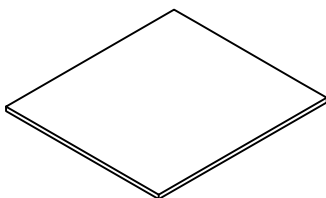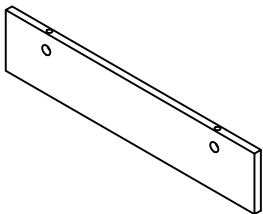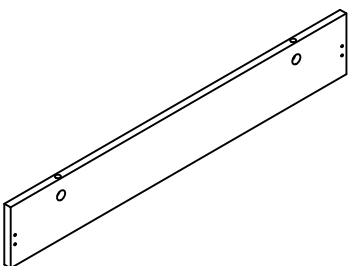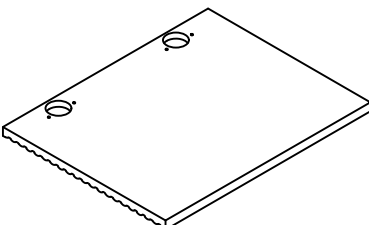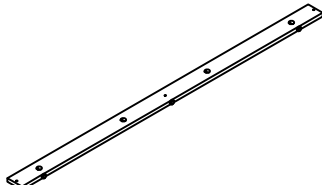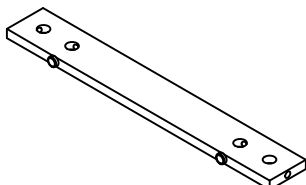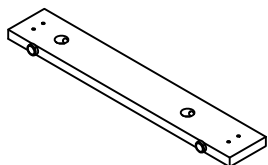


14 	15  X2	16  X2
17  X2	18 	19 
20 	21  X2	22 
23 	24 	25 





26

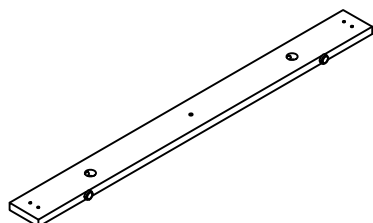





27

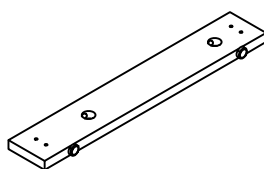


28

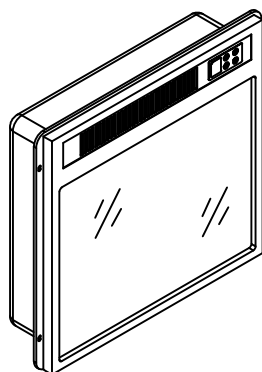

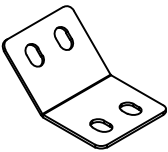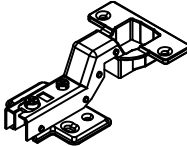

A M5x35  60 PCS	B Ø15x10  60 PCS	C Ø6x30  16 PCS	D M5x40  18 PCS
E Ø6  4 PCS	F M3.5x12  64 PCS	G M3.5x30  8 PCS	H  10 PCS
J Ø22x1  10 PCS	K 12DW  4 PCS	L M3.5x14  4 PCS	M Ø10X3  6 PCS
			

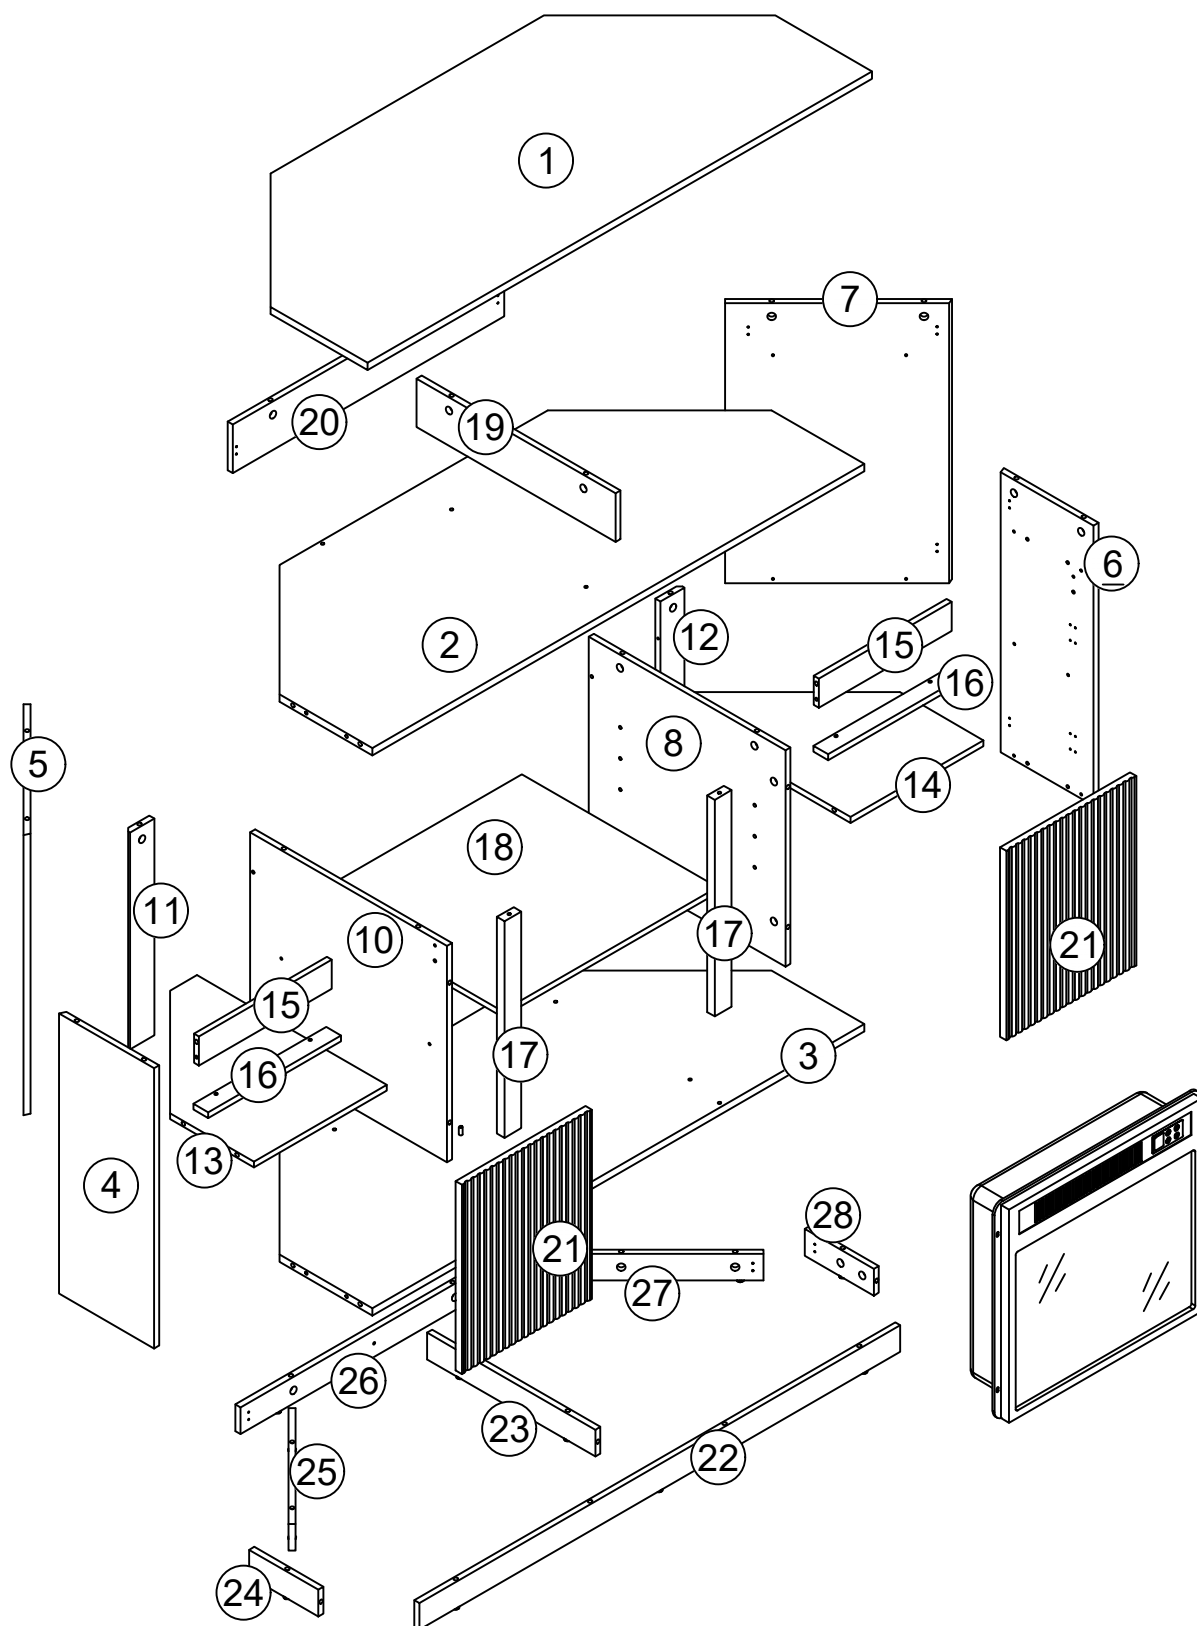



Cam Lock Fastening System






USA: This Cam Lock Fastening System will be used throughout the assembly process

FRA: Ce système de fixation à verrouillage cam sera utilisé tout au long du processus d'assemblage.

GER: Dieses Kamerastopf-Verschlusssystem wird während des gesamten Montageprozesses verwendet.

ITA: Questo Cam Lock Fastening System sarà utilizzato durante il processo di assemblaggio.


ESP: Este sistema de fijación de bloqueo de leva se usará a lo largo del proceso de montaje.

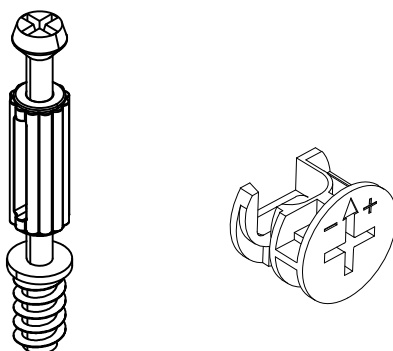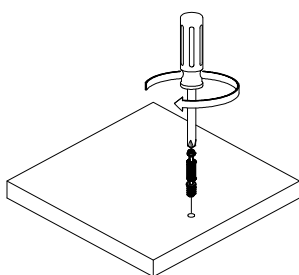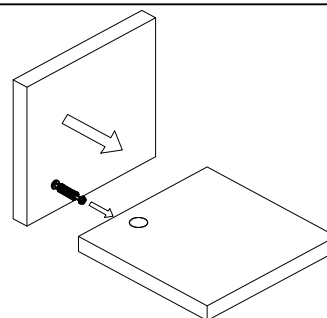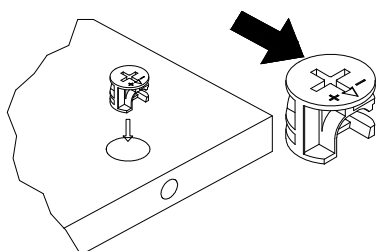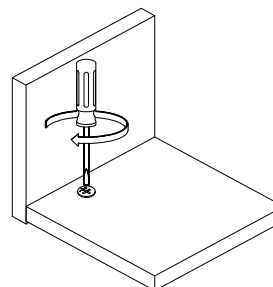**1****2****3****4**



P.7

1

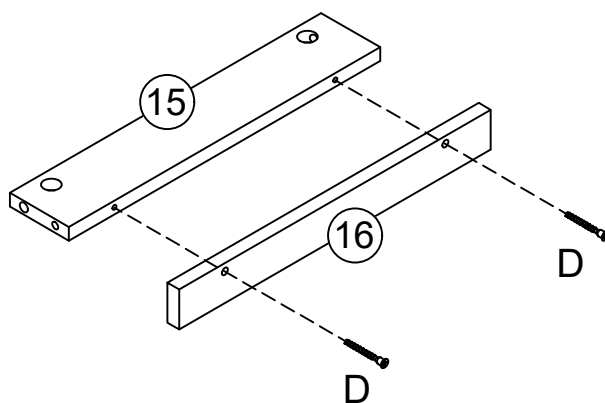


D M5x40



4 PCS

X2

2

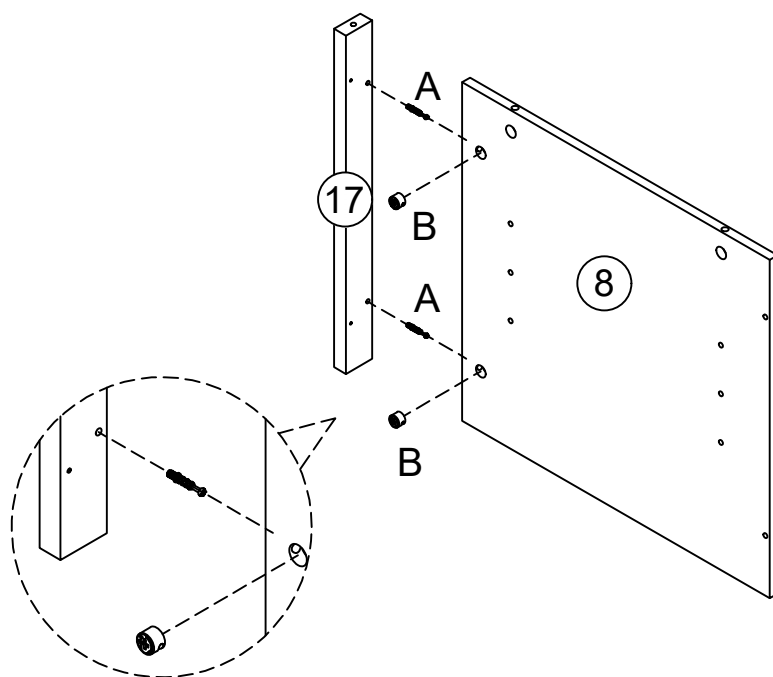

A M5x35



2 PCS

B Ø15x10



2 PCS

3

A M5x35



1 PCS

B Ø15x10




1 PCS

C Ø6x30



1 PCS

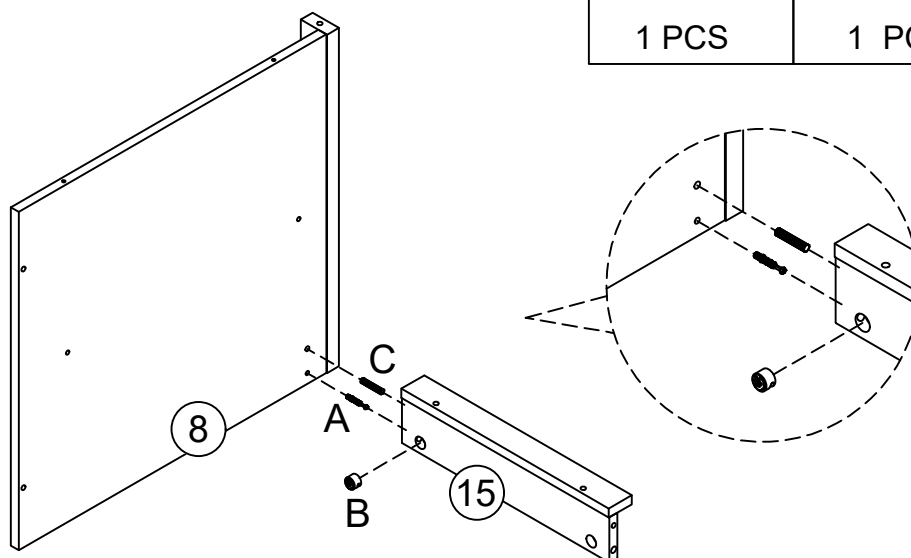


4

A M5x35




2 PCS

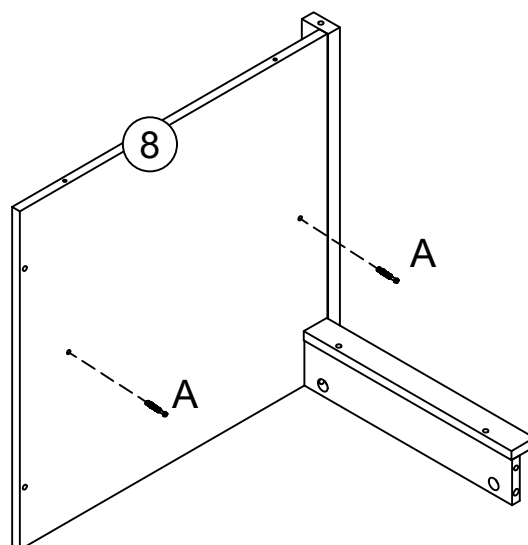



5

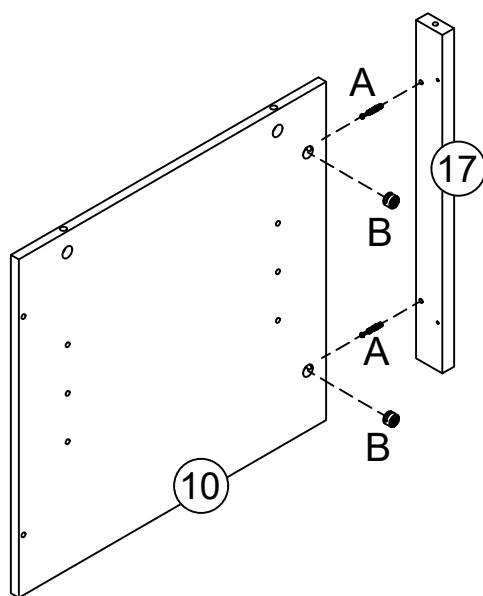

A M5x35


B Ø15x10



2 PCS

2 PCS

6

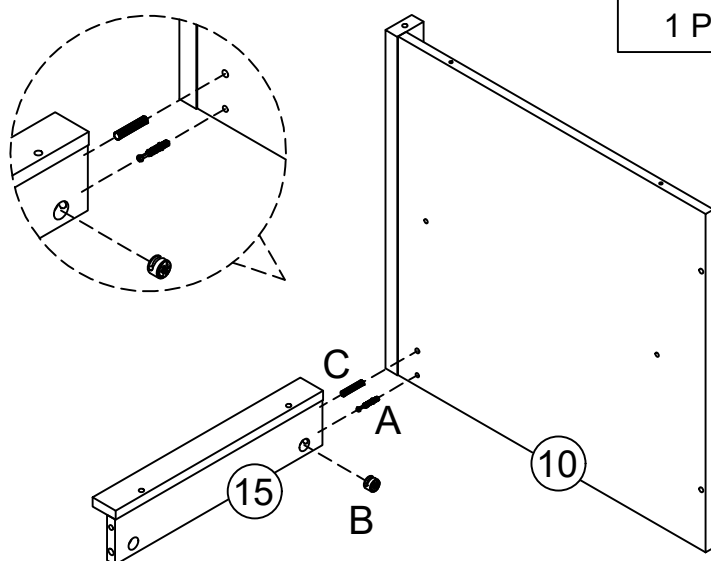

A M5x35

B Ø15x10

C Ø6x30




1 PCS

1 PCS

1 PCS



7

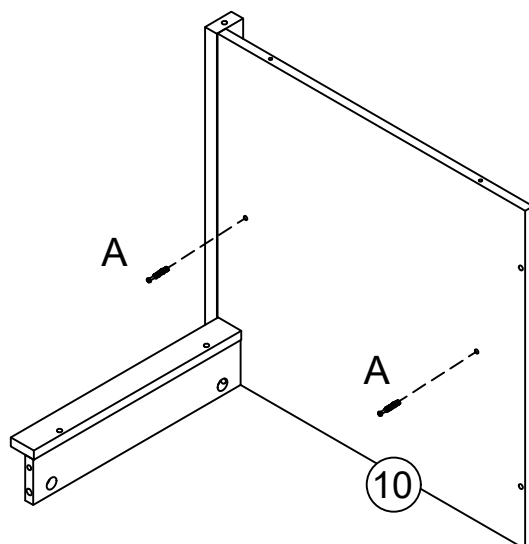


A M5x35



2 PCS

8

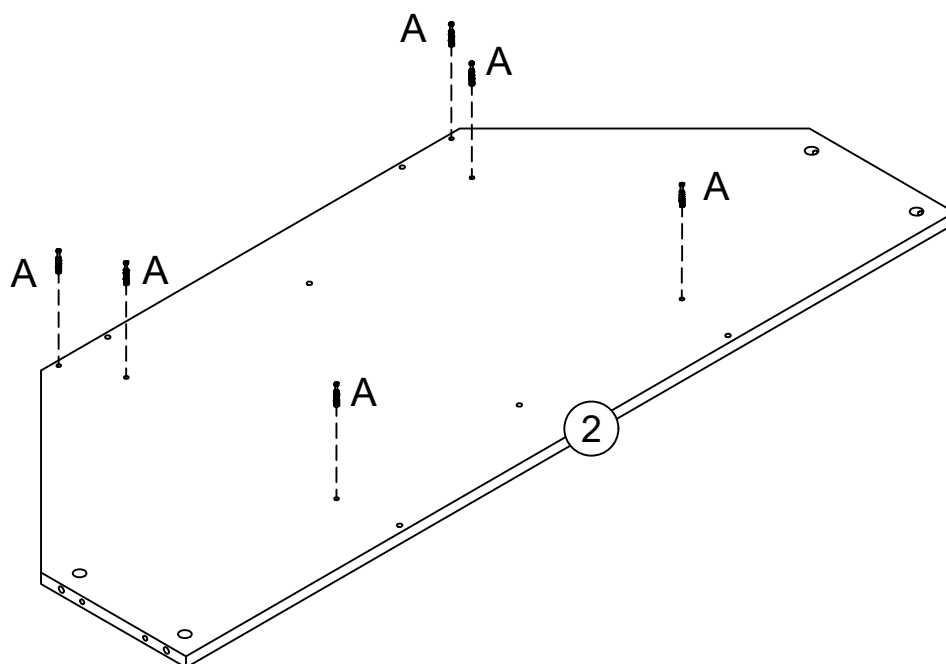

A M5x35



6 PCS



9

B Ø15x10




4 PCS


C Ø6x30



2 PCS

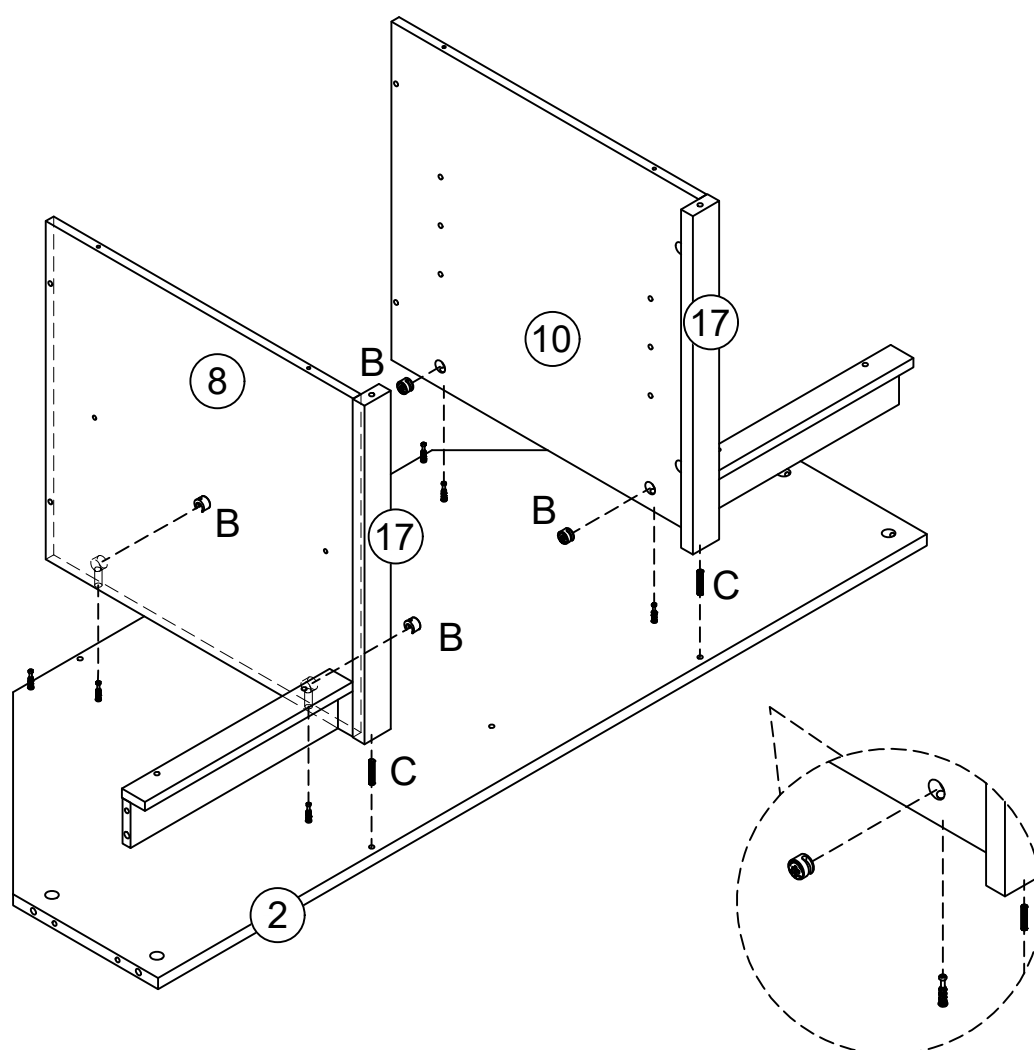

10

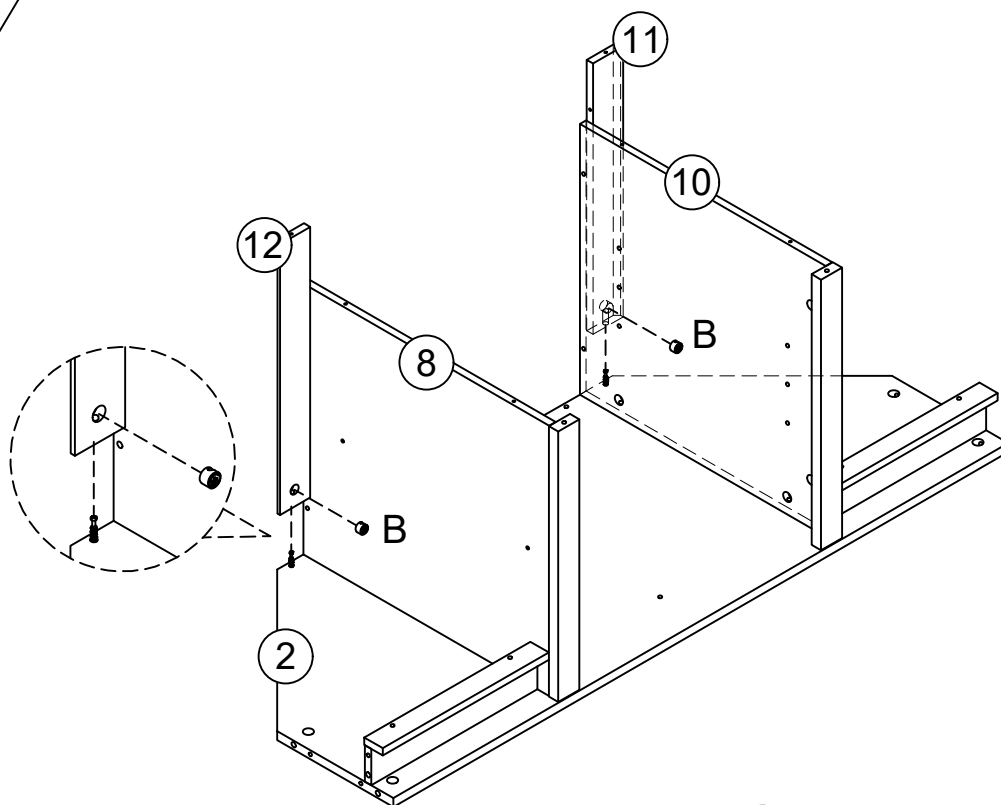

B Ø15x10




2 PCS

D M5x40



4 PCS

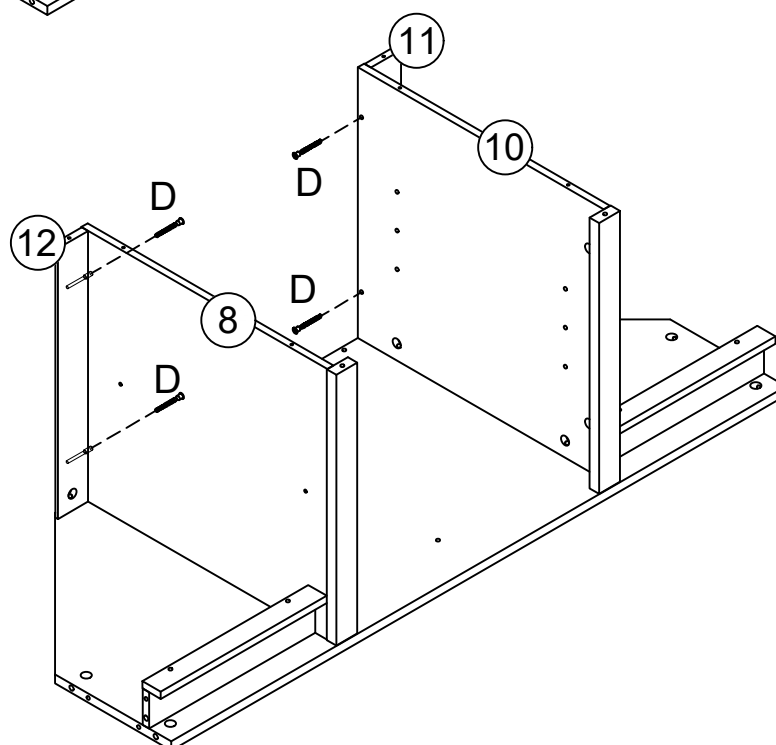


11

B Ø15x10



2 PCS

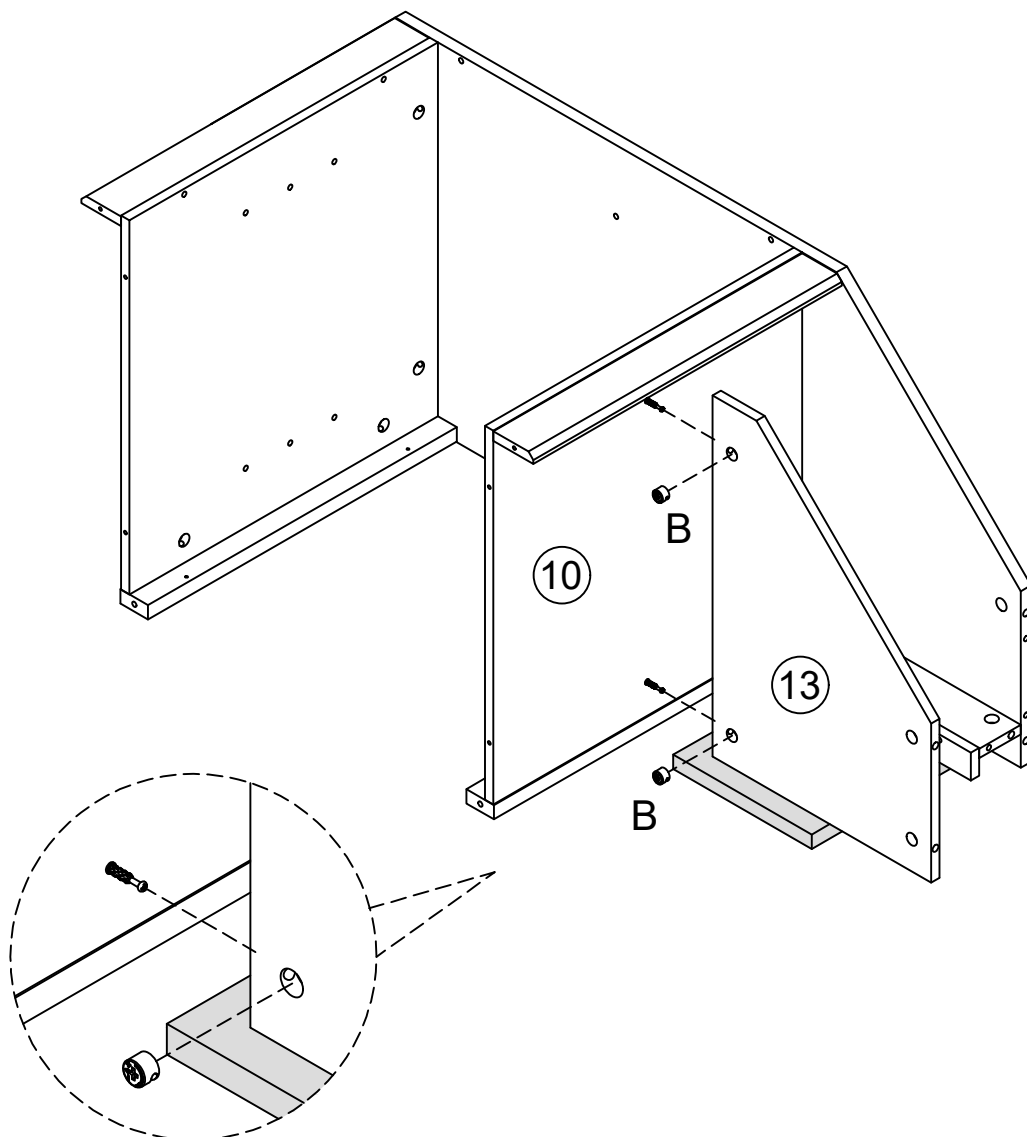


Install board No.13 and level it first during assembly for easier installation and to prevent damage to the board parts.

12

B Ø15x10




2 PCS

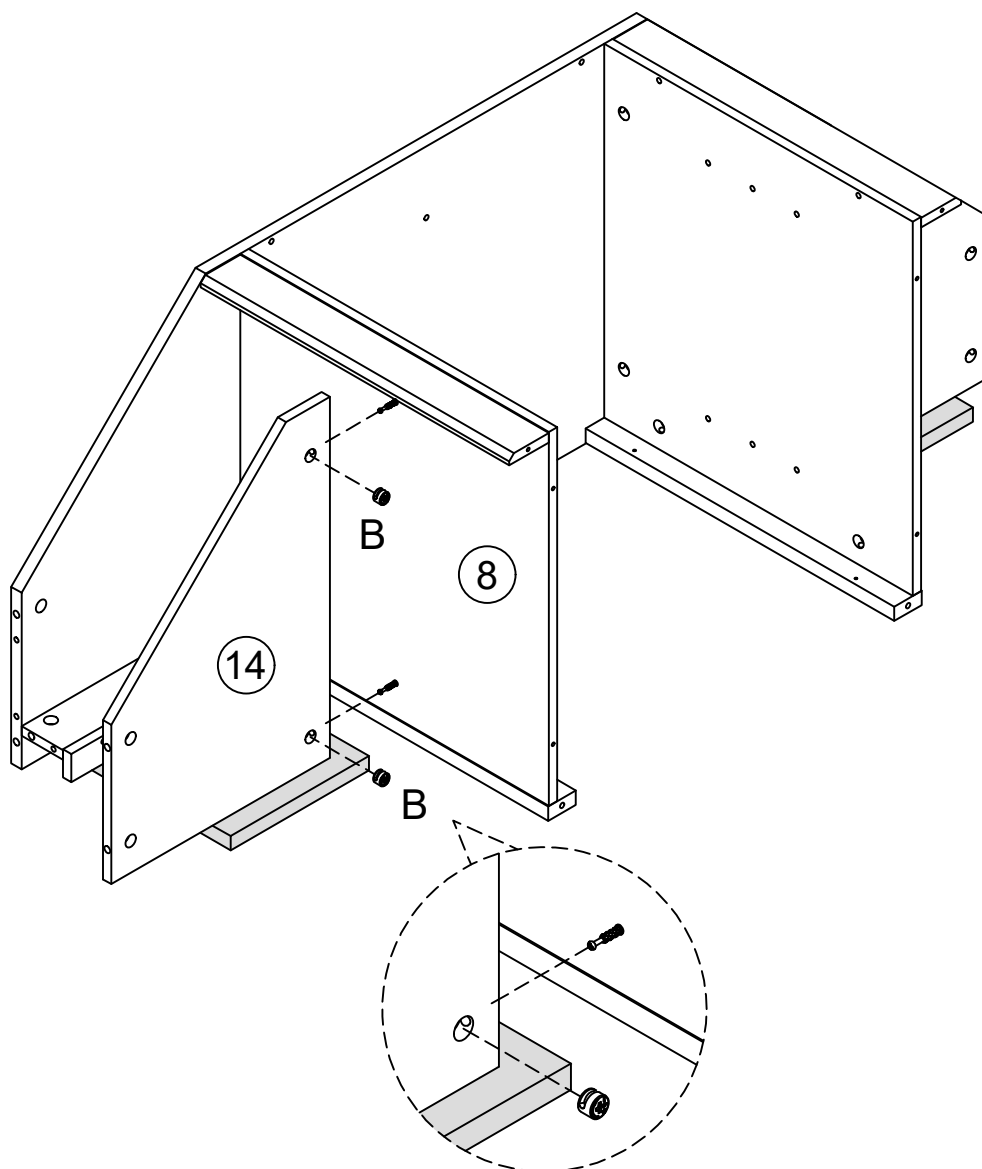

Install board No.14 and level it first during assembly for easier installation and to prevent damage to the board parts.


13

C Ø6x30  2 PCS	D M5x40  6 PCS
---	---

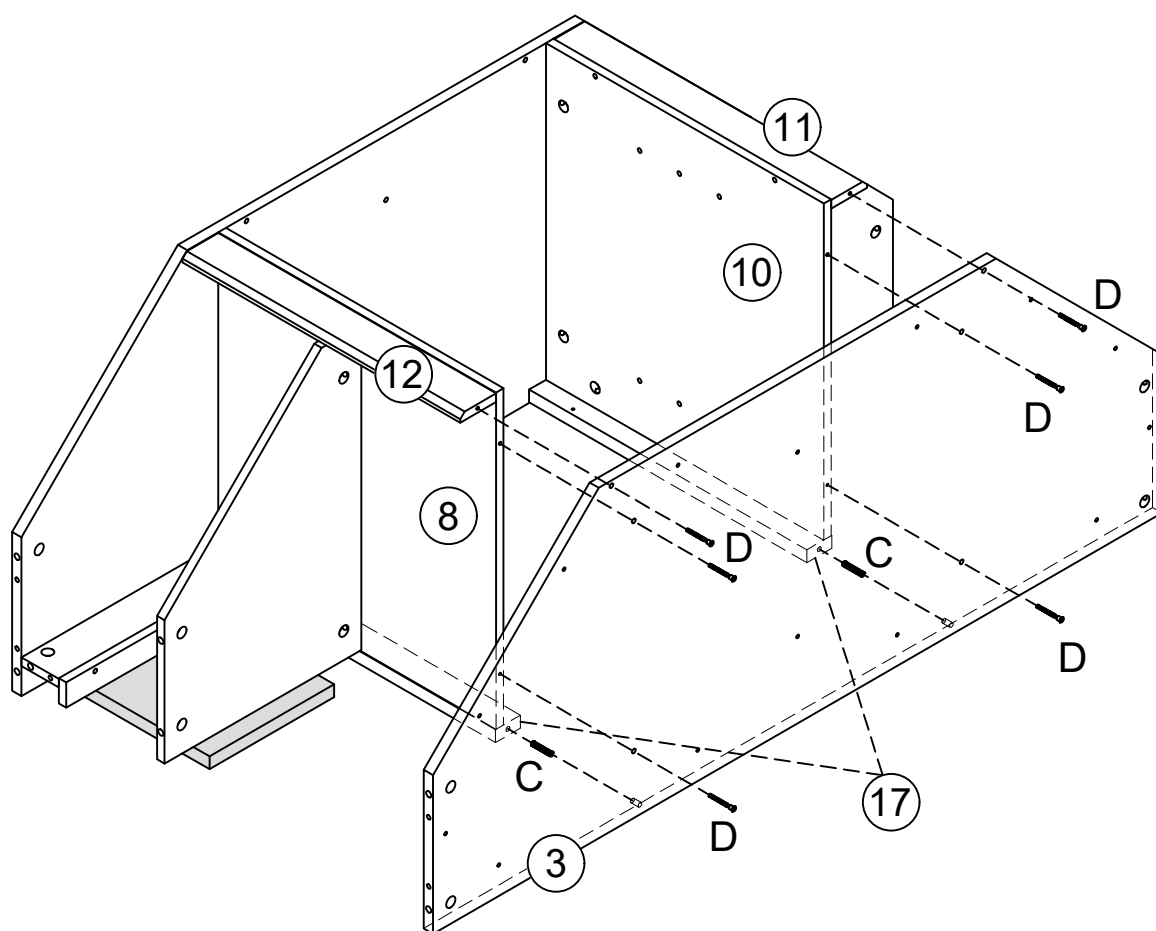



14

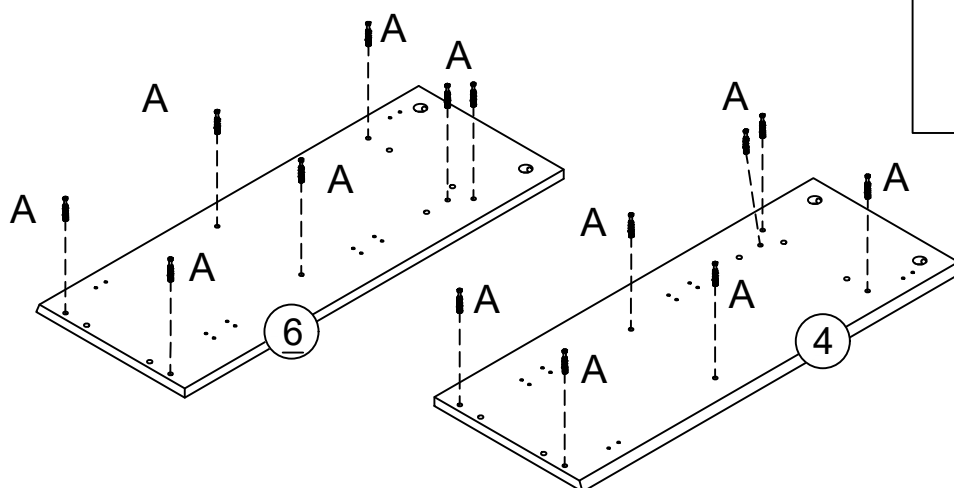


A M5x35



14 PCS

15

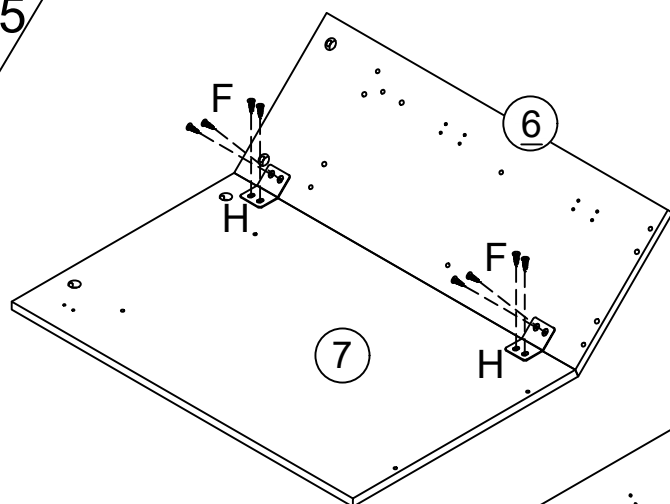


F M3.5x12





16 PCS

H



4 PCS

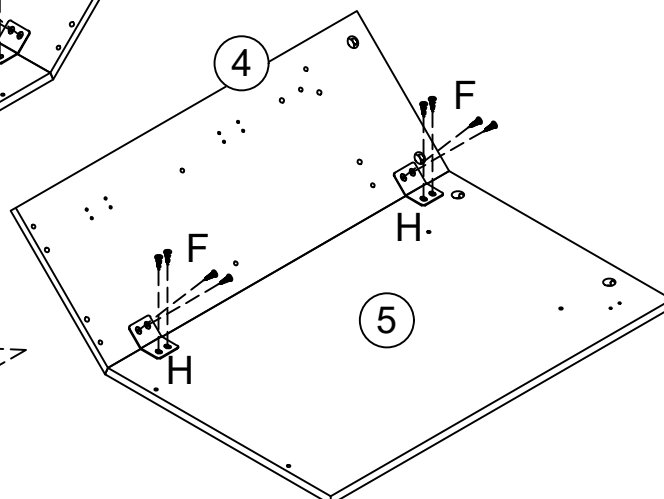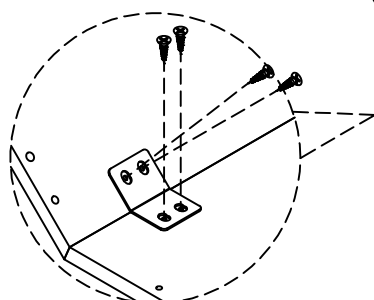

16


B Ø15x10

C Ø6x30



2 PCS

5 PCS

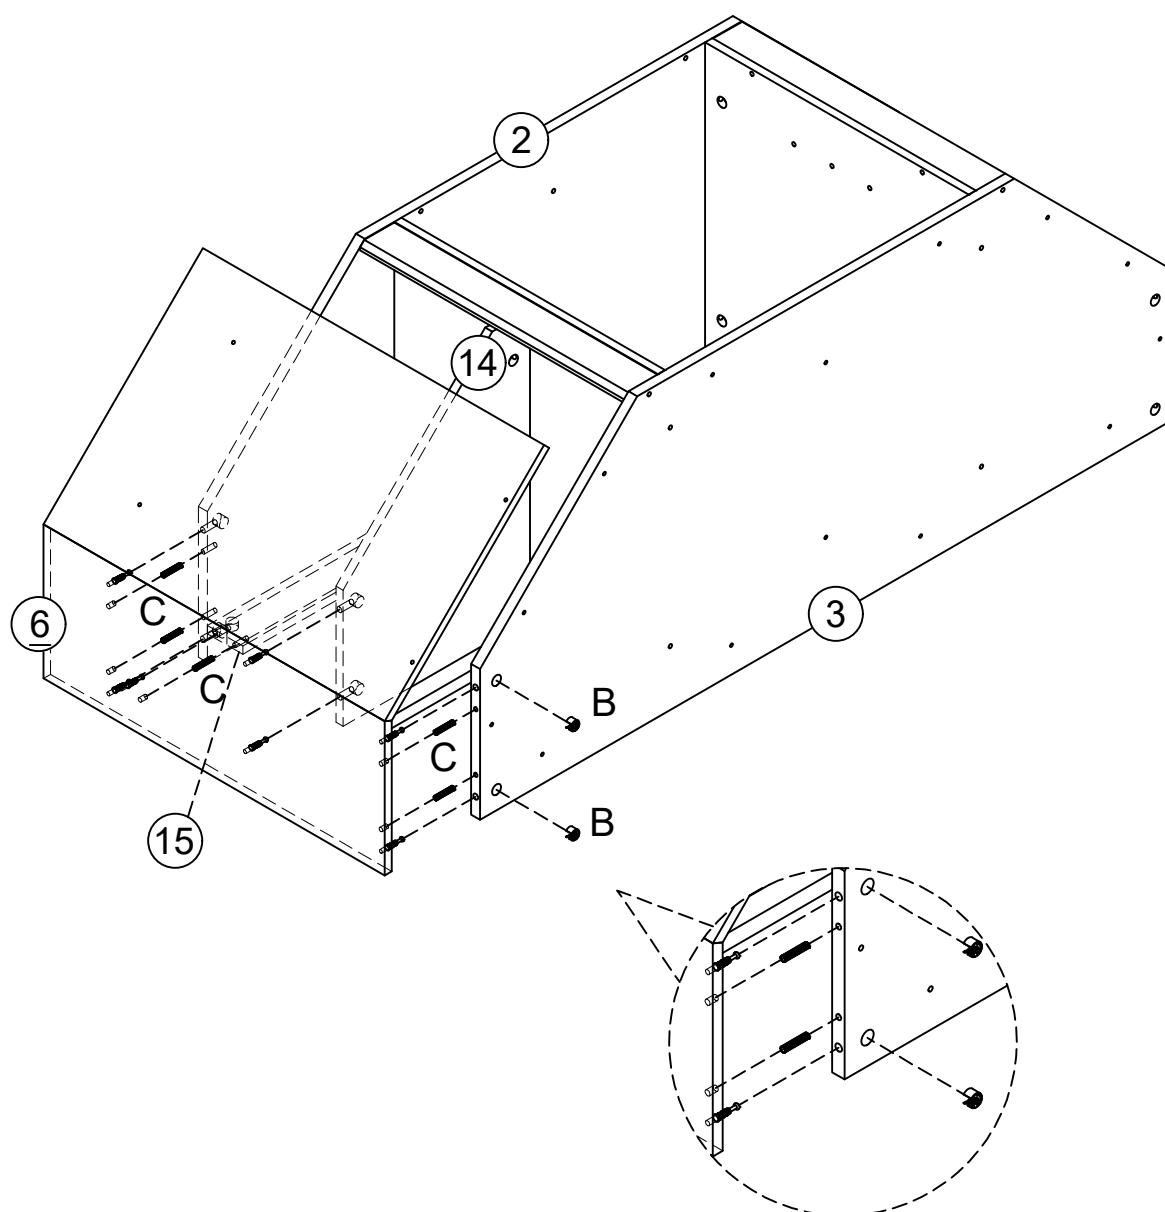



17

B Ø15x10




2 PCS

C Ø6x30



5 PCS

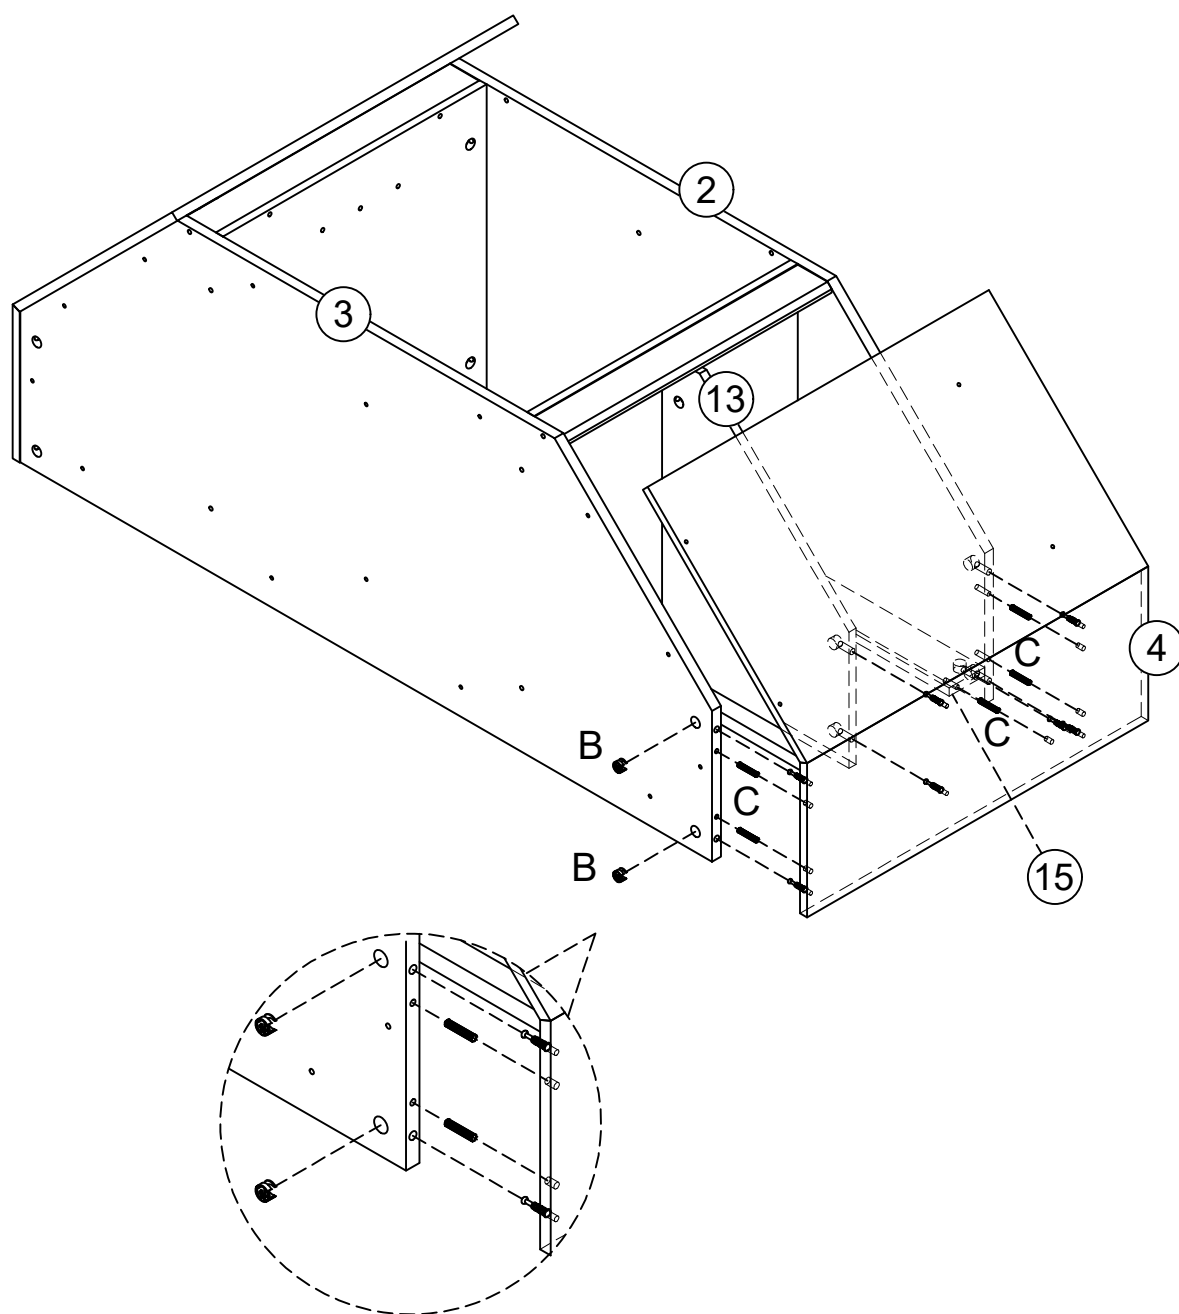





18

G M3.5x30



8 PCS

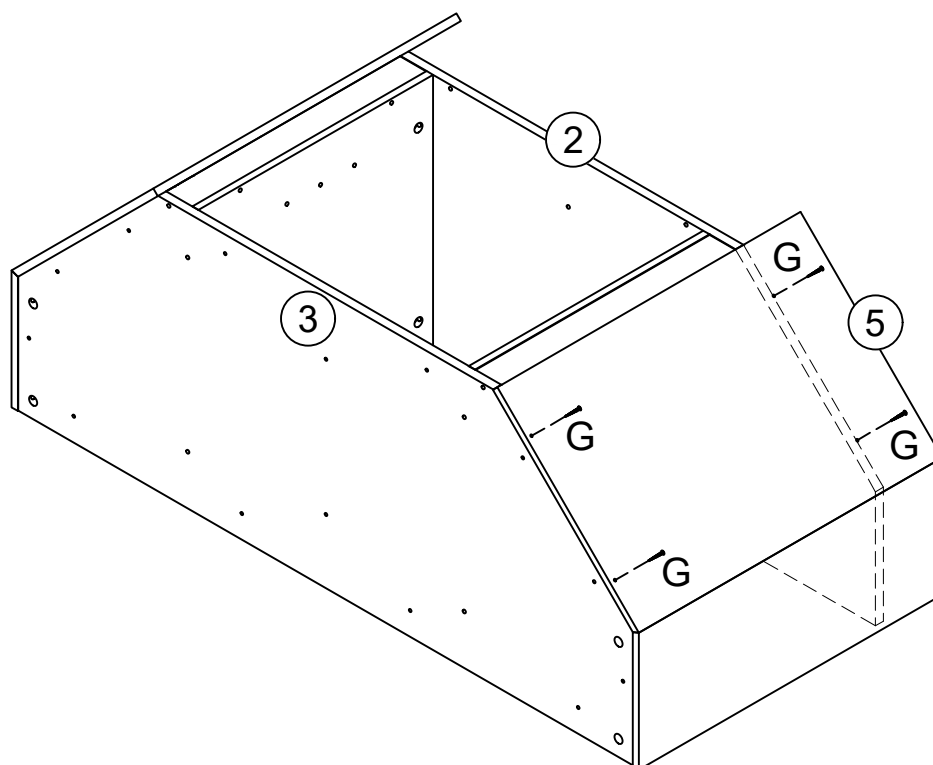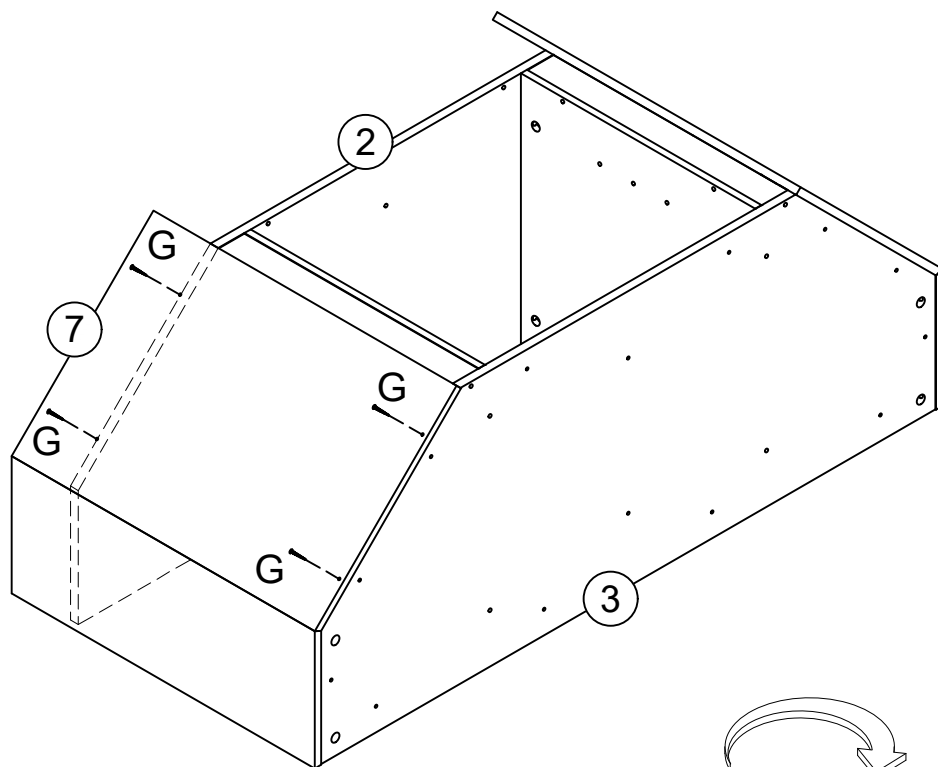

19


A M5x35

B Ø15x10




14 PCS

10 PCS

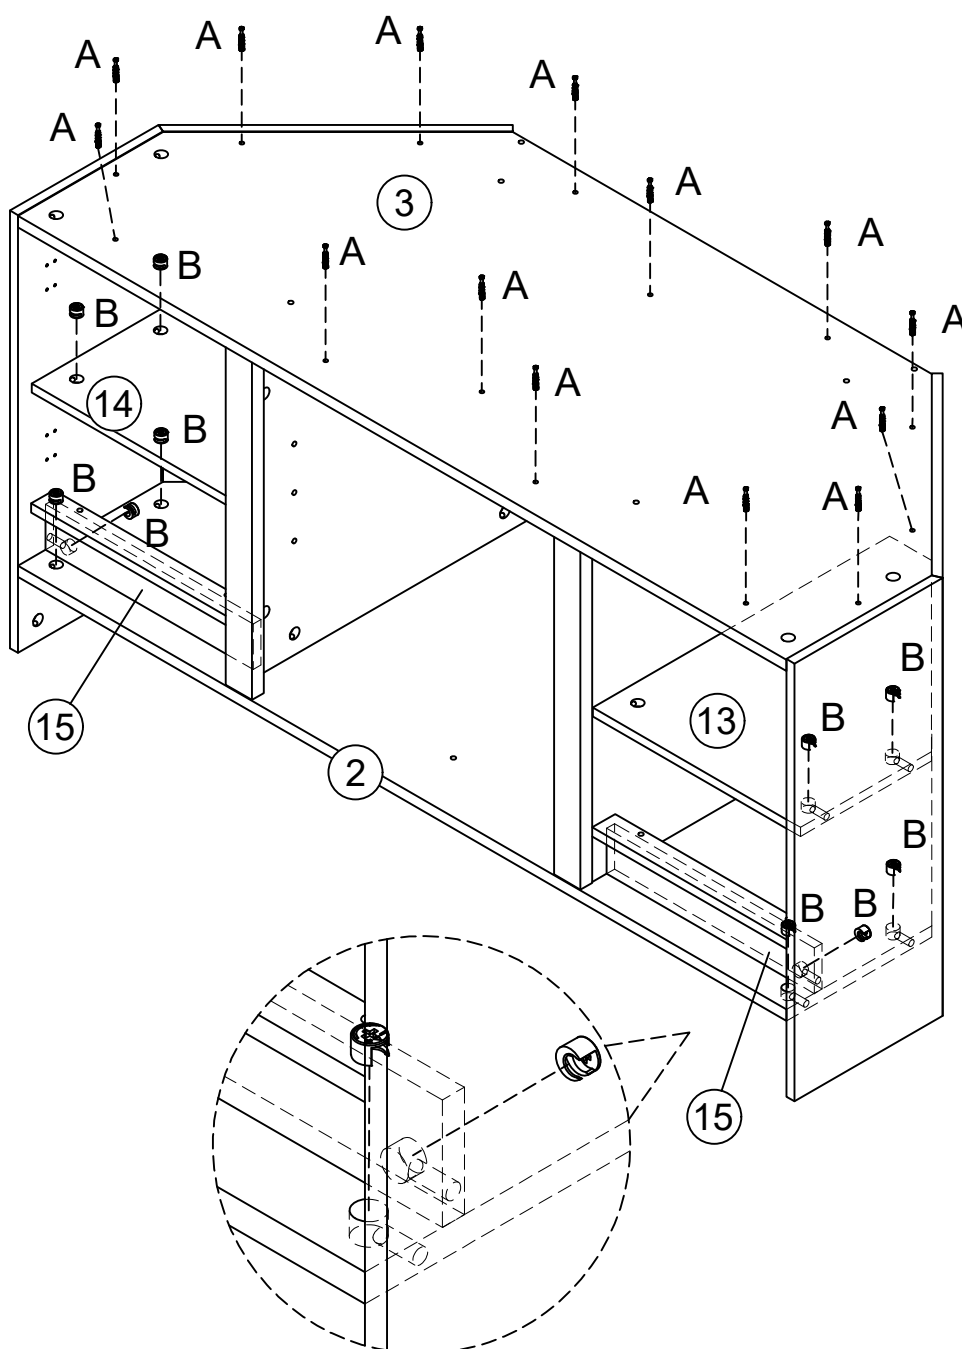



20

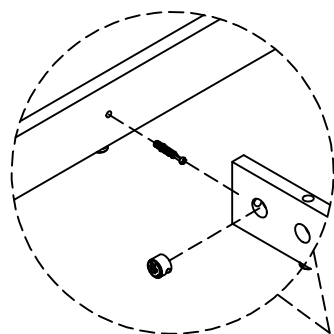



A M5x35

B Ø15x10



4 PCS

4 PCS

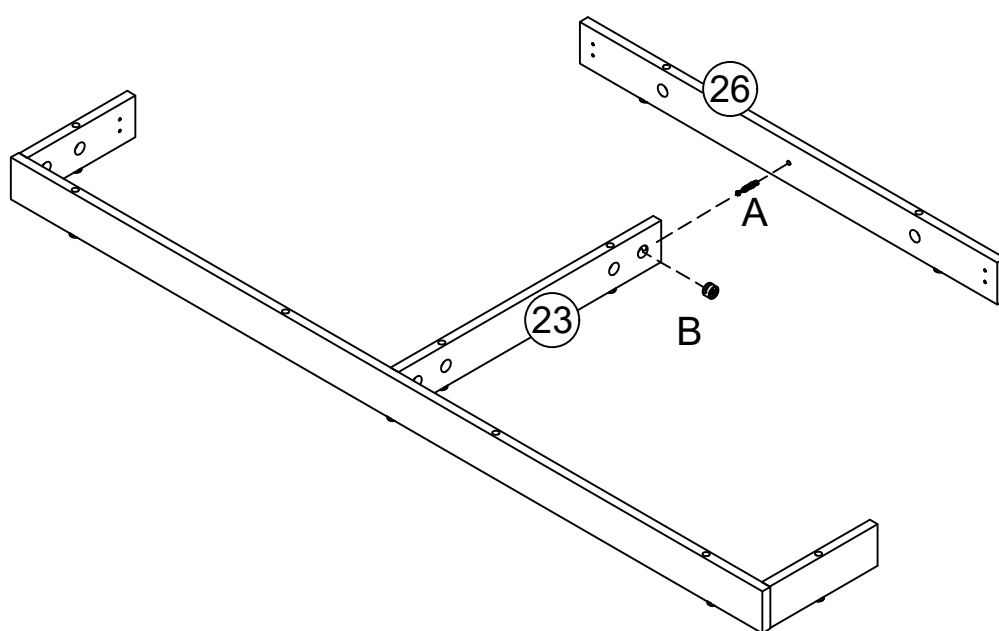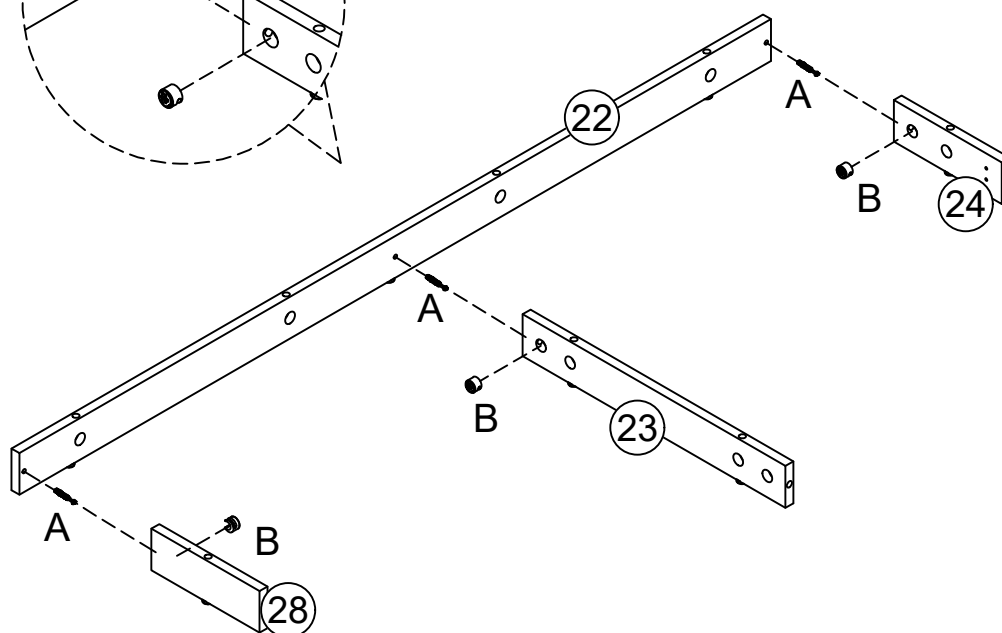


21

F M3.5x12




H



16 PCS



4 PCS

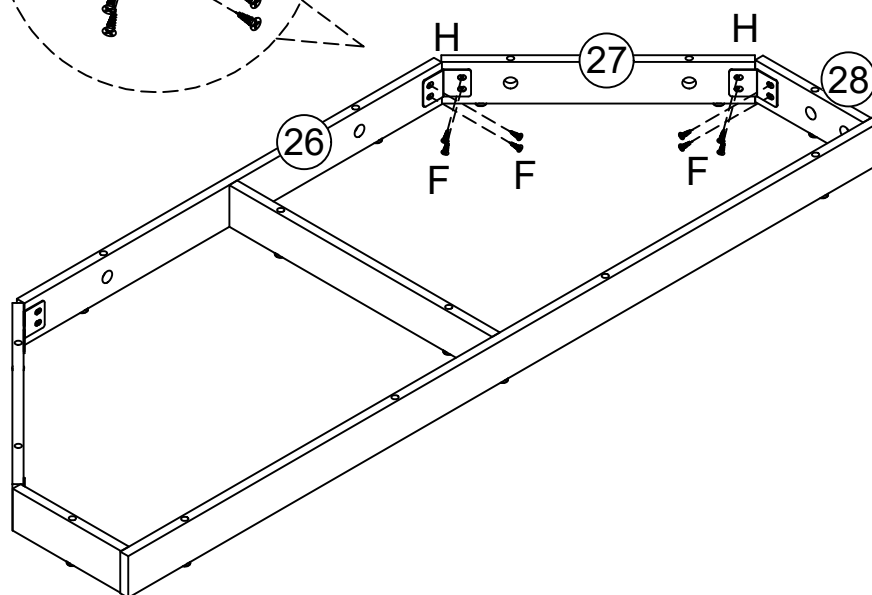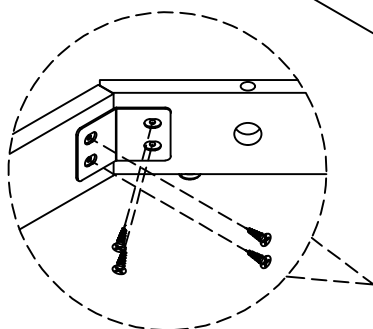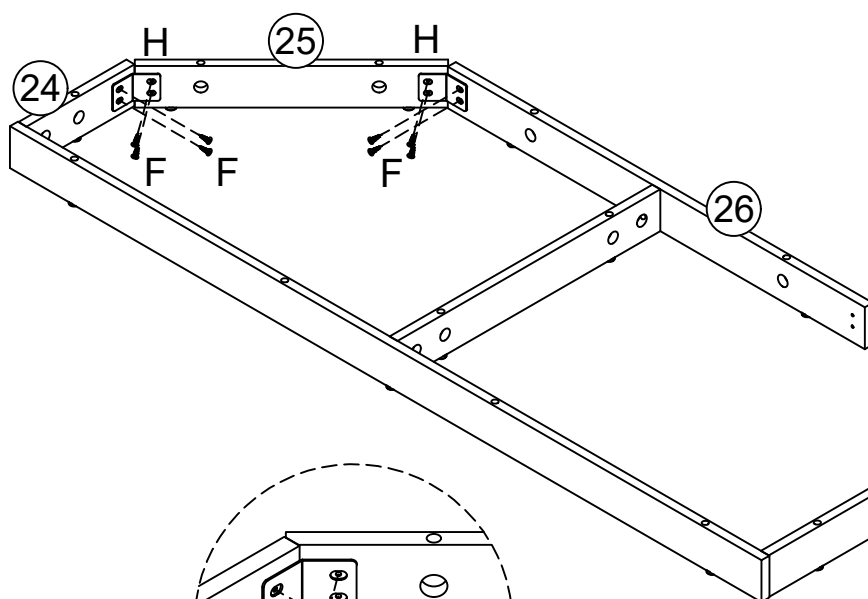




22

B Ø15x10



14 PCS

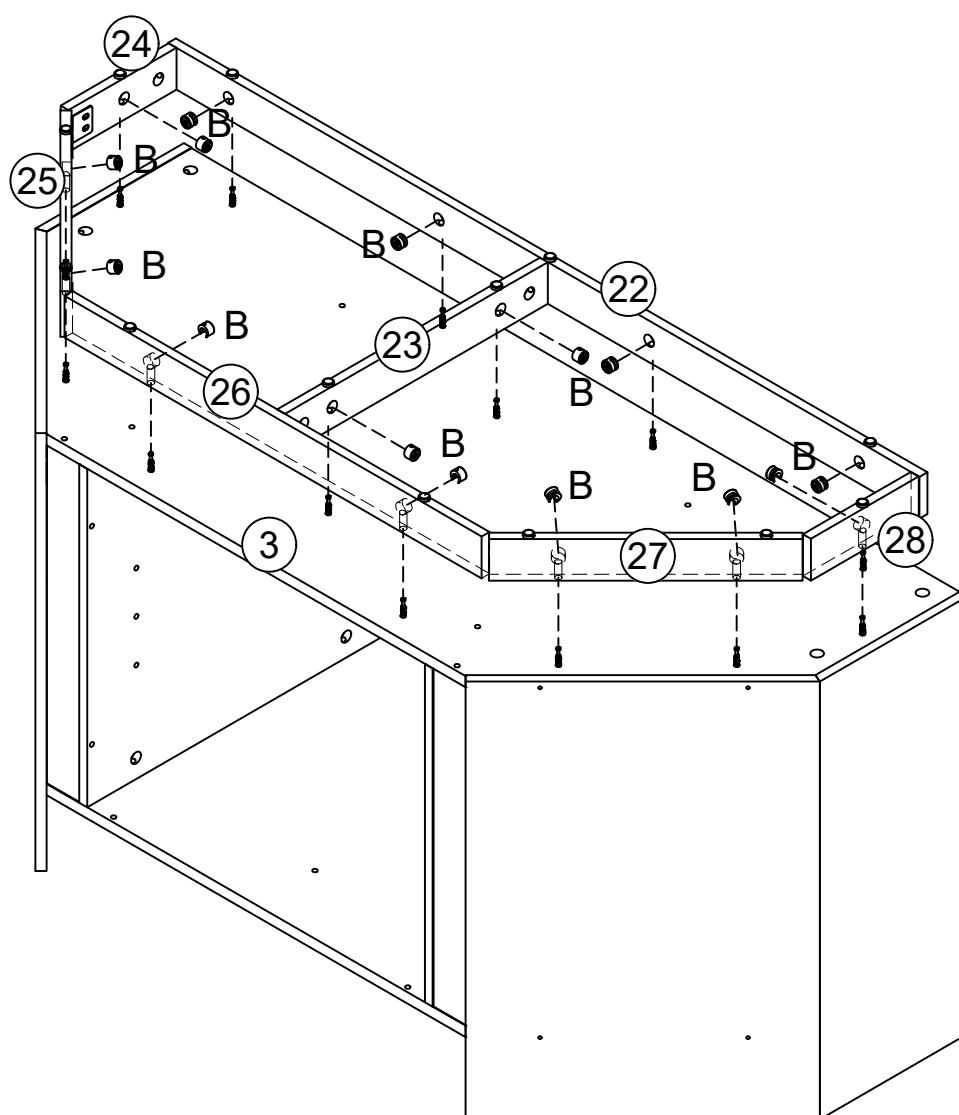




23

D M5x40



2 PCS

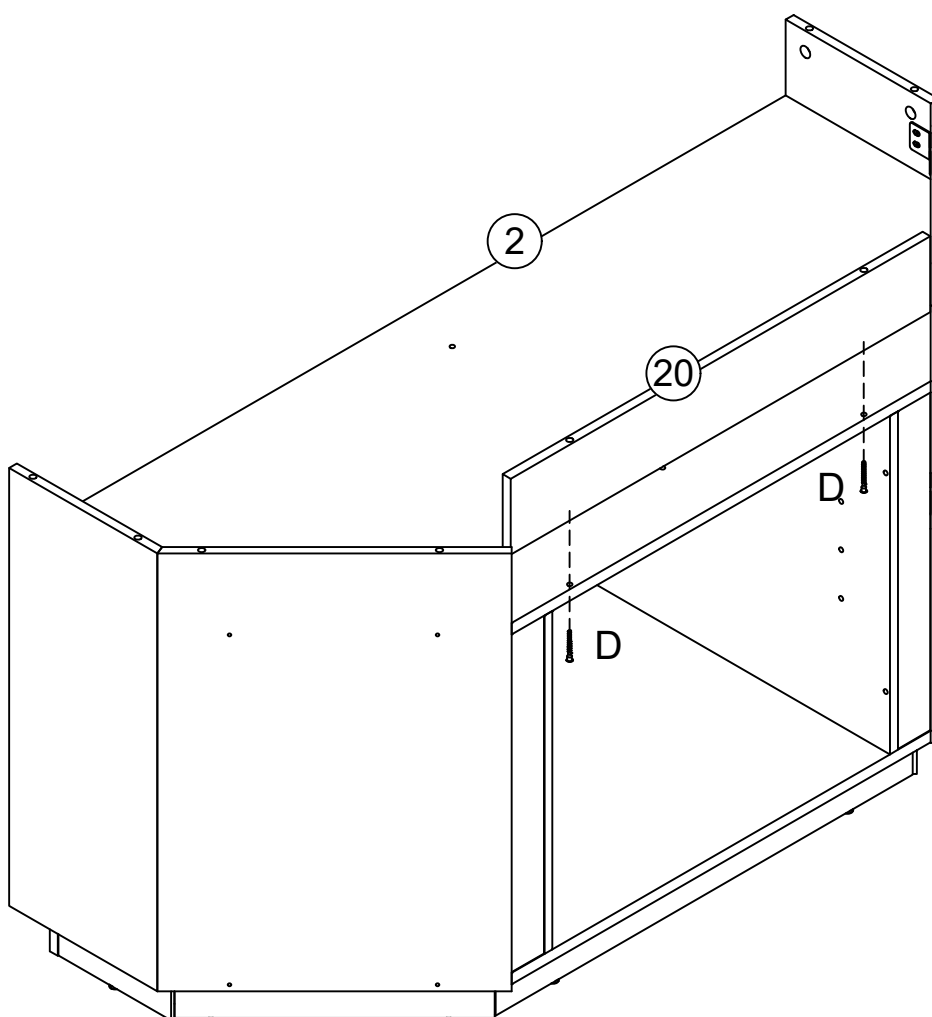




24


D M5x40



2 PCS

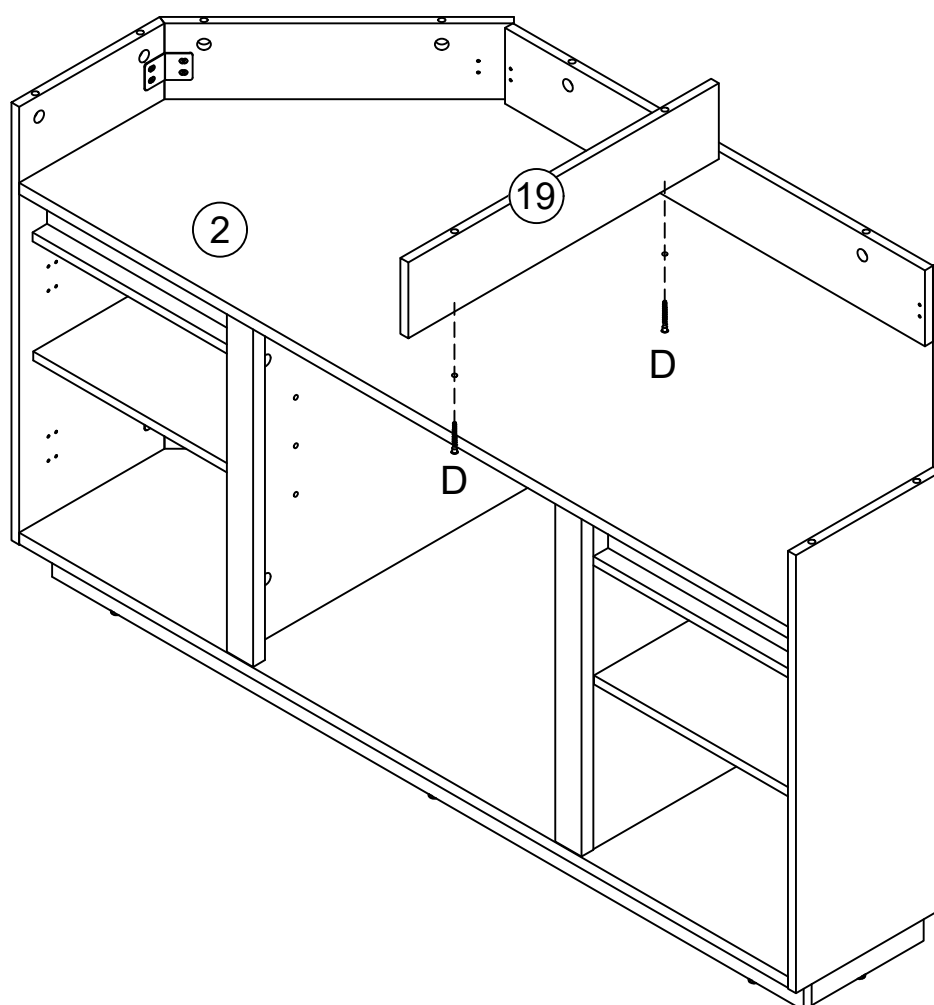


25

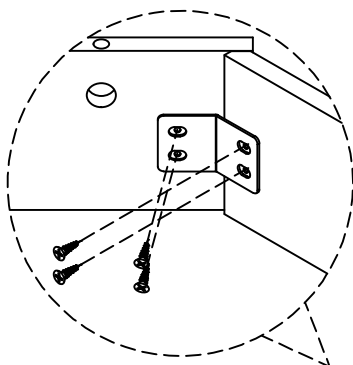


F M3.5x12

H



8 PCS

2 PCS

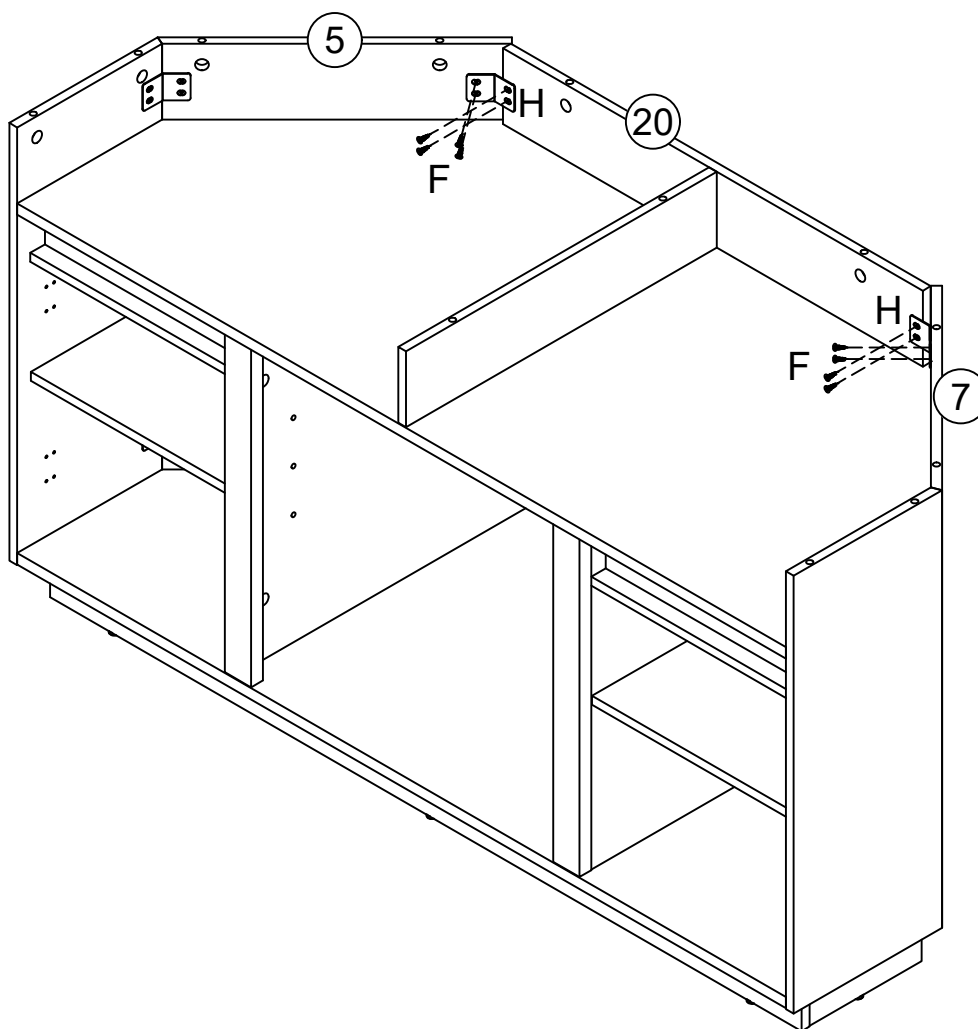

26

A M5x35




12 PCS

F M3.5x12






8 PCS

K 12DW



4 PCS

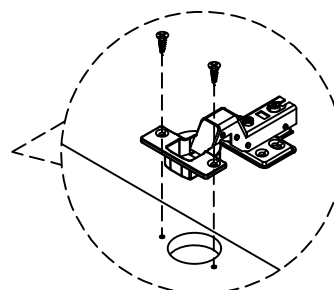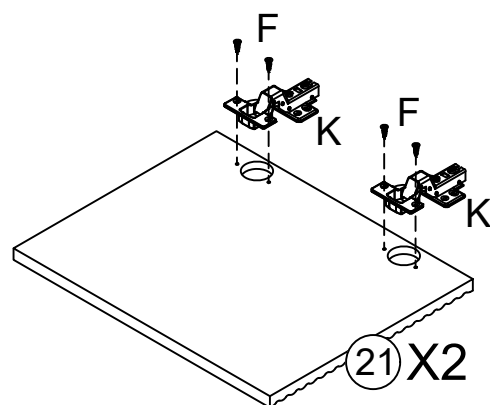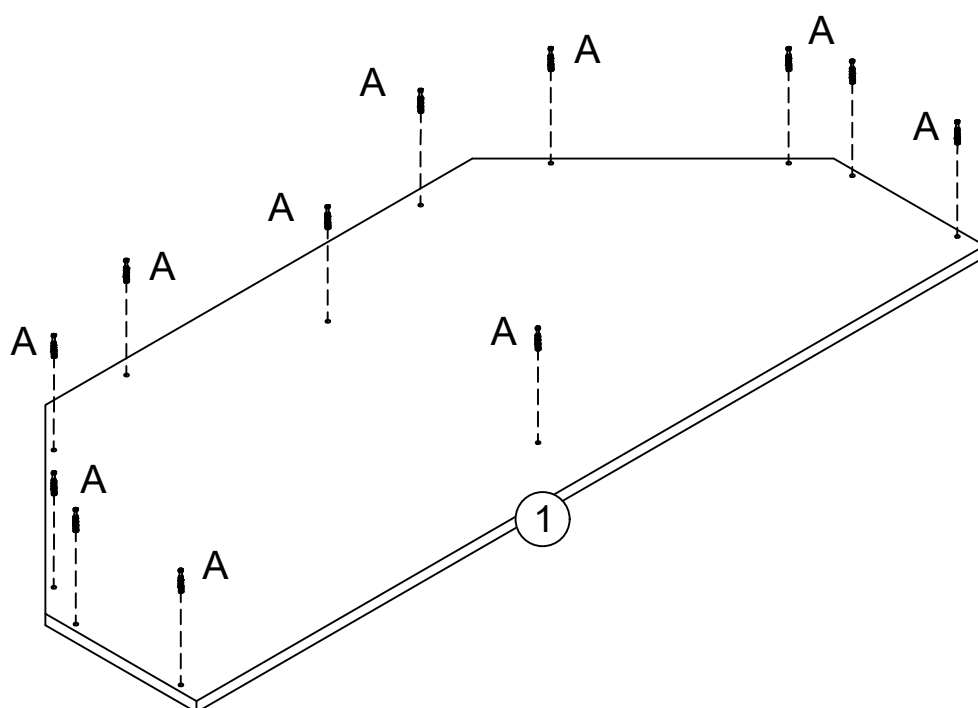




27

B Ø15x10



12 PCS

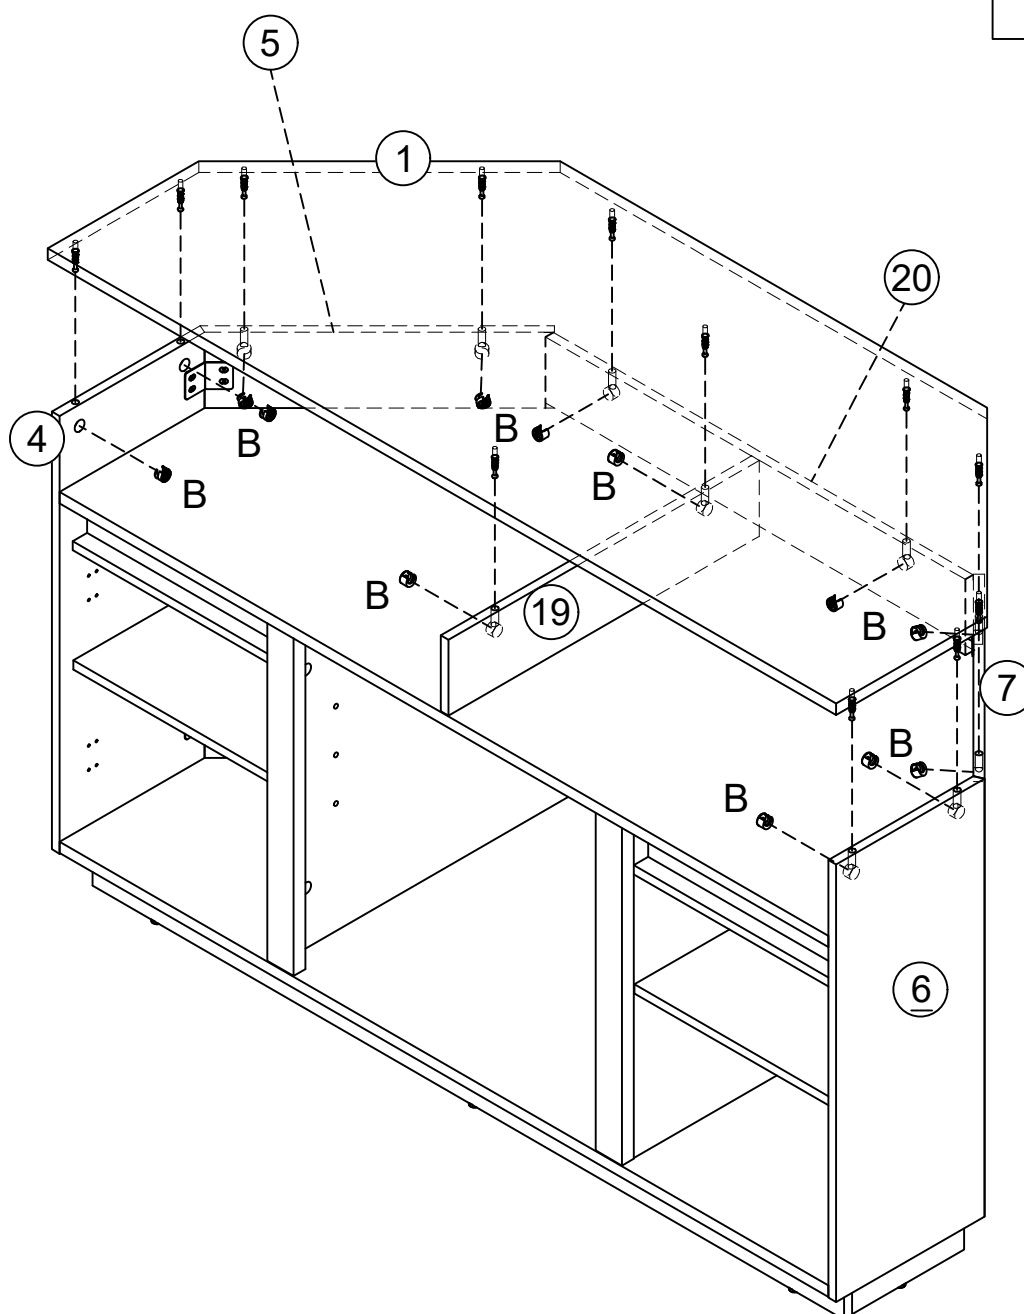


28


F M3.5x12




8 PCS

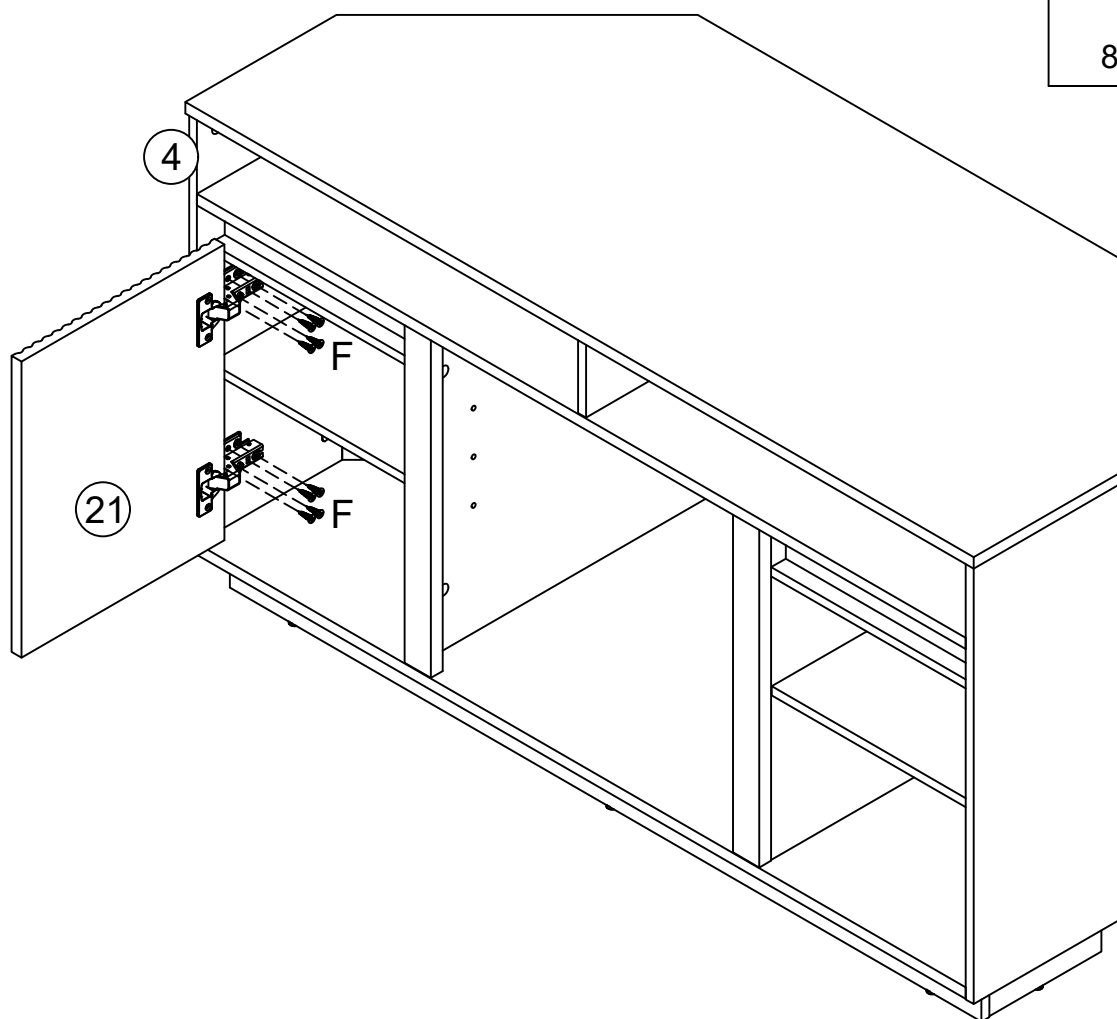

Step 1

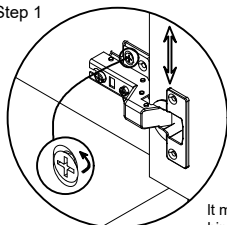


Step 2

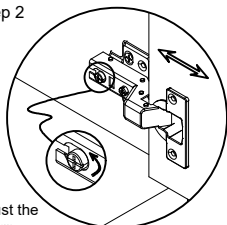


It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

Step 3

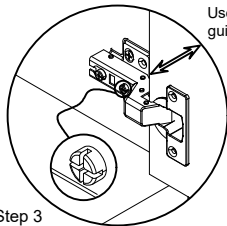

Step 4

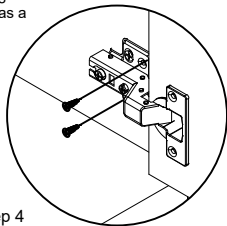

USA: It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

FRA: Il peut être nécessaire d'ajuster les charnières pour que les portes s'alignent. Utilisez les instructions ci-dessous comme guide.

GER: Es kann notwendig sein, die Scharniere so zu verstellen, dass die Türen sich ausrichten. Verwenden Sie die Anweisungen unten als Leitfaden.

ITA: Può essere necessario regolare le cerniere in modo che le porte si allineano. Usa le istruzioni qui sotto come guida.

ESP: Puede ser necesario ajustar las bisagras para que las puertas se alineen. Utilice las instrucciones a continuación como guía.




P.30

29

M Ø10X3



1 PC

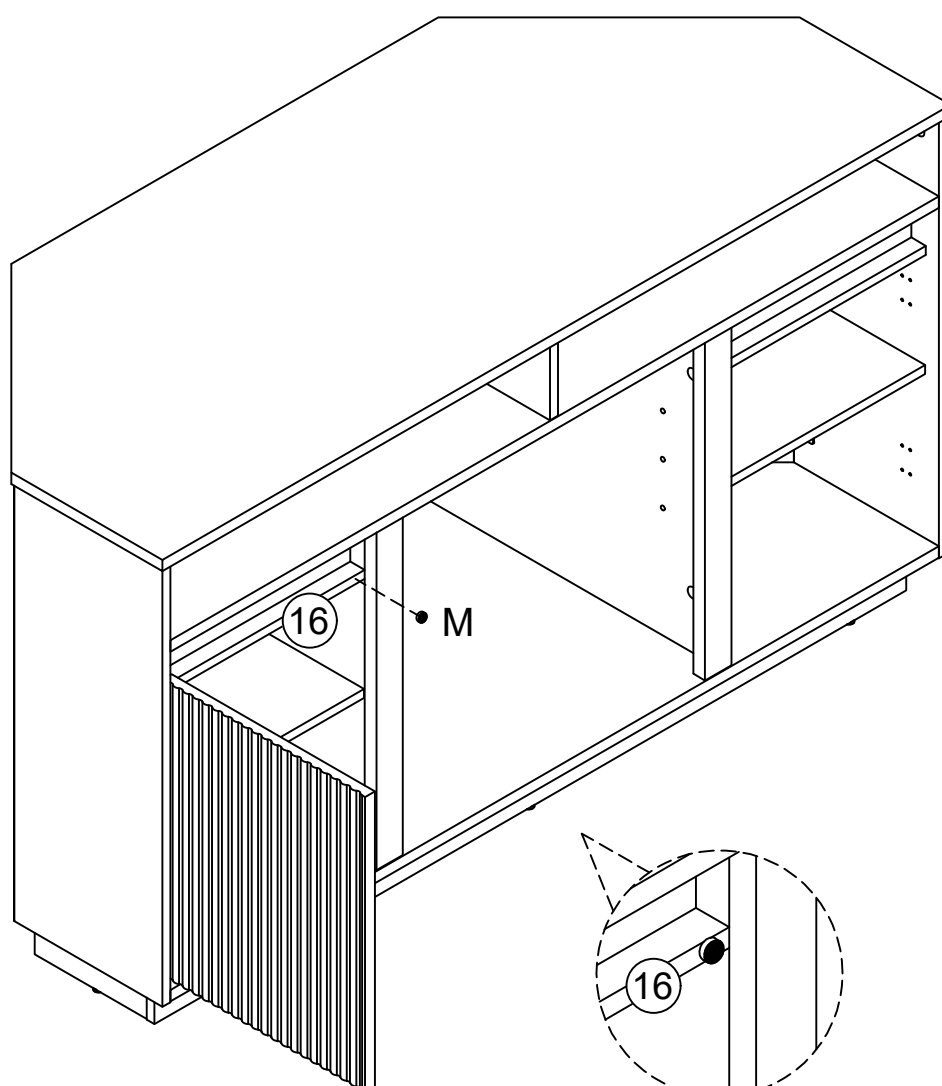


30

F M3.5x12



8 PCS

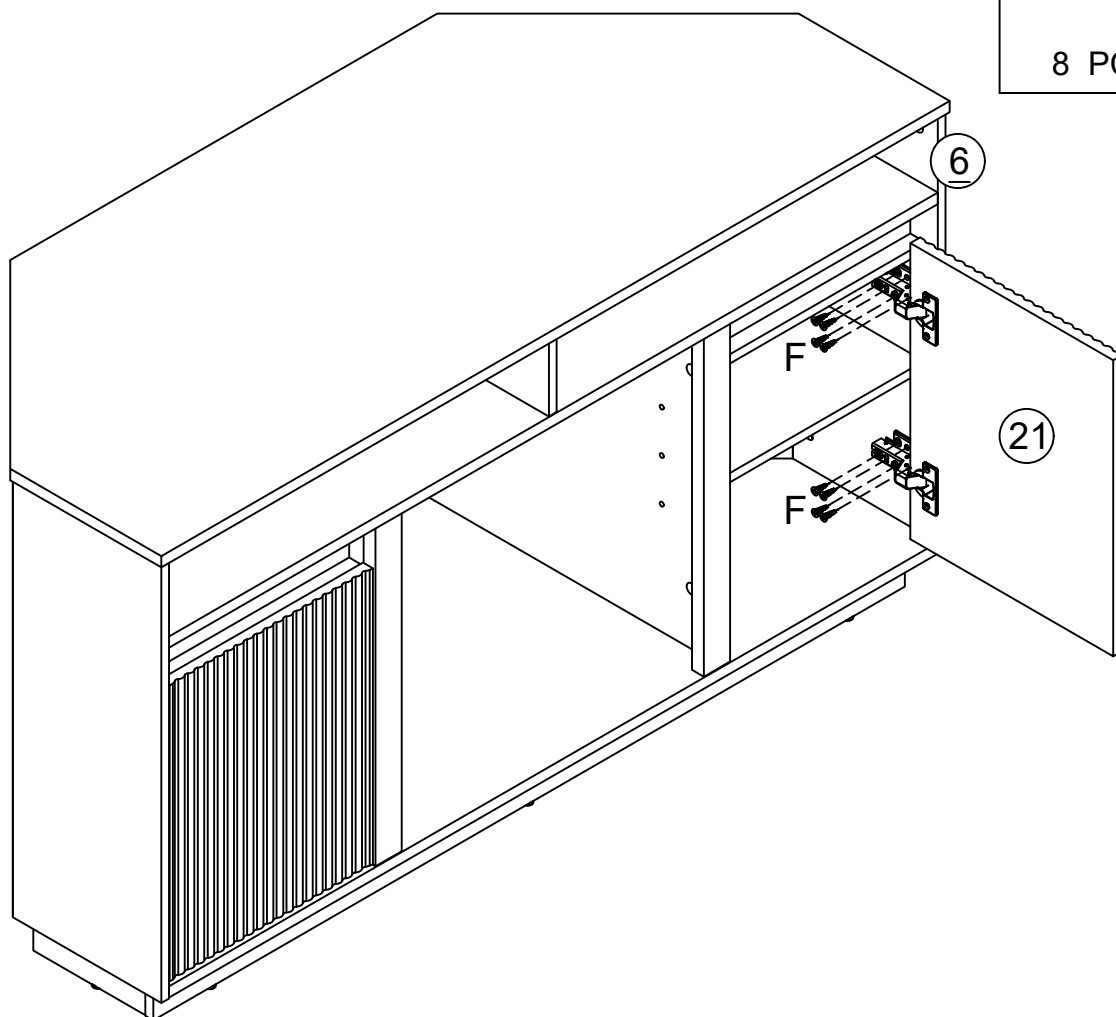

USA: It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.


FRA: Il peut être nécessaire d'ajuster les charnières pour que les portes s'alignent. Utilisez les instructions ci-dessous comme guide.

GER: Es kann notwendig sein, die Scharniere so zu verstellen, dass die Türen sich ausrichten. Verwenden Sie die Anweisungen unten als Leitfaden.


ITA: Può essere necessario regolare le cerniere in modo che le porte si allineano. Usa le istruzioni qui sotto come guida.

ESP: Puede ser necesario ajustar las bisagras para que las puertas se alineen. Utilice las instrucciones a continuación como guía.

Step 1

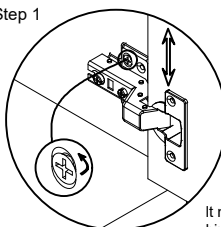


Step 2

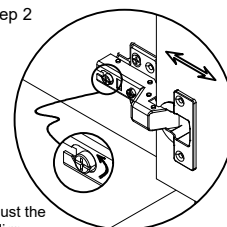


It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide

Step 3

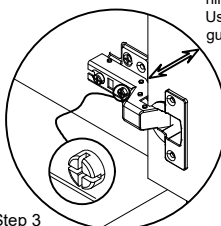

Step 4

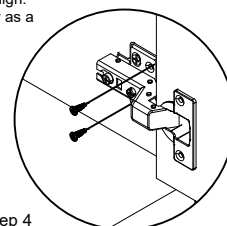





P.32

31

M Ø10X3



1 PC

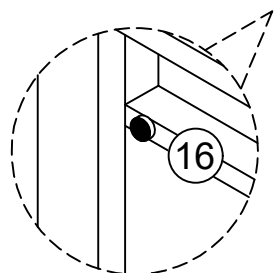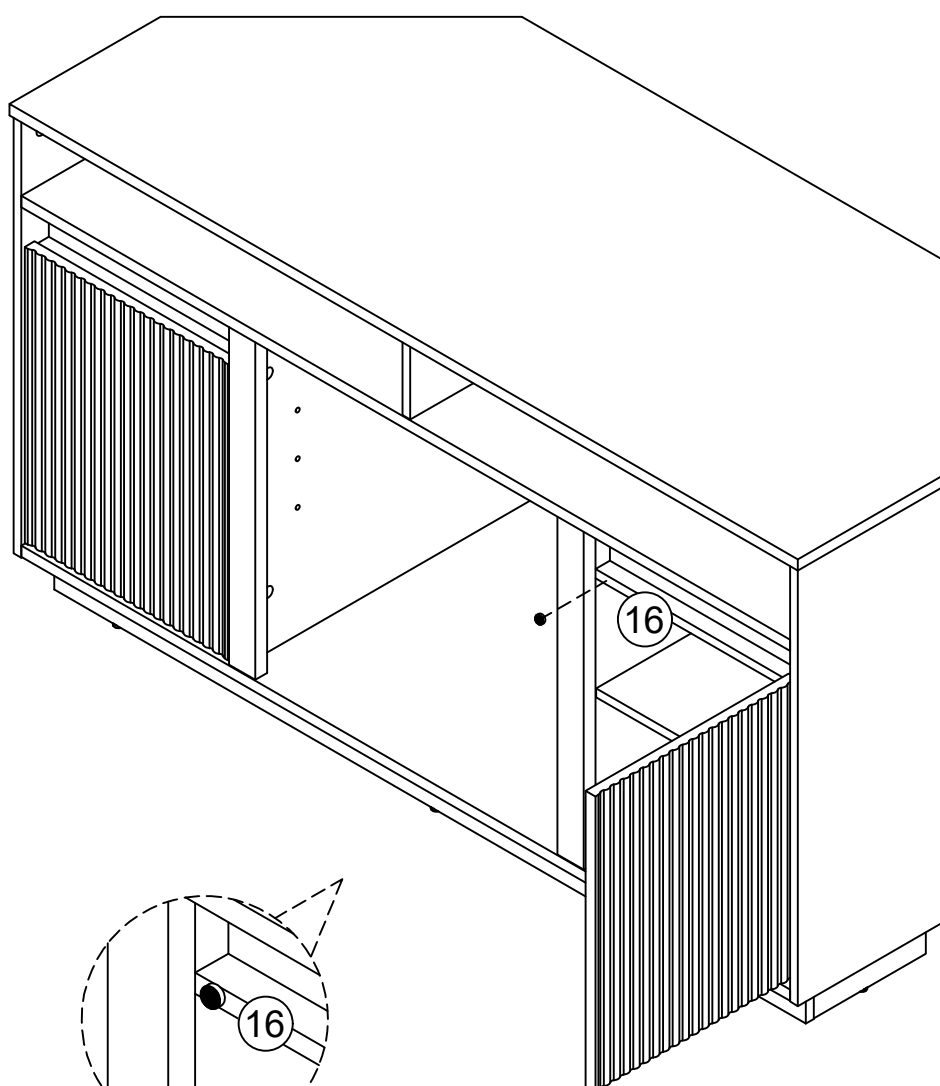





32

Installation Method 1

E Ø6




4 PCS

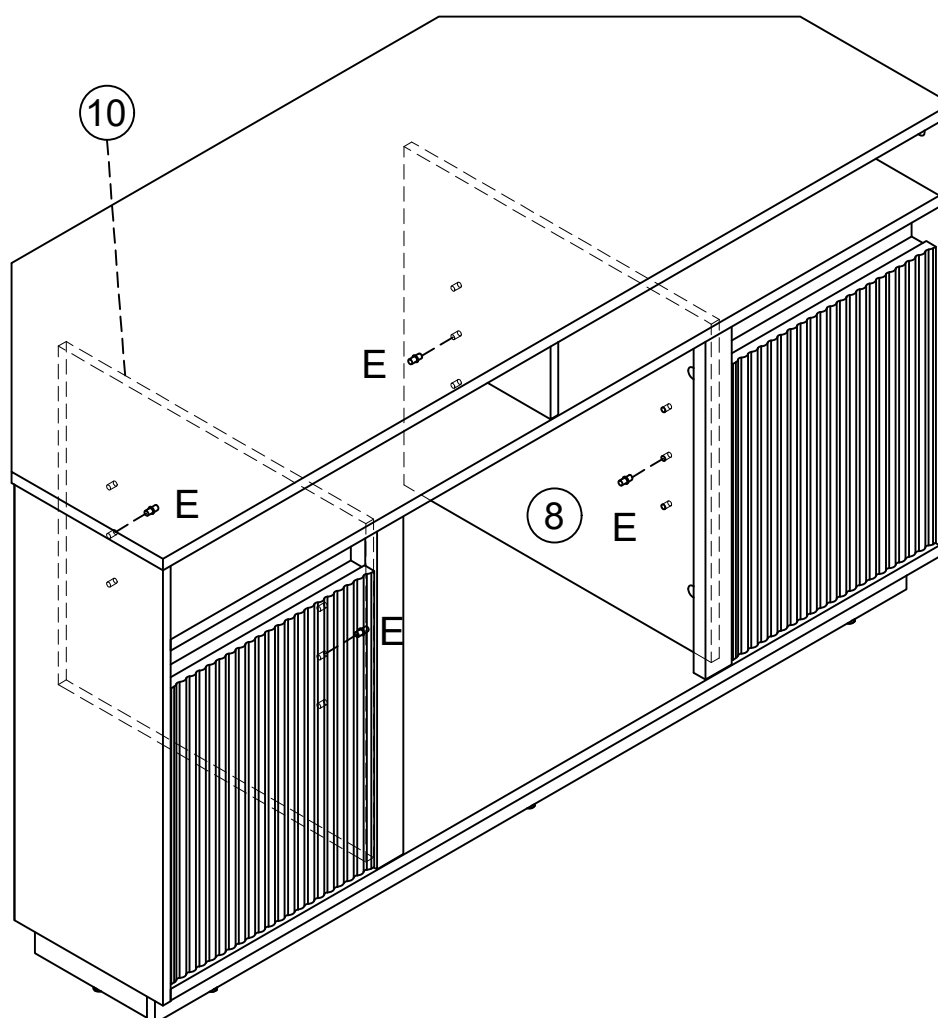



33

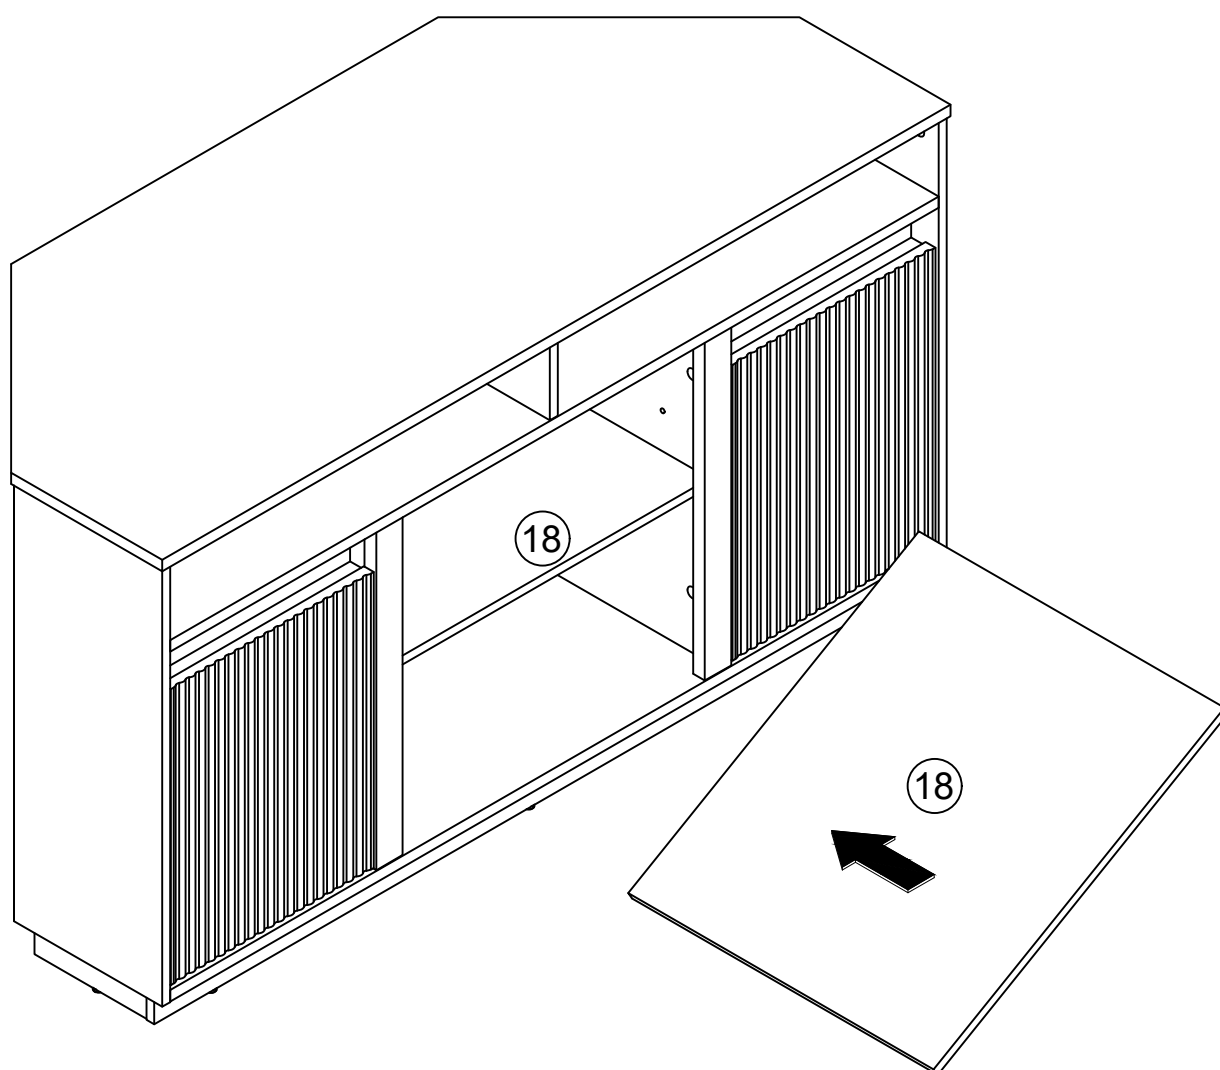





P.35

34

J Ø22x1




10 PCS

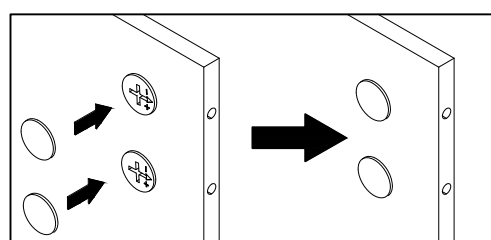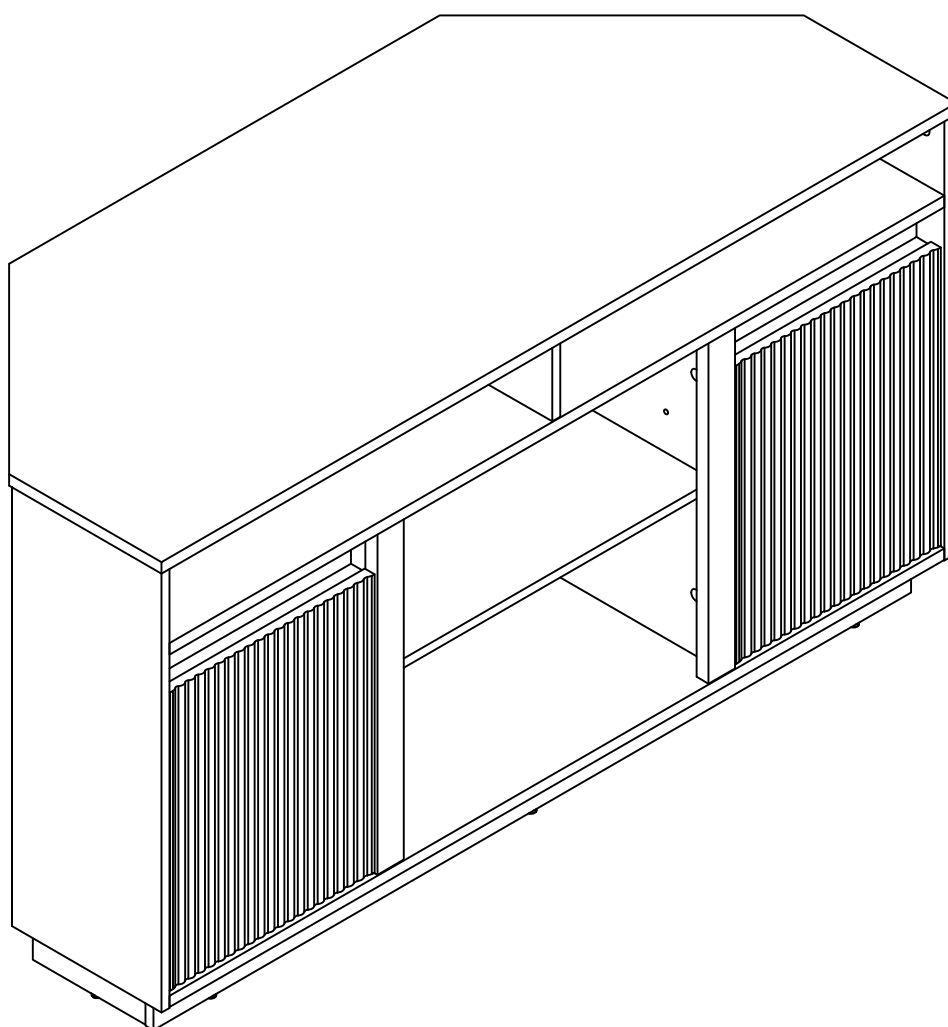


35

Installation Method 2

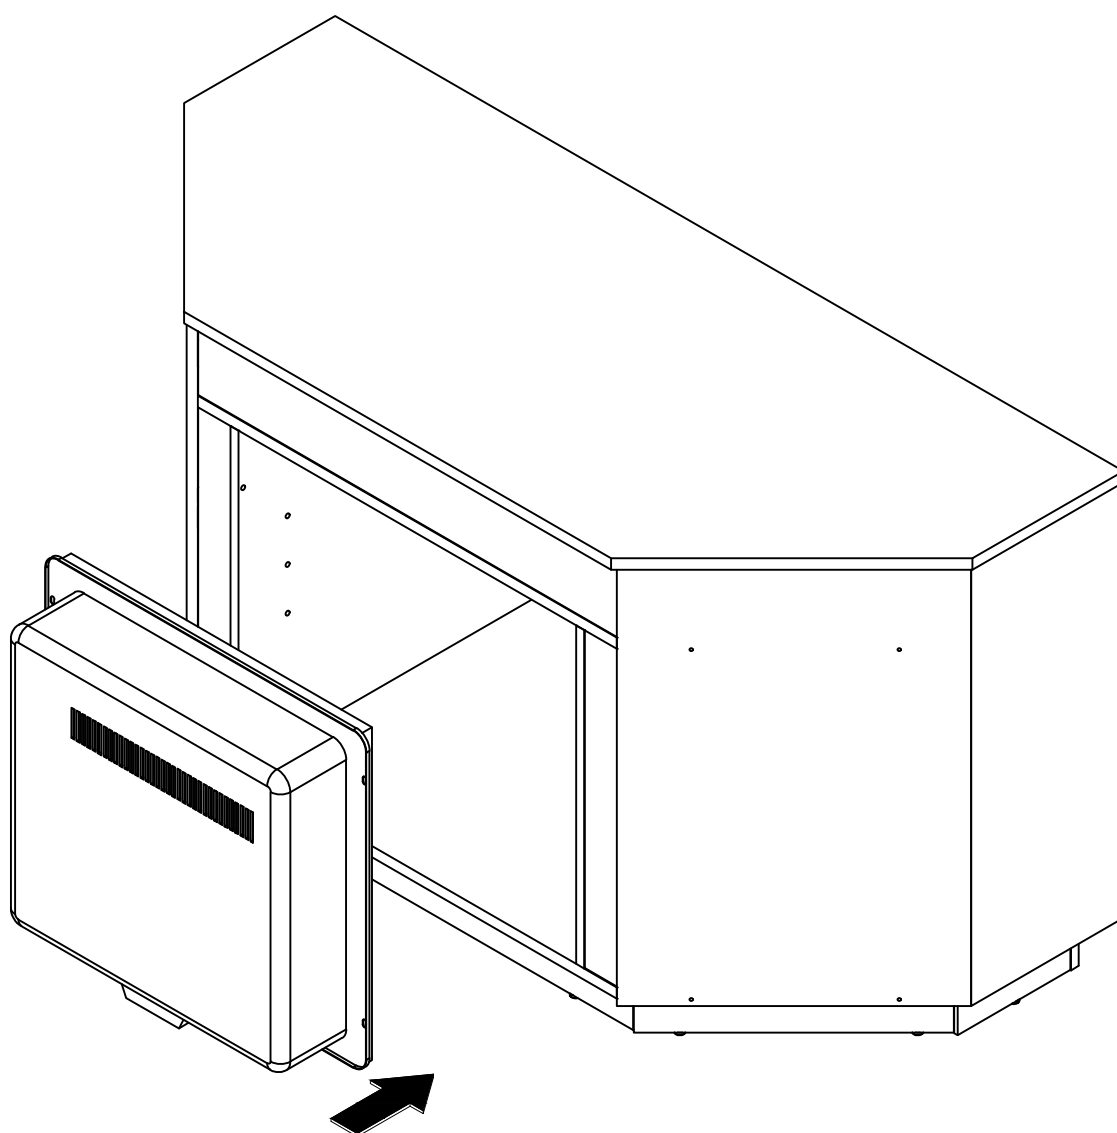


36

L M3.5x14



4 PCS

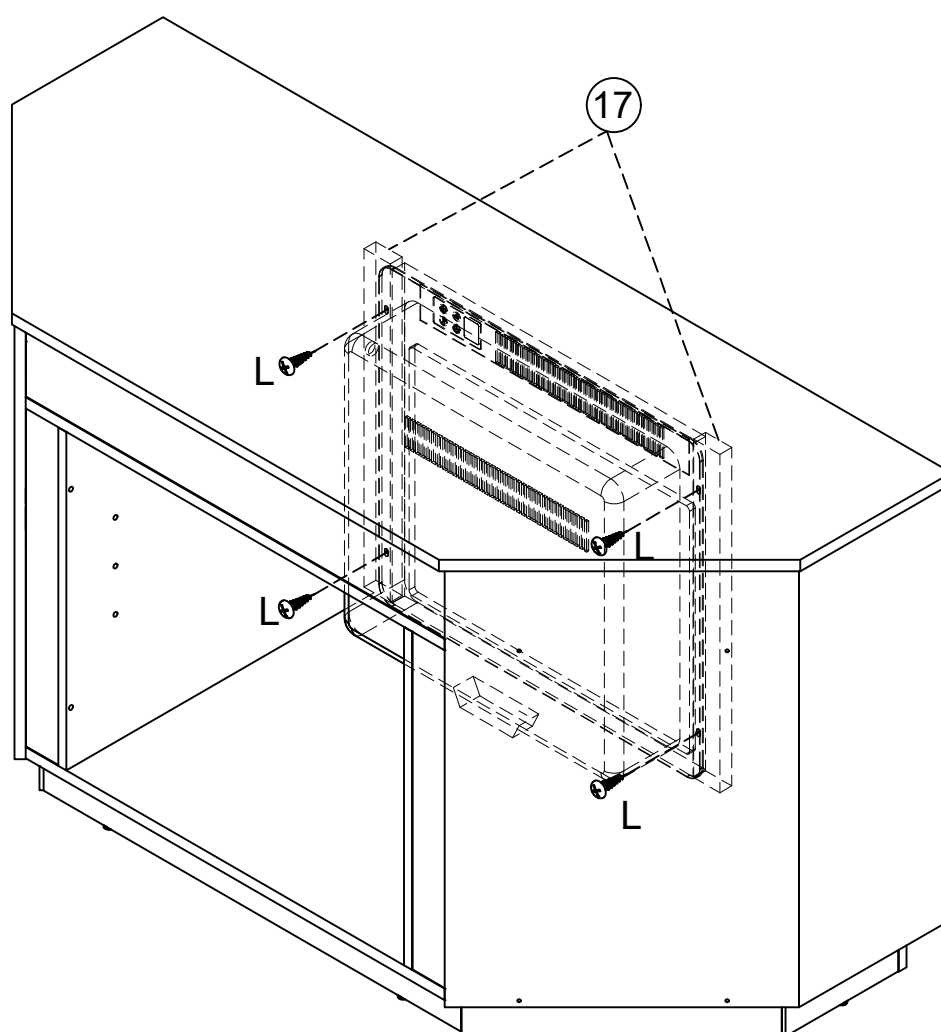

37

