


# ASSEMBLY INSTRUCTION

ITEM: N715P233804

## **Storage Bench**

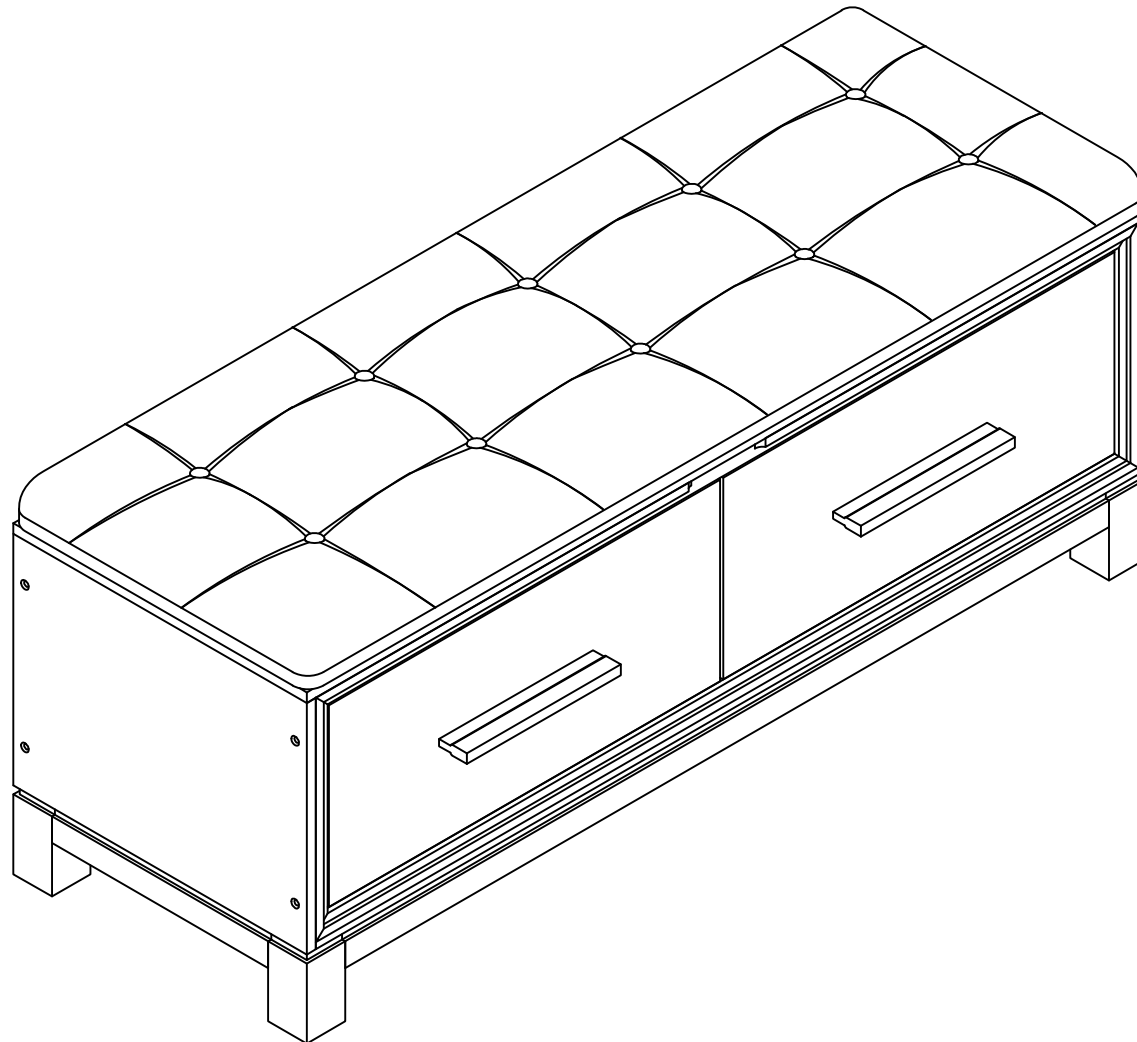

# ASSEMBLY INSTRUCTION

## \*Important - Please read these instructions fully before starting assembly

+ Check you have all the components and tools listed on the following pages

+ Remove all fittings from the plastic bags and separate them into their groups.

+Keep children and animals away from the work area, small parts could choke if swallowed.


+ Make sure you have enough space to layout the parts before starting.

+During assembly do not stand or put weight on the product, this could cause damage

+Assemble the item as close to its final position (in the same room) as possible.

+Assemble on a soft level surface to avoid damaging the unit or your floor.

+Parts of the assembly will be easier with 2 people.

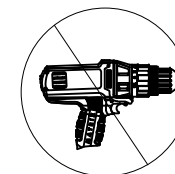

+To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

## \*Care and maintenance

+Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

+From time to time check that there are no loose screws on this unit.


+This product should not be discarded with household waste. Take to your local authority waste disposal centre

## \*Handy Hints

+Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


+Regularly check and ensure That all bolts and fittings are tightend properly.

# ASSEMBLY INSTRUCTION

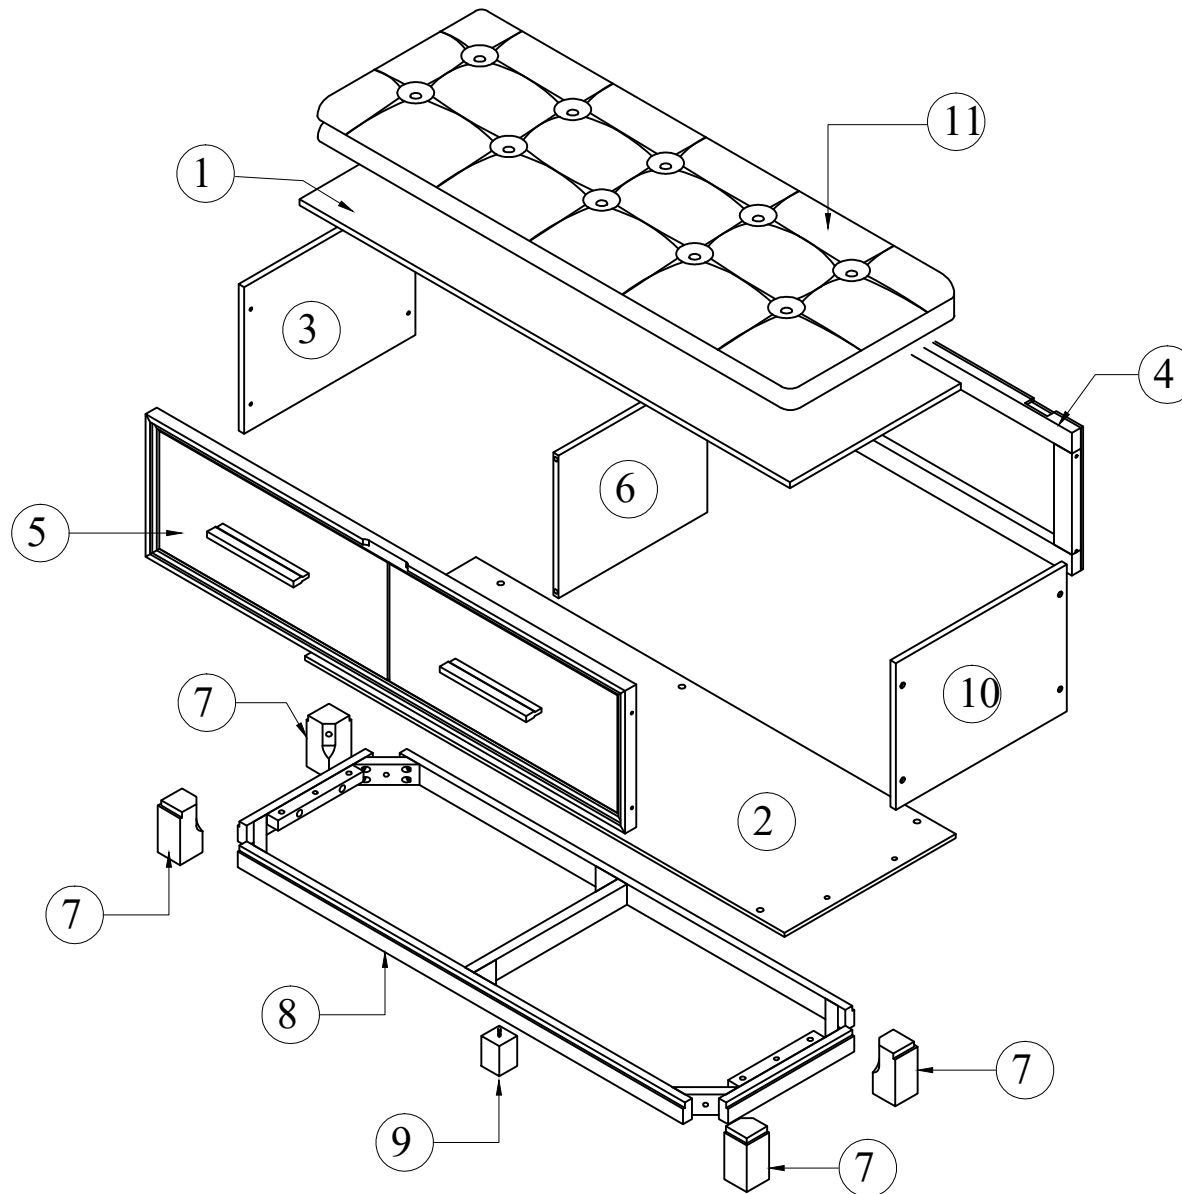


# CARTON CONTENT N715P233804

① x 1

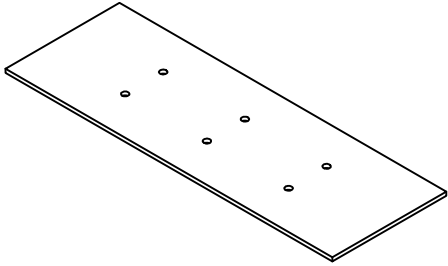


Top panel

④ x 1

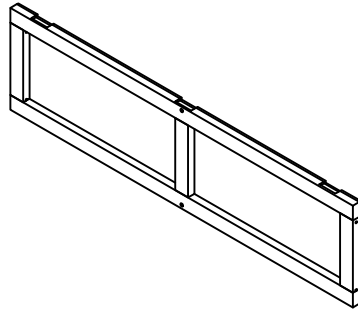


Back panel

⑦ x 4




Legs

⑩ x 1

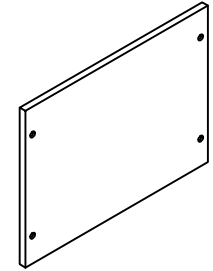


Right panel

② x 1

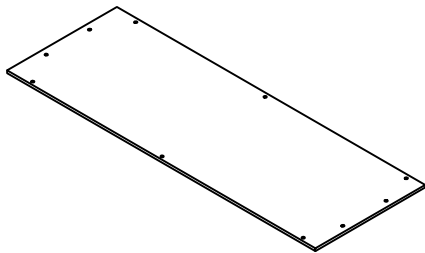


Bottom panel

⑤ x 1

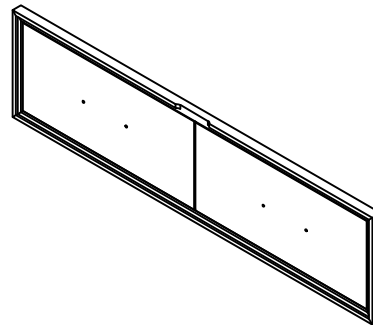


Front panel

⑧ x 1

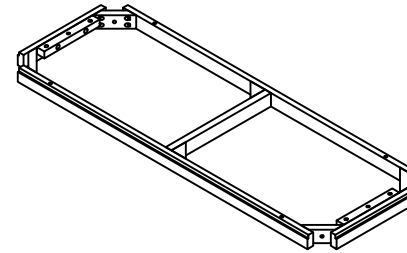


Wooden base frame

⑪ x 1

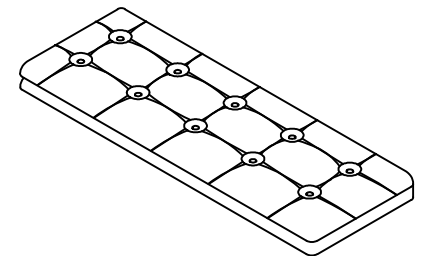


Seat cushion

③ x 1

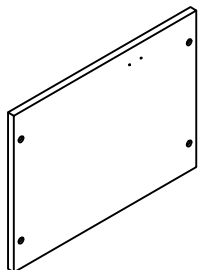


Left panel

⑥ x 1

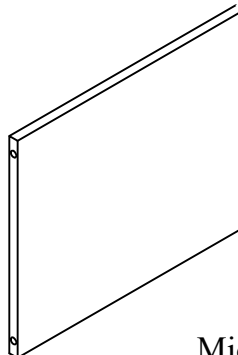

Middle panel

⑨ x 1






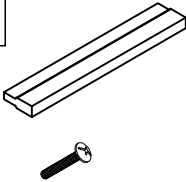
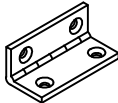
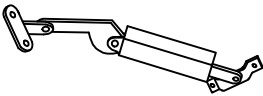

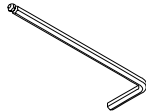


Support legs


HARDWARE

# ASSEMBLY INSTRUCTION

## HARDWARE LIST

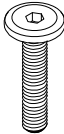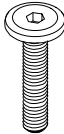
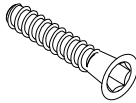
<b>A</b>  <p>1/4x40mm Bolt (4pcs)</p>	<b>B</b>  <p>1/4x25mm Bolt (4pcs)</p>	<b>C</b>  <p>7x40mm Bolt (14pcs)</p>	<b>D</b>  <p>M3.5*12mm Screw (24pcs)</p>
<b>E</b>  <p>Dowel Ø8*20 (6pcs)</p>	<b>F</b>  <p>Handle (2pcs) 5/32x15mm Bolt (4pcs)</p>	<b>G</b>  <p>Leaf hinge (3pcs)</p>	<b>H</b>  <p>Shock absorber ( 2pcs )</p>
<b>I</b>  <p>Metal pat (2pcs)</p>	<b>L</b>  <p>Allen Key (1pc)</p>		

## Tool required

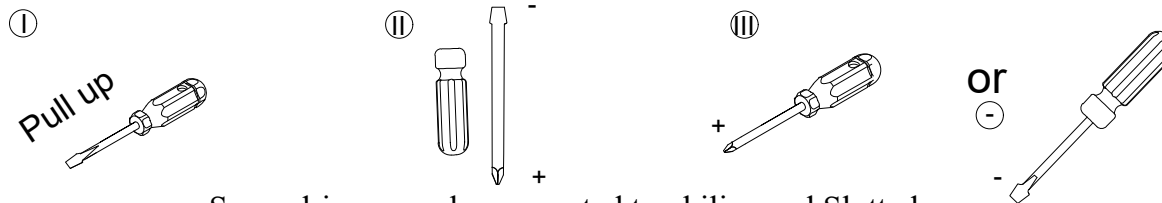

Screwdrivers can be converted to philips and Slotted


Ruler - Use this ruler to help correctly identify the screws





The screw length is measured from the head to th point (35mm screw shown)

# ASSEMBLY INSTRUCTION

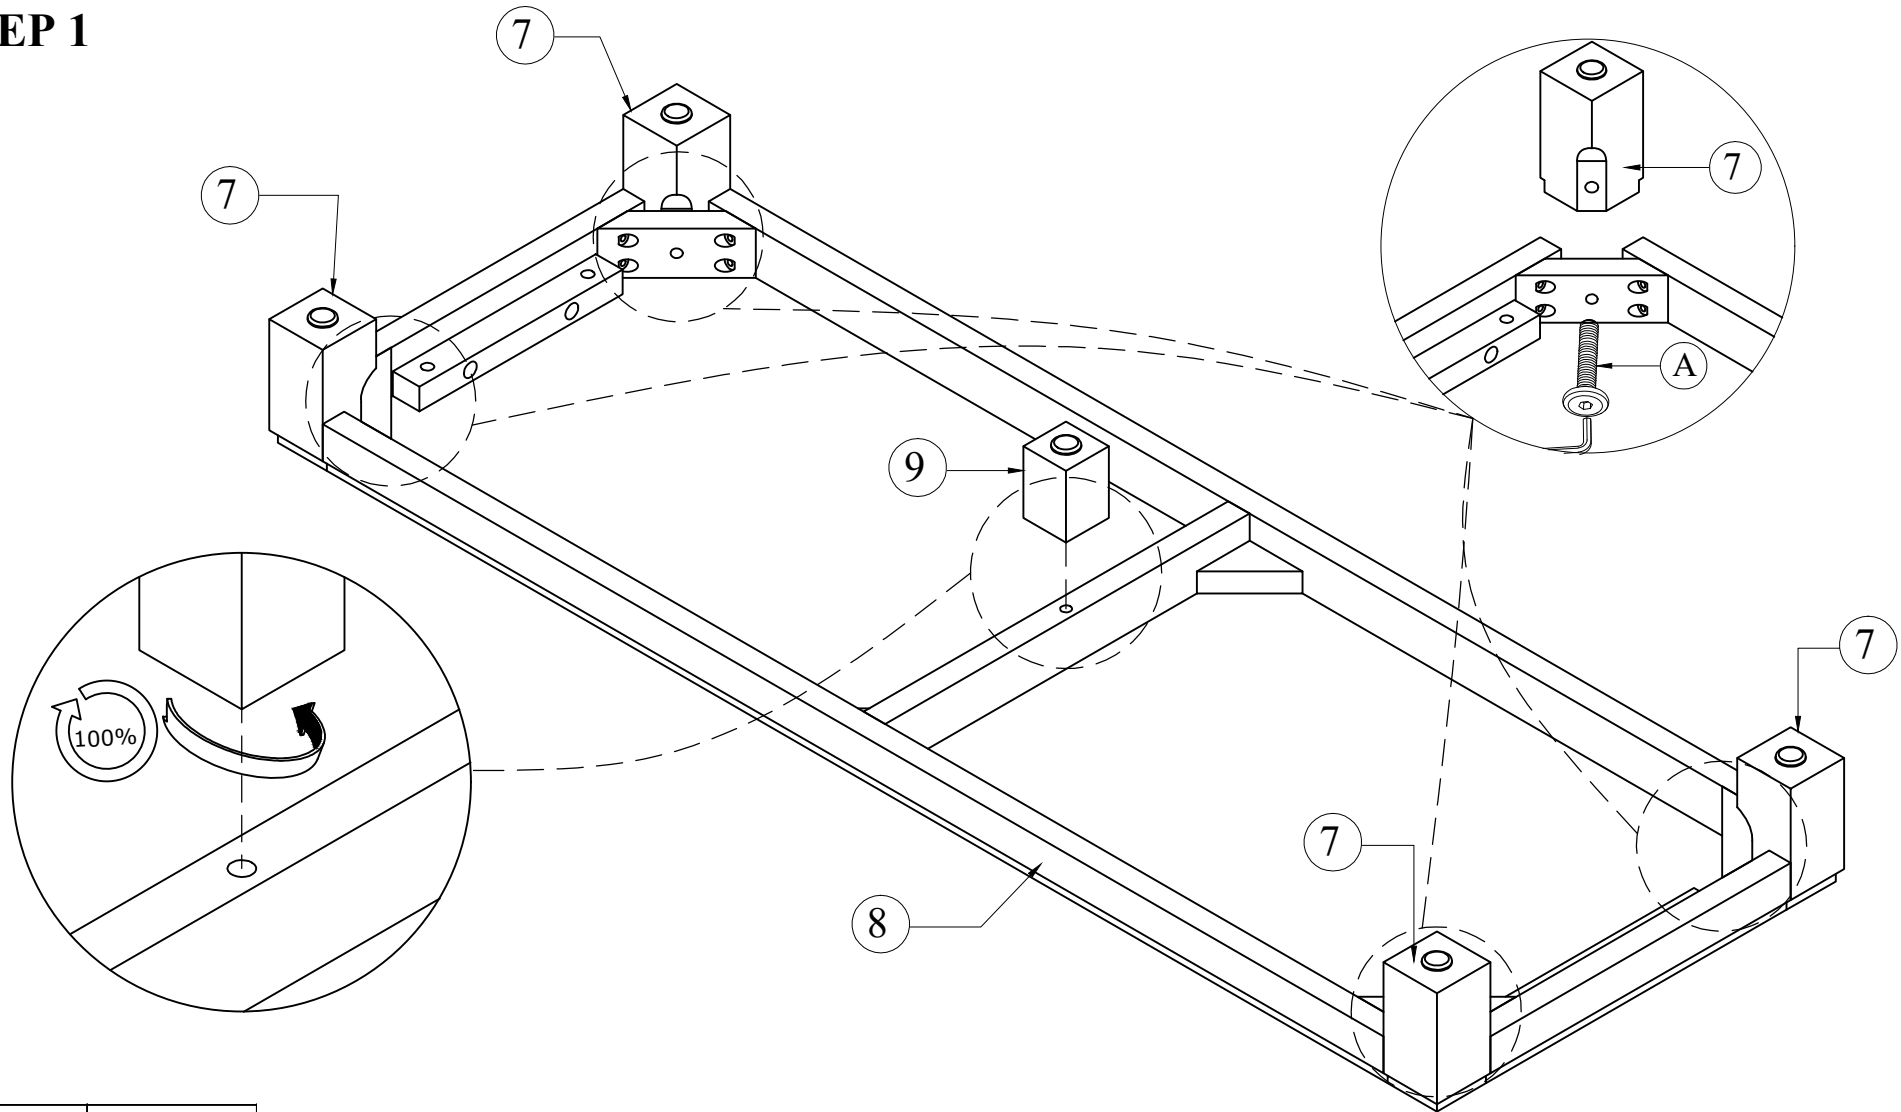
## STEP 1



	
1/4x40mm	Allen Key
A x 4	L x 1

# ASSEMBLY INSTRUCTION

## STEP 2

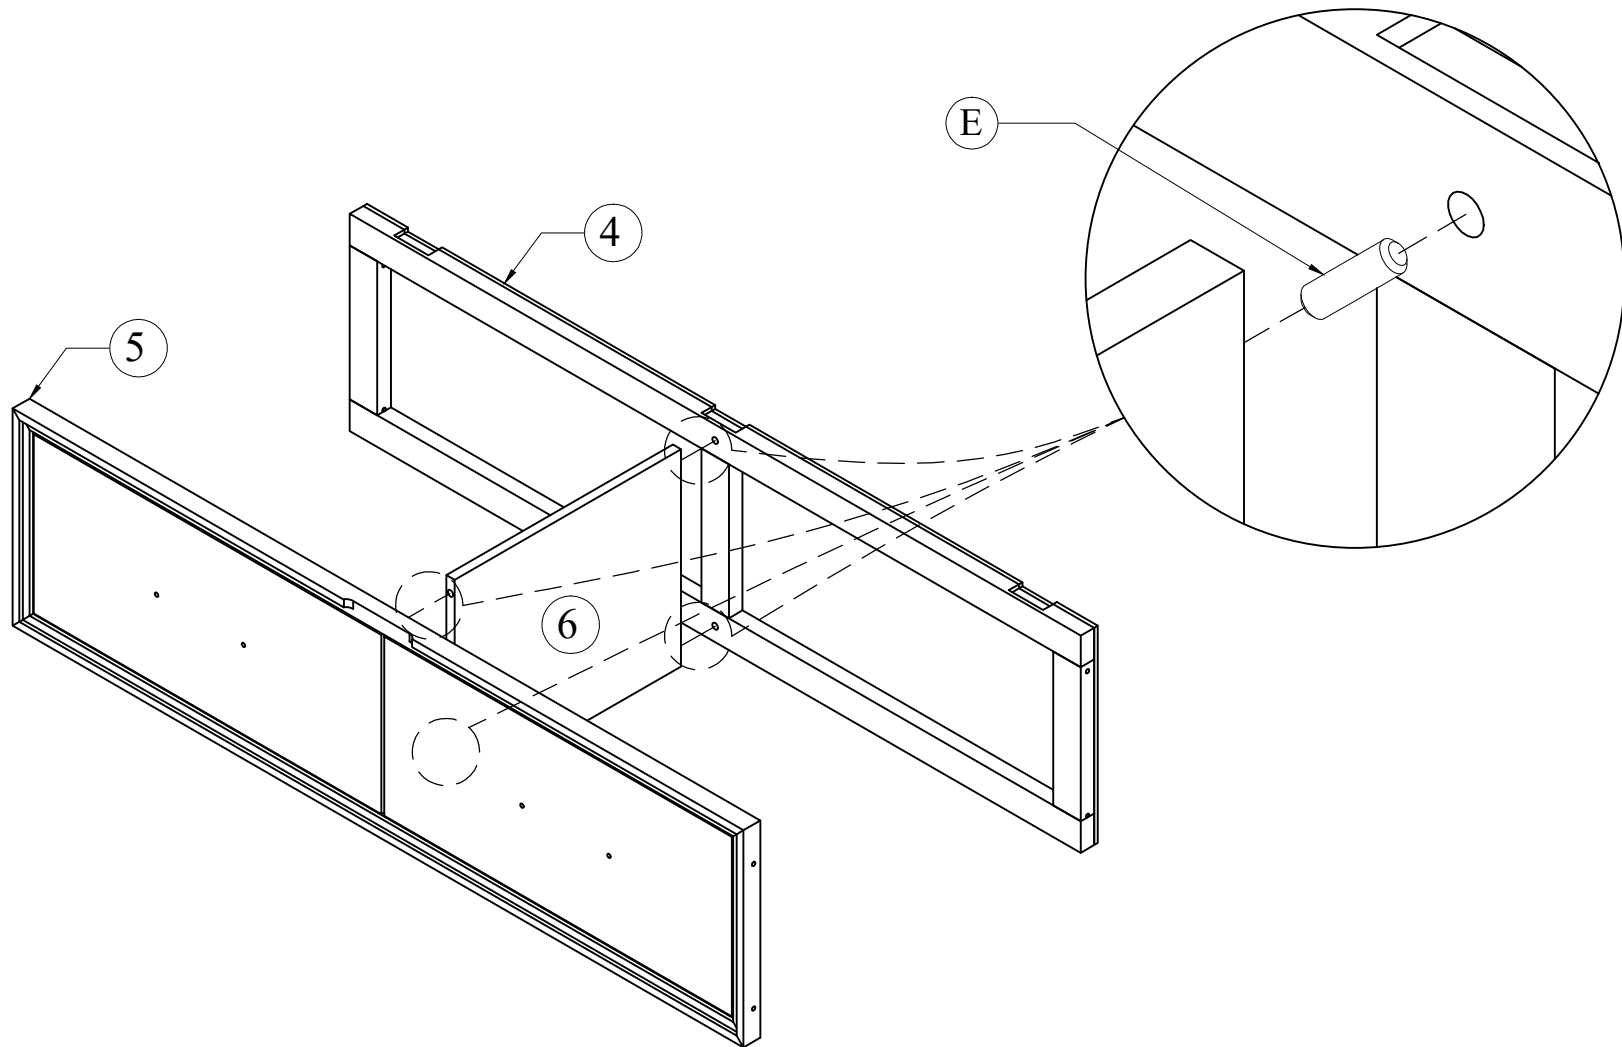


Dowel Ø8\*20

E x 4

# ASSEMBLY INSTRUCTION

## STEP 3

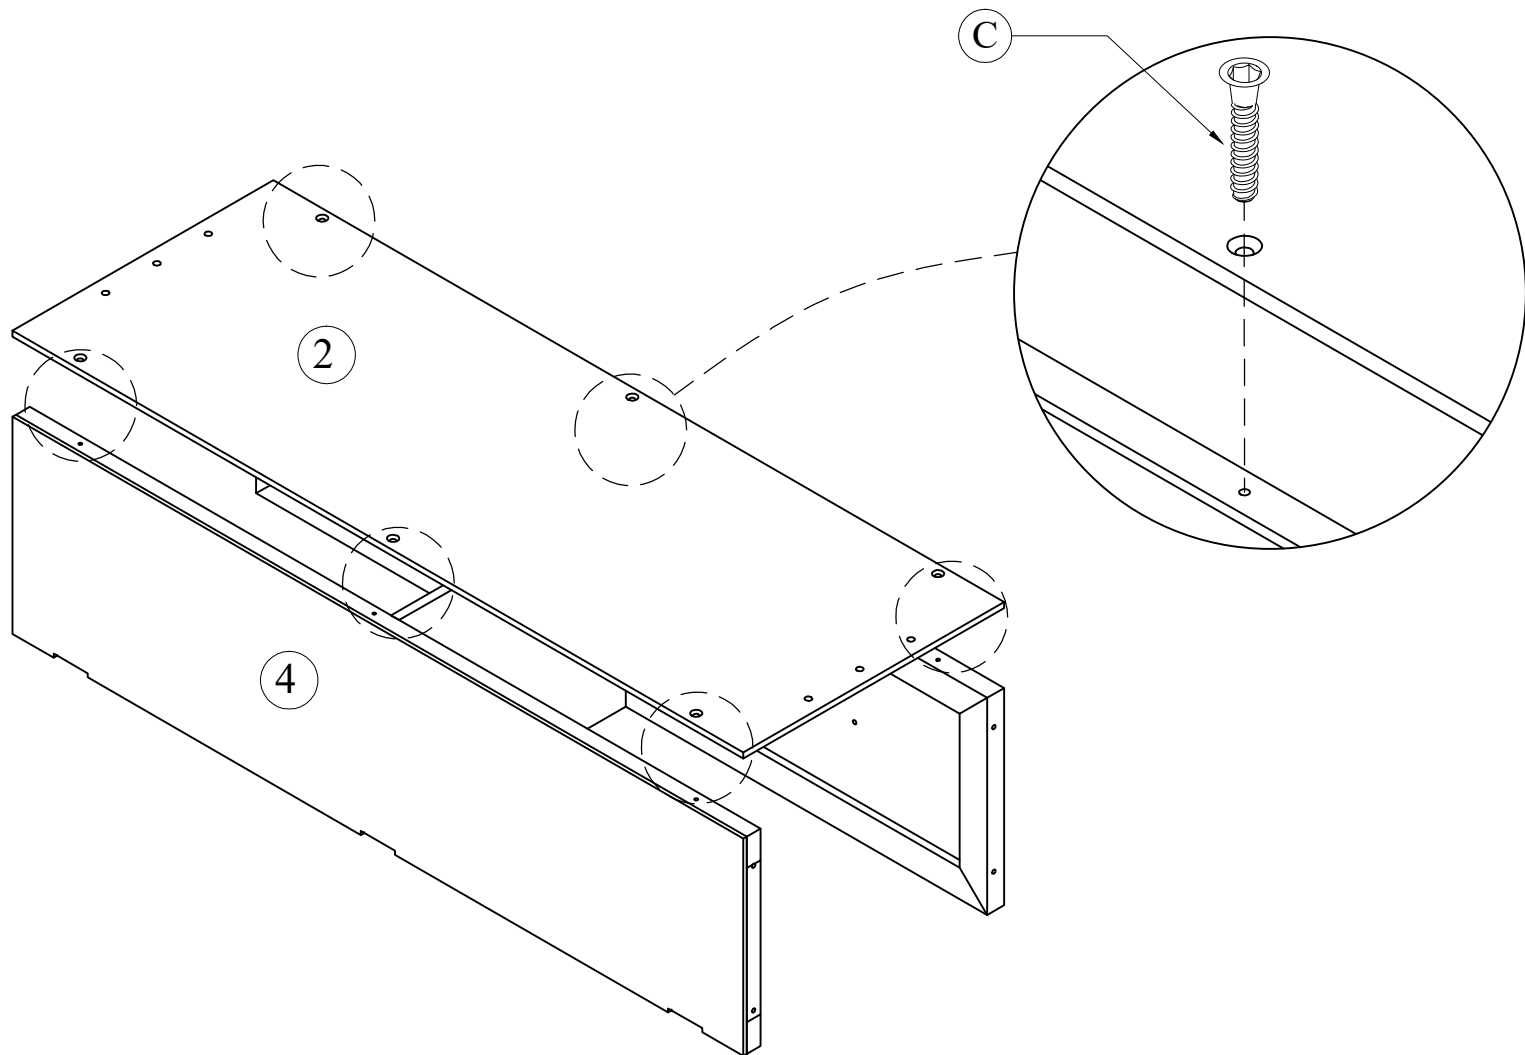


Bolt 7\*40mm





C x 6



# ASSEMBLY INSTRUCTION


## STEP 4

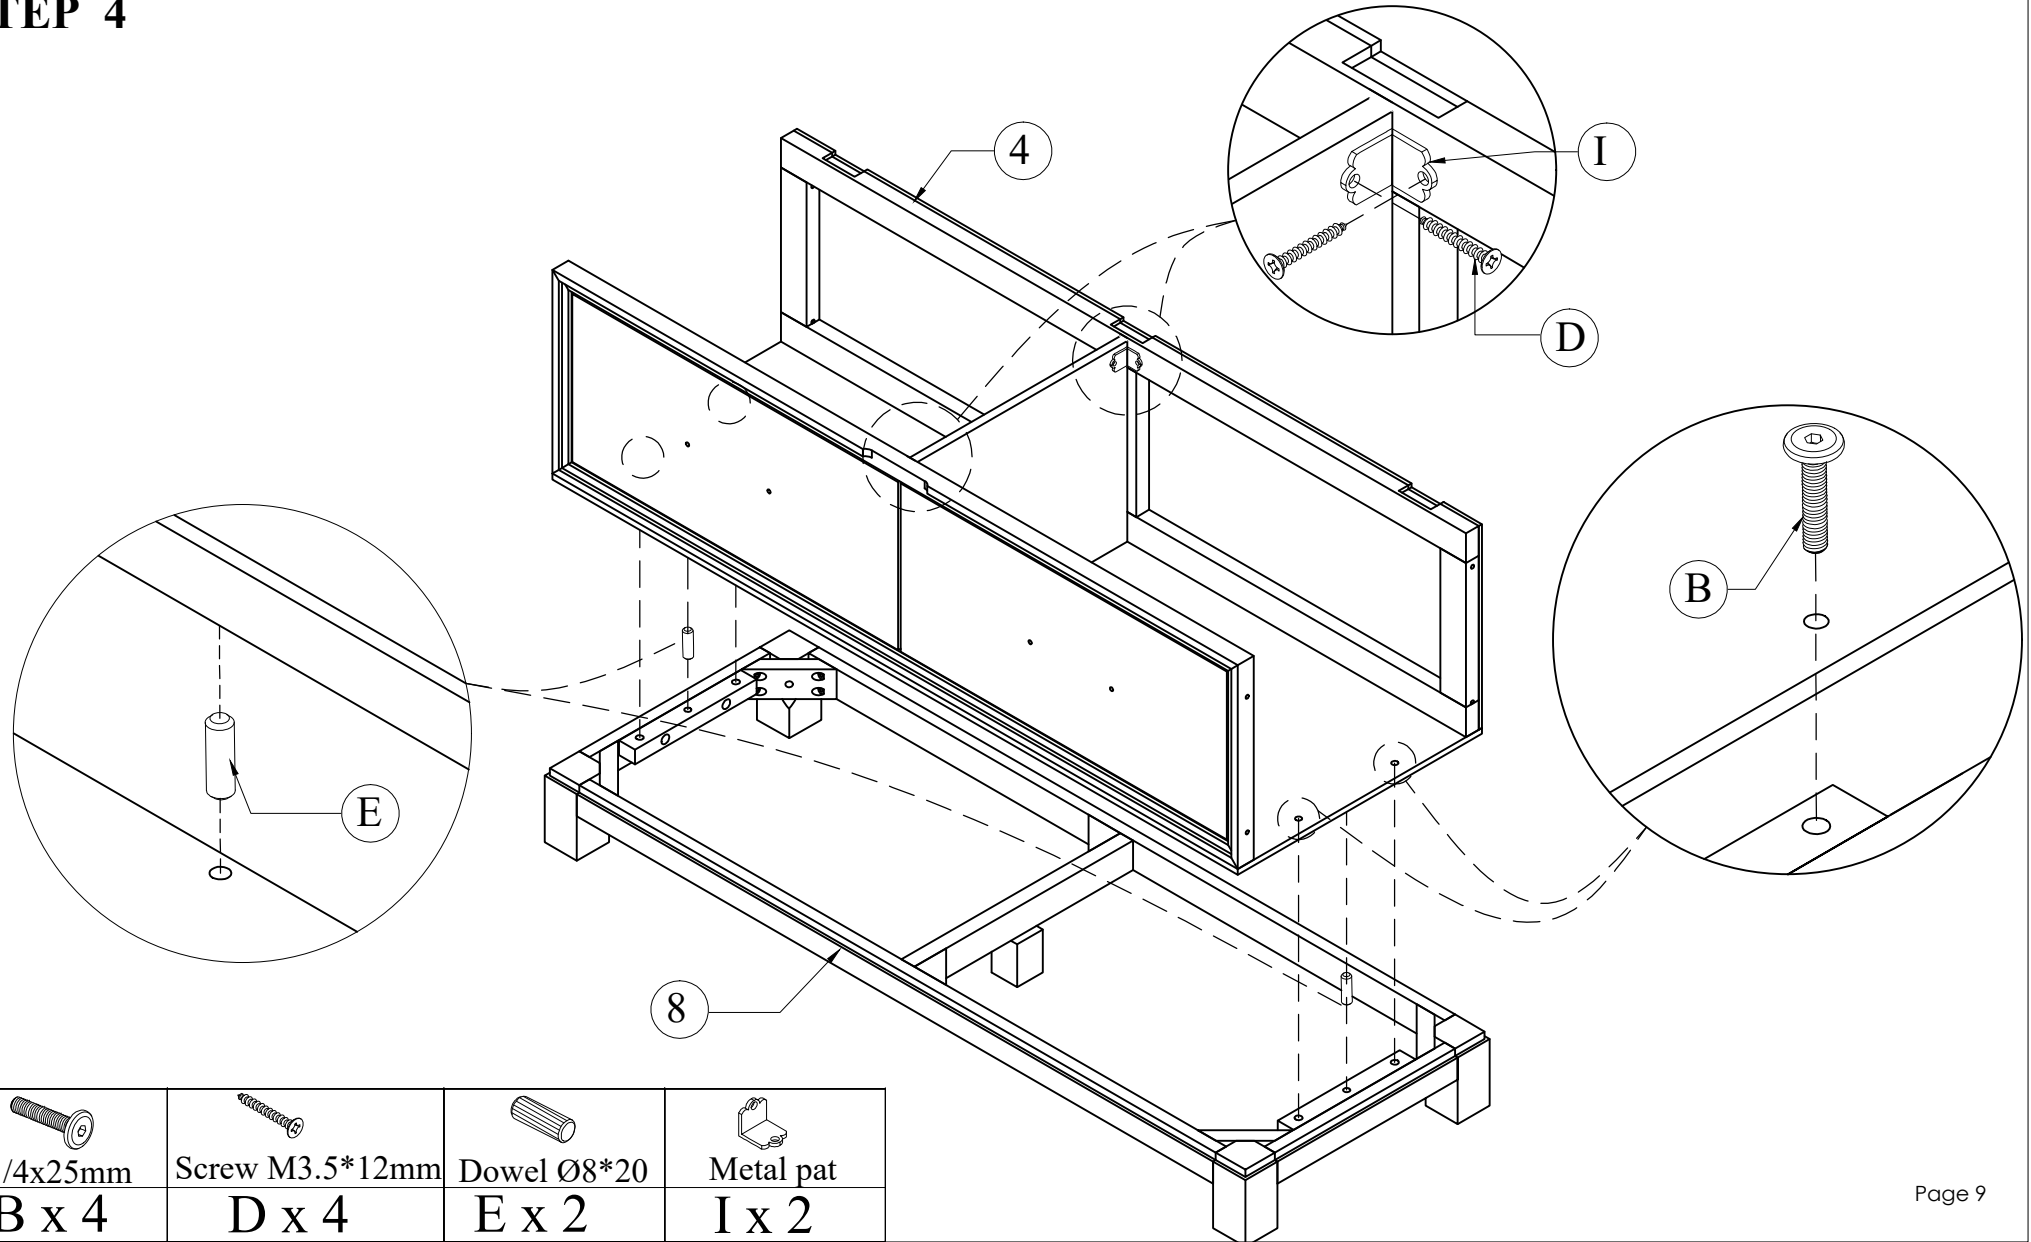




			
1/4x25mm	Screw M3.5*12mm	Dowel Ø8*20	Metal pat
<b>B x 4</b>	<b>D x 4</b>	<b>E x 2</b>	<b>I x 2</b>

# ASSEMBLY INSTRUCTION

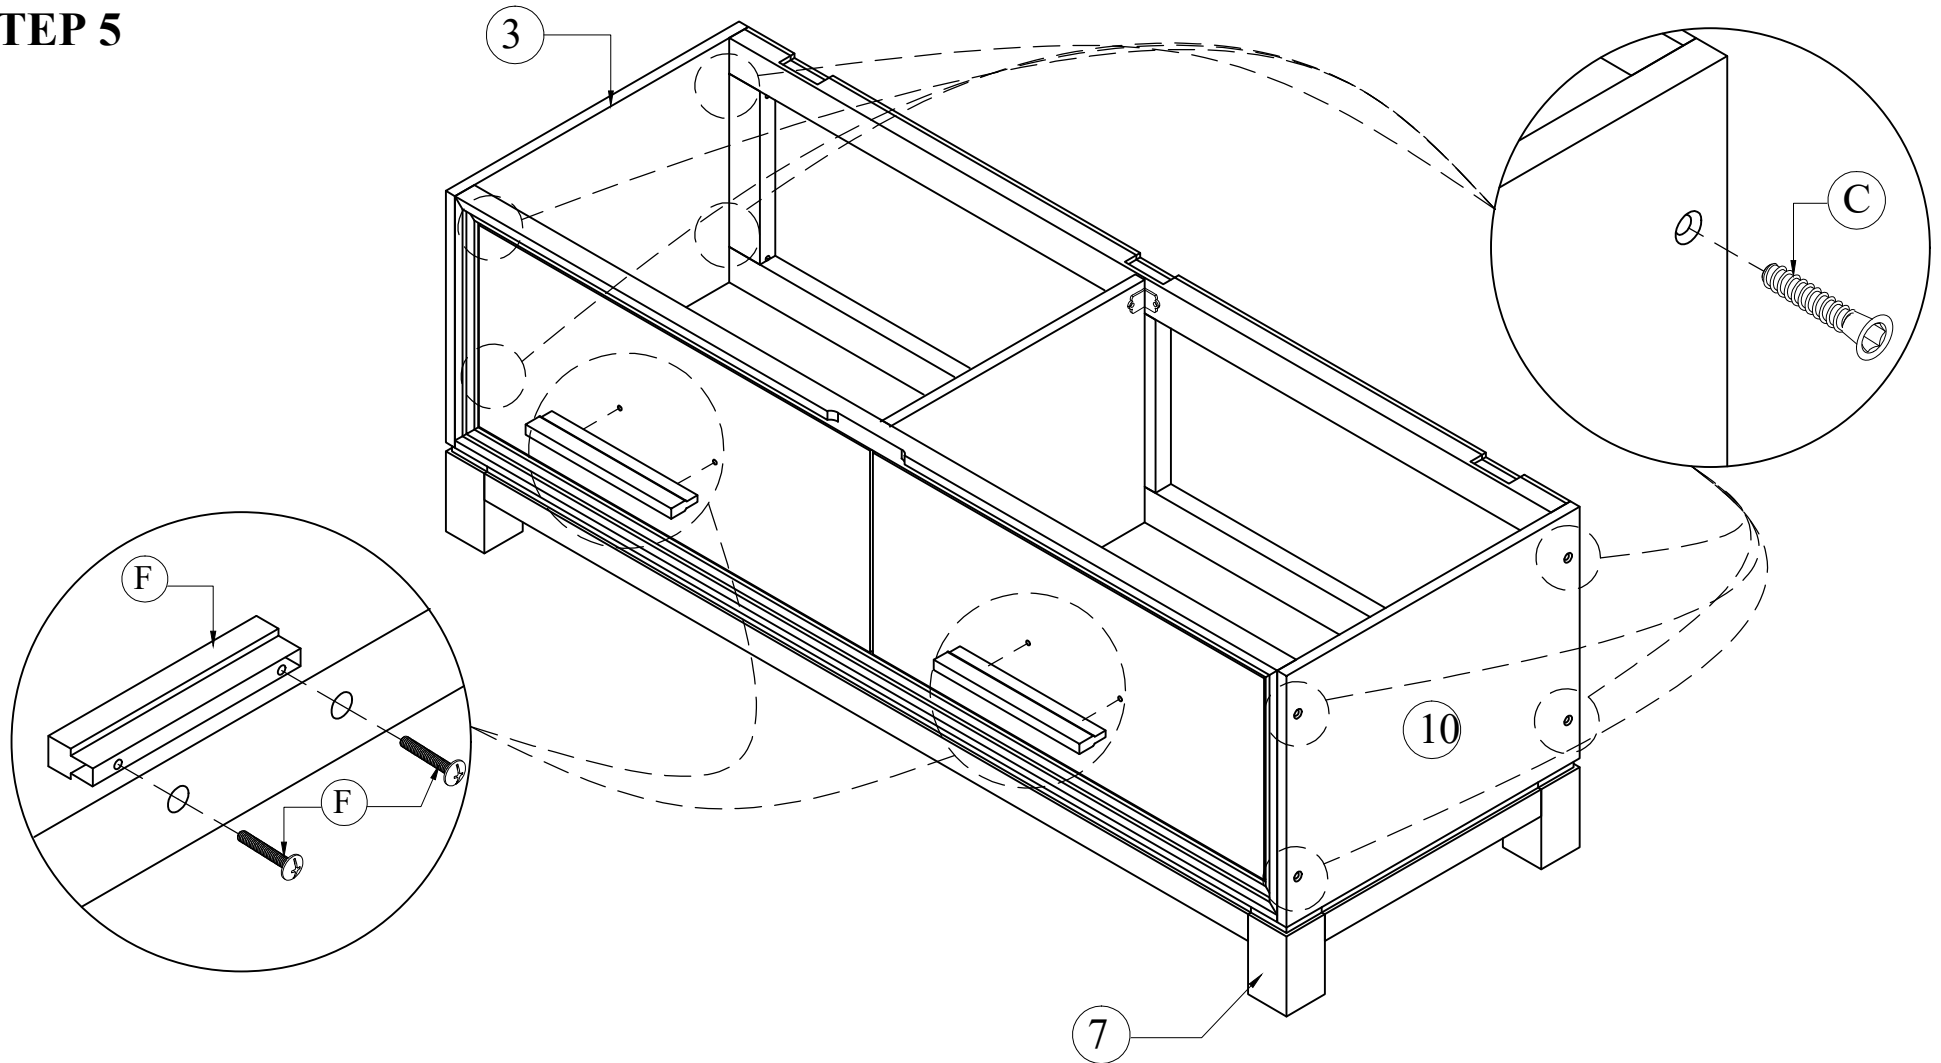
## STEP 5





		
Bolt 7*40mm	Handle	Bolt 5/32x15mm
C x 8	F x 2	

# ASSEMBLY INSTRUCTION


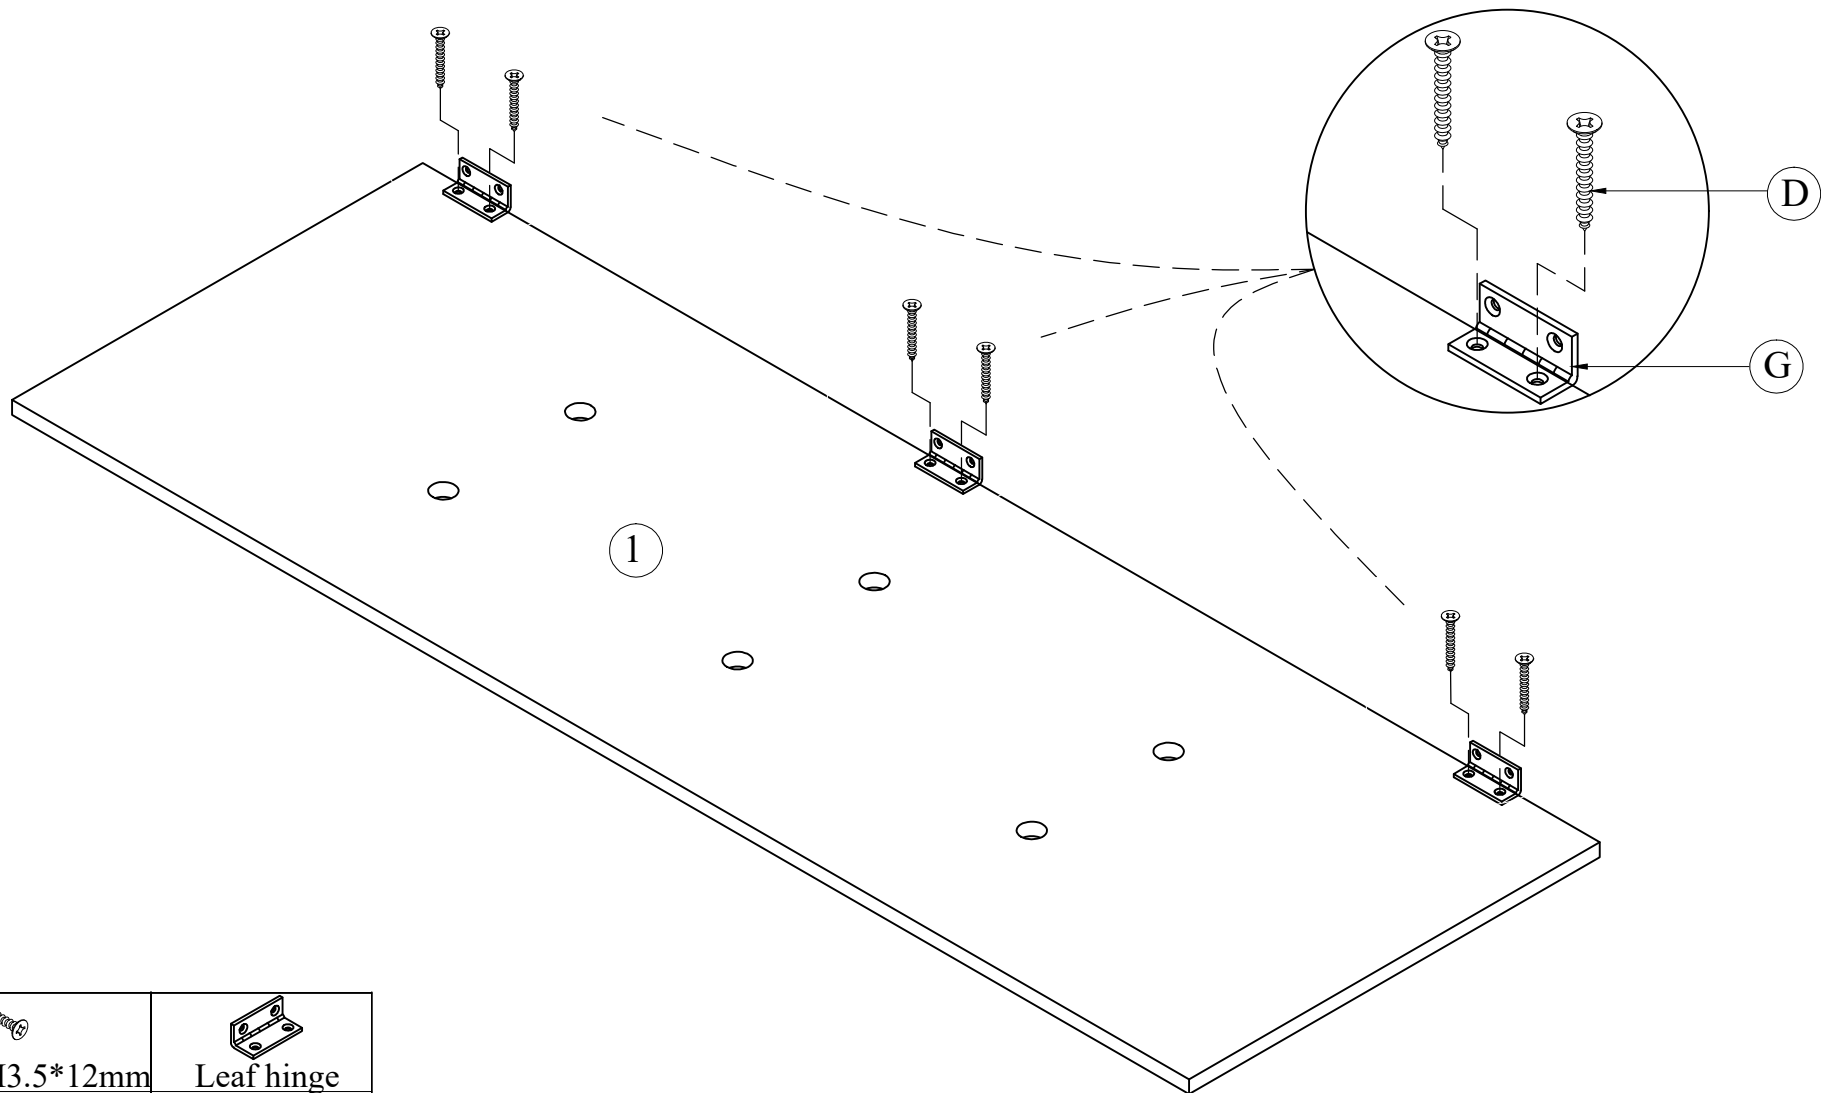
## STEP 6



	
Screw M3.5*12mm	Leaf hinge
D x 6	G x 3


# ASSEMBLY INSTRUCTION

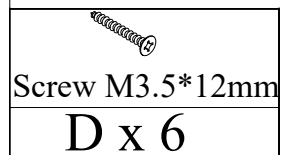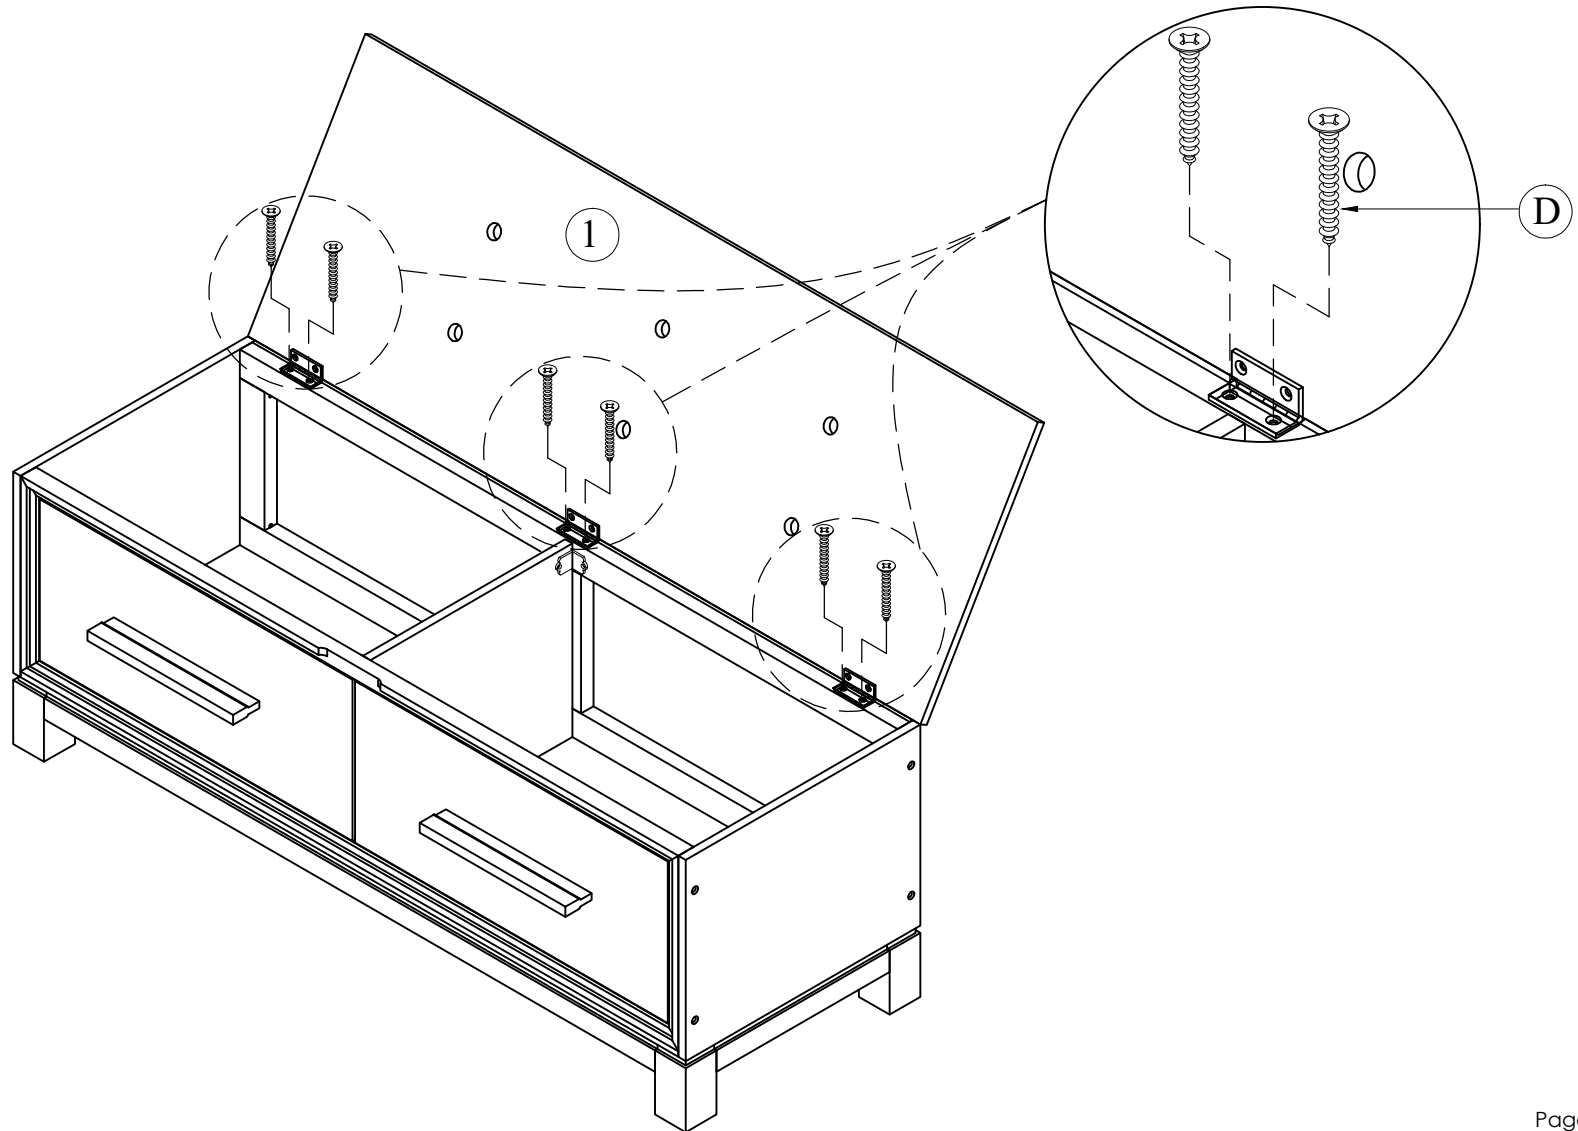

## STEP 7



# ASSEMBLY INSTRUCTION
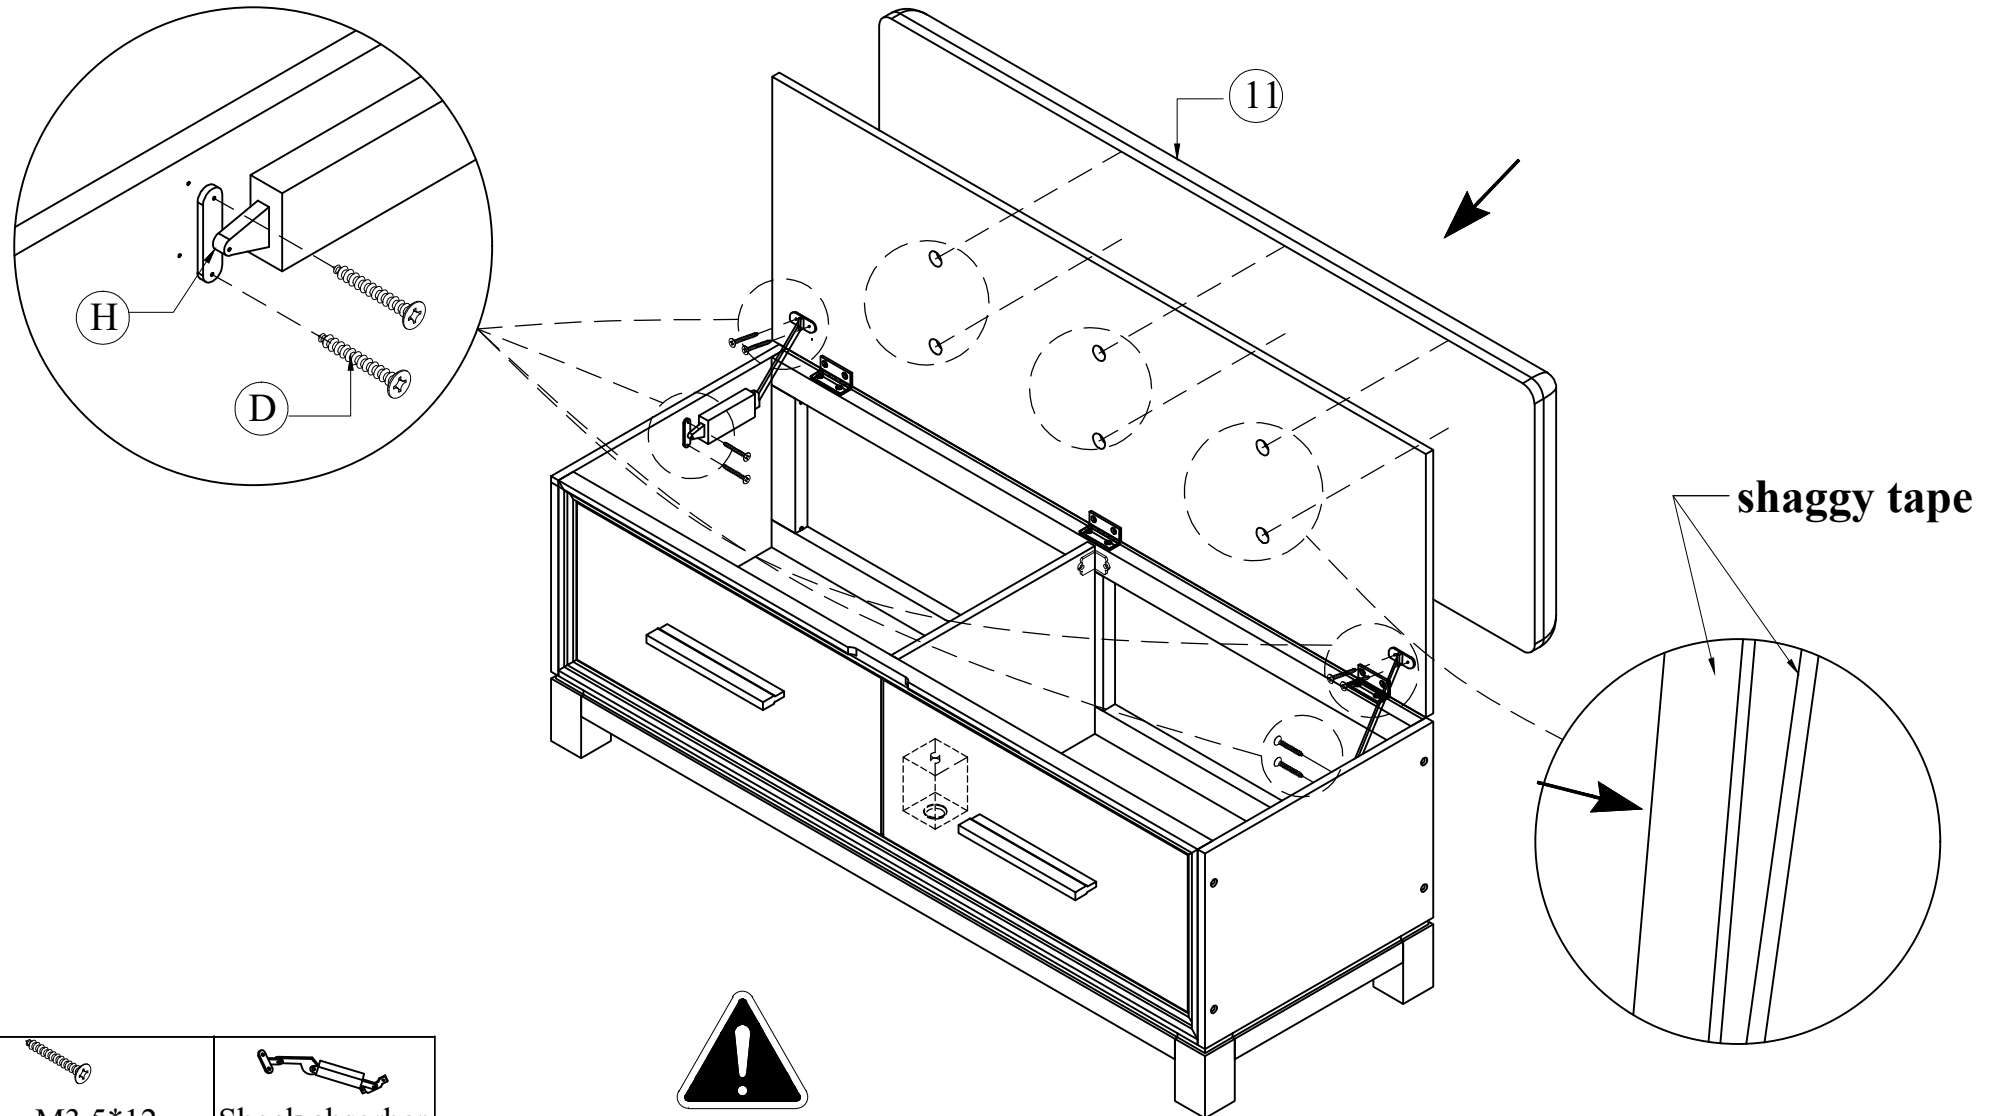
## STEP 8



	
Screw M3.5*12mm	Shock absorber
D x 8	H x 2

Note: After moving your unit to its final location, you can adjust the levelers if needs

# ASSEMBLY INSTRUCTION

## FINISH

