


X-112

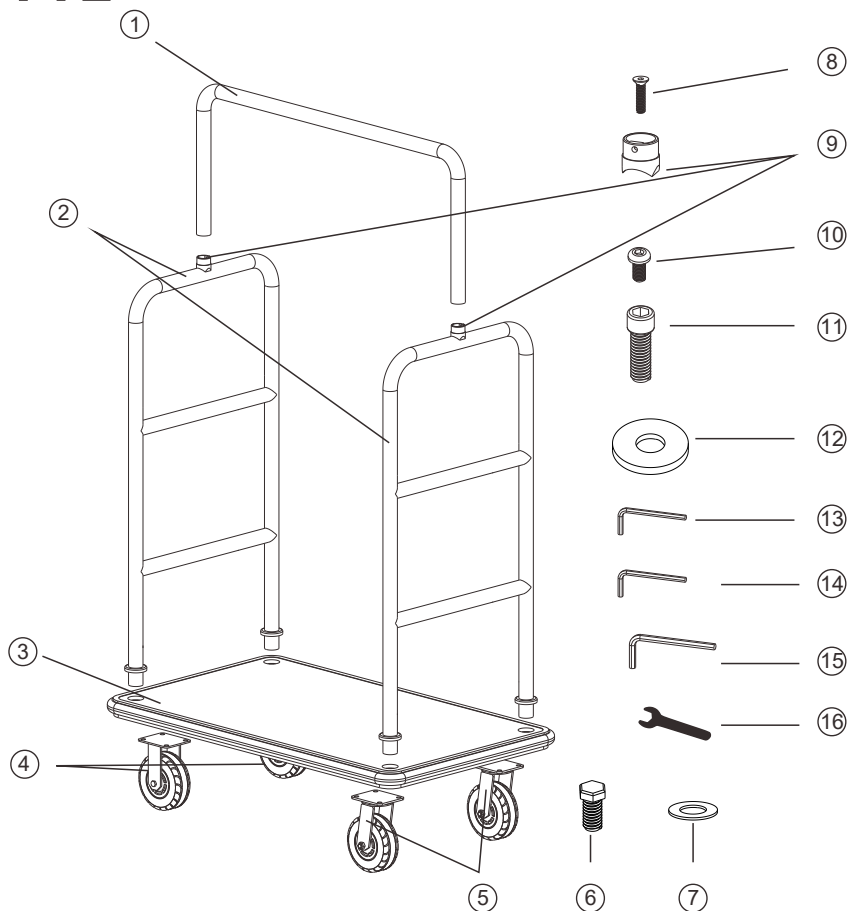


①	Tube1*1	⑨	Fastening *2
②	Tube2*2	⑩	M6*12 HSBHS*2
③	Mounting Plate*1	⑪	M10*30*4
④	8inch DRW*2	⑫	Washers*4
⑤	8 Inch SRW*2	⑬	4mmkey*1
⑥	M8*20 MHB*16	⑭	5mmkey*1
⑦	Washers *16	⑮	8mmkey*1
⑧	M8*30 CHS*2	⑯	14mmOES*1

Assembly Instructions

1. Mount the wheels to the base plate




16

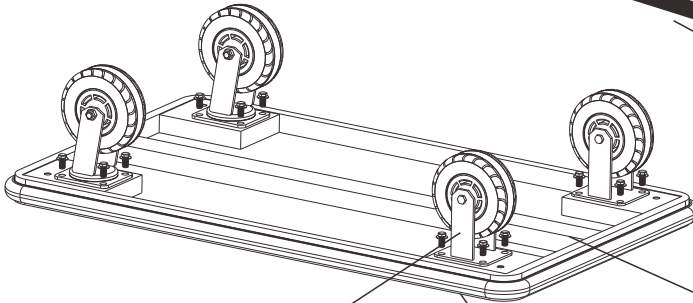

Lay cardboard on floor – avoid soiling carpet & damaging decorative frames


3

plate

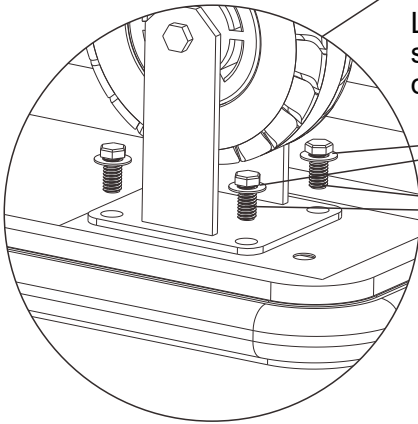


7

6



16 pcs

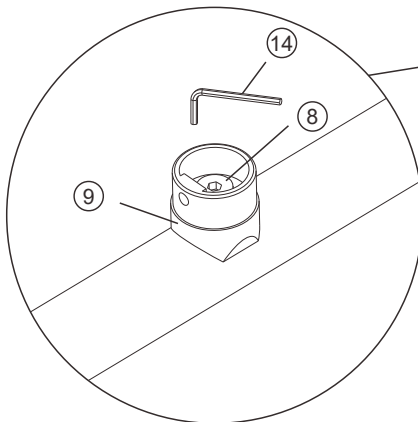


14

8

9


2

8

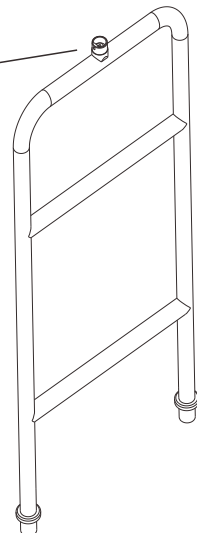

(1) Check & securely fasten Component 9's screws

2.Assm components 1 and 2

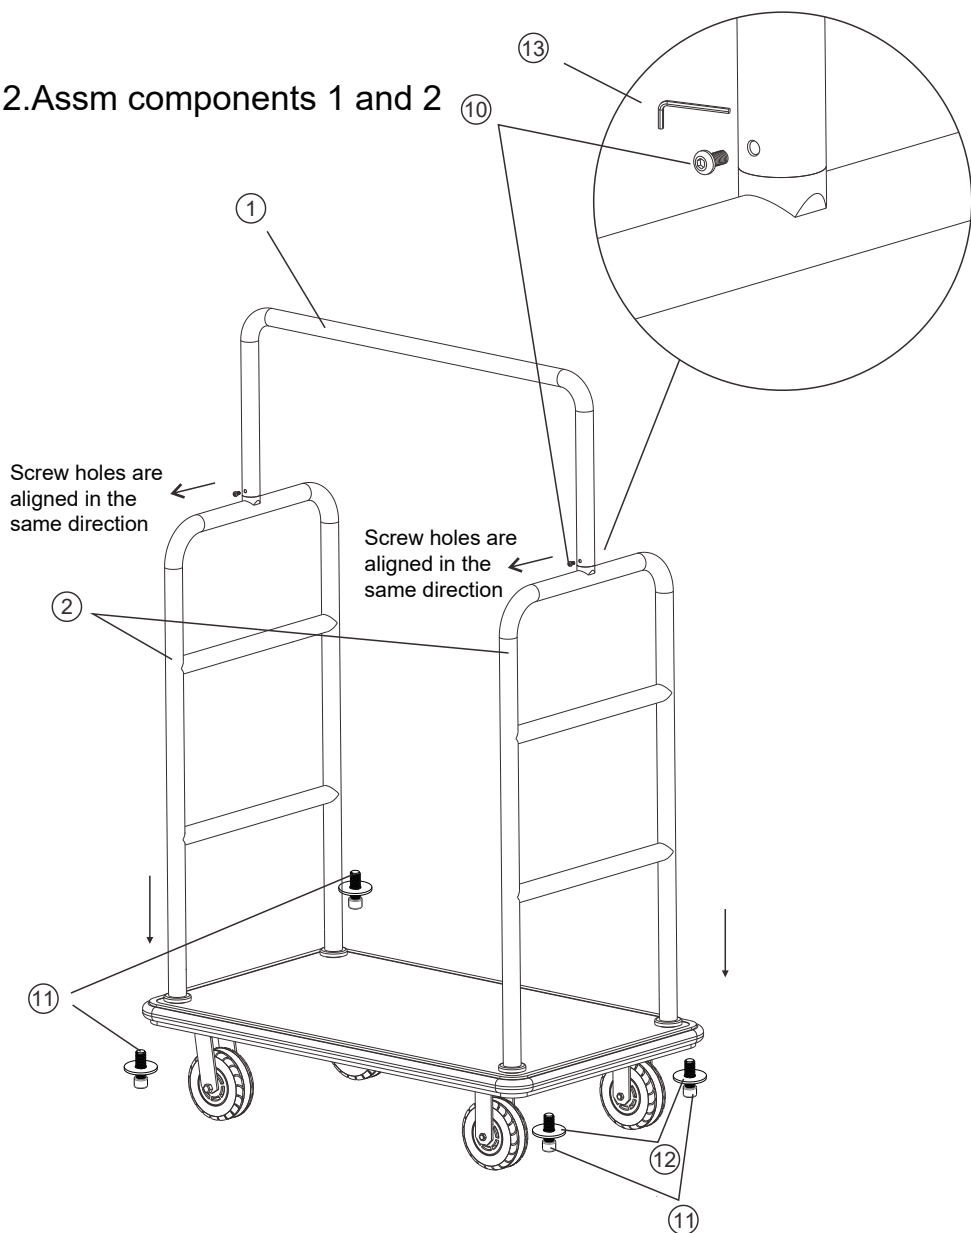

- 1.Place the 2 on to the corresponding holes on the base plate, screwing,Do not tighten it before the holes are all aligned.
- 2.install 1,screwing and tighten it.
- 3.install the wheels with screws and tighten it.