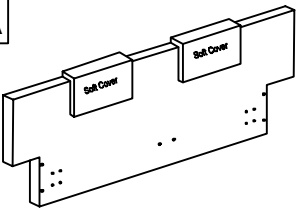
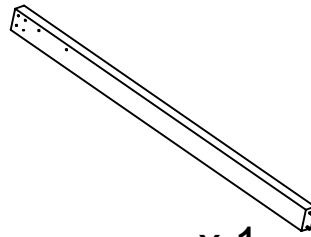
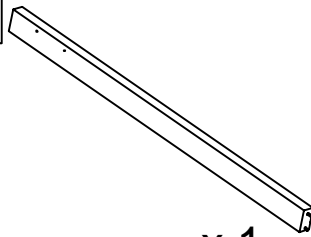
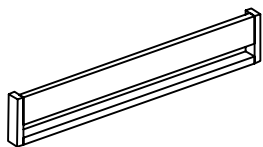
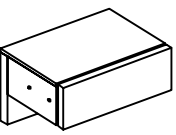
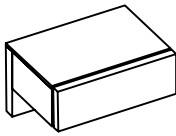













# Assembly Instructions

## BED


### PARTS LIST

<b>A</b>  <b>x 1</b>	<b>B</b>  <b>x 1</b>	<b>C</b>  <b>x 1</b>	<b>D</b>  <b>x 1</b>
<b>E</b>  <b>x 1</b>	<b>F</b>  <b>x 1</b>	<b>G</b>  <b>x 1</b>	<b>H</b>  <b>x 2</b>


### HARDWARES LIST

<b>1</b>  <b>x 36</b> Allen Bolts M8 x 25	<b>2</b>  <b>x 4</b>	<b>3</b>  <b>x 2</b> Allen Wrench M5 x 65	<b>4</b>  <b>x 40</b> Flat Washers M8 x 19	<b>5</b>  <b>x 8</b> Wood Dowels Ø12*40mm
<b>6</b>  <b>x 4</b> Bracket	<b>7</b>  <b>x 6</b> Screws	<b>8</b>  <b>x 4</b> Allen Bolts M8 x 65	<b>9</b>  <b>x 4</b>	<b>10</b>  <b>x 1</b>

### STEP 1:

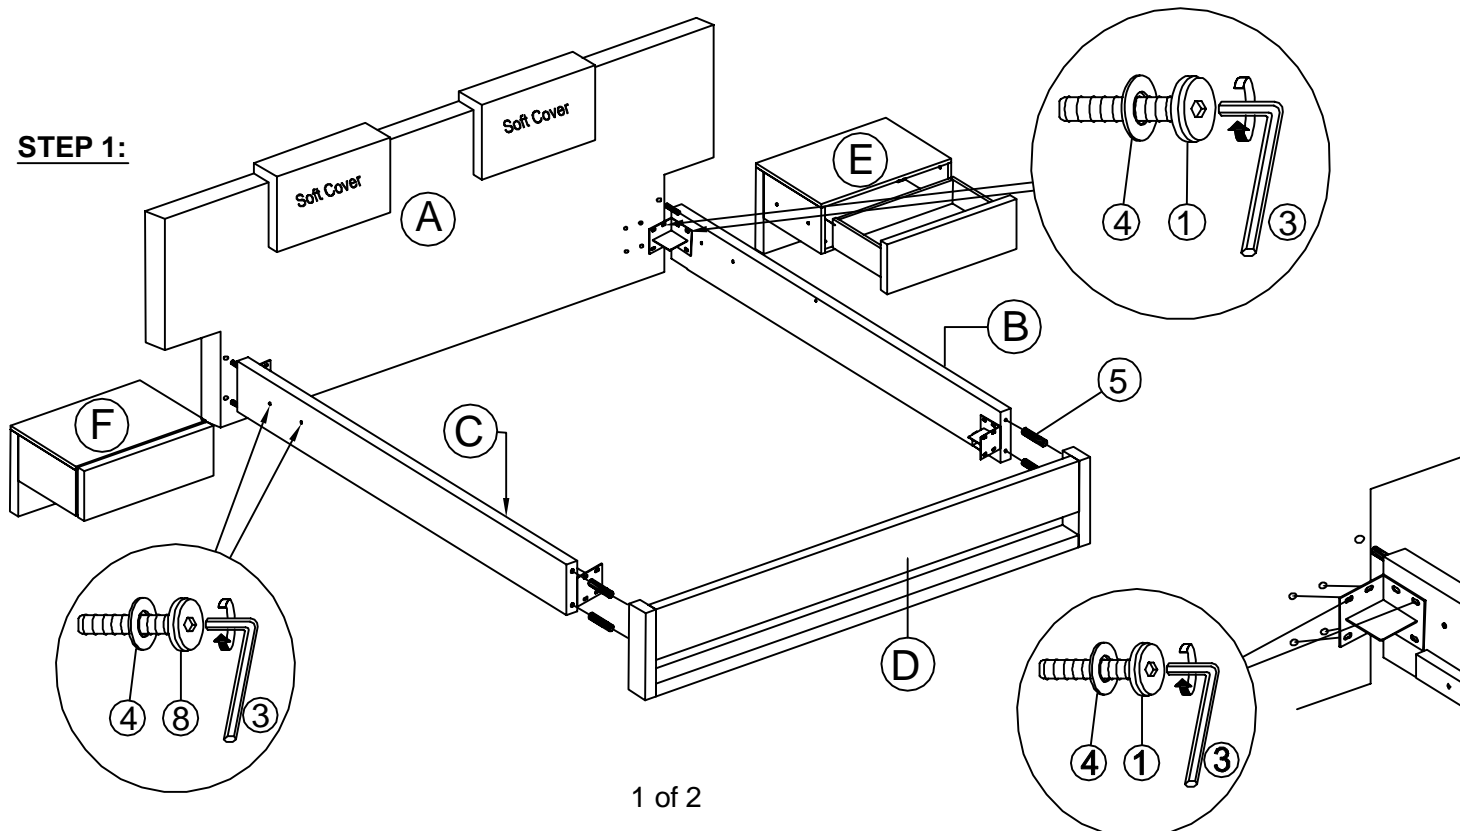

**STEP 2:**

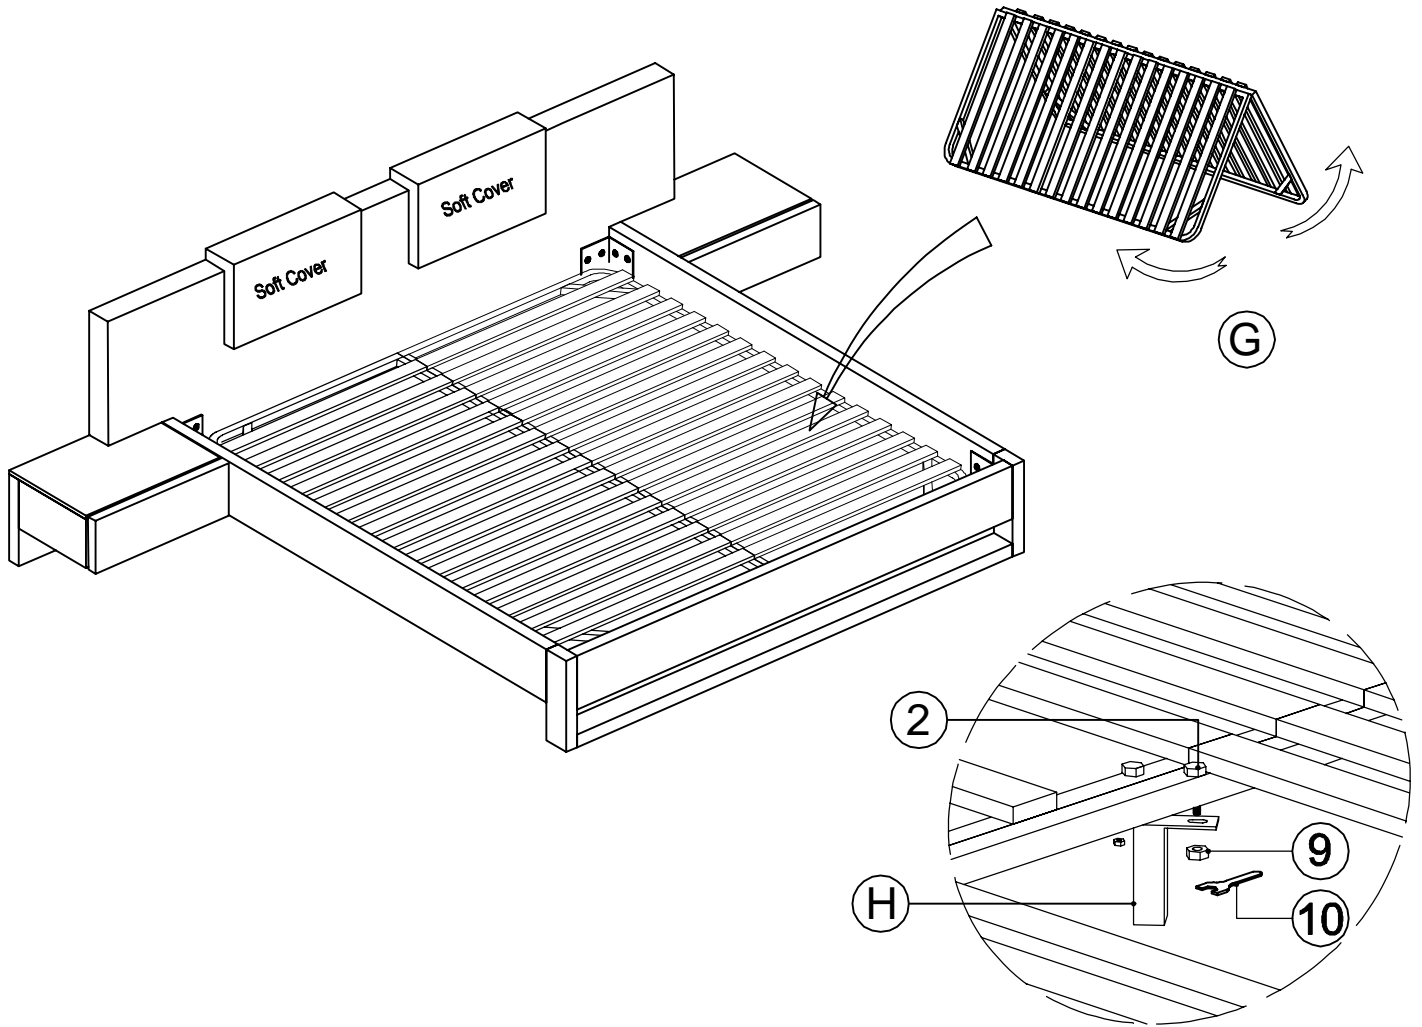

**STEP 3:**

