
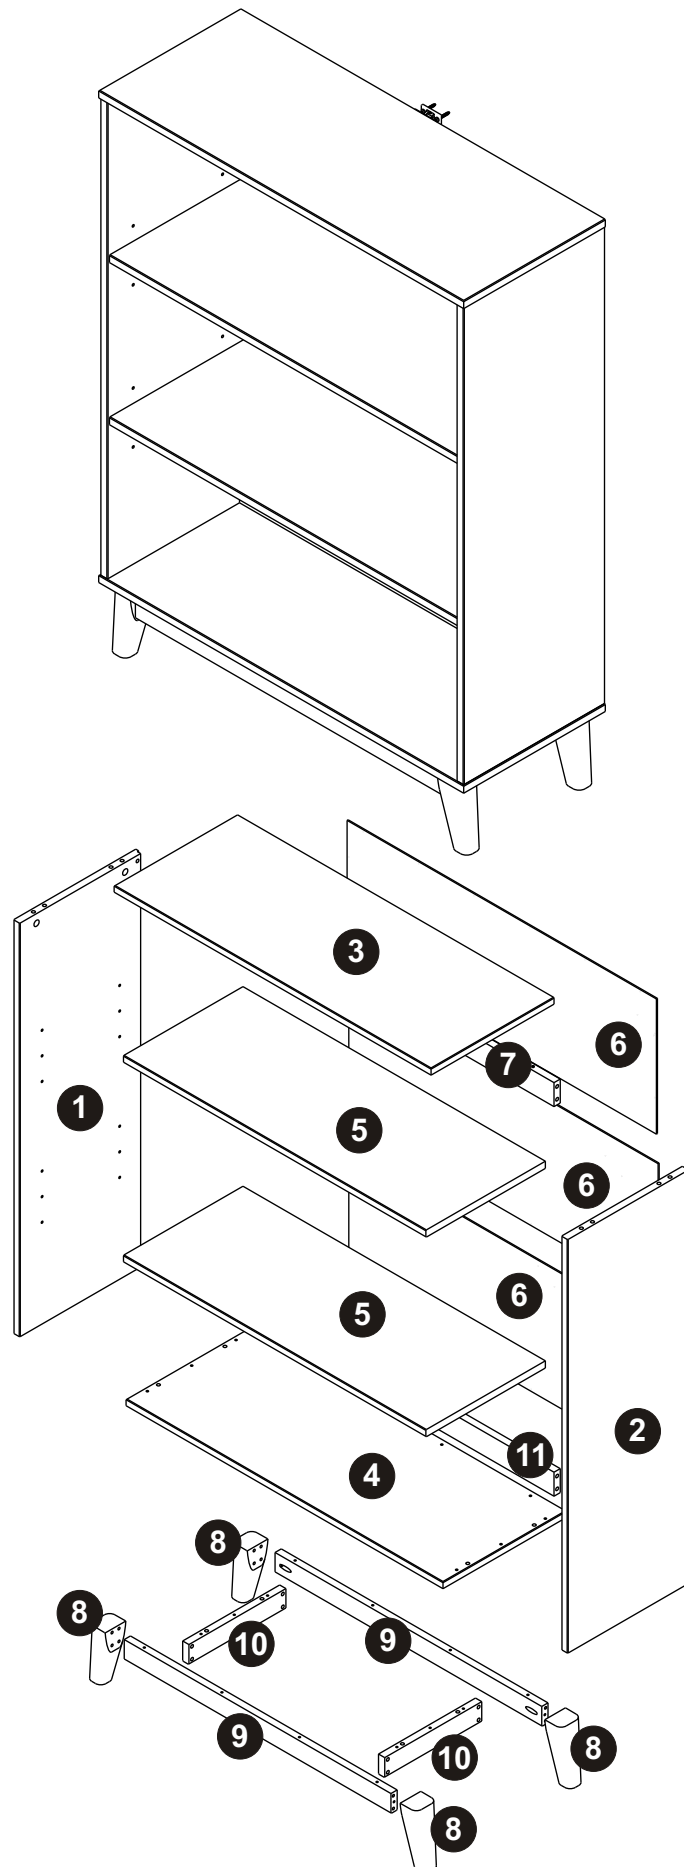



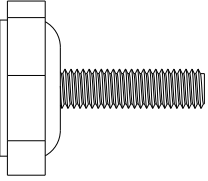


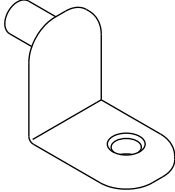



ASSEMBLY INSTRUCTIONS



TALL BOOKCASE



A	 Ø7x50mm	08	J	 8x8mm	24
B	 Ø6x40mm	08	K	 27x23mm	04
C	 Ø4x30mm	04	L		01
D	 Ø5x12mm	08	M		08
E	 Ø15x11mm	08	N		02
F	 Ø8x30mm	16	O	 Wallboard	01
G	 Ø4x40mm	10			
H	 Ø4,5x60mm	18			
I	 Ø3,5x14mm	08			

REPLACEMENT PARTS

Please do not contact the company purchased from as we can help you faster.
Order replacement parts and hardware at "www.boltonfurniture.com".

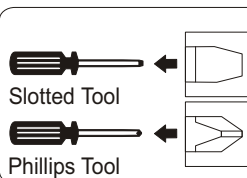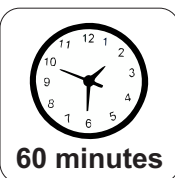


Tools Required




Hammer
* These tools are not
supplied by the
manufacturer


01

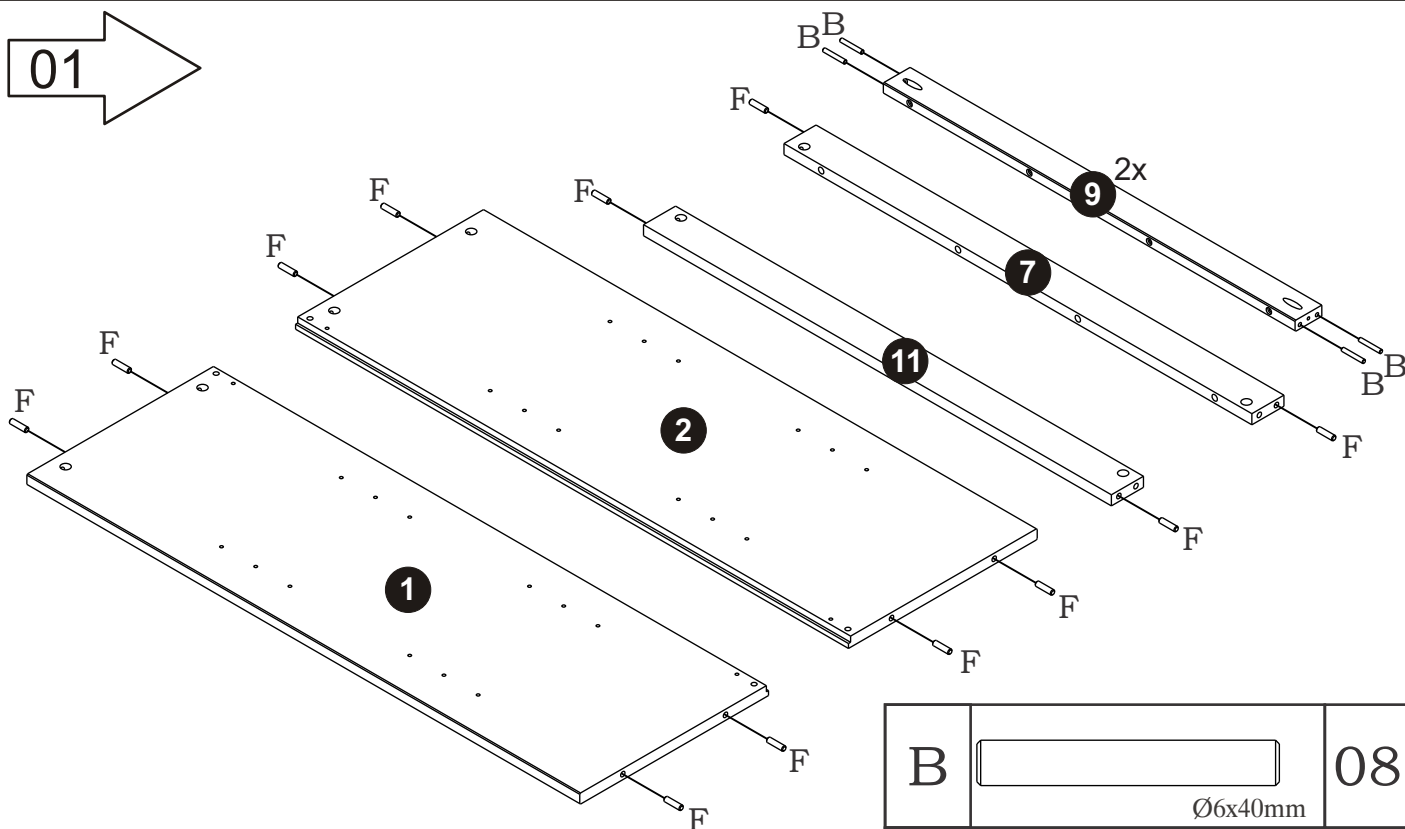



B	 Ø6x40mm	08
F	 Ø8x30mm	12


02

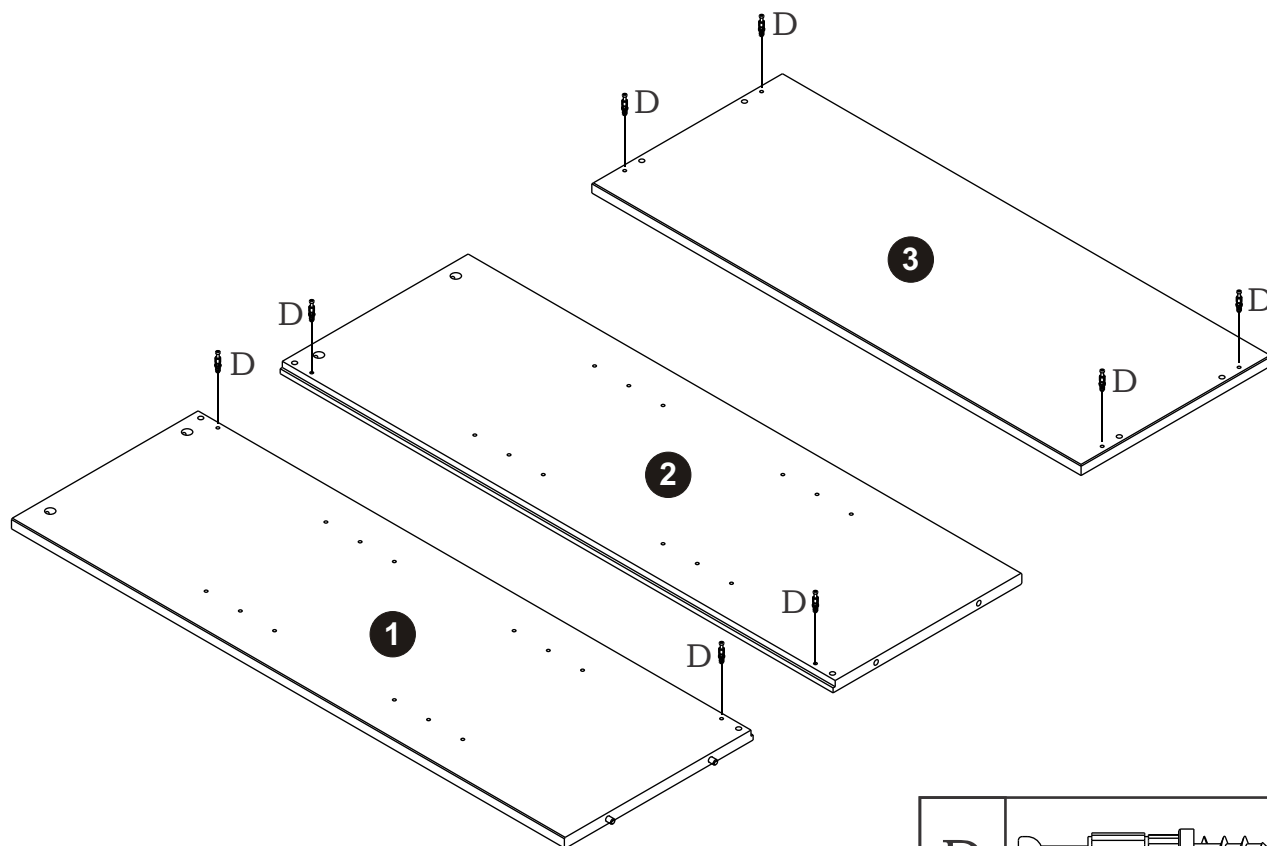

D	 Ø5x12mm	08
---	--	----


03

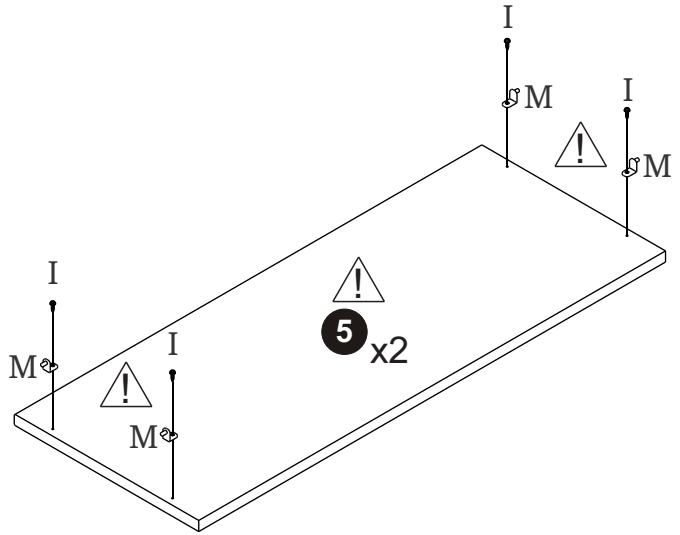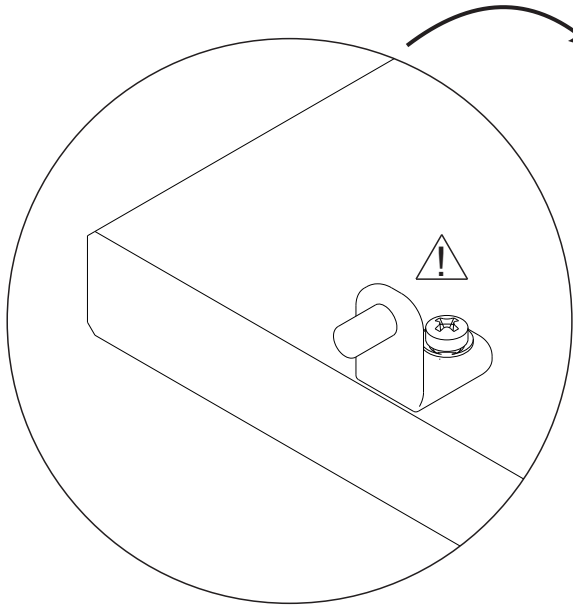

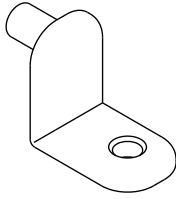M		08
I		08

Ø3,5x14mm


04

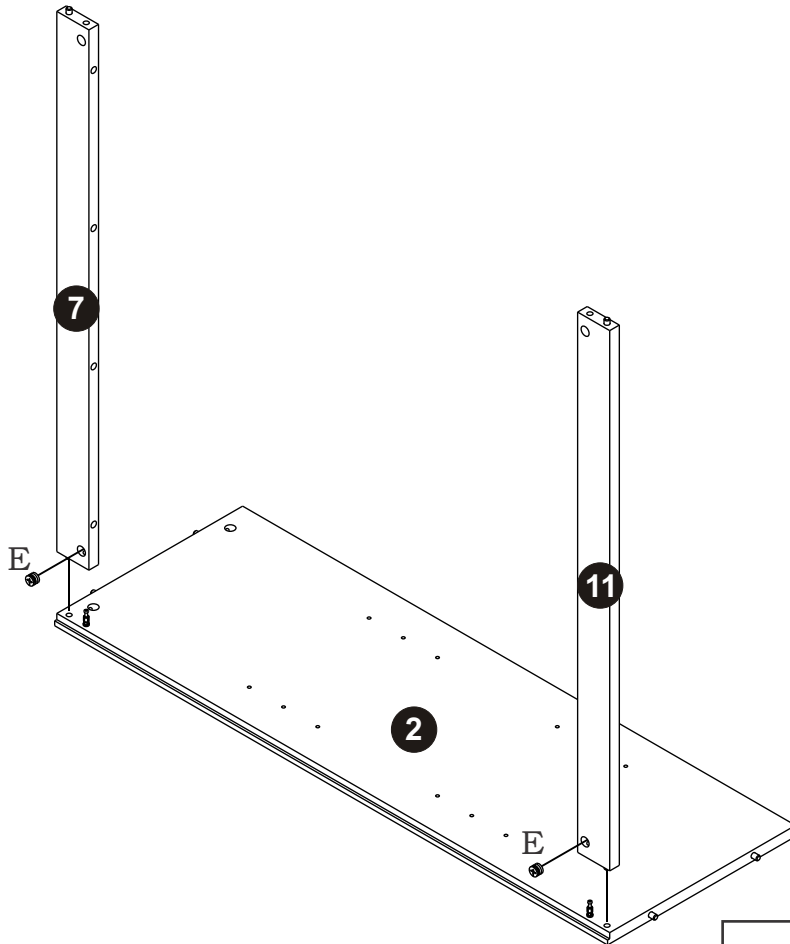


E		02
---	---	----

Ø15x11mm

05

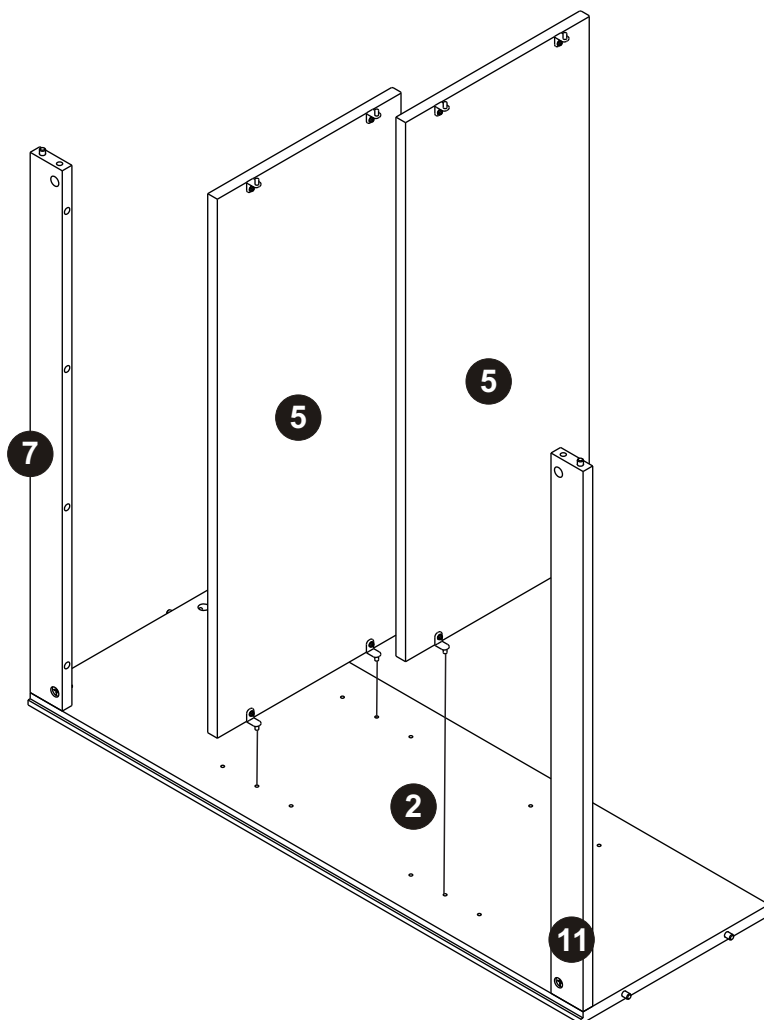


06

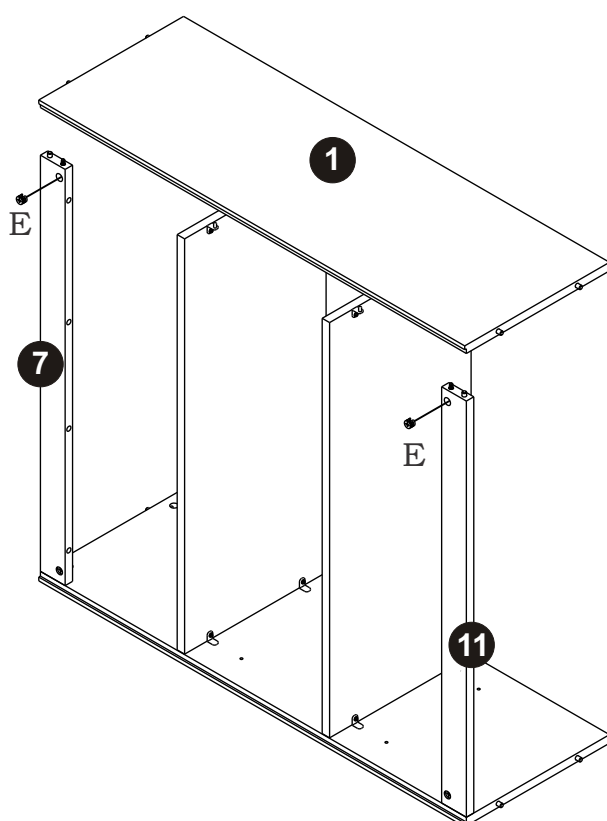


E		02
Ø15x11mm		



07

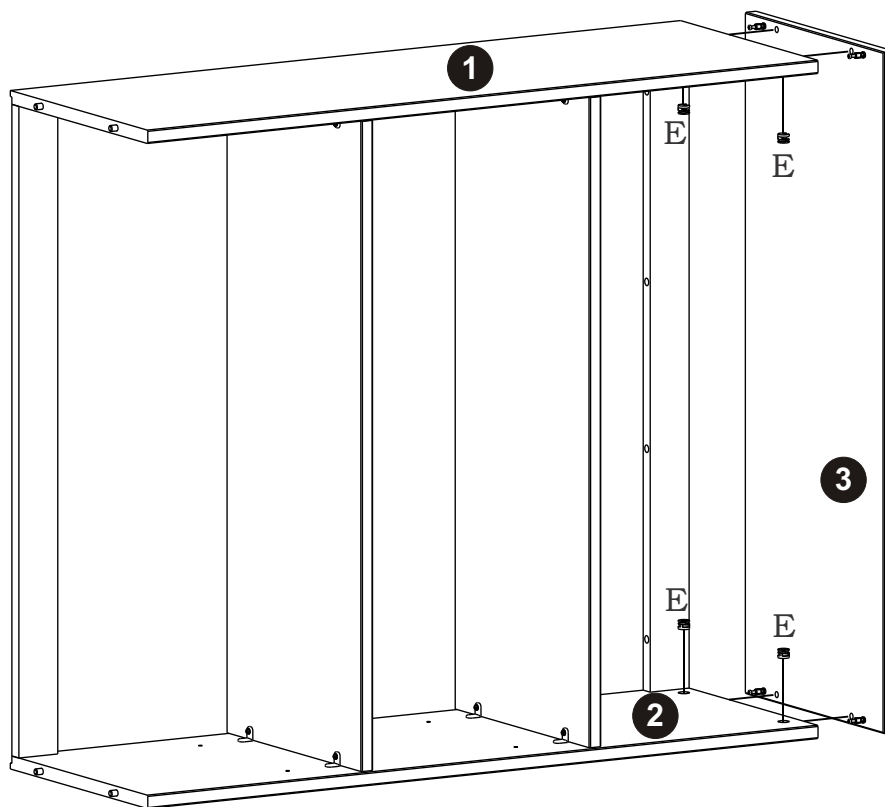


E		04
Ø15x11mm		


08

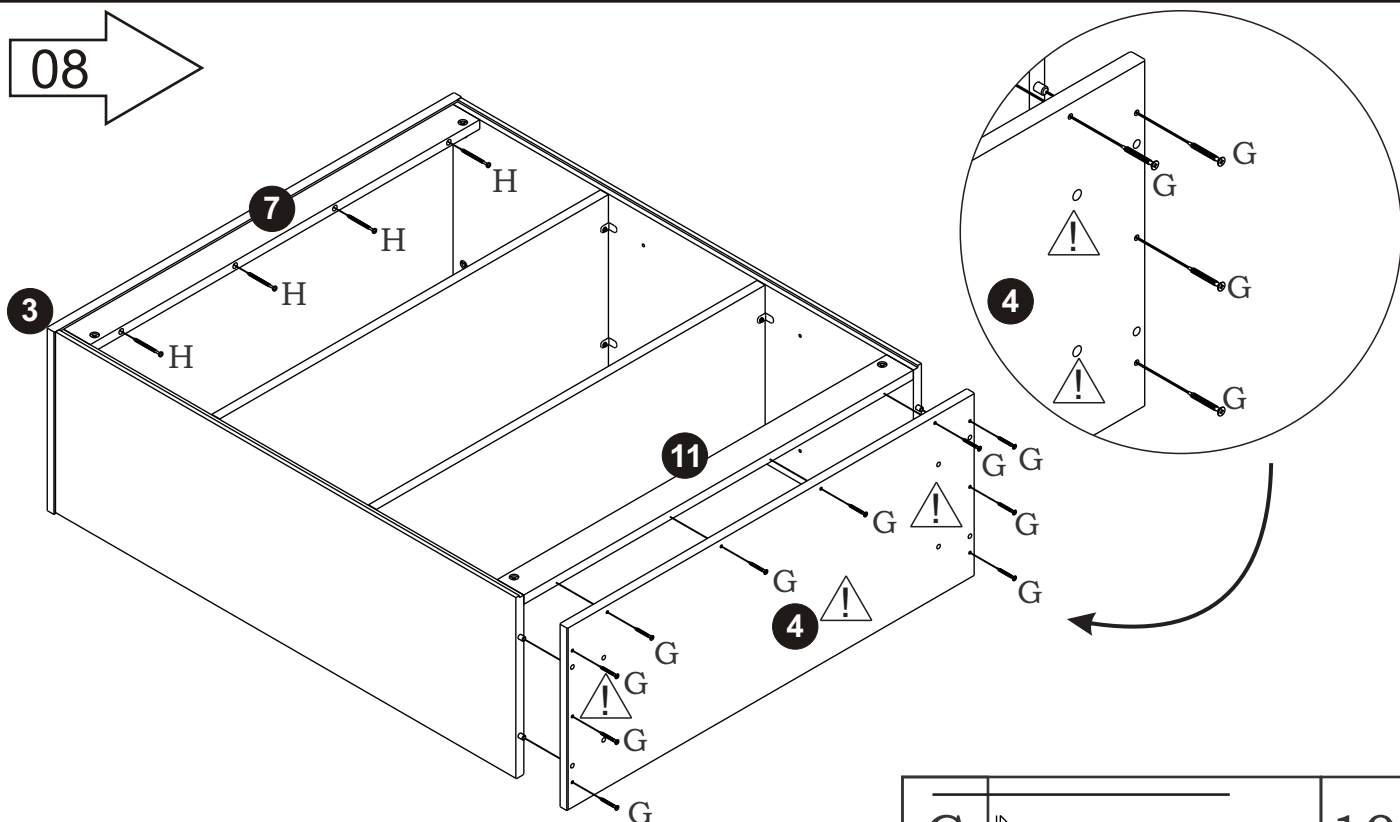


G		10
Ø4x40mm		
H		04
Ø4,5x60mm		


09

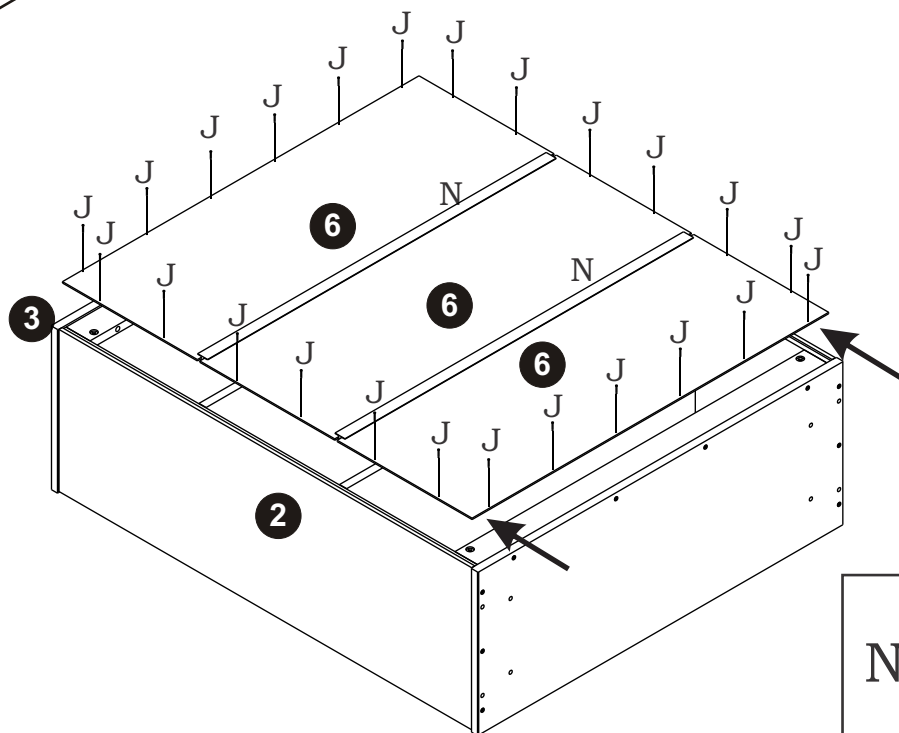



N		02
J	 8x8mm	24



10

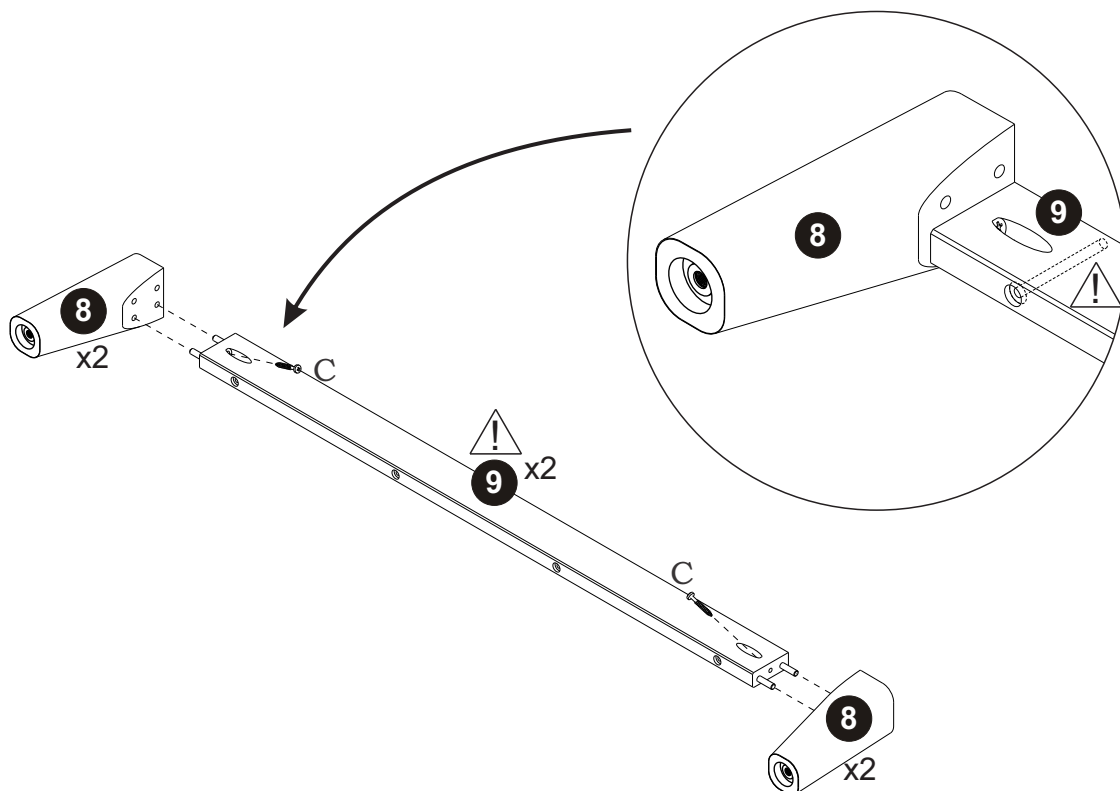


C	 Ø4x30mm	04
---	--	----


11

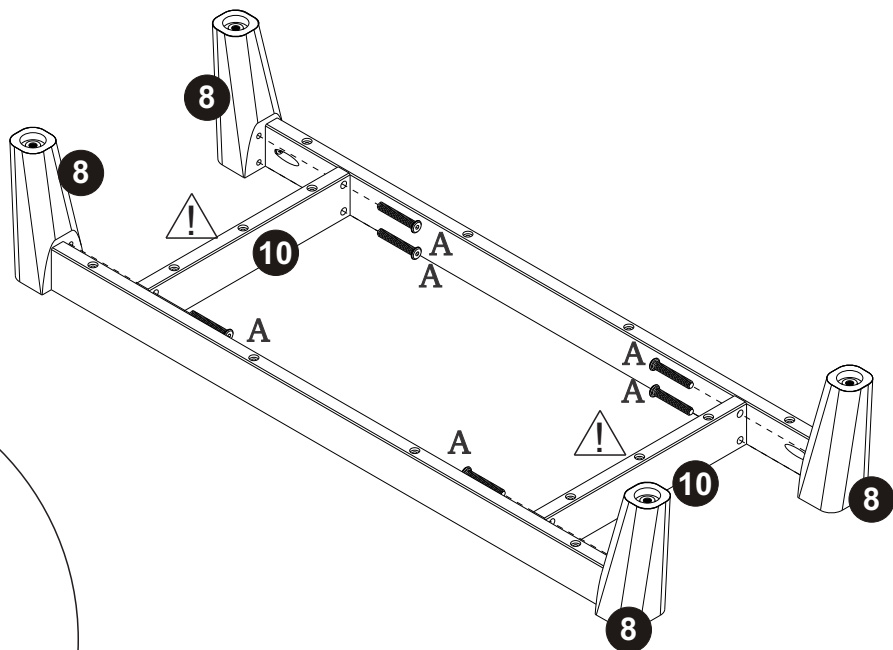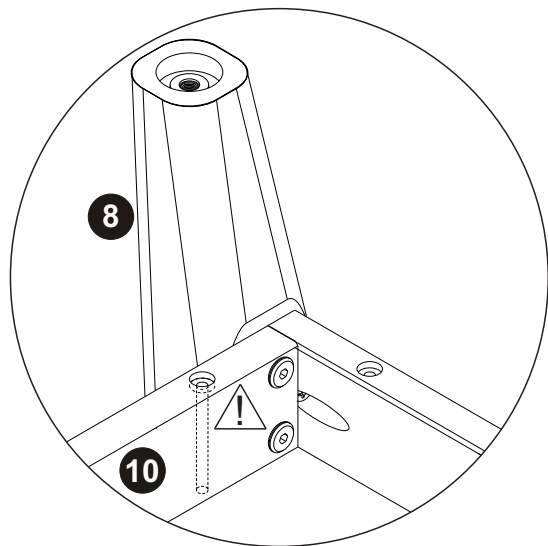



L		01
A	 Ø7x50mm	08

12


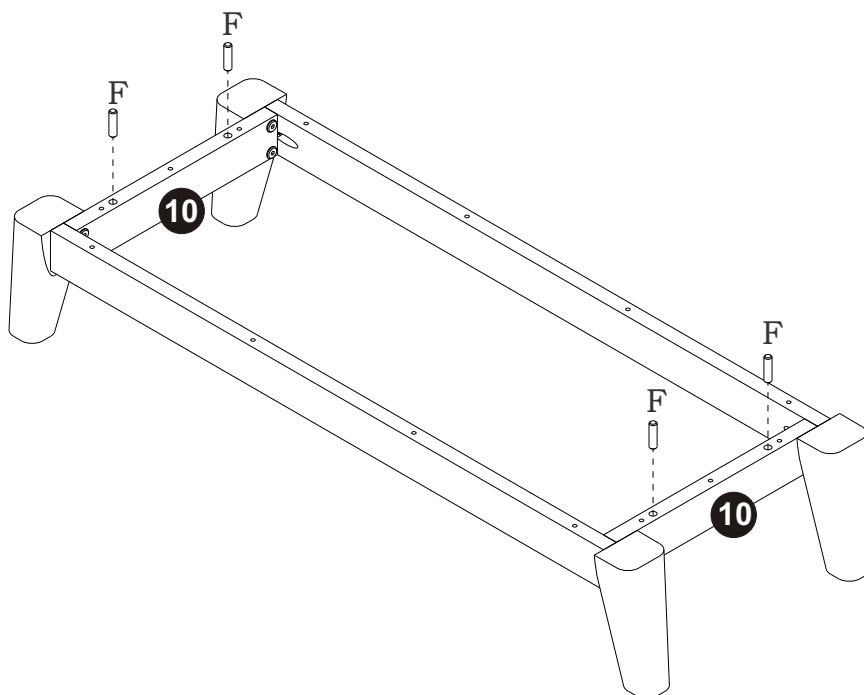


F	 Ø8x30mm	04
---	--	----



13

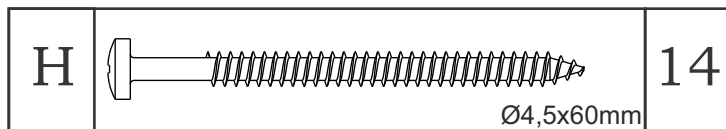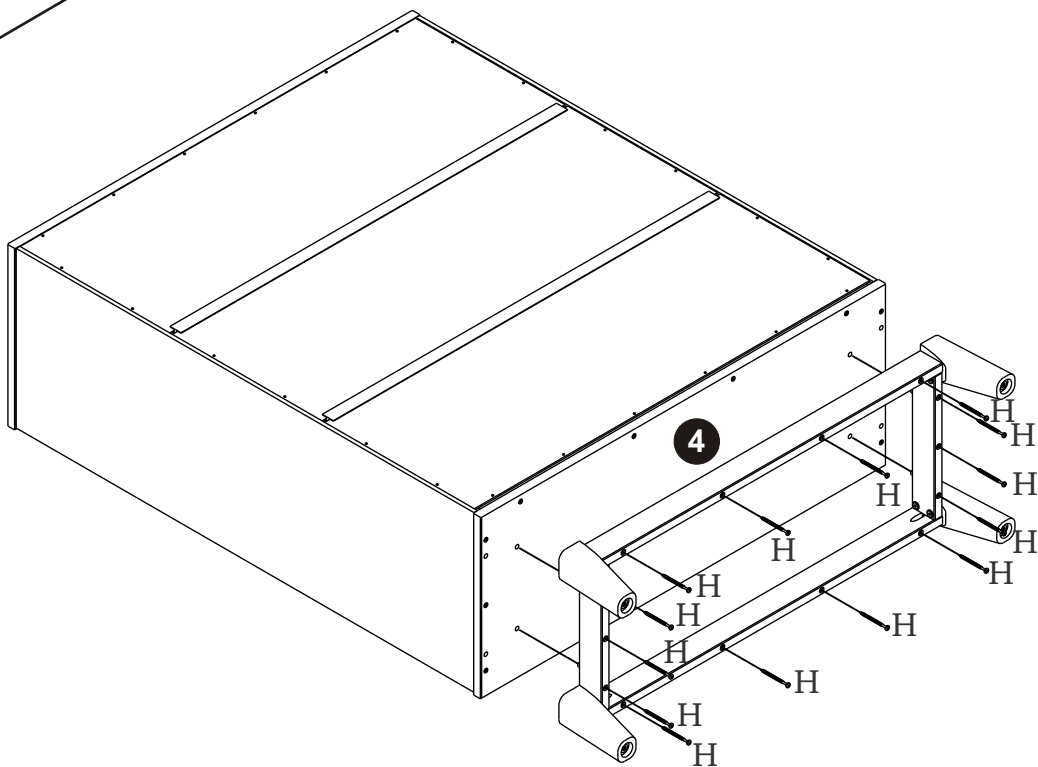





14

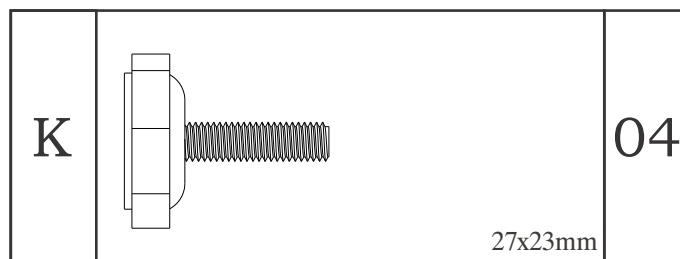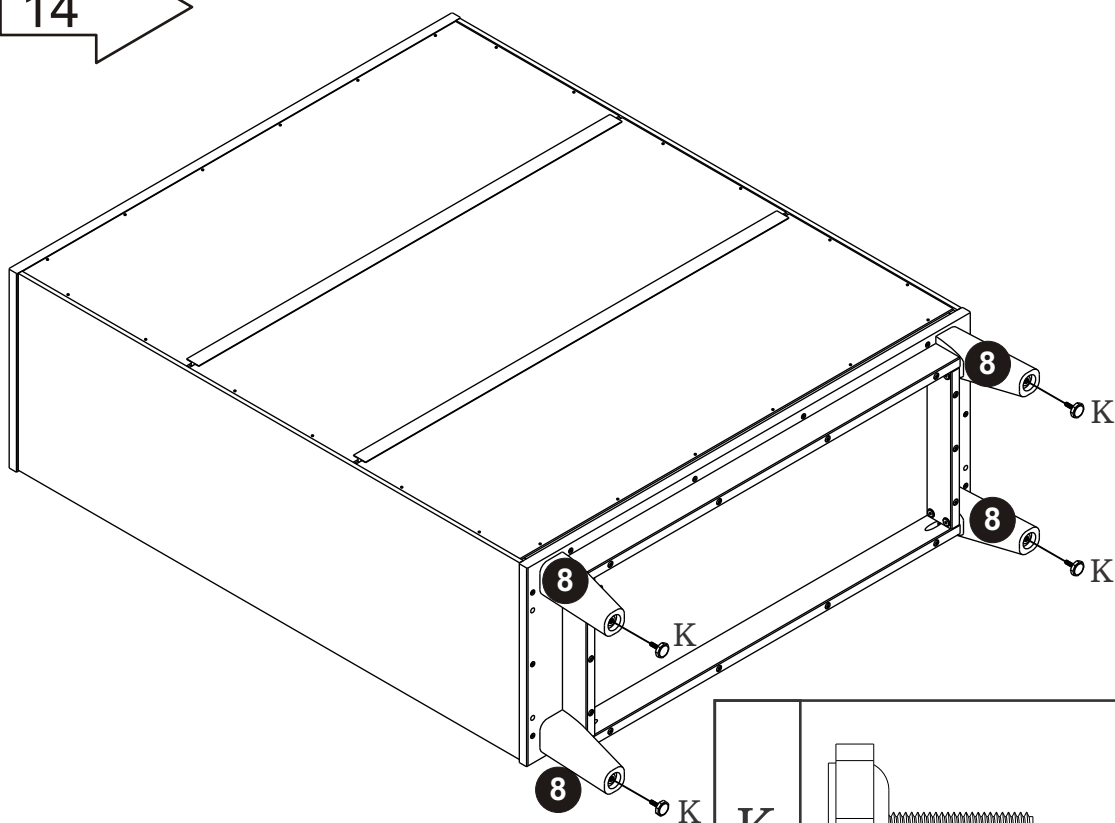



15

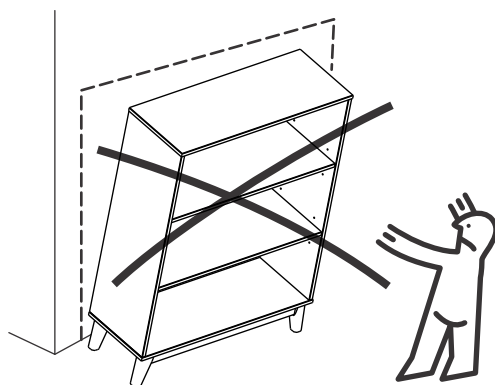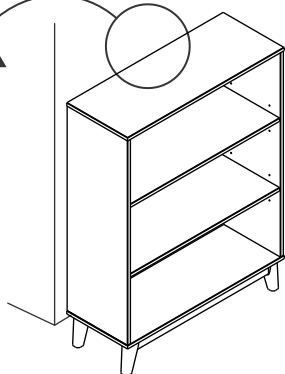

Secure to Stud behind Wallboard.

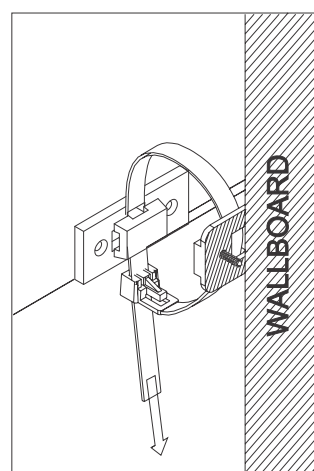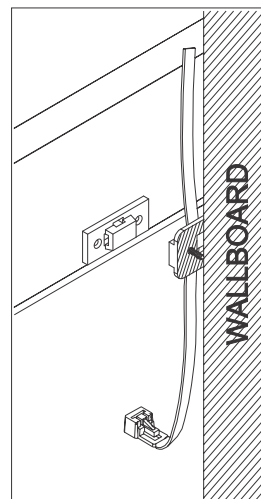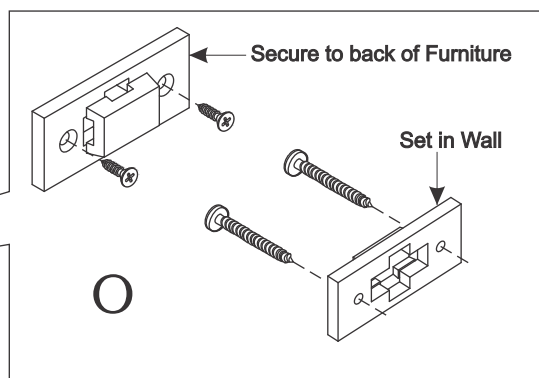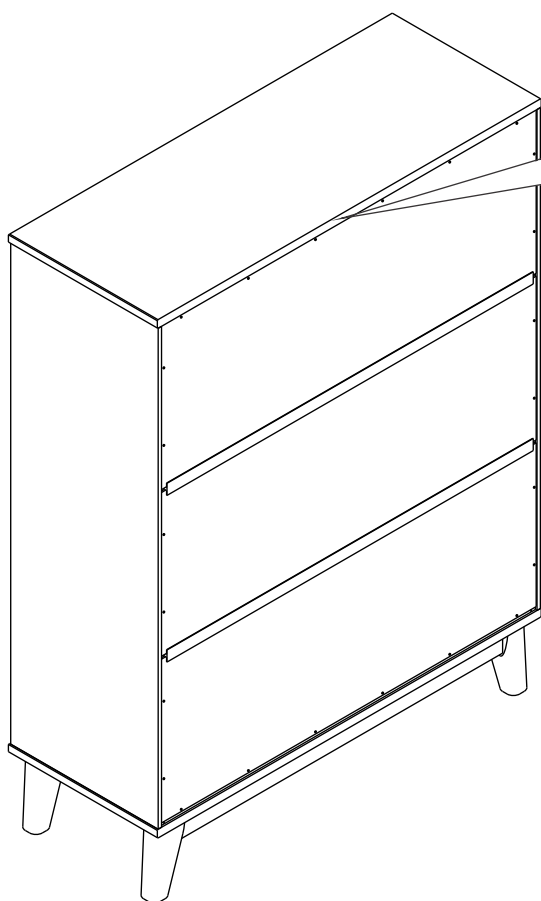

Secure to Stud behind Wallboard!

O	Hardware of WallBoard				
		02			02
		02			01
	Ø4x30mm			140mm	
	Ø4x16mm				