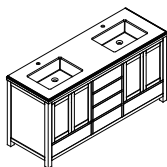








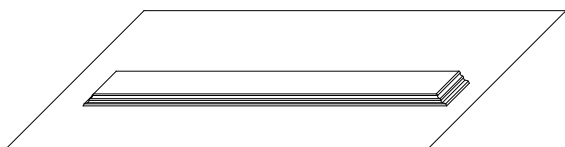
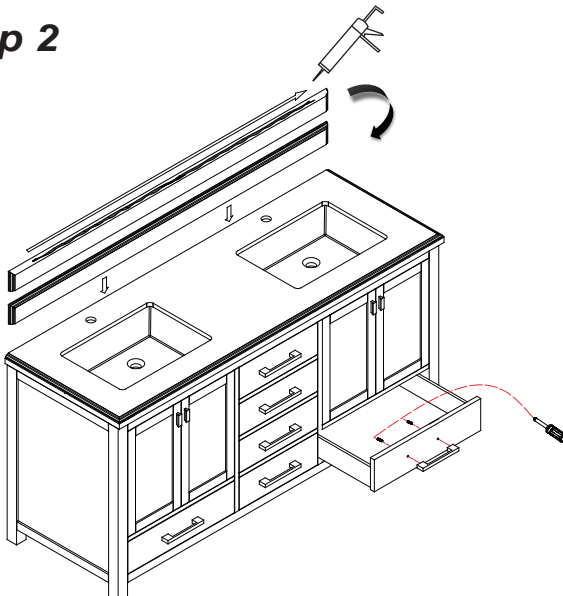
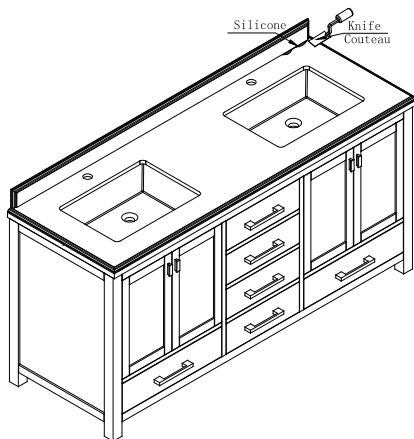
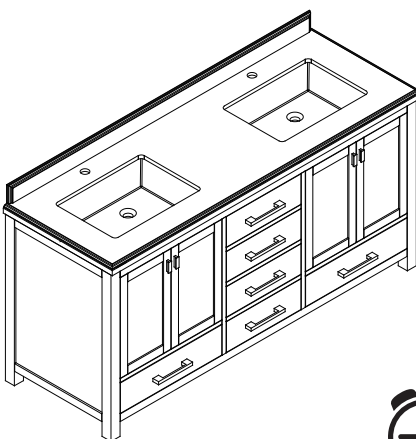



Installation Instructions

Notes: We recommend that you rough-in the drain and water lines after receiving the unit.
 The vanity should be installed by a professional plumber.
 Drainer pipe and trap are not included.
 If you experience any difficulties with this product, do not return to the point of purchase.

Part List	A (cabinet)  x1	B (backsplash)  x1	C (screw)  x20	D (handle)  x4	D (handle)  x6
Tools required	 screwdriver(phillips)	 silicone	 level	 tape measure	
Step 1 CAUTION Handle the backsplash with extreme care! Stone backsplash are very fragile. Always handle gently and place them flat on a soft surface. 			Step 2 		
Step 3  <div>Silicone Knife Couteau</div>			Step 4  <div></div>		