



SKU:SF001073

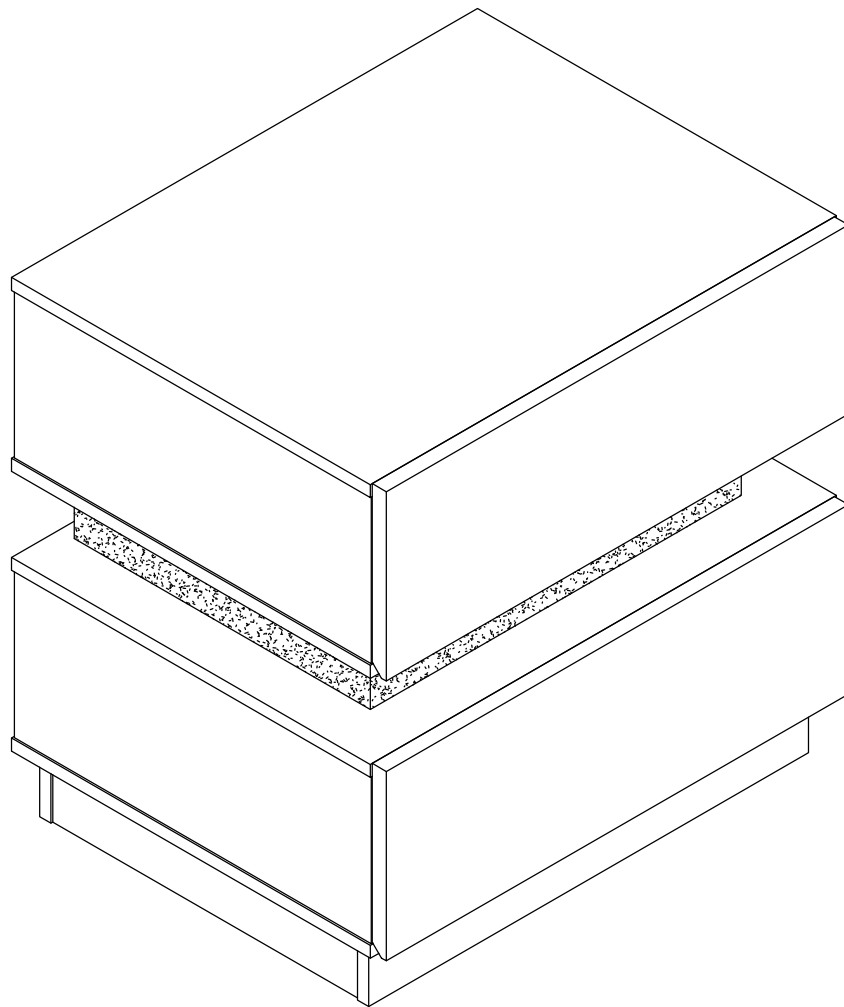

BOARD IDENTIFICATION

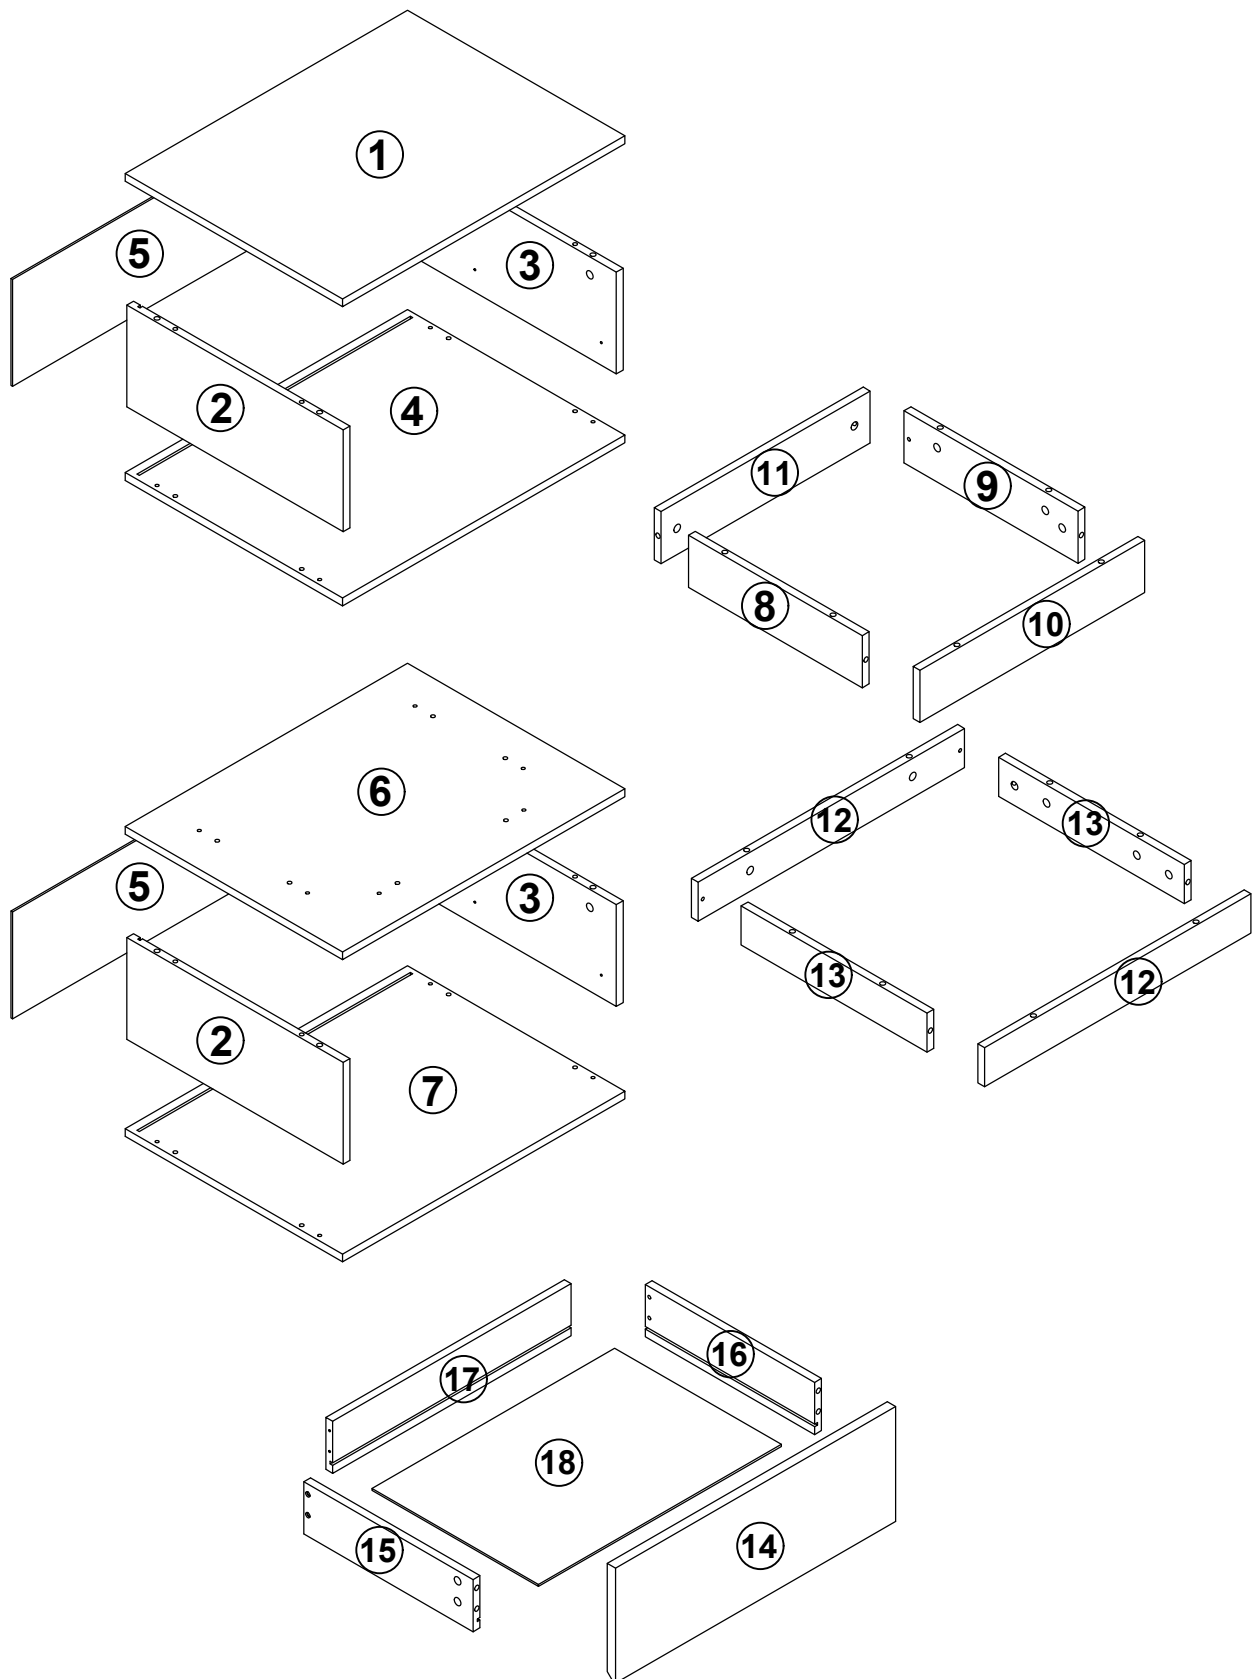

X2PCS

Trouble Shooting

Missing/Damaged pieces/
Wrong size and installation issues



Contact us with your problem,pic,
number and qty to the "Contact seller"
button in the detail page of your order







Respond with 24 hours to solve issue

Before You Start


















1. Read through each step carefully and follow the proper order
2. Separate and count all your parts and hardware
3. Give yourself enough room for the assembly process
4. Caution: If using a power drill or power screwdriver for screwing, please be aware to slow down and stop when screw is tight. Failure to do so may result in stripping the screw

Cam Lock Fastening System








This Cam Lock Fastening System will be used throughout the assembly process

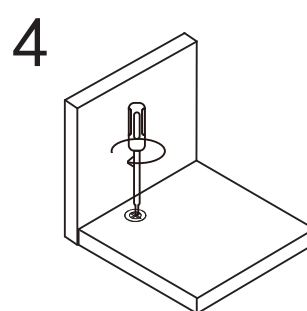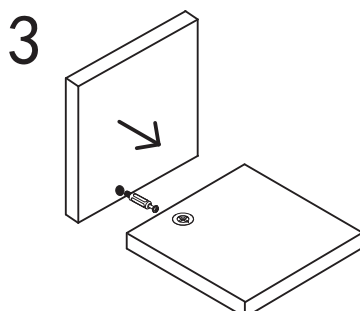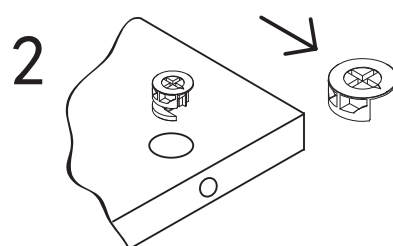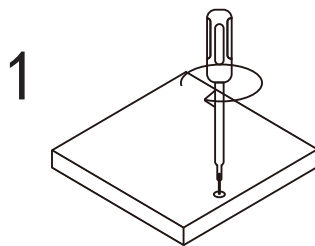









Parts List

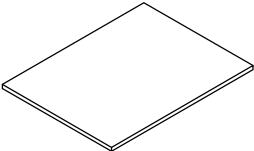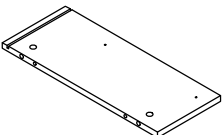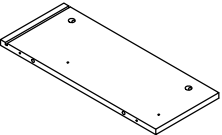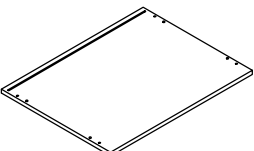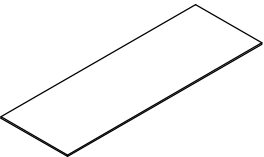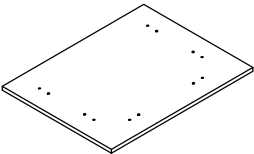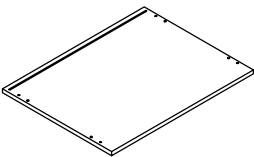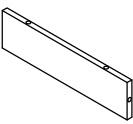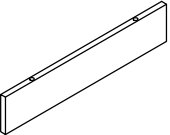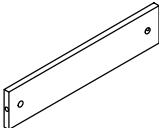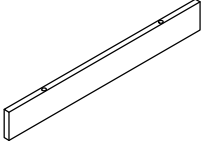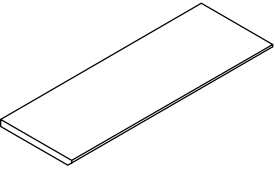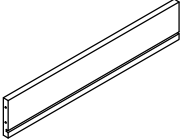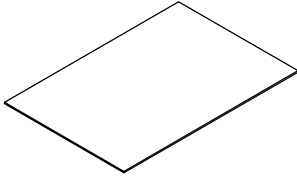							
1	1PC	2	2PCS	3	2PCS	4	1PC
							
5	2PCS	6	1PC	7	1PC	8	1PC
							
9	1PC	10	1PC	11	1PC	12	2PCS
							
13	2PCS	14	2PCS	15	2PCS	16	2PCS
							
17	2PCS	18	2PCS				


Hardware List

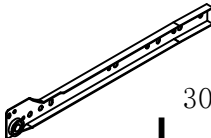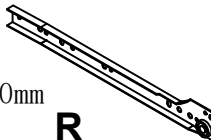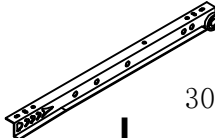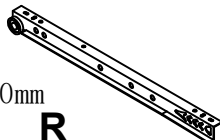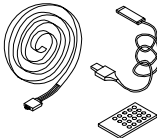		 Ø12		 M6*30mm		 Ø4*40mm	
A	38PCS	B	38PCS	C	22PCS	D	22PCS
 M3*14mm				 M3*12mm			
E	8PCS	F	8PCS	G	16PCS	H	1PC
 300mm L		 300mm R		 300mm L		 300mm R	
I	2PCS	J	2PCS	K	2PCS	L	2PCS
							
M	1PC						



STEP 1

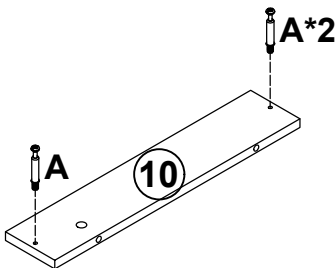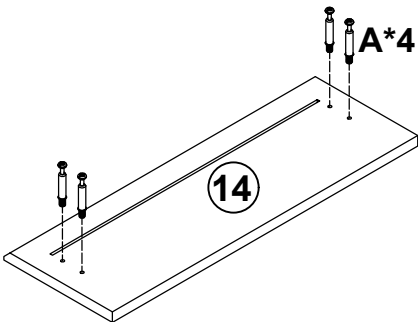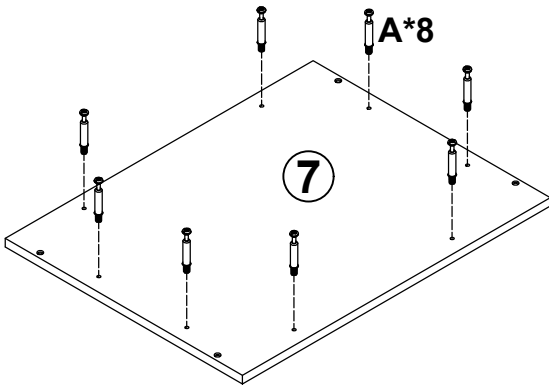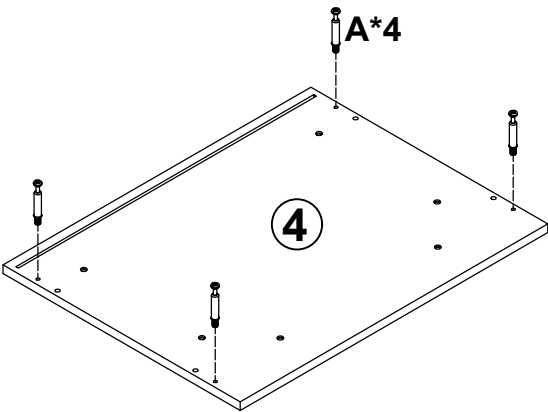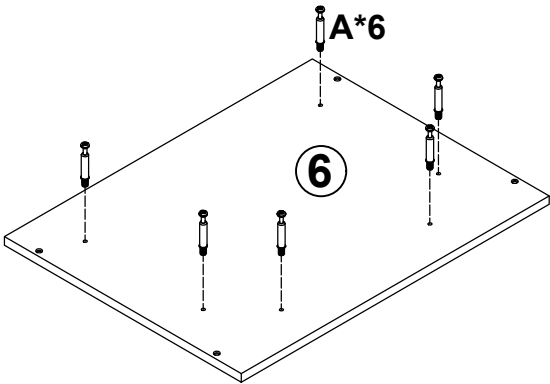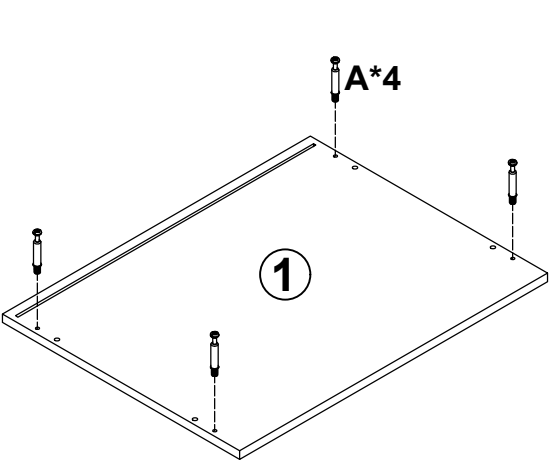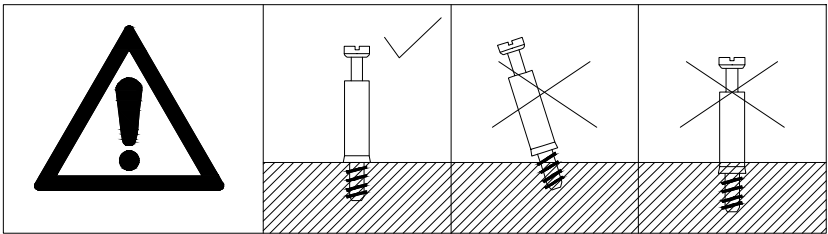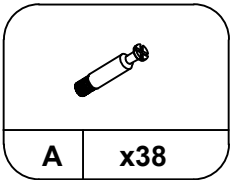

X2PCS

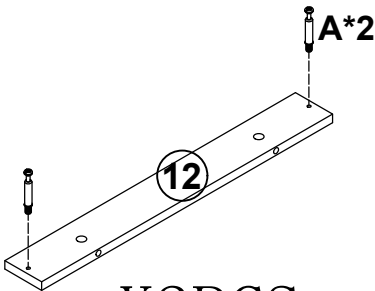

X2PCS

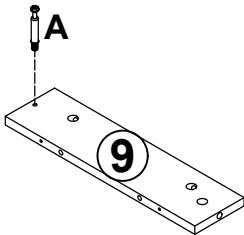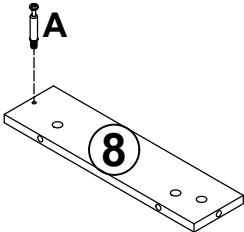

STEP 2



I

x2



J


x2




M3*12mm

G


x8

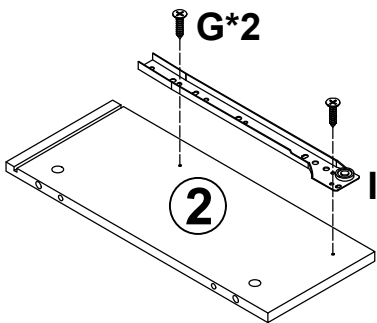

X2PCS

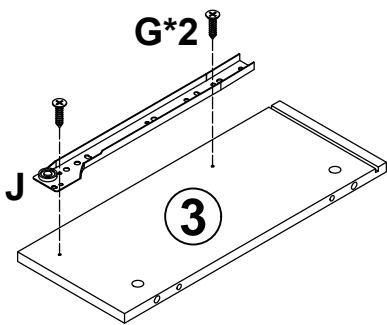

X2PCS

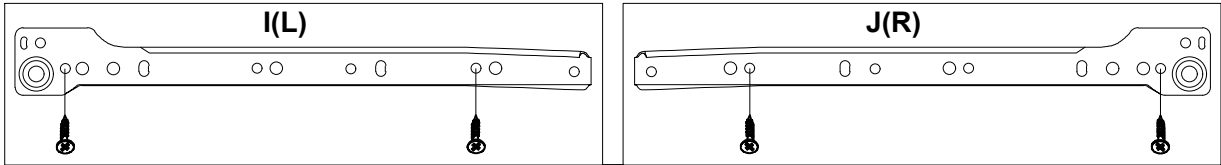



STEP 3



Ø12

B

x4

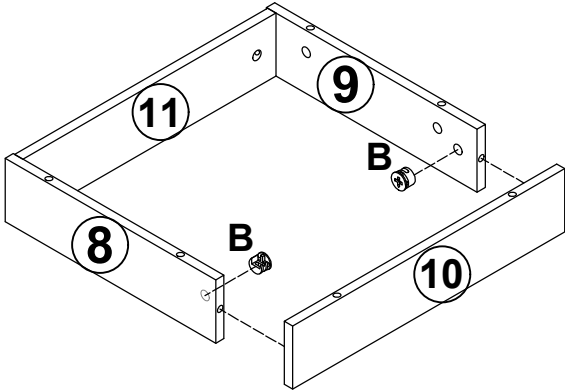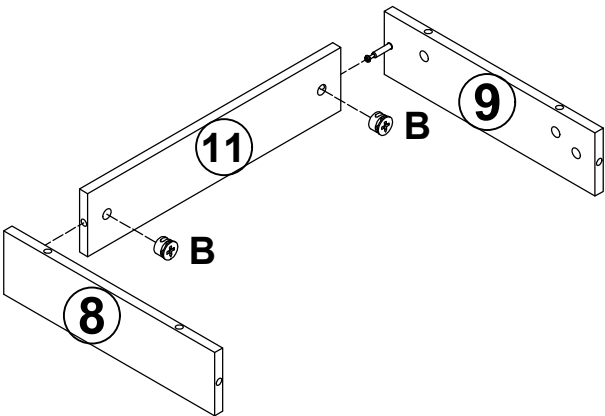



STEP 4


Ø4*40mm

D	x4
---	----


M6*30mm


C	x4
---	----

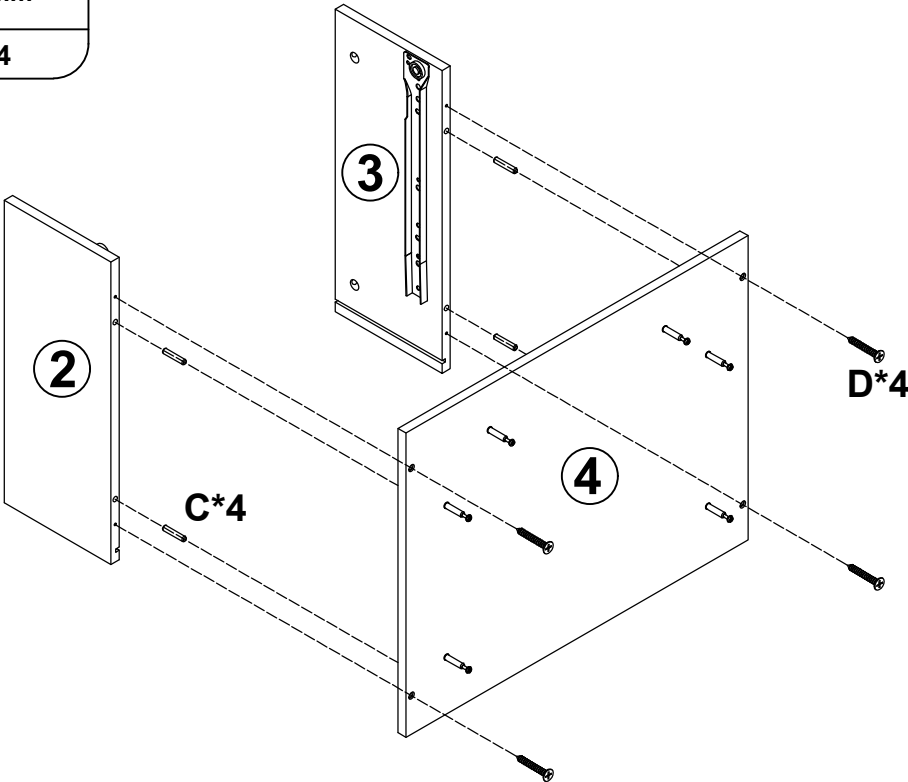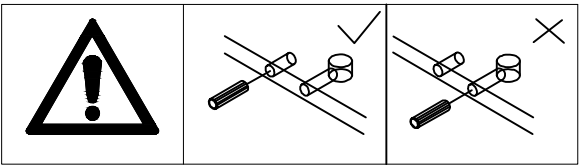

STEP 5


Ø12

B	x6
---	----

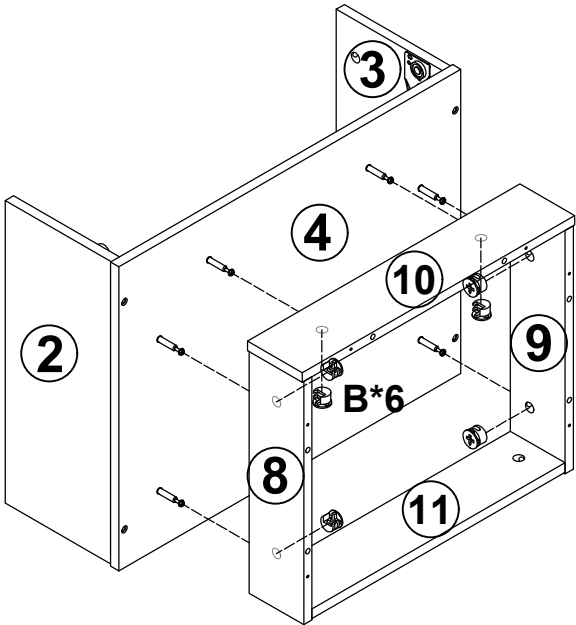


STEP 6



Ø12

B	x4
---	----

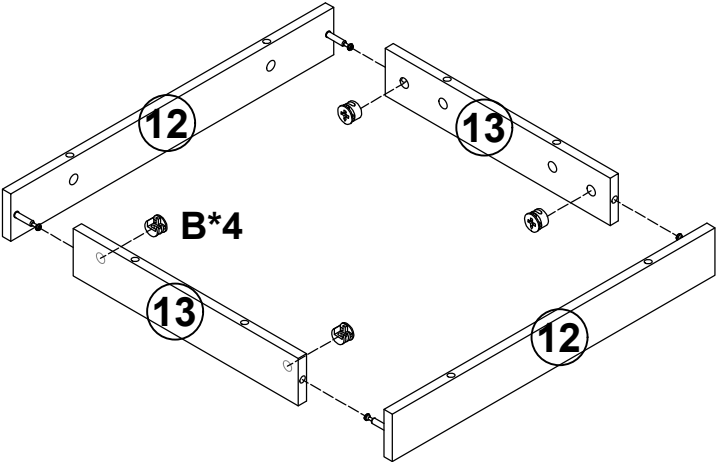

STEP 7





Ø4*40mm

D	x4
---	----





M6*30mm


C	x4
---	----

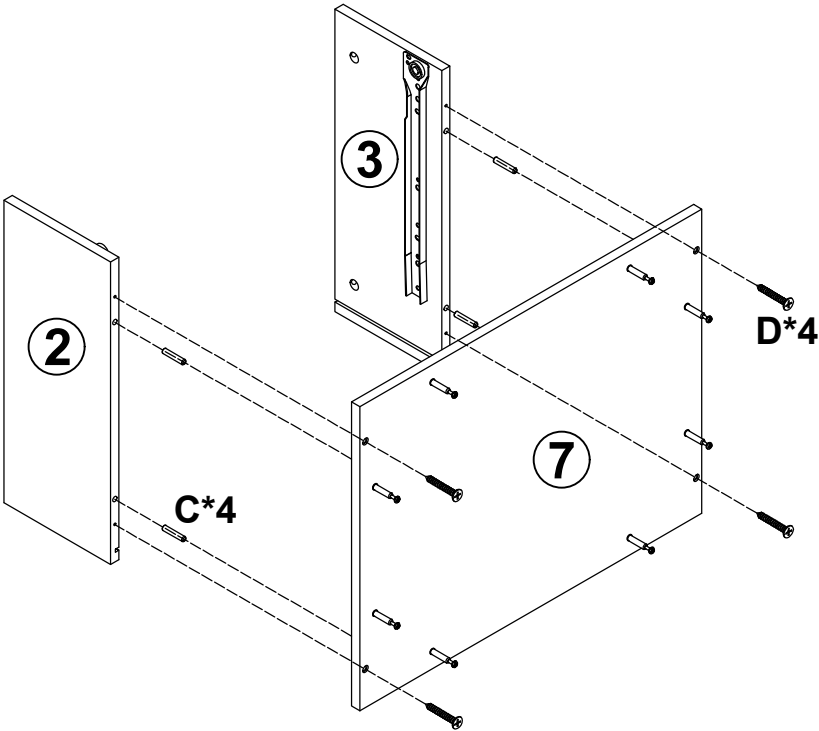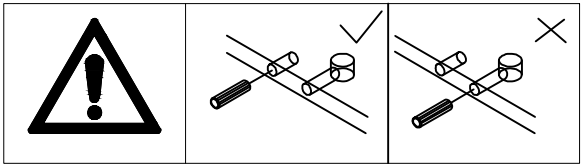

STEP 8

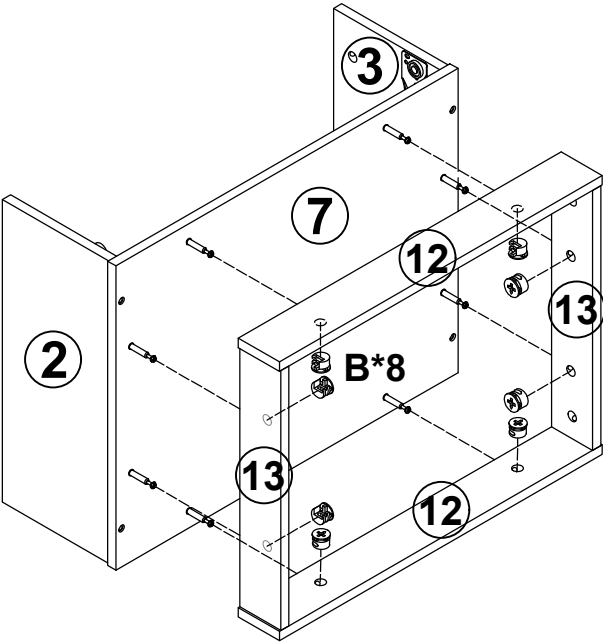
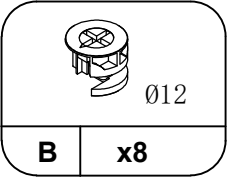


STEP 9

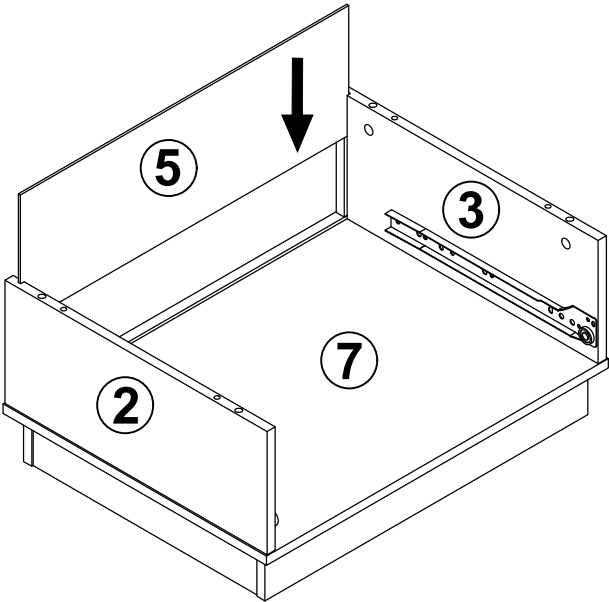


STEP 10

 Ø4*40mm		 M6*30mm	
D	x6	C	x6

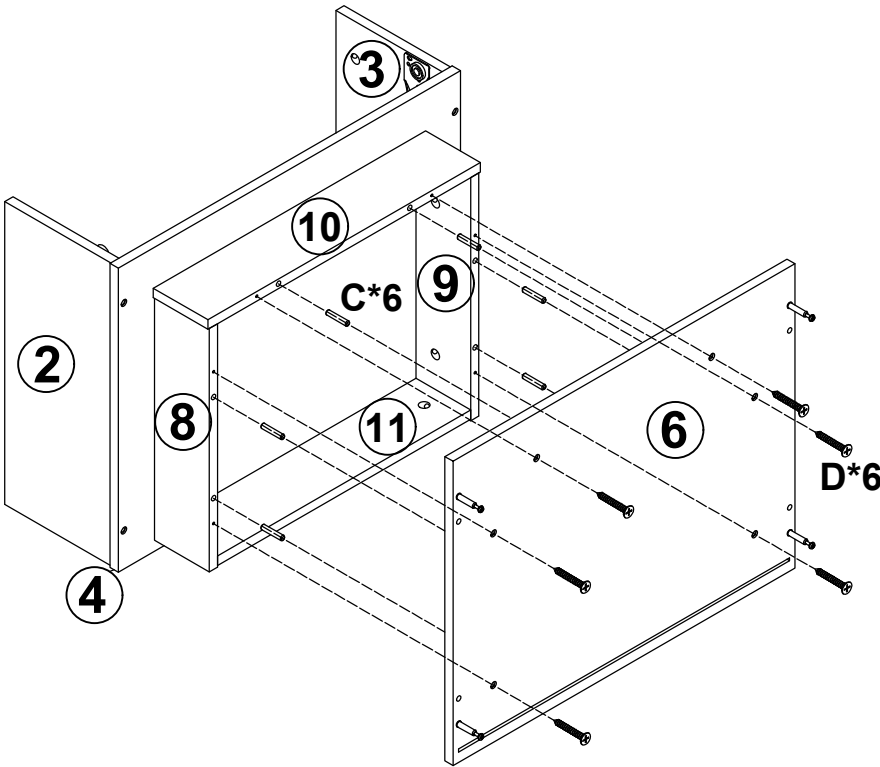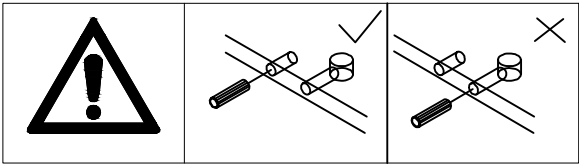

STEP 11

 Ø12		 M6*30mm	
B	x4	C	x4

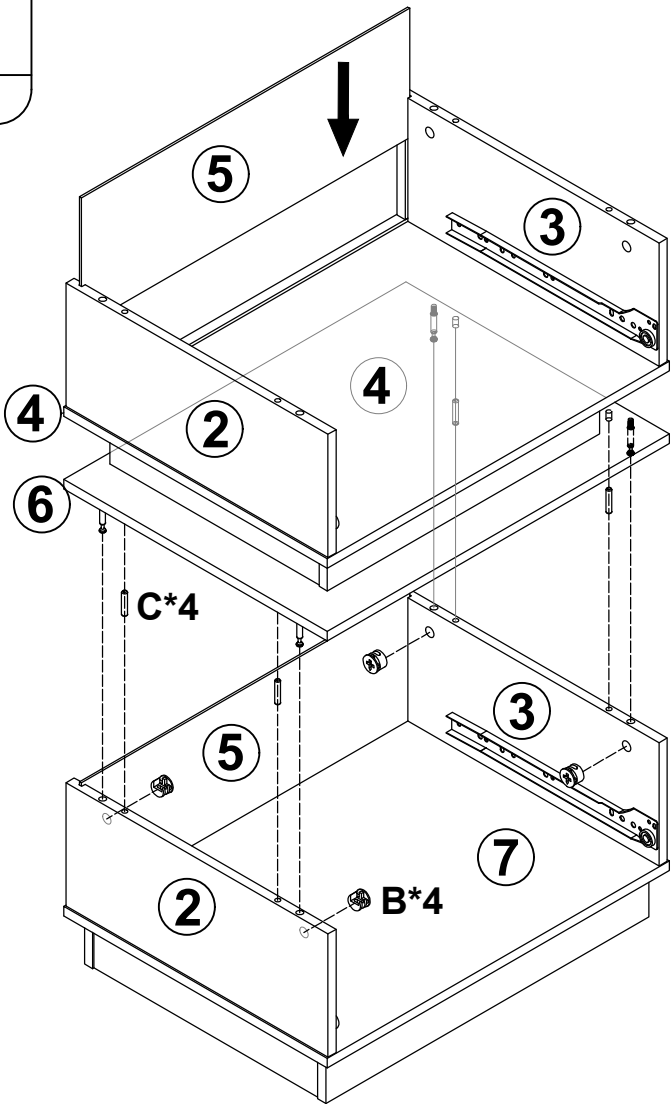


2

Important
2 people required
2 personnes requises
2 personas requeridas

STEP 12



Ø12

B



x4



M6*30mm

C

x4

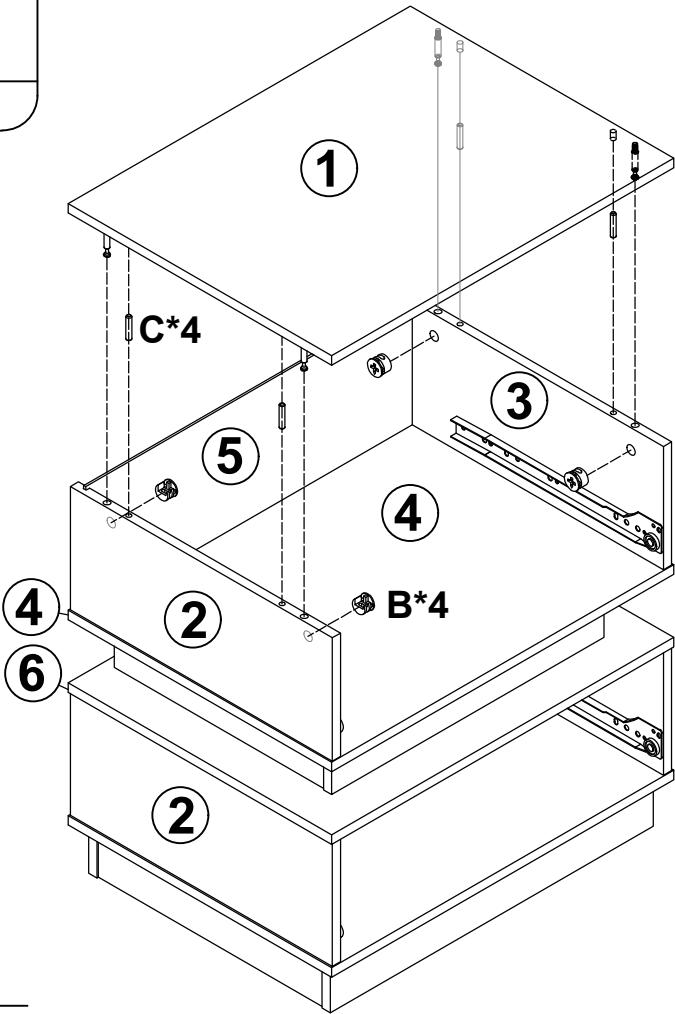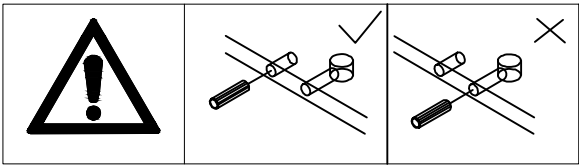

STEP 13



M3*14mm


E

x8






F

x8


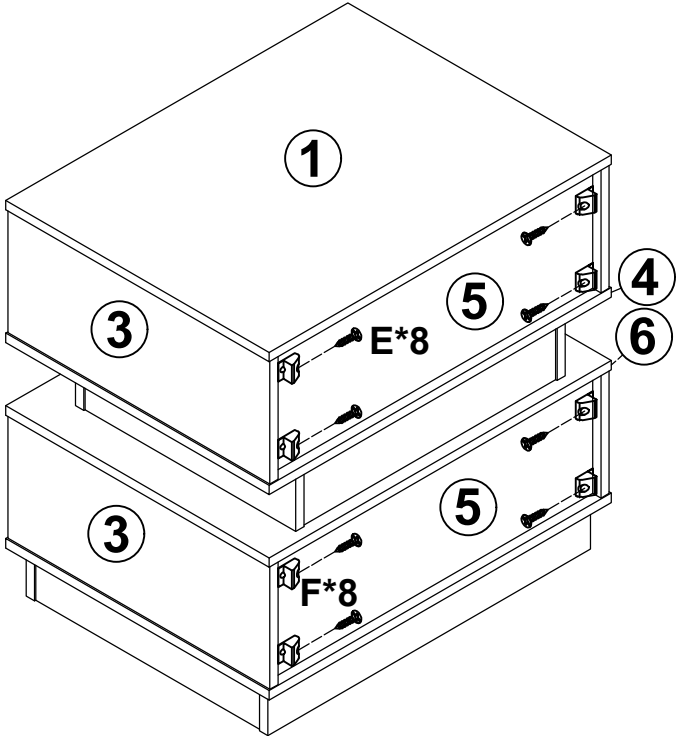


STEP 14

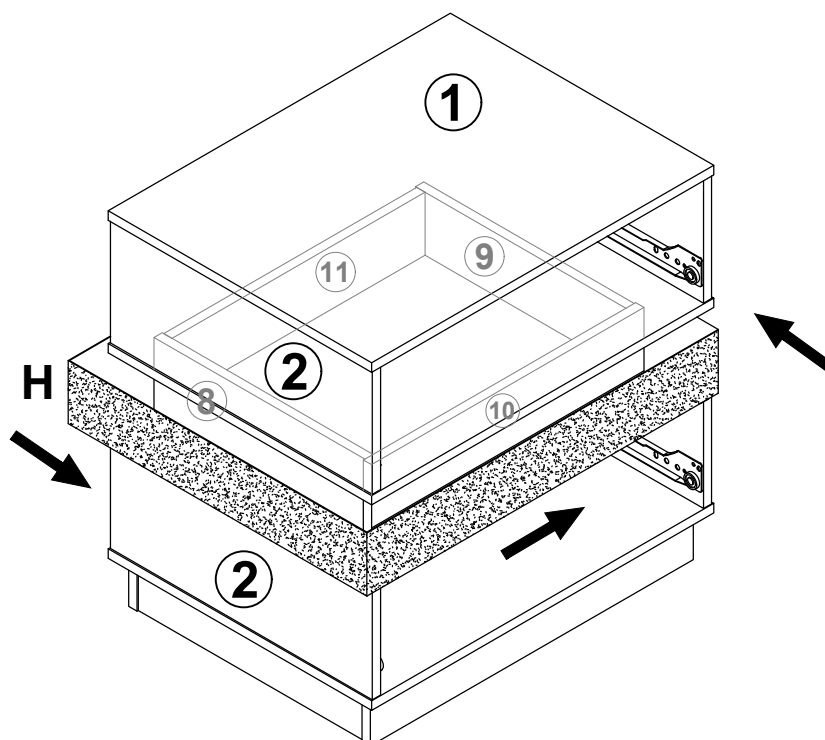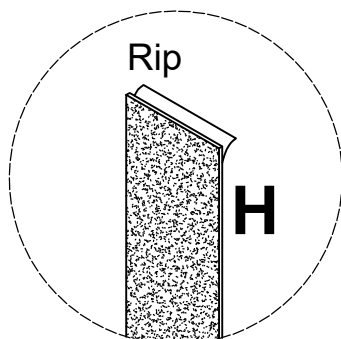
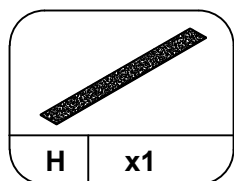


Tip: Start pasting the drill tape from the side of the nightstand against the wall to avoid excess drill tape being exposed, which would affect the aesthetics


STEP 15

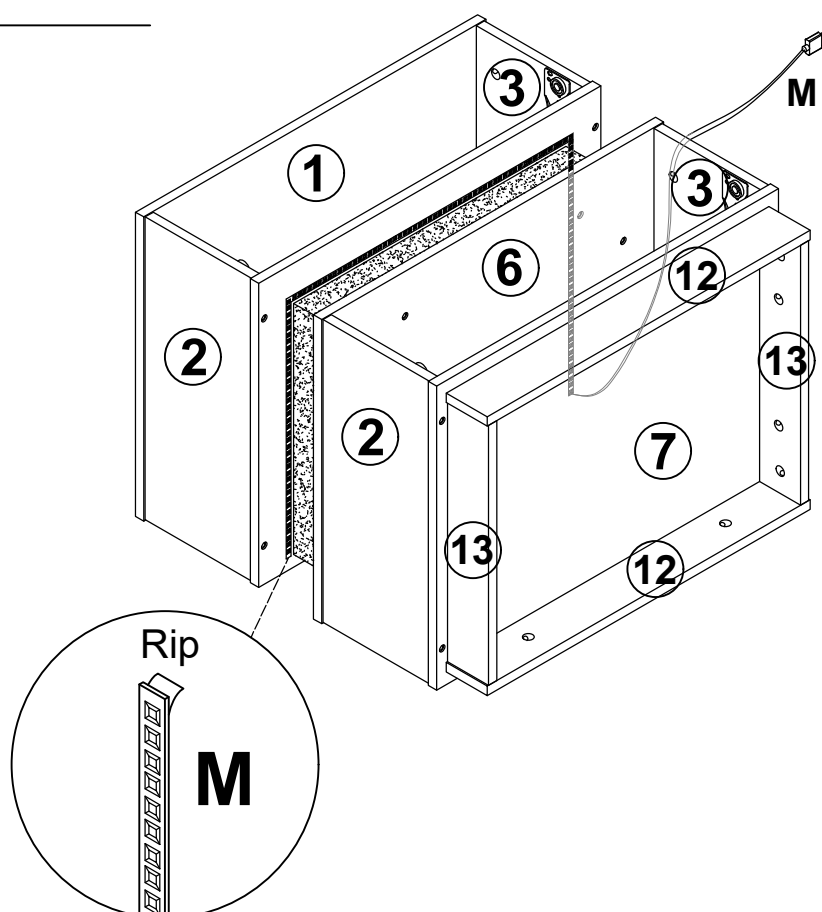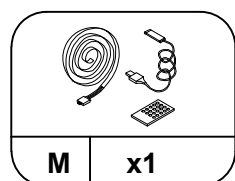

STEP 16

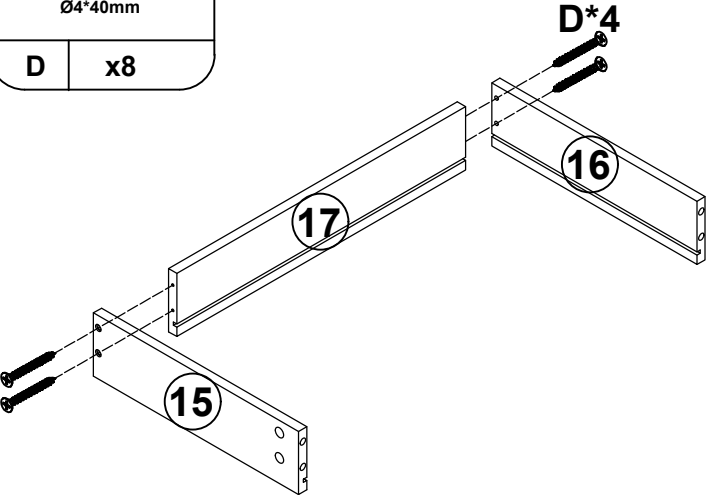
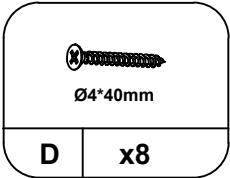


X2PCS

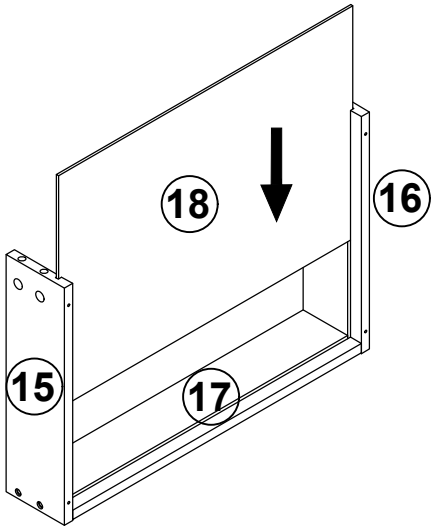

X2PCS

STEP 17

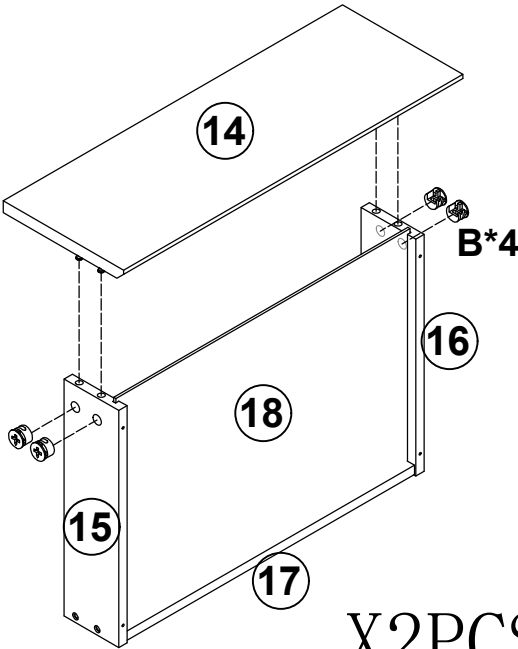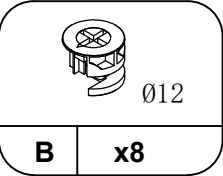

X2PCS

STEP 18



M3*12mm

G

x8



L

300mm

K

x2





R

300mm

L

x2

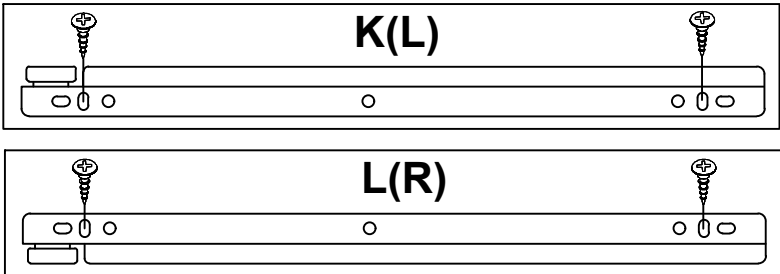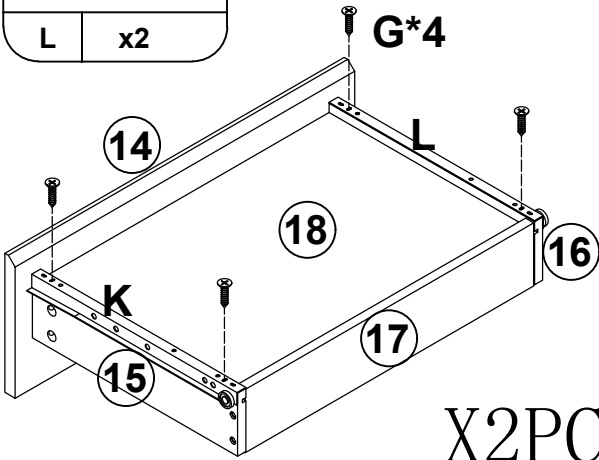

STEP 19

