
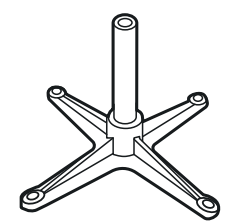
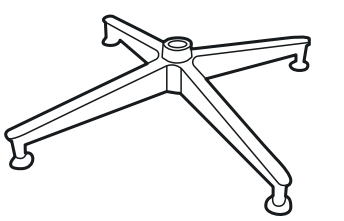
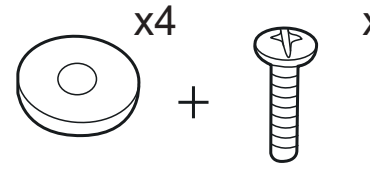
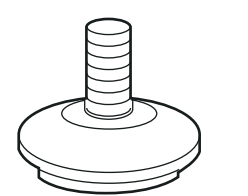
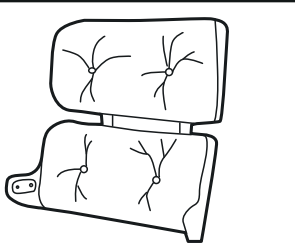
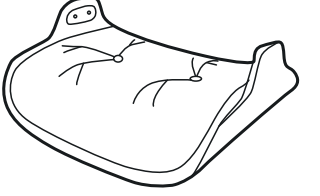
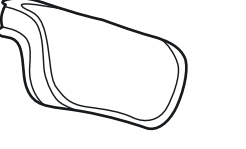
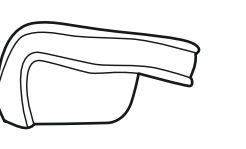
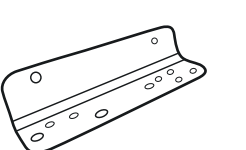
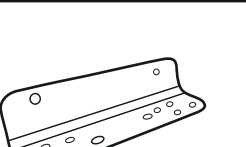
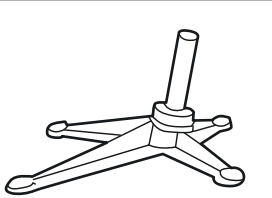
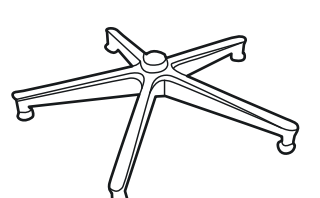
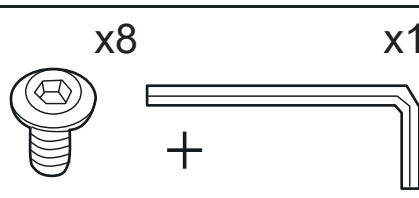

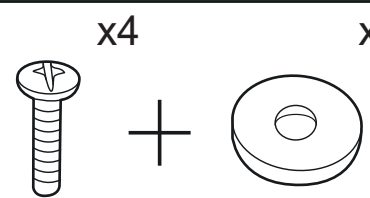
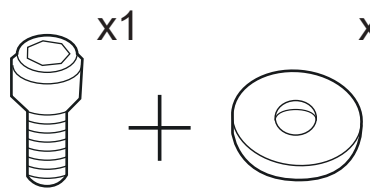
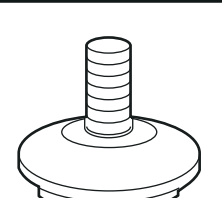
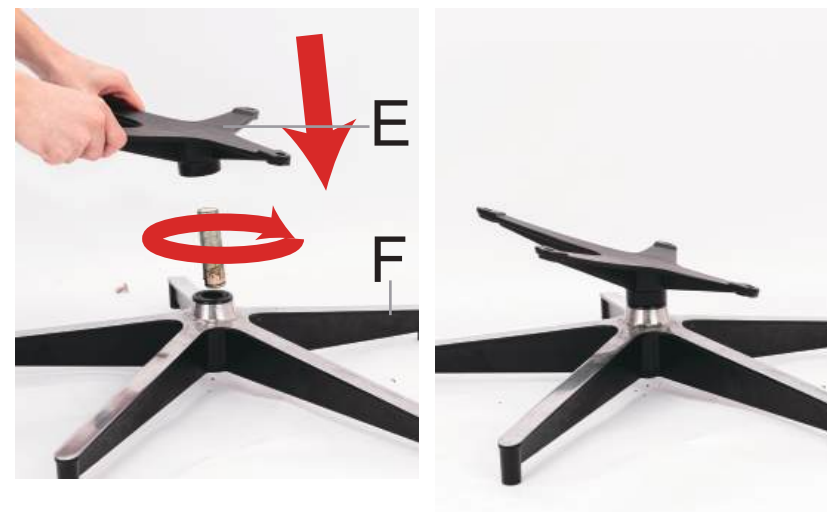


Label	Picture	Description
A <sup>1</sup>	 x1	Ottoman cushion
B <sup>1</sup>	 x1	Chair Base
C <sup>1</sup>	 x1	Metal Leg
P+T	 x4	Chair Washer+ Phillips head screw-Ø6*25mm
J	 x4	Hardware mats
A <sup>2</sup>	 x1	Chair Back Rest
B <sup>2</sup>	 x1	Chair Seat
C1 <sup>2</sup>	 x1 Left	Chair Arm Rest
C2 <sup>2</sup>	 x1 Right	Chair Arm Rest
D1 <sup>2</sup>	 x1 Left	Steel Bracket
D2 <sup>2</sup>	 x1 Right	Steel Bracket
E	 x1	Chair Base
F	 x1	Metal Leg
O+R	 x8 + x1	Hexagon Sliver Screws-M8*16mm +Allen Key
Q	 x4	Phillips head screw-Ø6*25mm
P+T	 x4	Phillips head screw-Ø6*25mm+Chair Washer
O+I	 x1 + x1	Hardware Mats
K	 x5	Hardware mats


Open the two boxes and take out products.




**1** Align the chair legs central hole along with chair base rod, press and rotate it down to the end until tighten.



**2** Put the chair legs upside down, install five foot pads at the bottom of chair legs.

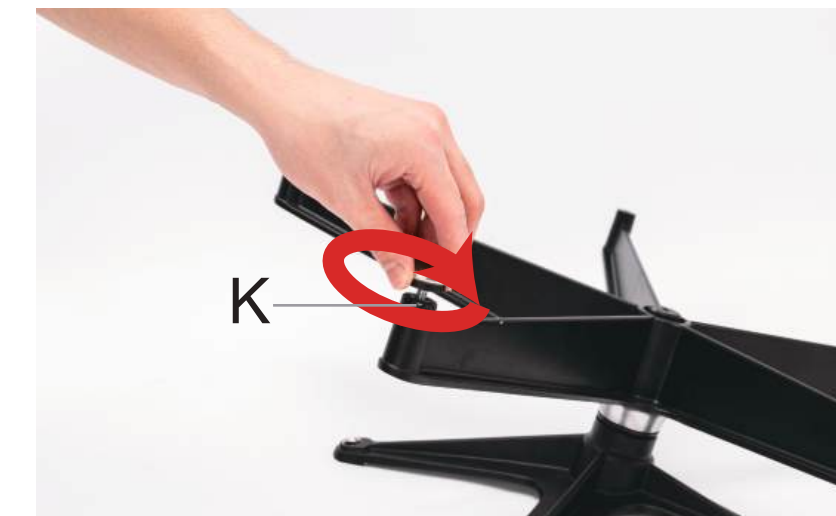

**3** Install the chair leg component to chair seat, please notice to put rubber pad before fixing the chair base under the chair seat.

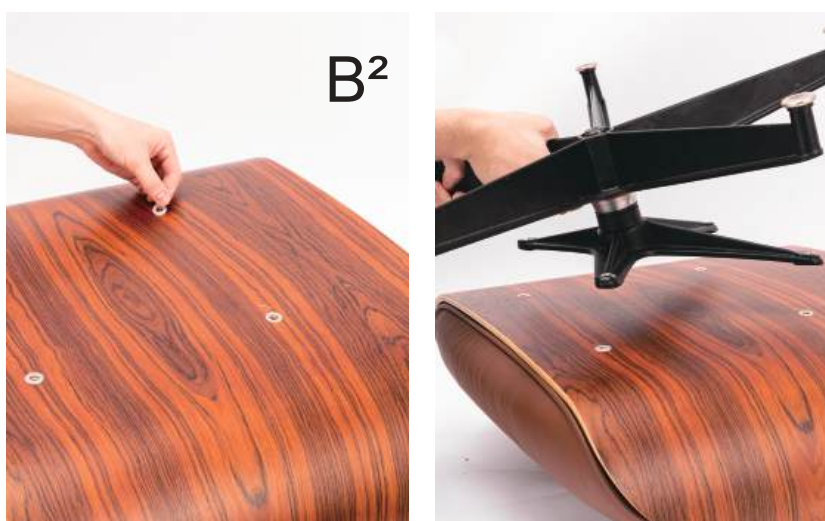

**4** Use screws to fix the chair base and chair seat.



**5** Install back chair back rest and seat with steel bracket on both side. Fix them with screws.




**6** After the steel brackets are fixed, install arm rests on both side.



**7** Tighten the arm rest with screws underneath.



**8** For the installation of the ottoman, use rubber pads to protect the bottom plate.

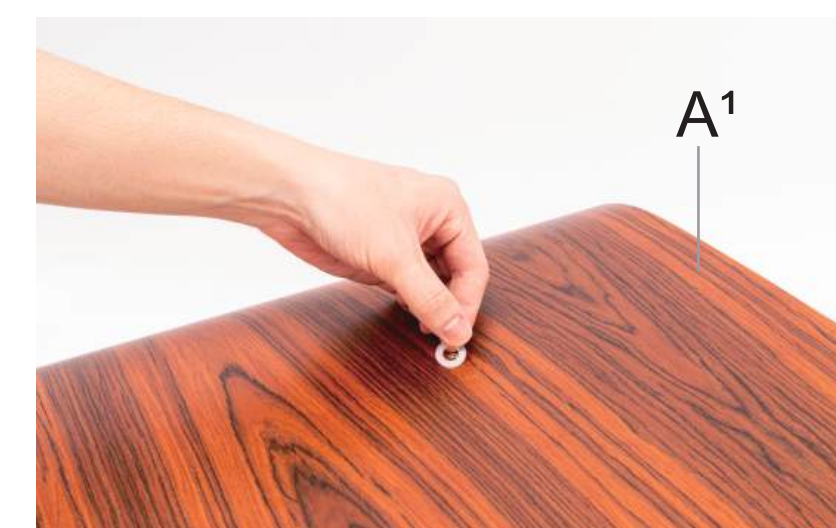

**9** Refer to step 1 and 2 installation for ottoman base component.



**10** Refer step 4 of installation for ottoman setup.



**11** Follow the above steps and you will get a perfect recliner.



**Note**



# Mid Century Lounge Chair

## Installation Guide



Factory Insight



### For European Only

SINO-SEAR GmbH,  
Feuerbachstrasse 11,  
14471 Potsdam,  
Germany  
Tel:+49 331 9513 0908  
E-Mail:info@sino-sear.com

[www.rafflehomedesign.com](http://www.rafflehomedesign.com)

 [contact@rafflehomedesign.com](mailto:contact@rafflehomedesign.com)



WhatsApp contact