


Installation & Assembly

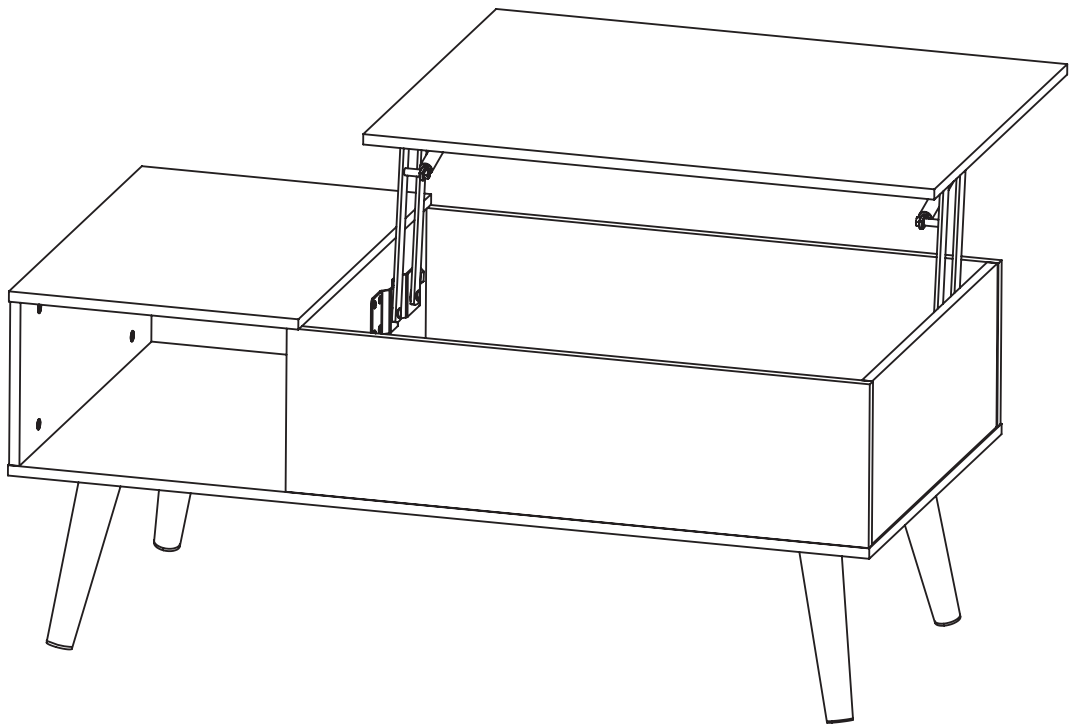

V5.12.0

Wood Lift Top Coffee Table

NOTES

Please follow the assembly instructions precisely and only use the product as intended.

If an odor is present when first opening the package, please leave the unwrapped product in a shaded and ventilated area for a few days to air out. Please follow the assembly instructions precisely and only use the product as intended.

Prior to assembly, please check the product for defects or missing accessories. If any defects are found or accessories are missing, do not use product as damage or injury may occur; Please contact us for assistance and replacement.

It is suggested you regularly check the products bolts and connections to ensure safe use.

Assemble the item on a soft flat and clean surface to avoid scratches and damage.


It is recommended that two people assemble this product. During assembly, please only slightly tighten all screws in their correct position first, then fully tighten them. A Philips screwdriver is recommended but not included.

WARNINGS

During assembly, keep parts and packaging materials away from children and pets as there could cause injury and are a potential choking hazard.







Avoid sharp objects or corrosive chemicals to prevent damage to the product.

Please open the item slowly and cautiously to avoid pinching your hands by metal joints, especially children.

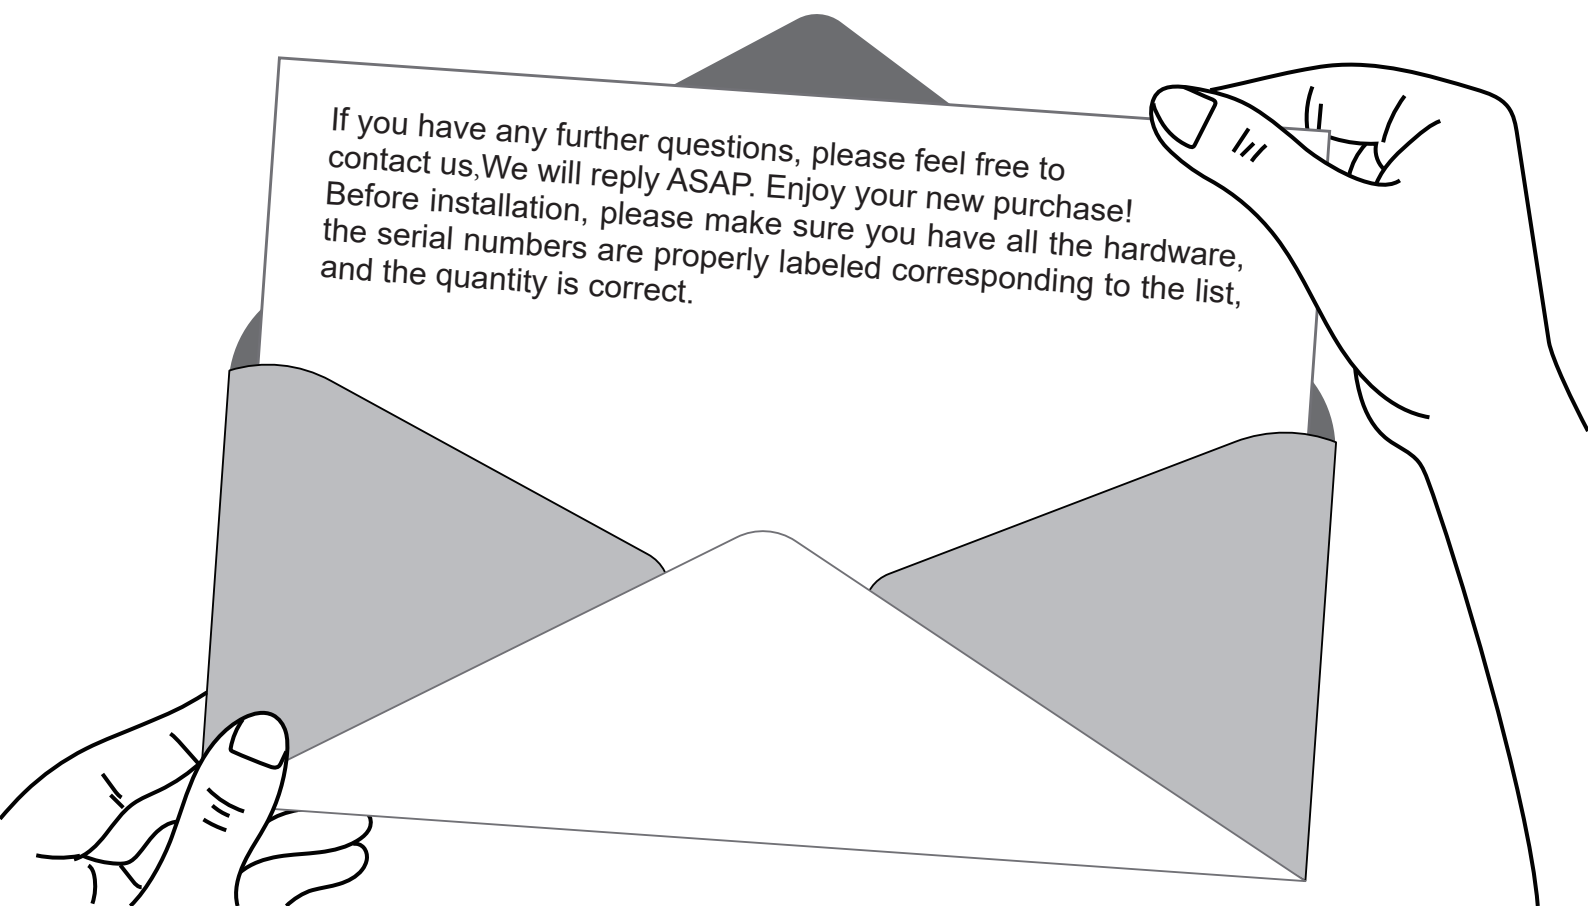


If you have any further questions, please feel free to contact us, We will reply ASAP. Enjoy your new purchase! Before installation, please make sure you have all the hardware, the serial numbers are properly labeled corresponding to the list, and the quantity is correct.














INSTRUCTIONS

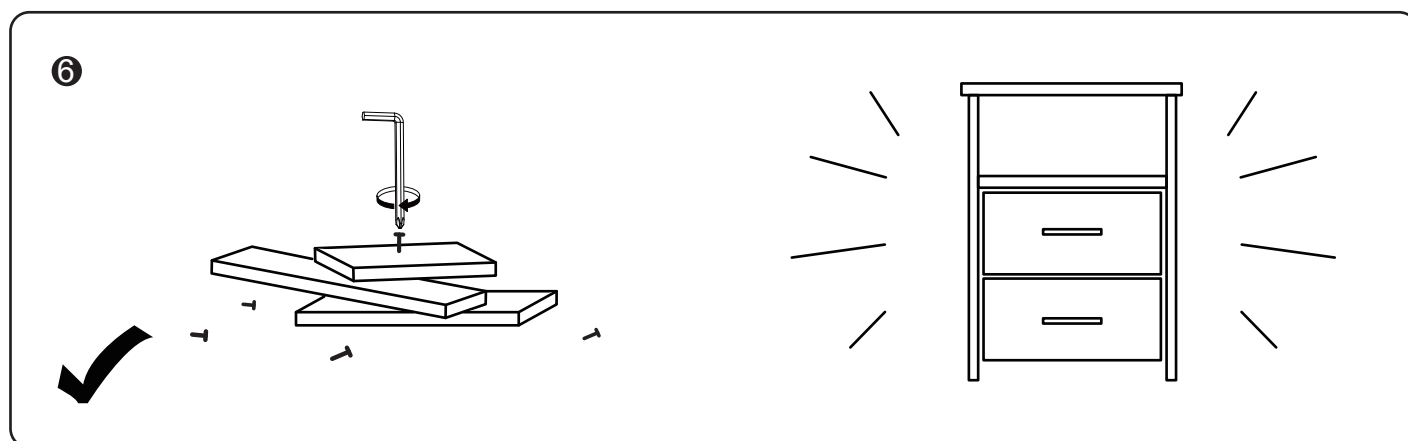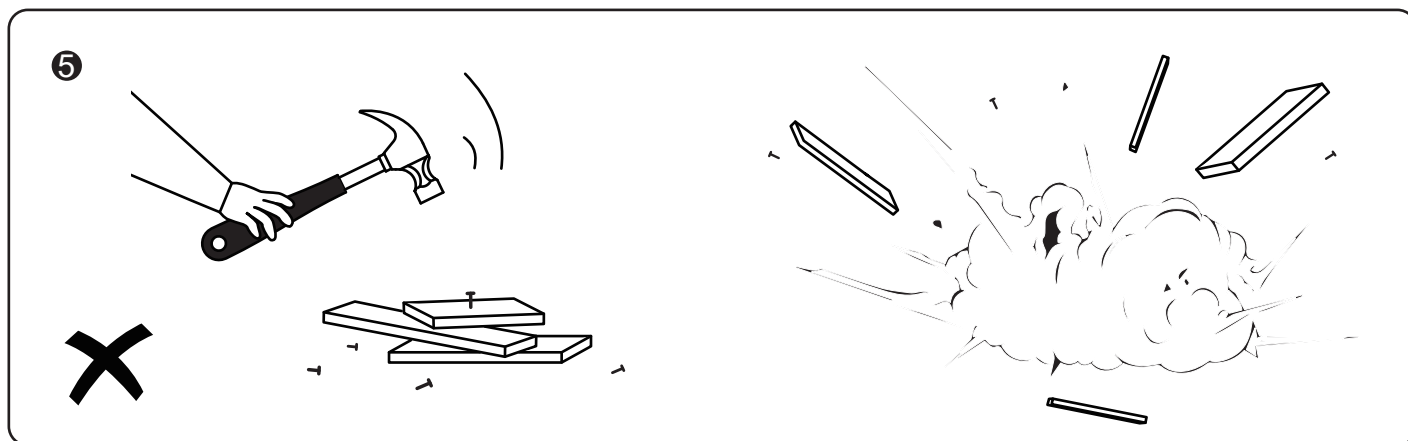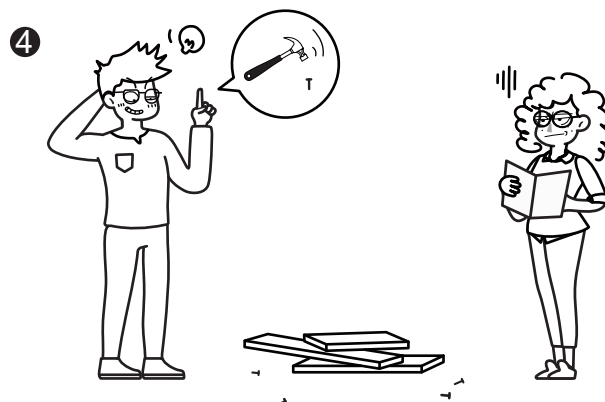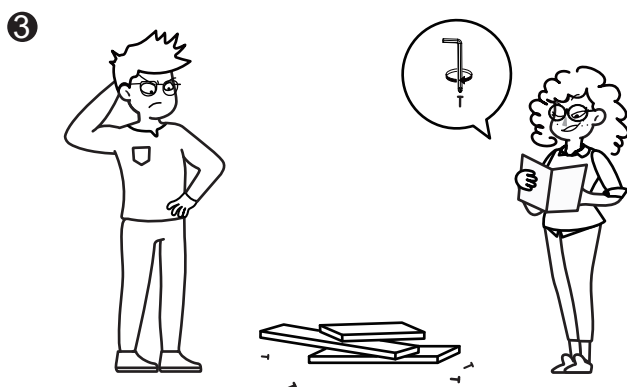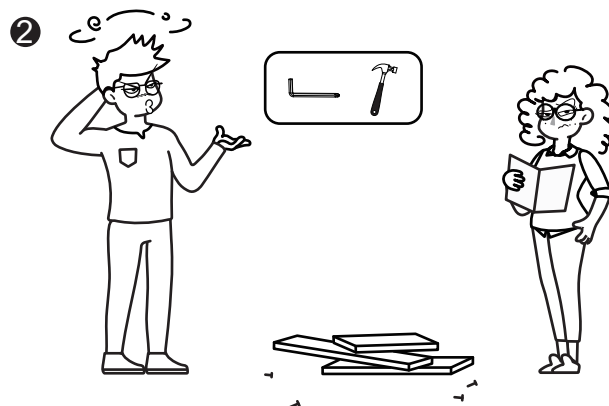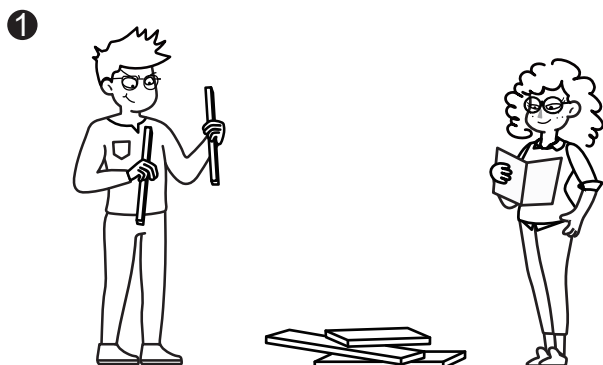

EXPLODED DRAWING


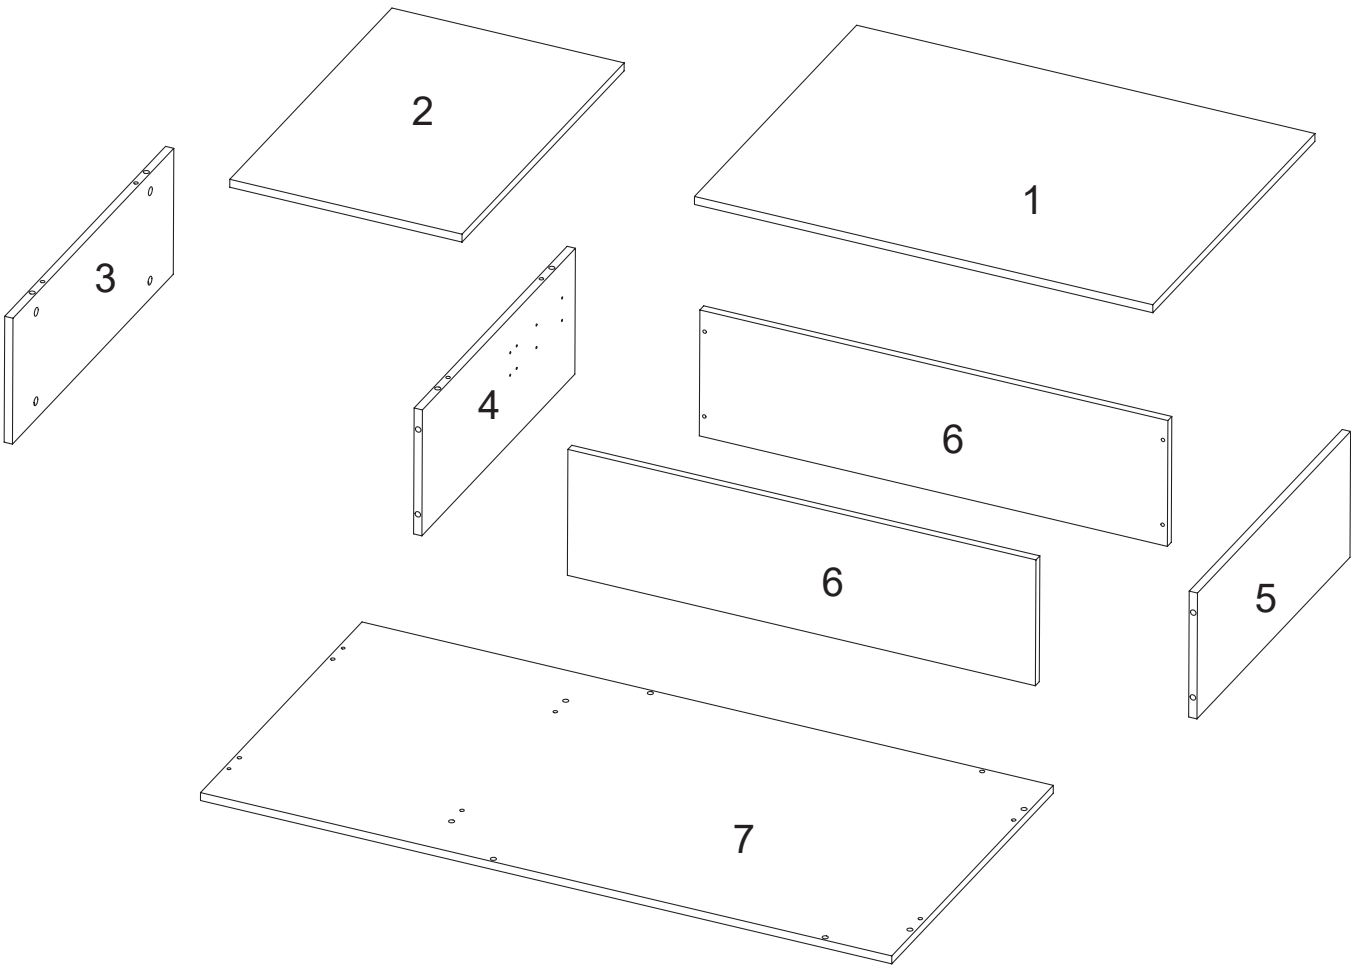


PARTS

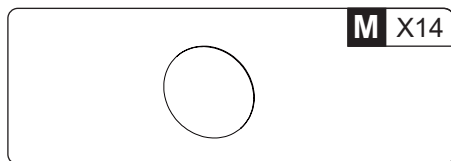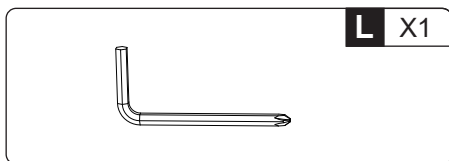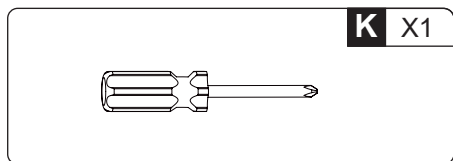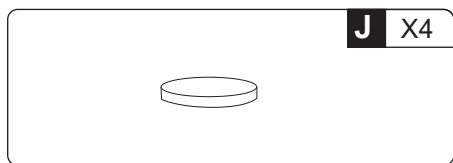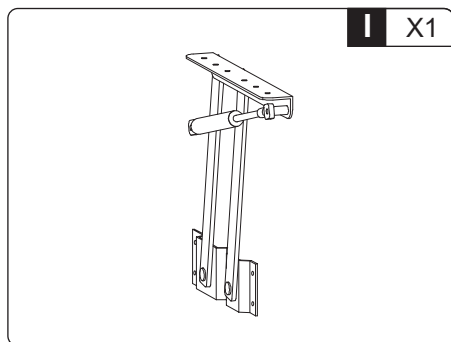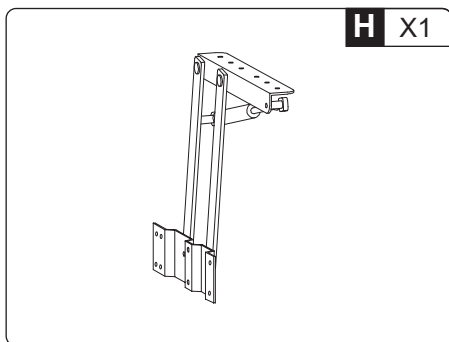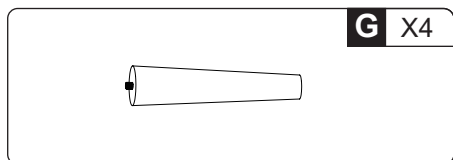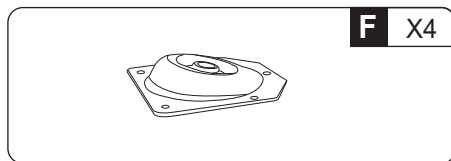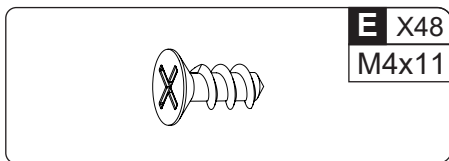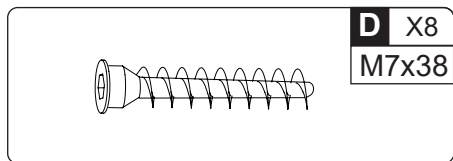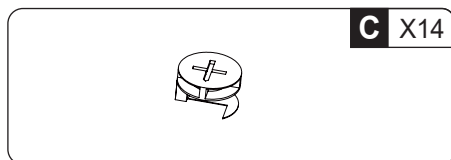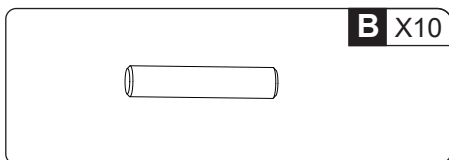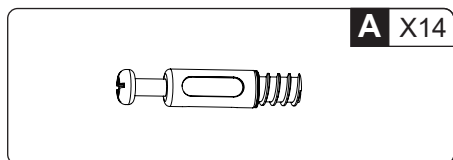


REMARK

MINIFIX POSITION



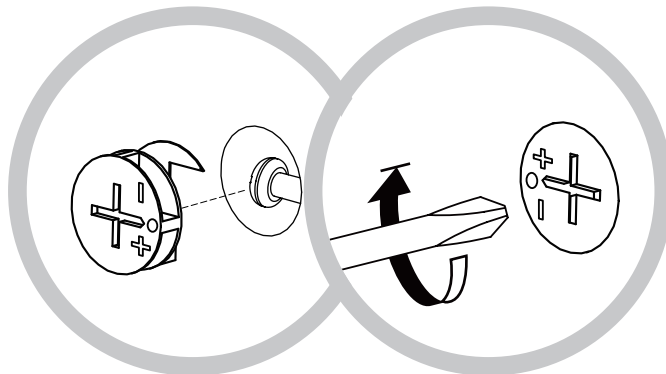
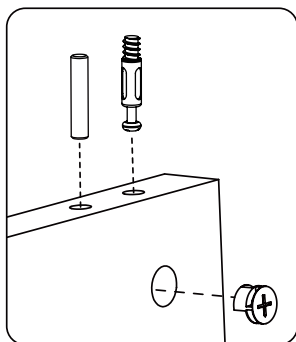


Step 1

i) Put a blanket under the board to avoid scratch or damage.

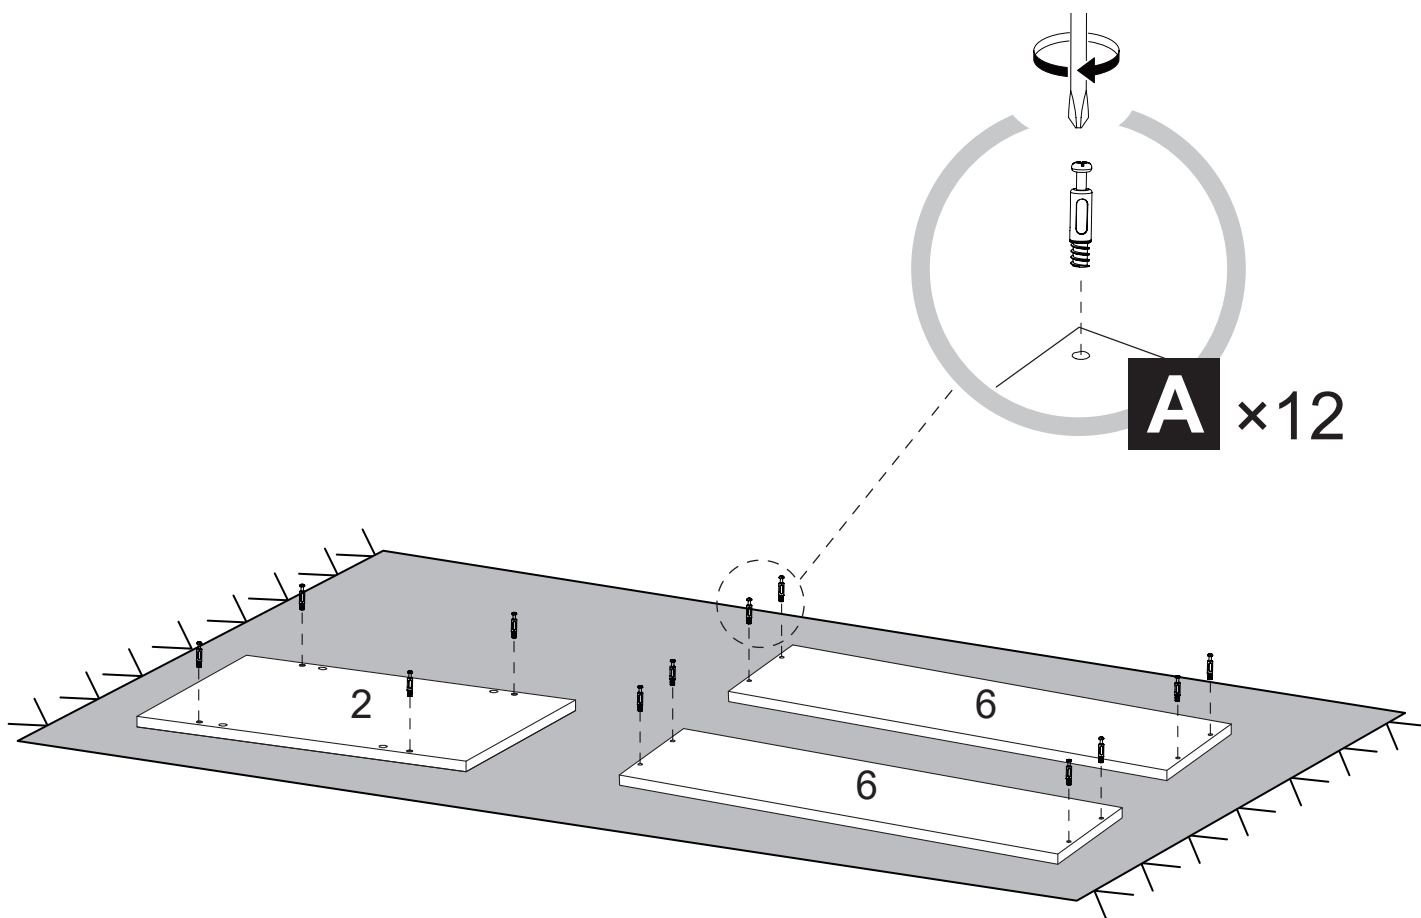


Step 2

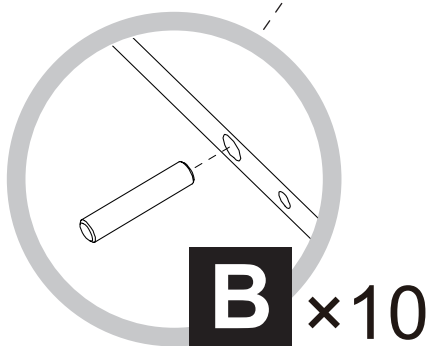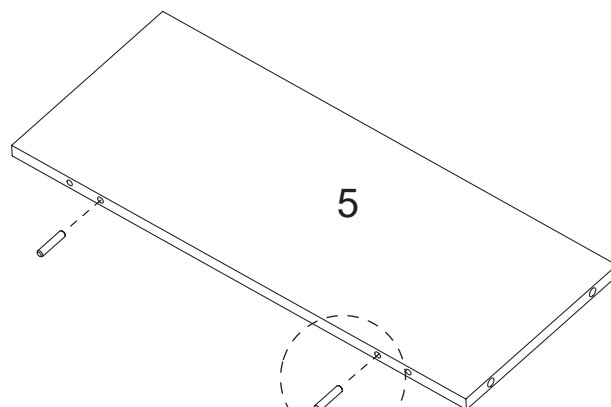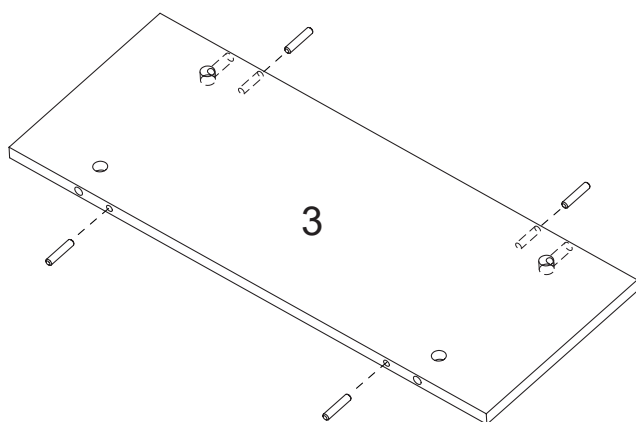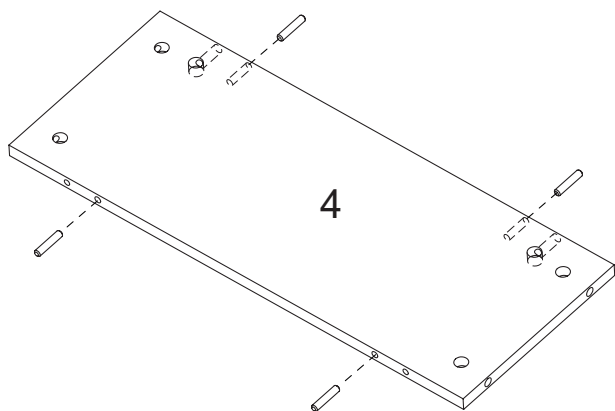


Step 3

i) Fully tighten all the screws after all the screws are in right place.



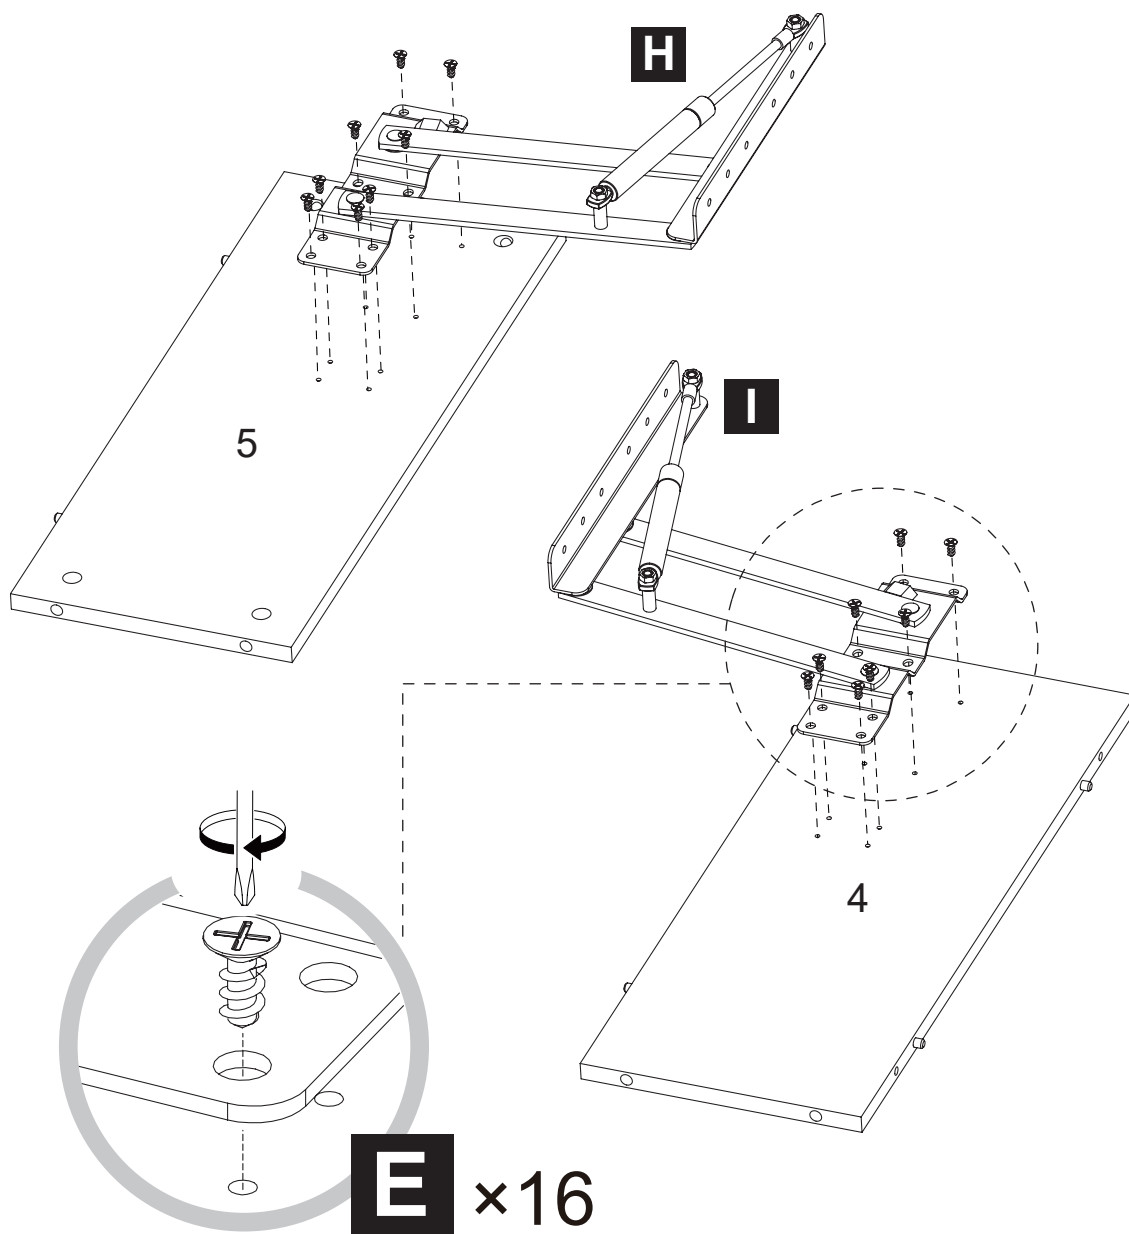


Step 4


i) Fully tighten all the screws after all the screws are in right place.

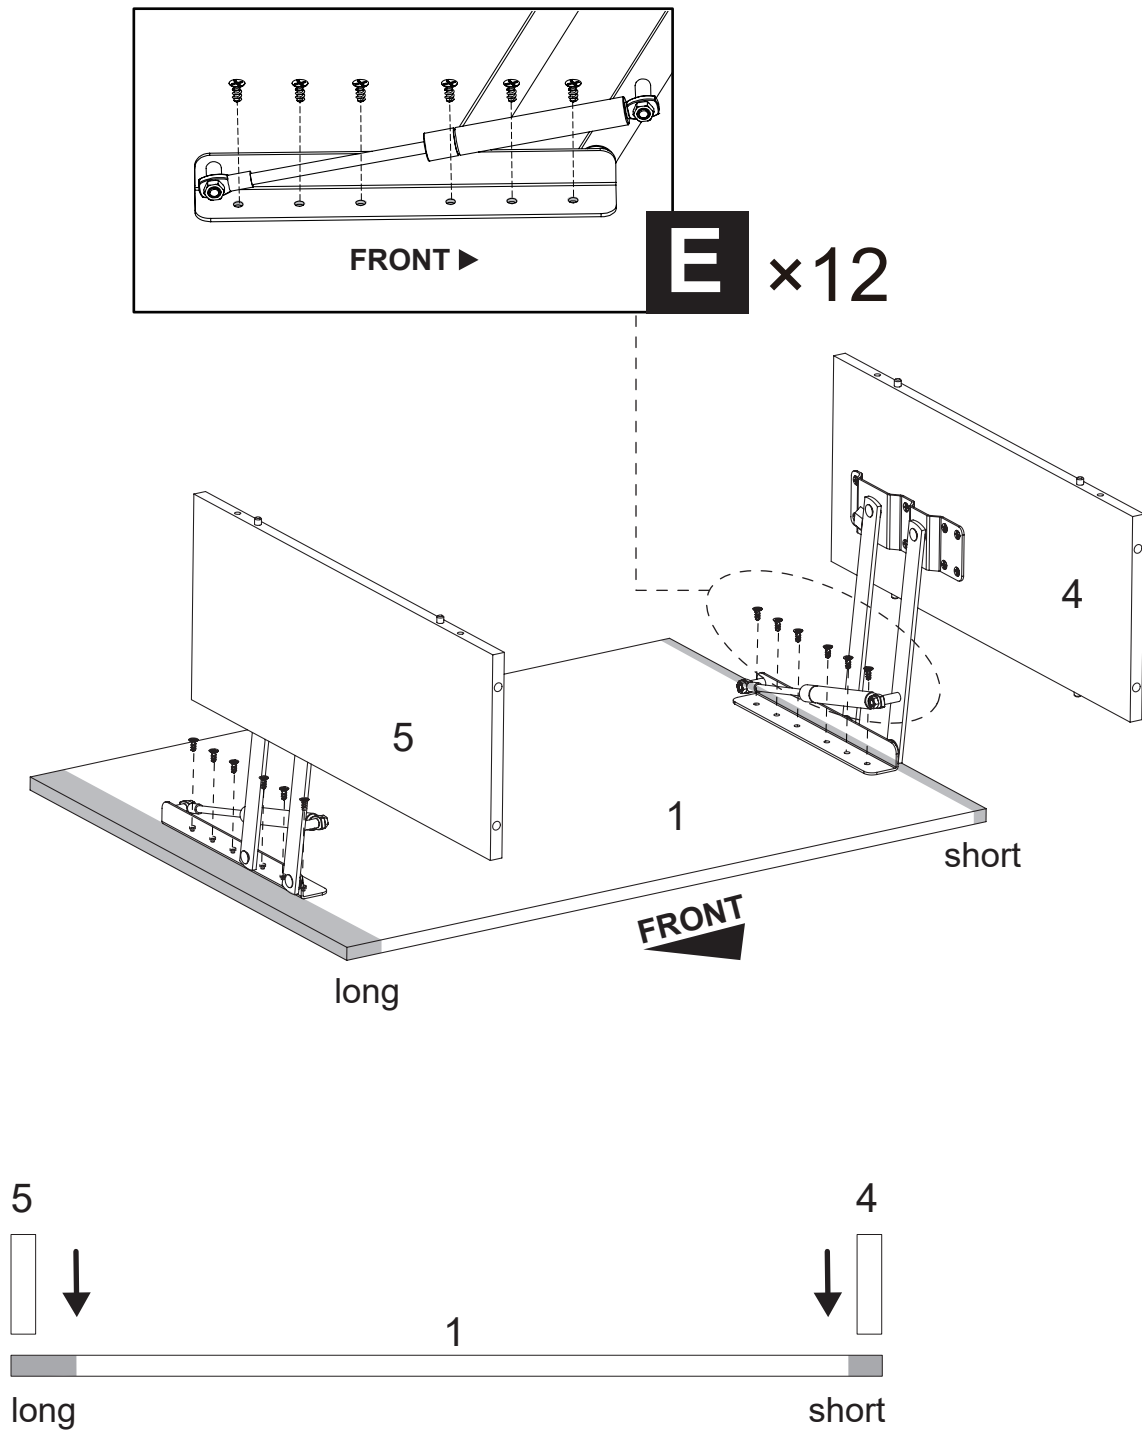

Step 5

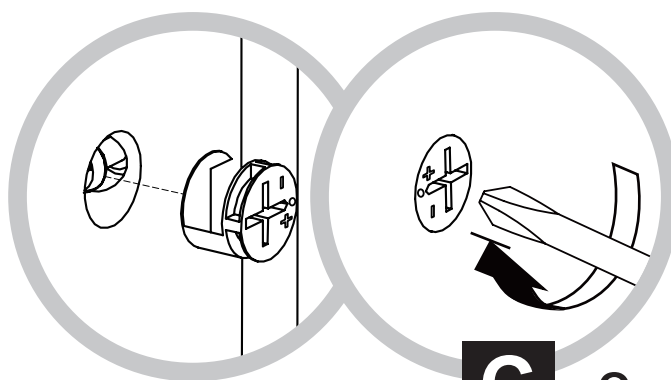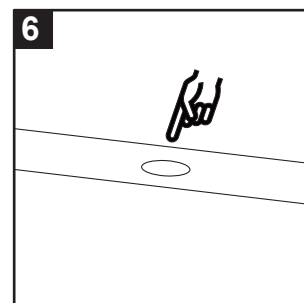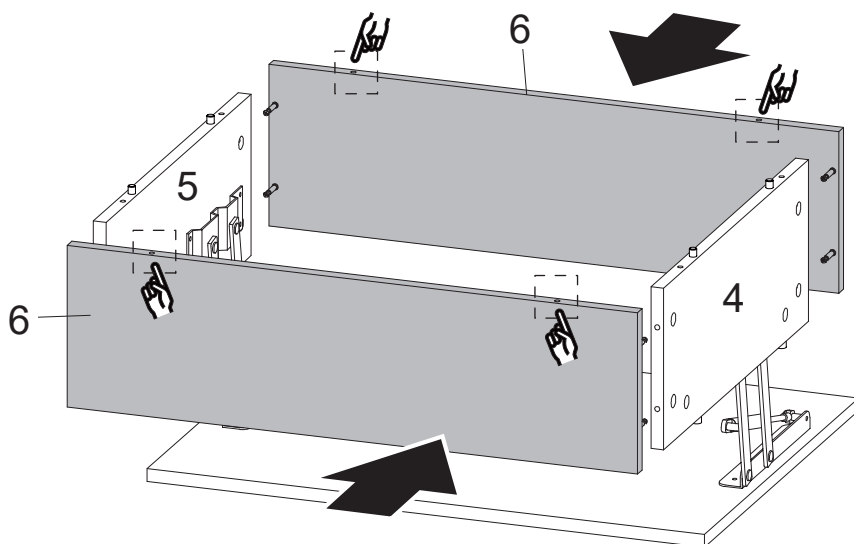


C × 8

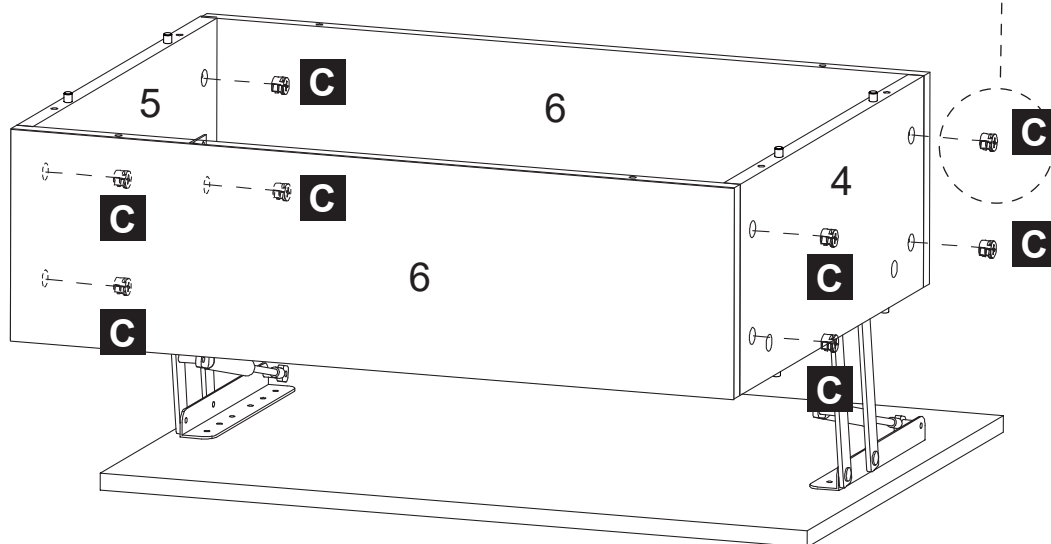


Step 6

i) Fully tighten all the screws after all the screws are in right place.

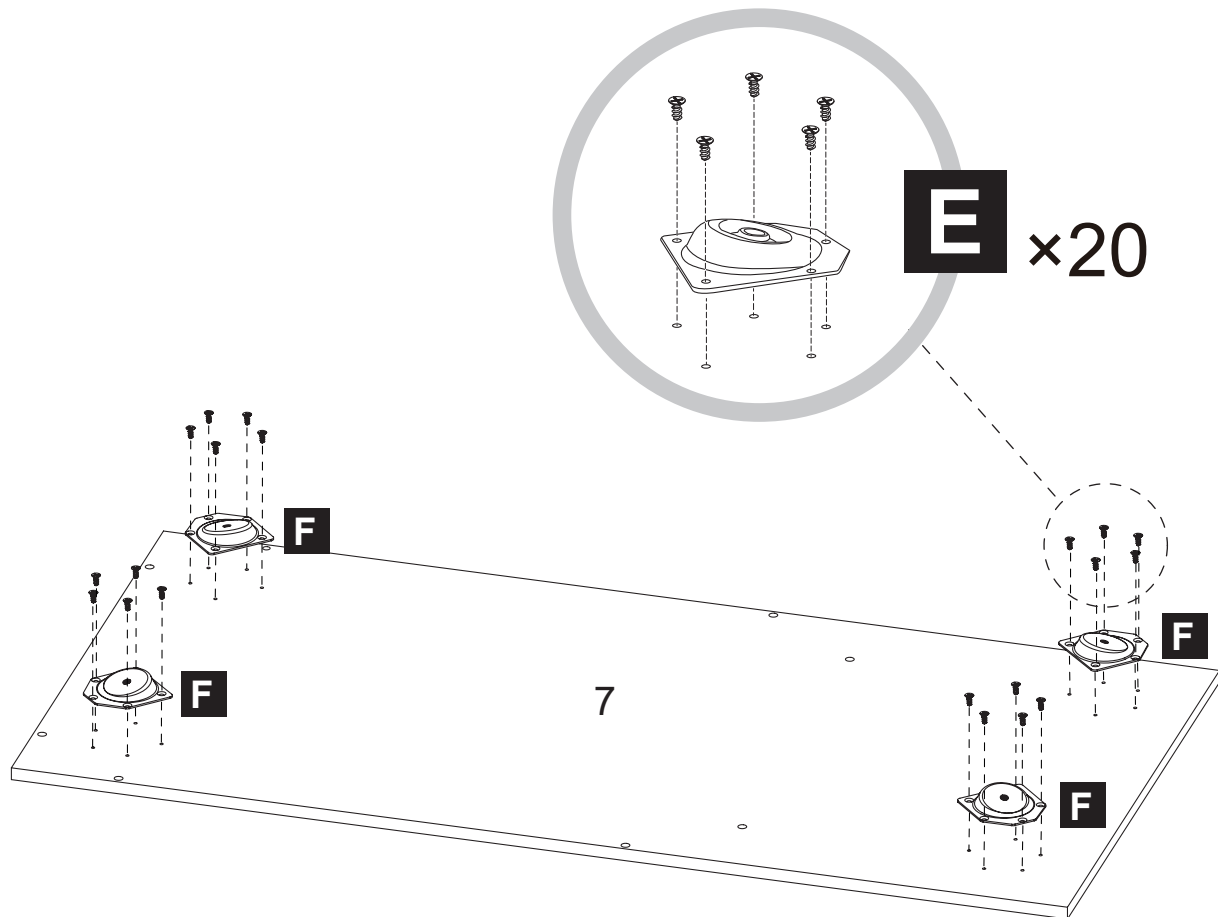


Step 7

i) Fully tighten all the screws after all the screws are in right place.



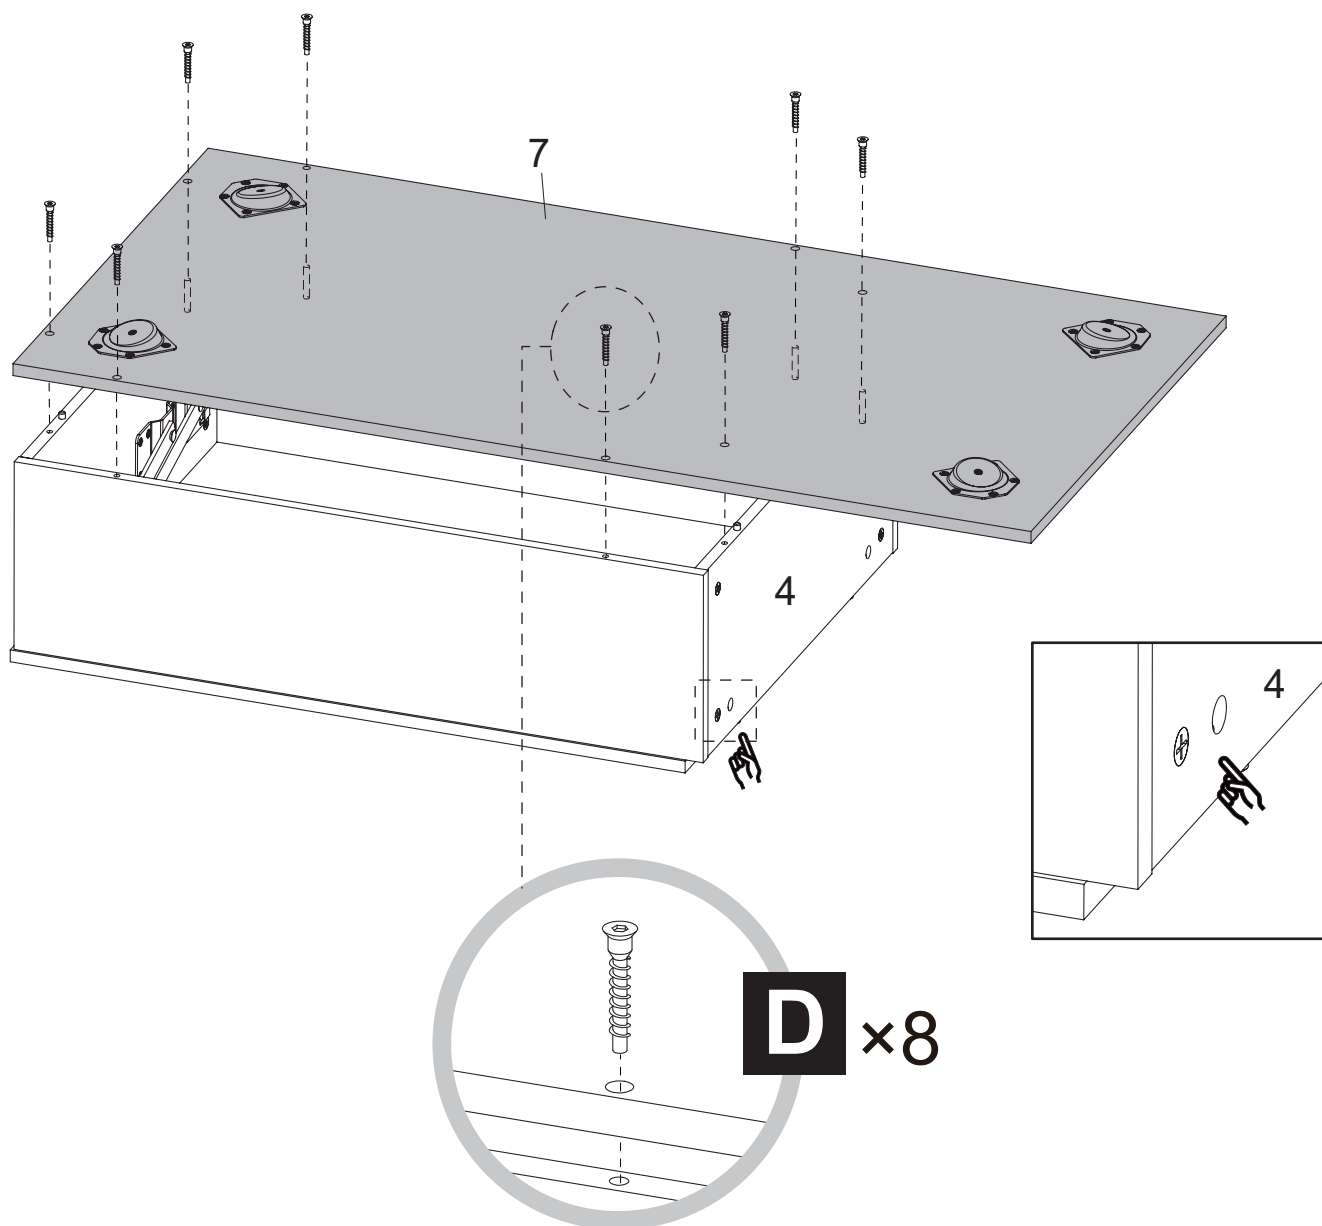


Step 8



i) Please wait for 3 minutes until it glues completely.

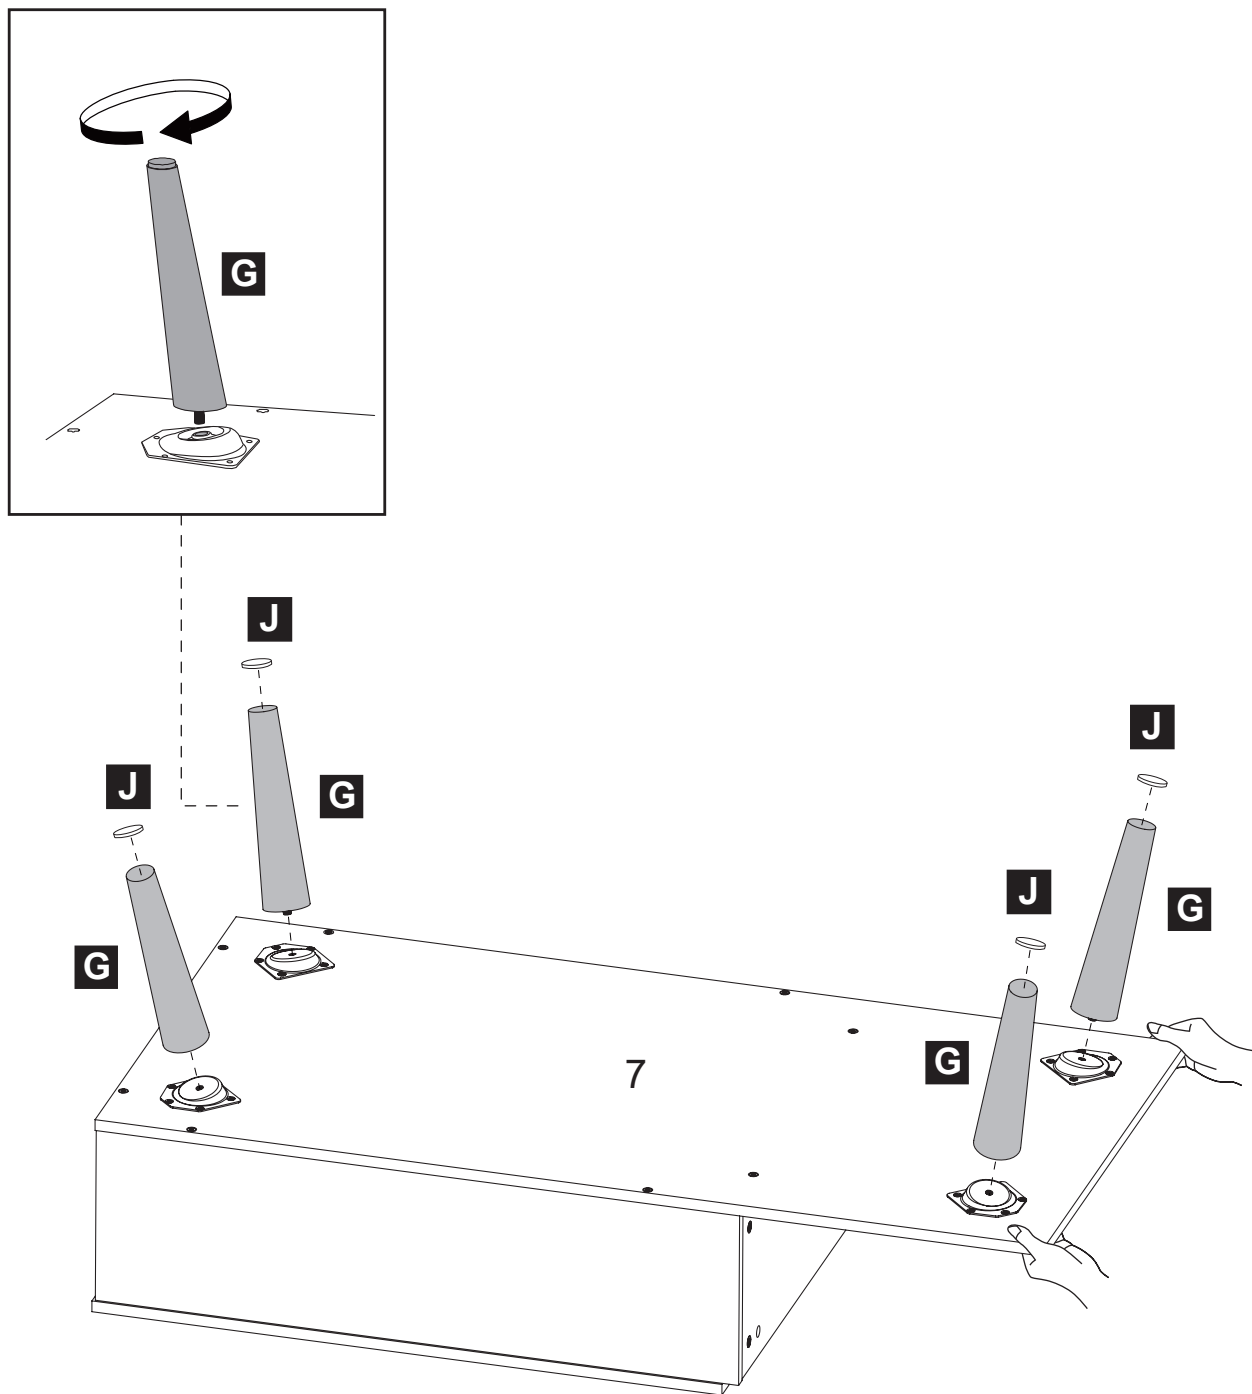


Step 9

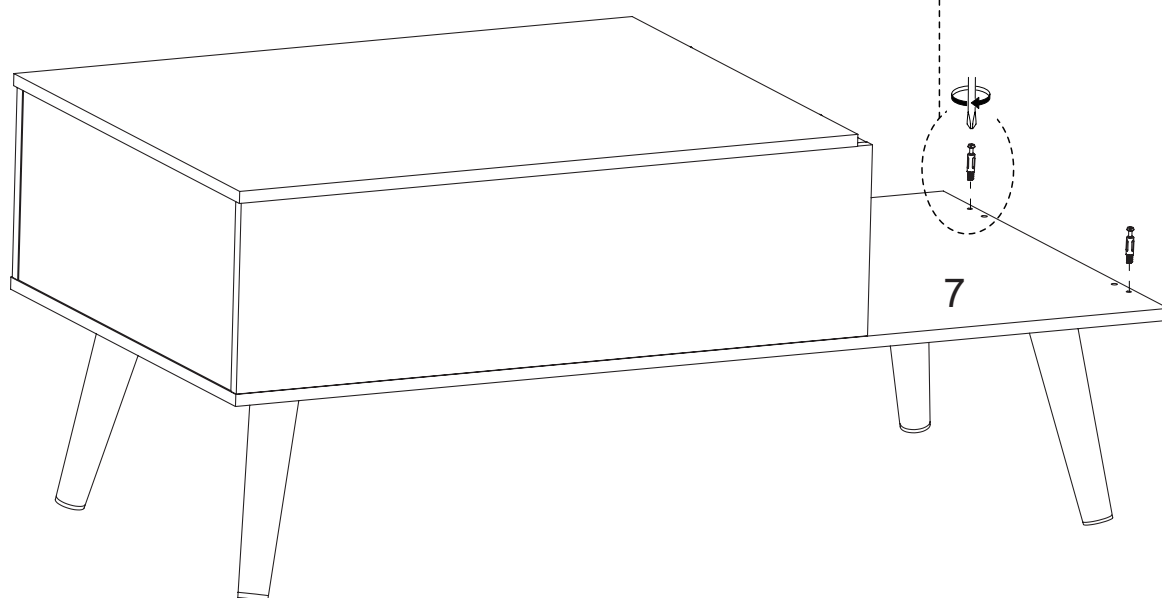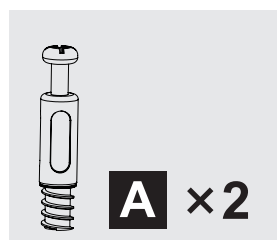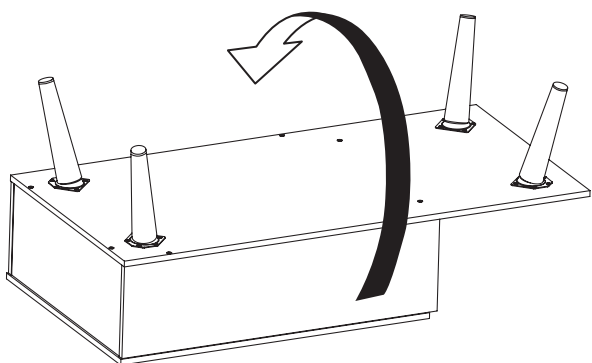

Step 10

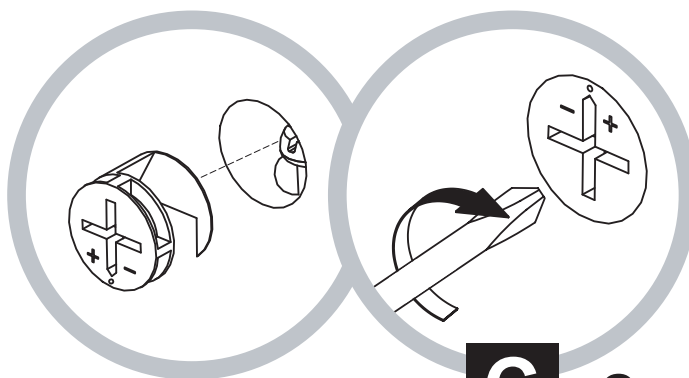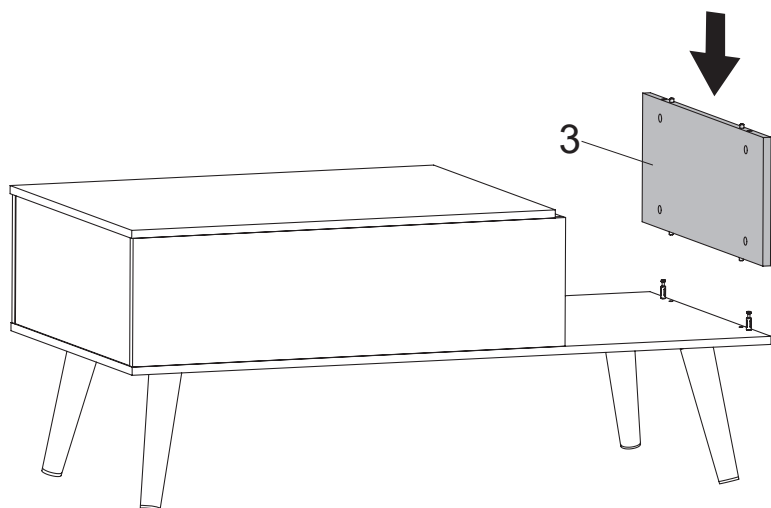


C × 2


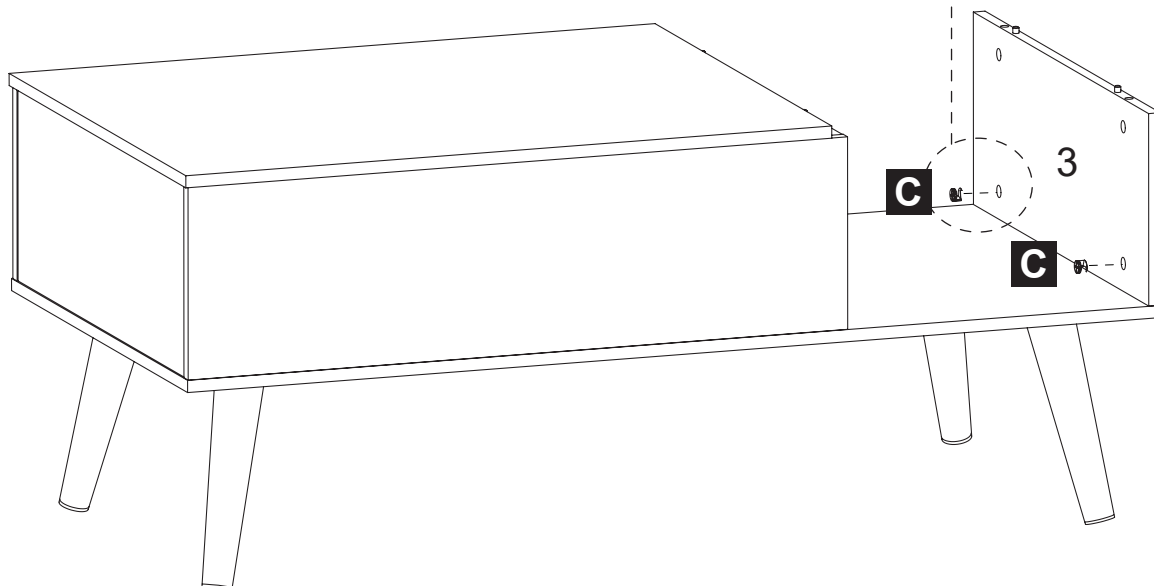


Step 11

- i) The two top plates are cut from a whole board.
Make sure arrows on part **1** and **2** point to each other.

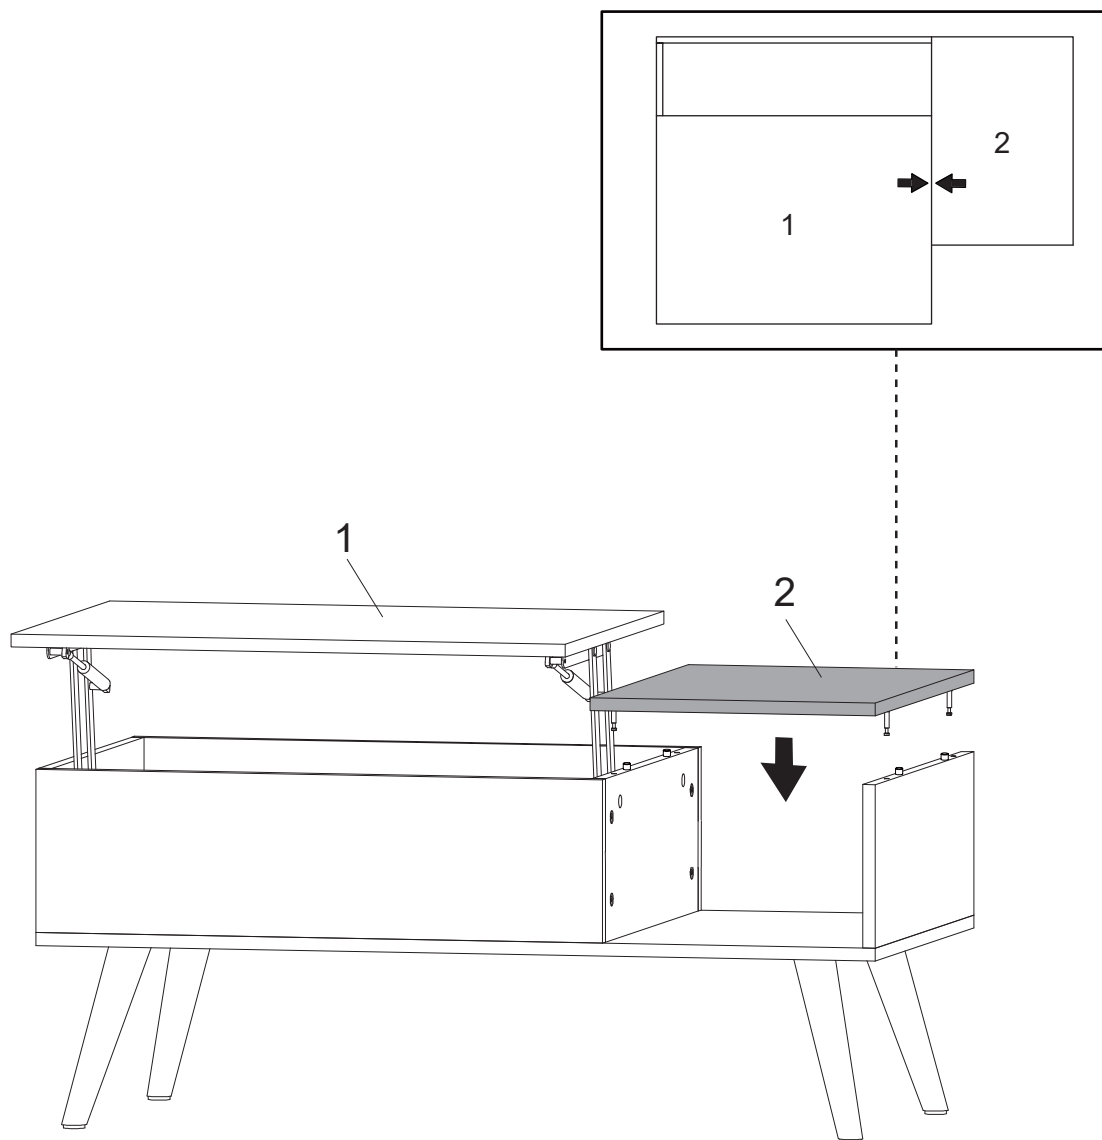


Step 12

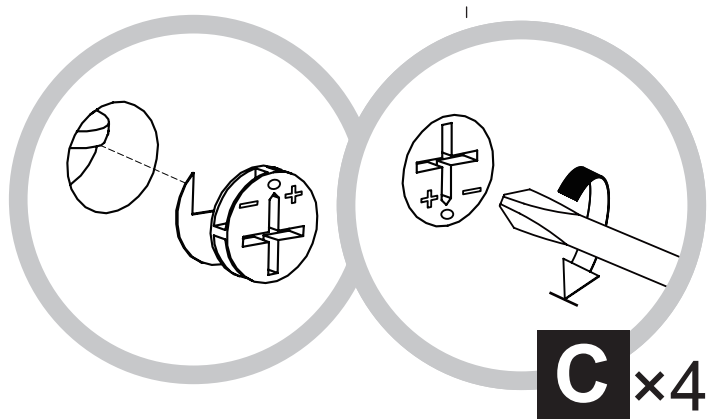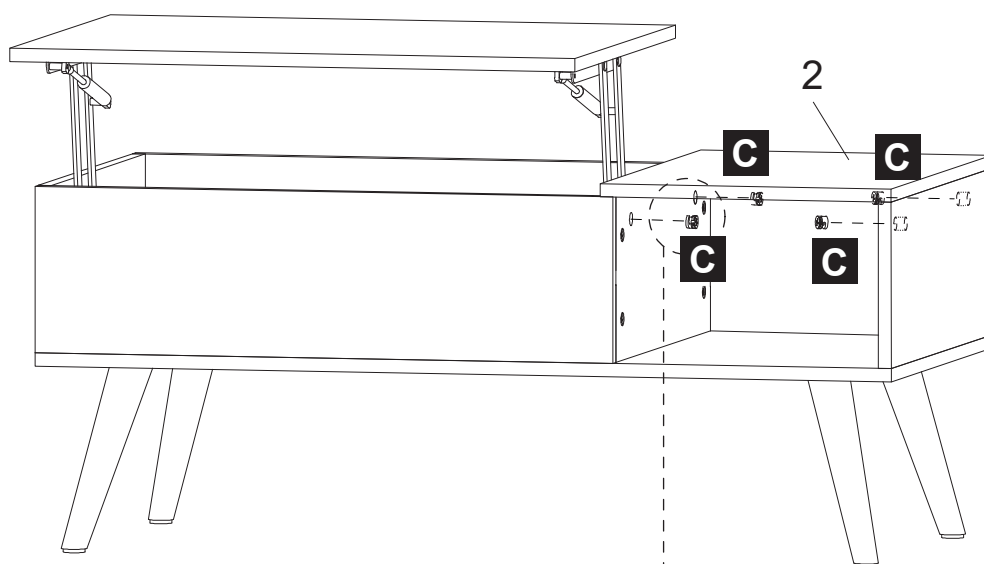

Step 13

i) Please paste the hole sticker according to actual needs.

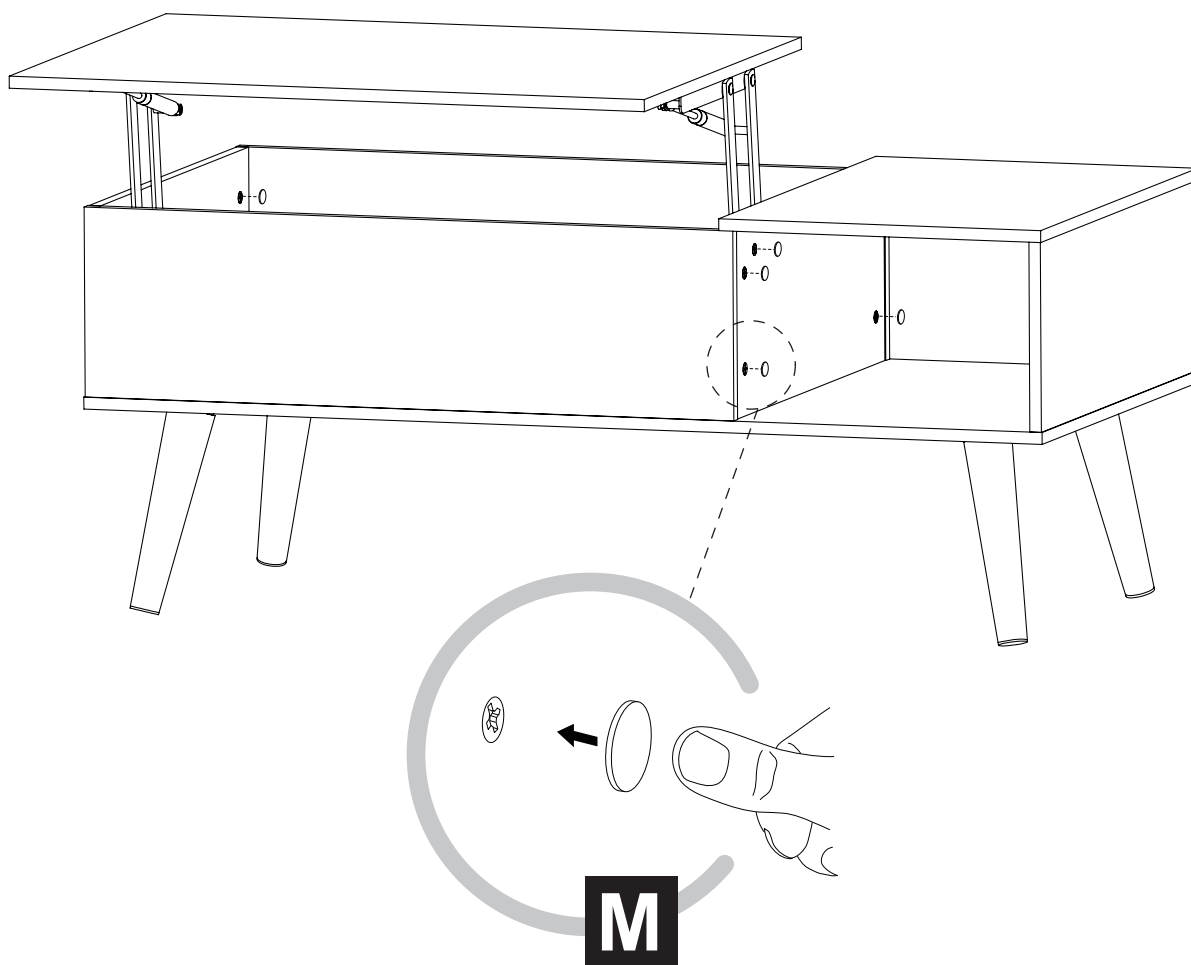

Step 14

