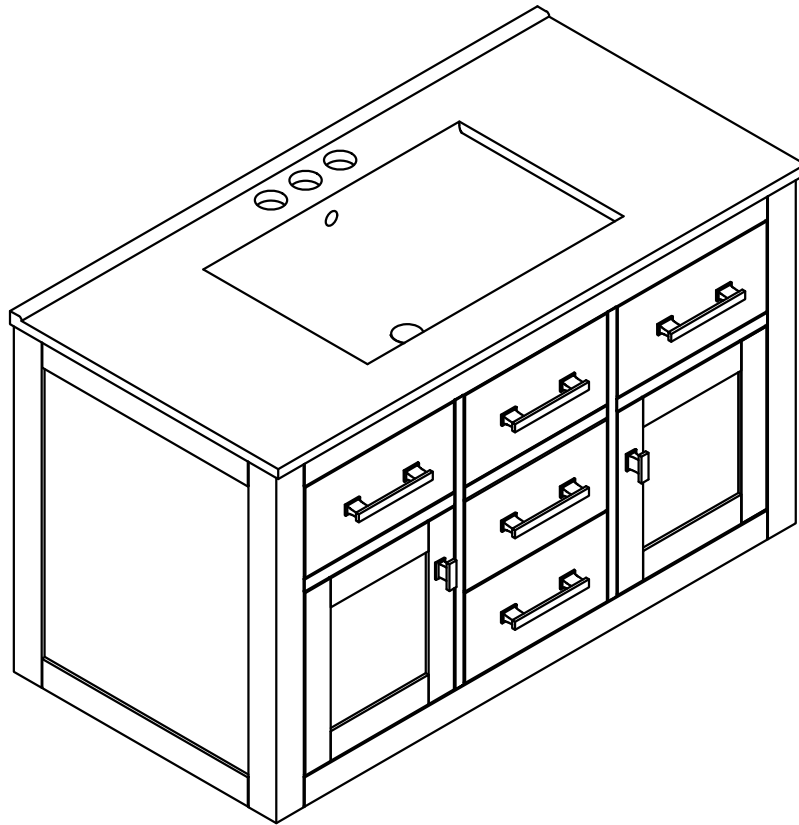


ASSEMBLY INSTRUCTIONS

36 INCH BATH VANITY (COMBO)

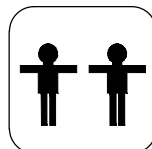
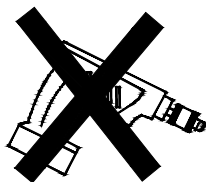


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"



* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!
* Please assemble on a clean soft surface to avoid damage.




+



Tools Required



(Not Included)



(Not Included)

IMPORTANT:
PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







Before Installation

Important – Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions









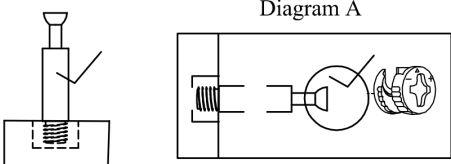
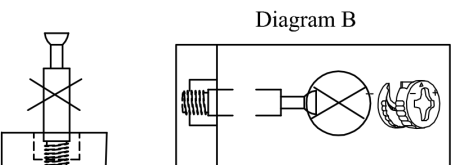
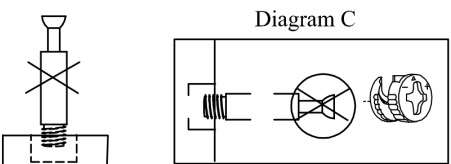

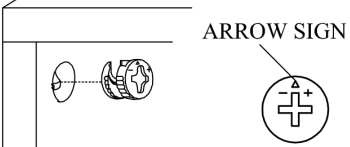
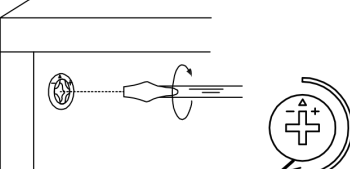
	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

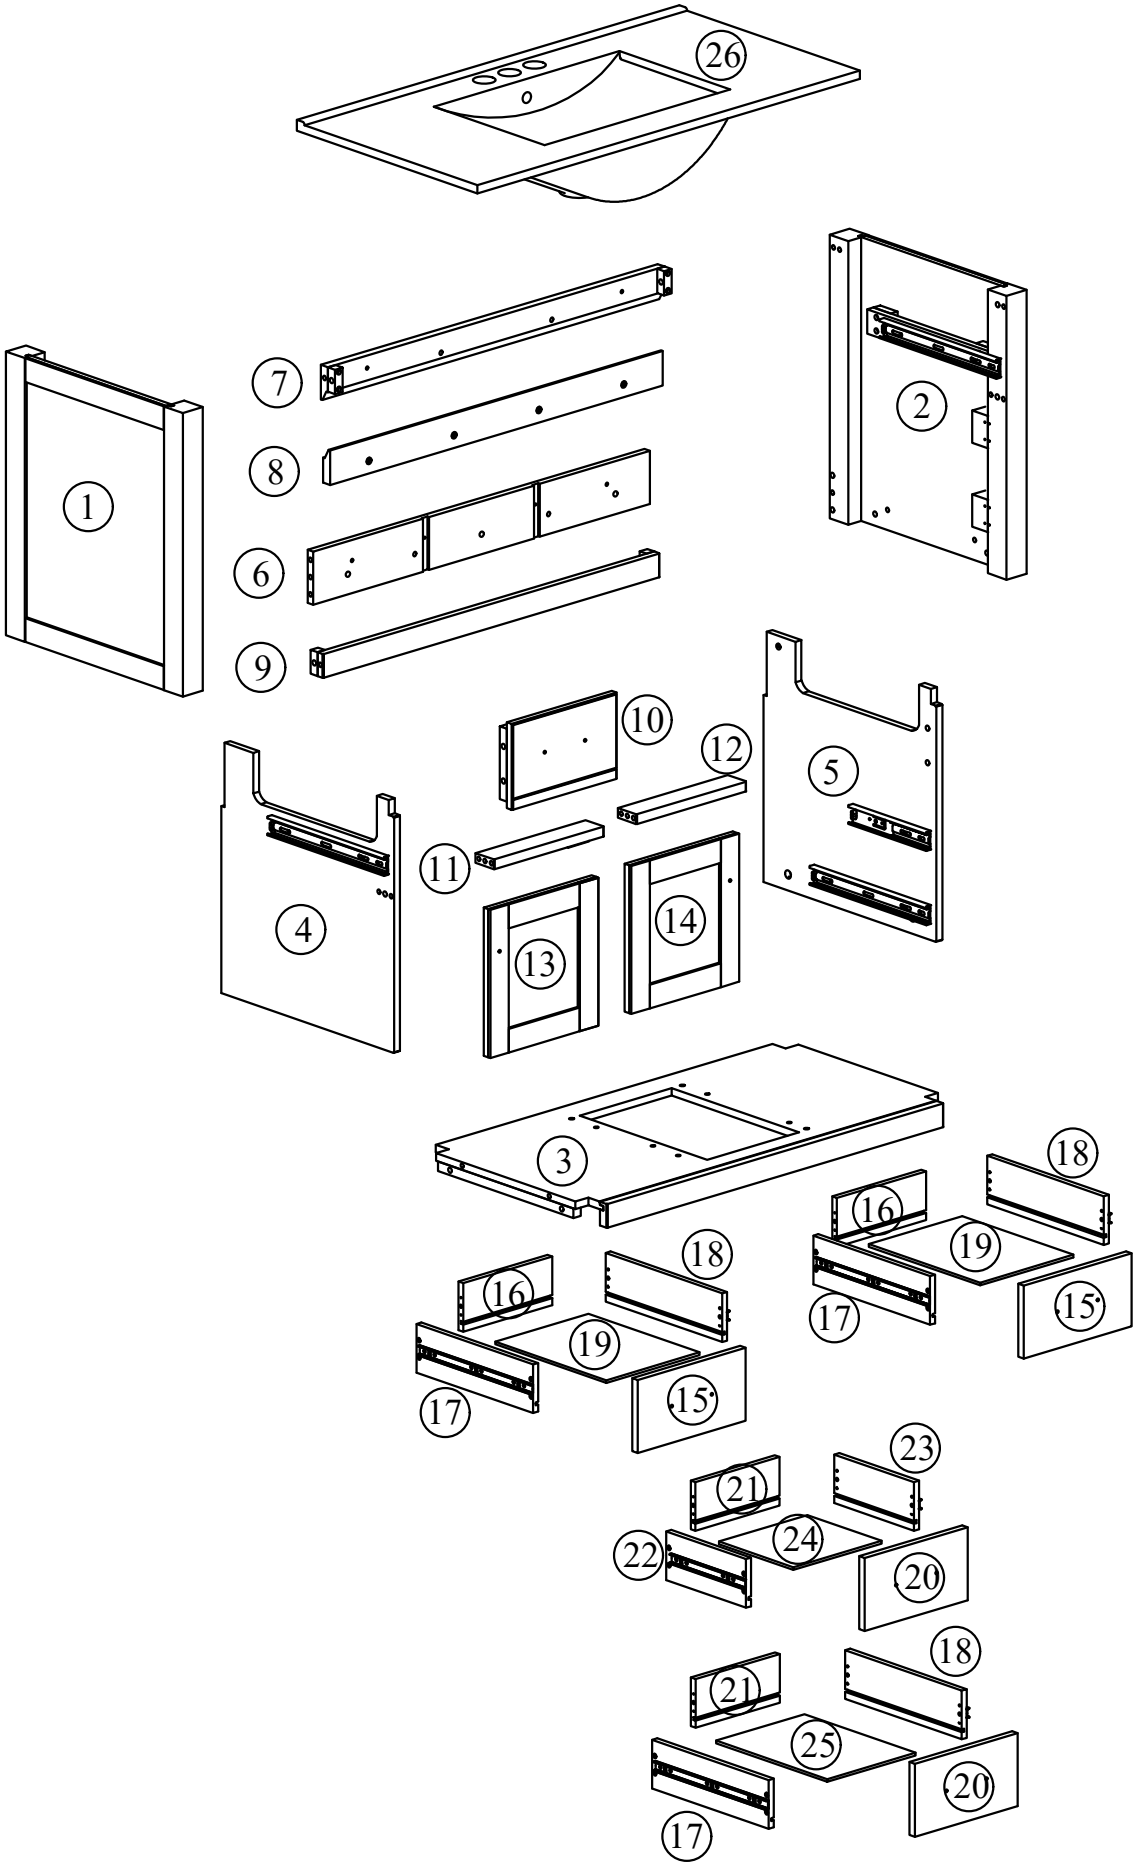Detail View - CABINET








Identifying the Hardware-Identify the hardware using the illustrations below.

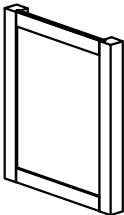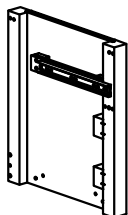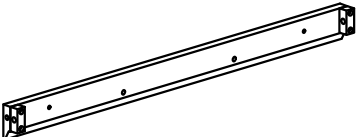
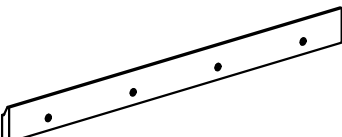
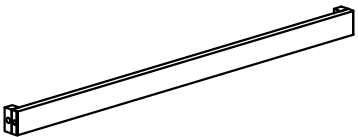
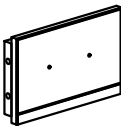


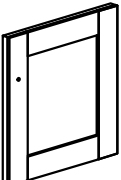
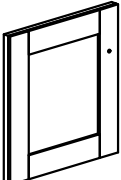
Part List-N710P481823

1		2	
3		4	
5		6	
7		8	
9		10	
11		12	
13		14	

Part List-N710P481823


15		16	
Front Of The Side Drawer - 2pcs		Back Of The Side Drawer - 2pcs	
17		18	
Drawer Side Panel (L) - 3 pcs		Drawer Side Panel (R) - 3 pcs	
19		20	
Bottom Of The Side Drawer - 2 pcs		Front Of The Middle Drawer - 2 pcs	
21		22	
Back Of The Middle Drawer - 2 pcs		Side Panel Of The Top Middle Drawer(L) - 1 pc	
23		24	
Side Panel Of The Middle Drawer(R) - 1 pc		Bottom Of The Middle Drawer - 1 pc	
25		26	
Bottom Of The Middle Drawer - 1 pc		Sink - 1pc	

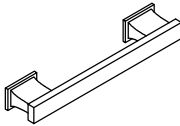Hardware List -N710P481823








A  ø6x35mm	B  ø14.5x12mm	C  ø8x30mm
Three in one bolts(15pcs)	Three in one lock(15pcs)	Wood dowel(24pcs)
D  ø7xø3.5x15mm	E  ø8xø4x20mm	F  ø13x1/4"x28mm
Flat head screw(24pcs)	Round head screw(2pcs)	Hex-Head bolts(12pcs)
G  ø1/4"x16x1mm	H  Handle (5pcs)	I  Handle (2pcs)
Washer(16pcs)	Handle (5pcs)	Handle (2pcs)
J  ø5/32"x32mm	K  ø10xø5x60mm	L  ø12x55mm
Handle screw(8pcs)	Round head screw(8pcs)	Plastic stopper (8pcs)
M  ø5/32"x20mm	N  Damping hinge (4pcs)	O  ø13x1/4"x50mm
Handle screw(4pcs)	Damping hinge (4pcs)	Hex-Head bolts(2pcs)
P  1/4"x10x10mm	Q  ø6x30mm	R  ø8xø4x32mm
Horizontal-Hole bolts(2pcs)	Wood dowel(16pcs)	Round head screw(32pcs)
S  4mm Allen key - 1pc		

STEP: 1


A




15PCS

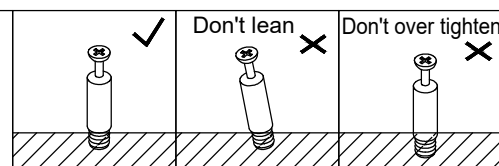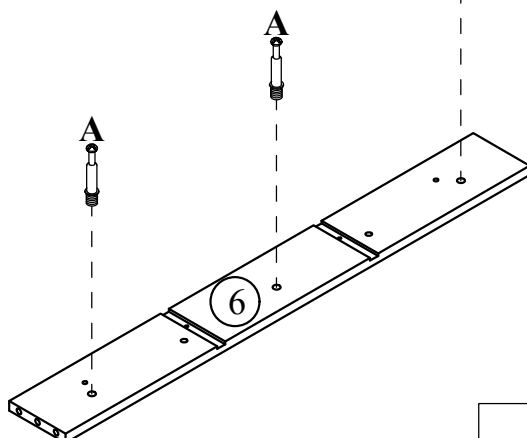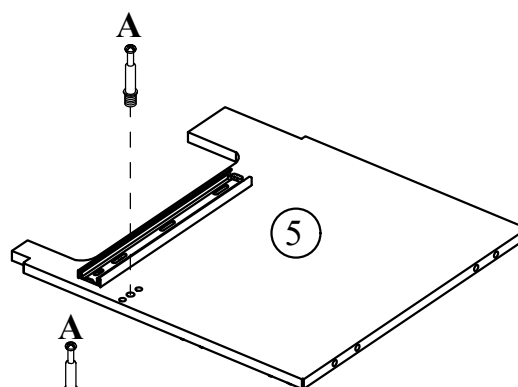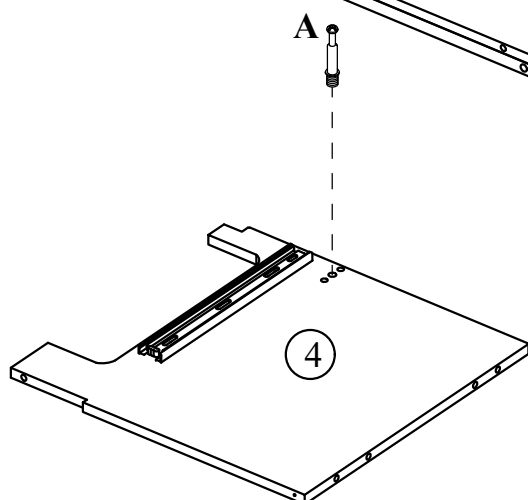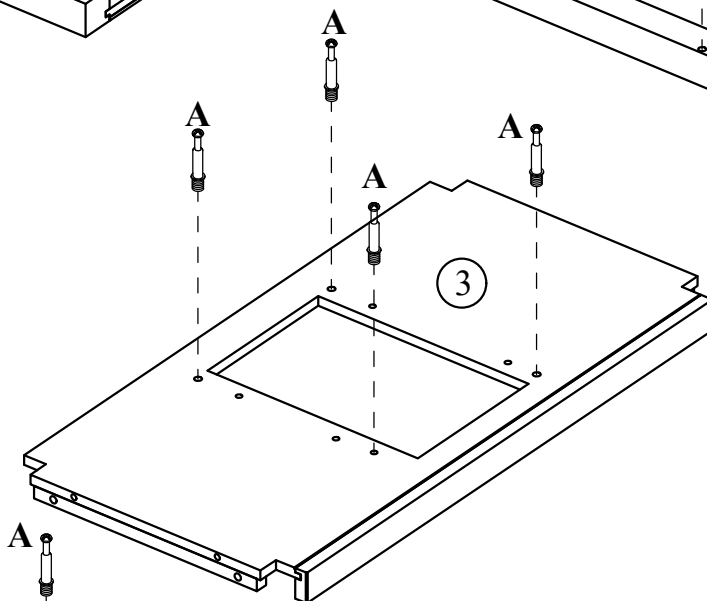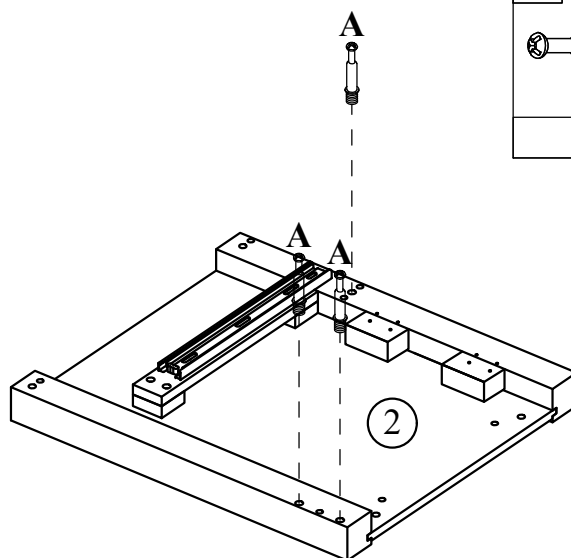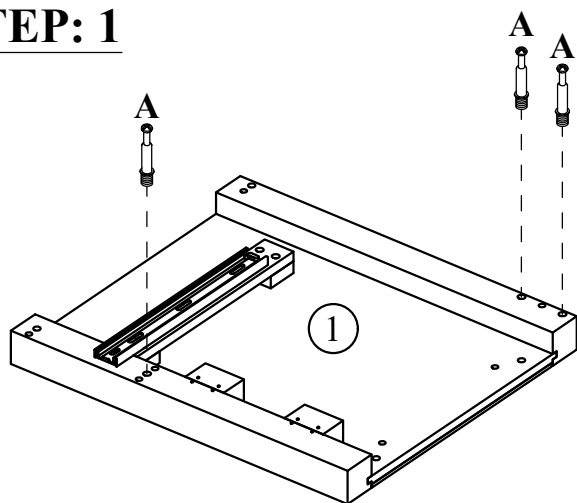



STEP: 2

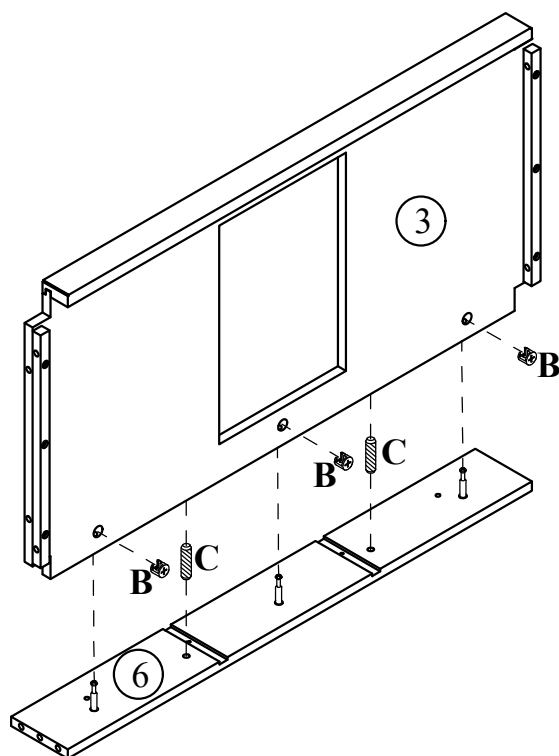


B	C
	
3PCS	2 PCS

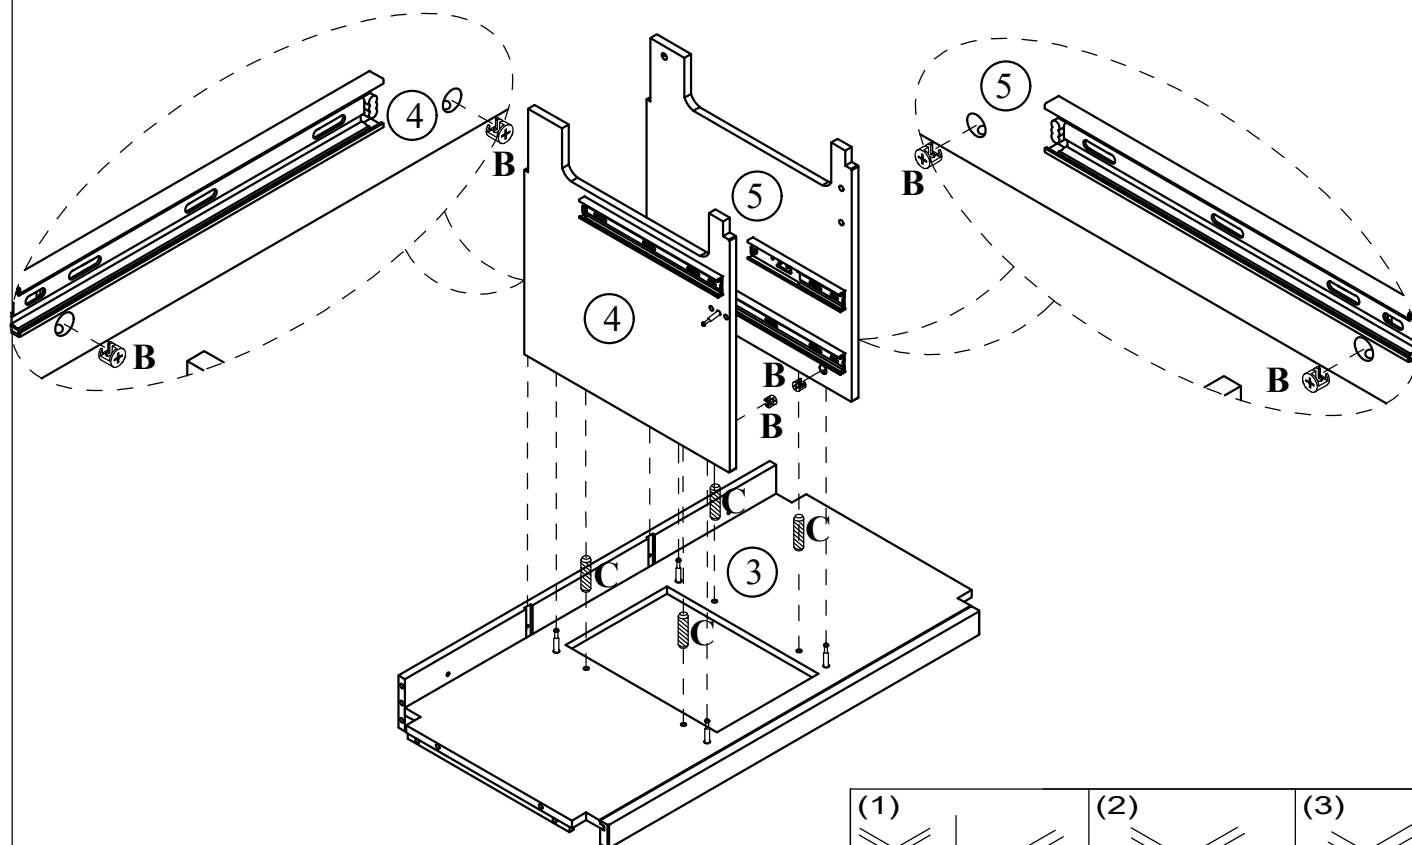
STEP: 3



B	C
	
4 PCS	4 PCS

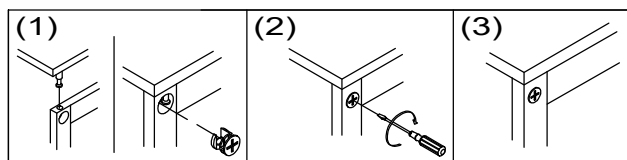




STEP: 4

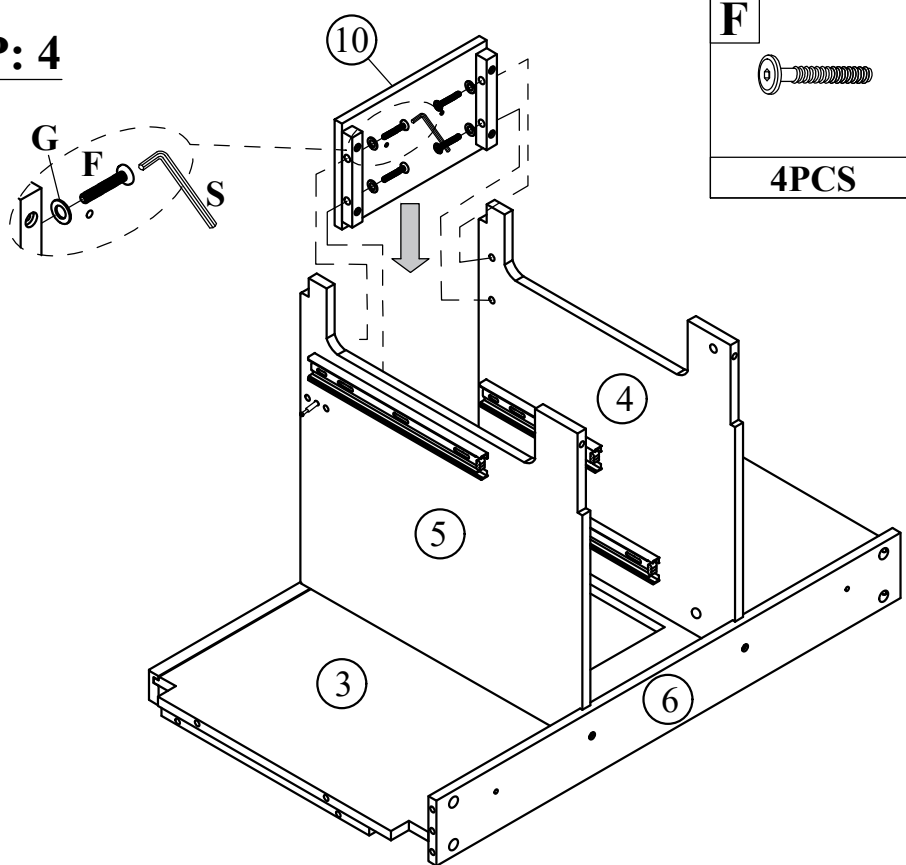


F	G	S
		
4PCS	4 PCS	1PC

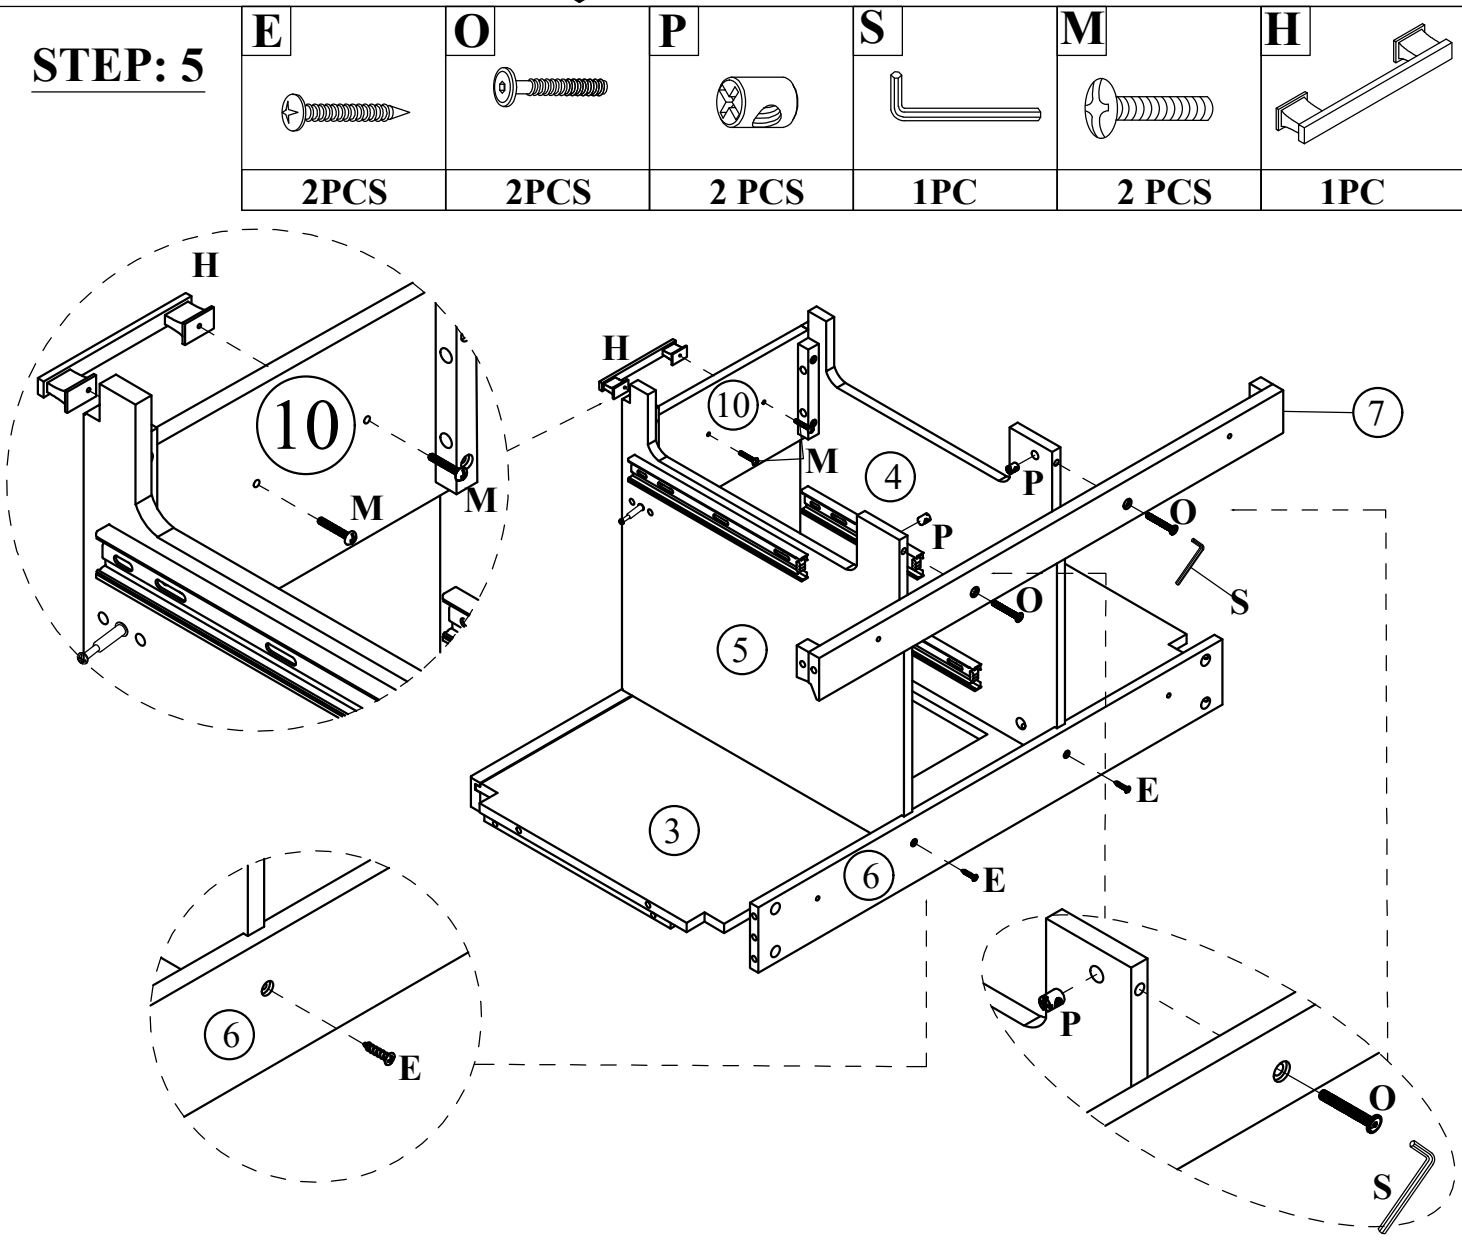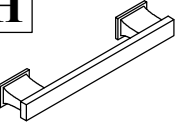STEP: 5




E	O	P	S	M	H
					
2PCS	2PCS	2 PCS	1PC	2 PCS	1PC

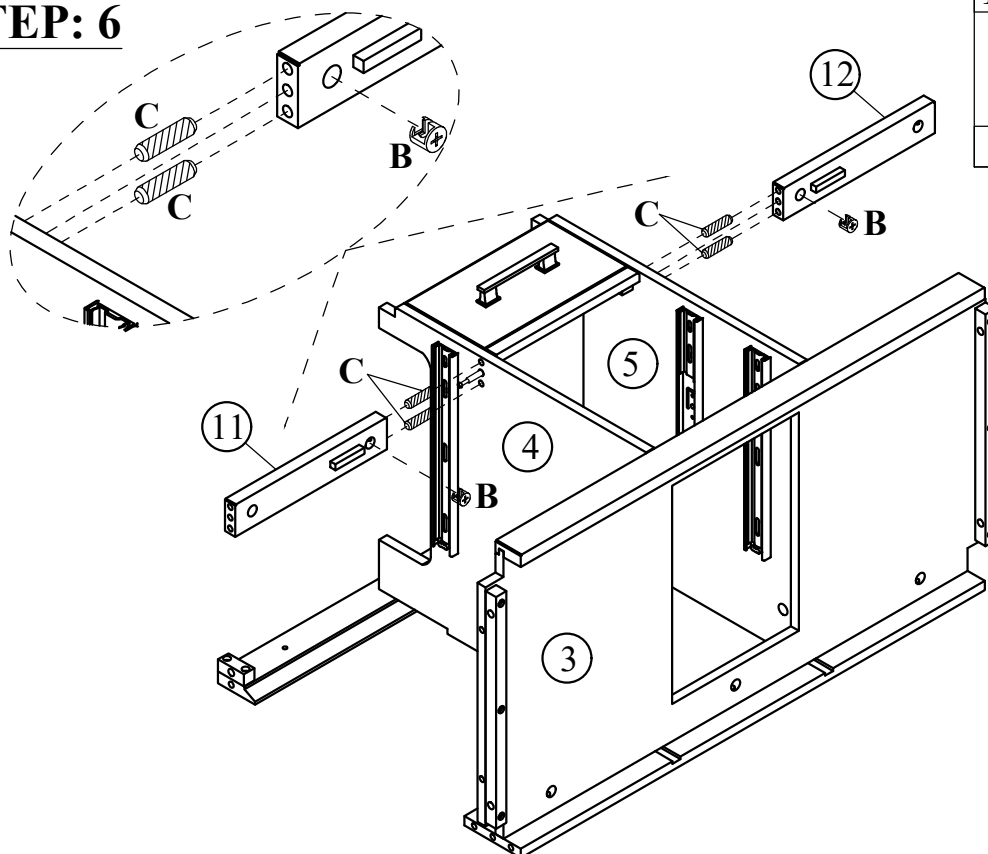STEP: 6




B	C
2PCS	4 PCS

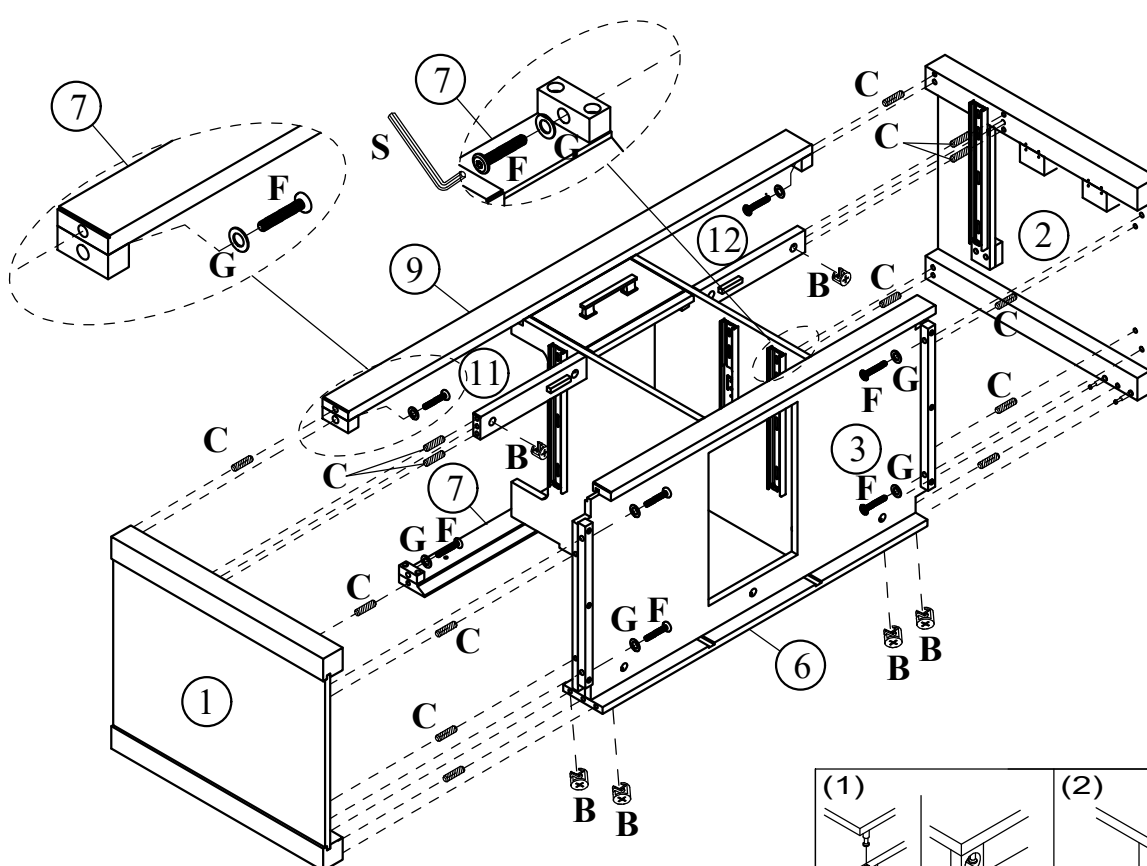STEP: 7




F	G	S	B	C
8 PCS	8 PCS	1PC	6 PCS	14 PCS

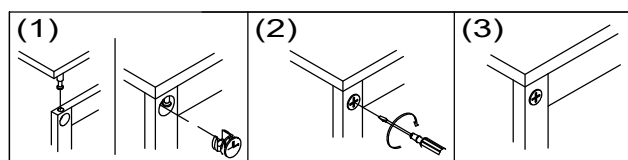

STEP: 8

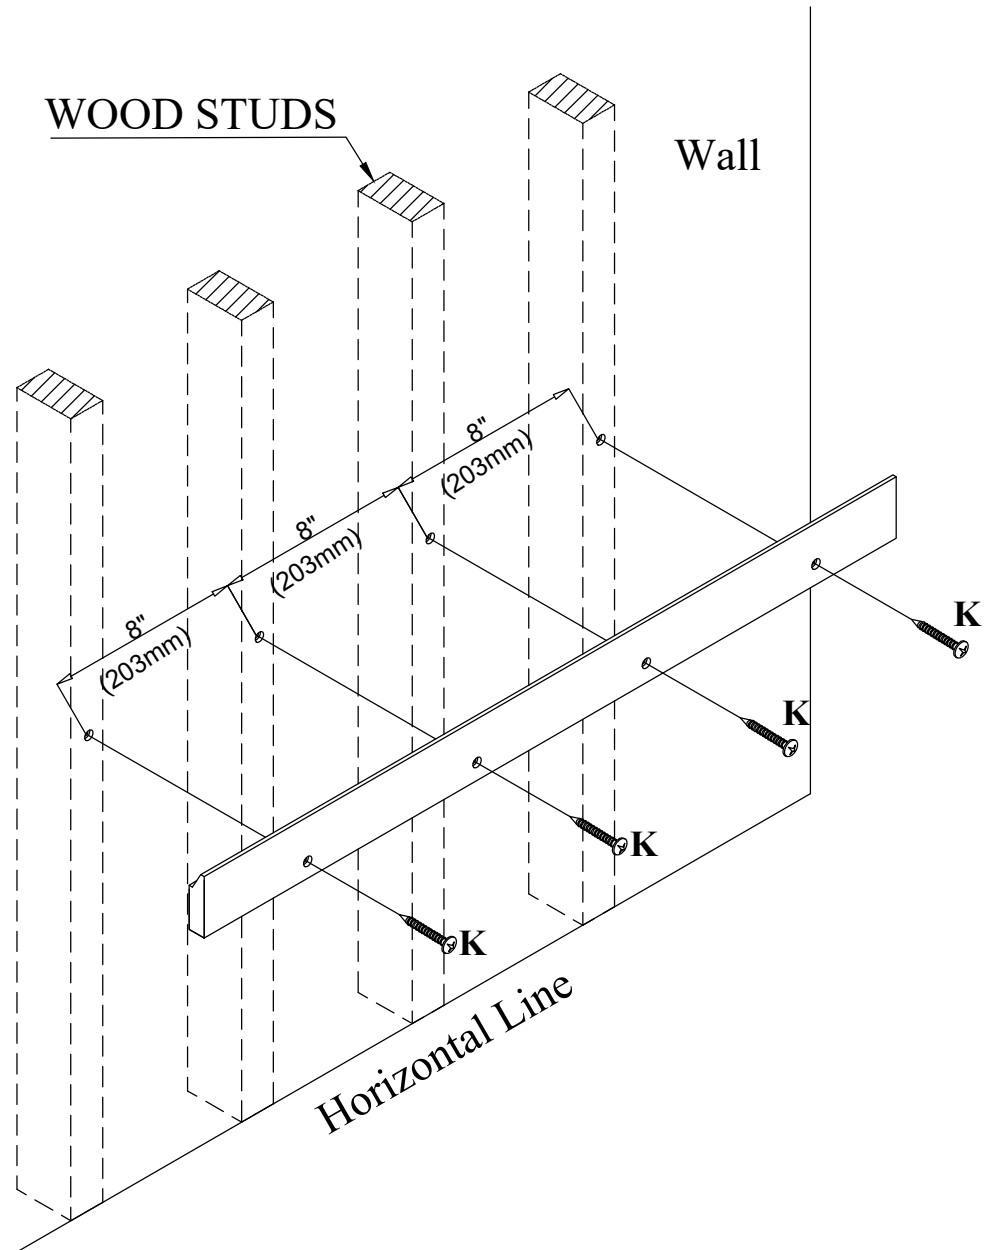Option: 1

K**4PCS**

Use a wood stud finder to locate the wood studs behind the walls, and then mark by pencil.
Use a level to ensure the Cross Bar (8) will be level before installing to the wall.

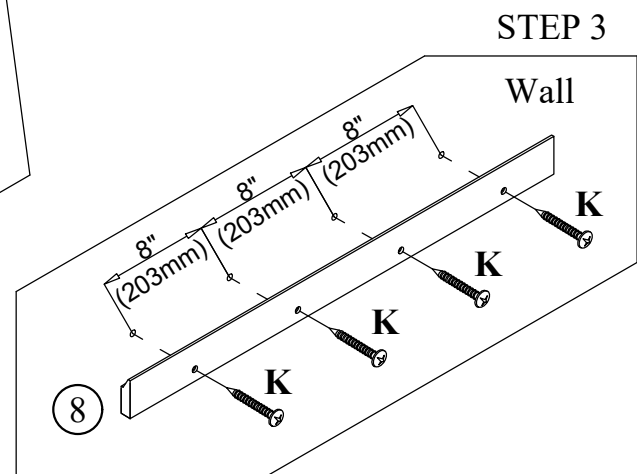
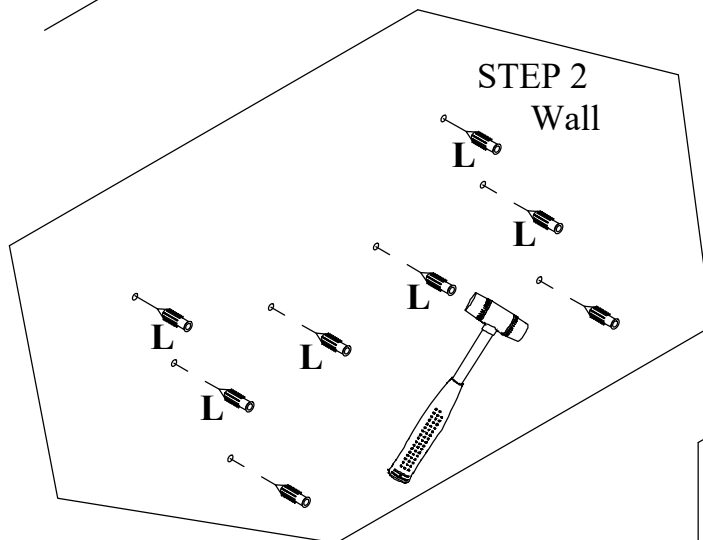
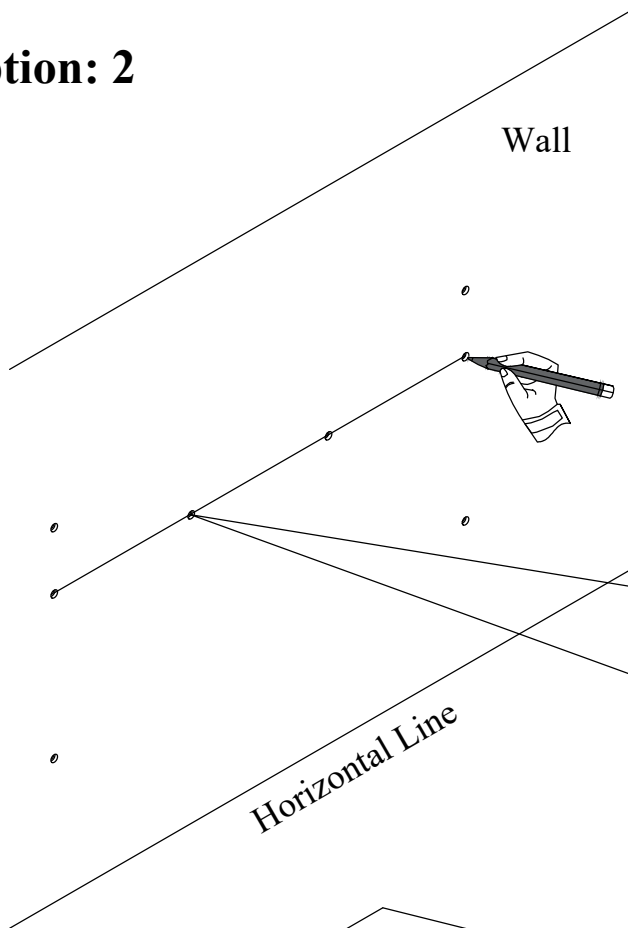


The 8"/8"/8" value is for reference only,
please according to the Wood stud's location.




Make sure the screw holes must be on the wood studs otherwise
the vanity will fall out because the dry wall cannot hold the cabinet.

Option: 2




13

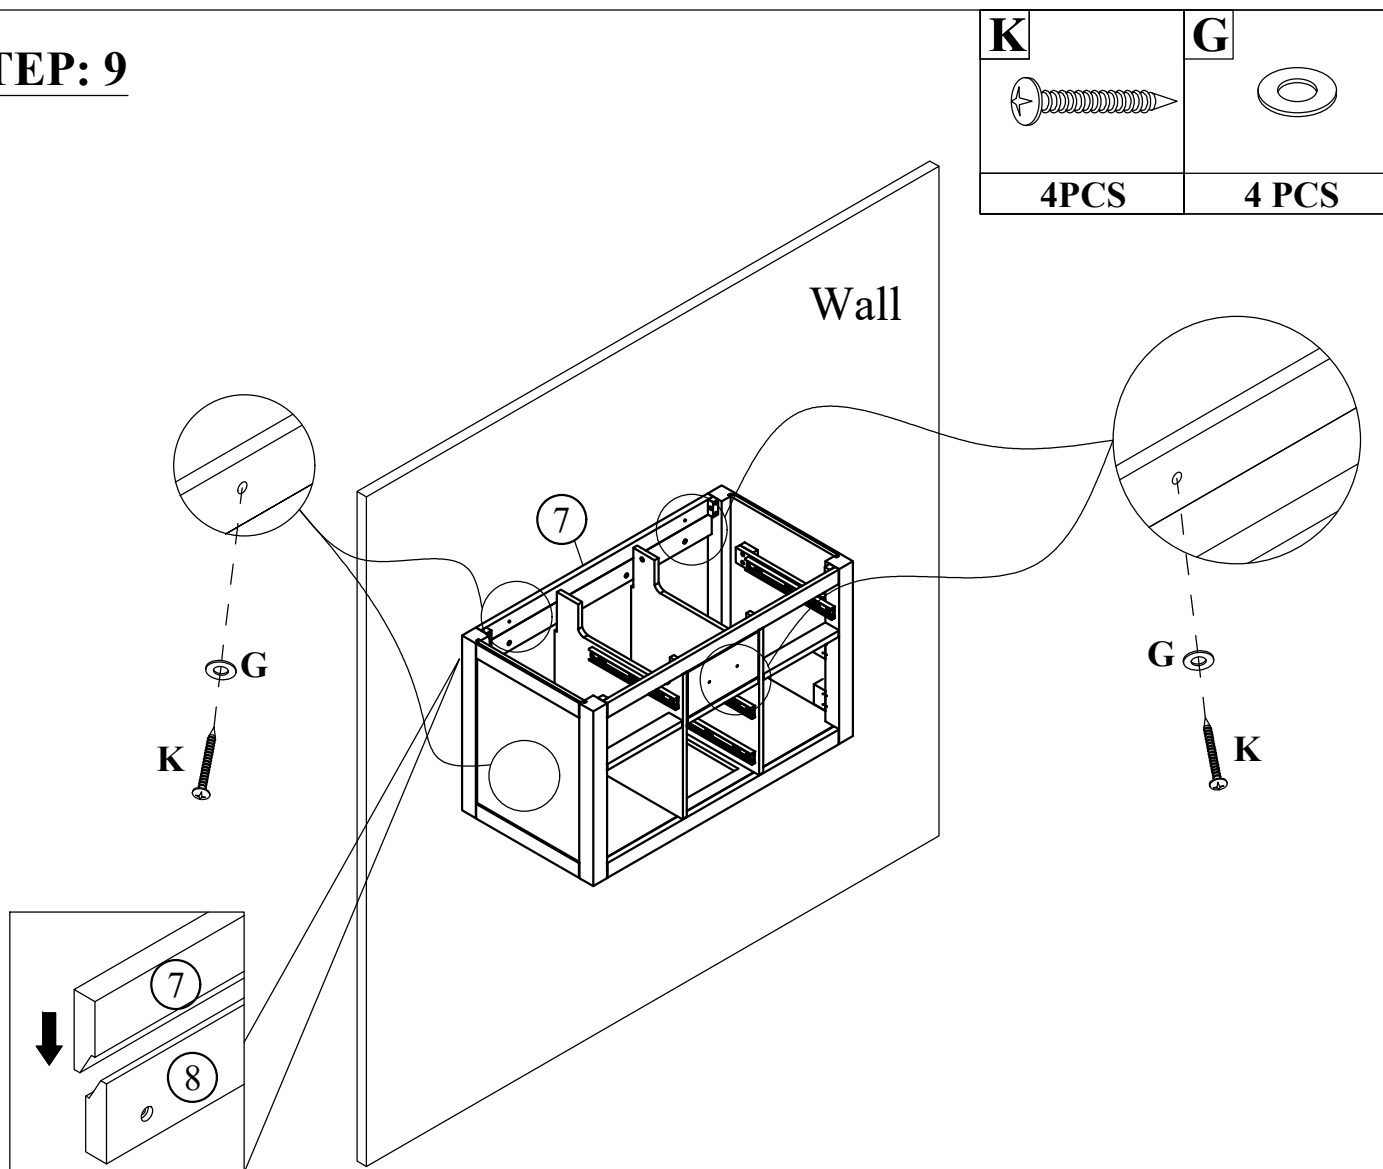
STEP: 9




STEP: 10

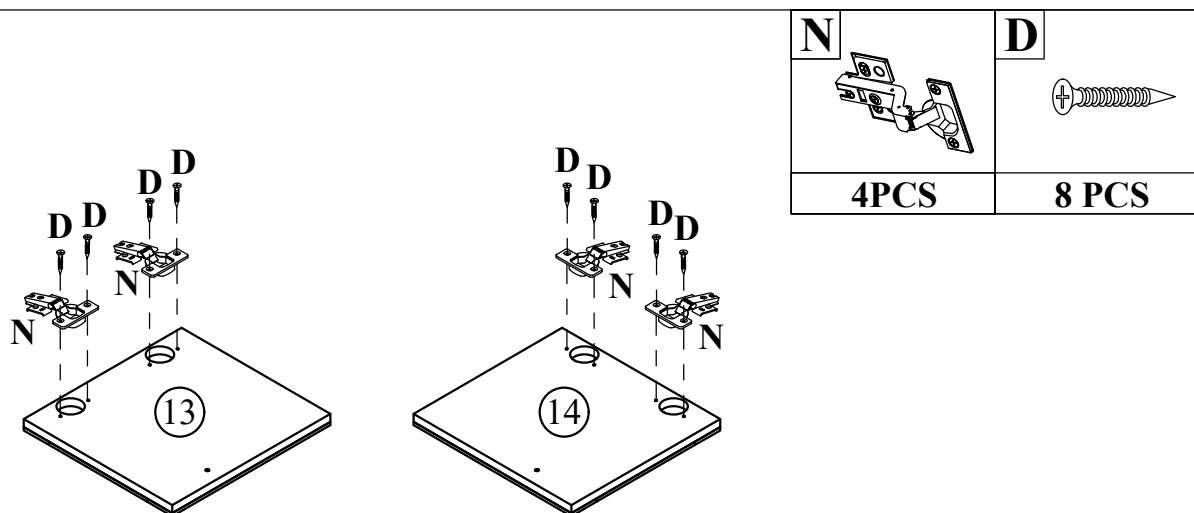


STEP: 11

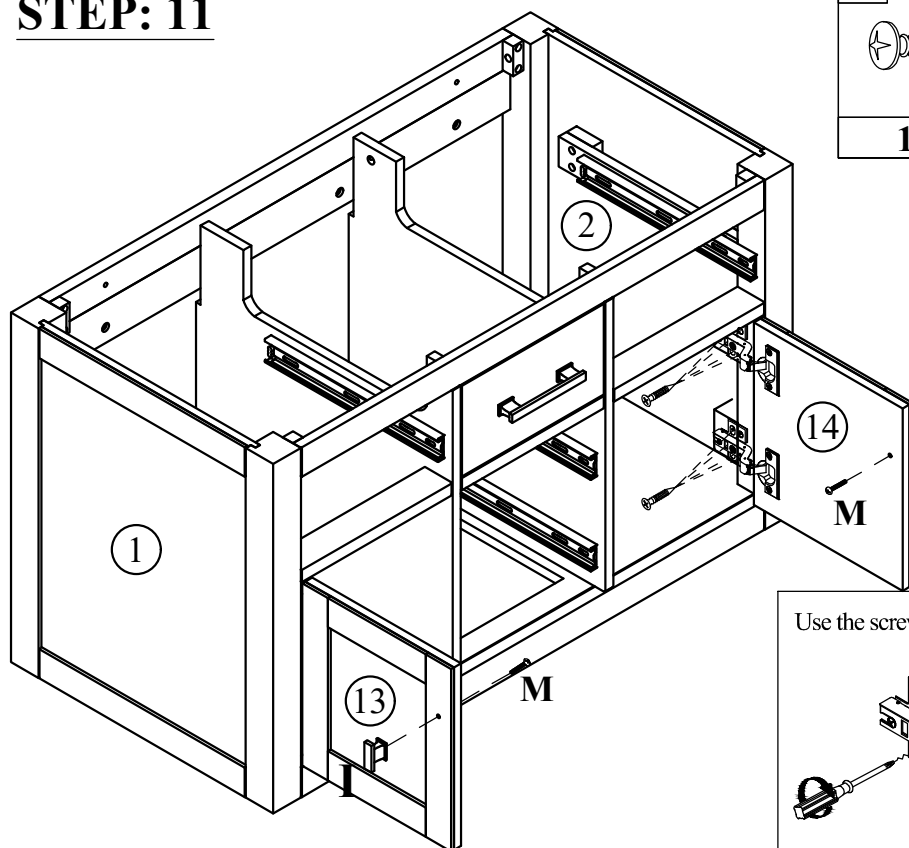


D	I	M
		
16PCS	2 PCS	2 PCS

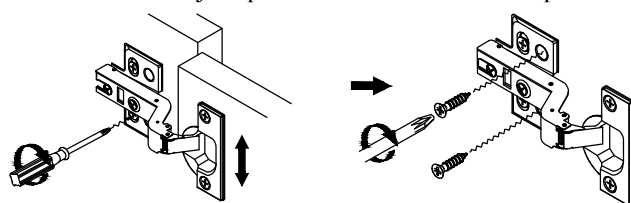
Use the screws to adjust up or down Use the screws to permanent







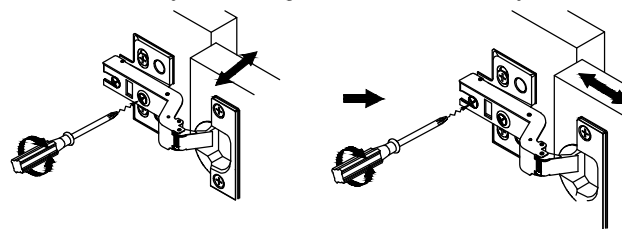
Use the screws to adjust left or right Use the screws to adjust in or out



STEP: 12


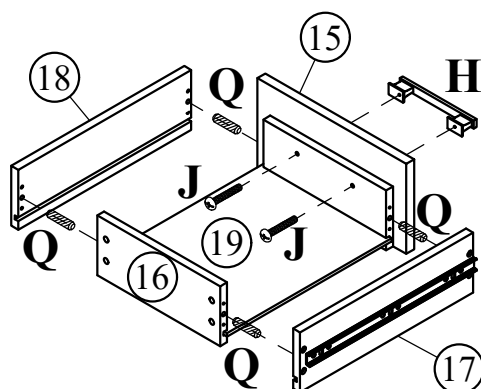


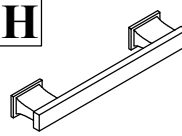
H	J	Q	R
			
2 PCS	4 PCS	8 PCS	16PCS

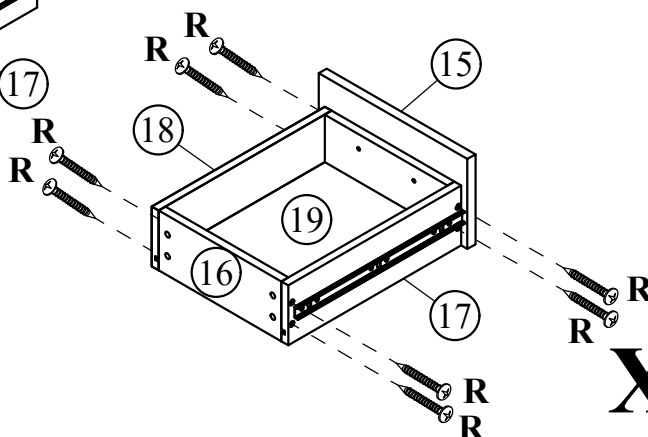

X2

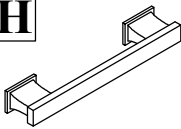

STEP: 13


H	J	Q	R
			
1 PC	2 PCS	4 PCS	8PCS

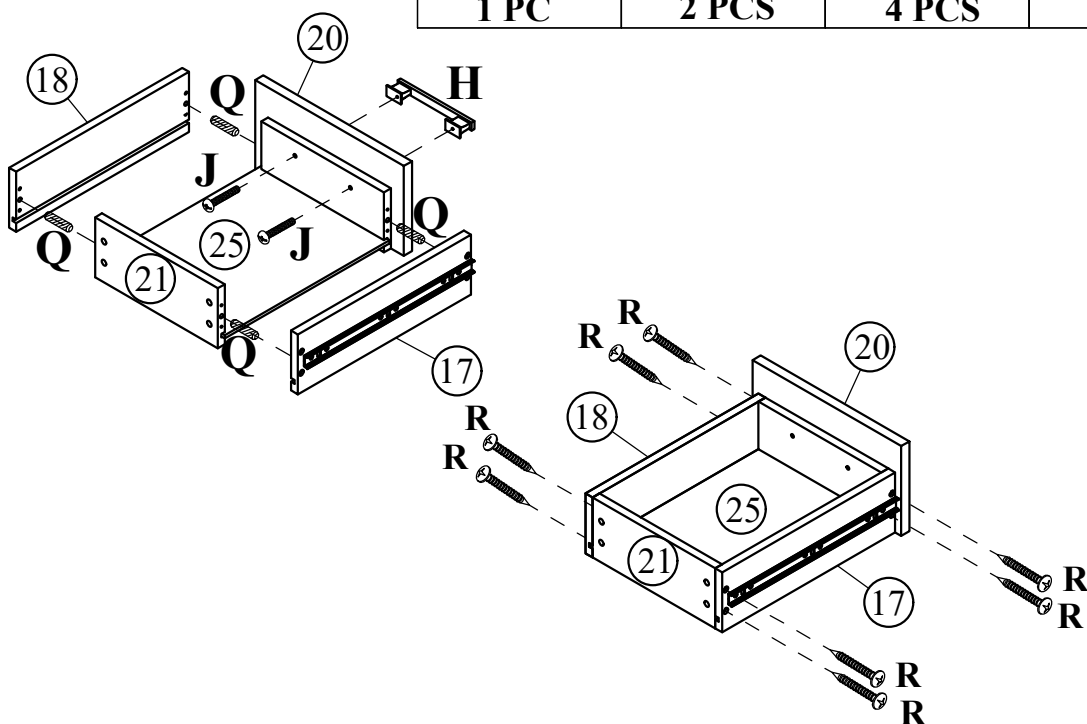

X1

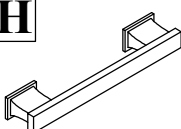
STEP: 14

H	J	Q	R
			
1 PC	2 PCS	4 PCS	8PCS

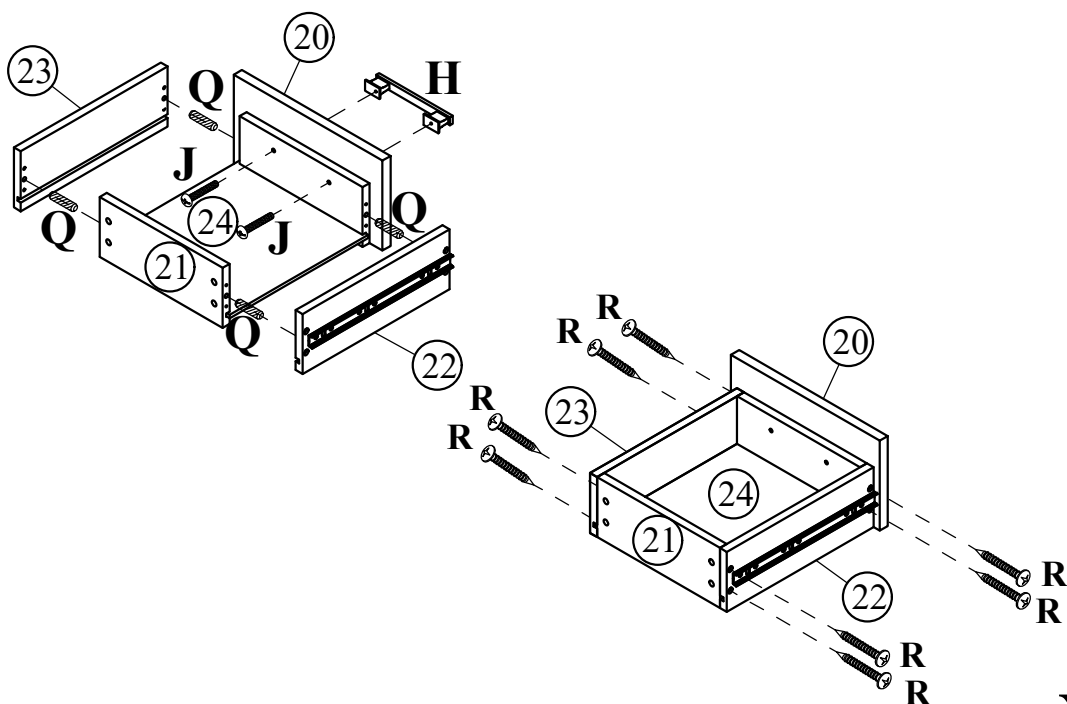


X1

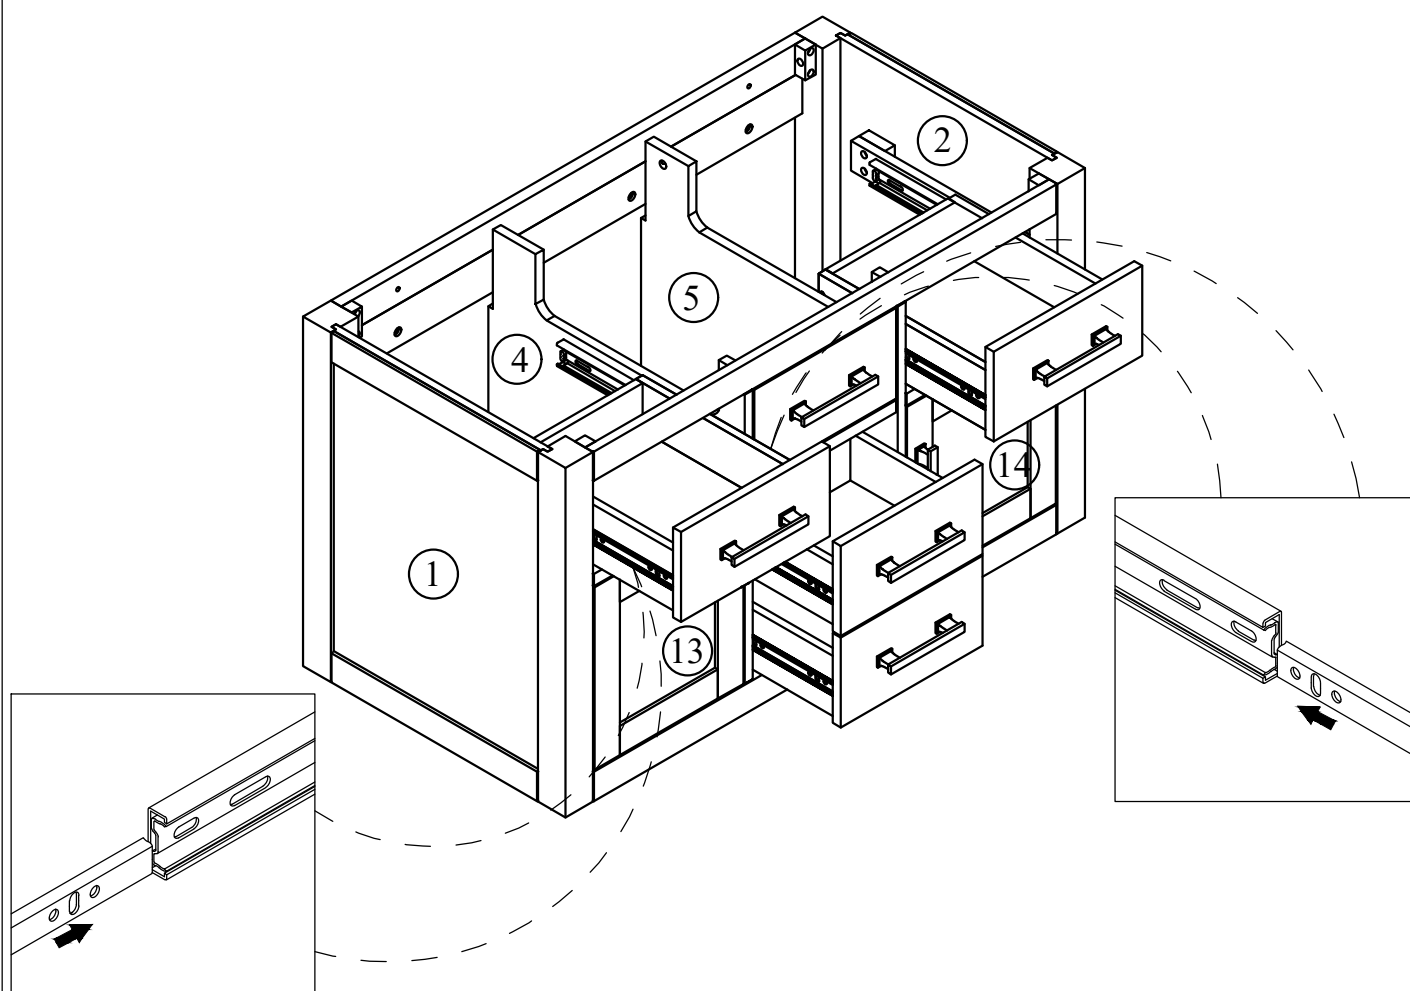STEP: 15





STEP: 16

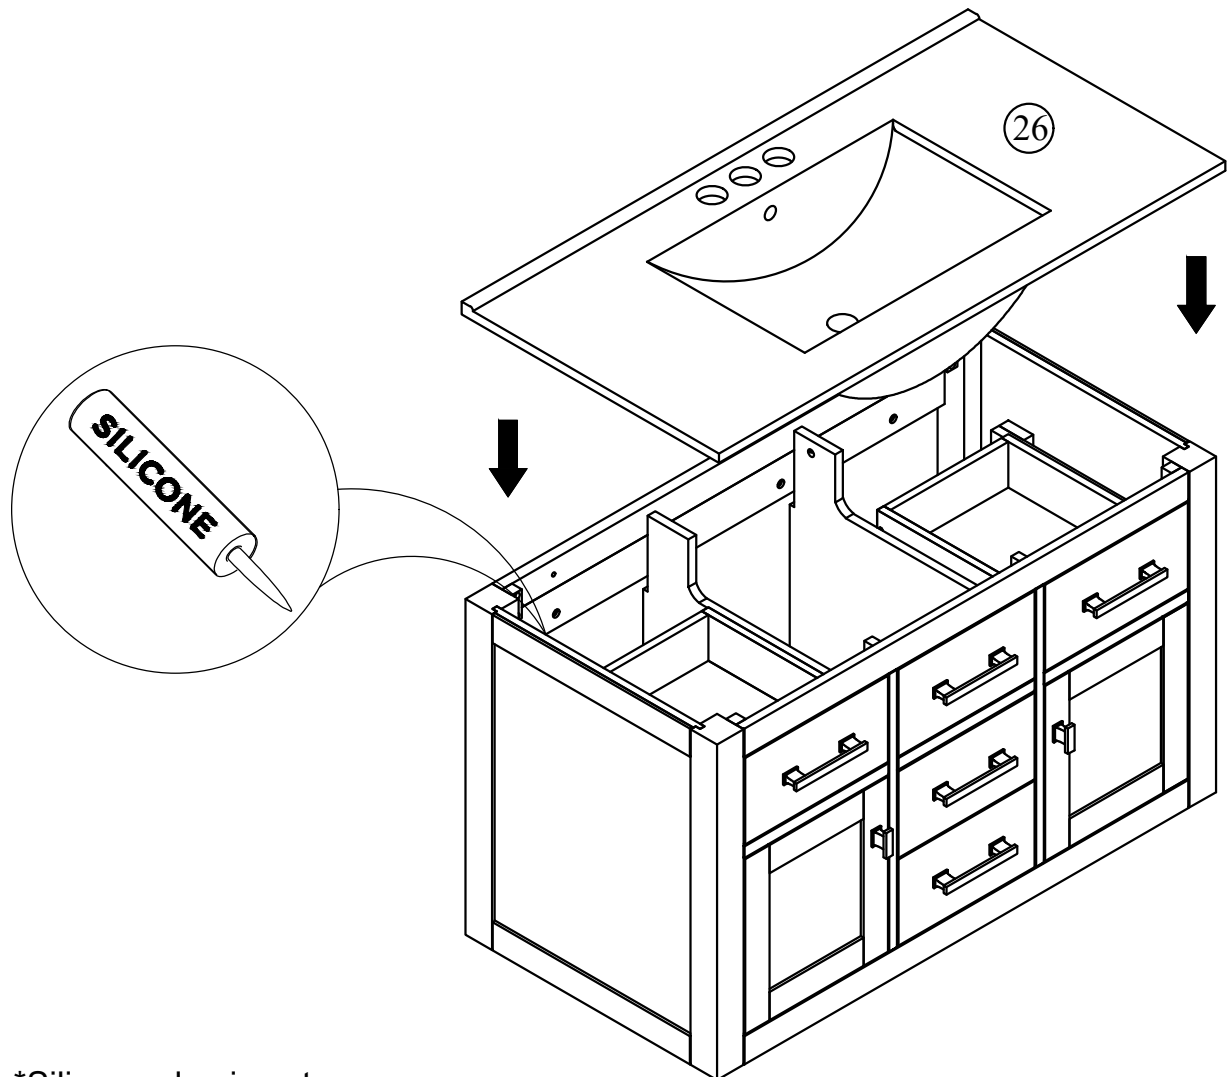Install the sink on the cabinet with glue.
Let stand for 24 hours




*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

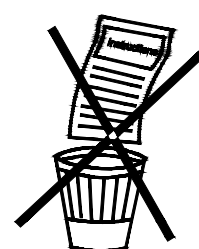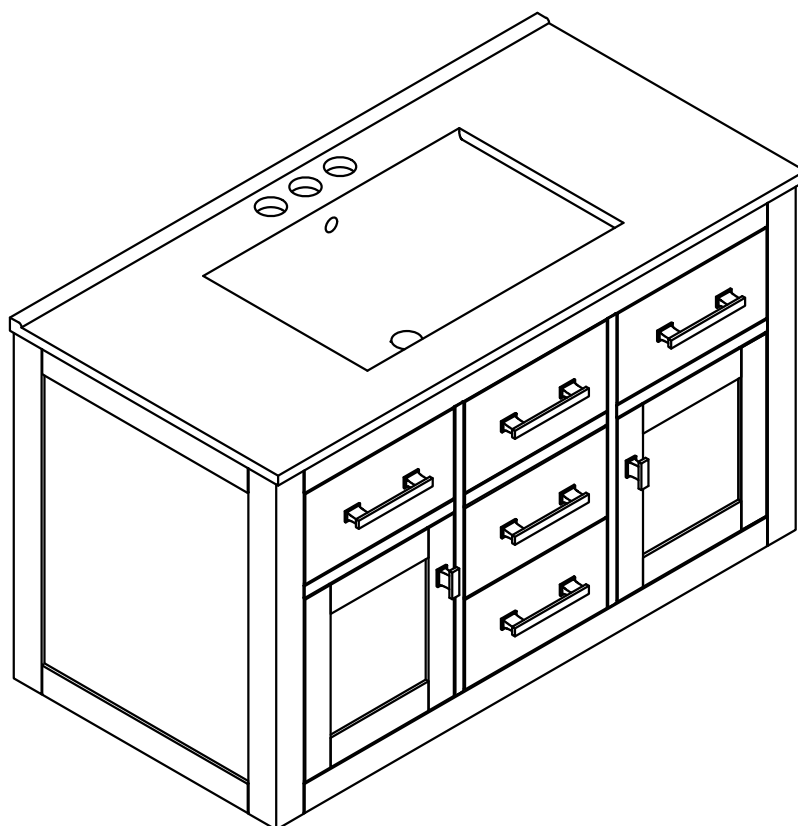STEP: 17




HINGE ADJUSTMENTS

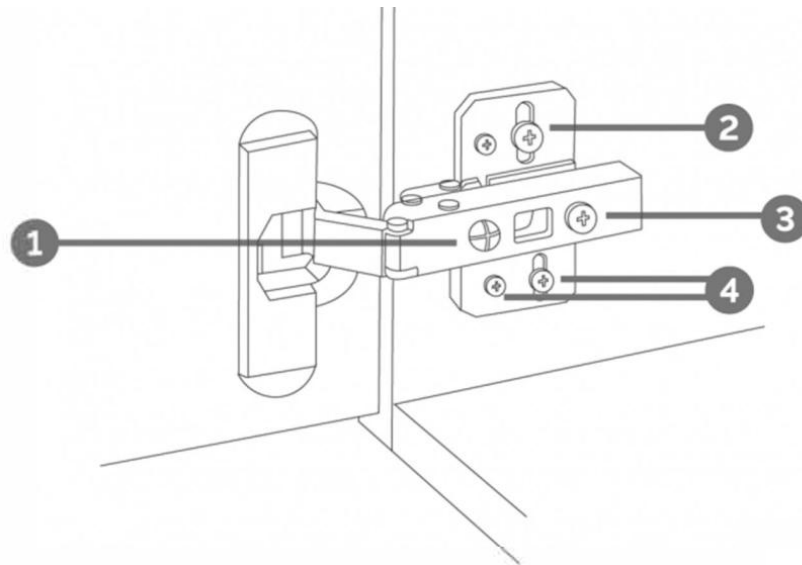


1 Sideways / Tilt adjustment

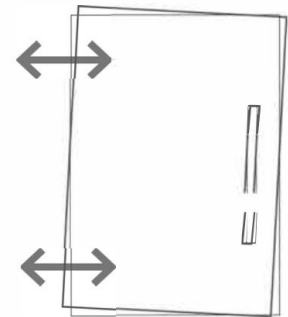Turn the screw
clockwise to move the door further away from
the side of the cabinet
anticlockwise to move the door closer to the
side of the cabinet



2 4 Height adjustment

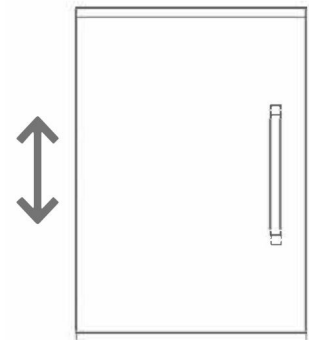While supporting the weight of the door, turn the
screws
clockwise to move the door up
anticlockwise to move the door down



3 Forward and back adjustment

If the gap between the back of the door and the
cabinet is too small, and the door may not close
fully. Turn the screw
clockwise to decrease the gap between the
door and the cabinet
anticlockwise to increase the gap between the
door and the cabinet

