


Arm Chair







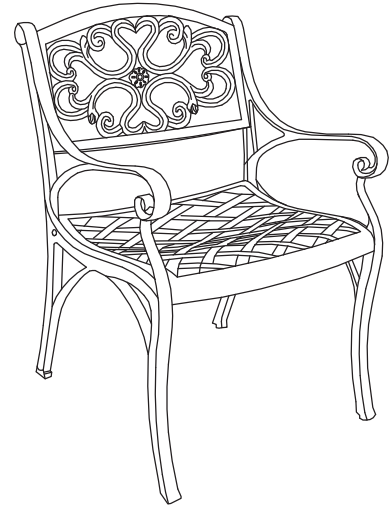









IMPORTANT NOTE

This product is made of sturdy, high quality aluminum and will provide years of enjoyment. Do not use power tools to assemble and only tighten bolts until they are snug. Over tightening can cause damage to the aluminum.

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.

We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.



Part List			Hardware List					
								
A. Back 1 pc.	C. Side Frame 1 pc.	D. Side Frame 1 pc.	Key Wrench (small) 1 pc.	Bolt 4 pcs. (+1 extra)	Spring Washer 4 pcs. (+1 extra)	Flat Washer 4 pcs. (+1 extra)	Nut 4 pcs. (+1 extra)	Nut Cap 4 pcs. (+1 extra)
								
B. Seat 1 pc.			Key Wrench (large) 1 pc.	Bolt (large) 4 pcs. (+1 extra)	Spring Washer (large) 4 pcs. (+1 extra)	Flat Washer (large) 4 pcs. (+1 extra)	Nut (large) 4 pcs. (+1 extra)	Nut Cap (large) 4 pcs. (+1 extra)

IMPORTANT



- * Do not use power tools to assemble and do not over tighten the bolts.
- * Do not tighten all the bolts until each part is properly assembled.
- * You should keep Key Wrench in a safe place as you may need to tighten up the Nuts in the future.

STEP 1

Attach Side Frames (C) and (D) to Seat (B) with Bolts (large), Flat Washers (large), Spring Washers (large) and Nuts (large), tightening the bolts only half way.

Tighten all Bolts with Key Wrench.

Cover all Nuts with Nut Caps (large).

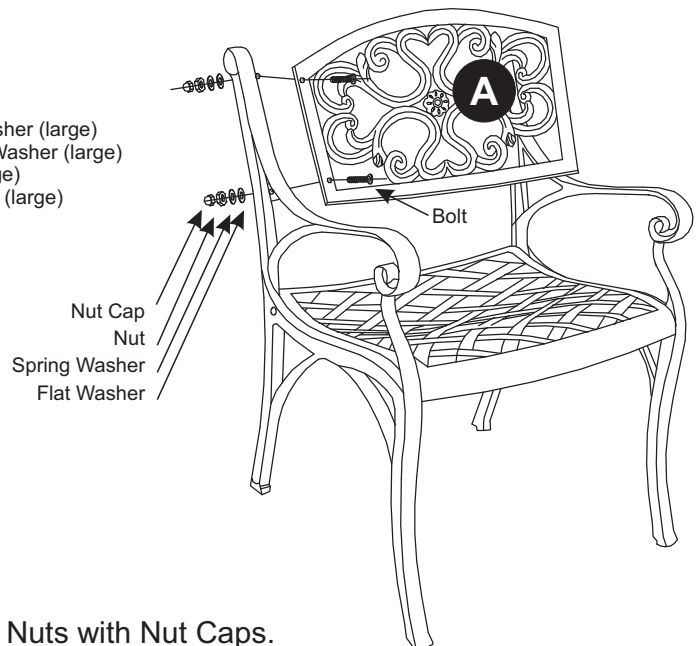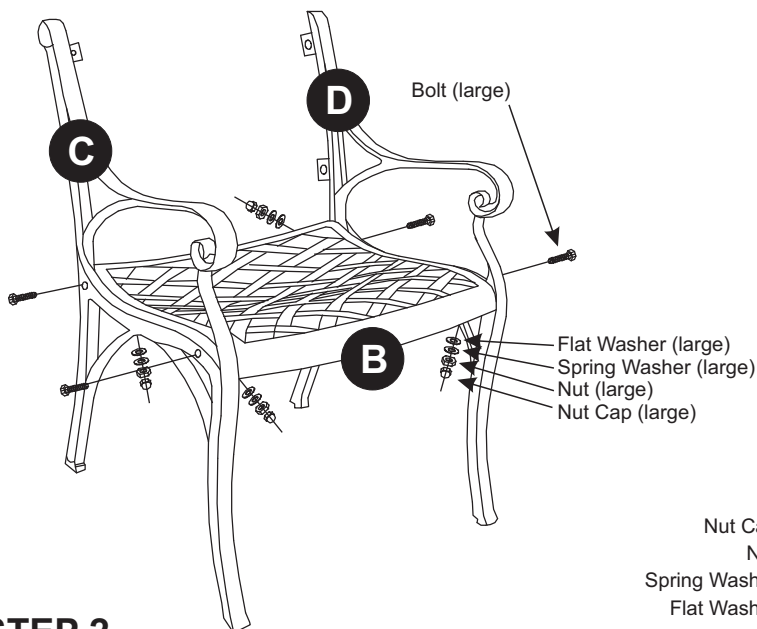

STEP 2

Attach Back (A) to unit with Bolts, Flat Washers, Spring Washers and Nuts, tightening the bolts only half way.

Tighten all Bolts with Key Wrench, then cover all Nuts with Nut Caps.

Tools required for assembly : Phillips screwdriver