

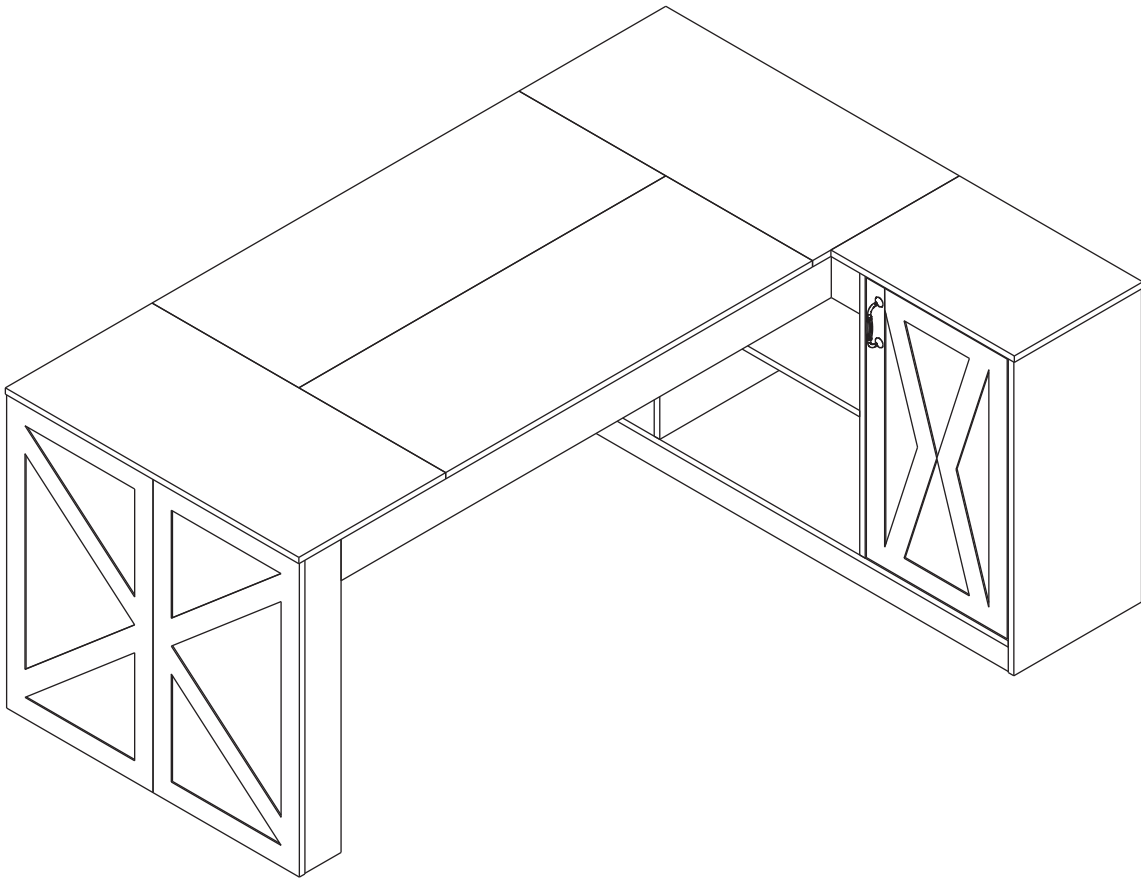
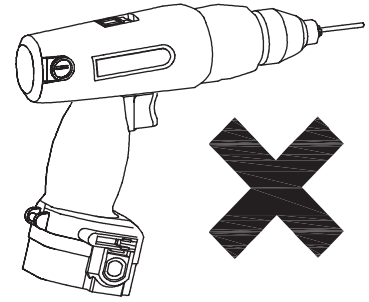


# Assembly Instructions

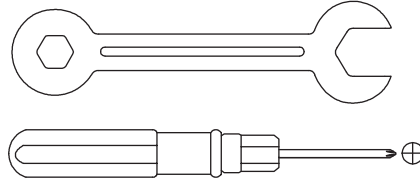


Office Table		
--------------	--	--

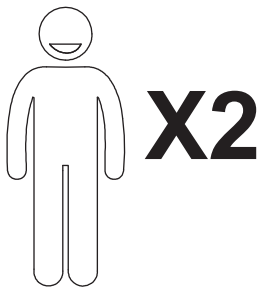

We recommend using hand tools for assembly.

If an electric screwdriver is used, reduce power and torque to avoid damage to the product.



---

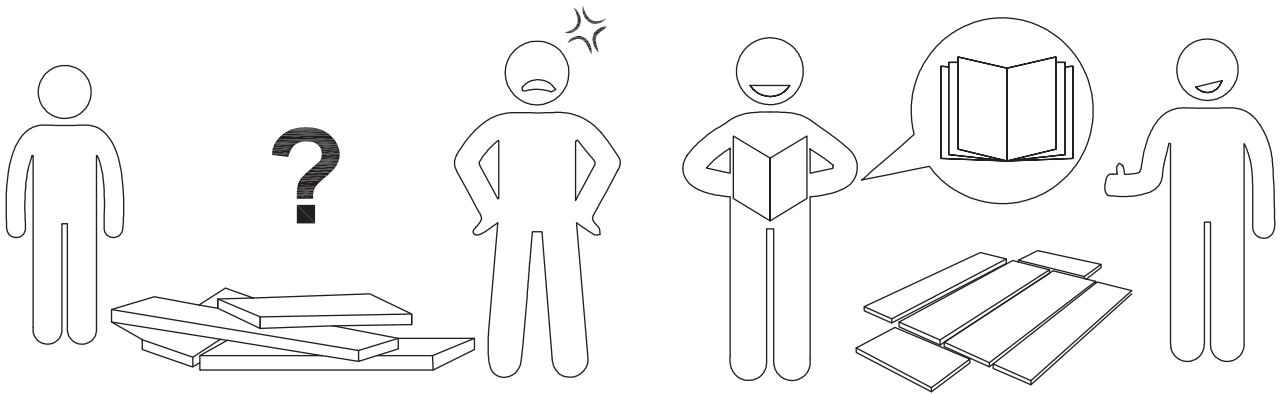


---

## AVOID SCRATCHES

In order to avoid scratching, this furniture should be assembled on a soft surface, such as a rug.








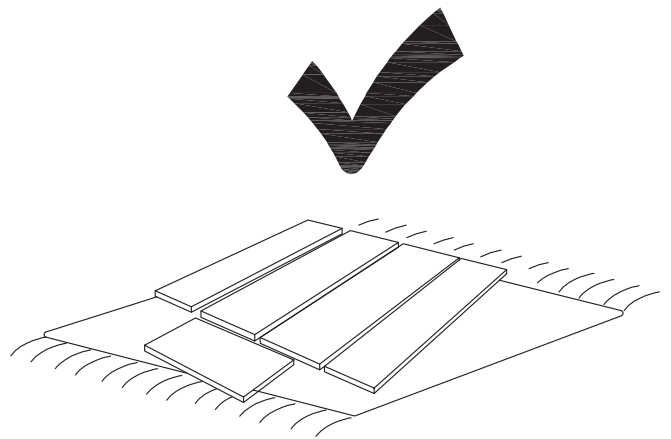
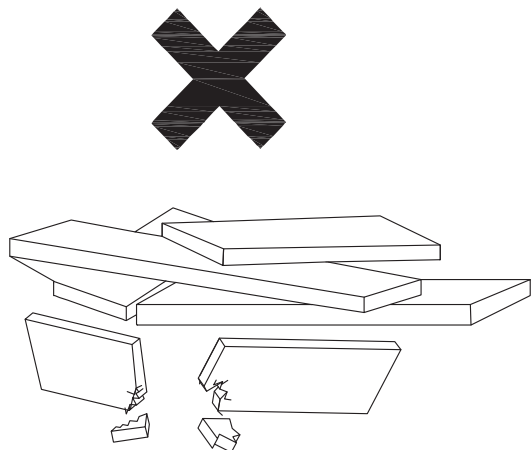



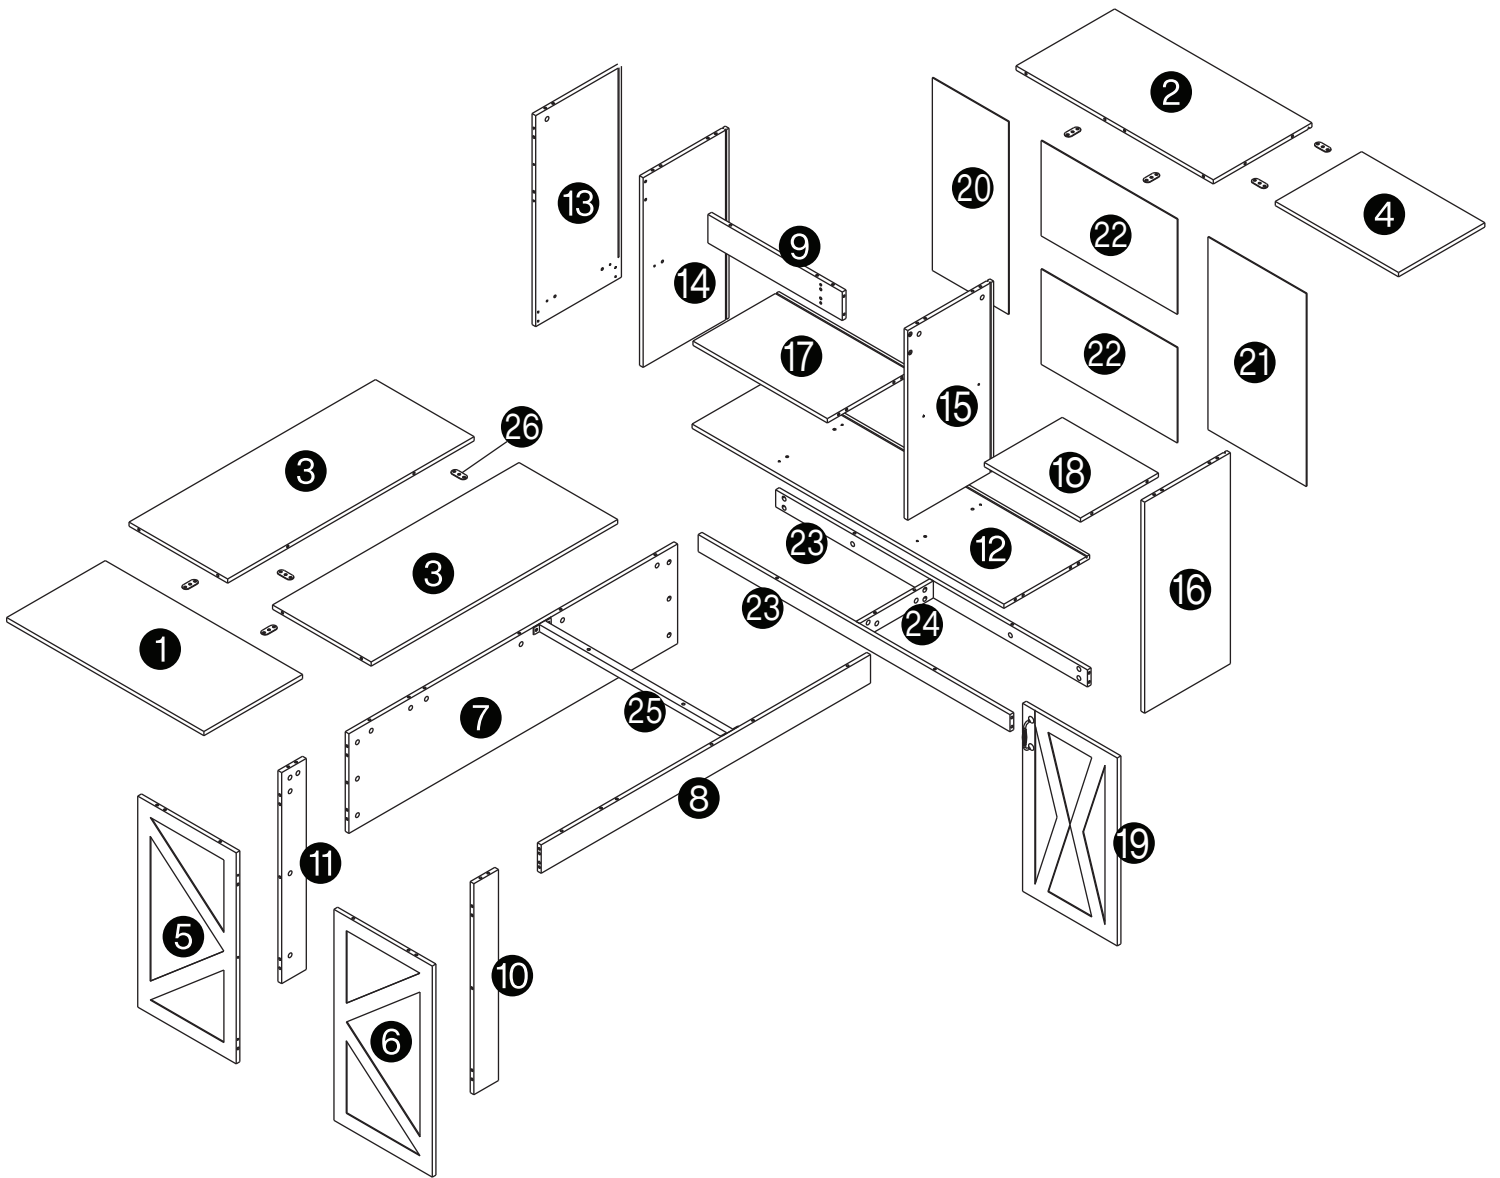









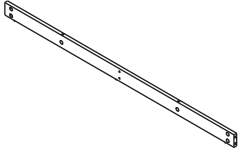







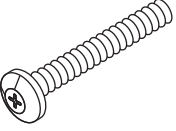
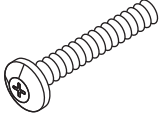




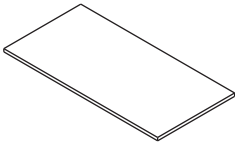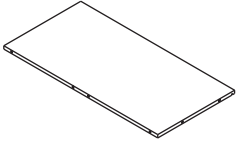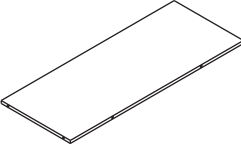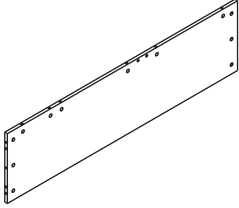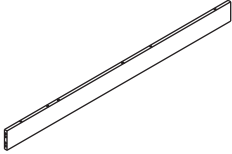**⚠ Caution**

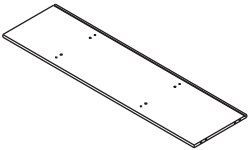





Make sure all parts are included. Most board parts are labeled or stamped on the raw edge. Contact us for a free replacement if you encounter any damaged or missing parts.


# Parts List

<p><b>1</b></p>  <p>1 pc</p>	<p><b>2</b></p>  <p>1 pc</p>	<p><b>3</b></p>  <p>2 pcs</p>	<p><b>4</b></p>  <p>1 pc</p>	<p><b>5</b></p>  <p>1 pc</p>
<p><b>6</b></p>  <p>1 pc</p>	<p><b>7</b></p>  <p>1 pc</p>	<p><b>8</b></p>  <p>1 pc</p>	<p><b>9</b></p>  <p>1 pc</p>	<p><b>10</b></p>  <p>1 pc</p>
<p><b>11</b></p>  <p>1 pc</p>	<p><b>12</b></p>  <p>1 pc</p>	<p><b>13</b></p>  <p>1 pc</p>	<p><b>14</b></p>  <p>1 pc</p>	<p><b>15</b></p>  <p>1 pc</p>
<p><b>16</b></p>  <p>1 pc</p>	<p><b>17</b></p>  <p>1 pc</p>	<p><b>18</b></p>  <p>1 pc</p>	<p><b>19</b></p>  <p>1 pc</p>	<p><b>20</b></p>  <p>1 pc</p>
<p><b>21</b></p>  <p>1 pc</p>	<p><b>22</b></p>  <p>2 pcs</p>	<p><b>23</b></p>  <p>2 pcs</p>	<p><b>24</b></p>  <p>1 pc</p>	<p><b>25</b></p>  <p>1 pc</p>
<p><b>26</b></p>  <p>8 pcs</p>				

# Hardware List

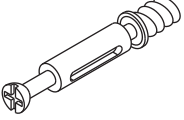
A	B	C	D	E	F
					
M6x40mm	M6x35mm	M6x12mm	Ø5x38mm	Ø4x18mm	Ø3.5x14mm
6 pcs	2 pcs	20 pcs	4 pcs	2 pcs	28 pcs

G	H	I	J	K	L
					
M6x44.5mm	Ø15x11.3mm	Ø8x30mm			
78 pcs	78 pcs	48 pcs	2 pcs	1 pc	16 pcs


M					
					
Ø5x54mm					
1 pc					

# Installation of Cams and Pins


Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.

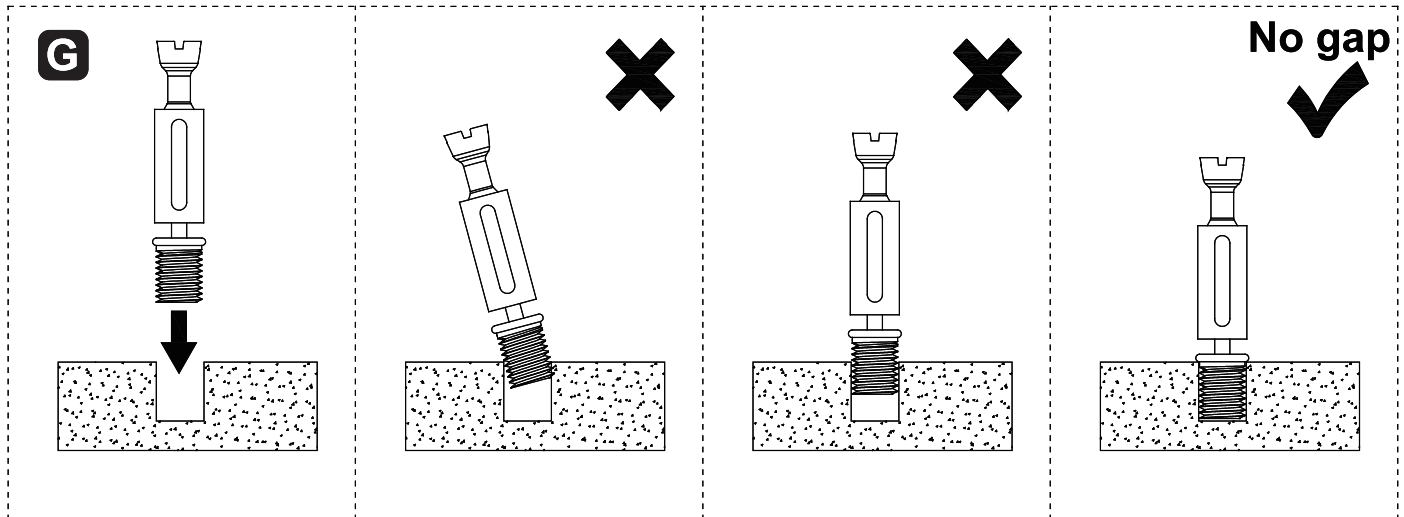



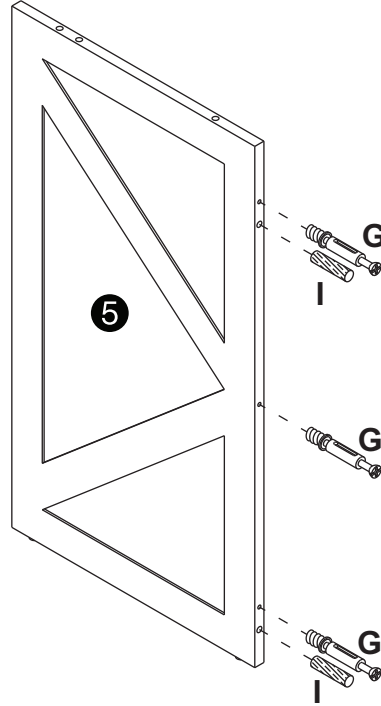
Screw the pin into the hole. Set the cams correctly by aligning the head of the cams with the lock pins. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

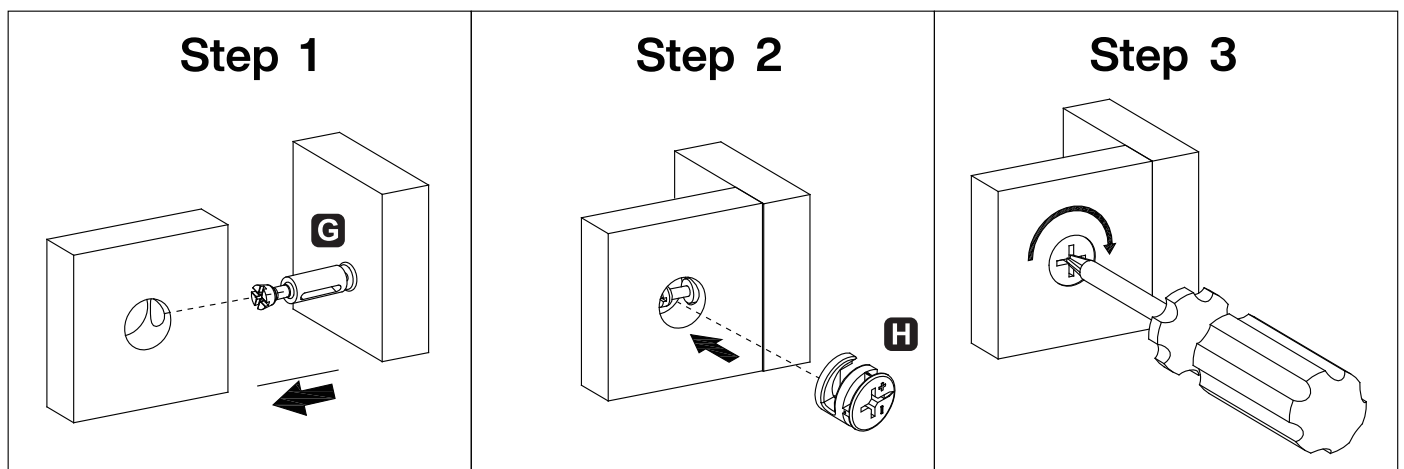


1

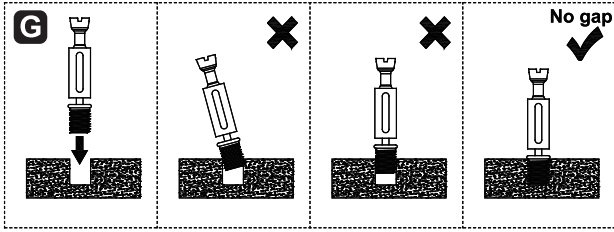


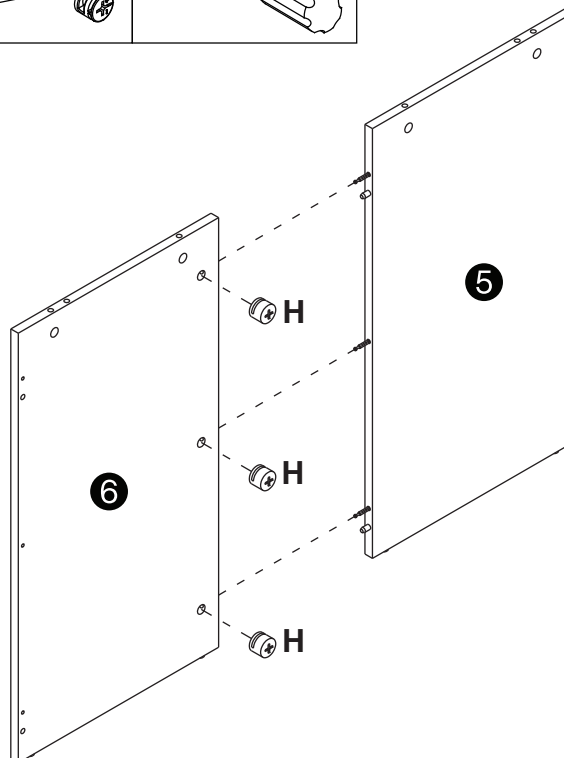
G	I
	
M6x44.5mm	Ø8x30mm
3 pcs	2 pcs




2

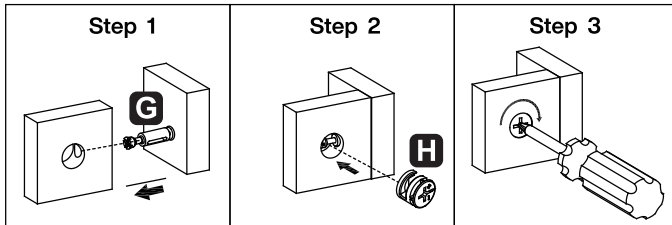



H

Ø15x11.3mm
3 pcs

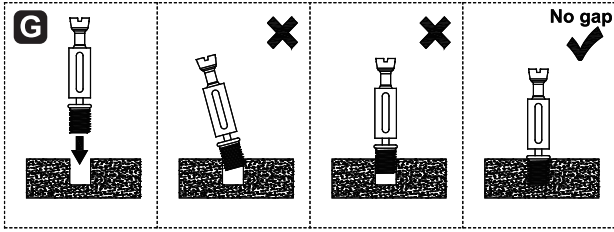


3



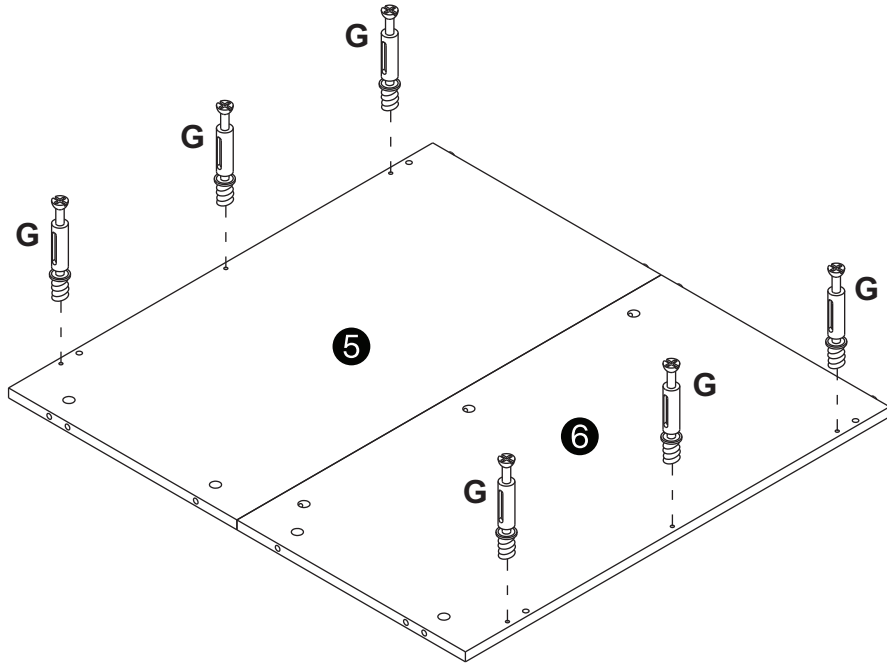
<b>G</b>

M6x44.5mm
6 pcs

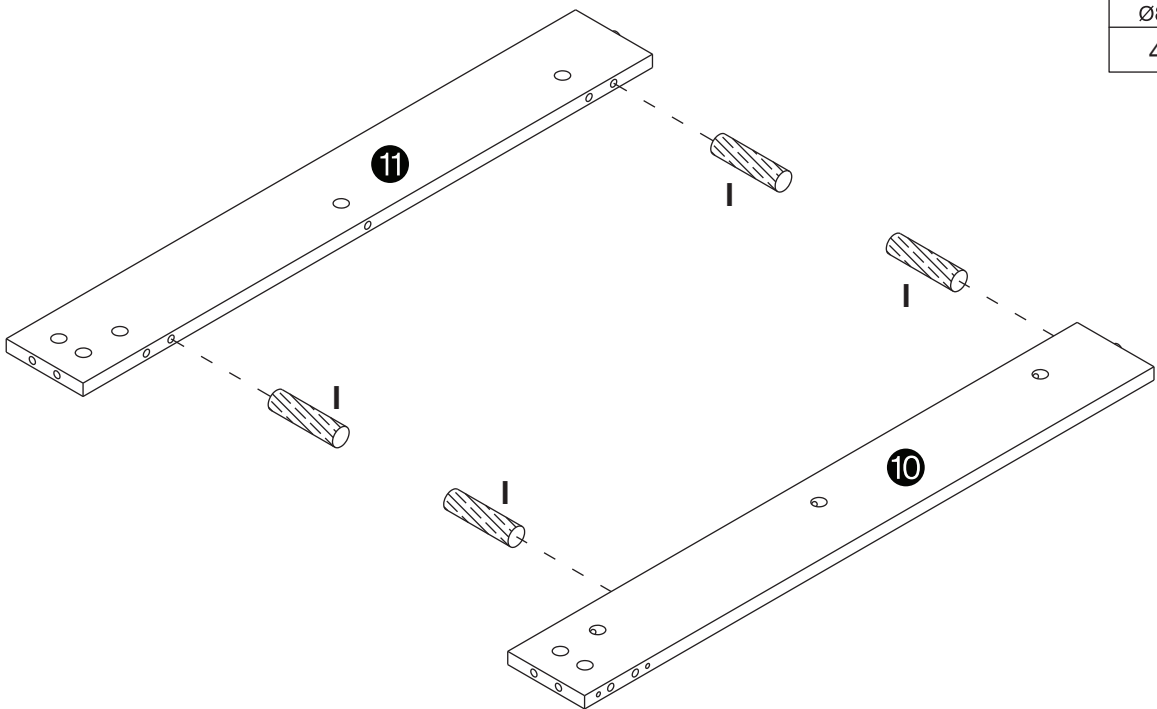



4




<b>I</b>

Ø8x30mm
4 pcs

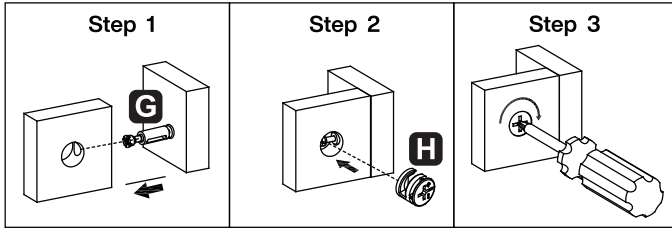
**5**

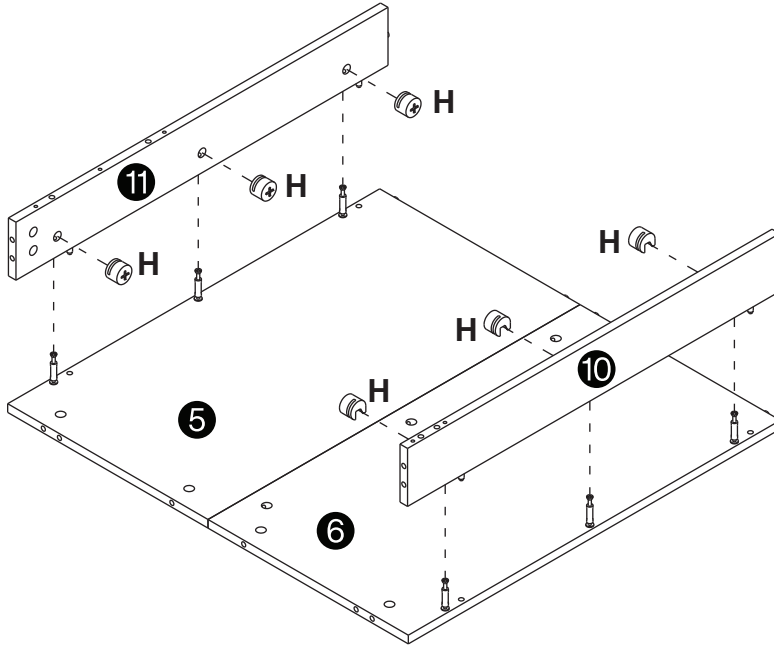



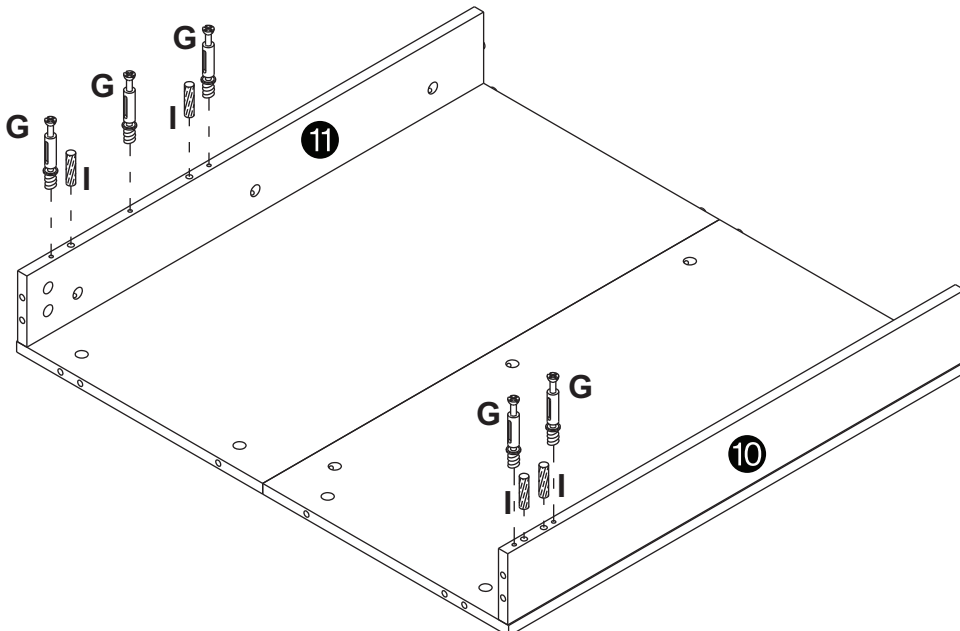
<b>H</b>

Ø15x11.3mm
6 pcs

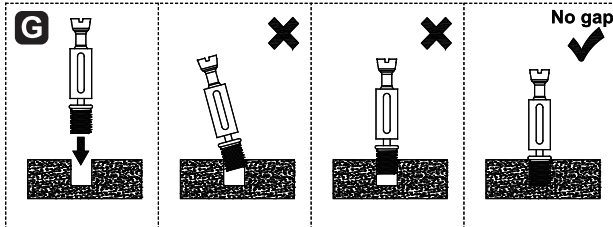


**6**




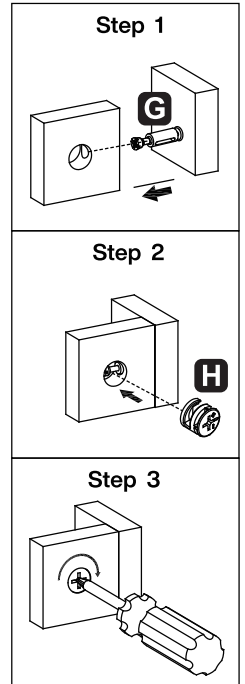
<b>G</b>	<b>I</b>
	
M6x44.5mm	Ø8x30mm
5 pcs	4 pcs




7

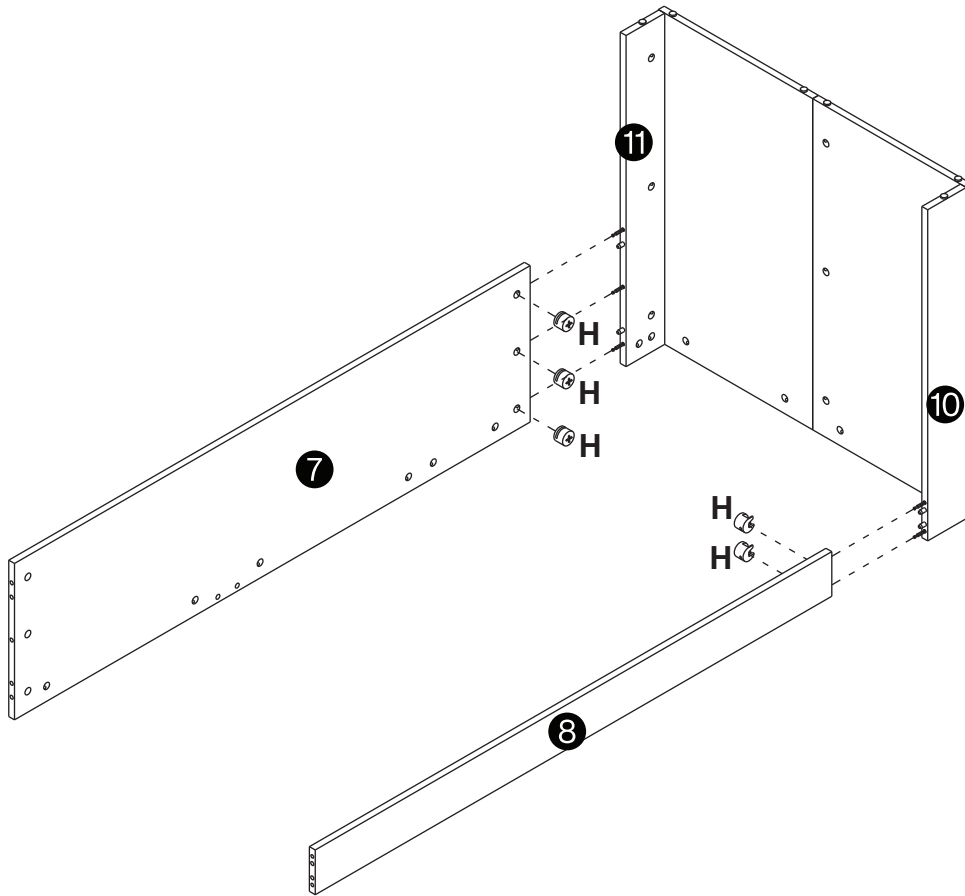


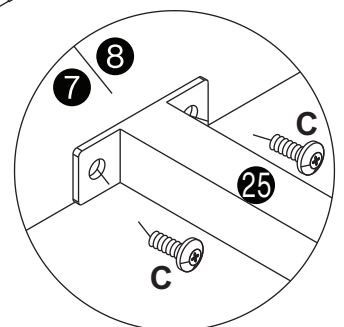
<b>H</b>

Ø15x11.3mm
5 pcs

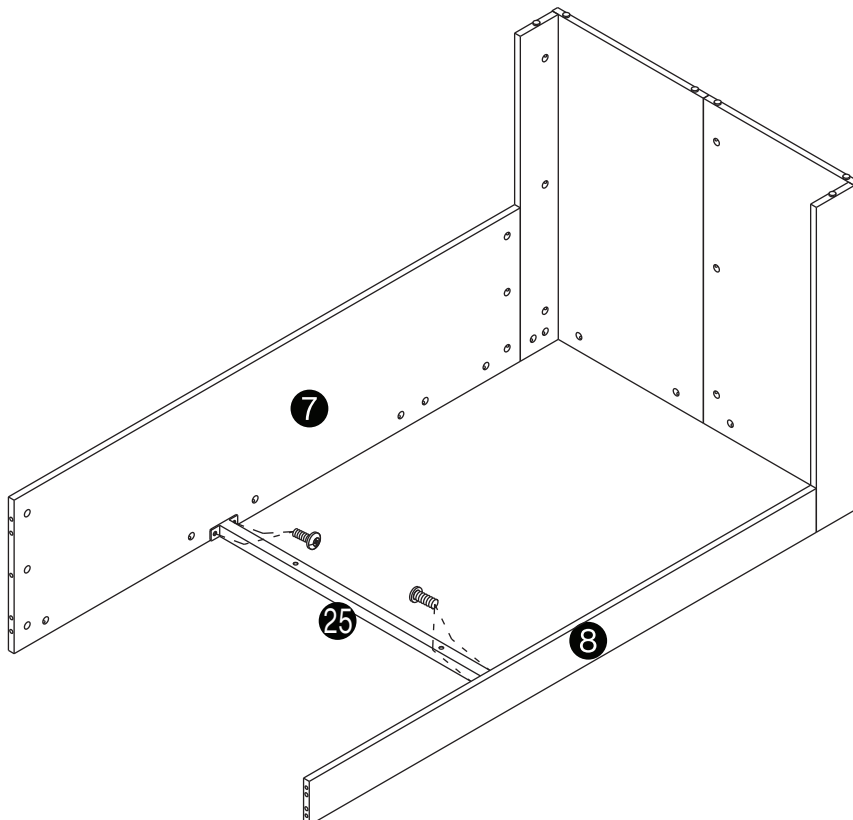


8




<b>C</b>

M6x12mm
4 pcs




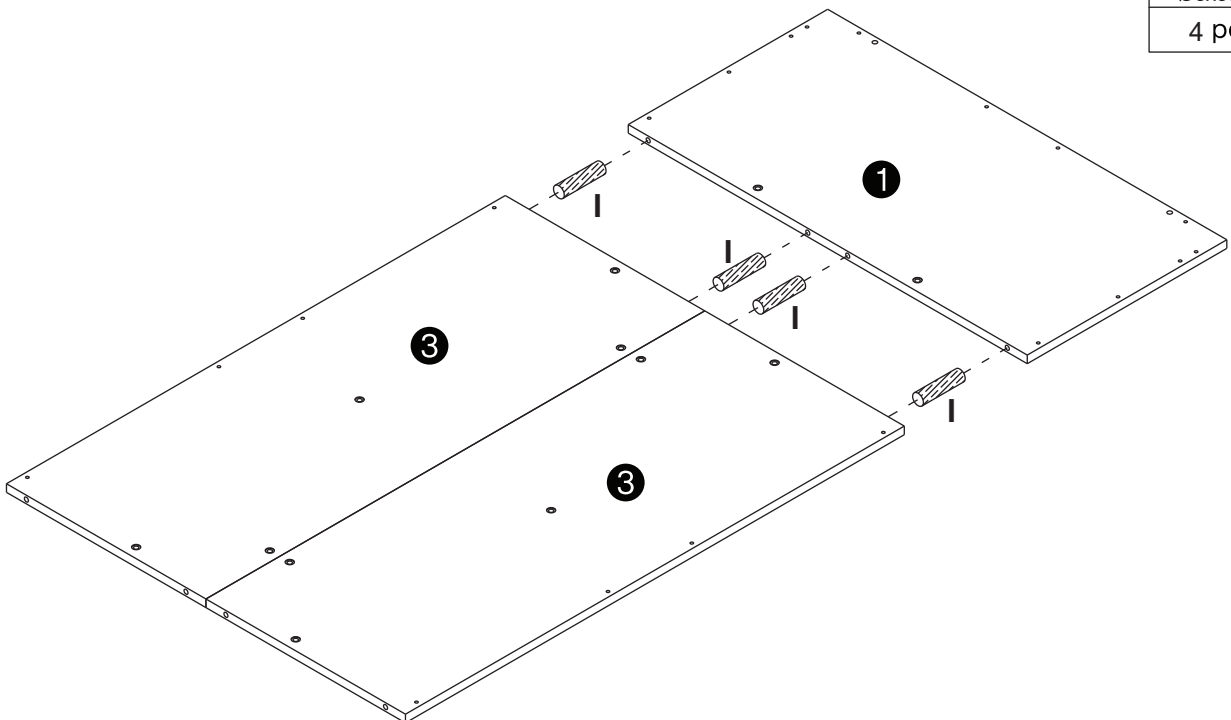
9

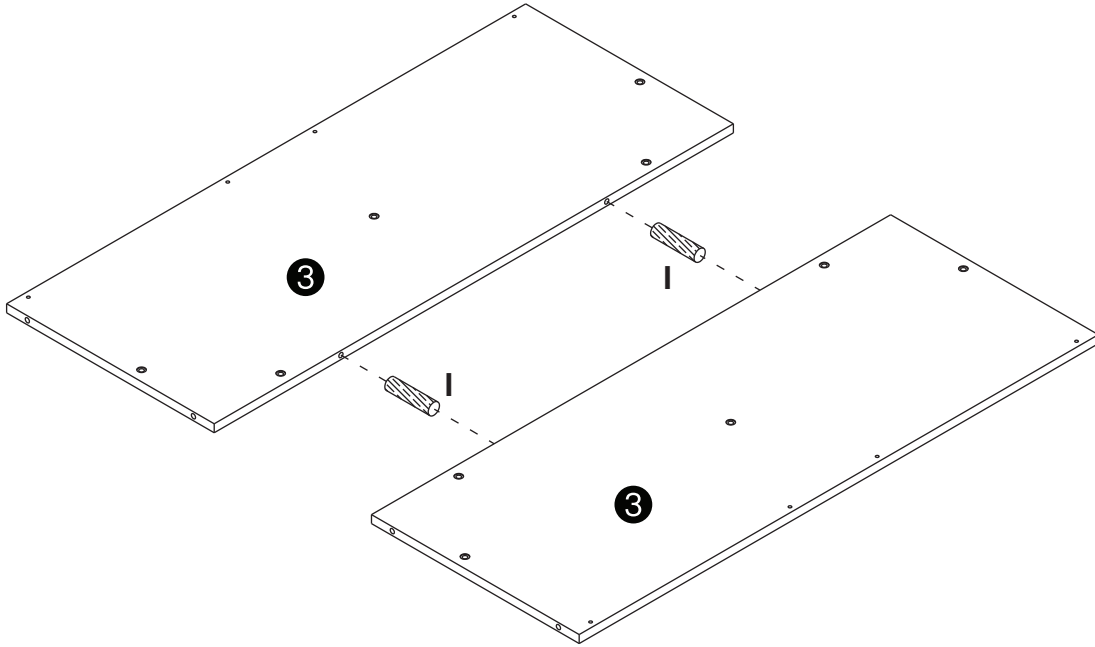I

Ø8x30mm
2 pcs




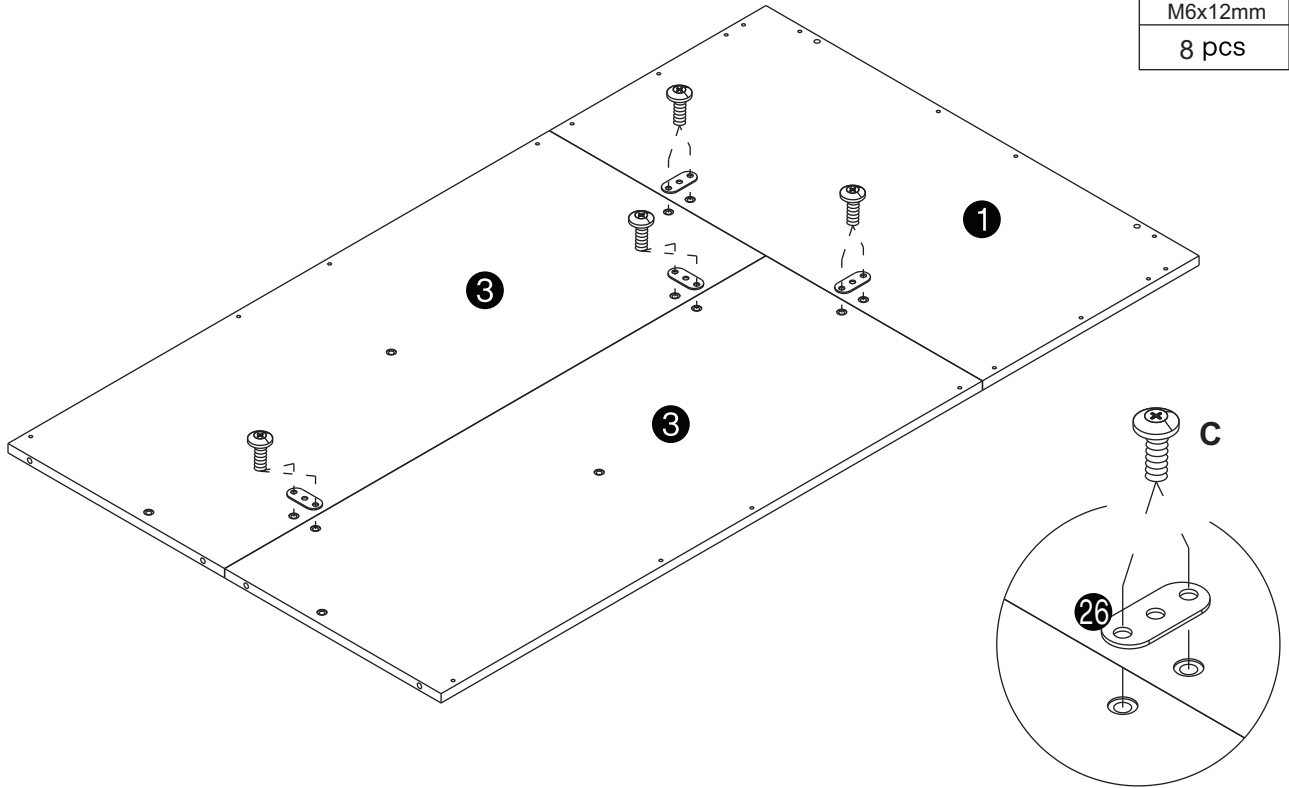
10

I

Ø8x30mm
4 pcs





11


<b>C</b>

M6x12mm
8 pcs

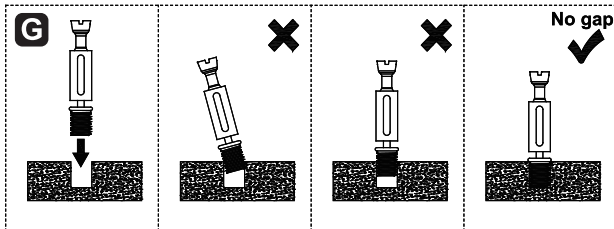


12



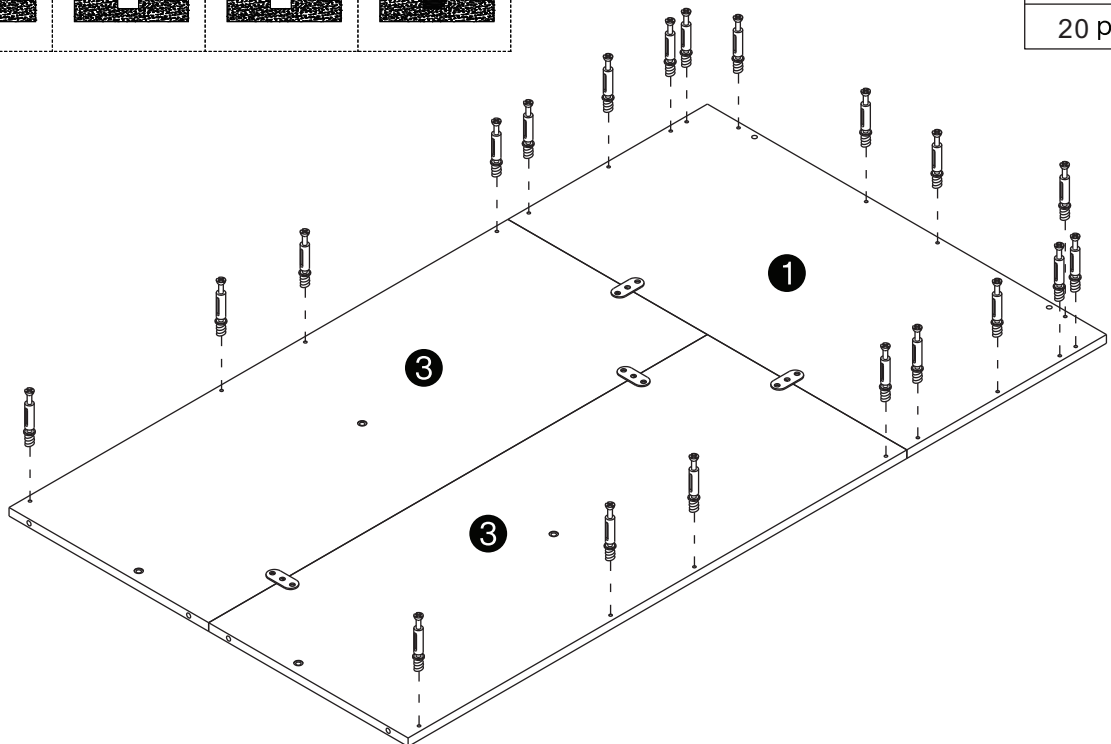
<b>G</b>

M6x44.5mm
20 pcs


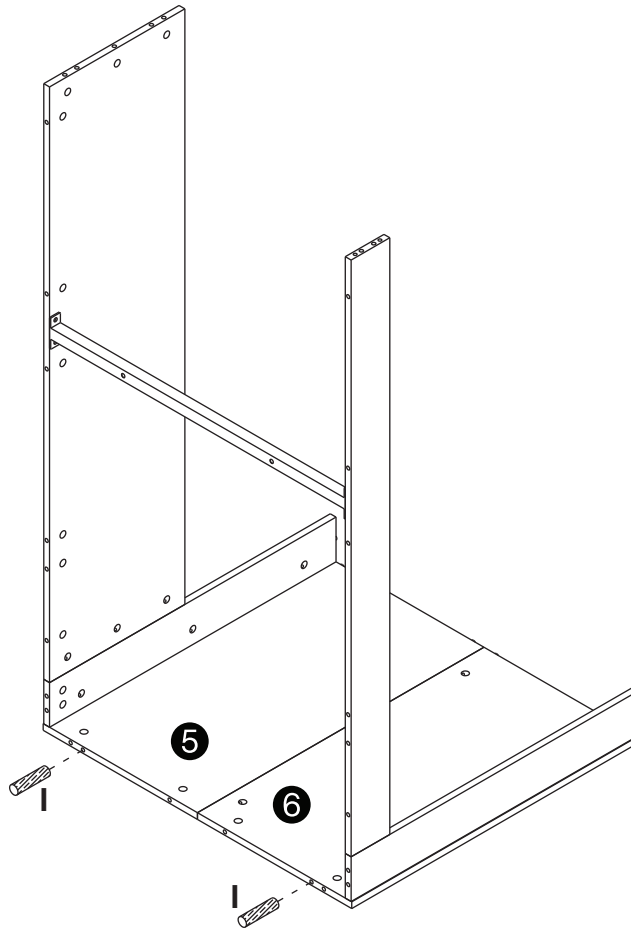



13




I

Ø8x30mm
2 pcs

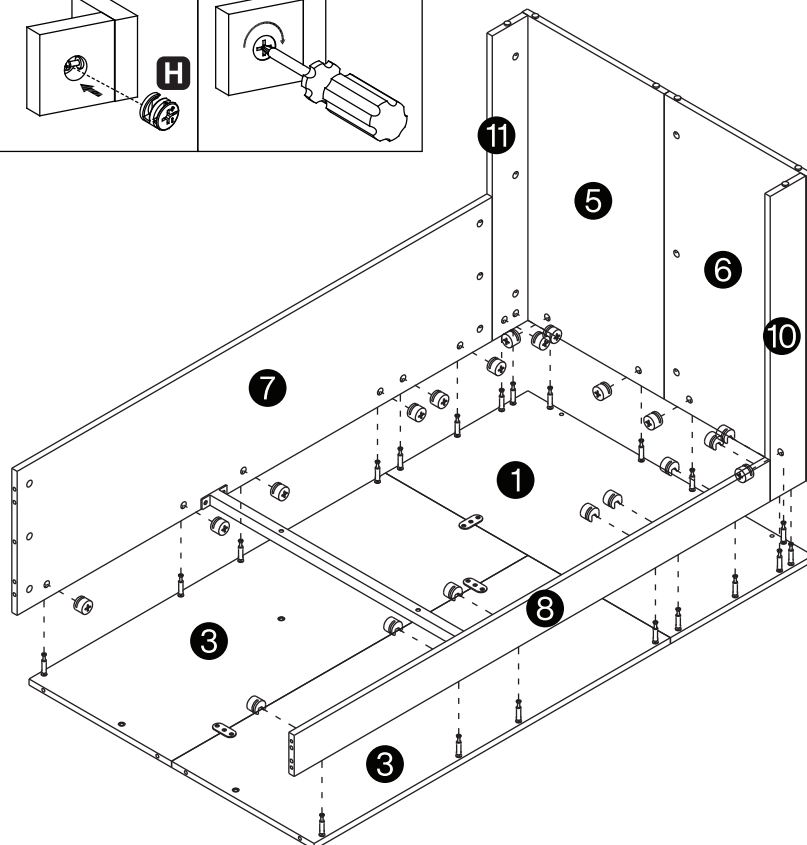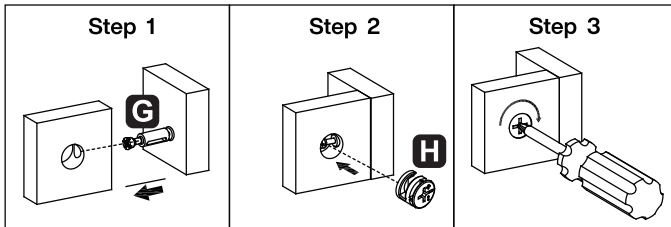

14

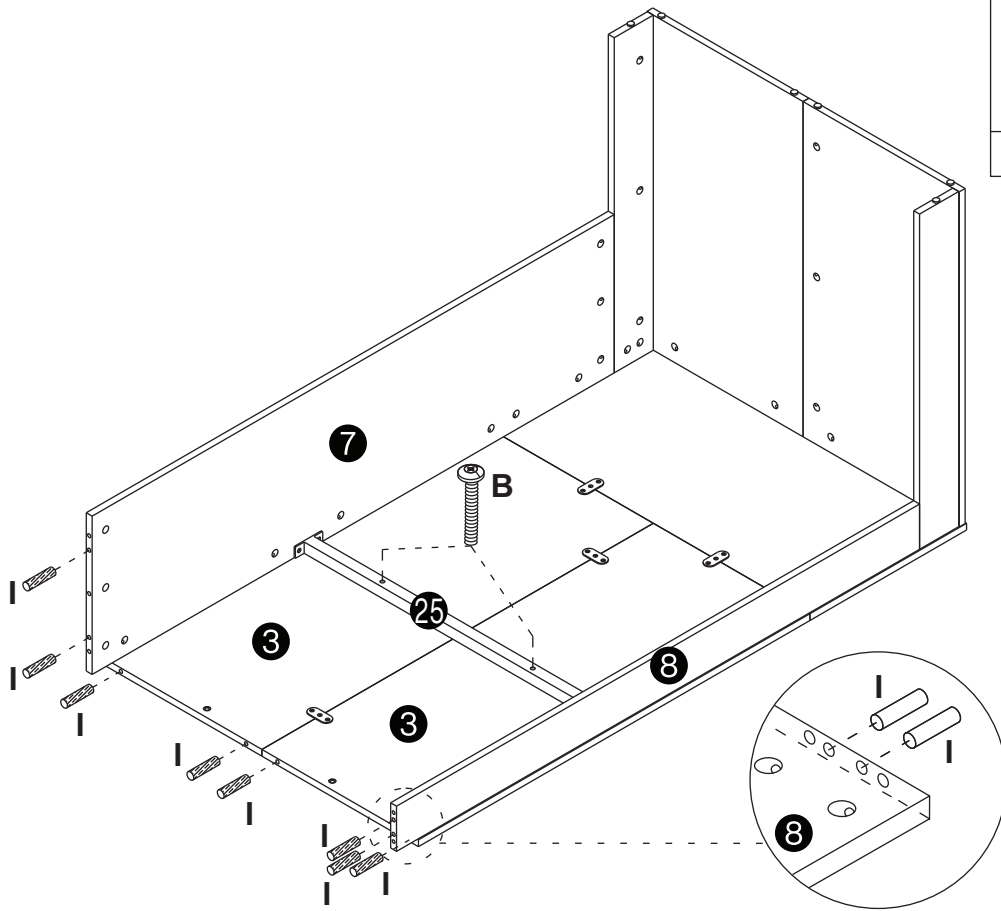


H

Ø15x11.3mm
20 pcs


15

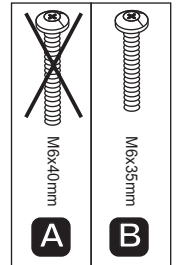



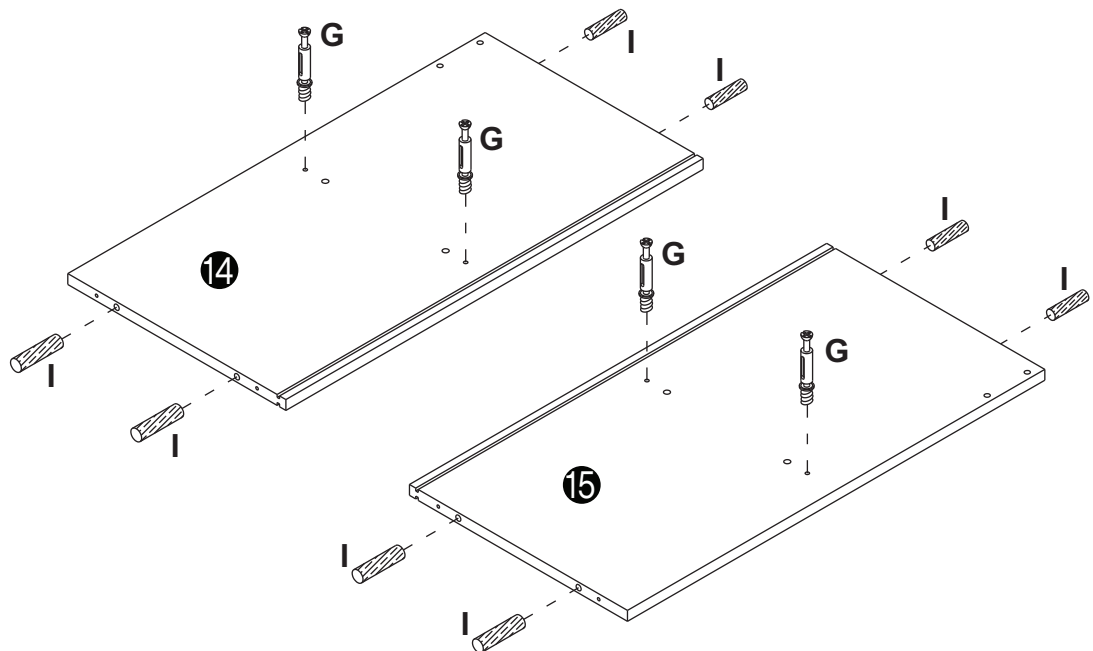
B	I
	
M6x35mm	Ø8x30mm
2 pcs	8 pcs




16

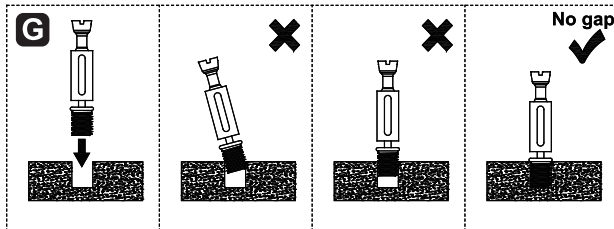


G	I
	
M6x44.5mm	Ø8x30mm
4 pcs	8 pcs





17

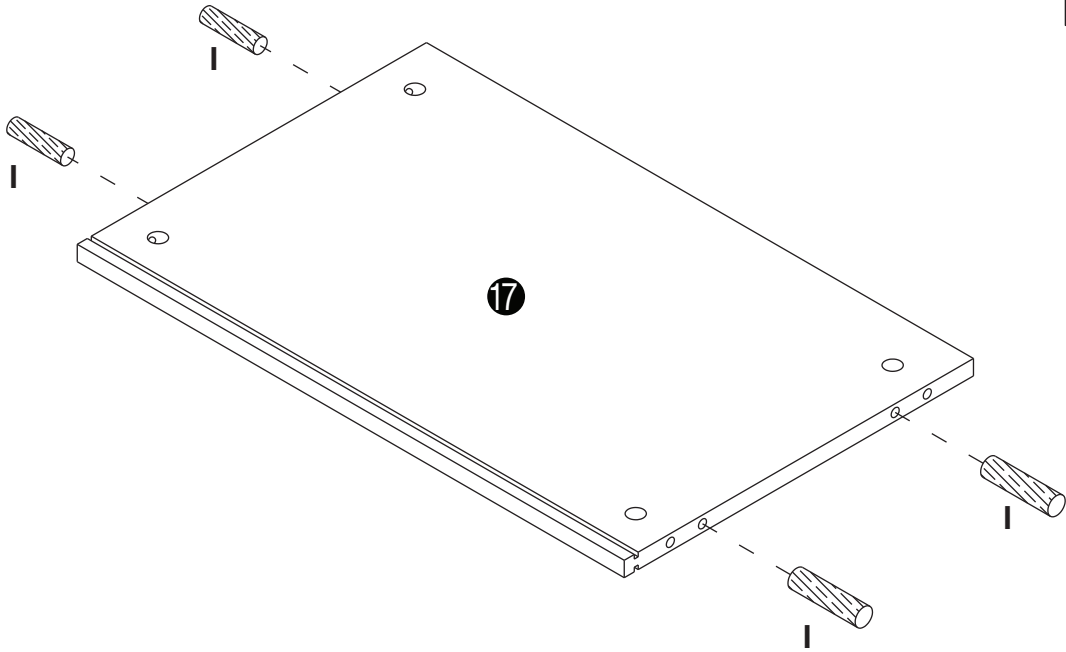


I

Ø8x30mm
4 pcs

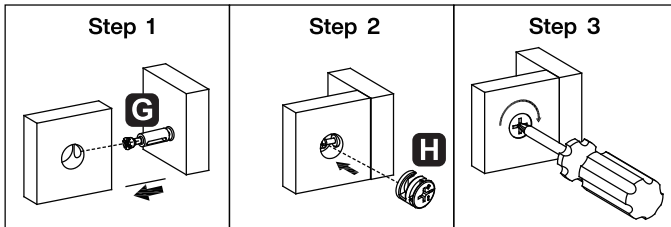
18

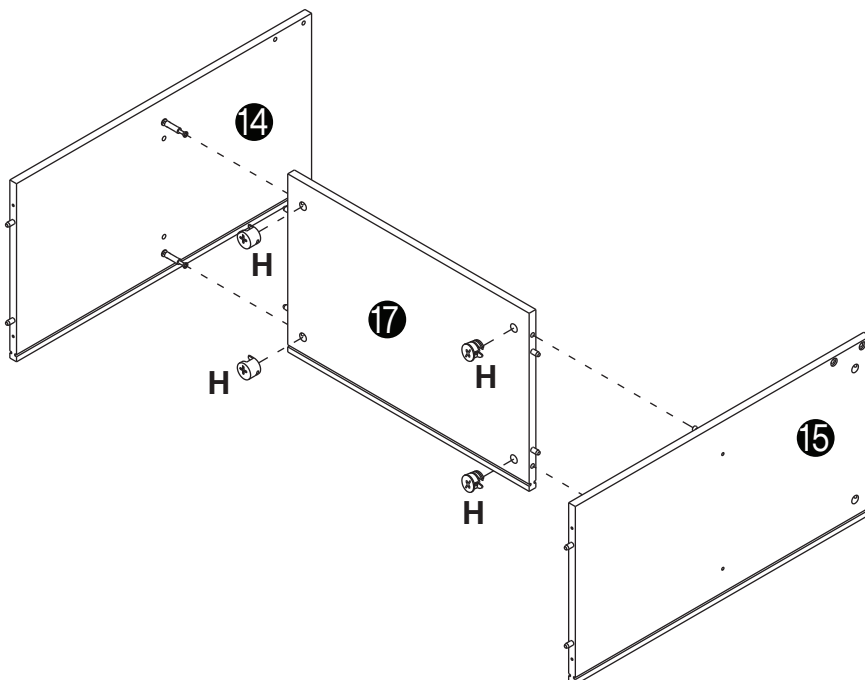


H

Ø15x11.3mm
4 pcs

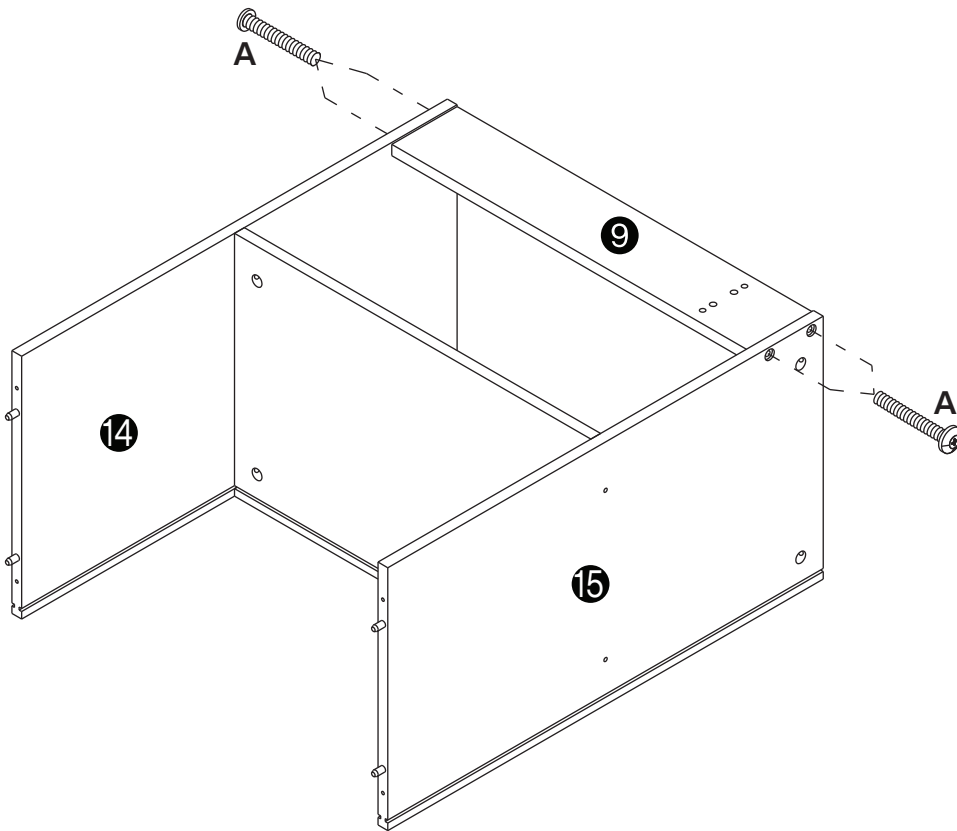


19





A

M6x40mm
4 pcs

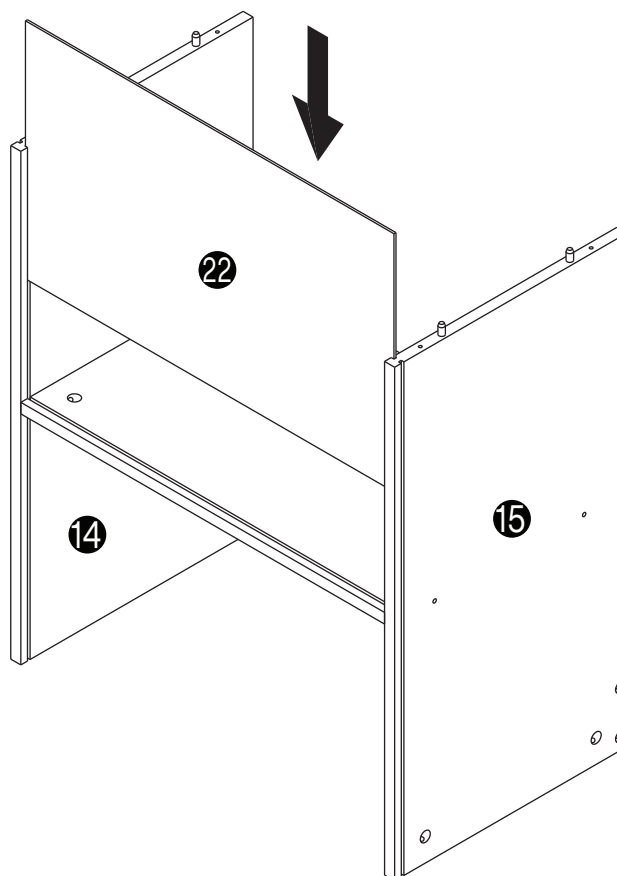20

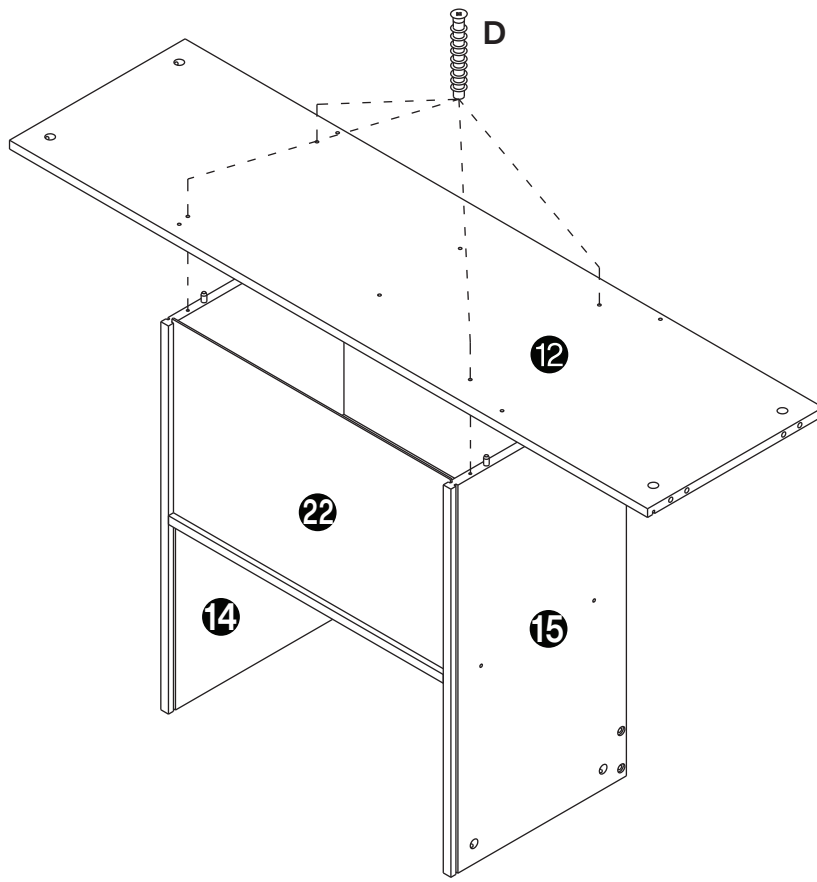




21




D

Ø5x38mm
4 pcs

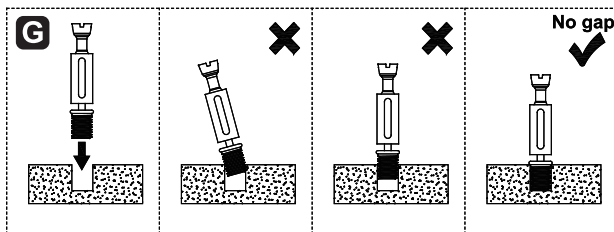
22




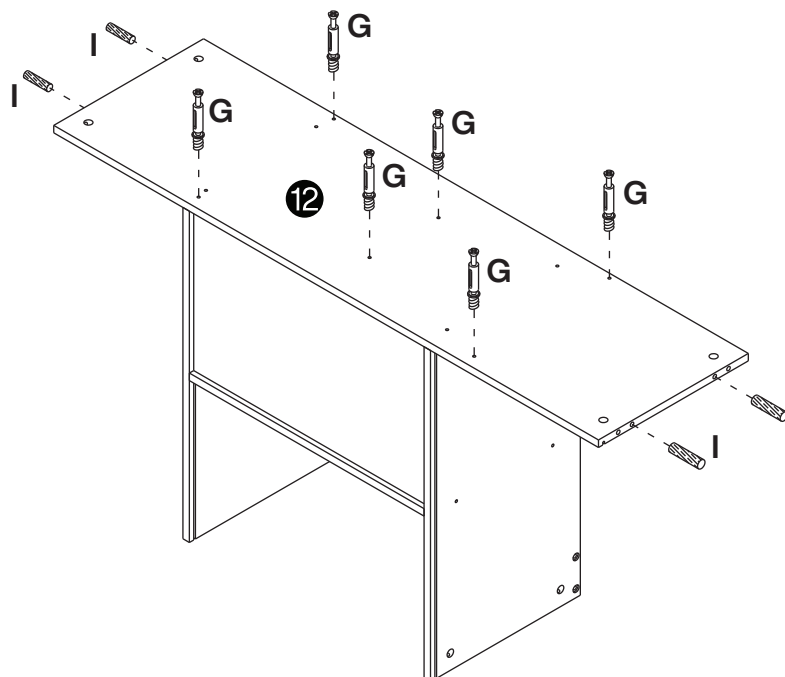
G	I
	
M6x44.5mm	Ø8x30mm
6 pcs	4 pcs



23

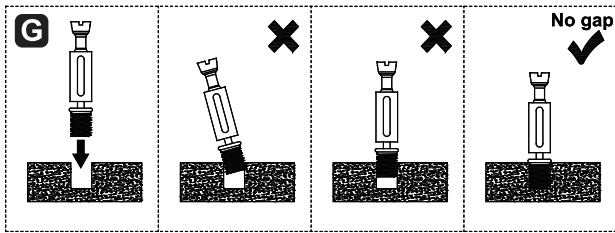



<b>G</b>

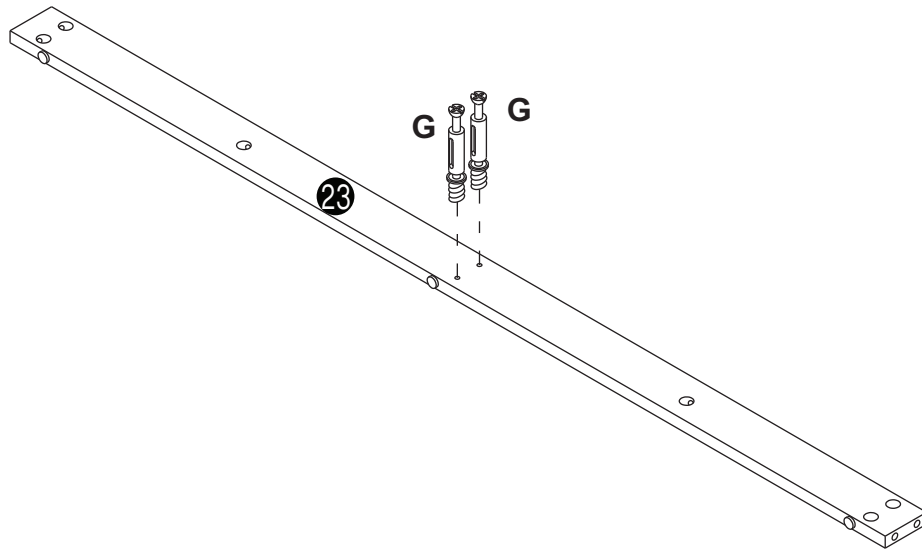M6x44.5mm
4 pcs




X2

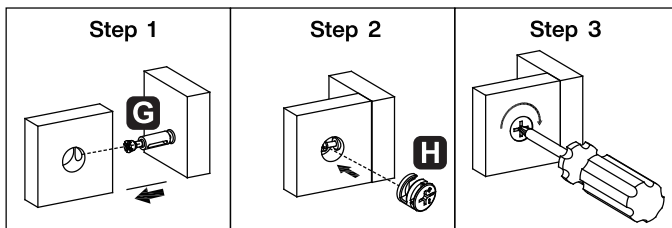
24




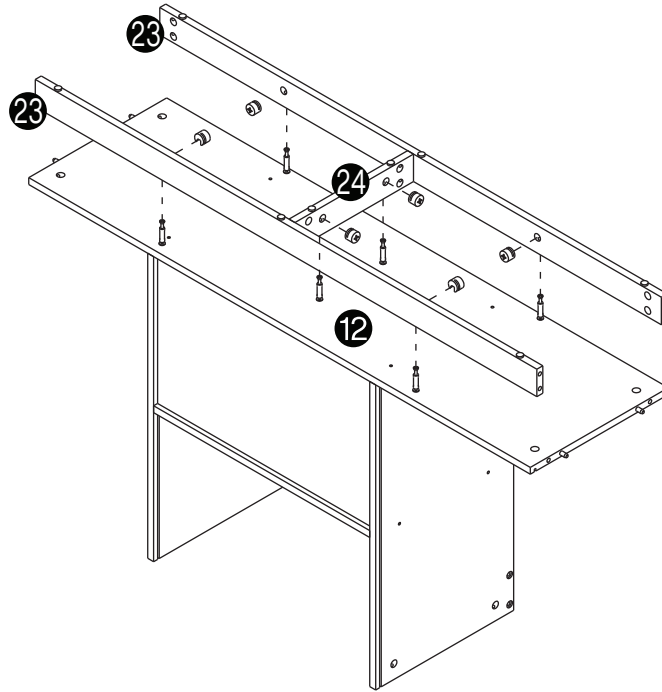
<b>H</b>

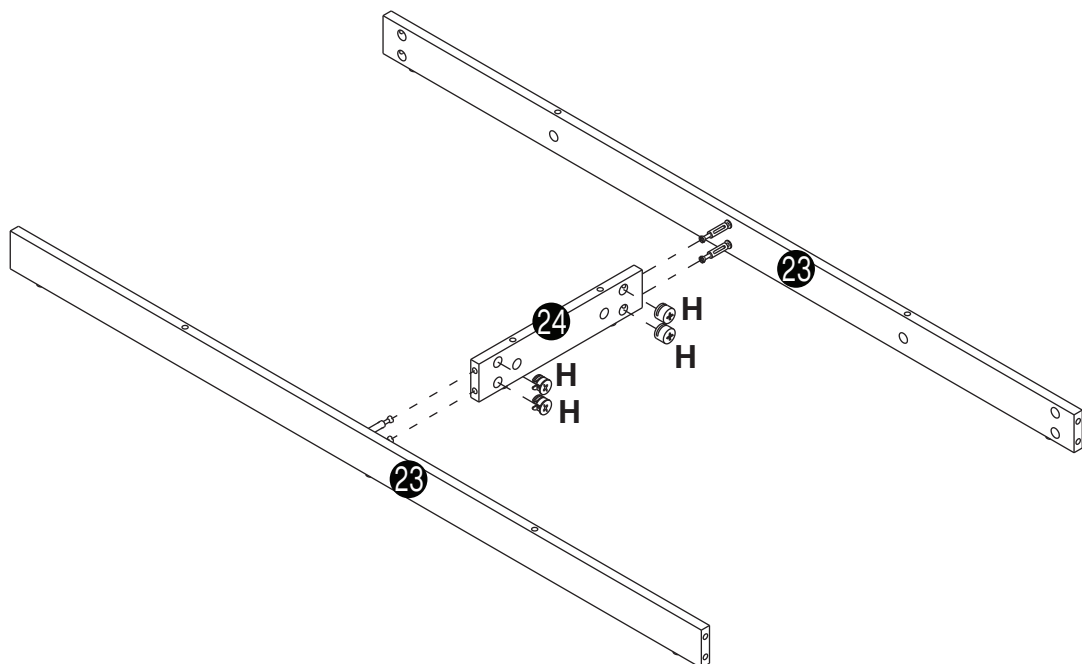Ø15x11.3mm
4 pcs

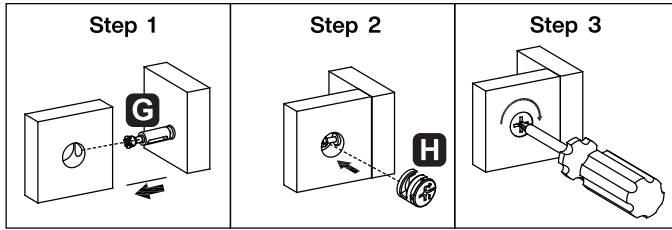


25





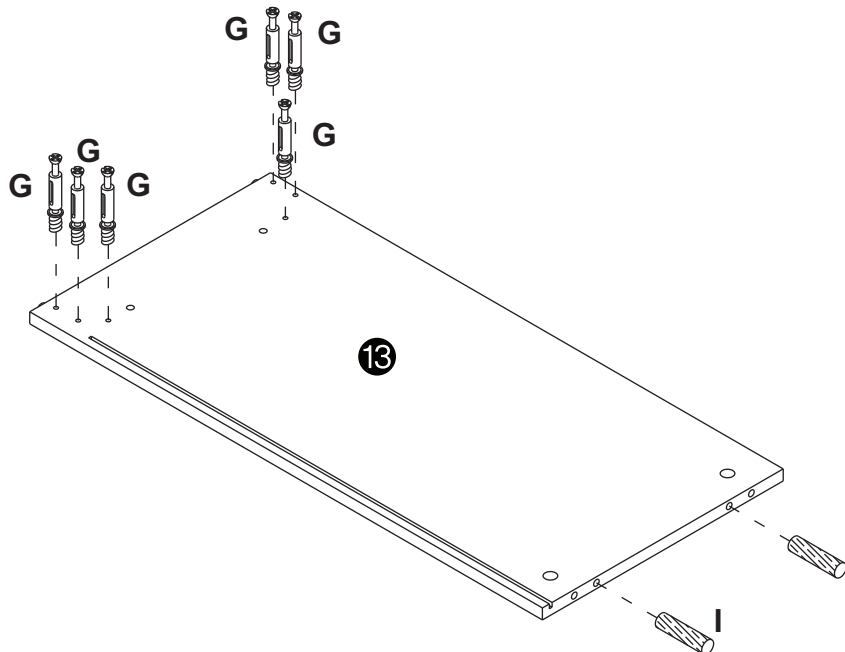
<b>H</b>

Ø15x11.3mm
6 pcs

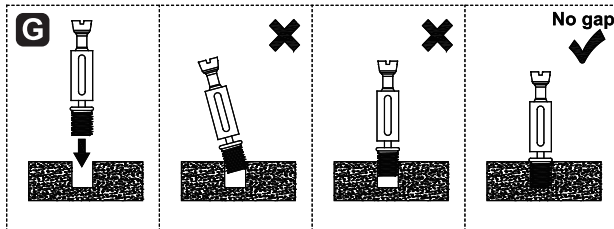


26




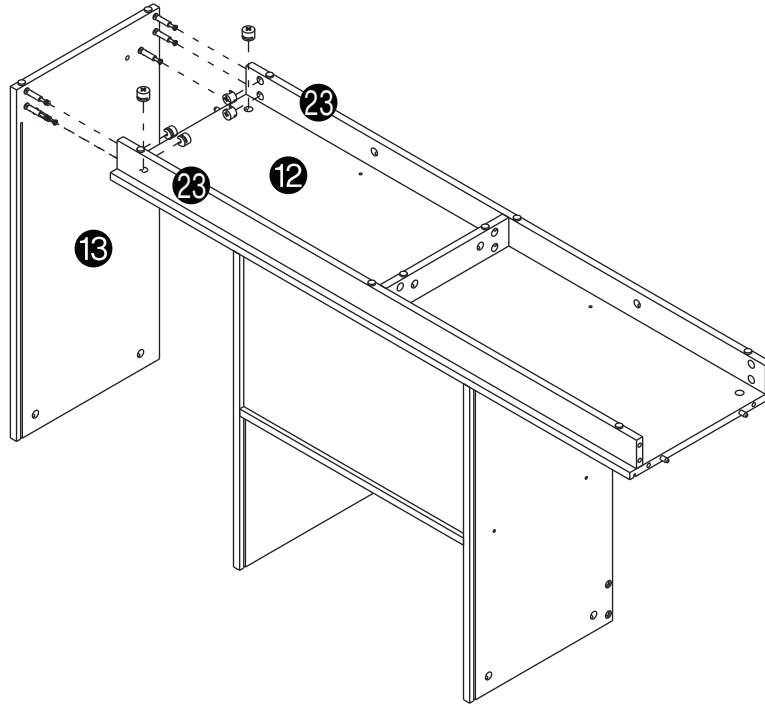
<b>G</b>	<b>I</b>
	
M6x44.5mm	Ø8x30mm
6 pcs	2 pcs




27

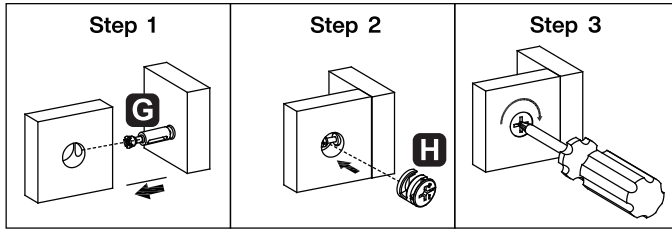



<b>H</b>

Ø15x11.3mm
6 pcs

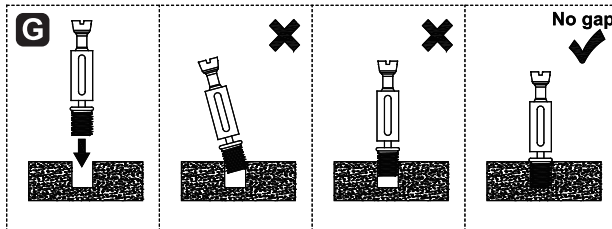


28



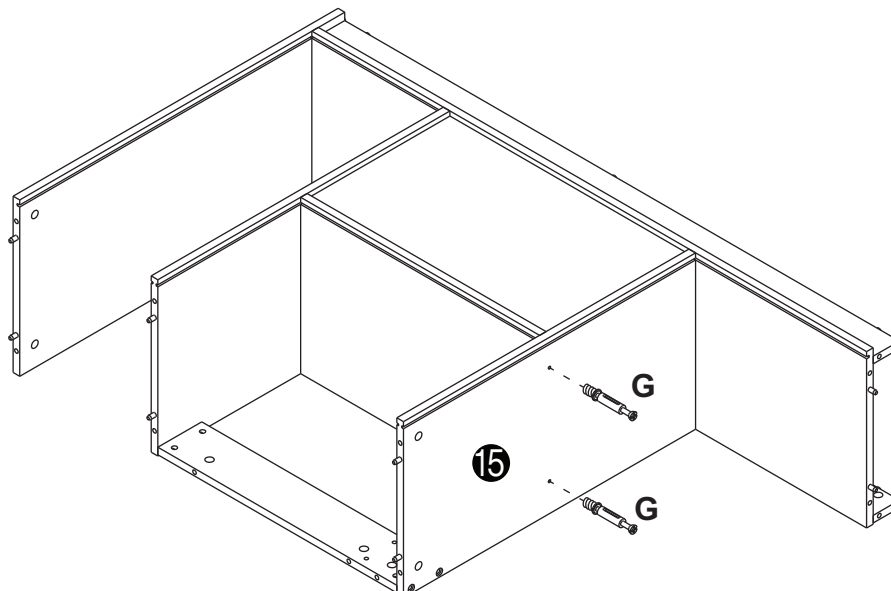
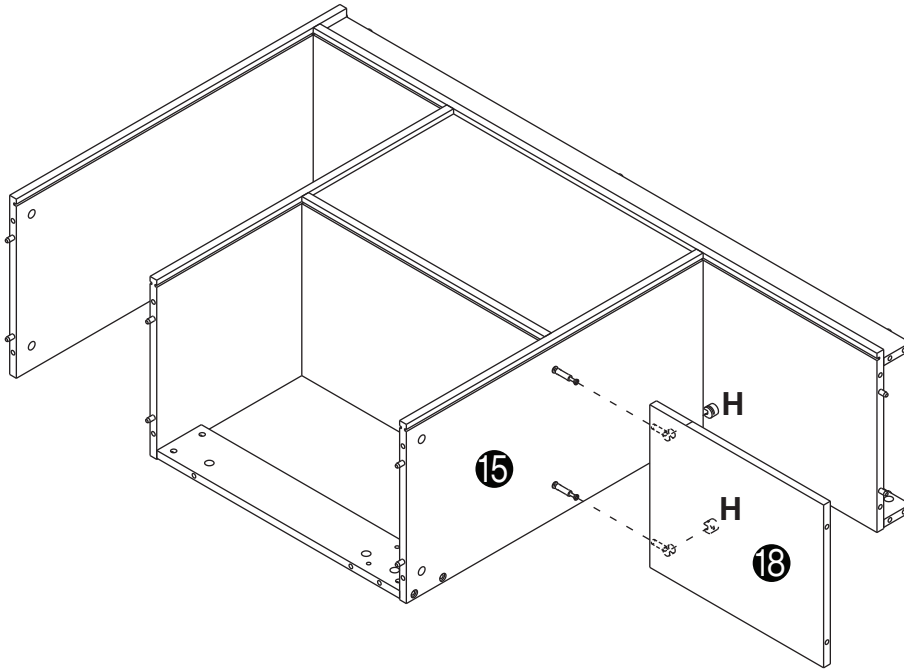
<b>G</b>

M6x44.5mm
2 pcs

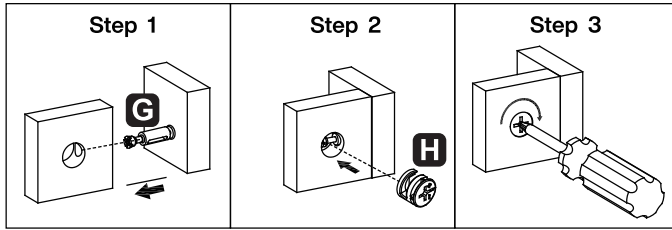


**29**





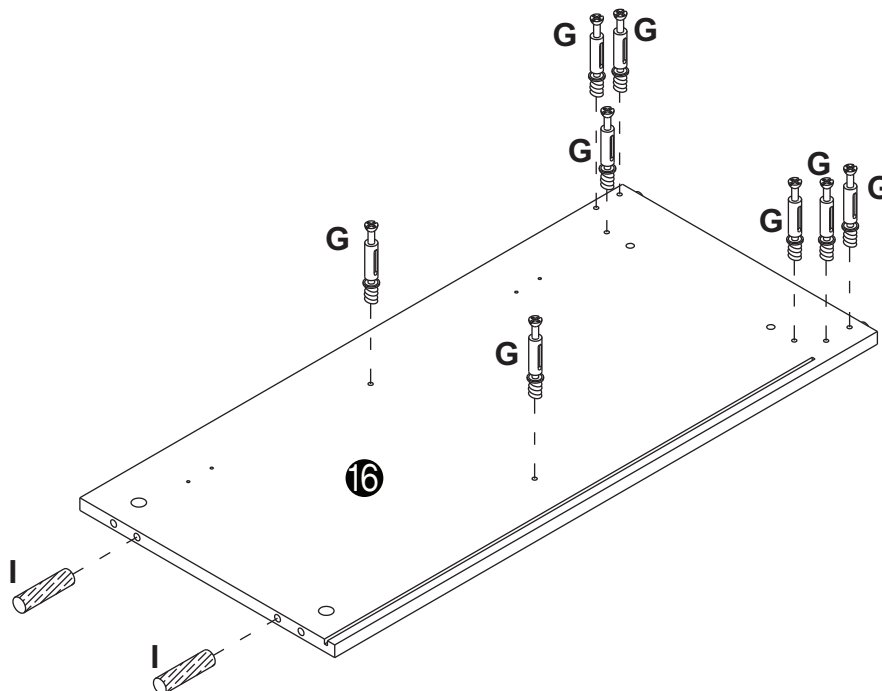
<b>H</b>

Ø15x11.3mm
2 pcs

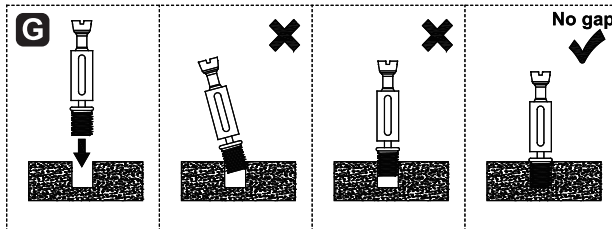


**30**




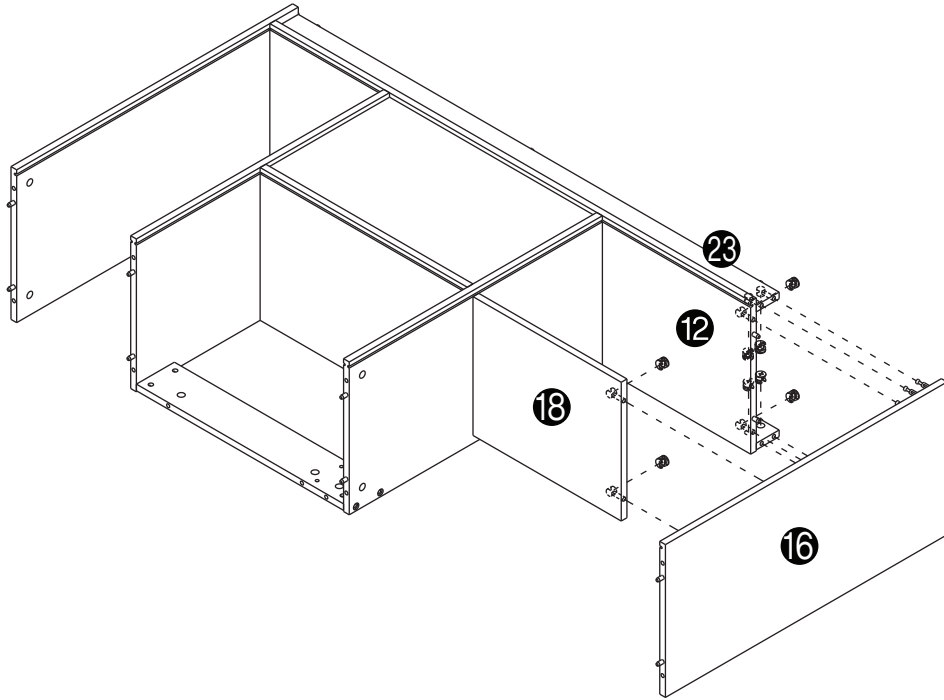
<b>G</b>	<b>I</b>
	
M6x44.5mm	Ø8x30mm
8 pcs	2 pcs




31

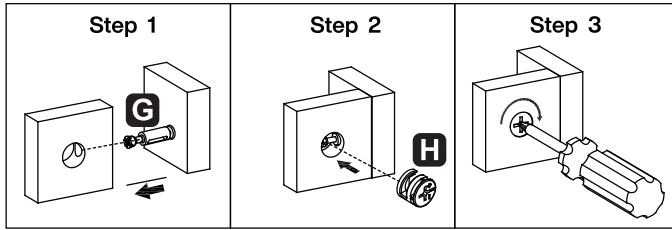


<b>H</b>

Ø15x11.3mm
8 pcs

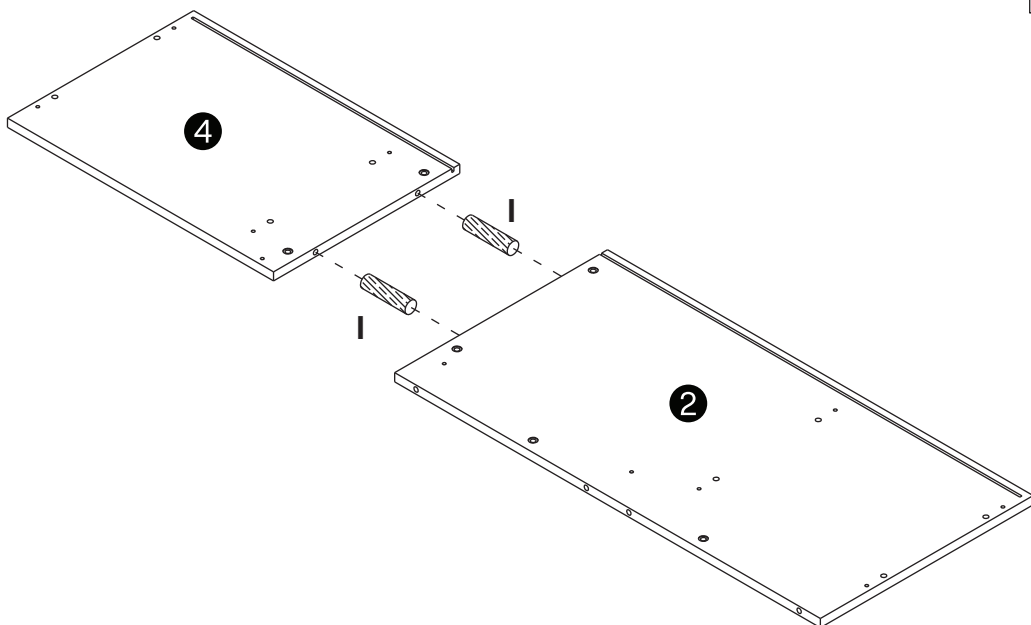


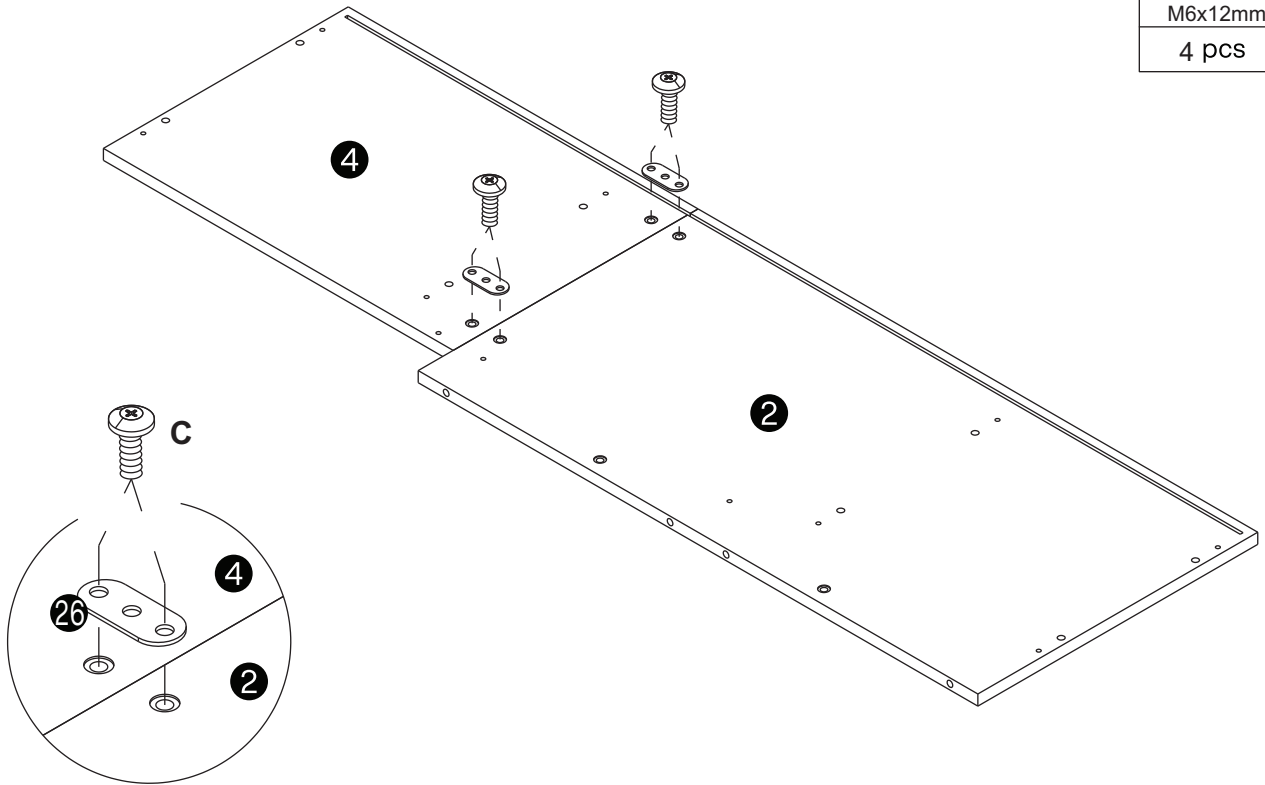
32




<b>I</b>

Ø8x30mm
6 pcs


33


<b>C</b>

M6x12mm
4 pcs

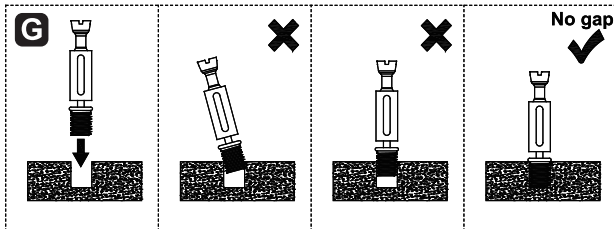


34




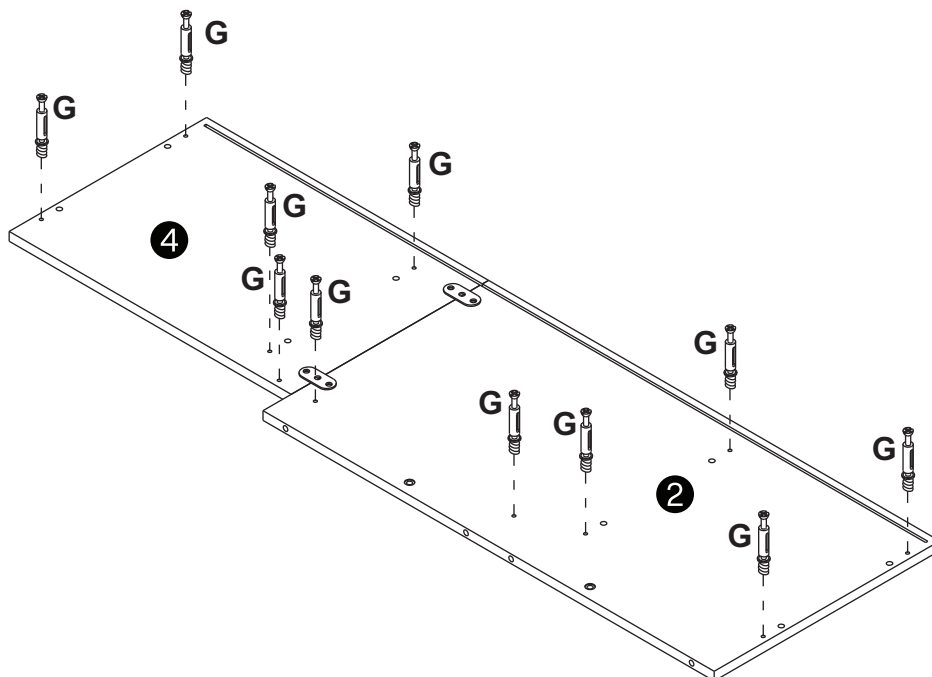
<b>G</b>

M6x44.5mm
11 pcs

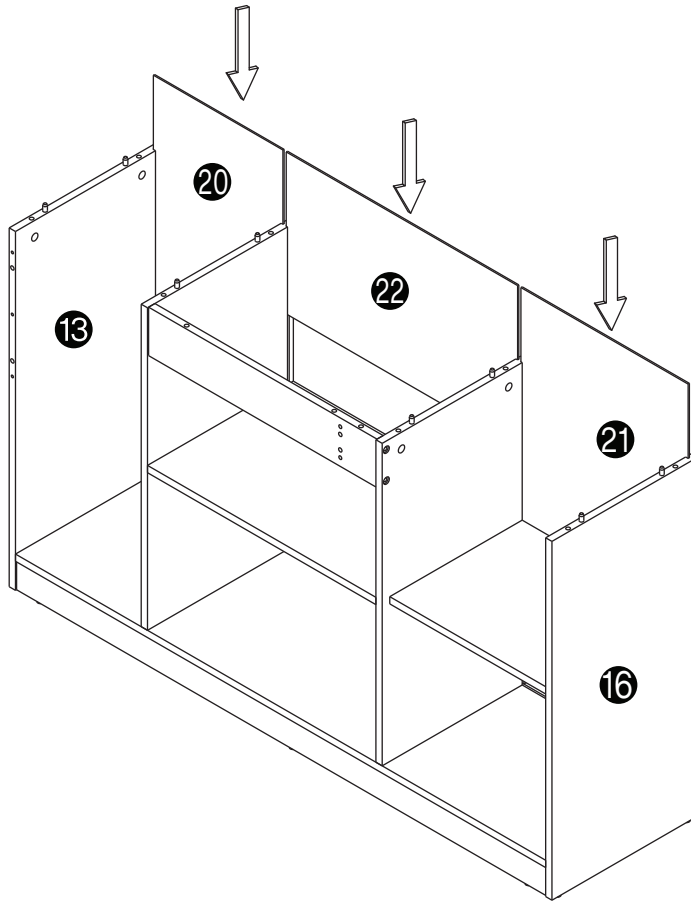


**35**



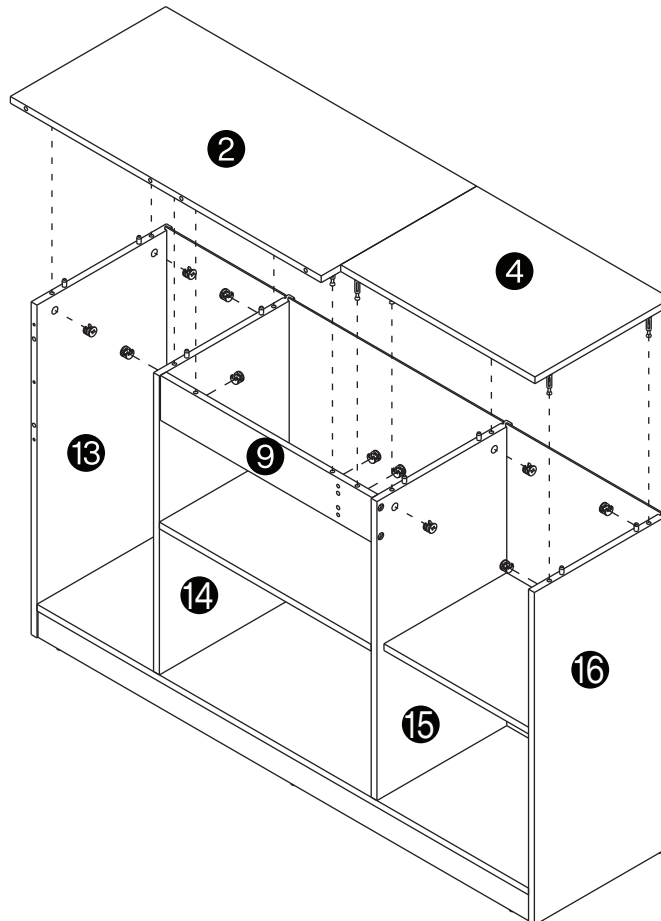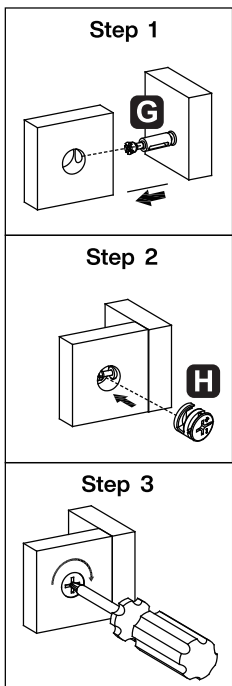


**36**




<b>H</b>

Ø15x11.3mm
11 pcs


37

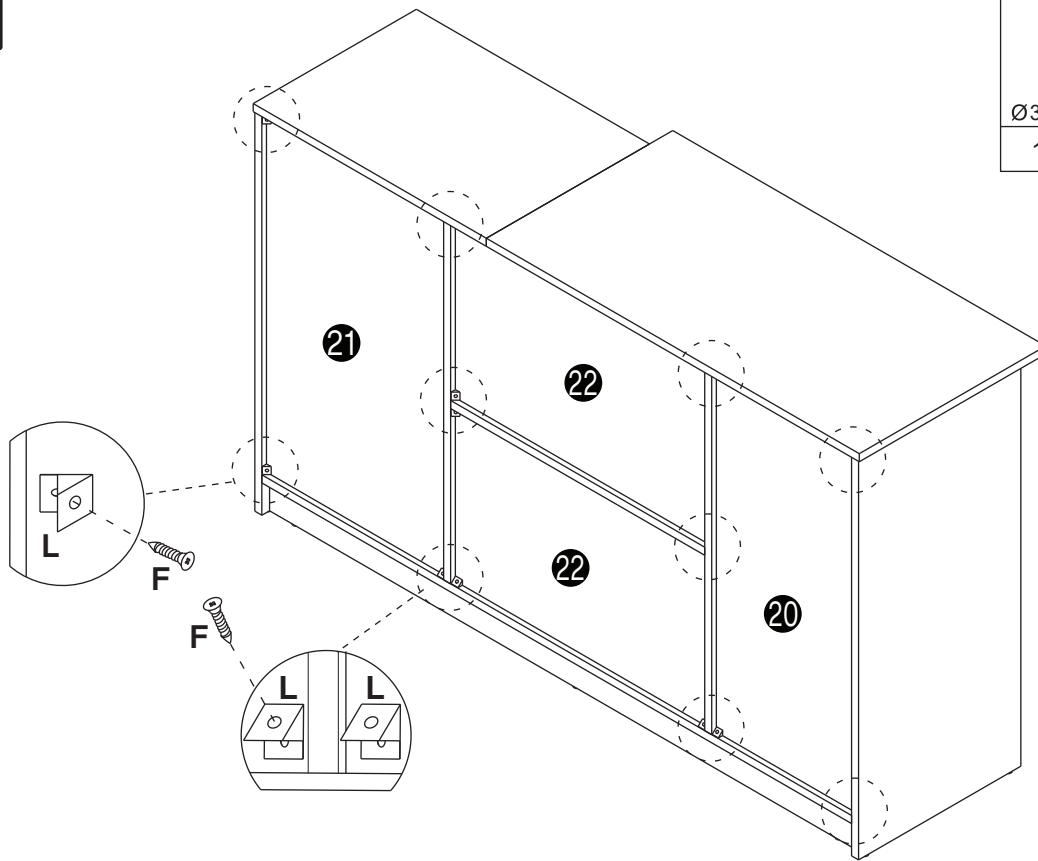
F	L
 Ø3.5x14mm	
16 pcs	16 pcs

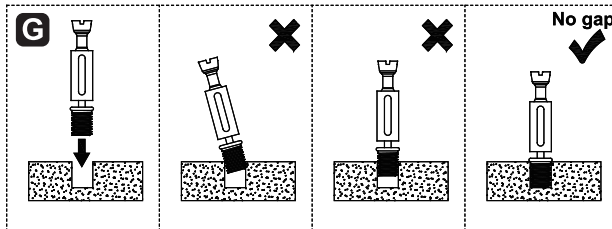


38



G
 M6x44.5mm
3 pcs

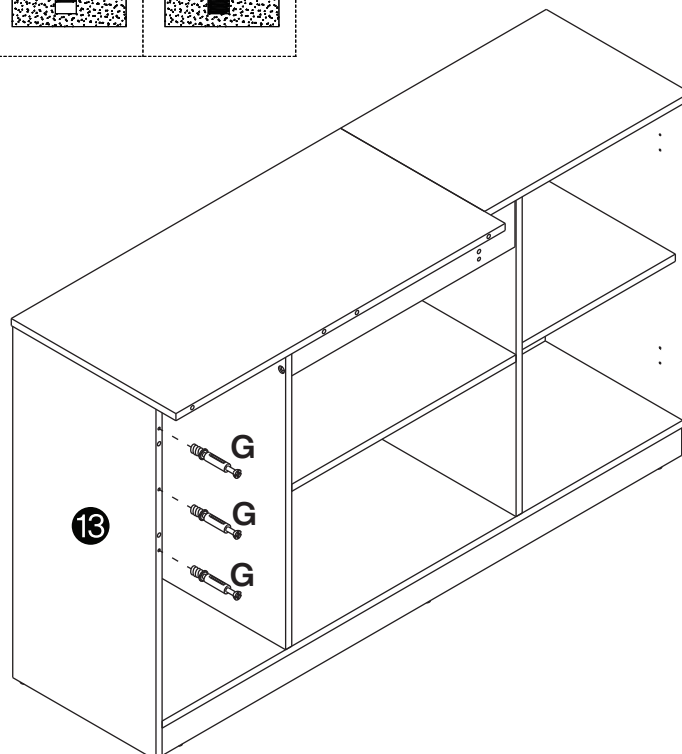

39

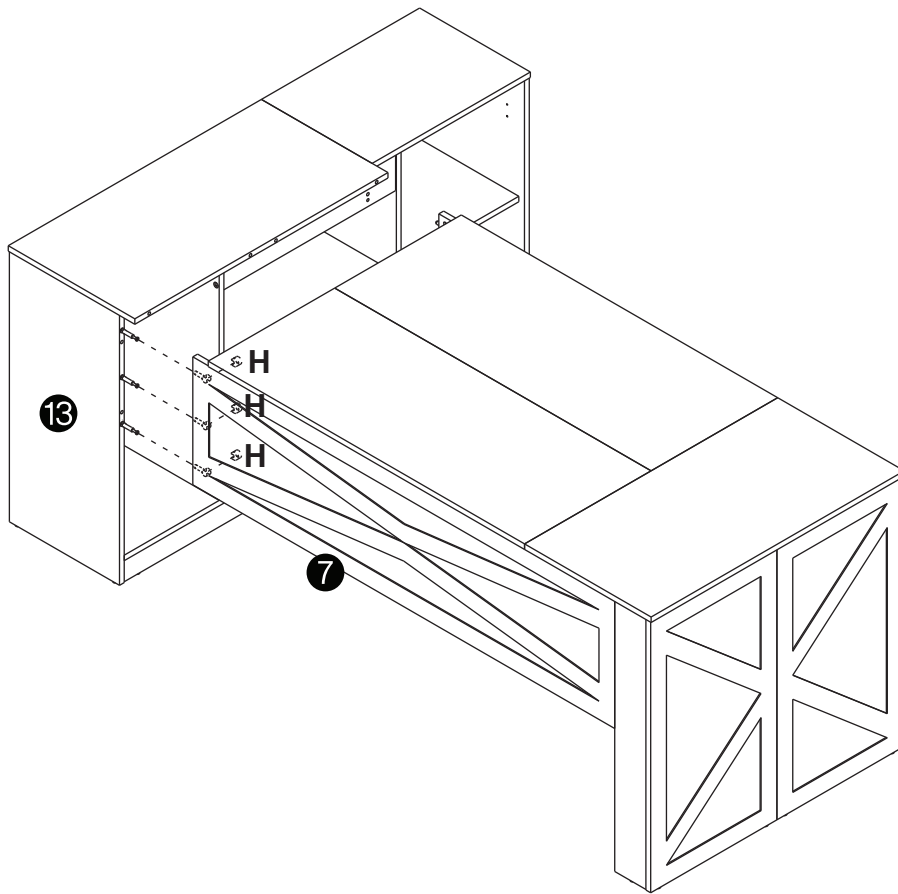


<b>H</b>
Ø15x11.3mm
3 pcs

**Step 1**

**Step 2**



**Step 3**


40

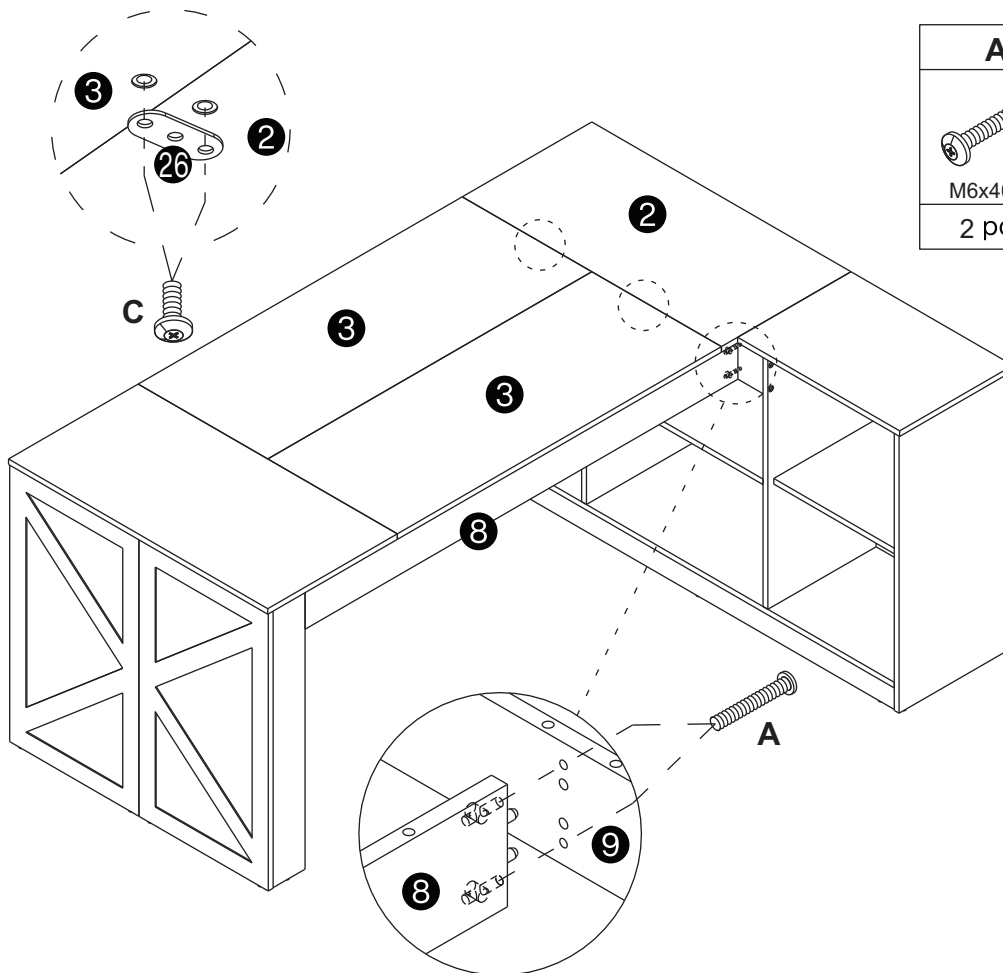



<b>A</b>	<b>C</b>
M6x40mm	M6x12mm
2 pcs	4 pcs


41

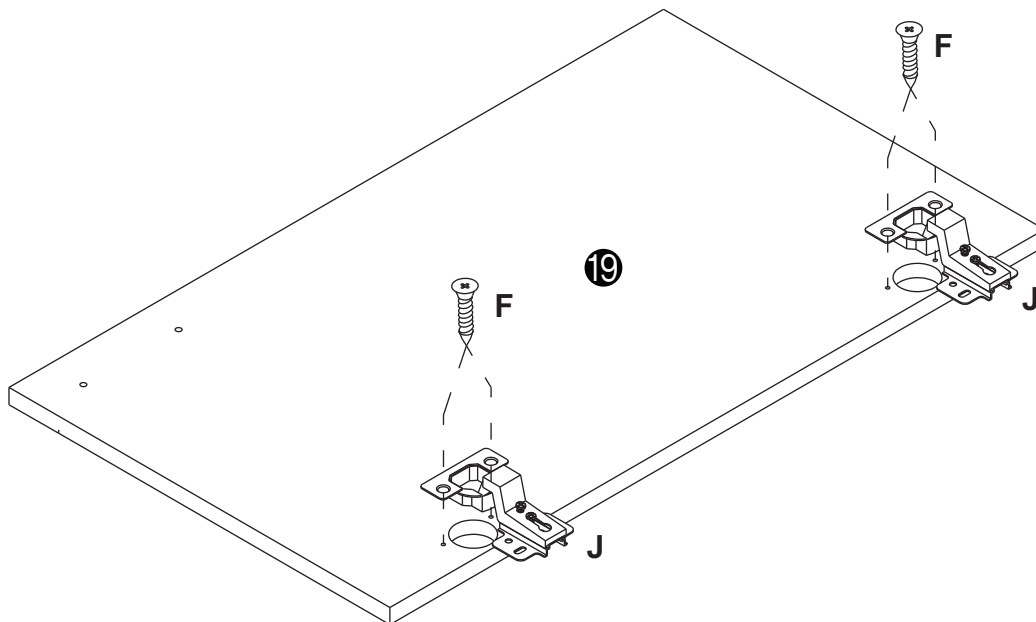F	J
	
Ø3.5x14mm	
4 pcs	2 pcs




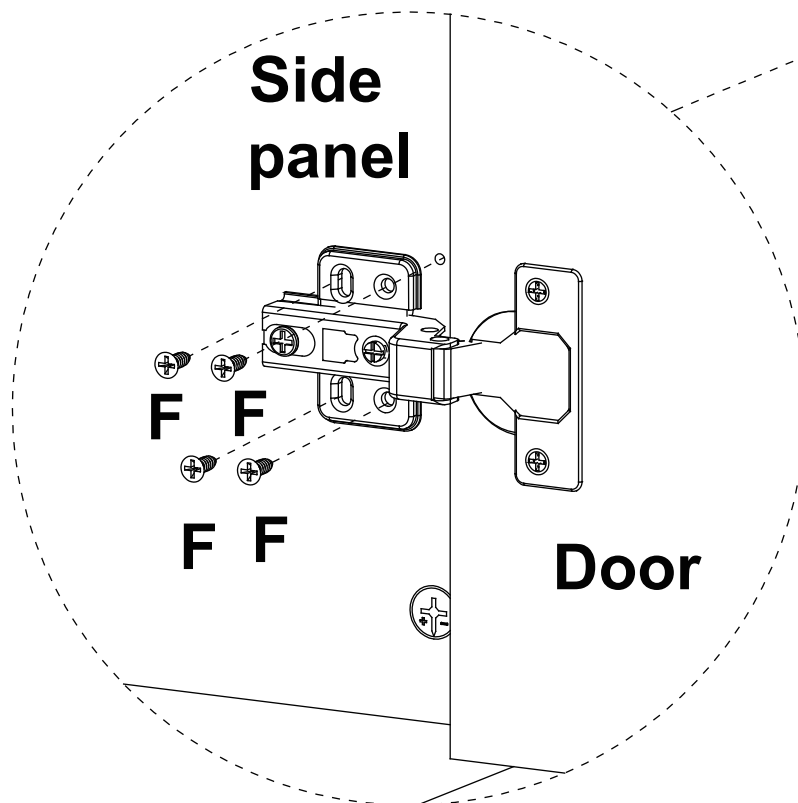
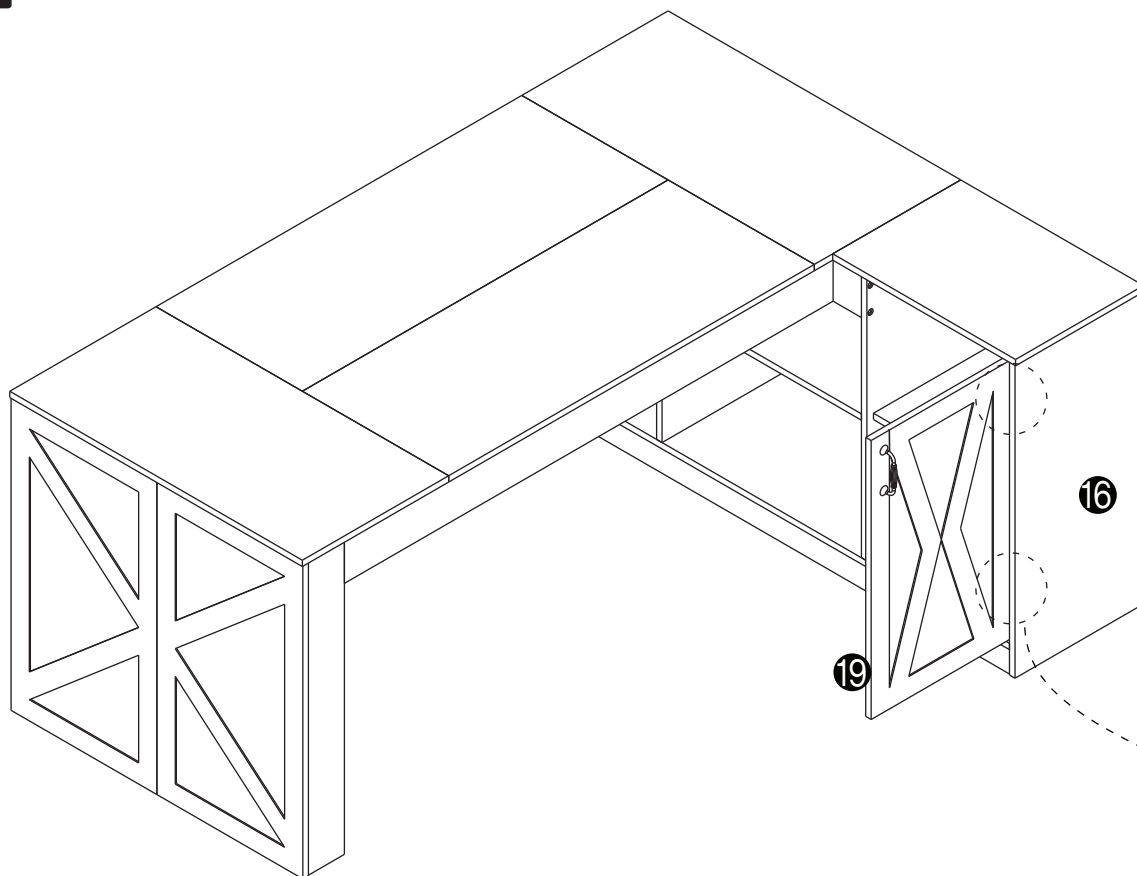
42

E	K
	
Ø4x18mm	
2 pcs	1 pc

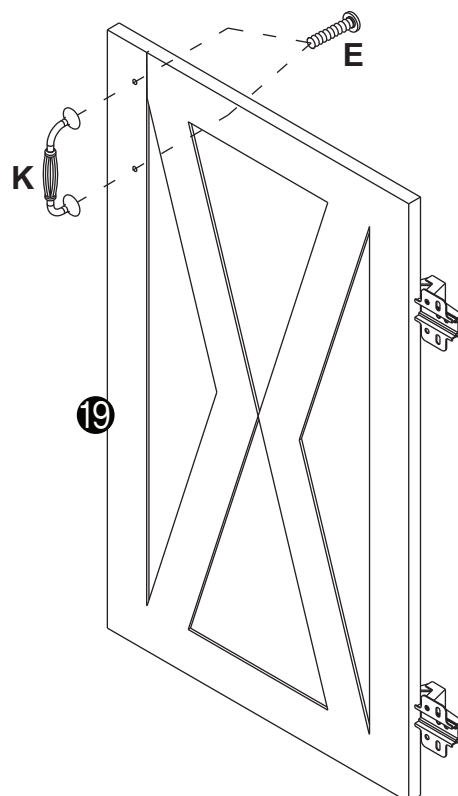


43

<b>F</b>

Ø3.5x14mm
8 pcs



## Step 1

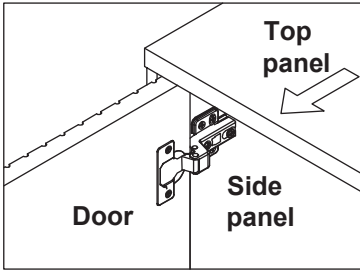
Open the door.



# ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).



## Step 2

Adjust the door panel to be flush with side panel and top panel edge.

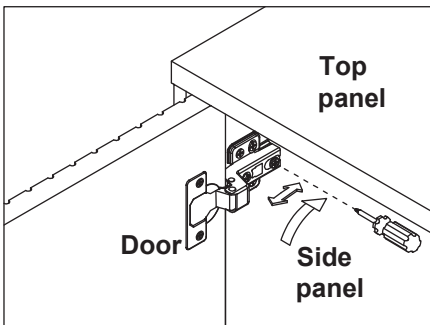



Loosen the screw indicated a little, adjust the hinge to the right position (see step 2a & 2b), then tighten the screw.

### Step 2a MOVE DOOR OUT

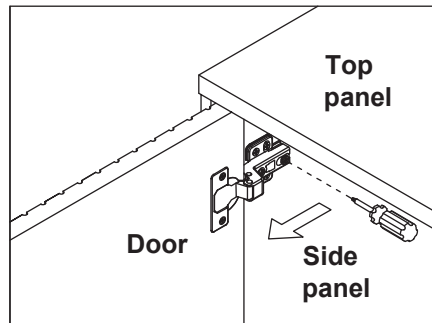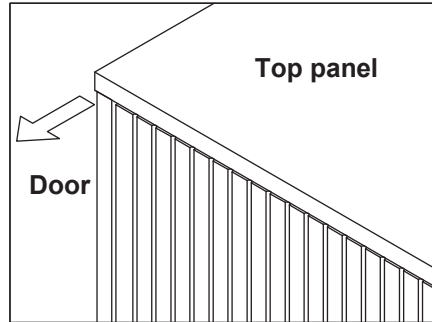

Pull the hinge forward a little.


### Step 2b MOVE DOOR IN

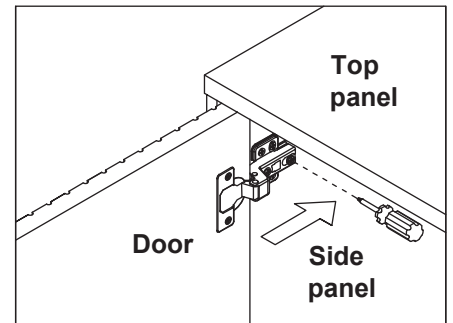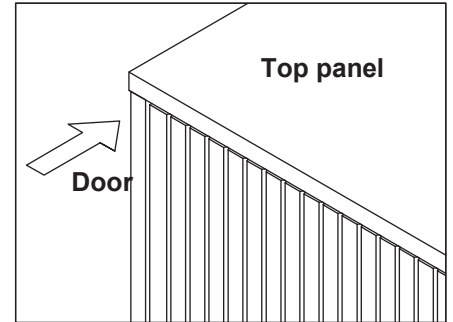

Push the hinge back a little.



## Step 3

Adjust the gap between the door panel and the side panel.

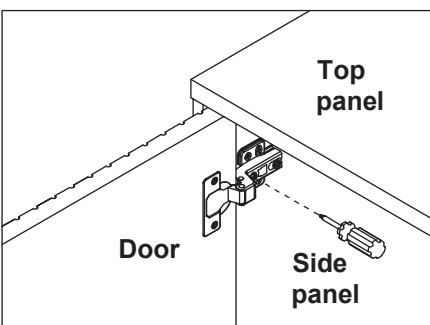



Loosen or tighten the screw indicated a little to adjust the gap between the door panels, adjust the hinge to the right position (see step 3a & 3b).

### Step 3a MOVE DOOR LEFT

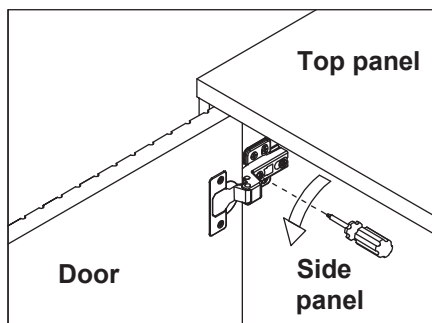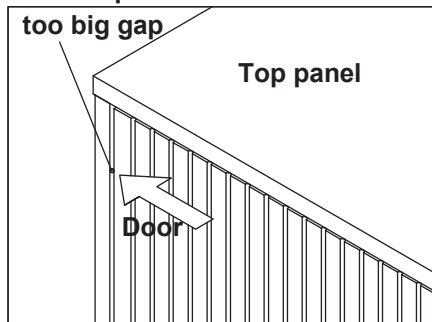

Turn the screw clockwise a little as shown to make the gap smaller

### Step 3b MOVE DOOR RIGHT

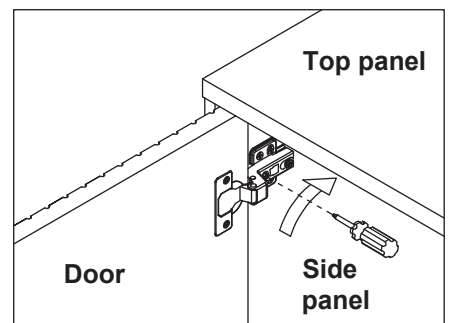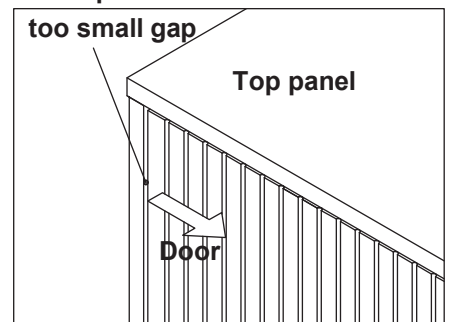

Turn the screw counterclockwise a little as shown to make the gap bigger

**Thank you for your support!**

