

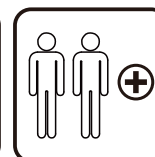
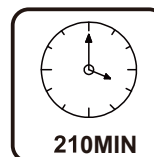
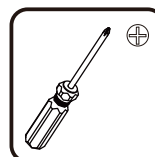
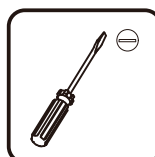



Installation & Assembly

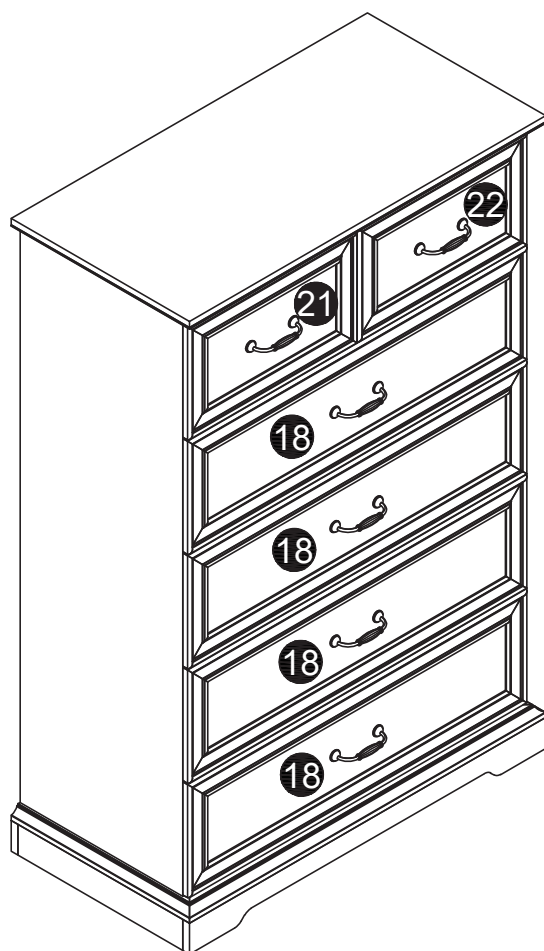


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

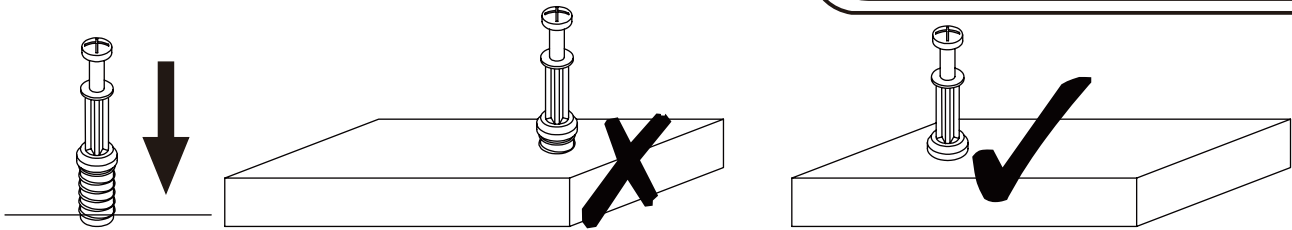


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

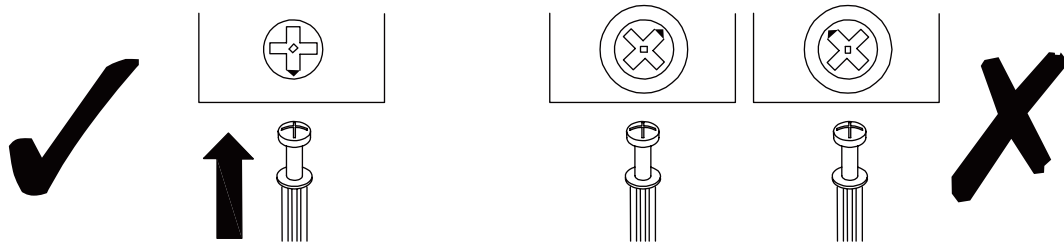











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.







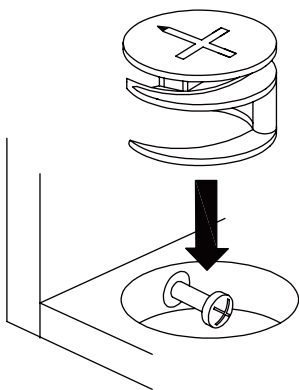





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.


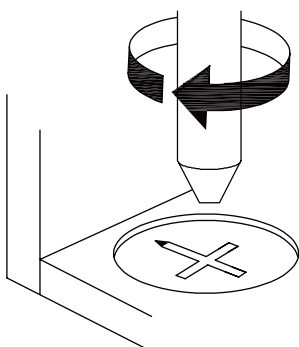


EN_Turn cam lock clockwise to tighten.

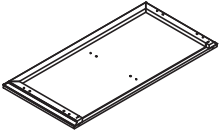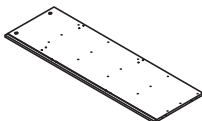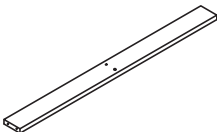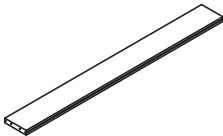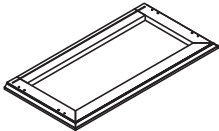
NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x2	
6		x2	
7		x3	
8		x1	
9		x1	
10		x1	

NO.	PARTS	QTY	SPARE
11		x1	
12		x1	
13		x6	
14		x6	
15		x4	
16		x8	
17		x4	
18		x4	
19		x2	
20		x2	

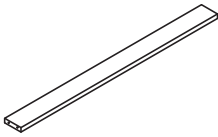
NO.	PARTS	QTY	SPARE
21		x1	
22		x1	
23		x1	
	 Hardware Kit	x1	

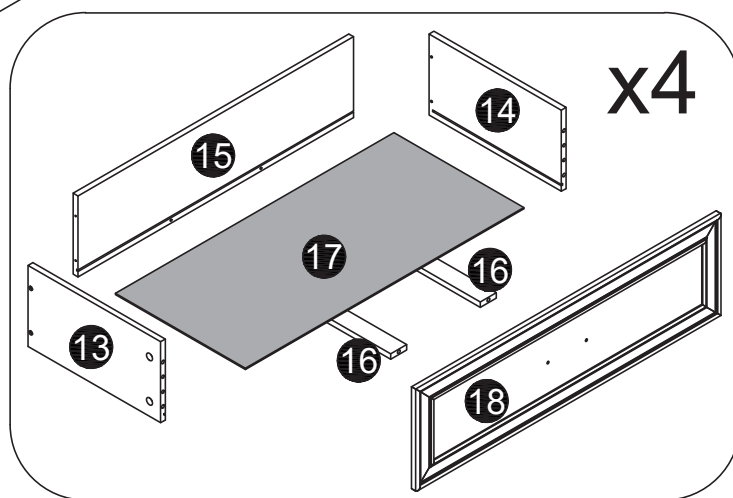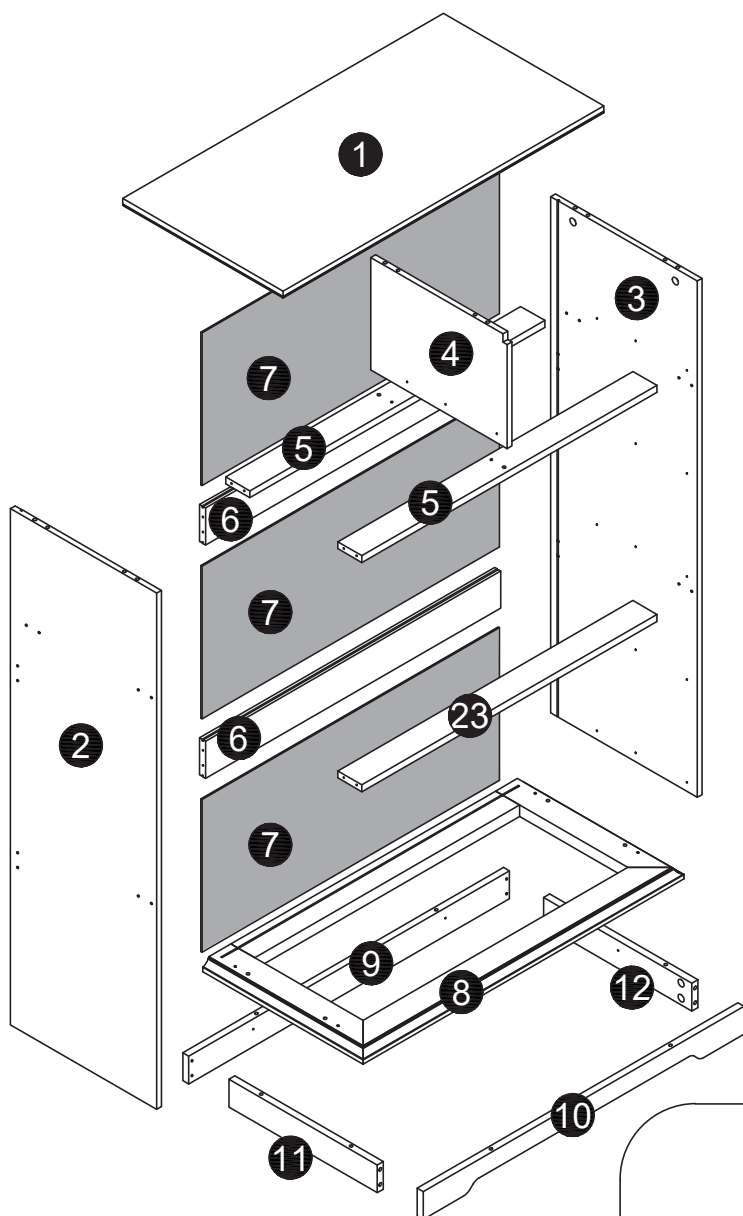

Left drawer

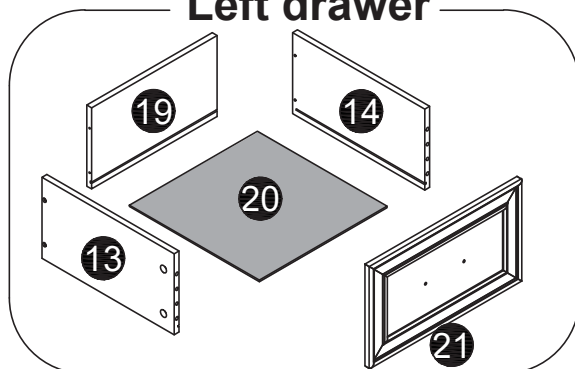

Right drawer

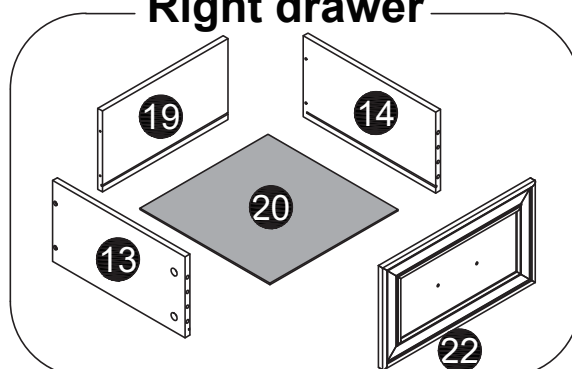


A x42 Ø6x35mm +3(spare)	B x42 Ø15x10mm +3(spare)	C x44 Ø6x30mm +4(spare)	D x34 Ø4x35mm +3(spare)	E x84 Ø3.5x12mm +8(spare)	F x6
G x12 Ø3x16mm +1(spare)	H x6	I x20 Ø15mm +3(spare)	J x2 Ø4x14mm	K x2	L x2 Ø6x30mm
M x30 Ø5x50mm +3(spare)	CL x6 L330mm	CR x6 L330mm	DL x6 L330mm	DR x6 L330mm	

A x8	B x8	C x8	D x8
-------------	-------------	-------------	-------------

01

x2

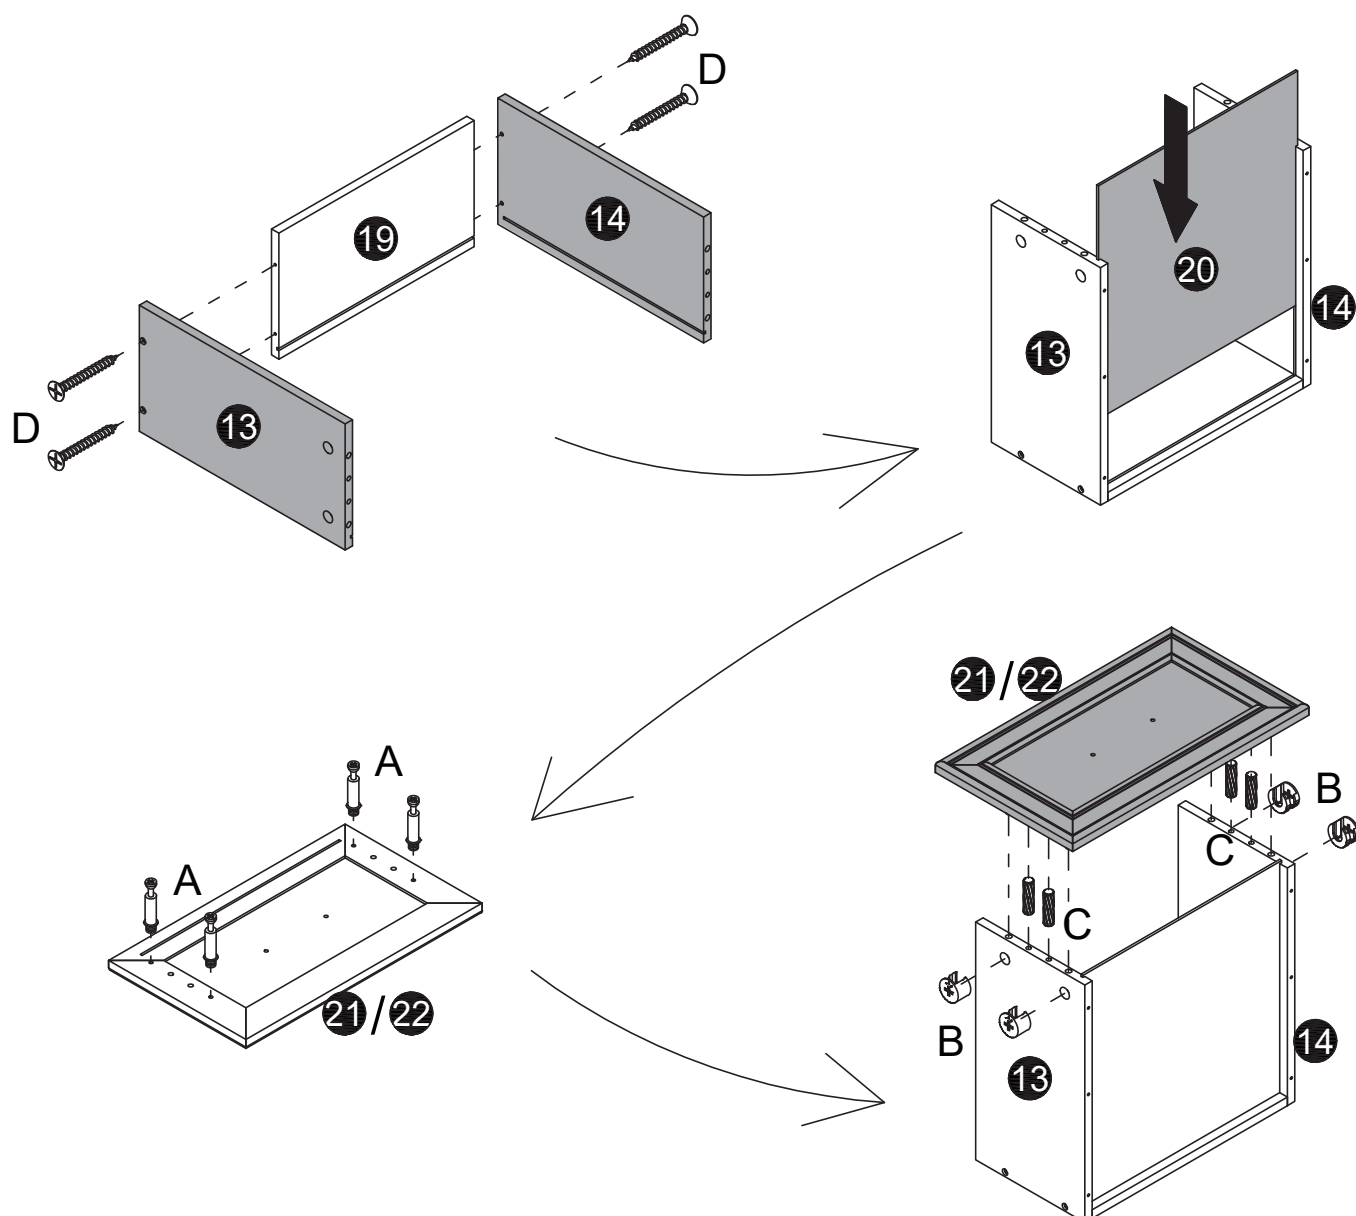

A x24


B x24



C x16



D x24



02



x4


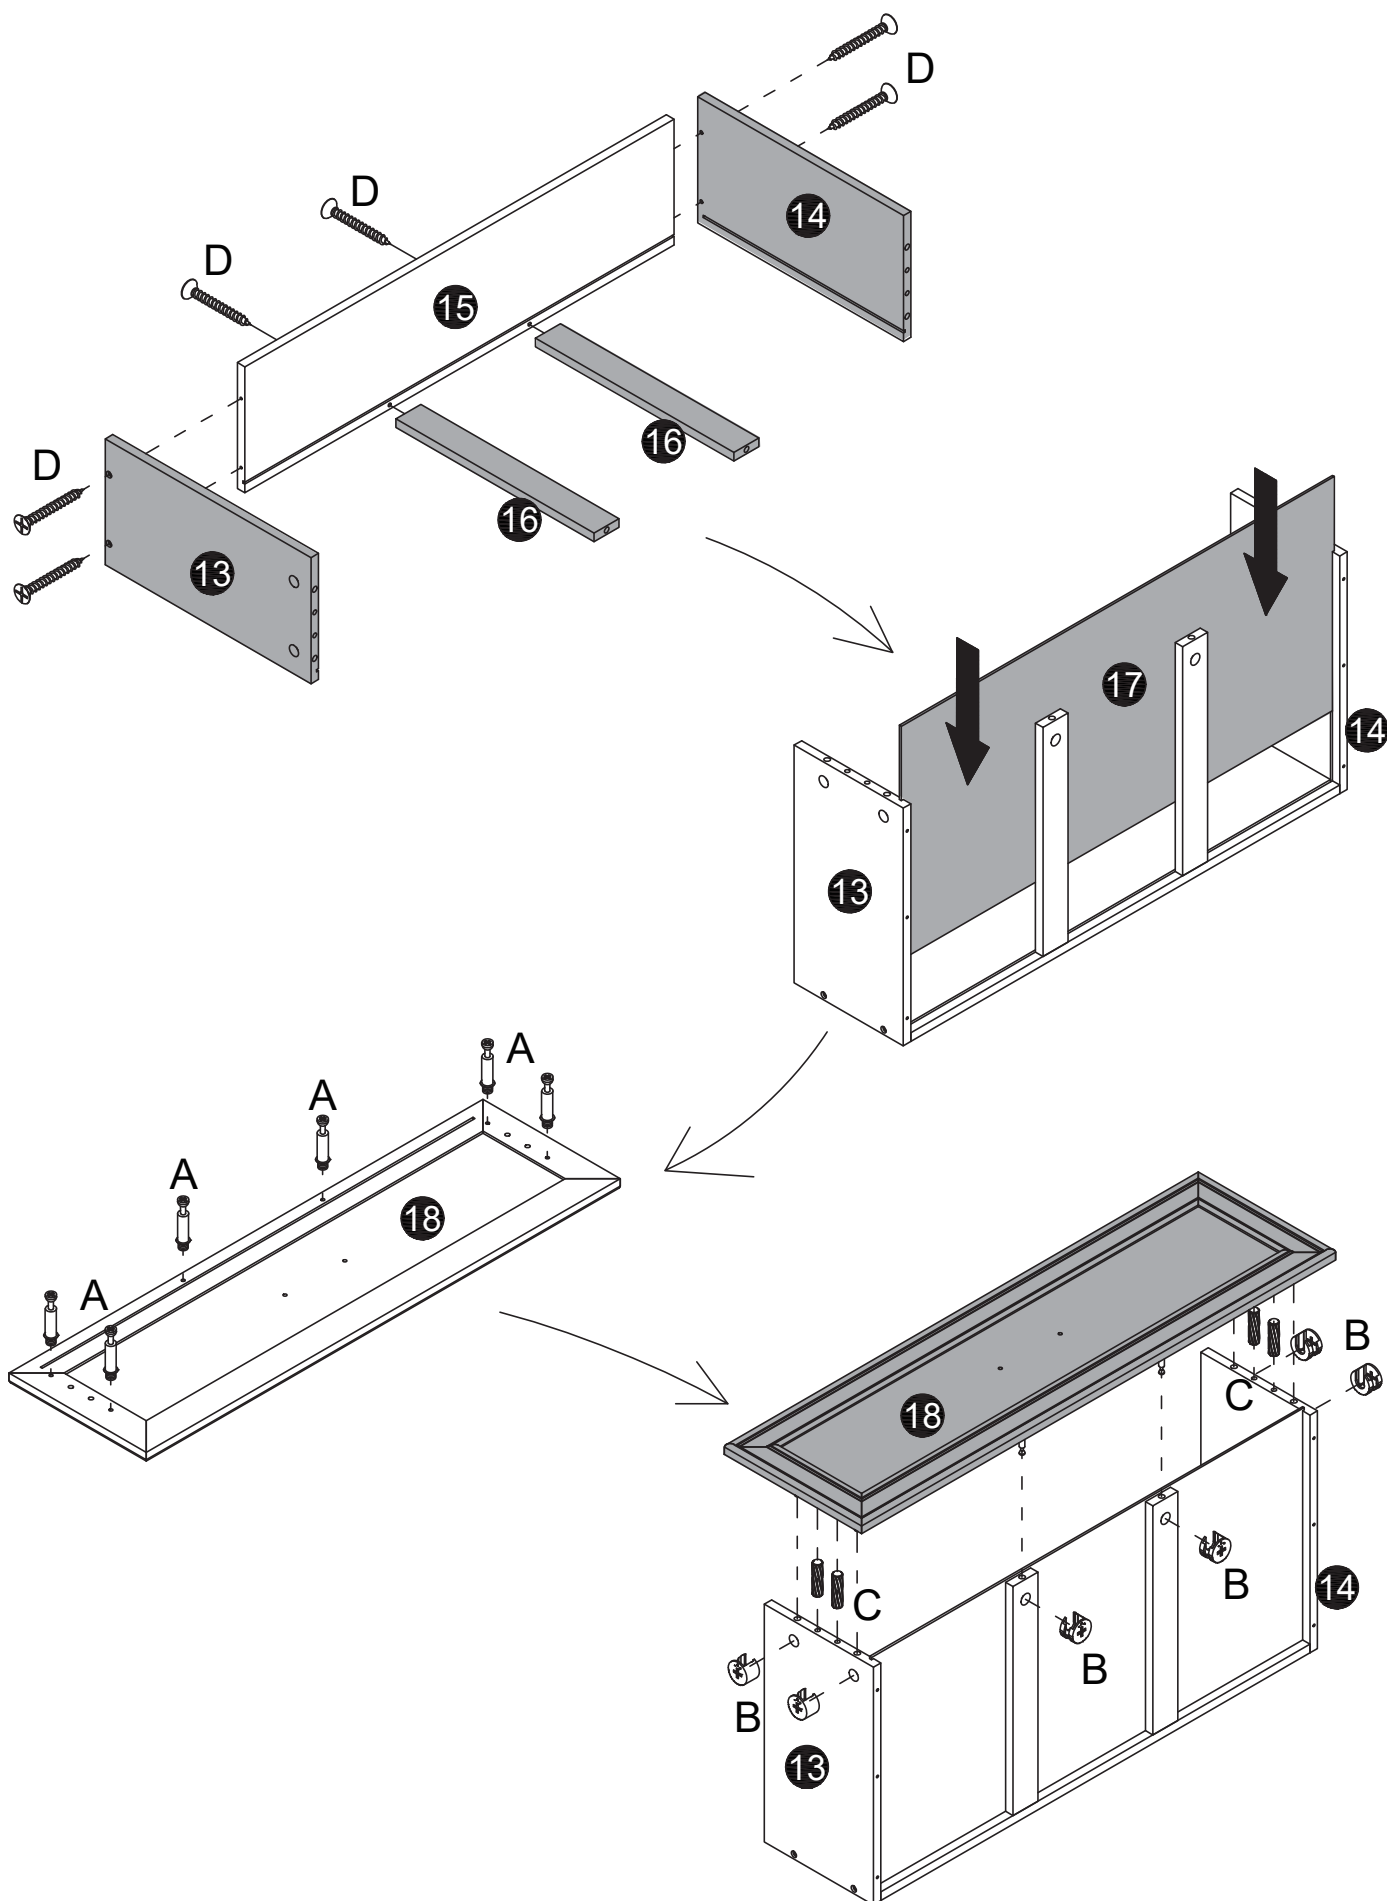


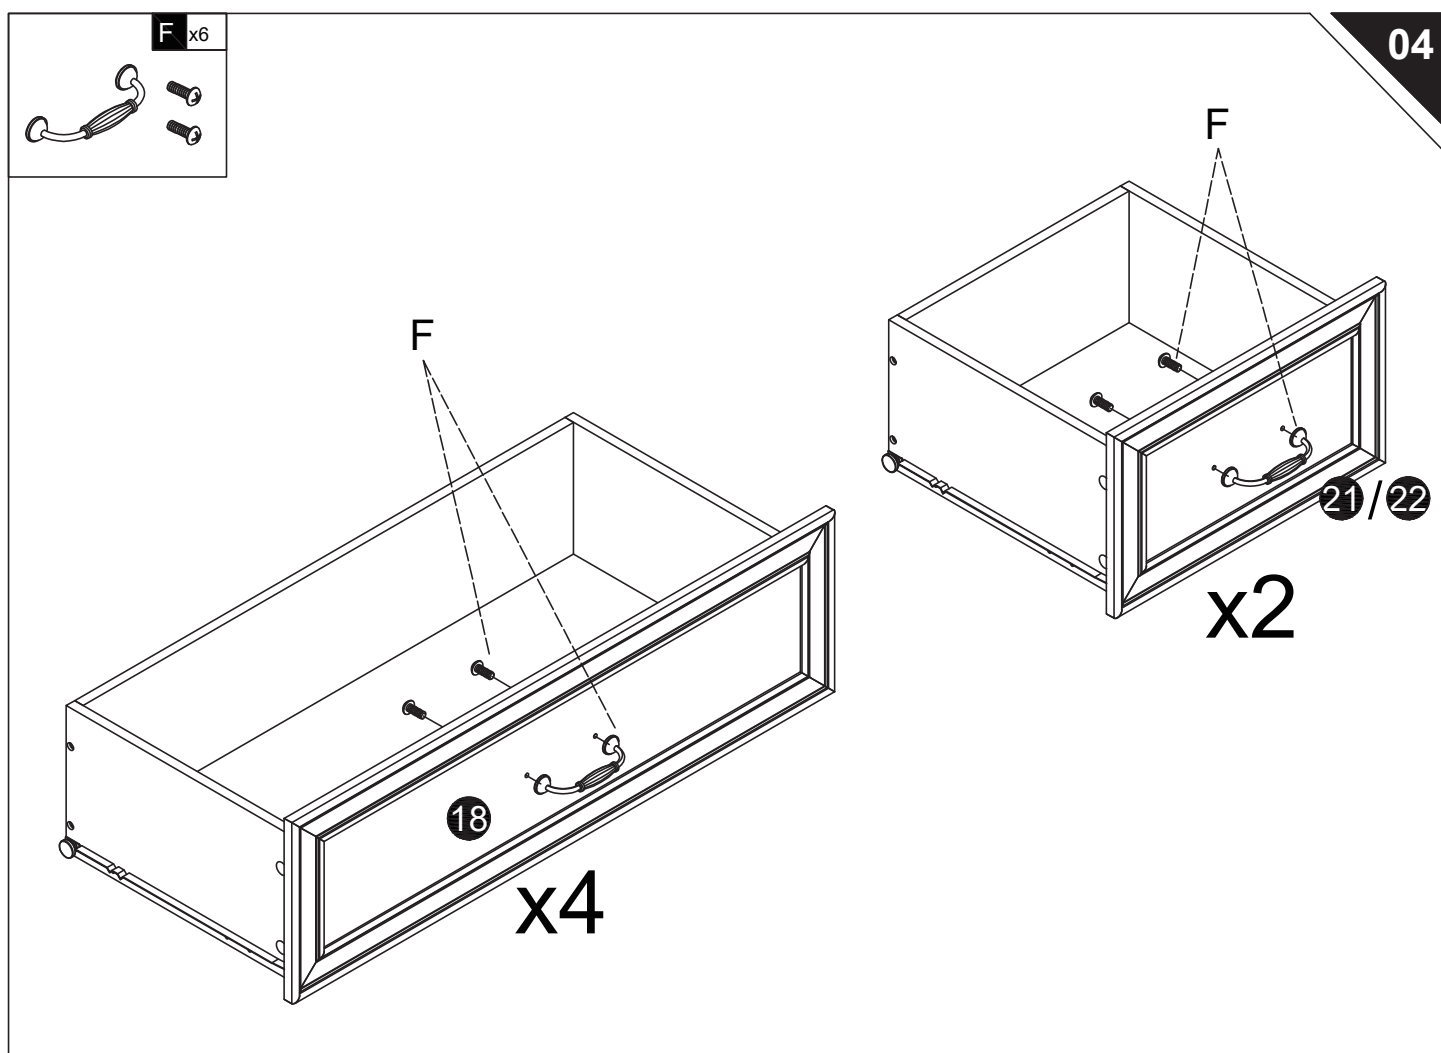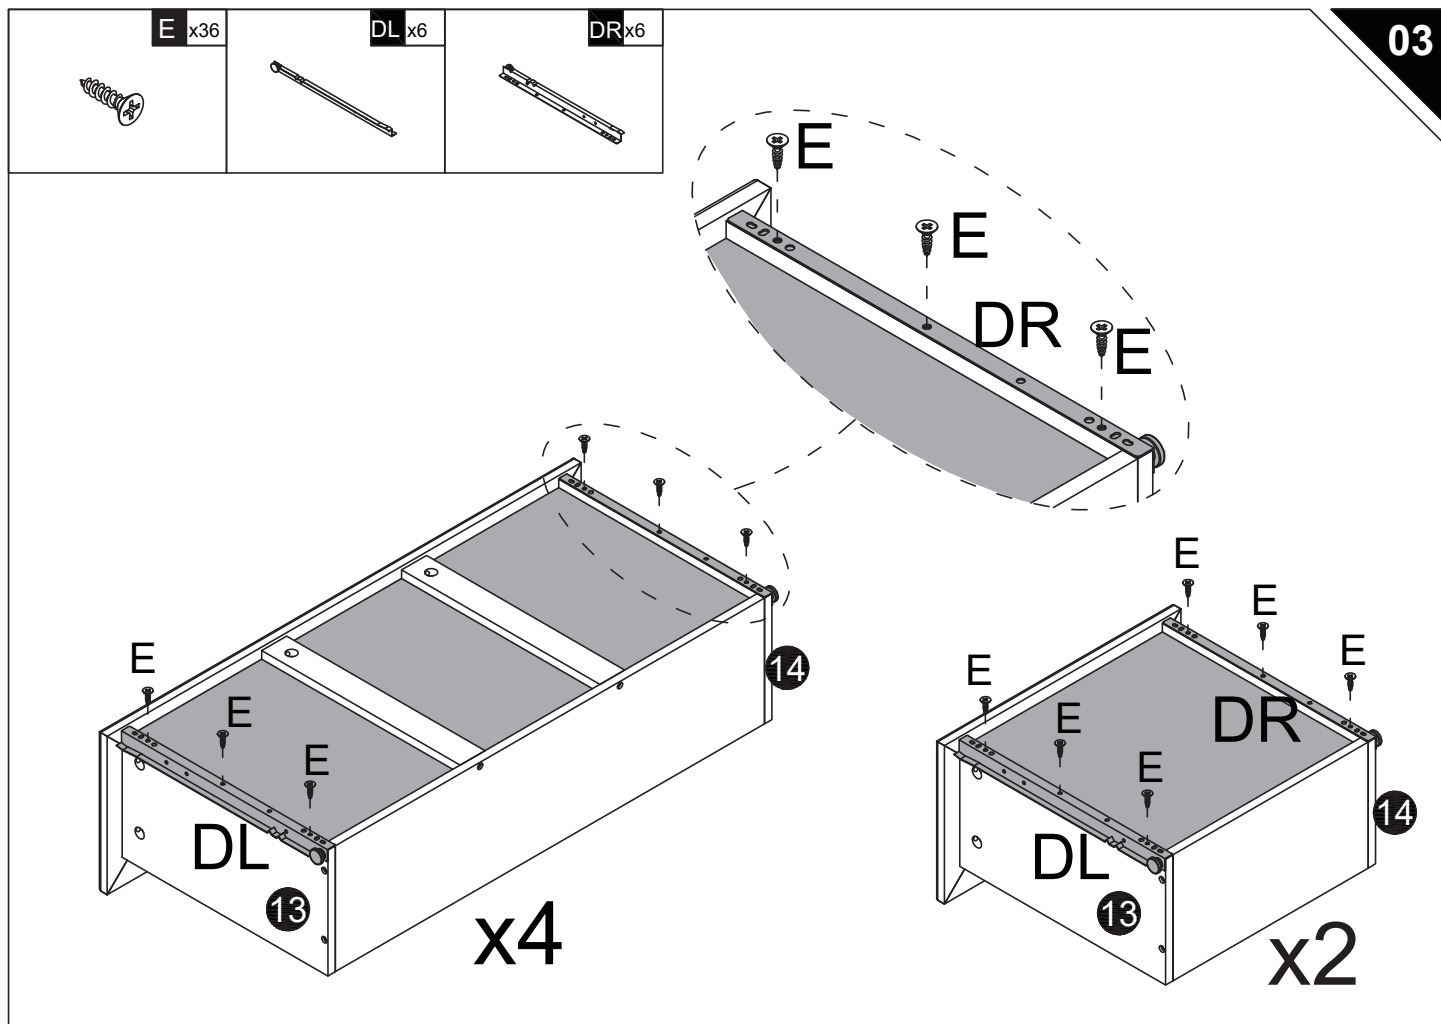

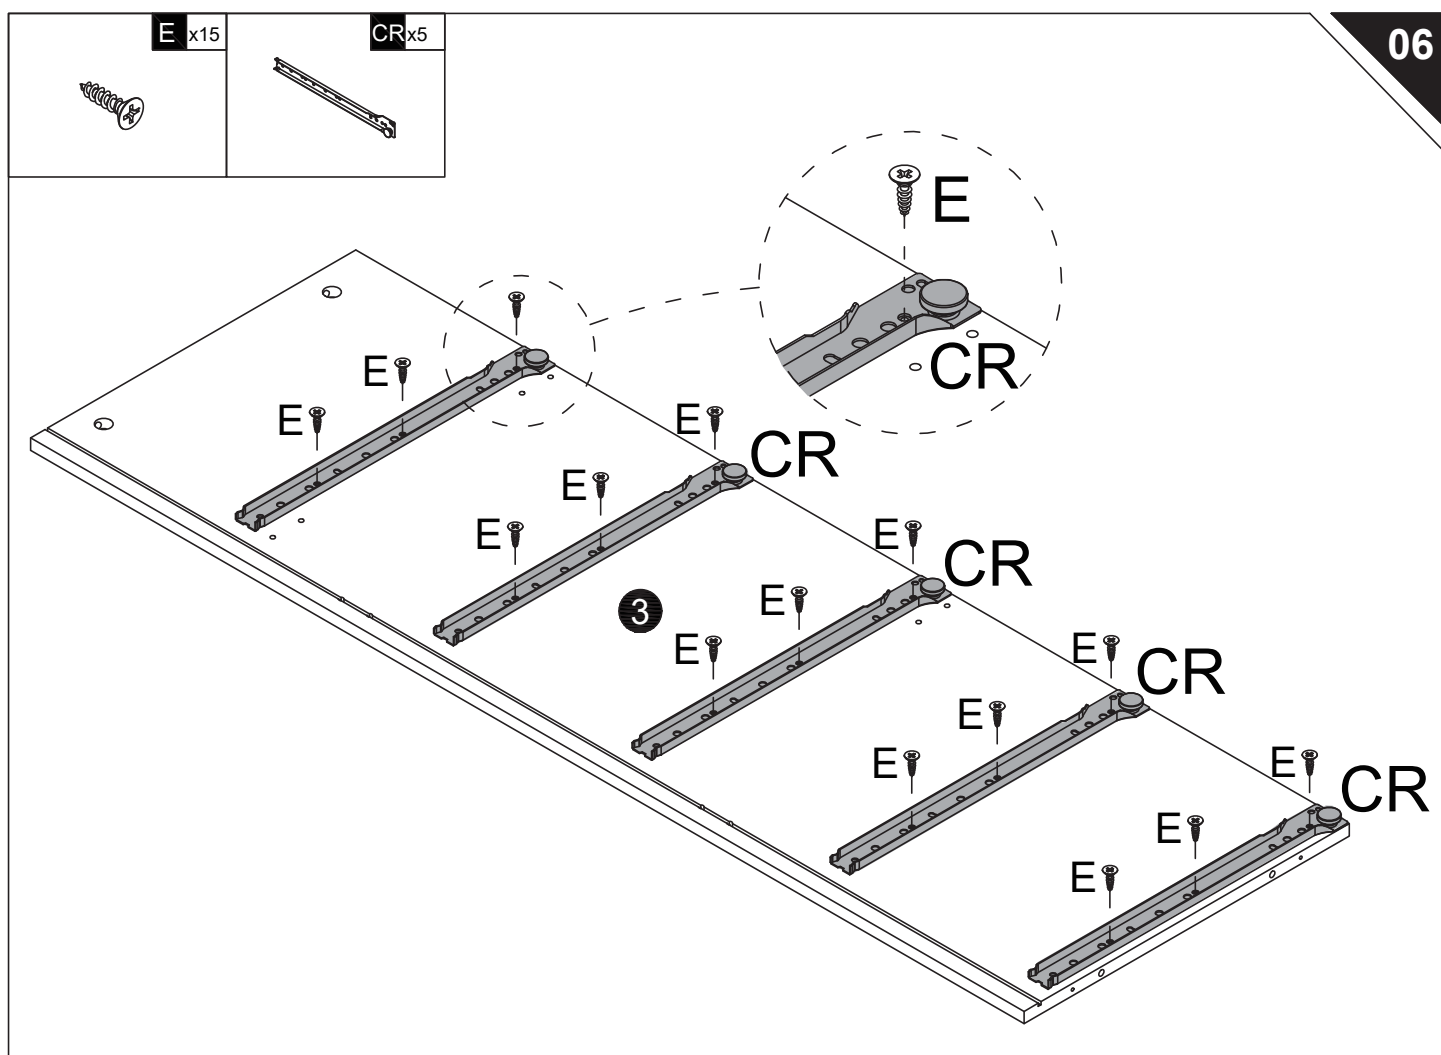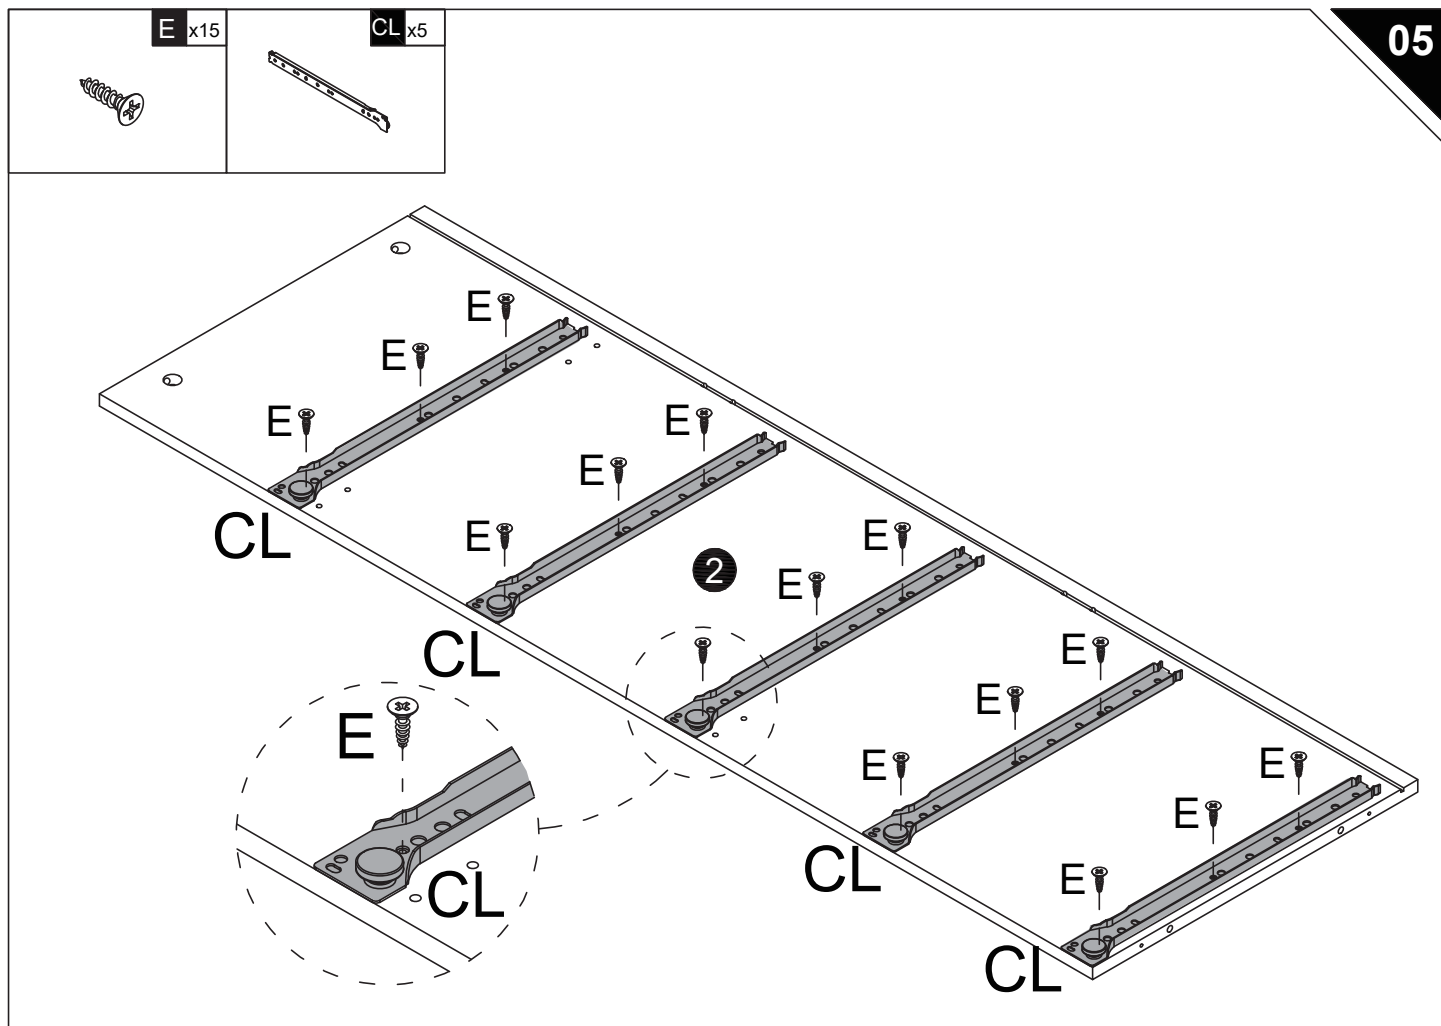

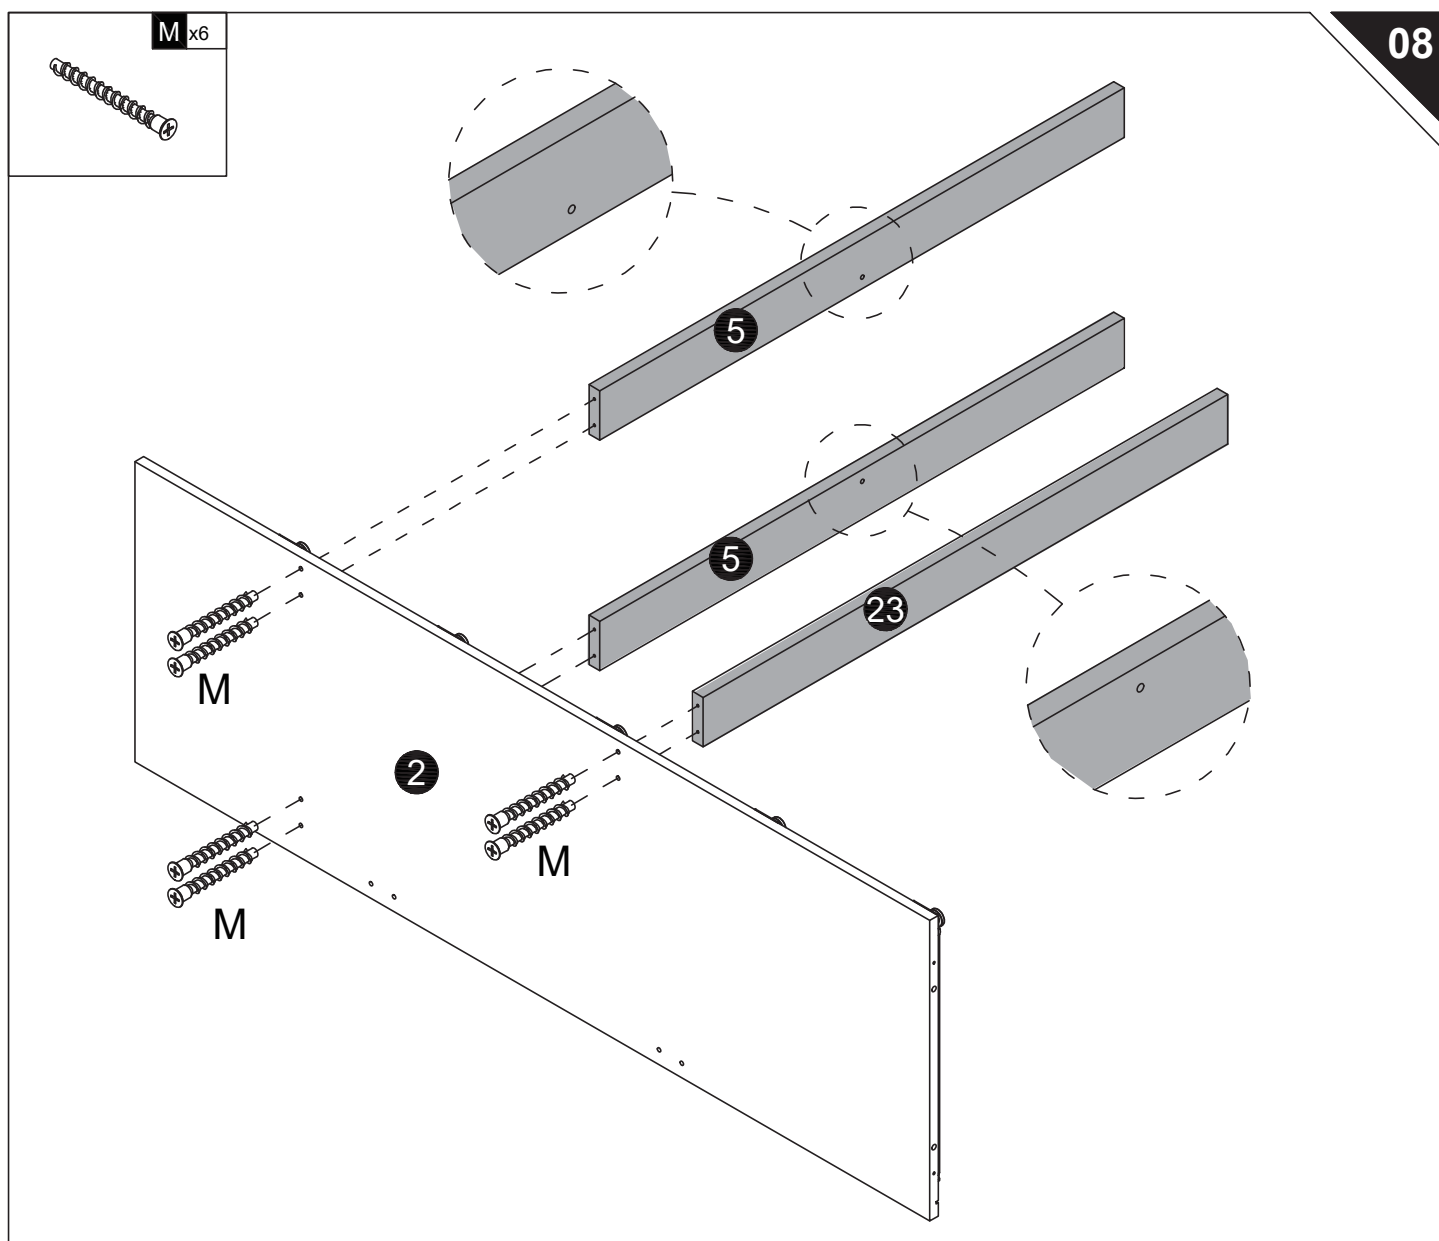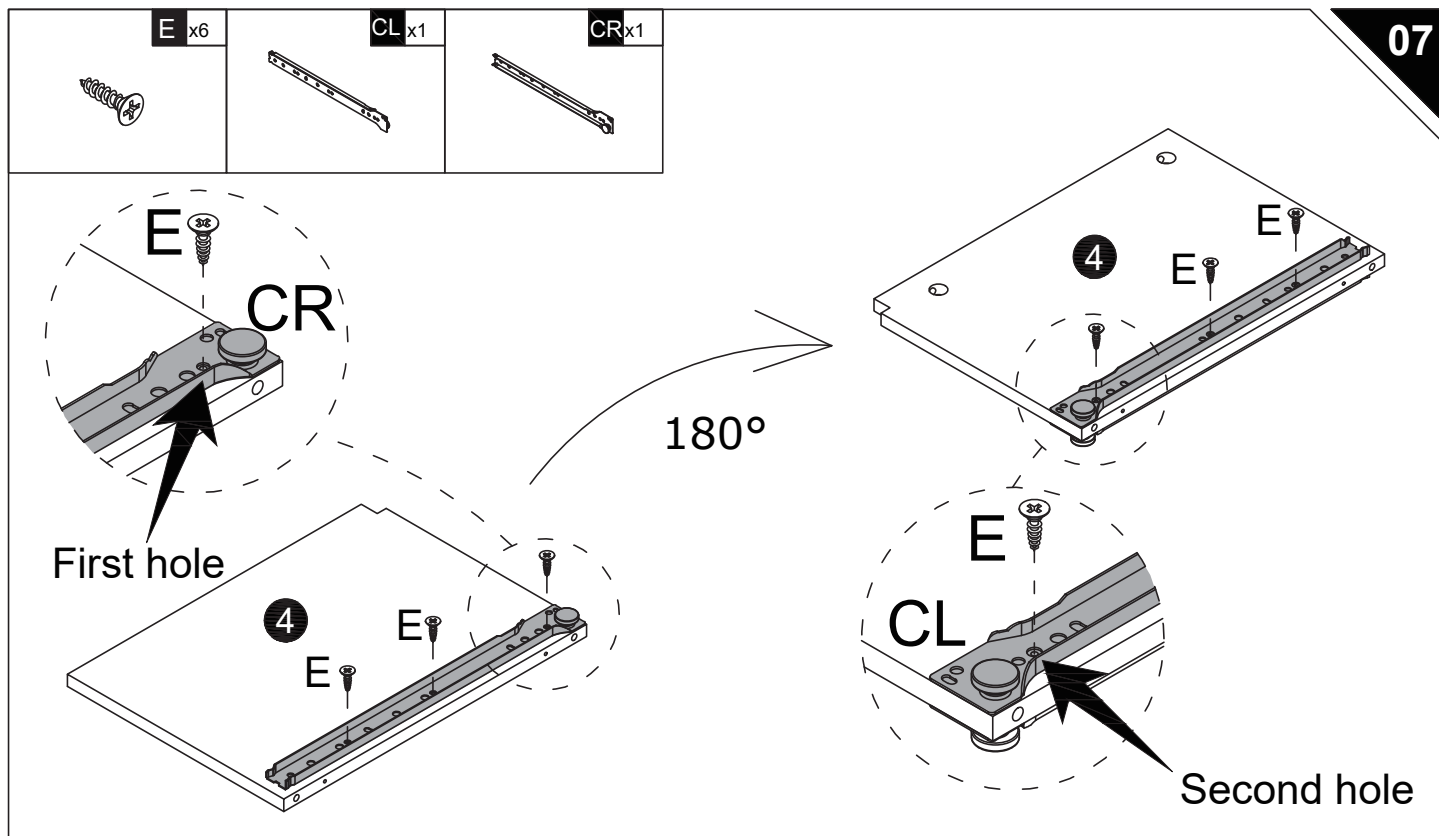

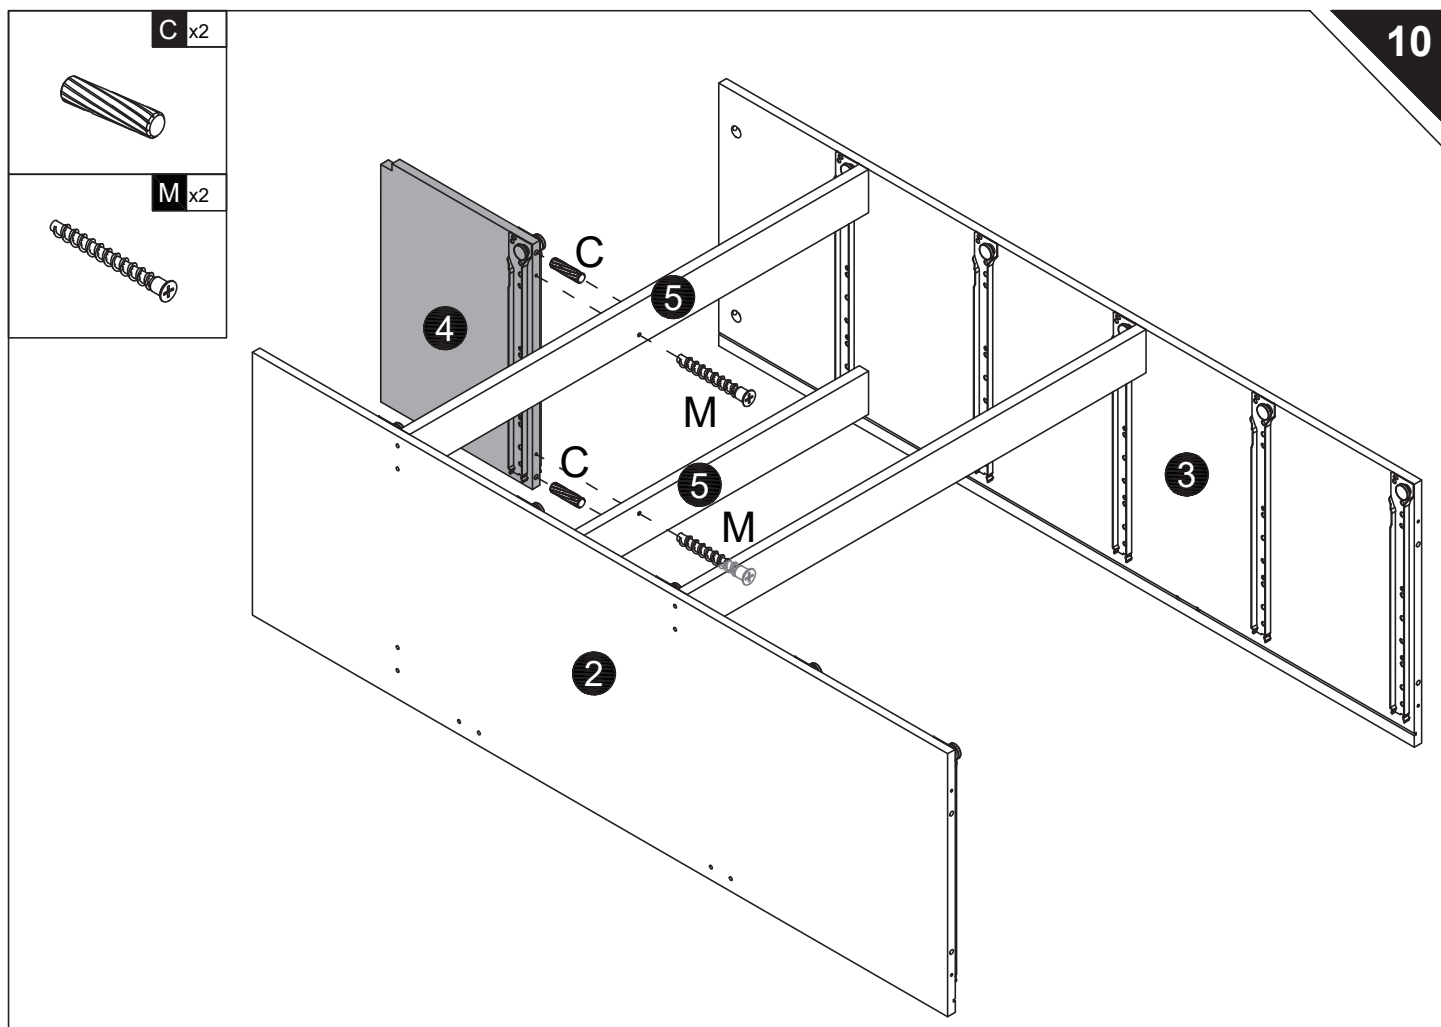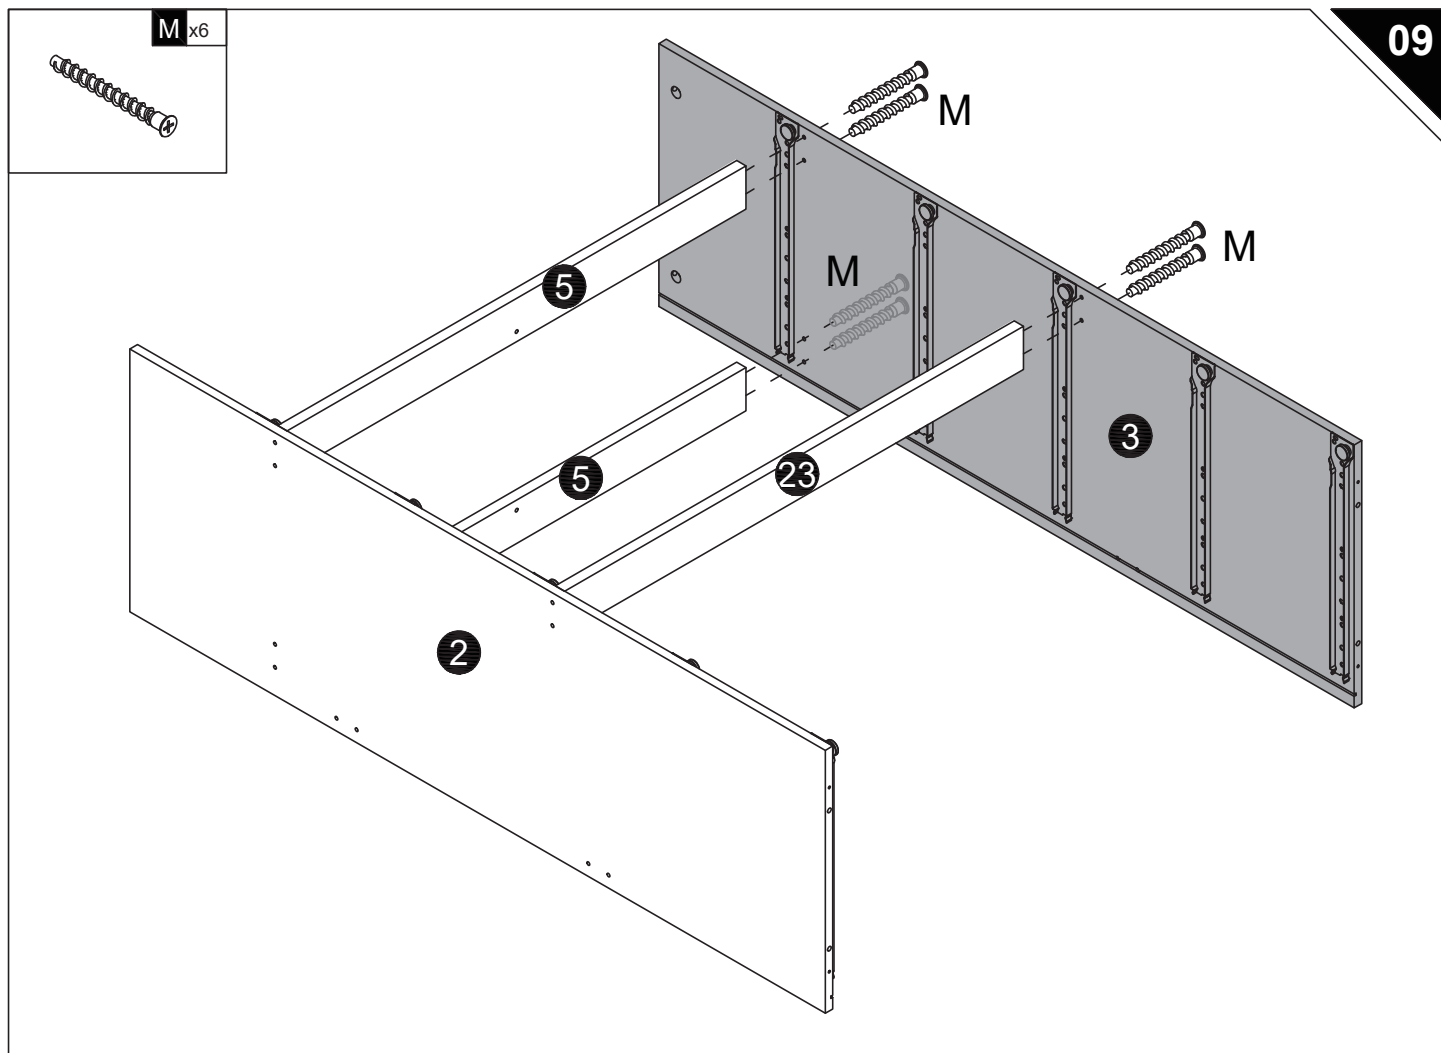


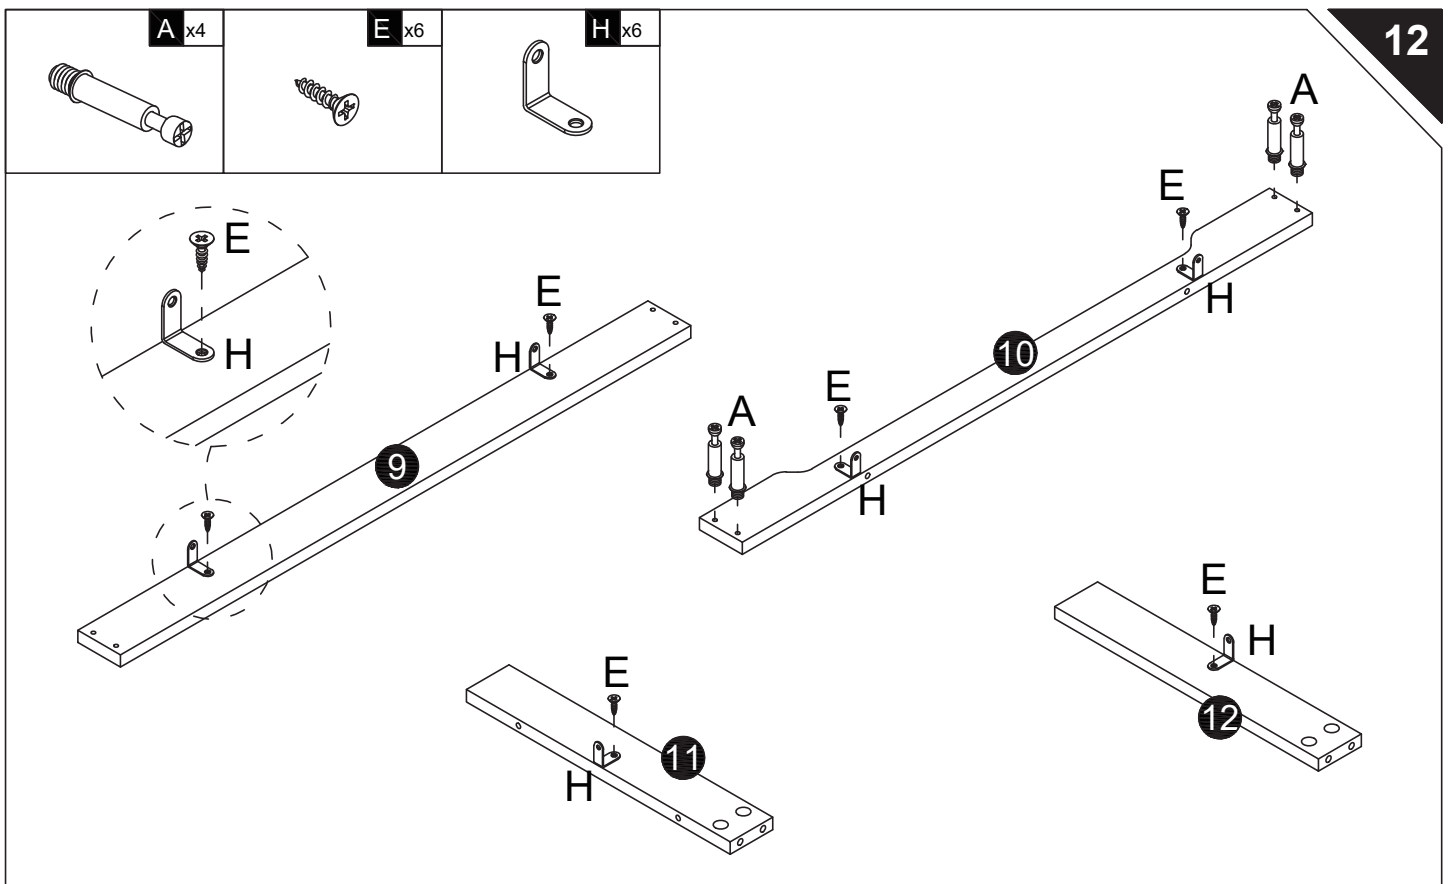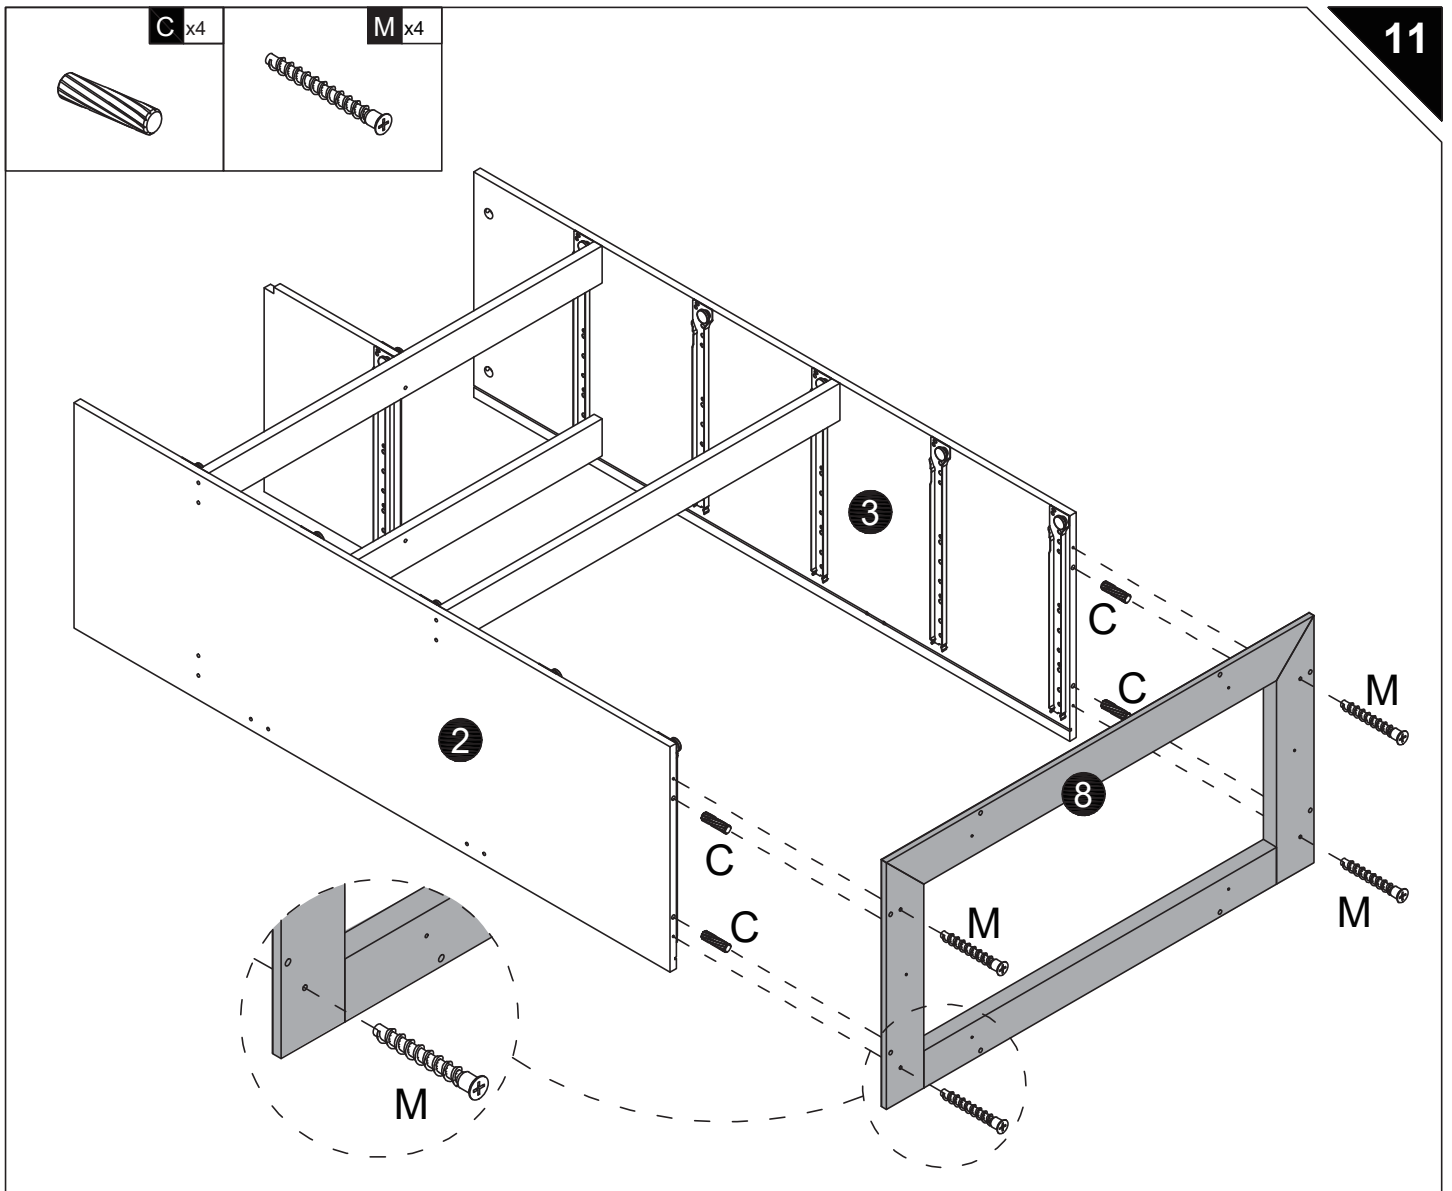


B x4



M x4




13

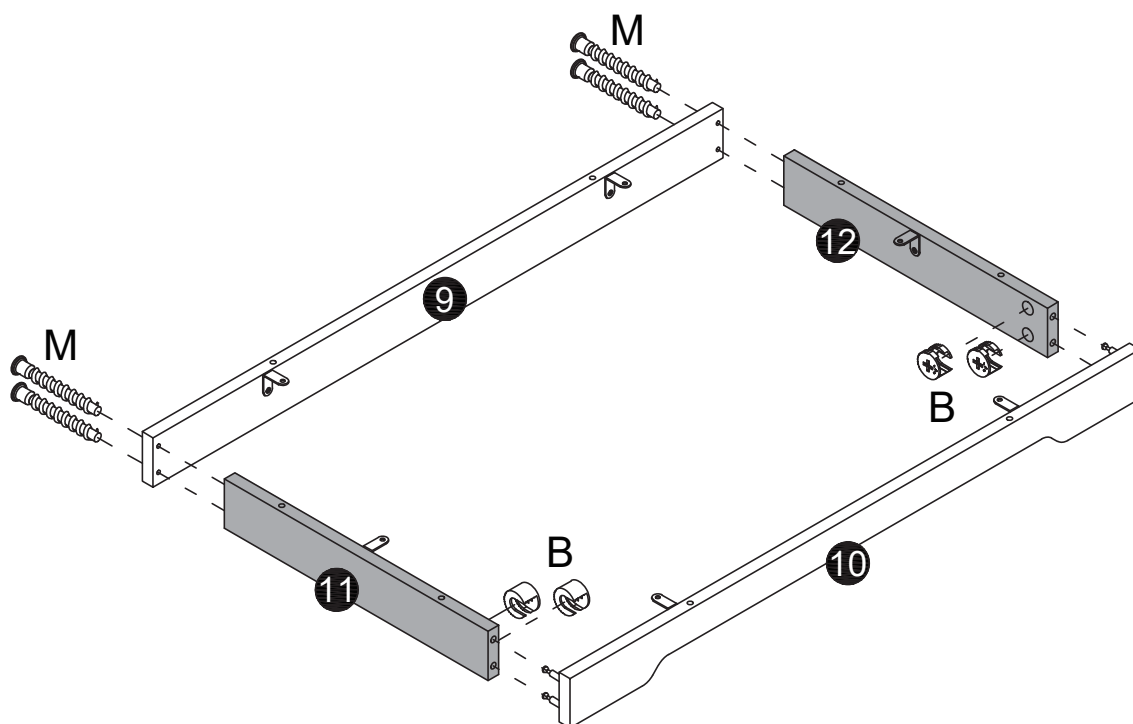


C x8



14

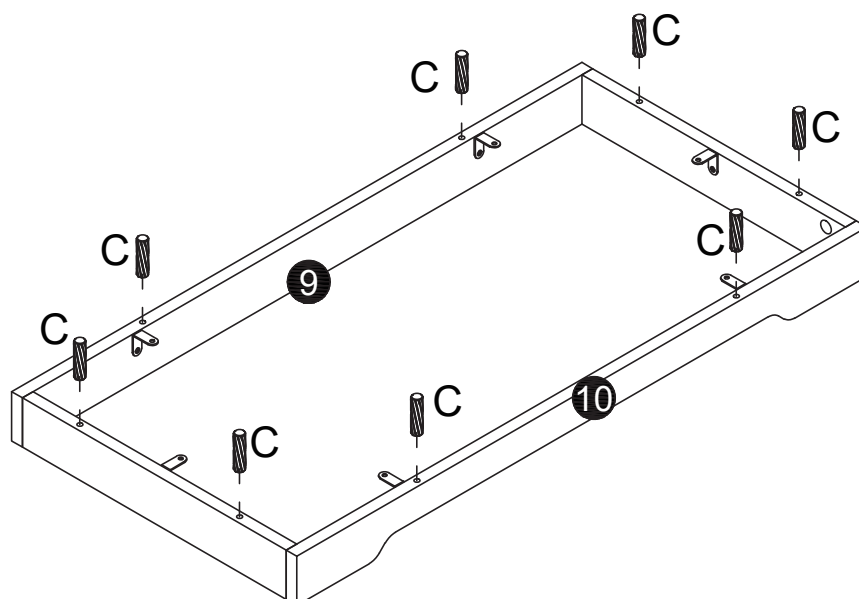


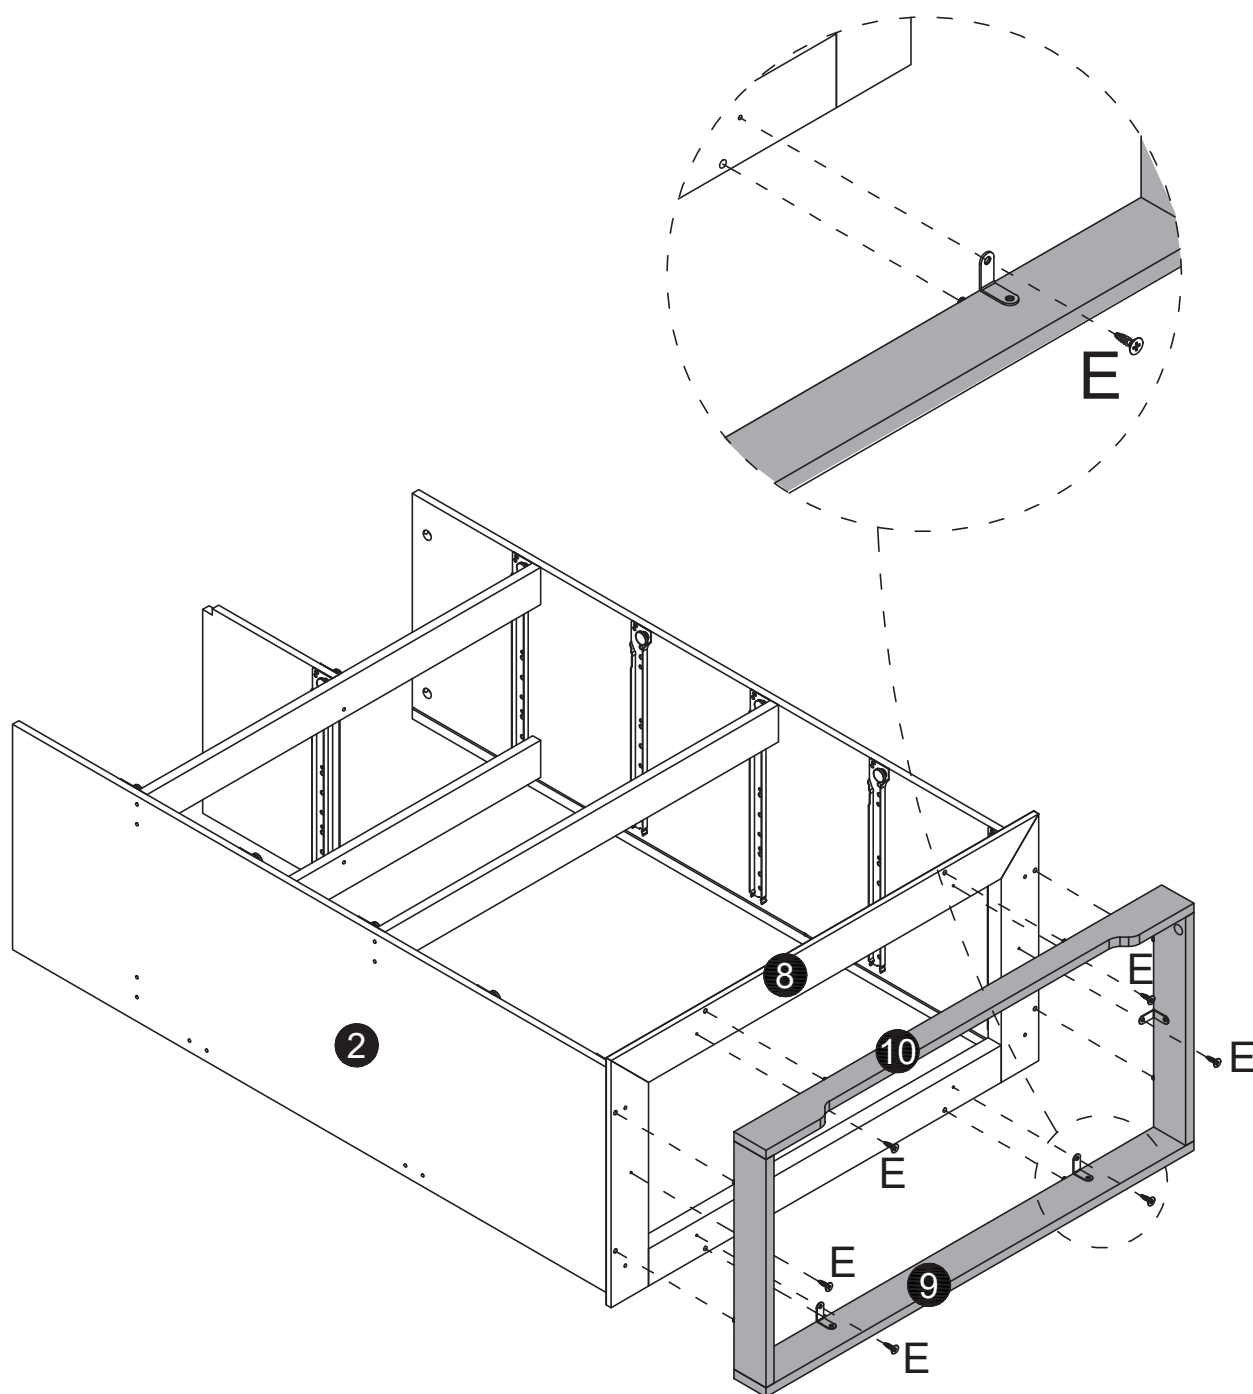


C x6



16

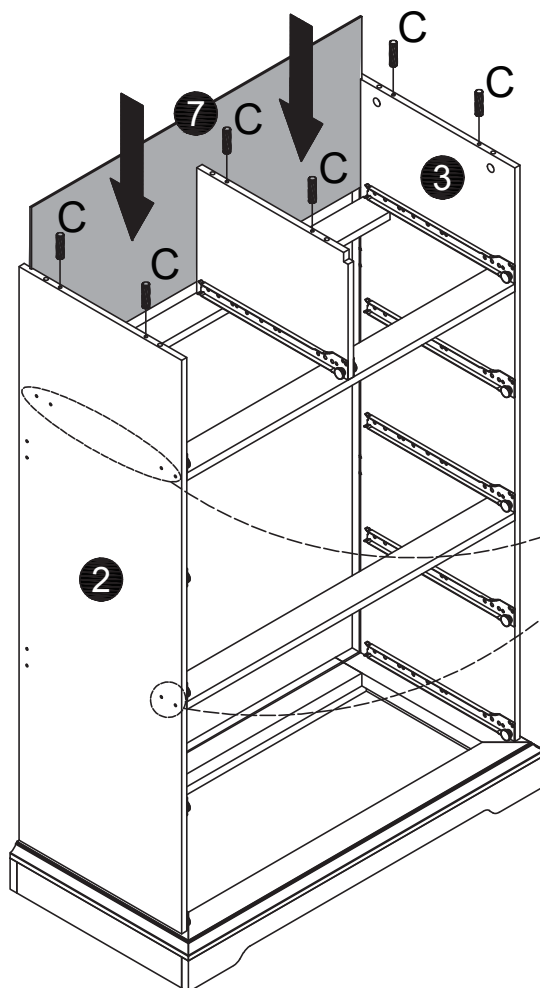


Loosen screw 'M' on plate 2 to 8%.

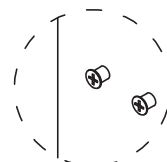


M x4




17

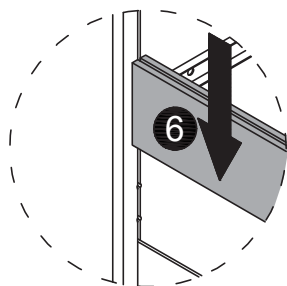

M

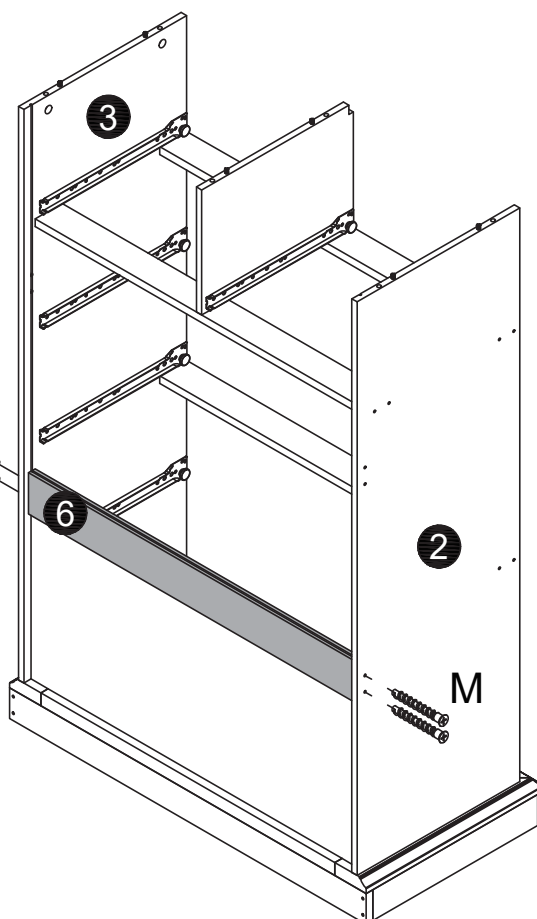

M

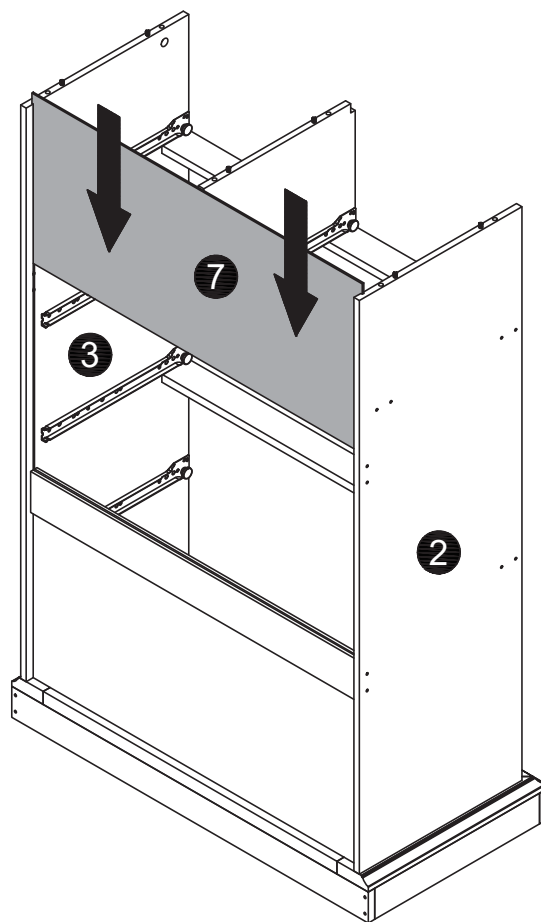

M x4





M





Tighten screw
'M' on plate 2
to 100%.


M



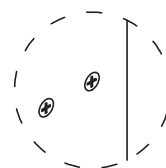


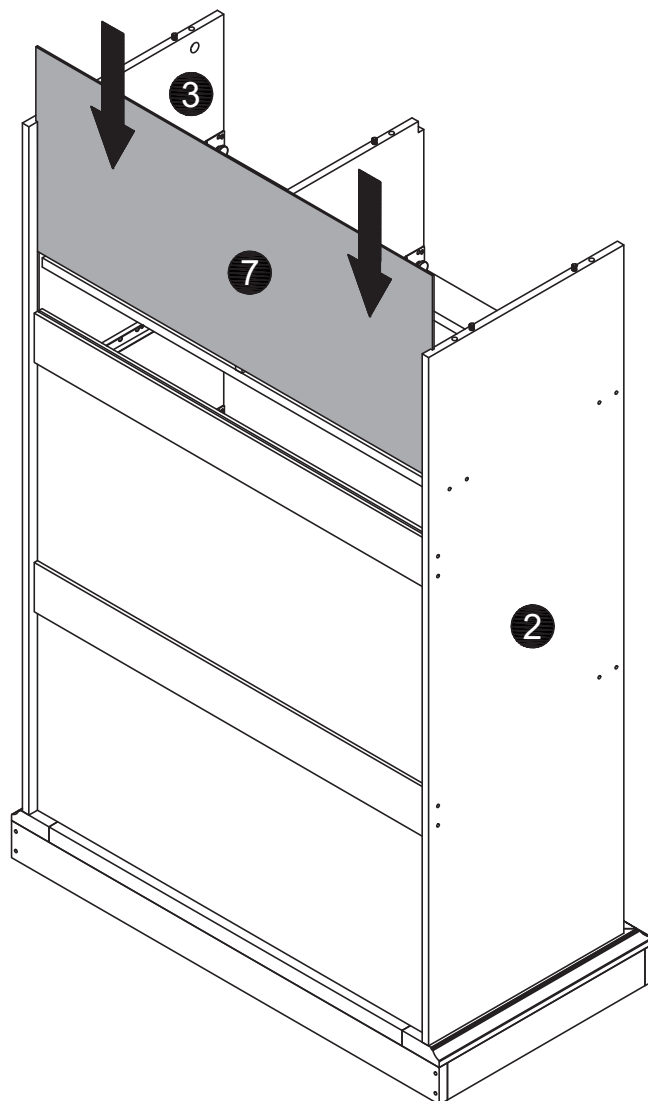

A x6


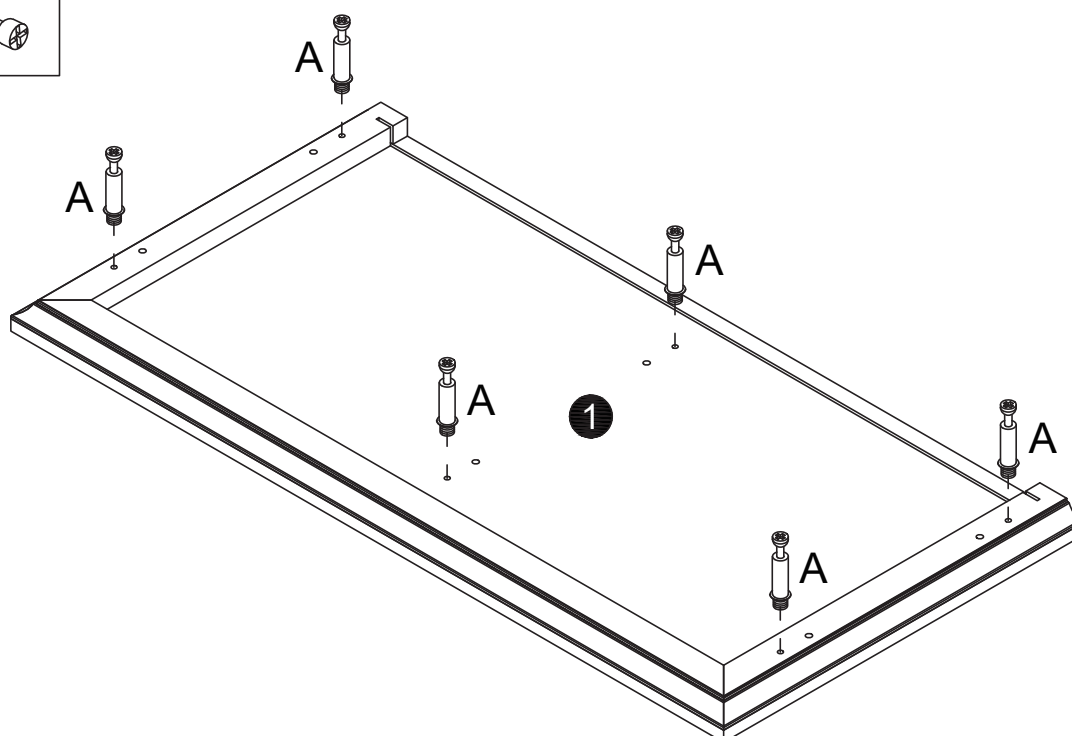



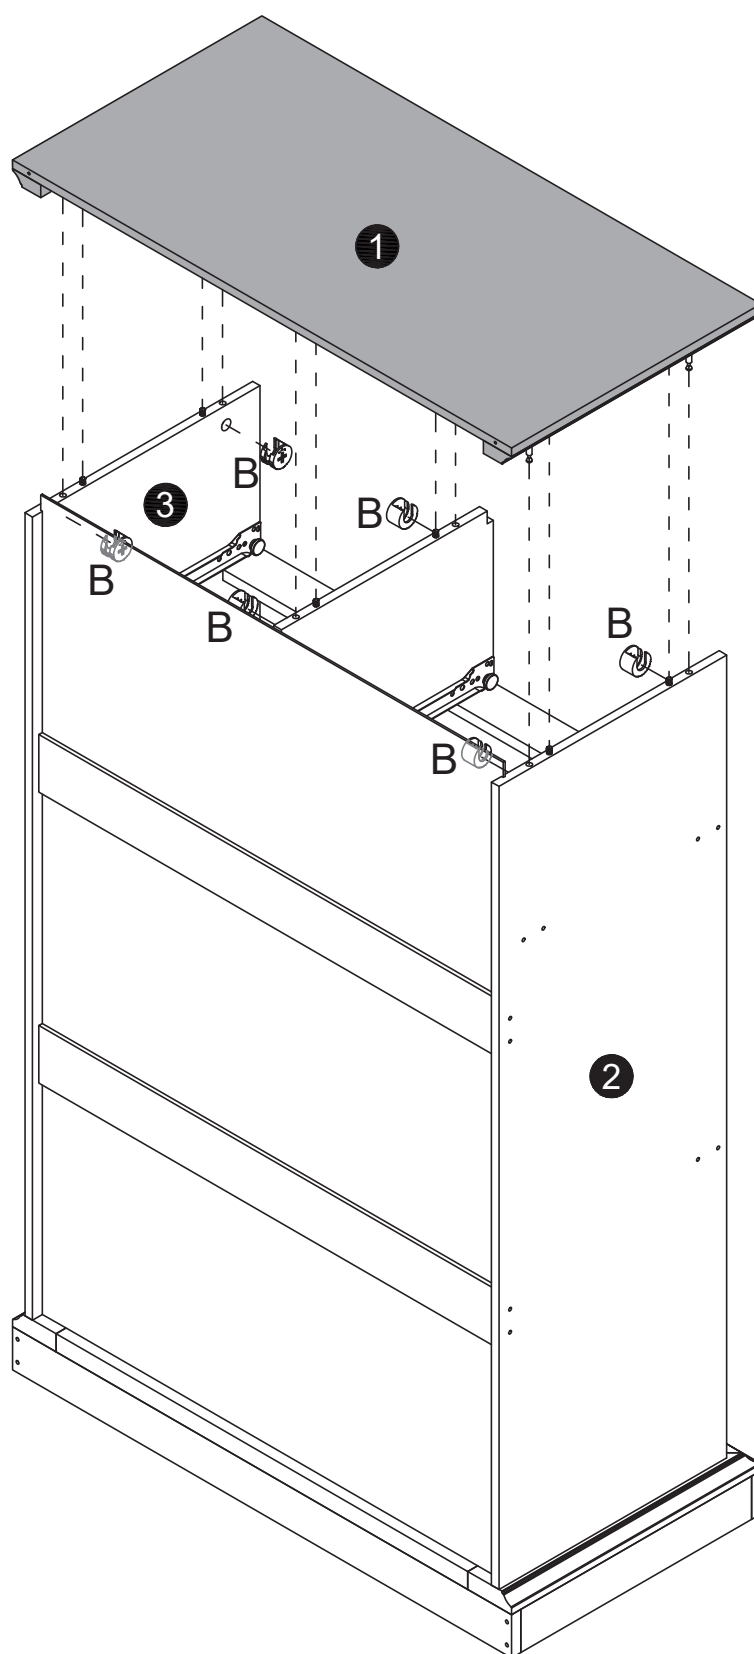

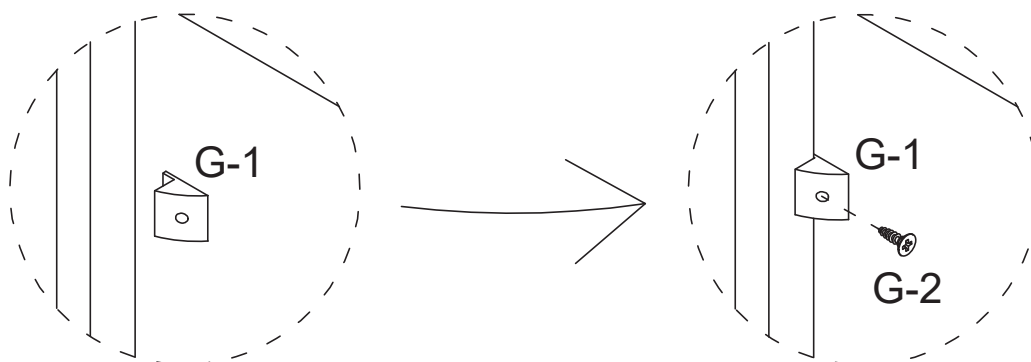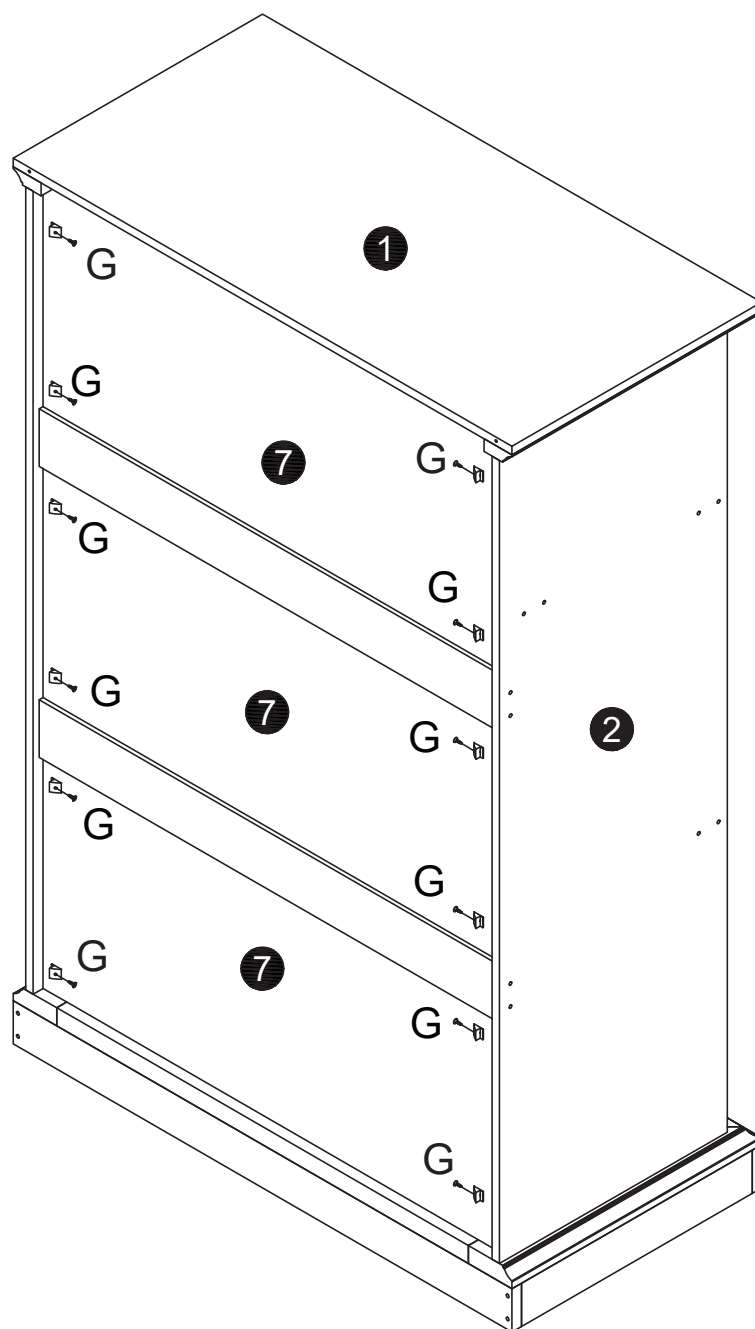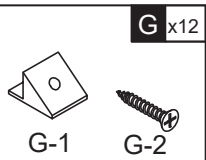




Attention:

There are three types of drawers, namely drawer 21 on the left, drawer 22 on the right and drawer 18 in the middle. The following illustration shows Drawer 21 on the left and drawer 18 in the middle.

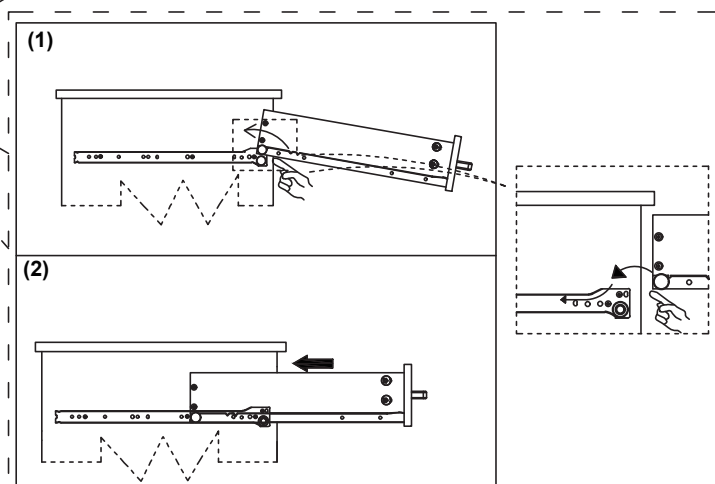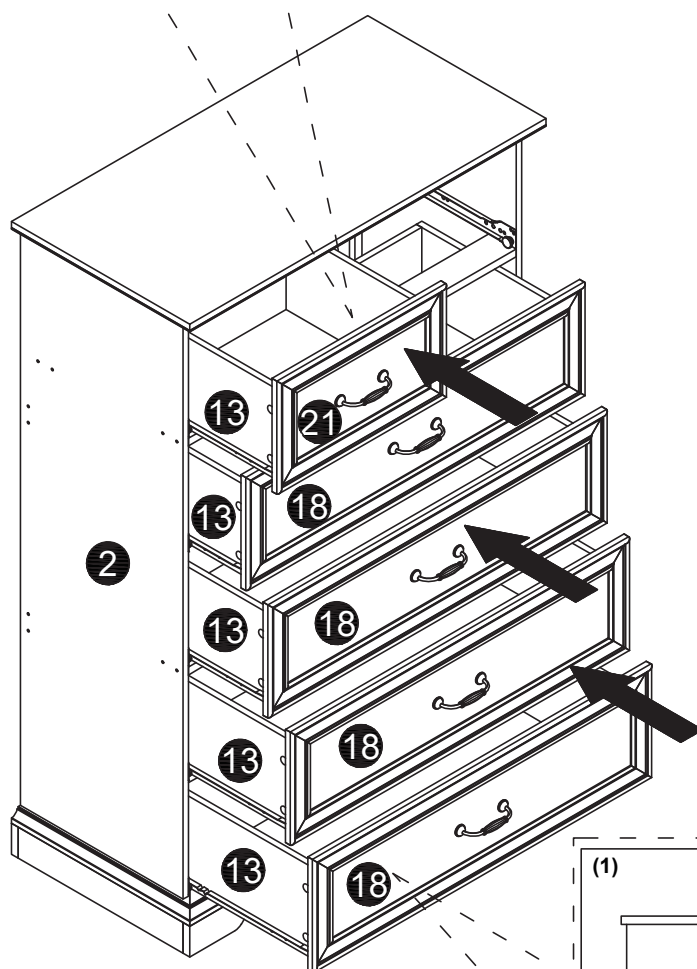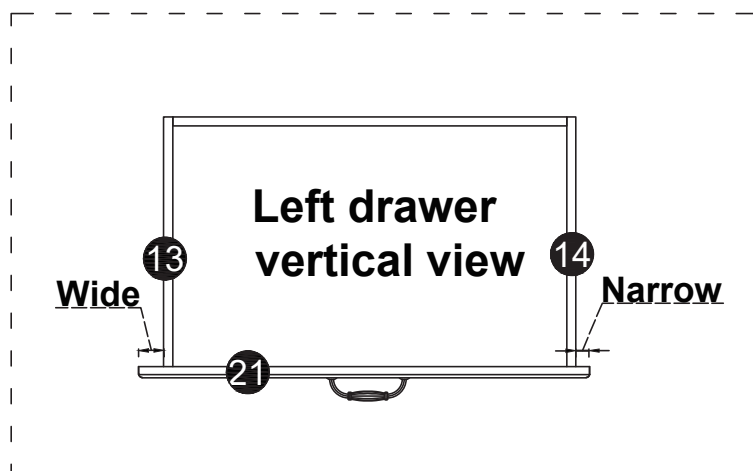


Attention:

There are three types of drawers, namely drawer 21 on the left, drawer 22 on the right and drawer 18 in the middle. The following illustration shows Drawer 22 on the right.

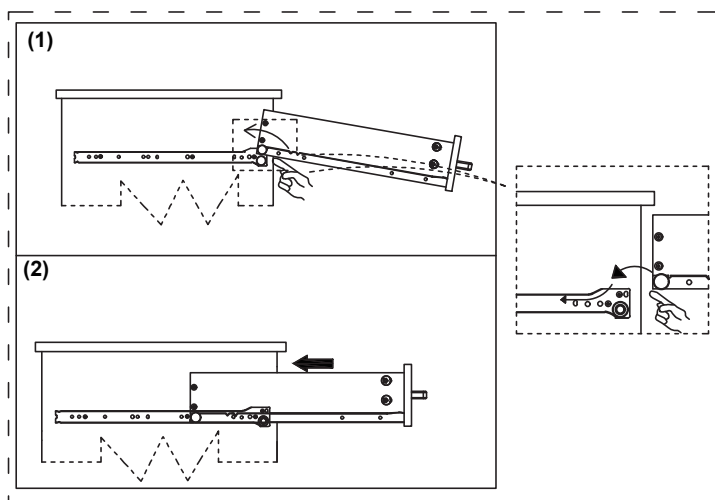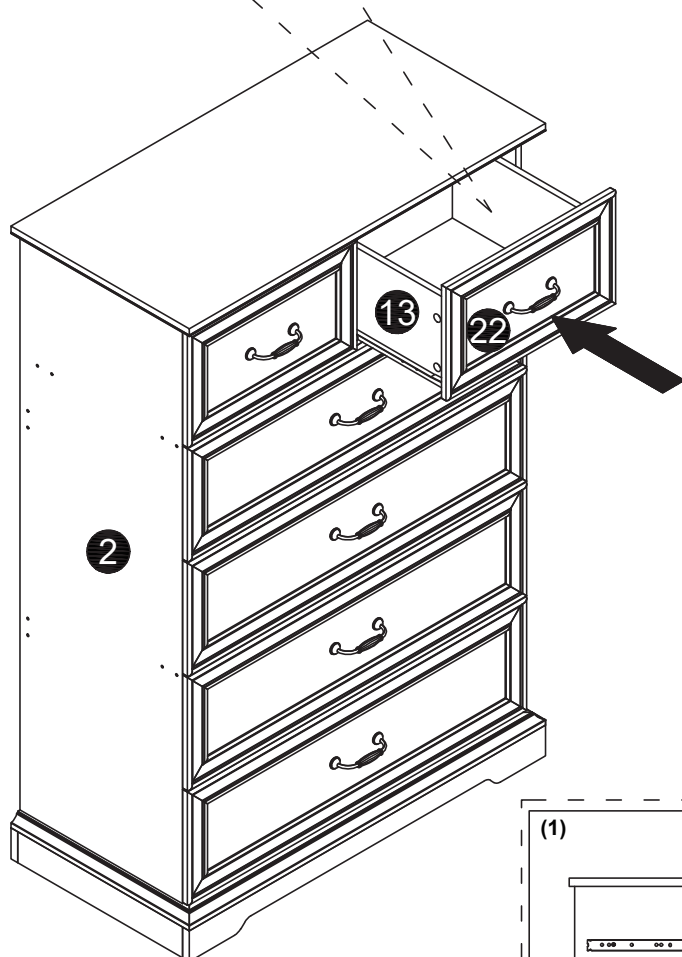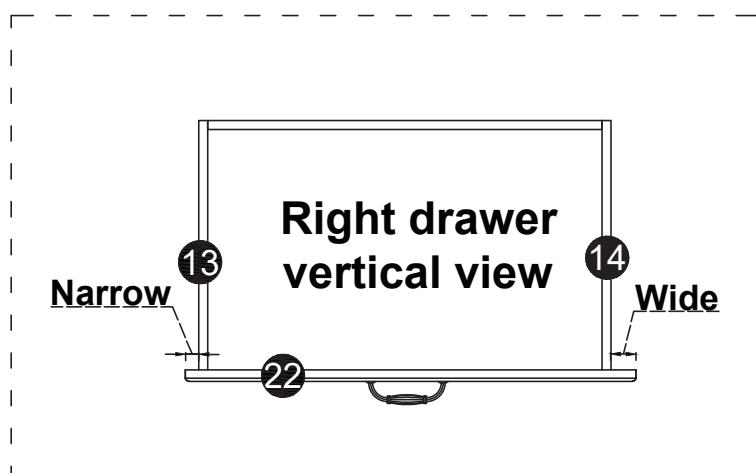

D x2




J x2



K x2




L x2



I x20




K

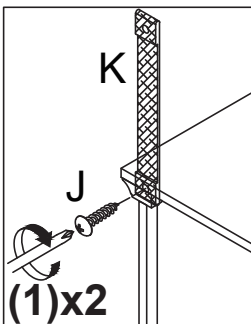

First fix the anti-rewind screw in the reserved hole of the product.


WALL

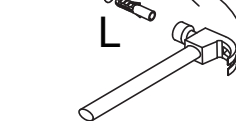

Then, put the expansion bolt into the hole


(4)x2

WALL

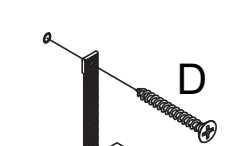

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

(5)x2

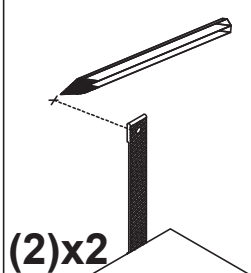

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

(2)x2

WALL

+
drilling hole
Ø6x30mm



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

