


Installation Instruction

Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

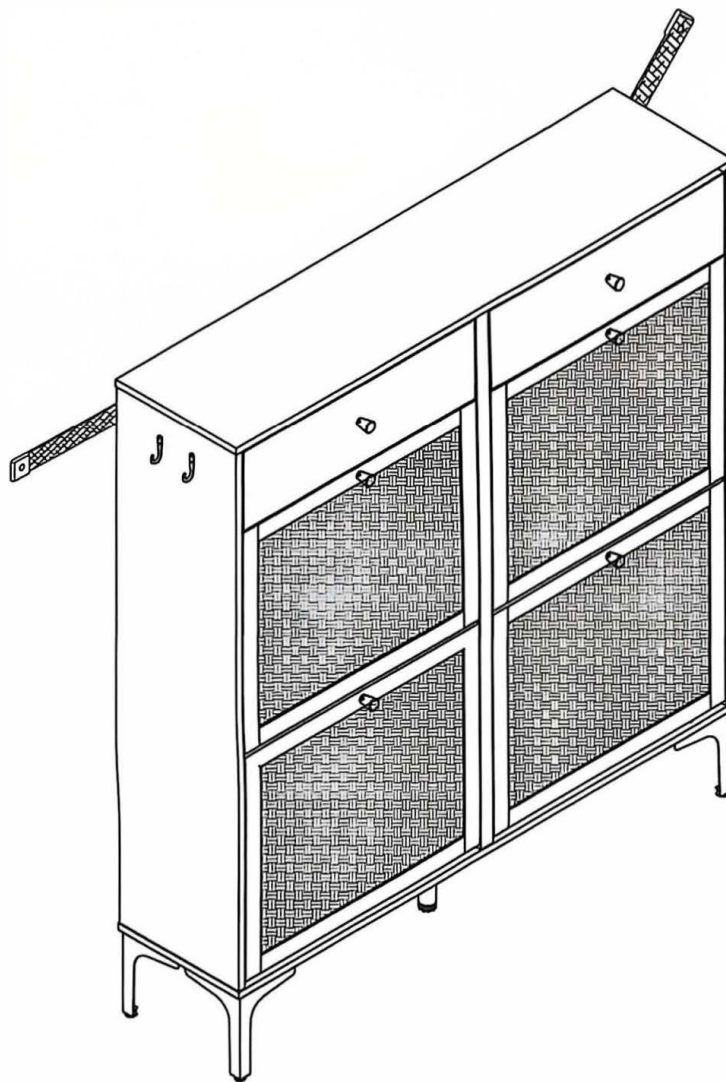


Send email with your question, pic and order NO.
Respond within 24 hours



Please carefully review the following precautions before proceeding with the installation:

1. The installation process for this product is complex, and it is highly recommended to have at least two individuals working together during the installation.
2. Prior to each step, please refer to the screw hole positions to ensure that the board is aligned correctly according to the images provided in the instruction manual. This will help prevent any errors.
3. In case power tools are used for installation, it is important to tighten the screws intermittently rather than applying excessive force continuously. This precaution will help avoid potential cracks around the screw holes.
4. If you encounter any difficulties or issues during the assembly process, please don't hesitate to reach out to us. We assure you that we will address your concerns and provide a solution within 24 hours.


Thank you for your attention to these important instructions.

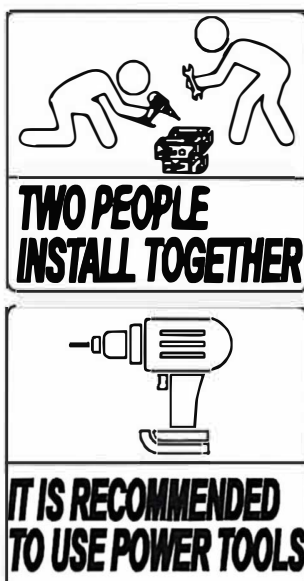














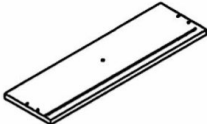


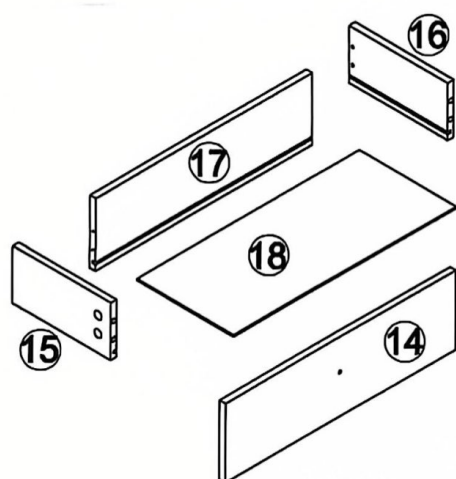
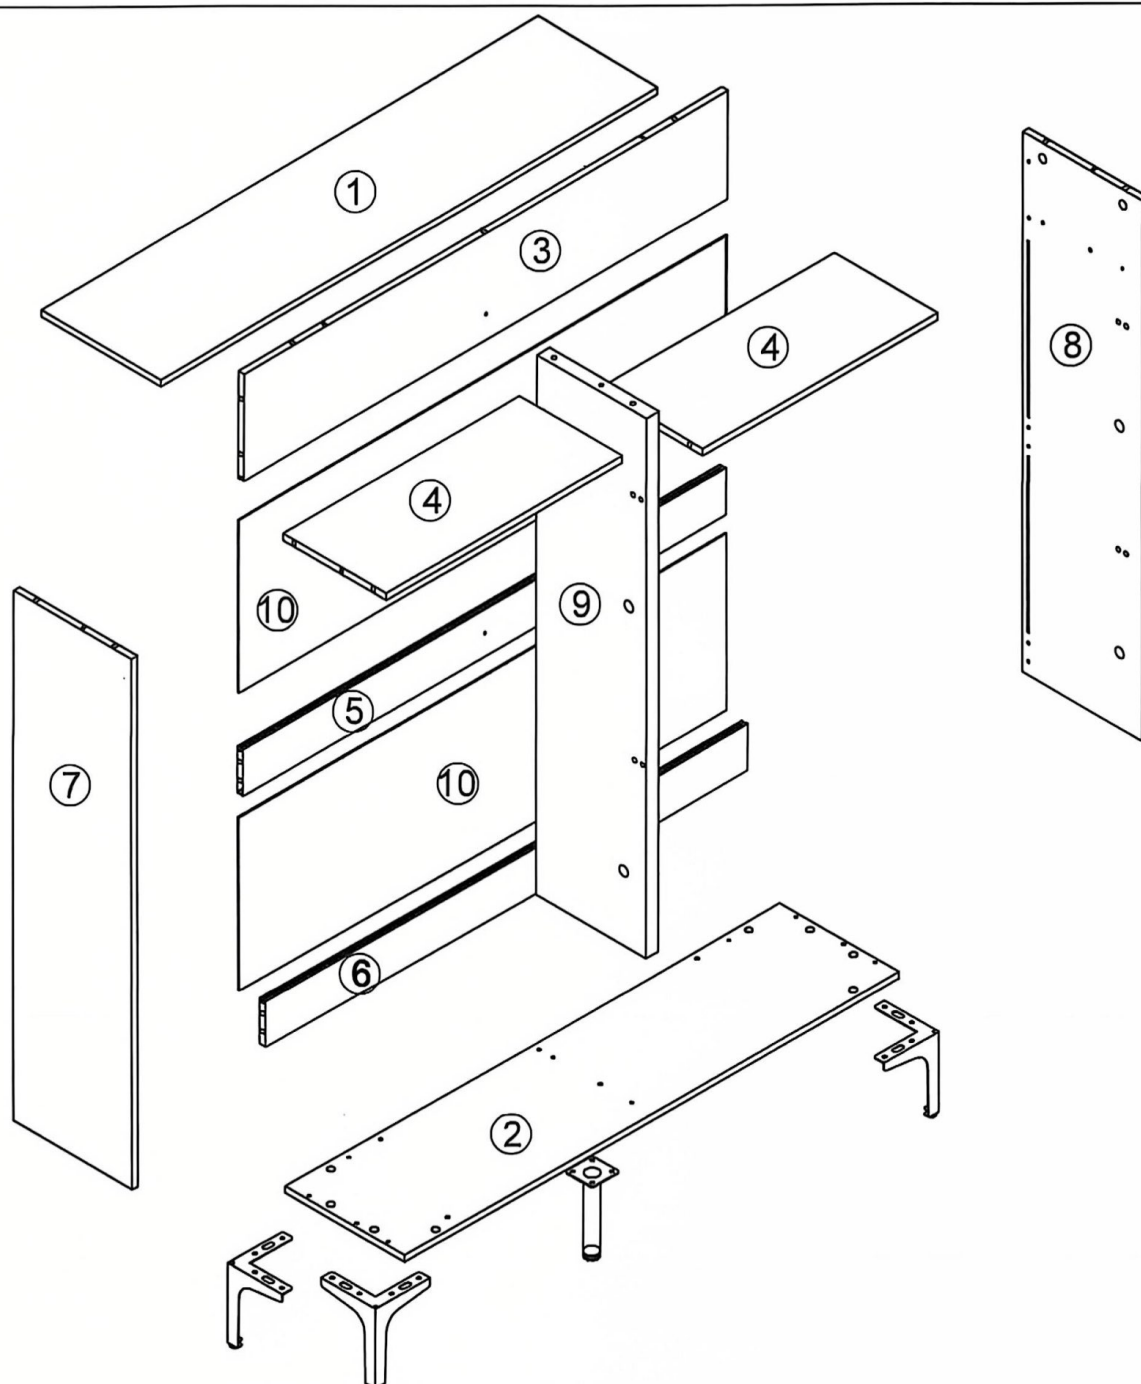
Made In China



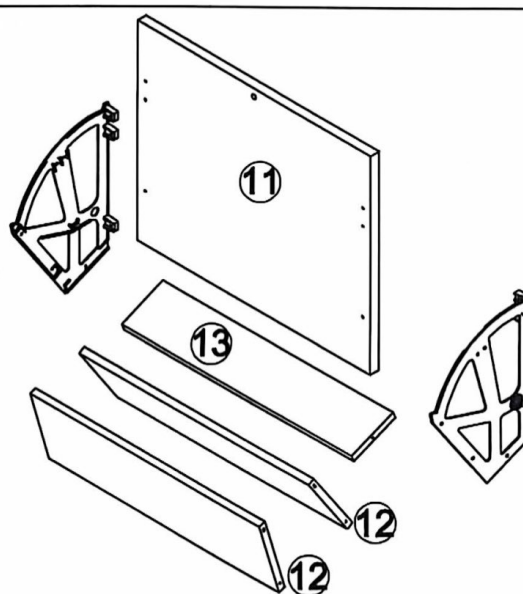




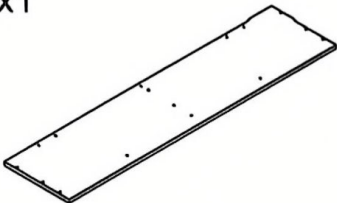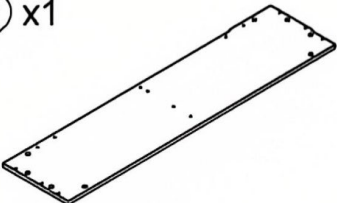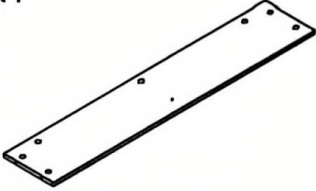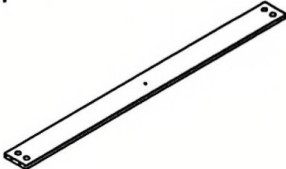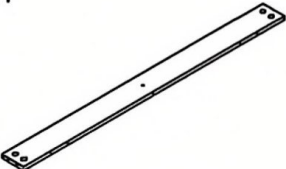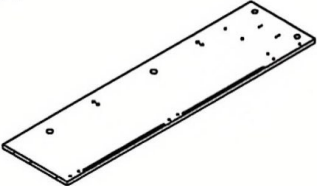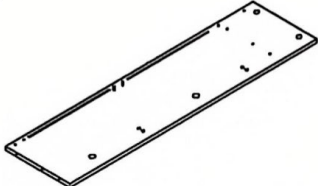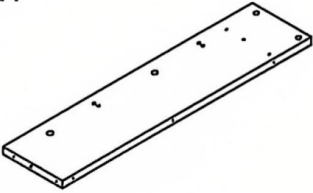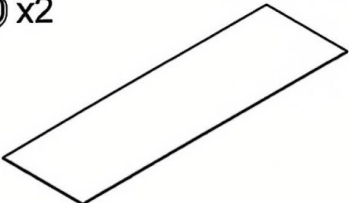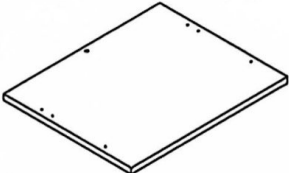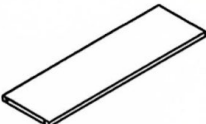

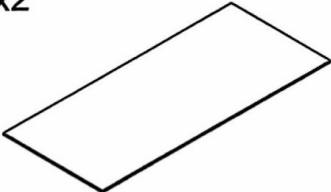

















x2





x4

① x1 	② x1 	③ x1 
④ x2 	⑤ x1 	⑥ x1 
⑦ x1 	⑧ x1 	⑨ x1 
⑩ x2 	⑪ x4 	⑫ x8 
⑬ x4 	⑭ x2 	⑮ x2 
⑯ x2 	⑰ x2 	⑱ x2 



Hardware

A	x37 +1(spare)	B	x37 +1(spare)	C	x14 +2(spare)	D	x40 +4(spare)	E	x4	F	x4
											
Ø6x32mm				Ø6x30mm		Ø3.5x12mm					
G	x8	H	x8	I	x8	J	x8	K	x2	L1	x2
											
						M4x8mm				Ø4x14mm	
L2	x2	M	x4	N	x8	O	x8	P	x32 +2(spare)	Q	x6
											
				M8x12mm				Ø3x16mm			
R	x6	S	x1	T	x22 +2(spare)	U	x1	V	x2	W	x16
											
Ø4x16mm				M4x35mm							
X	x2										
											


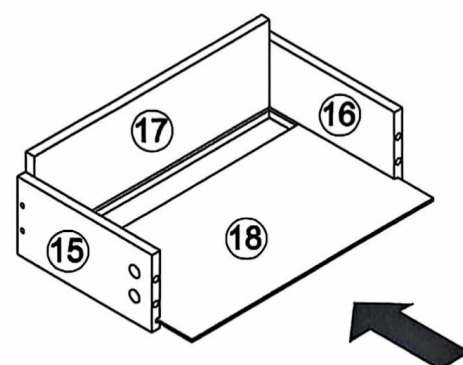
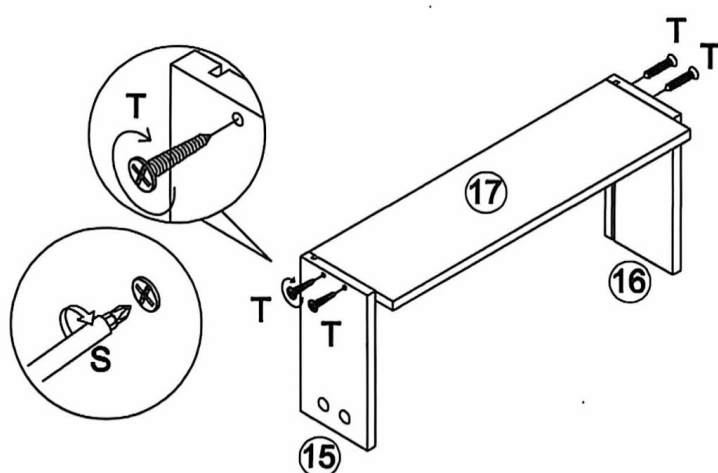
1





x2

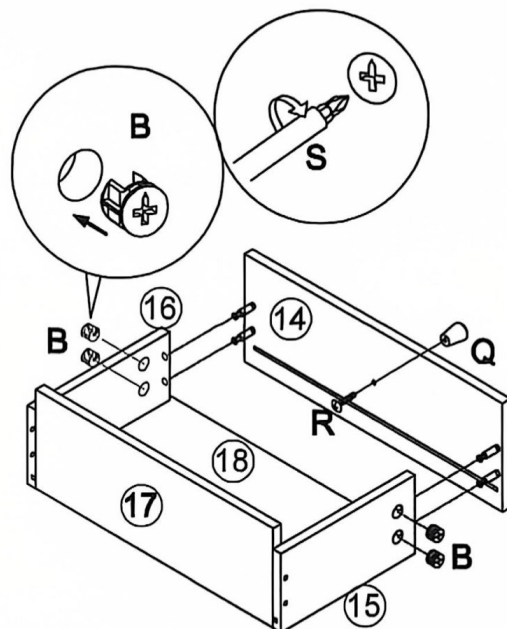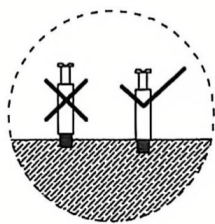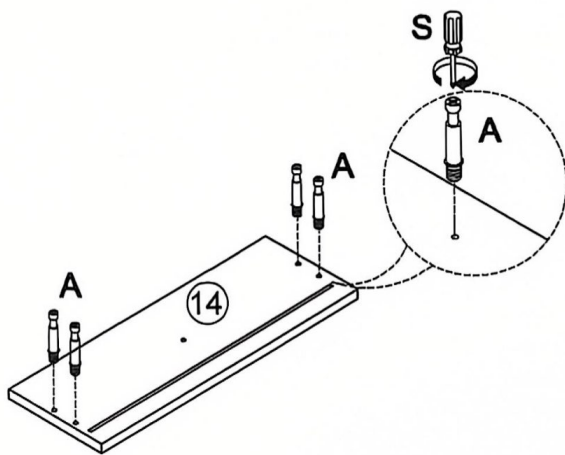

S	x1	T	x8
			
		M4x35mm	


2









x2

A	x8	B	x8
			
Ø6x32mm			

Q	x2	R	x2
			
		Ø4x16mm	







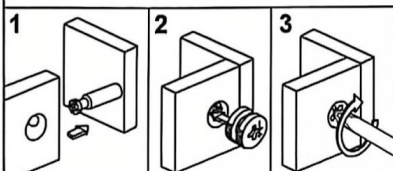


3

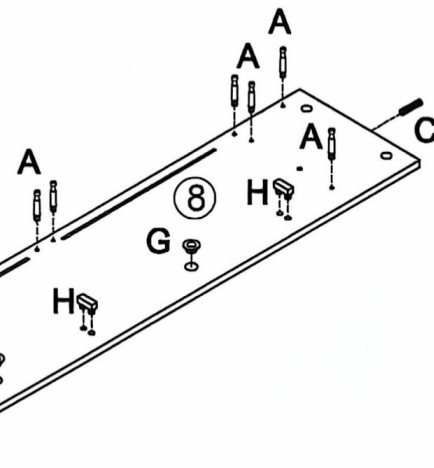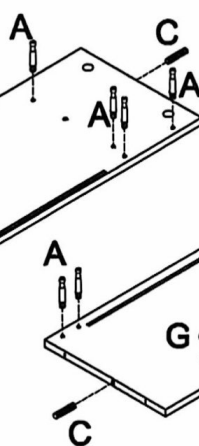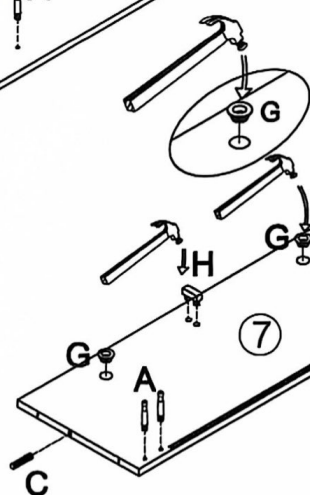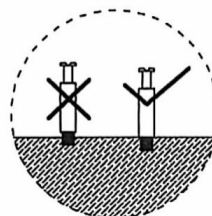
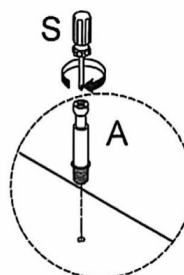
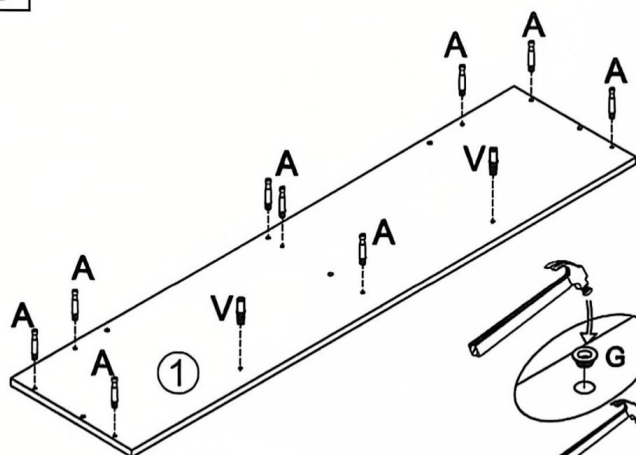


G	x4	H	x4	V	x2	S	x1	A	x25	C	x4
								Ø6x32mm		Ø6x30mm	


4

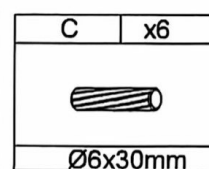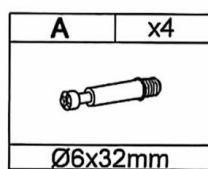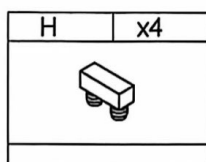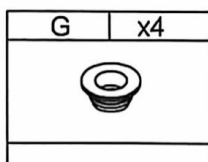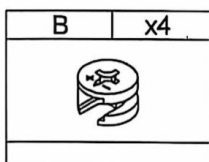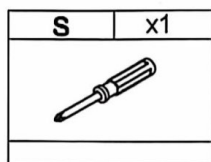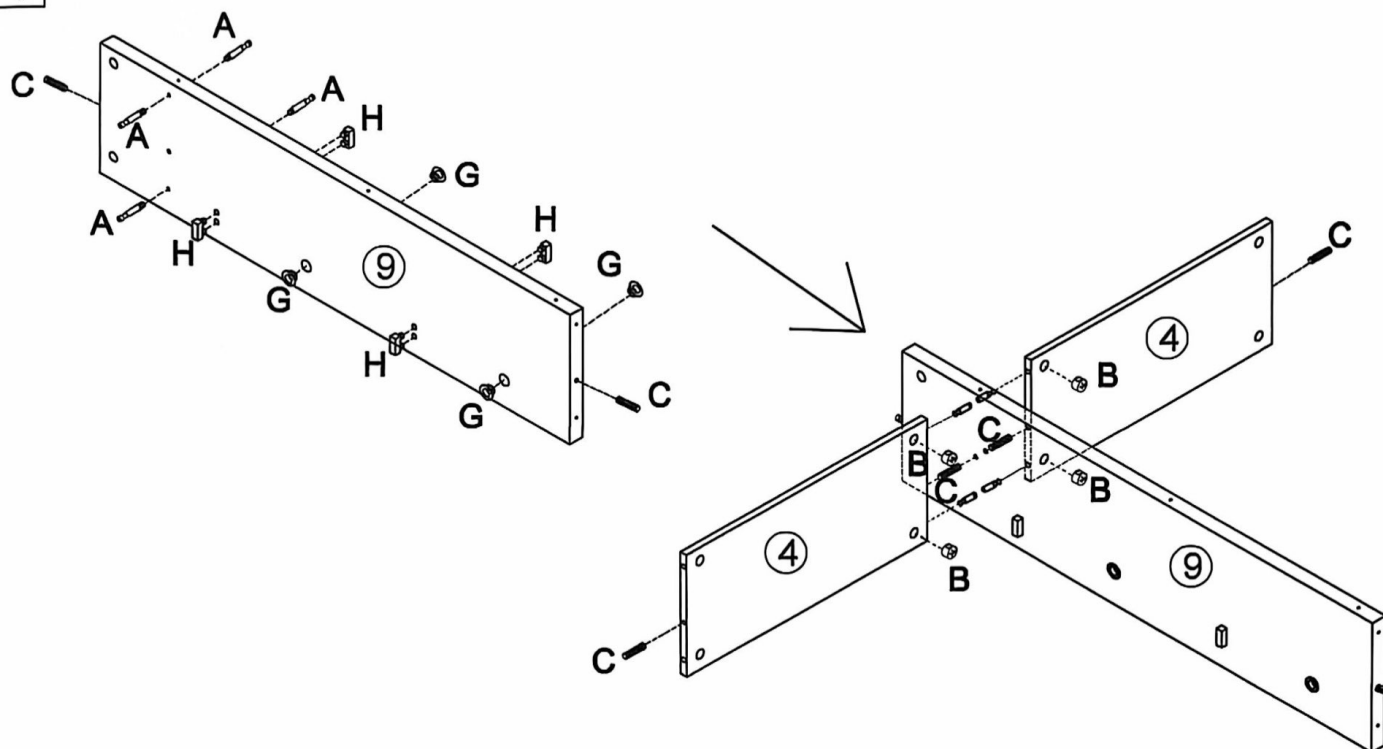

5

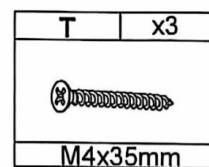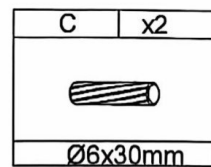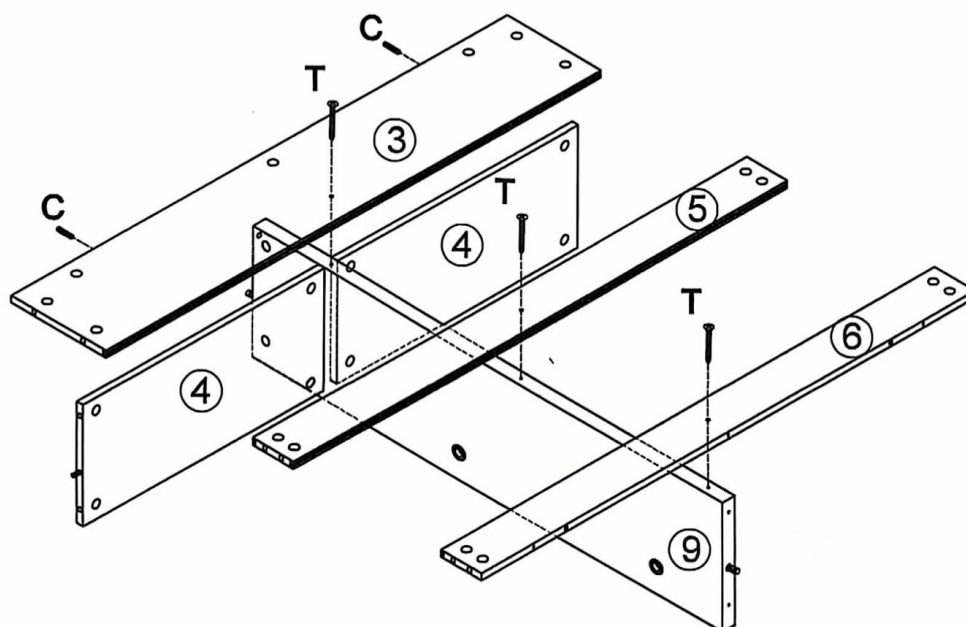


6

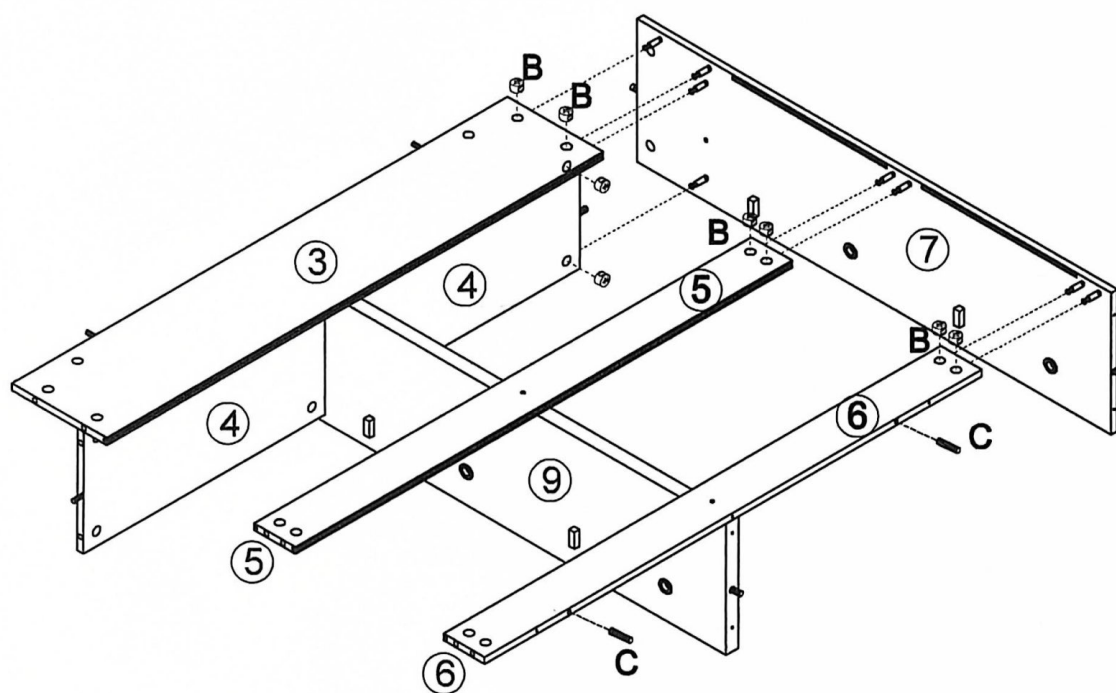


C	x2
Ø6x30mm	

B	x8


7

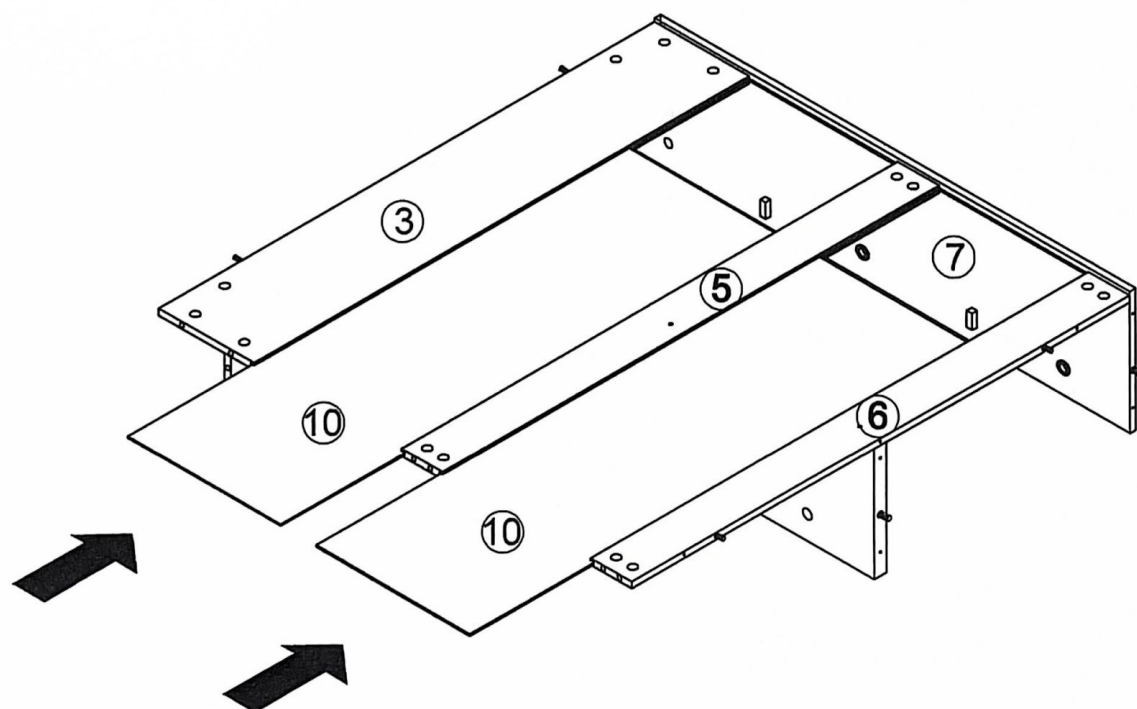


8

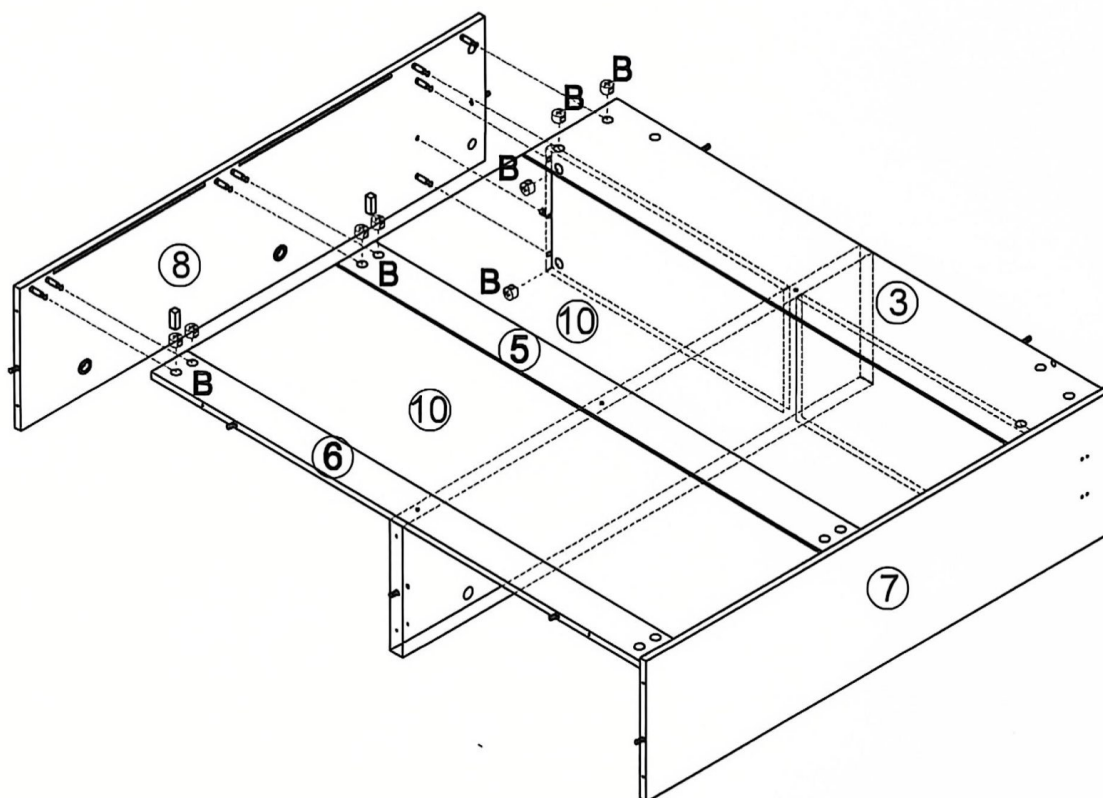


9



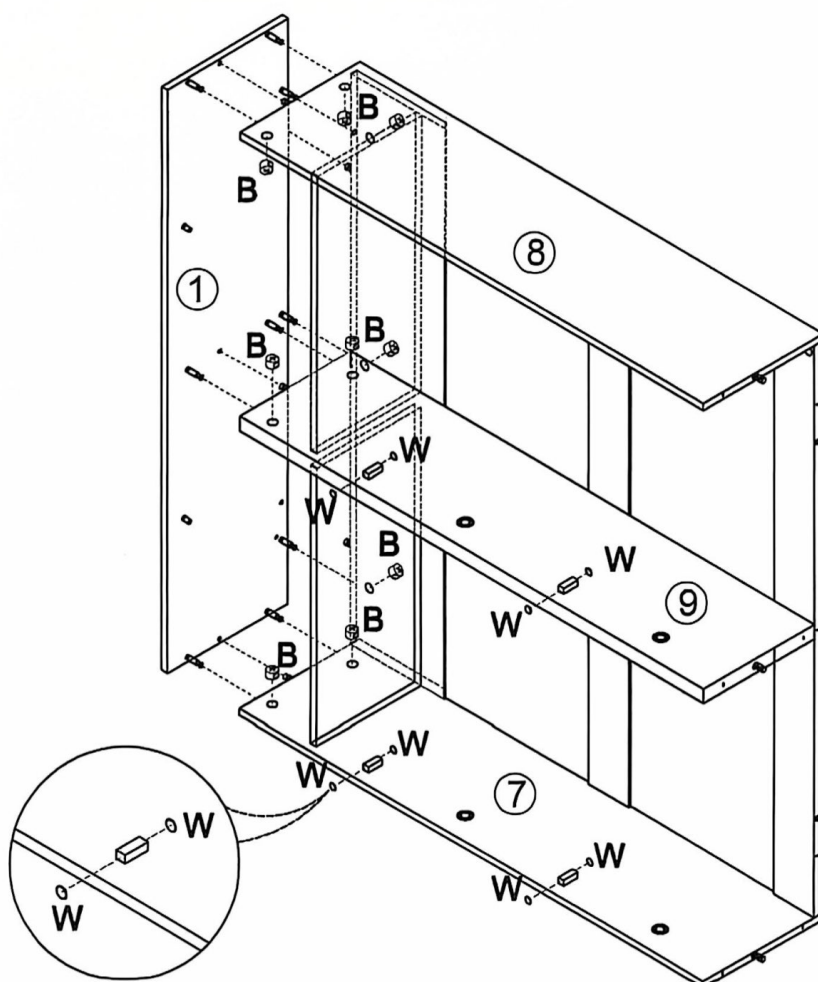



10

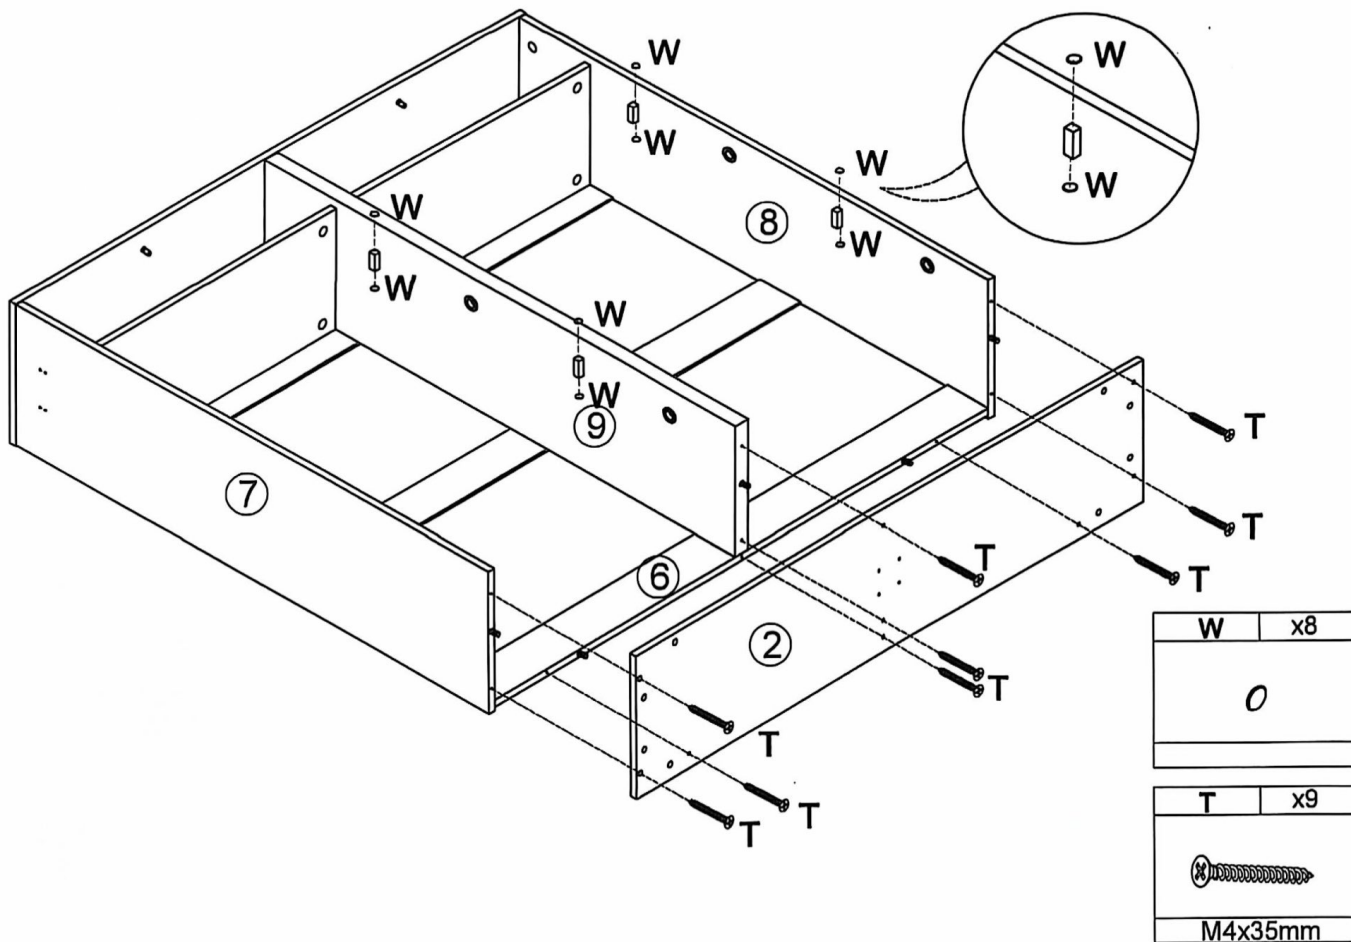

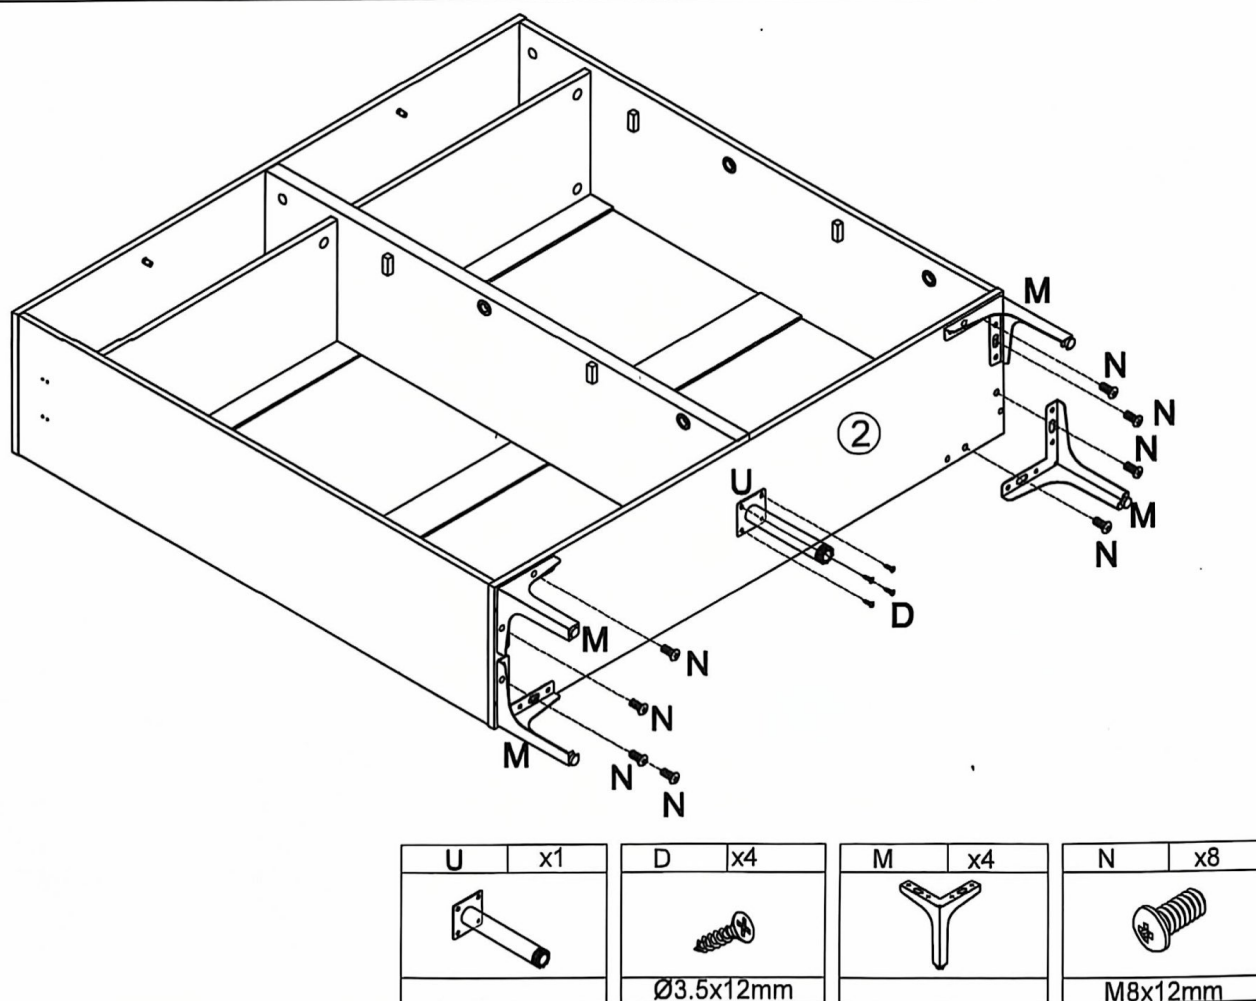

11

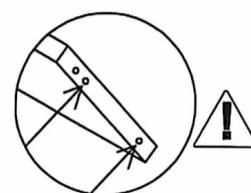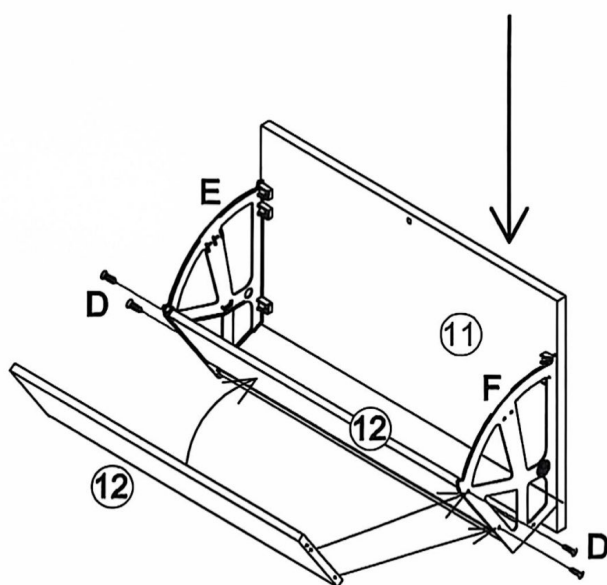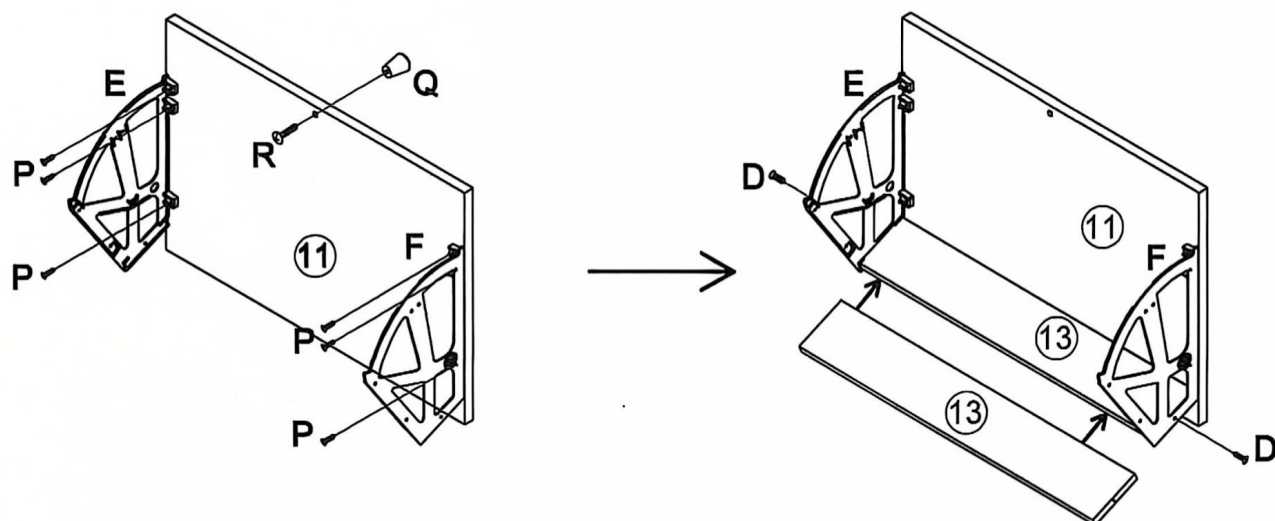






P	x24
	
Ø3x16mm	


S	x1
	

D	x24
	
Ø3.5x12mm	


E	x4
	




F	x4
	

R	x4
	
Ø4x16mm	


Q	x4
	

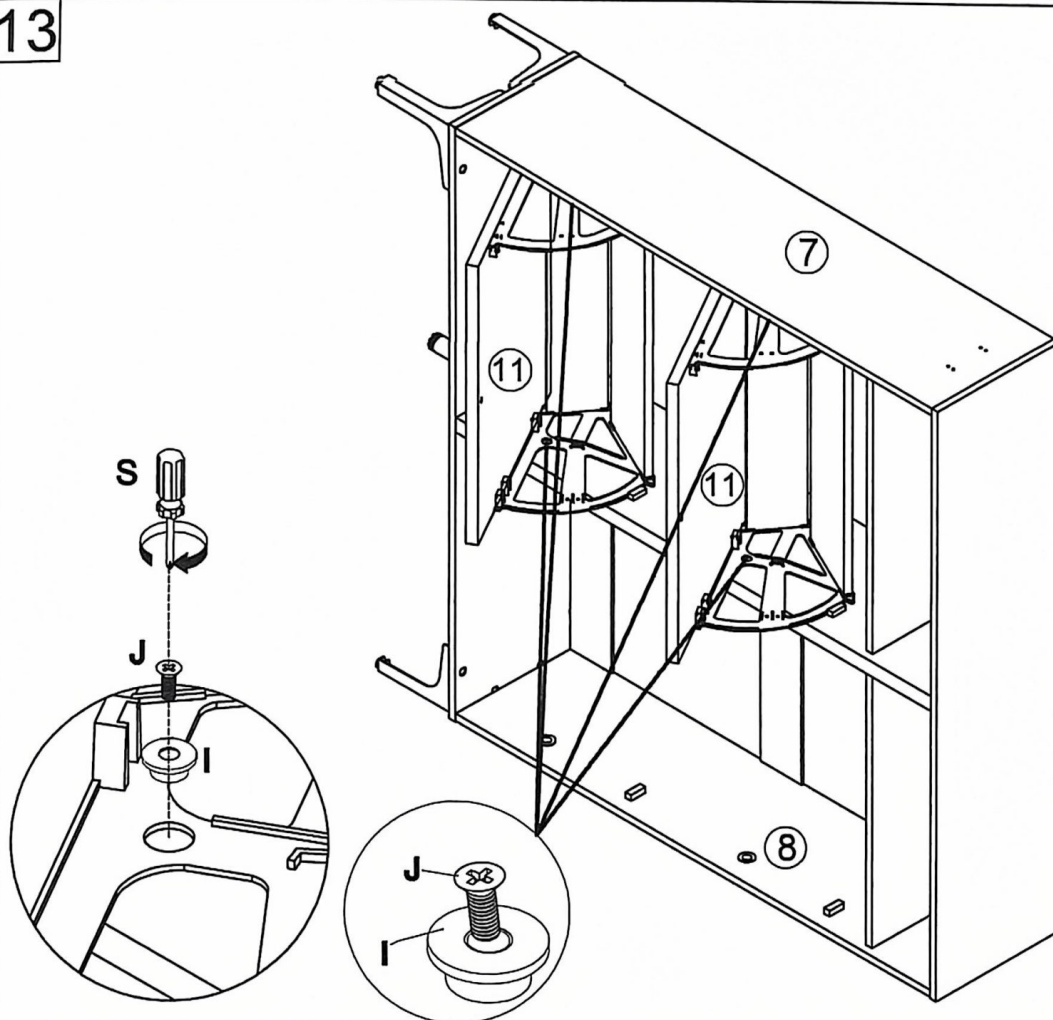

13




S	x1
	
I	x4
	
J	x4
	
M4x8mm	

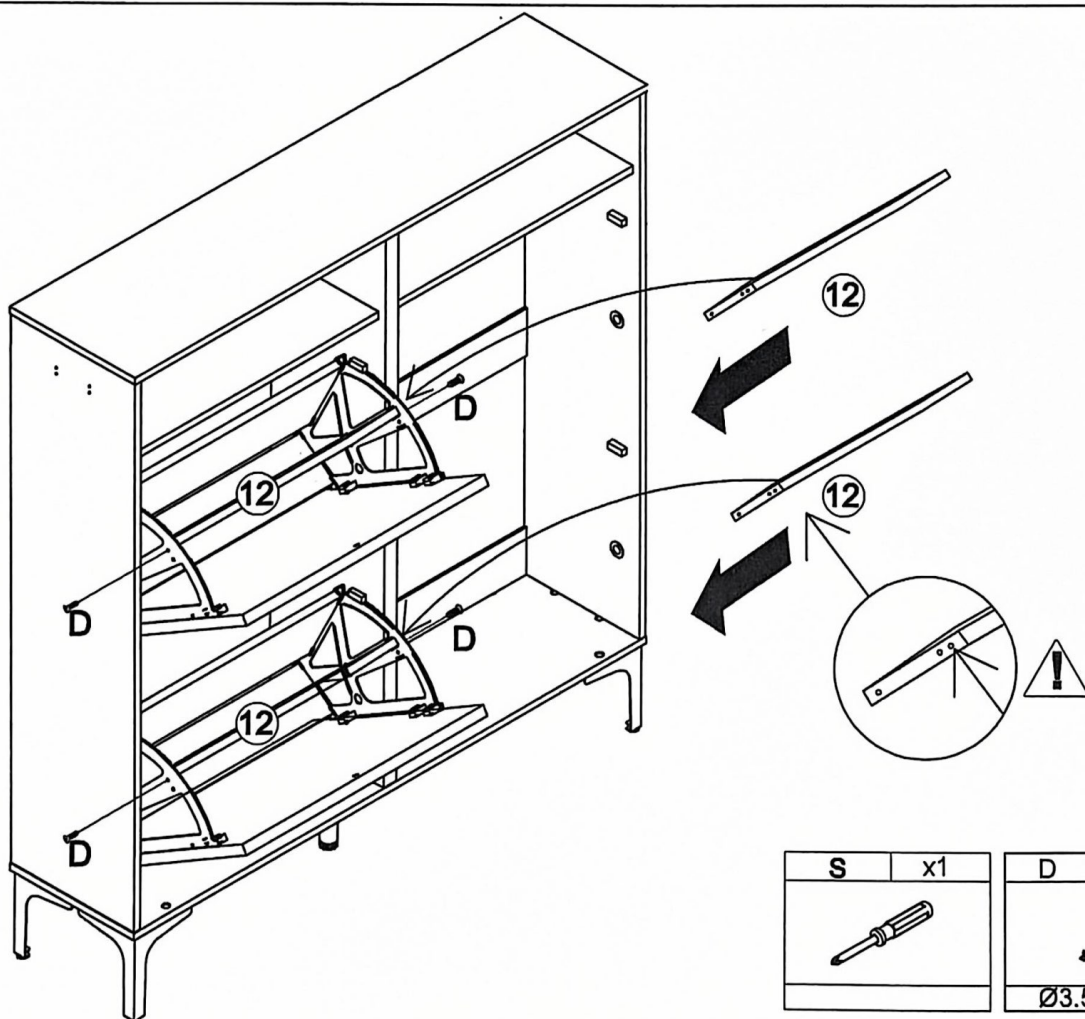14




S	x1
	
D	x4
	
Ø3.5x12mm	

15

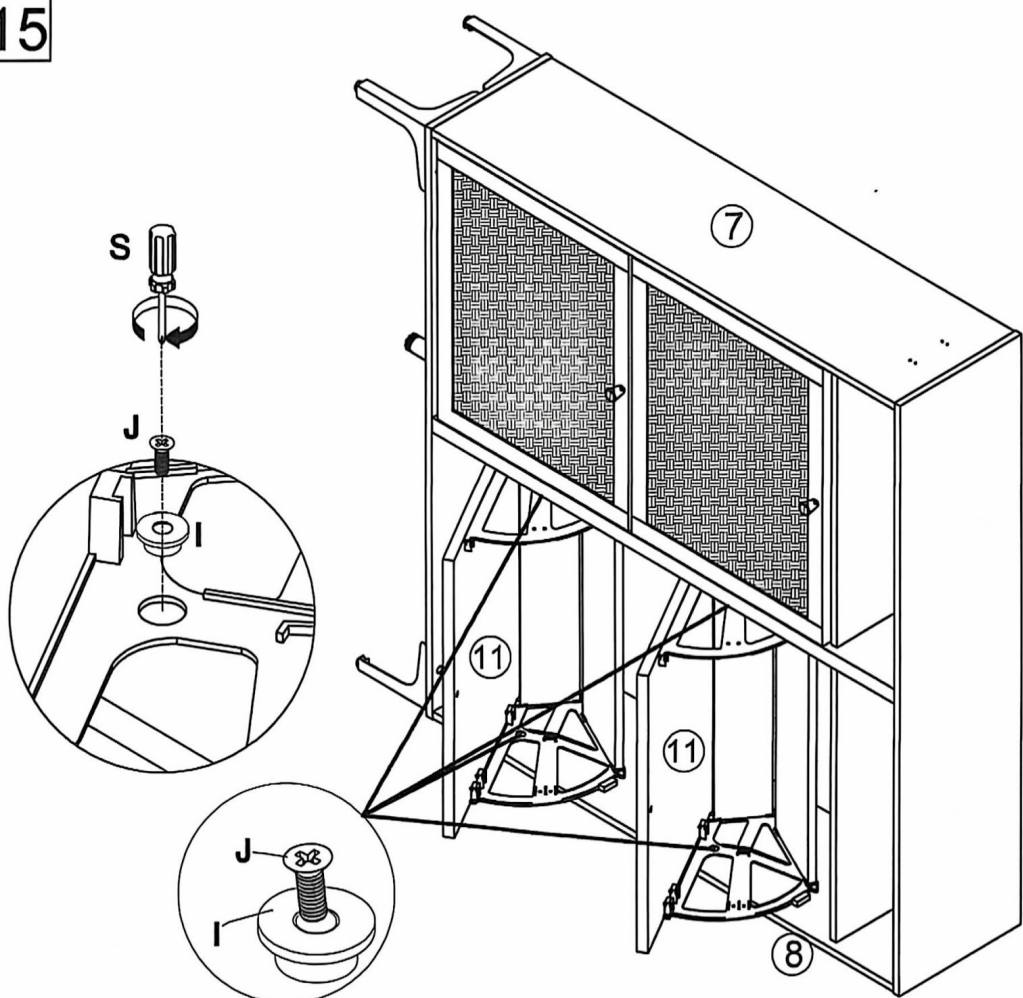


S	x1
I	x4
J	x4
M4x8mm	

16

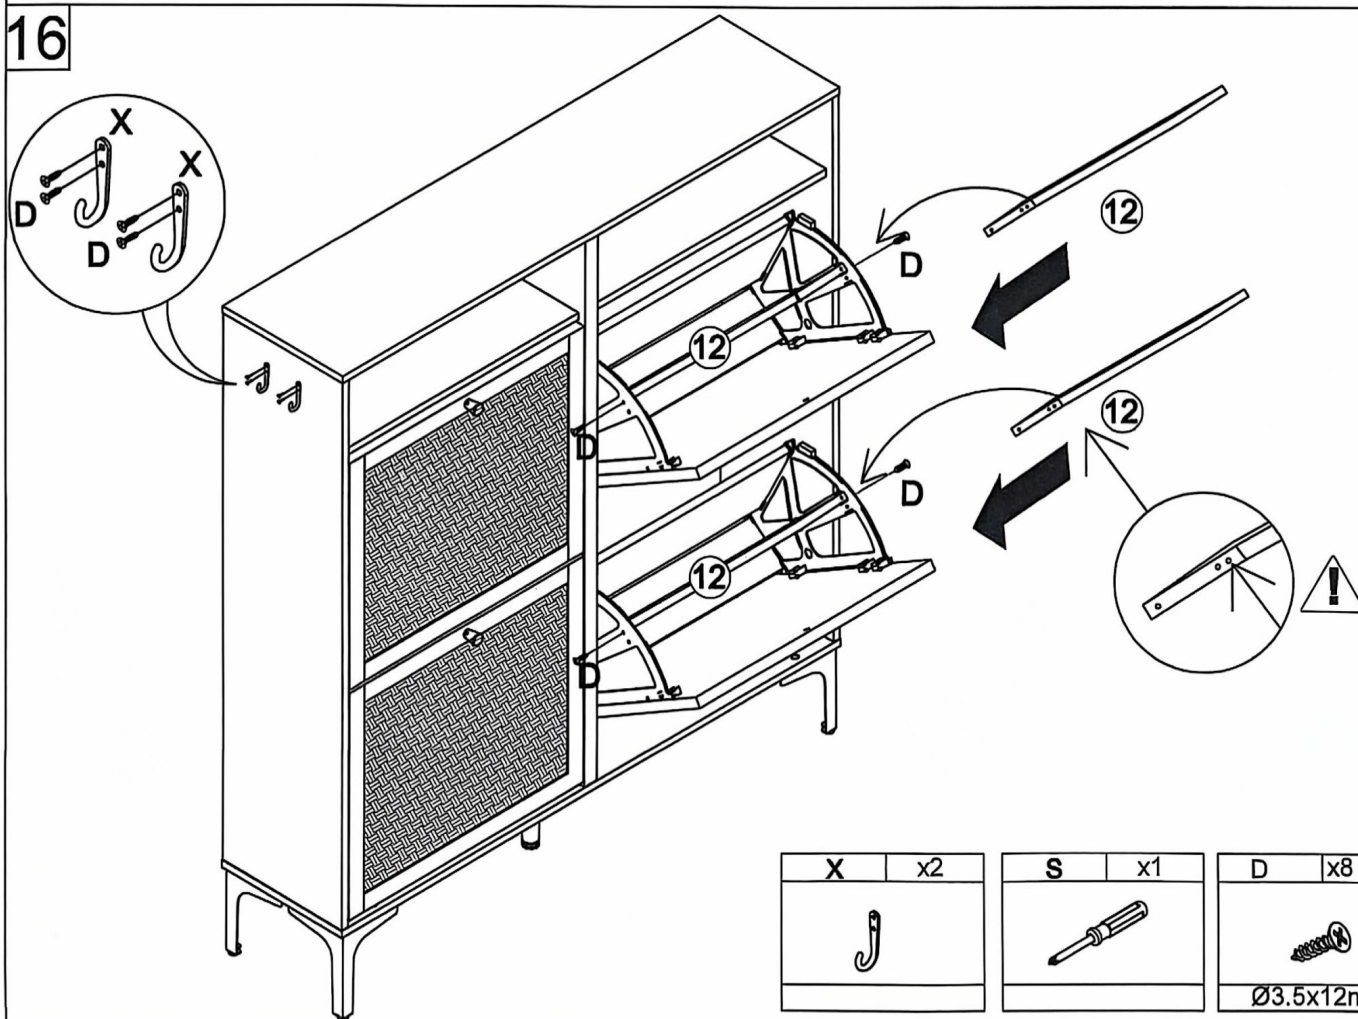


X	x2
S	x1
D	x8
Ø3.5x12mm	

17

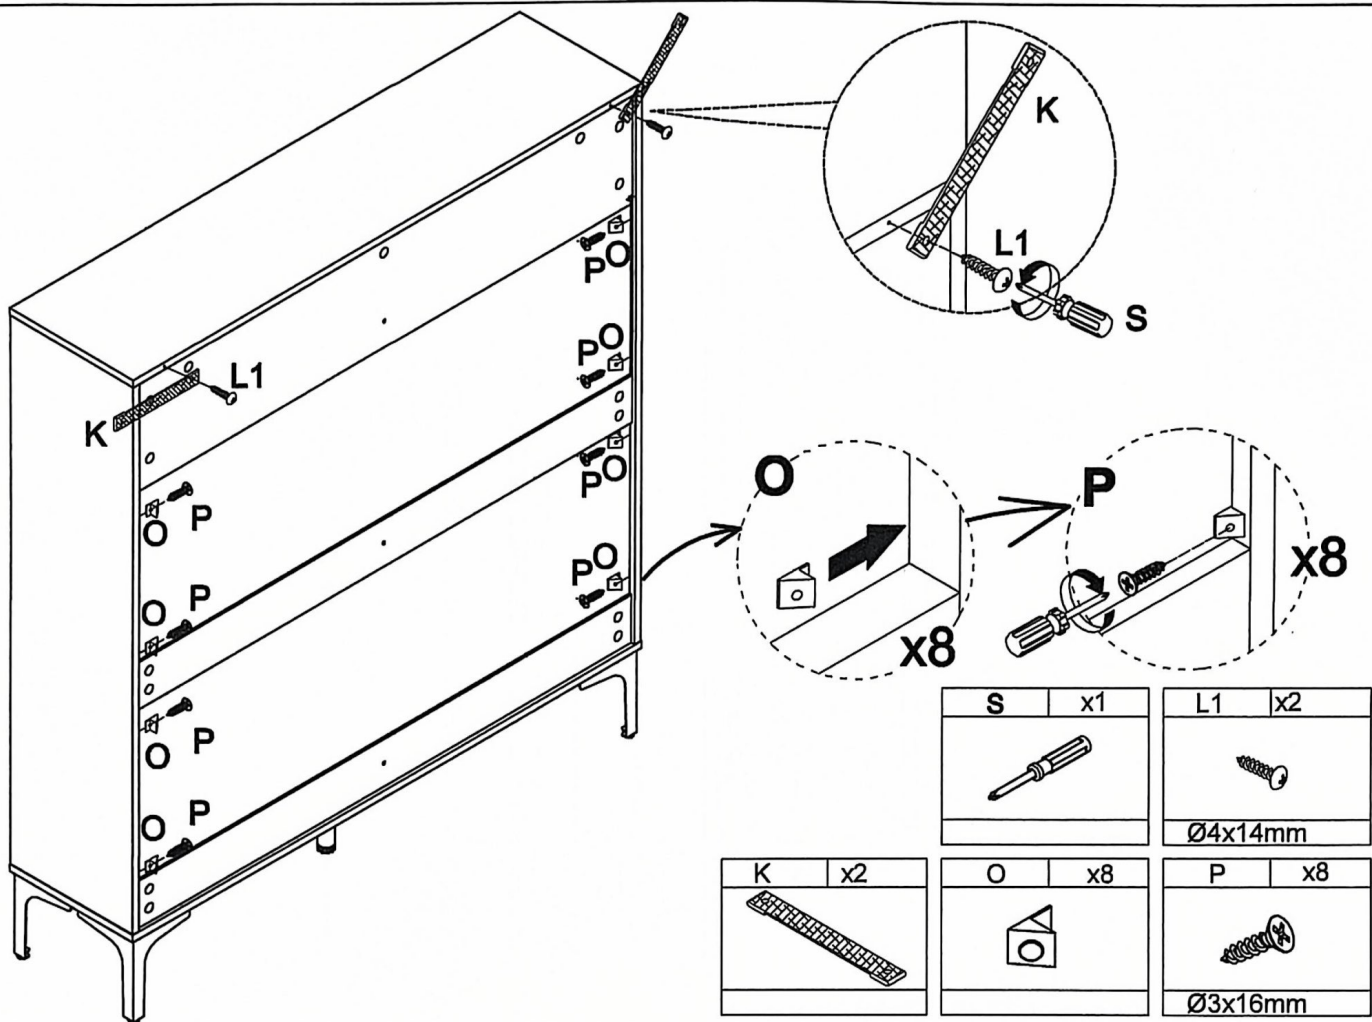



18

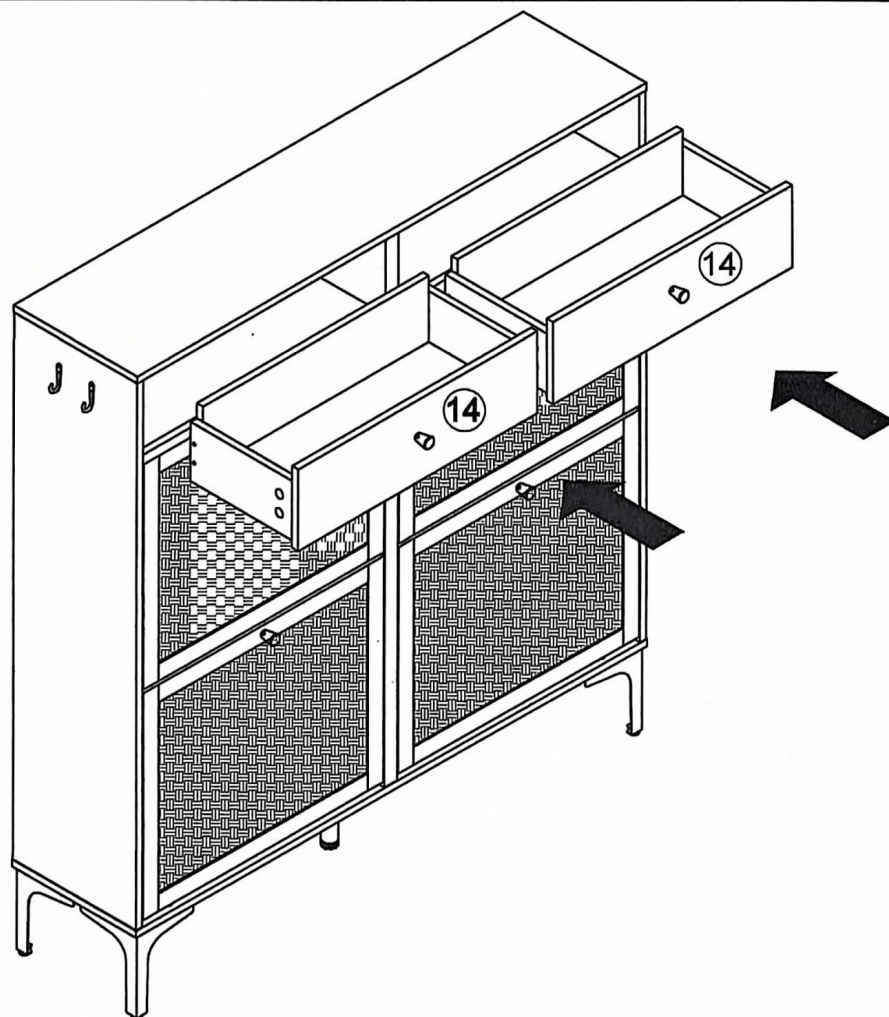






WALL

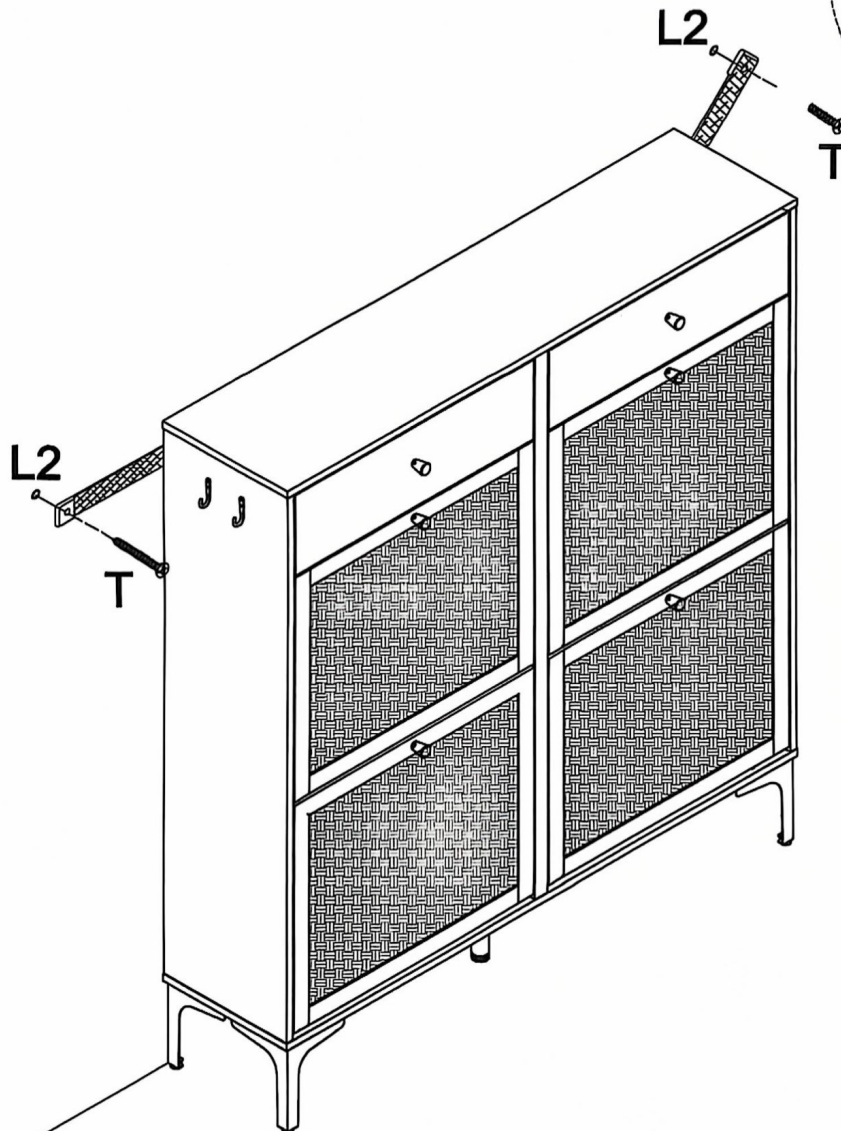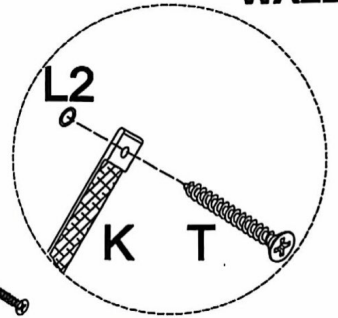WALL



S	x1	L2	x2	T	x2
					
				Ø4x35mm	