

## NOTICE

\*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

\*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

\*This item may require periodic tightening.

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

## PREPARATION

\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.


\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)

## CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


## Part List

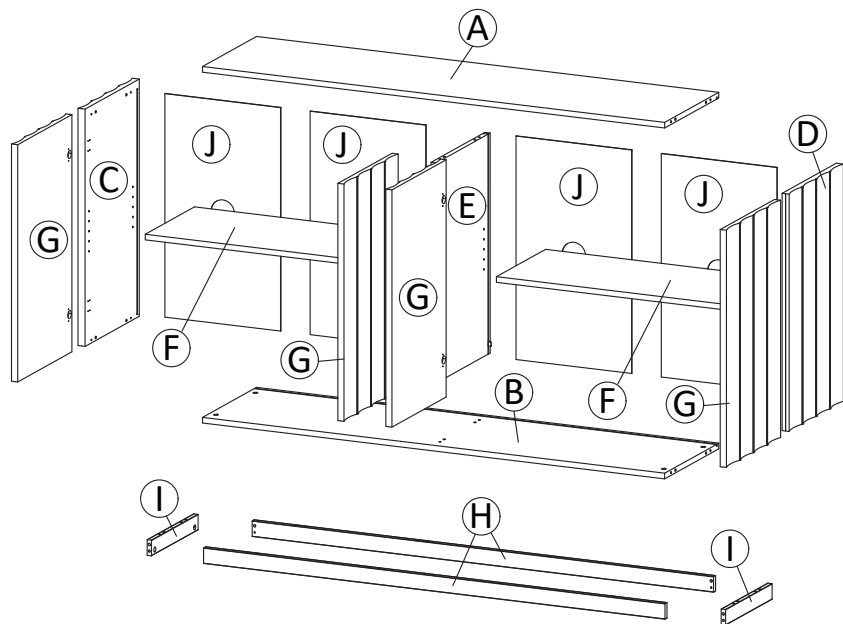

 **SAFAVIEH**  
FURNITURE

**Model# MED9646**

**Product Dimensions: 63.86"Wx16.42"Dx31.97"H**

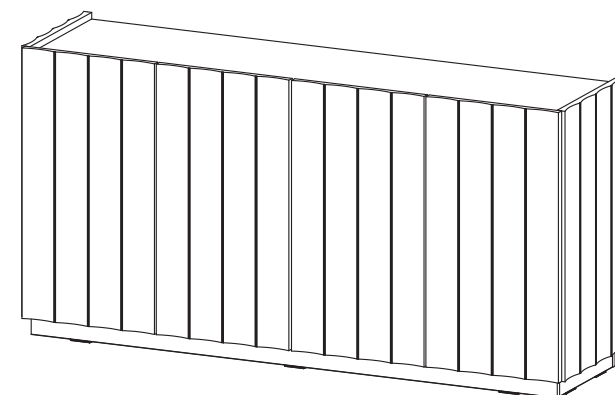








### **WARNING**

This product is intended for use with a  
FLAT SCREEN TV ONLY  
Maximum Screen Size: 65 inches  
Weight Limit: 97 lbs  
Shelf Load Limit: 40 lbs  
Total Weight Limit: 257 lbs  
Use with heavier televisions may result  
in instability causing tip over resulting in  
death or Serious injury.

### **WARNING**

Death or serious injury may occur  
when children climb on audio  
and/or video equipment furniture.  
A remote control or toys placed on  
the furnishing may encourage a  
child to climb on the furnishing and  
as a result the furnishing may tip  
over on the child.

Hardware List

|                                                                                                                                        |                                                                                                                                            |                                                                                                                                          |                                                                                                                                         |                                                                                                                                                                                                                                                     |
|----------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <div>HW1 x14</div> <div></div> <div>Ø 6 x 35 mm</div> | <div>HW2 x14</div> <div></div> <div>Ø 15 mm</div>         | <div>HW3 x28</div> <div></div> <div>Ø 8 x 30 mm</div> | <div>HW4 x2</div> <div></div> <div>M 7 x 50 mm</div> | <div>HW5 x12</div> <div></div> <div>M 6.4 x 53 mm</div>                                                                                                          |
| <div>HW6 x8</div> <div></div>                         | <div>HW7 x56</div> <div></div> <div>M 4.5 x 12.5 mm</div> | <div>HW8 x10</div> <div></div> <div>Ø 15 mm</div>     | <div>HW9 x10</div> <div></div>                       | <div>HW10 x18</div> <div></div> <div>M 3.5 x 15.5 mm</div>                                                                                                       |
| <div>HW11 x18</div> <div></div>                       | <div>HW12 x4</div> <div></div> <div>M 6.4 x 14 mm</div>   | <div>HW13 x4</div> <div></div>                        | <div>HW14 x2</div> <div></div> <div>701 mm</div>     | <div>HW HGL4 x1 SET</div> <div></div> <div></div> <div>Allen Key Size 4</div> |
| <div>HW HS26A x8</div> <div></div>                    |                                                                                                                                            |                                                                                                                                          |                                                                                                                                         |                                                                                                                                                                                                                                                     |

### Part List & HW For Multi-Box Items

| Piece | Description      | Qty | Carton Call |
|-------|------------------|-----|-------------|
| A     | Top Board        | 1   | 2 of 2      |
| B     | Bottom Board     | 1   | 2 of 2      |
| C     | Side Board Left  | 1   | 1 of 2      |
| D     | Side Board Right | 1   | 1 of 2      |
| E     | Center Board     | 1   | 1 of 2      |
| F     | Adjustable Shelf | 2   | 2 of 2      |
| G     | Door             | 4   | 1 of 2      |
| H     | Bottom Skirt 1   | 2   | 2 of 2      |
| I     | Bottom Skirt 2   | 2   | 2 of 2      |
| J     | Back Board       | 4   | 1 of 2      |

| Piece    | Description           | Qty   | Carton Call |
|----------|-----------------------|-------|-------------|
| HW1      | Cambolt               | 14    | 1 of 2      |
| HW2      | CamLock               | 14    | 1 of 2      |
| HW3      | Dowel                 | 28    | 1 of 2      |
| HW4      | Screw M 7 x 50 mm     | 2     | 1 of 2      |
| HW5      | Screw M 6.4 x 53 mm   | 12    | 1 of 2      |
| HW6      | Shelf Support         | 8     | 1 of 2      |
| HW7      | Screw M 4.5 x 12.5 mm | 56    | 1 of 2      |
| HW8      | Screw Cap             | 10    | 1 of 2      |
| HW9      | Floor Glide           | 10    | 1 of 2      |
| HW10     | Screw M 3.5 x 15.5 mm | 18    | 1 of 2      |
| HW11     | Wedge                 | 18    | 1 of 2      |
| HW12     | Screw M 6.4 x 14 mm   | 4     | 1 of 2      |
| HW13     | Support Hinge         | 4     | 1 of 2      |
| HW14     | List Joint            | 2     | 1 of 2      |
| HW HGL4  | Hand Grip + Allen Key | 1 SET | 1 of 2      |
| HW HS26A | Hinge                 | 8     | 1 of 2      |

# PREPARATION


\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.


\*If any part is missing or damaged, do not attempt to assemble the product.

\*Estimated Assembly Time: 60 minutes.


\*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)


\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

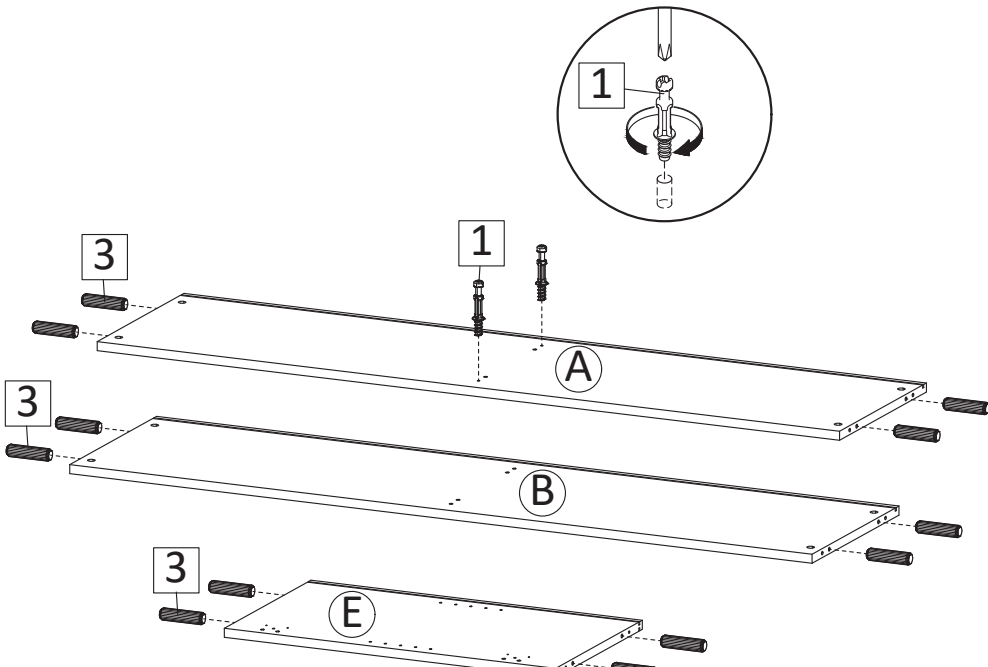

|                                                                                     |     |                                                                                     |      |
|-------------------------------------------------------------------------------------|-----|-------------------------------------------------------------------------------------|------|
| HW1                                                                                 | x 2 | HW3                                                                                 | x 12 |
|  |     |  |      |

**STEP1:** Insert Cambolt (HW1) into Top Board (A), tighten it using screwdriver. Insert Dowel (HW3) into the Top Board (A), Bottom Board (B) and Center Board (E).

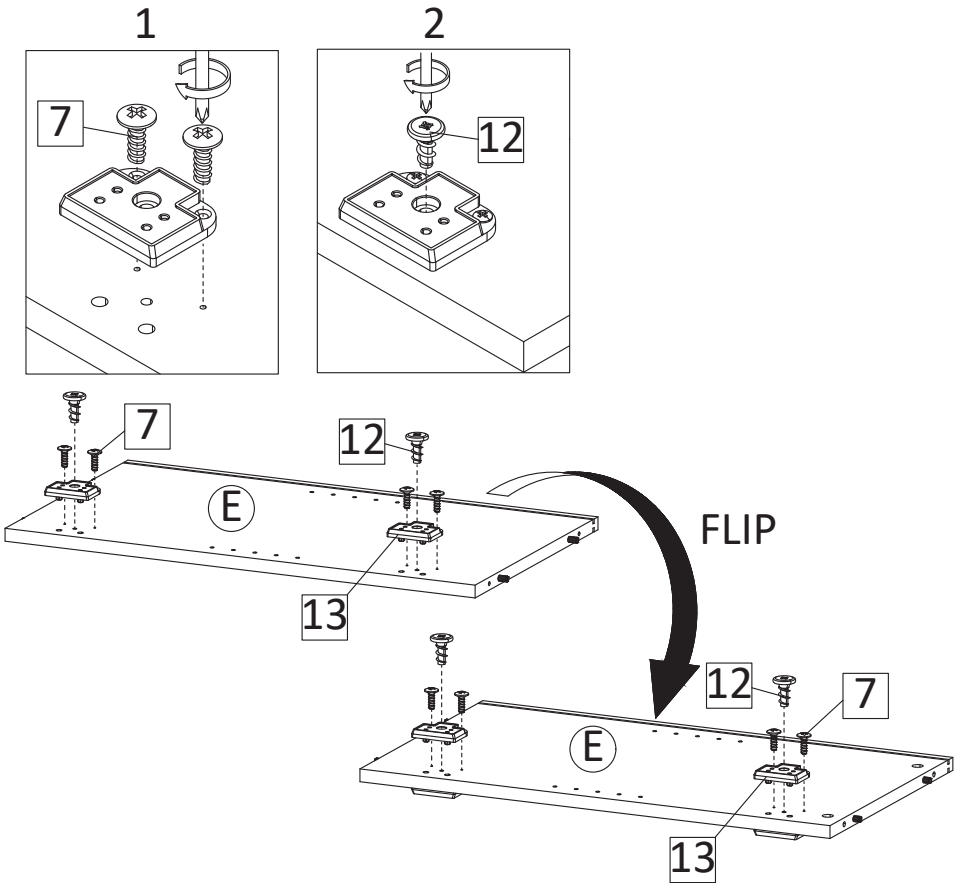

|                                                                                       |     |                                                                                       |     |                                                                                       |     |
|---------------------------------------------------------------------------------------|-----|---------------------------------------------------------------------------------------|-----|---------------------------------------------------------------------------------------|-----|
| HW7                                                                                   | x 8 | HW12                                                                                  | x 4 | HW13                                                                                  | x 4 |
|  |     |  |     |  |     |

**STEP2:** Install Support Hinge (HW13) into the Center Board (E). Secure it with Screw M4.5x12.5 mm (HW7) and Screw M6.4x14 mm (HW12), then tighten using screwdriver. Flip the Center Board (E) to the other side and repeat the process. Please ensure the Support Hinge is positioned according to the provided images.

# PREPARATION

\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.

\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

|              |              |
|--------------|--------------|
| HW2      x 2 | HW8      x 2 |
|              |              |

**STEP3:** Attach the Center Board (E) to the Top Board (A). Insert Camlock (HW2) and tighten it using screwdriver. Place Screw Cap (HW8) over the Camlock as shown in the picture.

|              |                  |
|--------------|------------------|
| HW4      x 2 | HW HGL4      x 1 |
|              |                  |

**STEP4:** Attach the Bottom Board (B) to the Center Board (E). Secure it with Screws M7x50 mm (HW4), and tighten them using Hand Grip + Allen Key (HW HGL4).

# PREPARATION



\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.

\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)
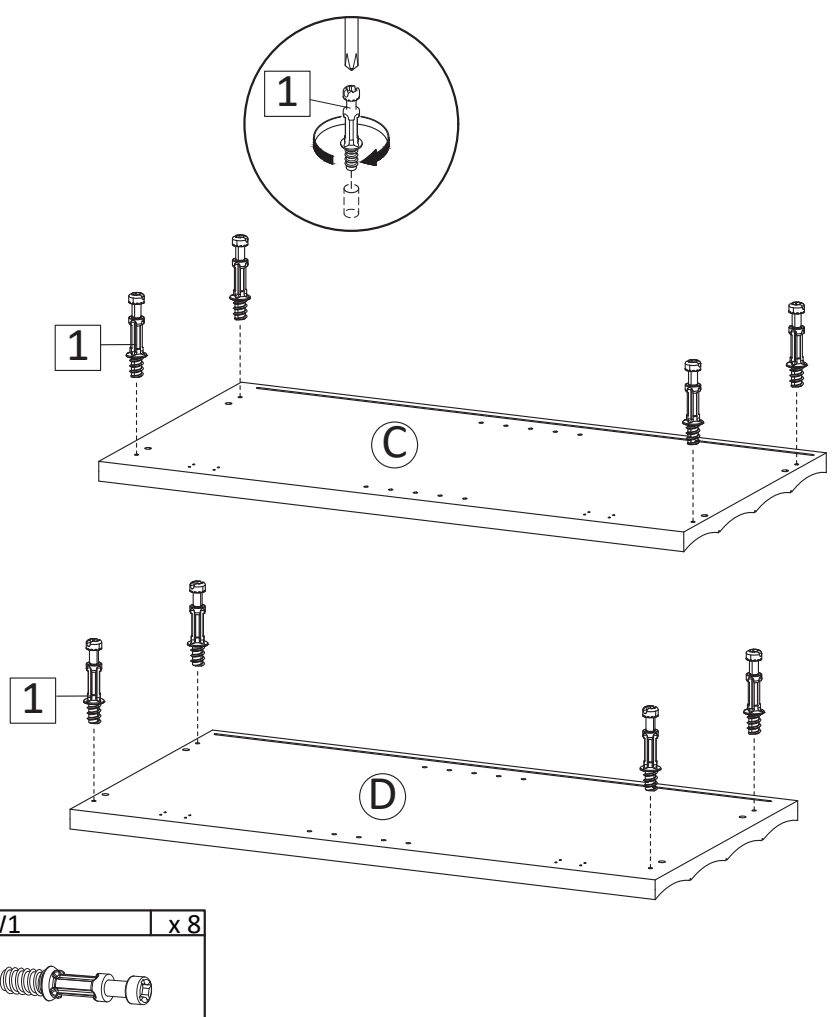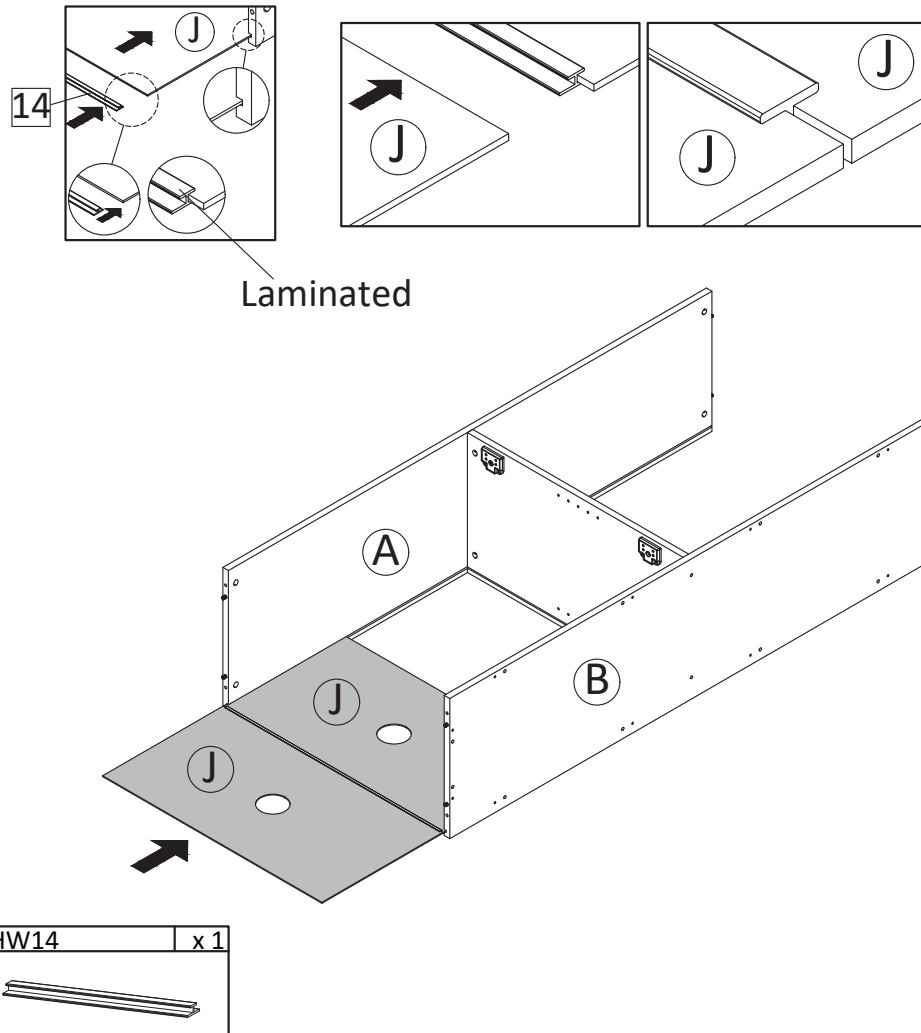
|                                                                                                                            |                                                                                                                                                                       |
|----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p><b>HW1</b> x 8</p>                   |  <p><b>HW14</b> x 1</p>                                                           |
| <p><b>STEP5:</b> Insert Cambolt (HW1) into Side Board Left (C) and Side Board Right (D), tighten it using screwdriver.</p> | <p><b>STEP6:</b> Insert the Back Board (J) into the groove on the Top Board (A) and the Bottom Board (B), then place the List Join (HW14) between the Back Board.</p> |

# PREPARATION


\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.

\*Estimated Assembly Time: 60 minutes.


\*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

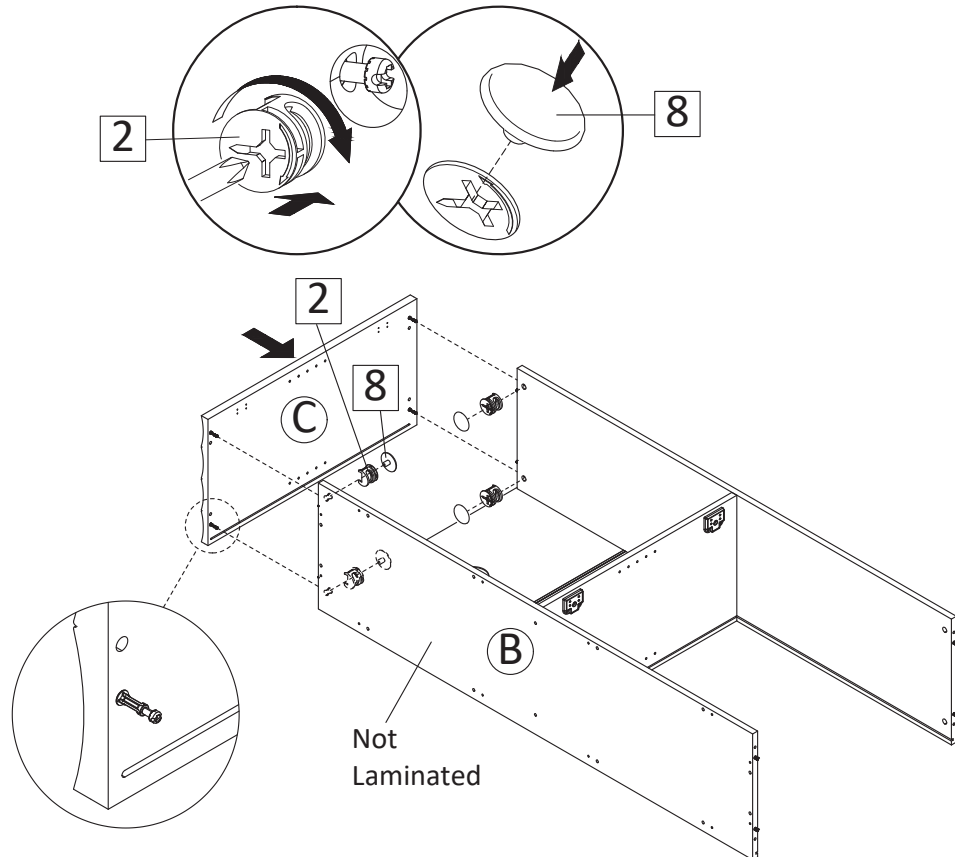

|                                                                                     |     |
|-------------------------------------------------------------------------------------|-----|
| HW2                                                                                 | x 4 |
|  |     |

|                                                                                     |     |
|-------------------------------------------------------------------------------------|-----|
| HW8                                                                                 | x 4 |
|  |     |

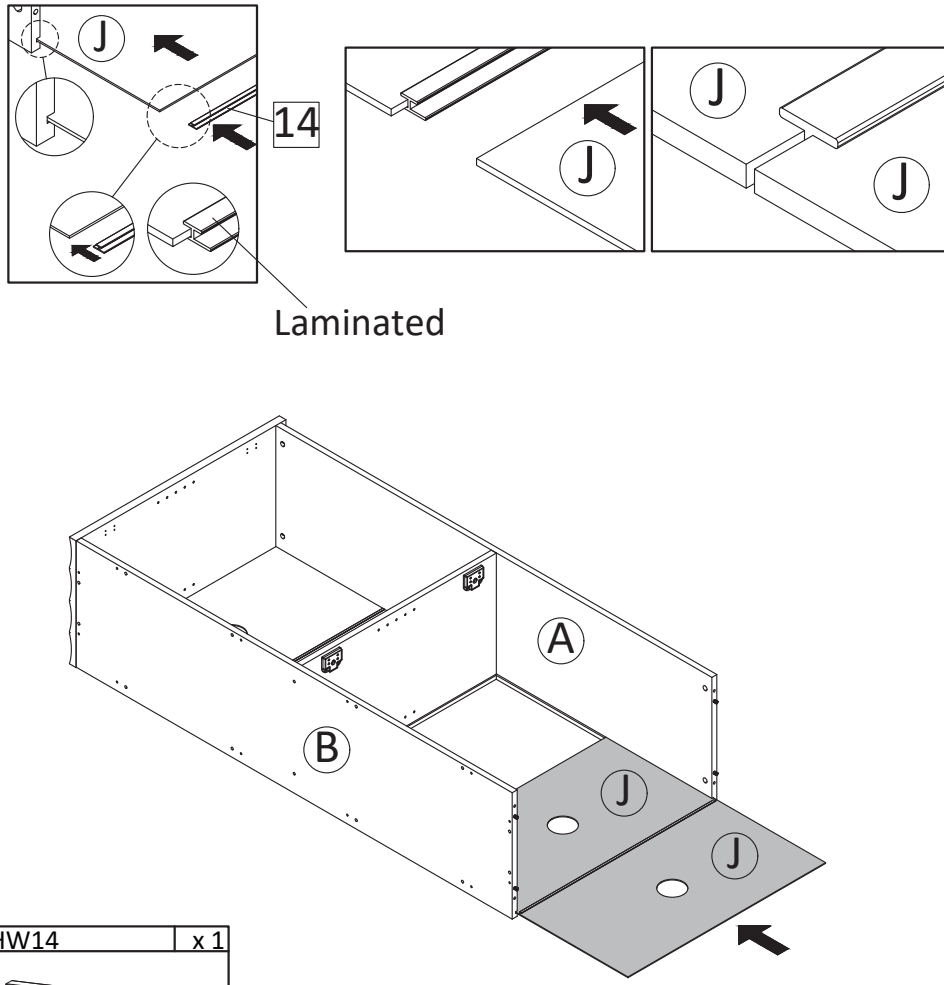

|                                                                                       |     |
|---------------------------------------------------------------------------------------|-----|
| HW14                                                                                  | x 1 |
|  |     |

**STEP7:** Attach the Side Board Left (C) to the pre-assembled components. Insert Camlock (HW2) and tighten it using screwdriver. Place Screw Cap (HW8) over the Camlock as shown in the picture.

**STEP8:** Insert the Back Board (J) into the groove on the Top Board (A) and the Bottom Board (B), then place the List Join (HW14) between the Back Board.

# PREPARATION

\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.

\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

|              |              |
|--------------|--------------|
| HW2      x 4 | HW8      x 4 |
|              |              |



**STEP9:** Attach the Side Board Right (D) to the pre-assembled components. Insert Camlock (HW2) and tighten it using screwdriver. Place Screw Cap (HW8) over the Camlock as shown in the picture.

|              |              |
|--------------|--------------|
| HW1      x 4 | HW3      x 4 |
|              |              |



**STEP10:** Insert Cambolt (HW1) into the Bottom Skirt 1 (H), tighten it using screwdriver. Insert Dowel (HW3) into the Bottom Skirt 2 (I).

# PREPARATION

- \*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \*Estimated Assembly Time: 60 minutes.
- \*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
- \*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

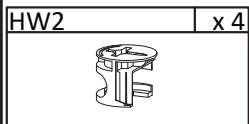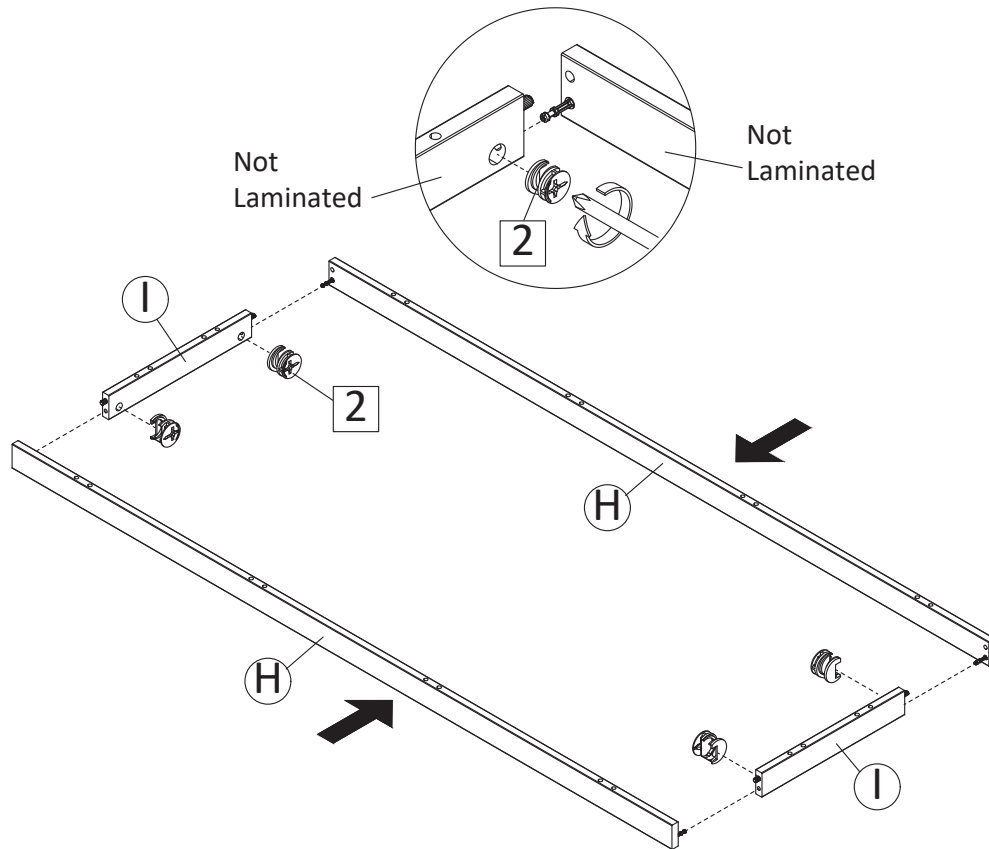

**STEP11:** Combine Bottom Skirt 1 (H) and Bottom Skirt 2 (I), secure with Camlock (HW2) then tighten using screwdriver.

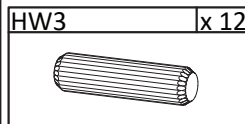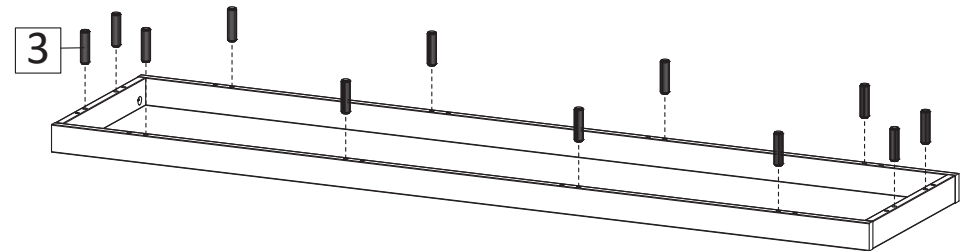

**STEP12:** Insert Dowel (HW3) into the assembled Bottom Skirt, positioning it as shown in the figure.

# PREPARATION









\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.

\*Estimated Assembly Time: 60 minutes.


\*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)
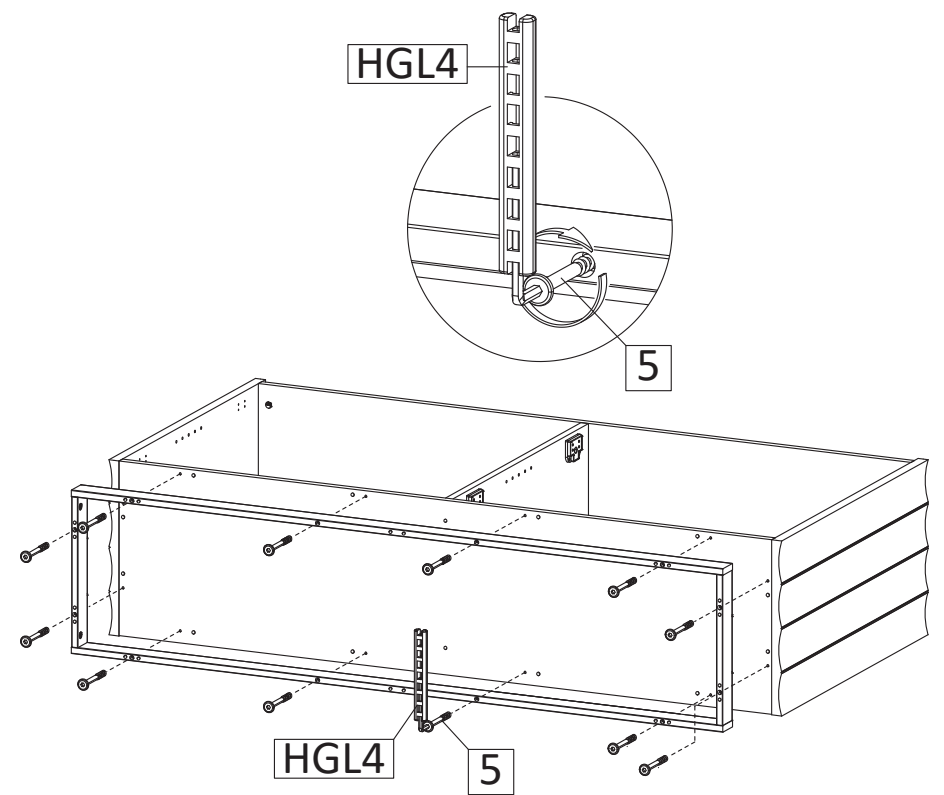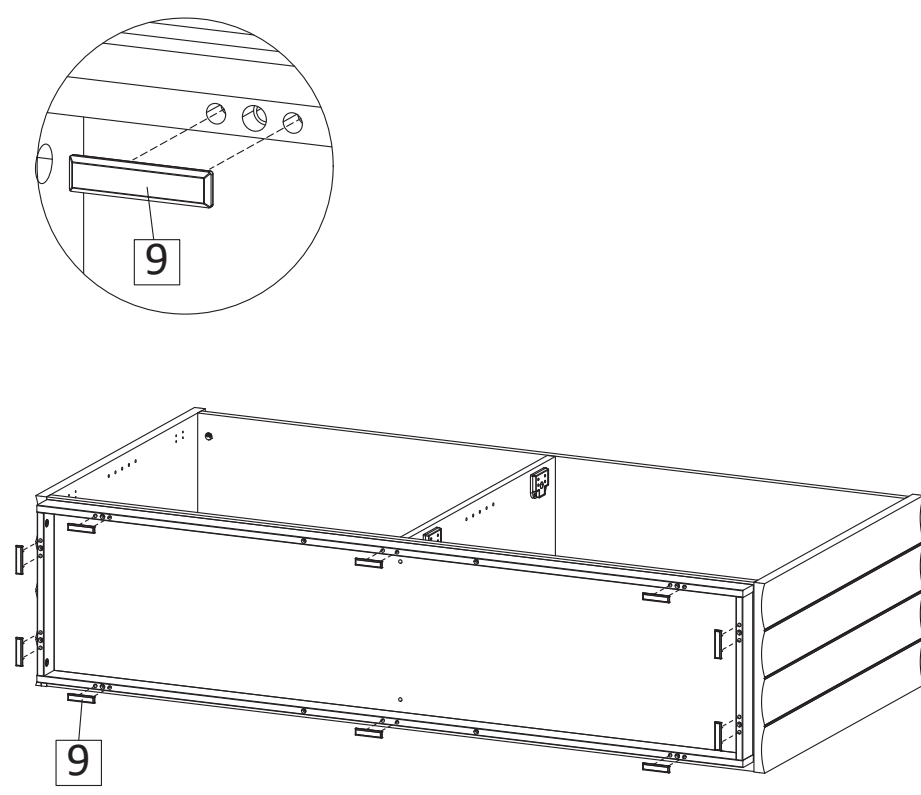
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                                                                                                                |      |                                                                                     |  |         |     |                                                                                     |  |                                                                                                                                                                                                                                                                                                                 |     |      |                                                                                       |  |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|------|-------------------------------------------------------------------------------------|--|---------|-----|-------------------------------------------------------------------------------------|--|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----|------|---------------------------------------------------------------------------------------|--|
|  <div data-bbox="112 1212 616 1332"><table border="1"><tr><td>HW5</td><td>x 12</td></tr><tr><td colspan="2"></td></tr></table><table border="1"><tr><td>HW HGL4</td><td>x 1</td></tr><tr><td colspan="2"></td></tr></table></div> | HW5                                                                                                                            | x 12 |  |  | HW HGL4 | x 1 |  |  |  <div data-bbox="1120 1212 1377 1332"><table border="1"><tr><td>HW9</td><td>x 10</td></tr><tr><td colspan="2"></td></tr></table></div> | HW9 | x 10 |  |  |
| HW5                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | x 12                                                                                                                           |      |                                                                                     |  |         |     |                                                                                     |  |                                                                                                                                                                                                                                                                                                                 |     |      |                                                                                       |  |
|                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                |      |                                                                                     |  |         |     |                                                                                     |  |                                                                                                                                                                                                                                                                                                                 |     |      |                                                                                       |  |
| HW HGL4                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | x 1                                                                                                                            |      |                                                                                     |  |         |     |                                                                                     |  |                                                                                                                                                                                                                                                                                                                 |     |      |                                                                                       |  |
|                                                                                                                                                                                                                                                                                                                                                                                                         |                                                                                                                                |      |                                                                                     |  |         |     |                                                                                     |  |                                                                                                                                                                                                                                                                                                                 |     |      |                                                                                       |  |
| HW9                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | x 10                                                                                                                           |      |                                                                                     |  |         |     |                                                                                     |  |                                                                                                                                                                                                                                                                                                                 |     |      |                                                                                       |  |
|                                                                                                                                                                                                                                                                                                                                                                                                       |                                                                                                                                |      |                                                                                     |  |         |     |                                                                                     |  |                                                                                                                                                                                                                                                                                                                 |     |      |                                                                                       |  |
| <p><b>STEP13:</b> Attach the previously assembled Bottom Skirt components to the Bottom Board, and secure them with Screw M6.4x53 mm (HW5). Tighten the Screws using Hand Grip + Allen key (HW HGL4).</p>                                                                                                                                                                                                                                                                                  | <p><b>STEP14:</b> Insert Floor Glide (HW9) into the assembled Bottom Skirt components. Position it as shown in the figure.</p> |      |                                                                                     |  |         |     |                                                                                     |  |                                                                                                                                                                                                                                                                                                                 |     |      |                                                                                       |  |


# PREPARATION

- \*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \*Estimated Assembly Time: 60 minutes.
- \*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
- \*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

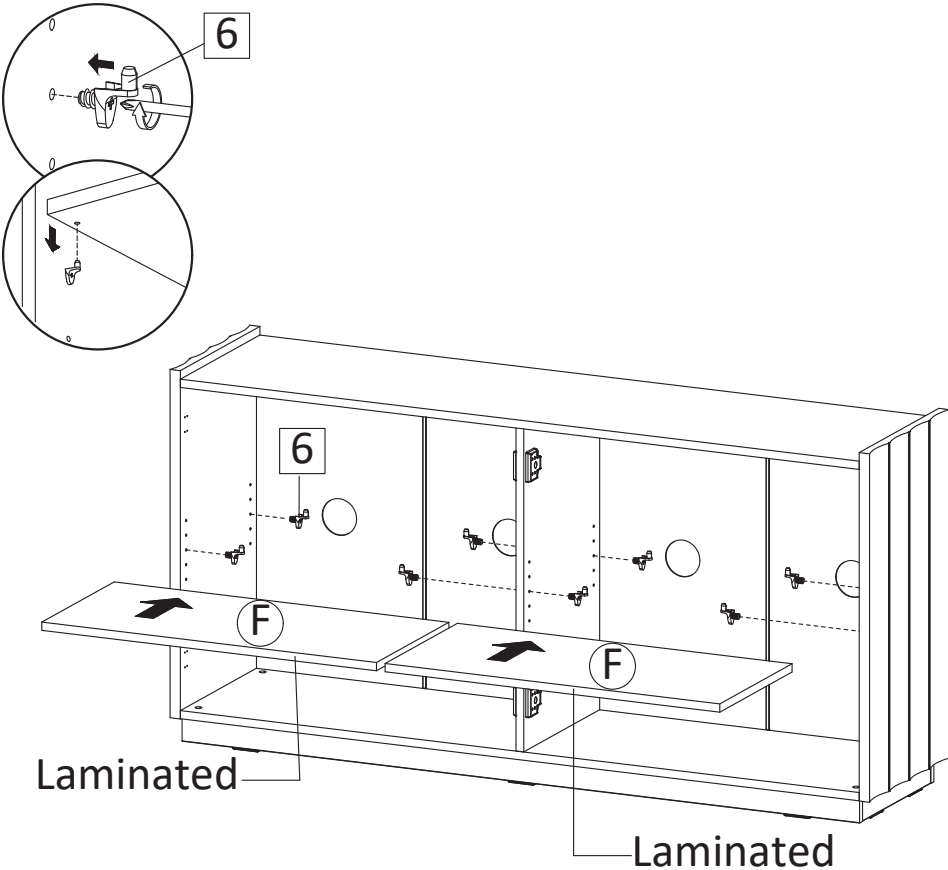

|                                                                                     |     |
|-------------------------------------------------------------------------------------|-----|
| HW6                                                                                 | x 8 |
|  |     |

**STEP15:** After positioning the product upright, insert Shelf Support (HW6) into the holes on the Side Board and Center Board at the desired level. Then, place the Adjustable Shelf (F) by aligning its hole with the Shelf Support (HW6) and inserting it securely.

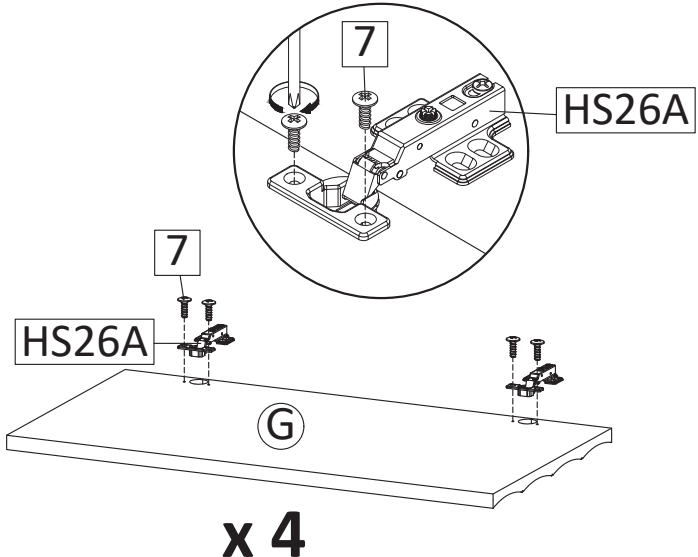

|                                                                                       |      |                                                                                       |     |
|---------------------------------------------------------------------------------------|------|---------------------------------------------------------------------------------------|-----|
| HW7                                                                                   | x 16 | HW HS26A                                                                              | x 8 |
|  |      |  |     |

**STEP16:** Place the Hinge (HW HS26A) into the Door (G). Secure it with Screw M4.5x12.5mm (HW7), then tighten using screwdriver.

# PREPARATION




\*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

\*If any part is missing or damaged, do not attempt to assemble the product.




\*Estimated Assembly Time: 60 minutes.

\*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)

\*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

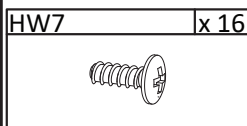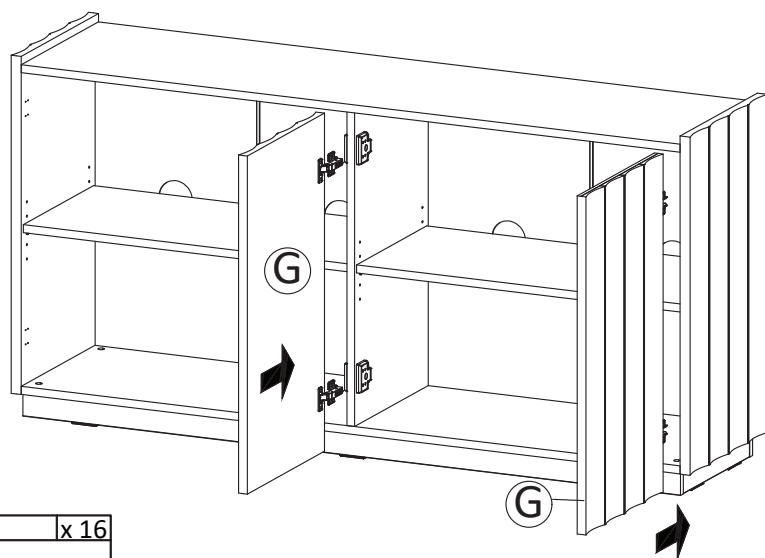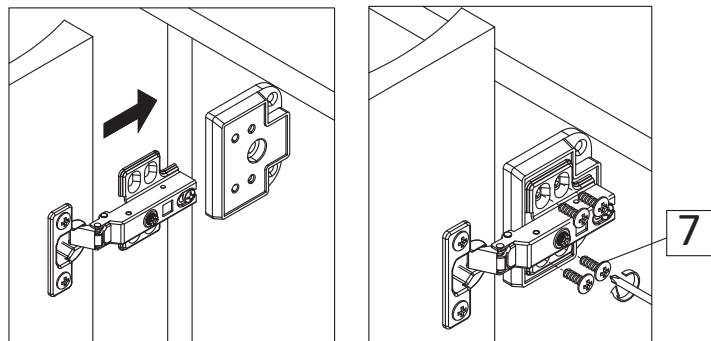


**STEP17:** Install Door (G) into the Center Board and the Side Board Right. Please refer to the images above for details. Secure it with Screw M4.5x12.5mm (HW7) and tighten using screwdriver. For additional guidance on hinge adjustment, please refer to the last page.

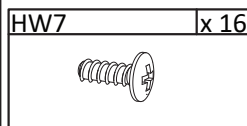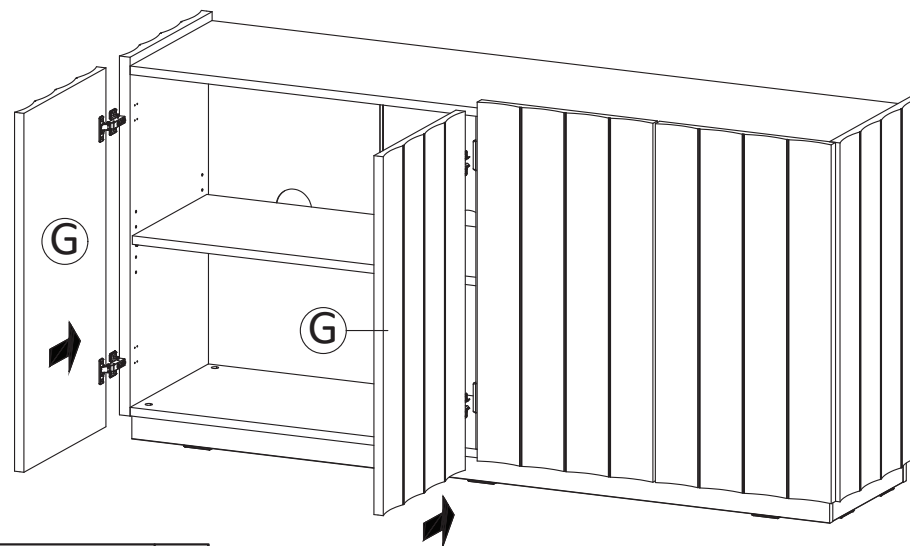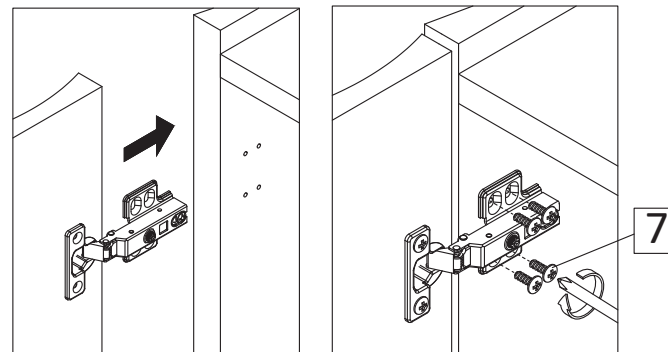

**STEP18:** Install Door (G) into the Center Board and the Side Board Left. Please refer to the images above for details. Secure it with Screw M4.5x12.5mm (HW7) and tighten using screwdriver. For additional guidance on hinge adjustment, please refer to the last page.


## PREPARATION

- \*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \*Estimated Assembly Time: 60 minutes.
- \*Tools Required for Assembly: Phillips Head Screwdriver (Not Included) & Allen Key (Included)
- \*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

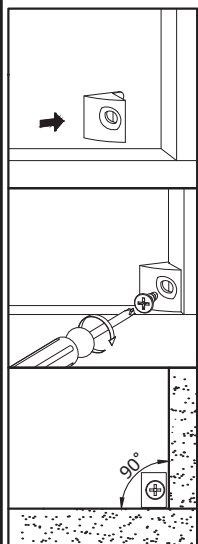

|                                                                                     |      |                                                                                     |      |
|-------------------------------------------------------------------------------------|------|-------------------------------------------------------------------------------------|------|
| HW10                                                                                | x 18 | HW11                                                                                | x 18 |
|  |      |  |      |

**STEP19:** Use the Wedge (HW11) and Screw M3.5x15.5mm (HW10) to secure the back of the Sideboard with screwdriver. Before tightening the Wedges (HW11), make sure the Top Board and Bottom Board are aligned at a 90° angle to the Sideboard.

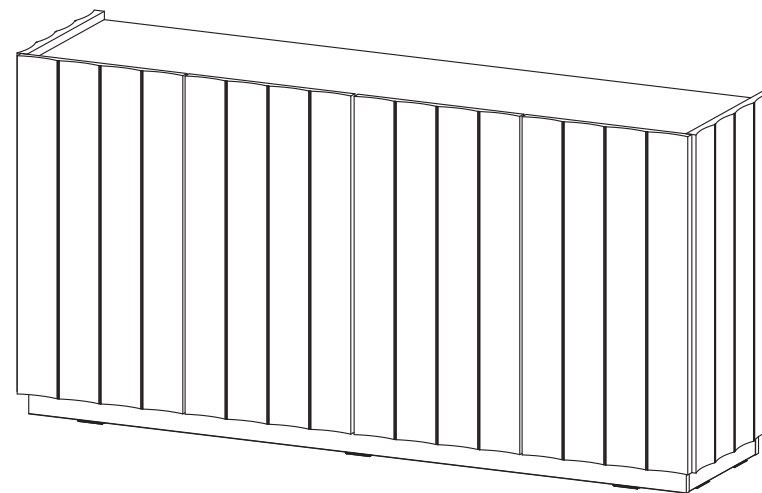





**STEP20:** Assembly is complete.

# TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.



The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

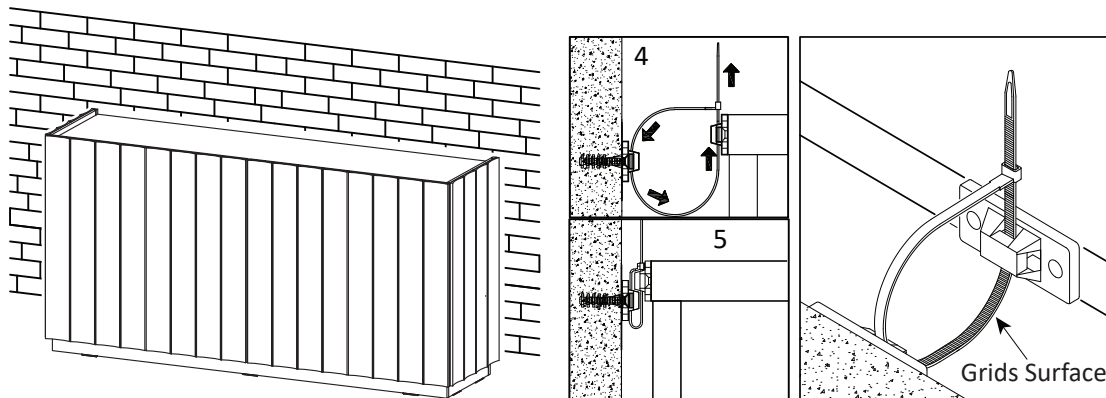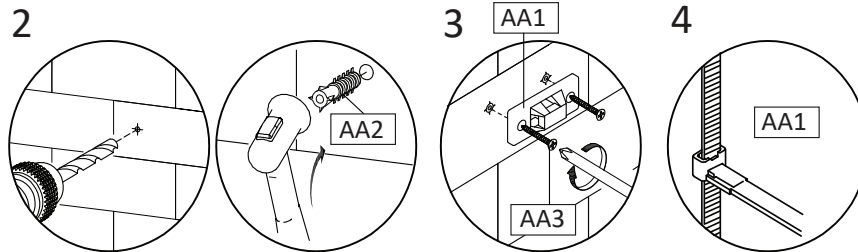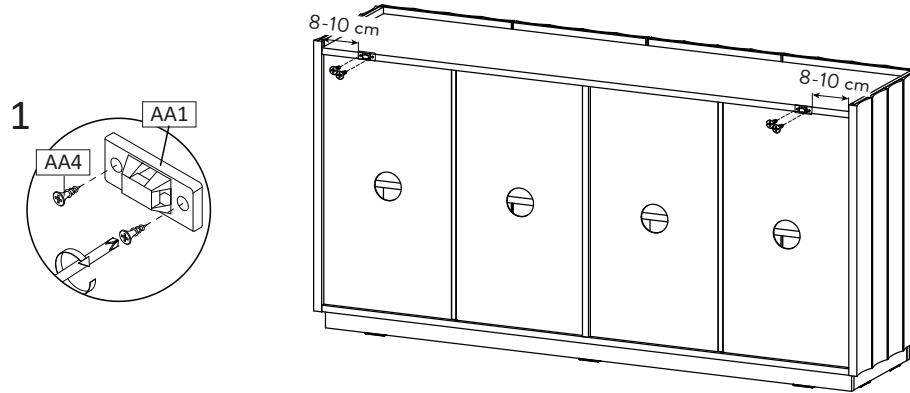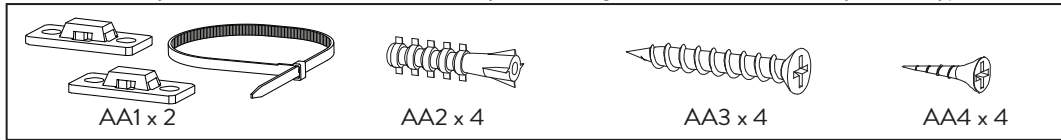


# HOW TO ADJUST HINGES

---

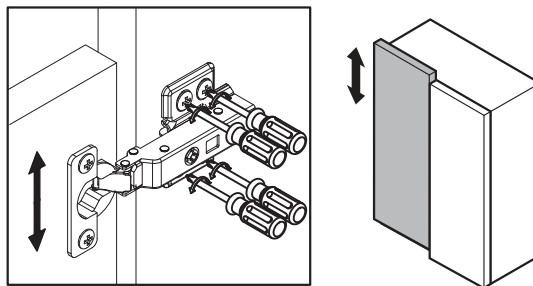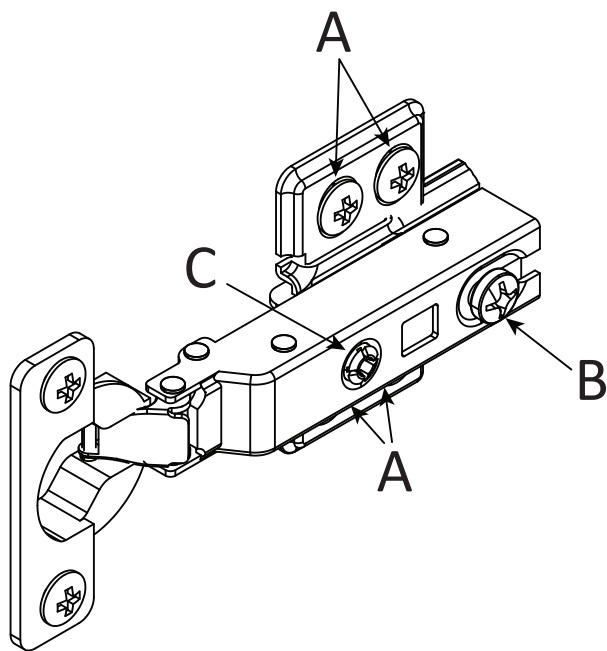


## To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

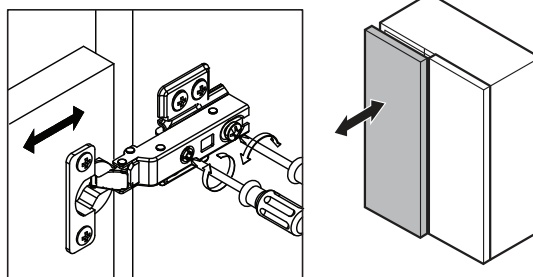

## To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

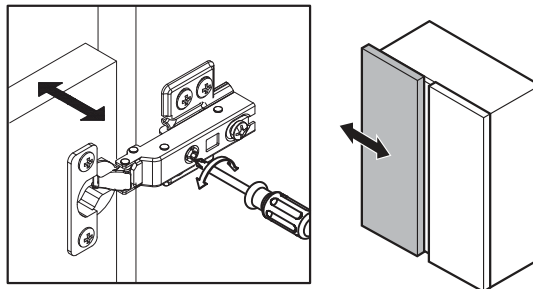

## To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.