

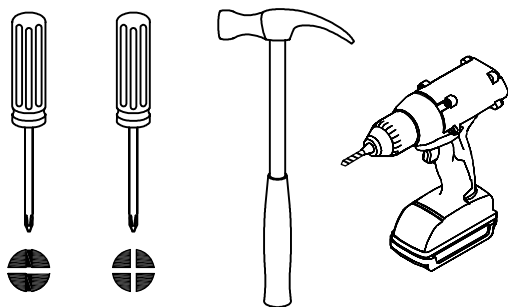


Owner Manual

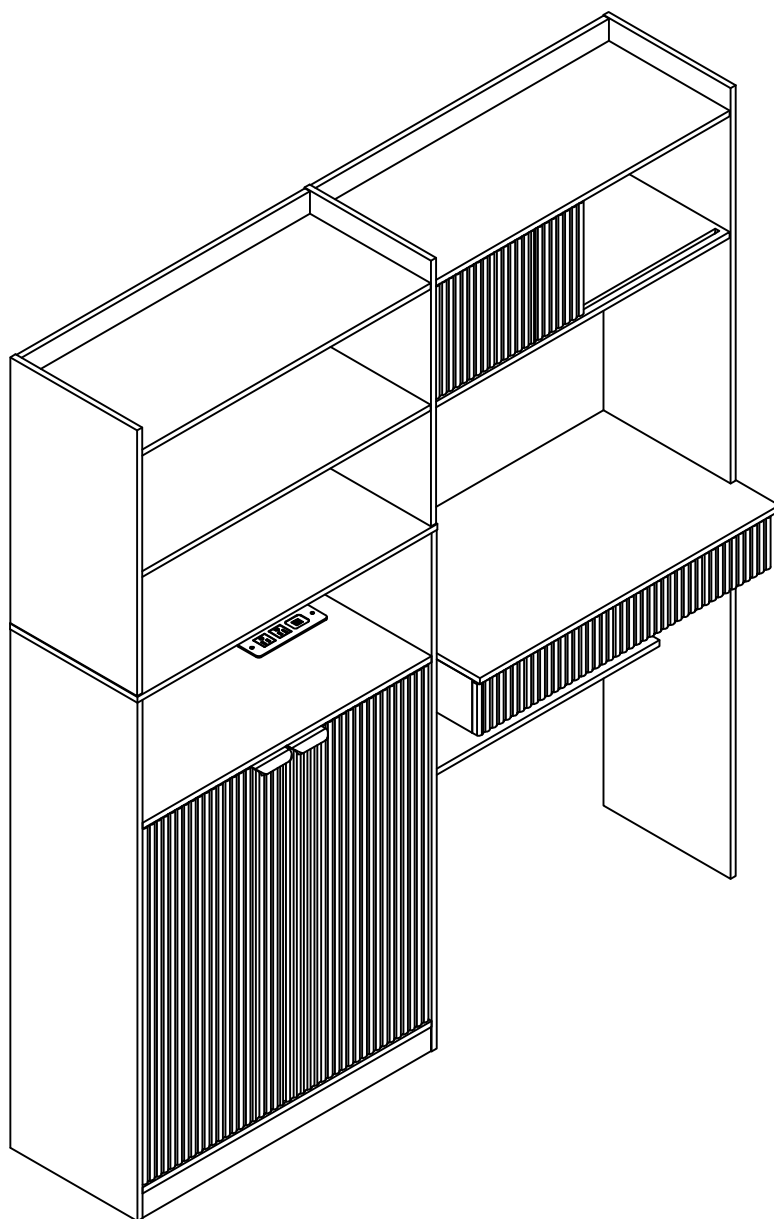

Tools required
(not included)

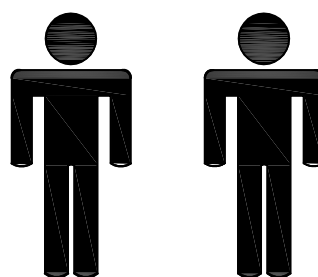

2 people for assembly




Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.

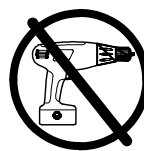

power drill is set on a low torque setting.

- To reduce the likelihood of damaging your product please ensure that your

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning - please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.
You will need to provide wall plugs and screws applicable for your wall type

Notes:

1. ASSEMBLY PREPARATION AND TIPS FOR ASSEMBLY

- 1). Remove all packaging materials, staples and packing straps from the carton.
- 2). Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly. Contact customer service for missing parts.
- 3). Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.
- 4). Allow ample room for assembly and assemble the product near where the product will be placed.
- 5). During assembly, do not over-tighten any fittings as this may cause damage.
- 6). Always place the product on a flat, level surface.

2. CARE AND MAINTENANCE

- 1). KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
- 2). Wipe clean with a soft, dry cloth; avoid the use of harsh chemicals or household cleaners as they may damage the exterior finish of the furniture.
- 3). Hardware may loosen over time. Periodically, check that all connections are tight; re-tighten as necessary.

3. TIPS TO PROTECT & CARE FOR YOUR FURNITURE

- 1). Avoid placing your furniture in direct sunlight, as sunlight causes fading.
- 2). Use a protective pad when writing on the furniture surface.
- 3). Use cutting boards and trivets for food preparation in order to avoid damaging the top for the unit.

WARNING




Children have died from furniture tip over.
To reduce the risk of furniture tip over:

- ALWAYS install tip over restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.




This is a permanent label.
Do not remove!































2-Person Assembly

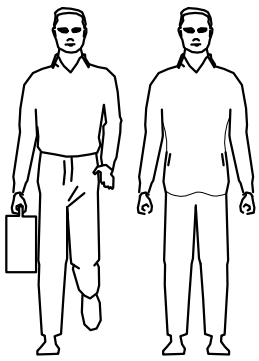






ASSEMBLY OVERVIEW

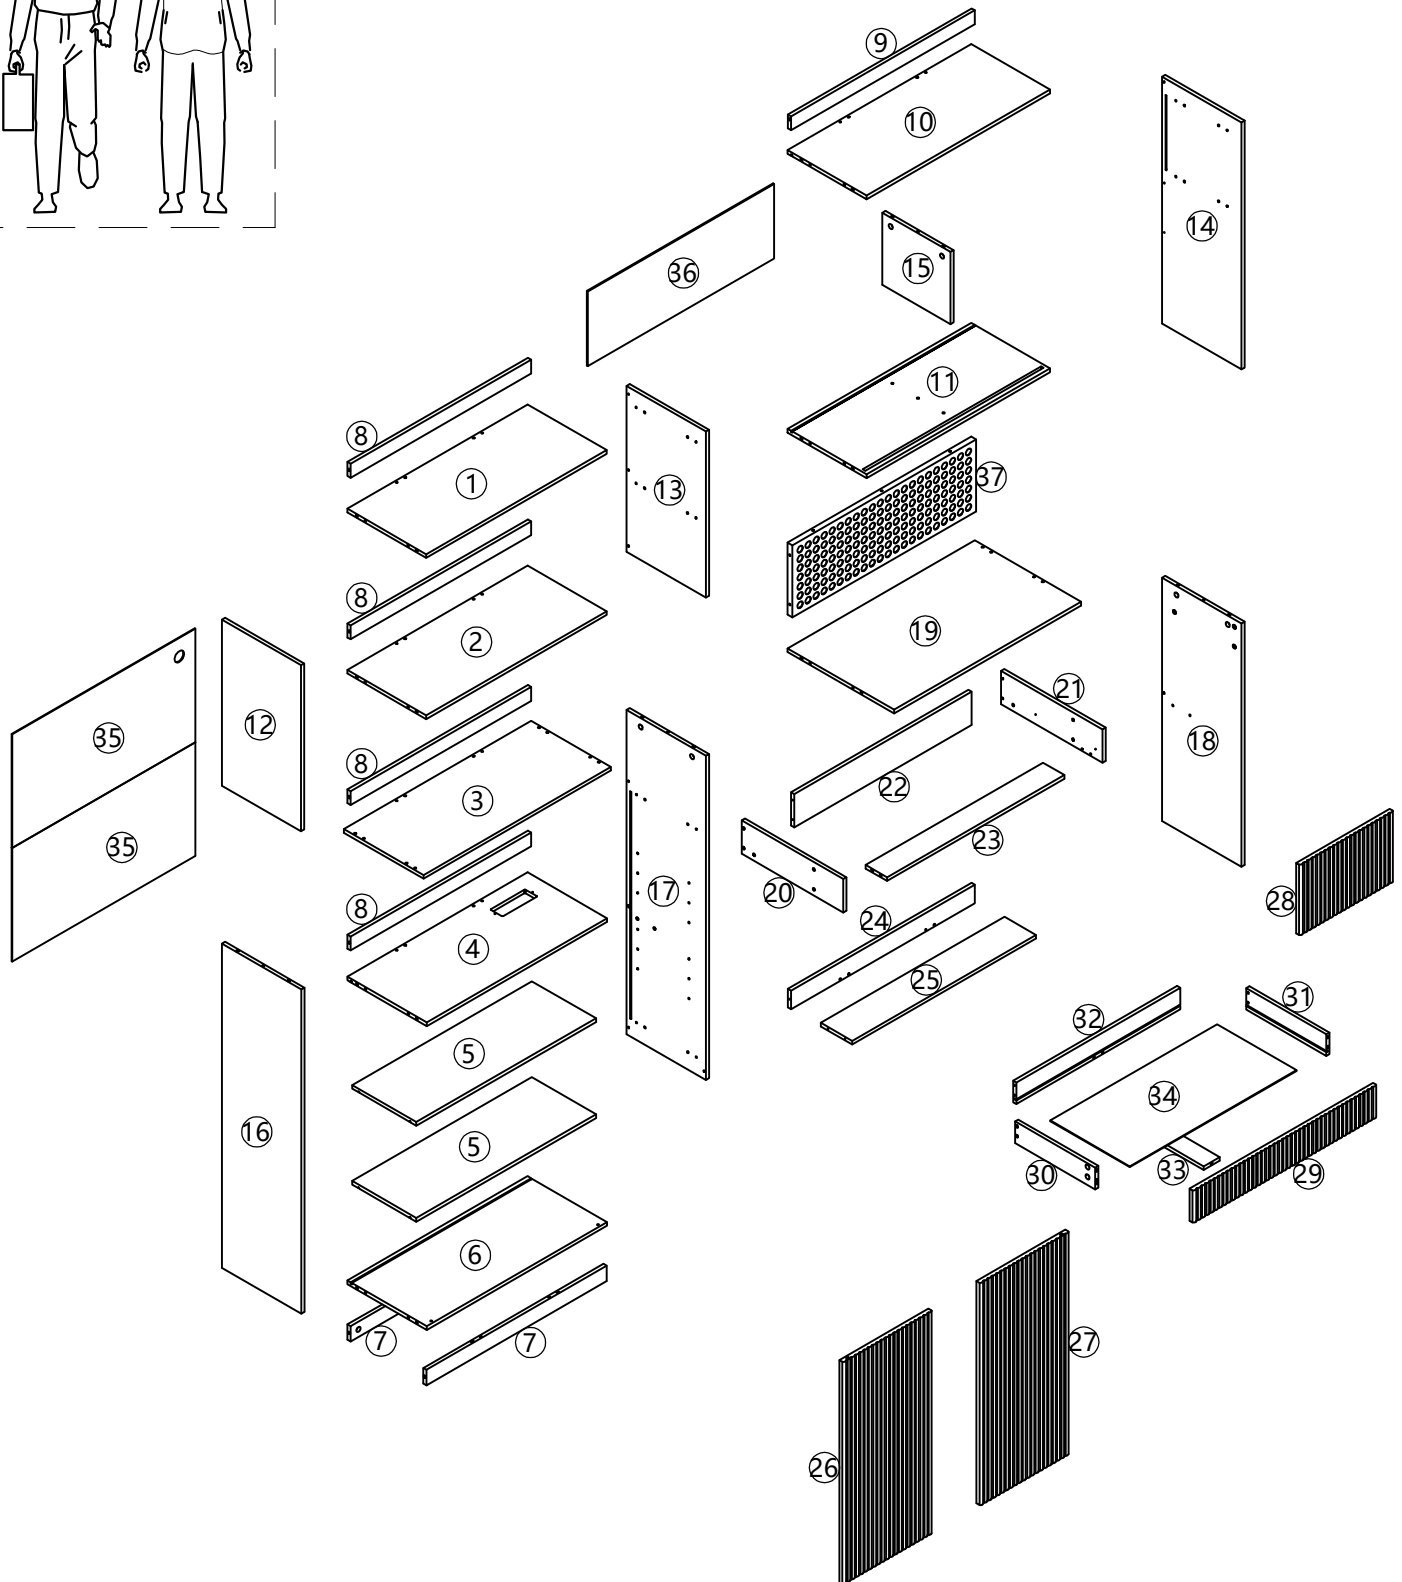




















PART LIST

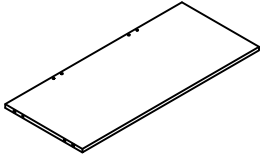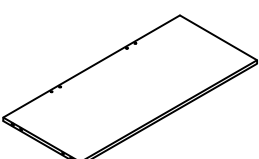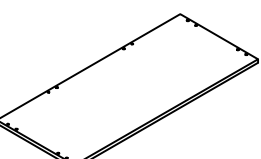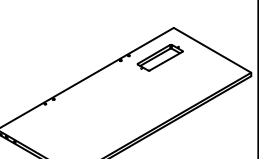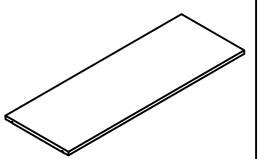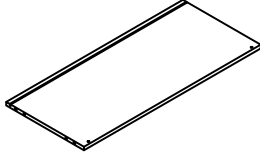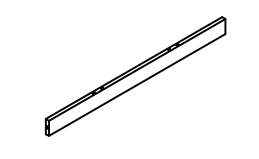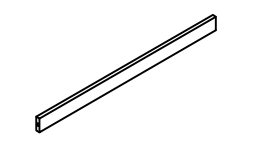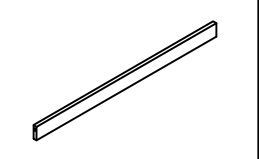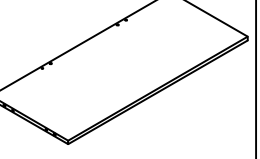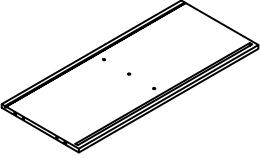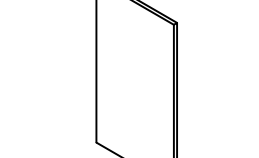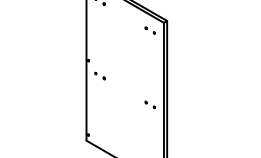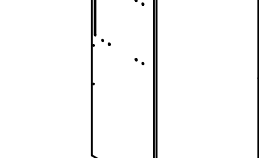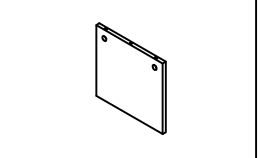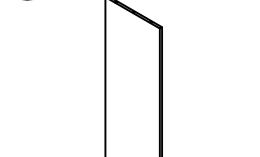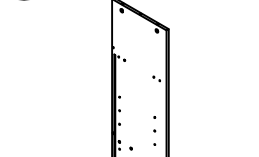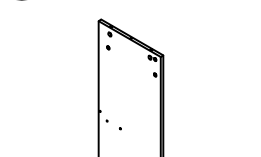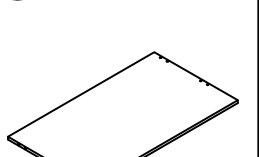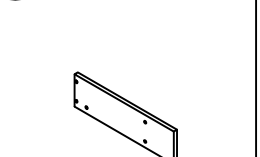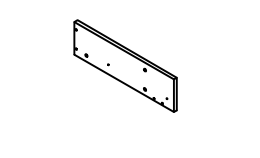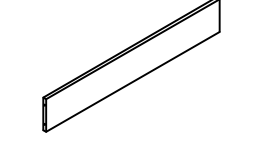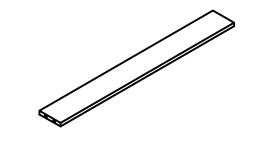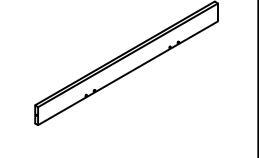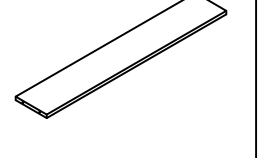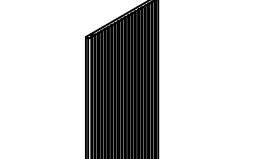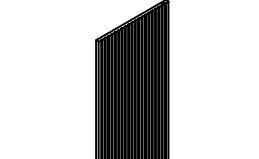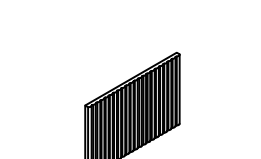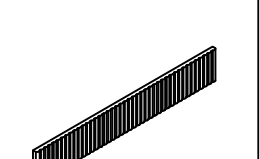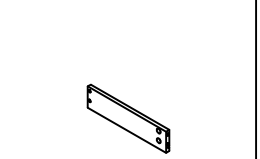① X1 PCS 	② X1 PCS 	③ X1 PCS 	④ X1 PCS 	⑤ X2 PCS 
⑥ X1 PCS 	⑦ X2 PCS 	⑧ X4 PCS 	⑨ X1 PCS 	⑩ X1 PCS 
⑪ X1 PCS 	⑫ X1 PCS 	⑬ X1 PCS 	⑭ X1 PCS 	⑮ X1 PCS 
⑯ X1 PCS 	⑰ X1 PCS 	⑱ X1 PCS 	⑲ X1 PCS 	⑳ X1 PCS 
㉑ X1 PCS 	㉒ X1 PCS 	㉓ X1 PCS 	㉔ X1 PCS 	㉕ X1 PCS 
㉖ X1 PCS 	㉗ X1 PCS 	㉘ X1 PCS 	㉙ X1 PCS 	㉚ X1 PCS 


PART LIST

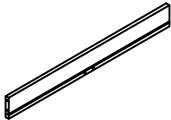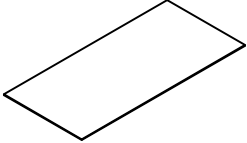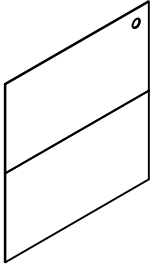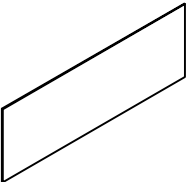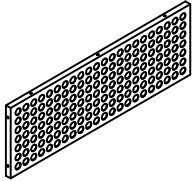③① X1 PCS 	③② X1 PCS 	③③ X1 PCS 	③④ X1 PCS 	③⑤ X1 PCS 
③⑥ X1 PCS 	③⑦ X1 PCS 			


HARDWARE LIST

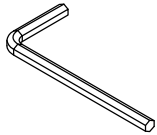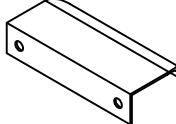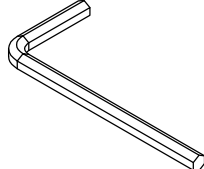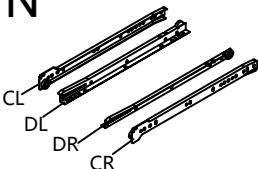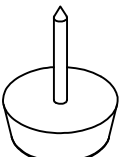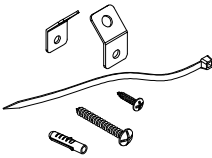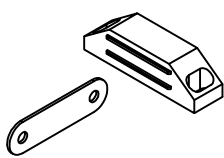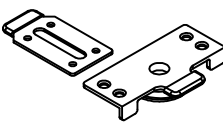A  $\varnothing 6 \times 35 \text{mm}$ 61 PCS (Extra 4)	B  $\varnothing 15 \times 10 \text{mm}$ 61PCS (Extra 4)	C  $\varnothing 6 \times 30 \text{mm}$ 53PCS (Extra 4)	D  $M5 \times 48 \text{mm}$ 26PCS (Extra 2)	E  S3 1PCS
F  $\varnothing 4 \times 40 \text{mm}$ 10 PCS (Extra 2)	G  2PCS	H  $M6 \times 15 \text{mm}$ 6 PCS (Extra 1)	I  S4 1PCS	J  8 PCS (Extra 2)
K  12 PCS (Extra 2)	L  $\varnothing 3 \times 16 \text{mm}$ 12 PCS (Extra 2)	M  $\varnothing 3.5 \times 12 \text{mm}$ 38 PCS (Extra 2)	N  12" 1 SET	O  $\varnothing 20 \text{mm}$ 26 PCS (Extra 2)
P  $\varnothing 12 \times 4 \text{mm}$ 8PCS (Extra 2)	Q  $\varnothing 3 \times 14 \text{mm}$ 4 PCS (Extra 2)	R  1 PCS	S  2 SET	T  5 PCS
U  1PCS	V  2PCS	W  2PCS	X  2PCS	Y  $\varnothing 12 \text{mm}$ 11 PCS (Extra 2)
Z  4 PCS (Extra 1)	AA  $\varnothing 3.5 \times 12 \text{mm}$ 9 PCS (Extra 2)			

Instructions For Fastening CAM-BOLT and CAM-LOCK




CAM-BOLT




CAM-LOCK


Tools Required




INSERTING AND TIGHTENING CAM-BOLT

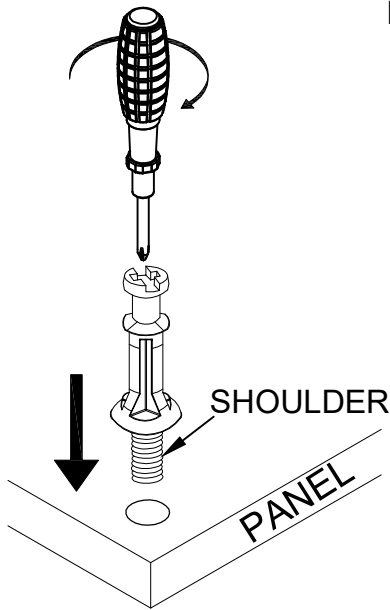

Place Cam-bolt on pre-drilled hole and screw in vertically

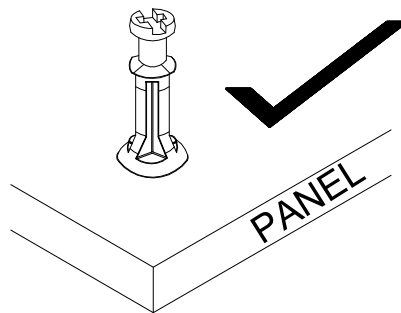


Shoulder is flushed (on the same level) with the panel.

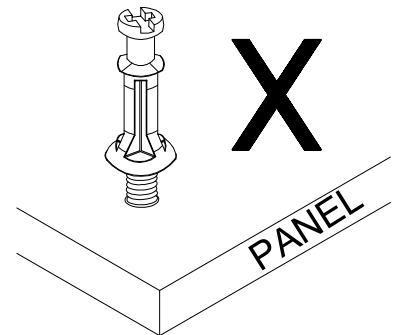


Shoulder is above the panel.

Place Cam-bolt on the designated pre-drilled holes on the panel. Use a Phillips Screwdriver to screw-in Cam-bolt vertically until shoulder is flushed (on the same level) with panel.


INSERTING CAM-LOCK

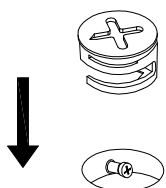

Insert Cam-lock with arrow align to Cam-bolt head

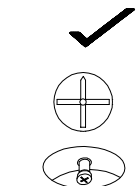


CORRECT

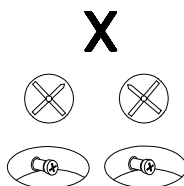

WRONG


Align the arrow on the Cam-lock to the Cam-bolt head and insert the Cam-lock. Ensure Cam-lock is fully inserted.

TIGHTENING CAM-LOCK

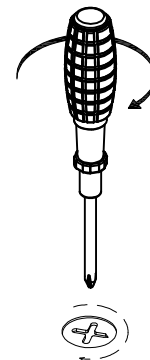

Use a Flat-head Screwdriver to turn Camlock clockwise so it locks onto the head of the Cam-bolt. Turn until it is snug (about 3/4ths of a turn) -- over-tightening could damage Cam-lock or/and Cam-bolt.


Step 1.



C x4





F x4





R x1





Y x4

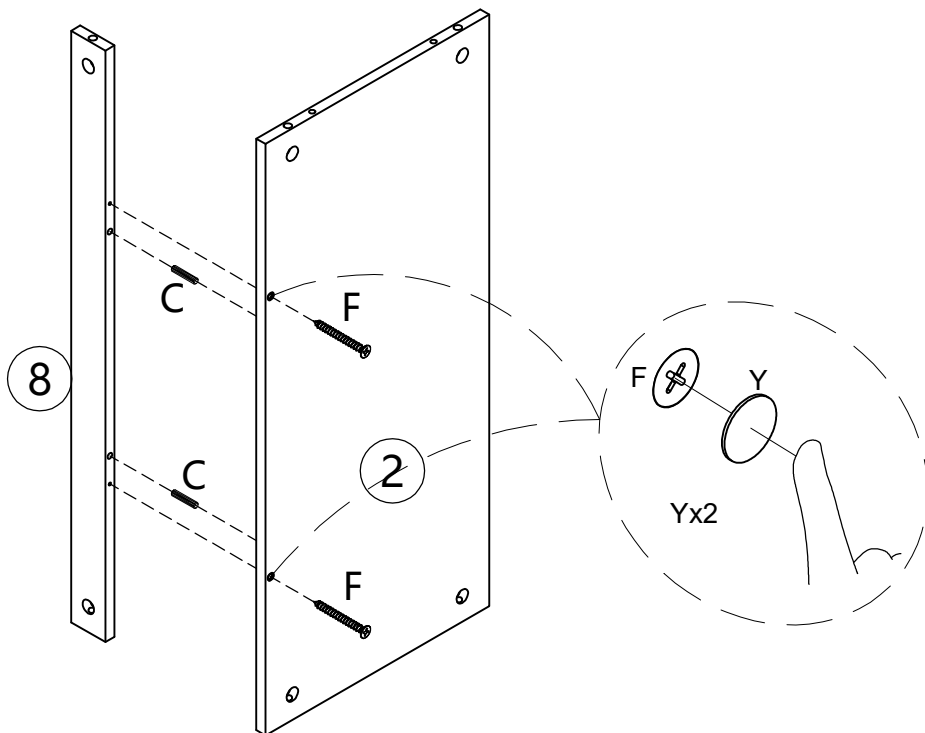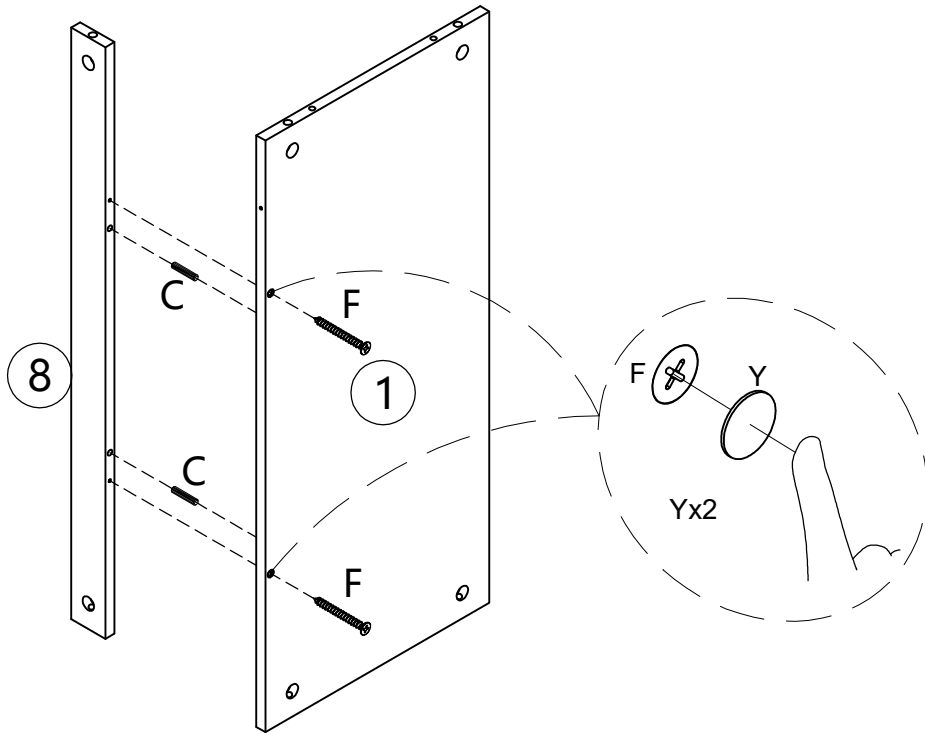

Step 2.


				
A x14	B x7	C x4	R x1	O x4

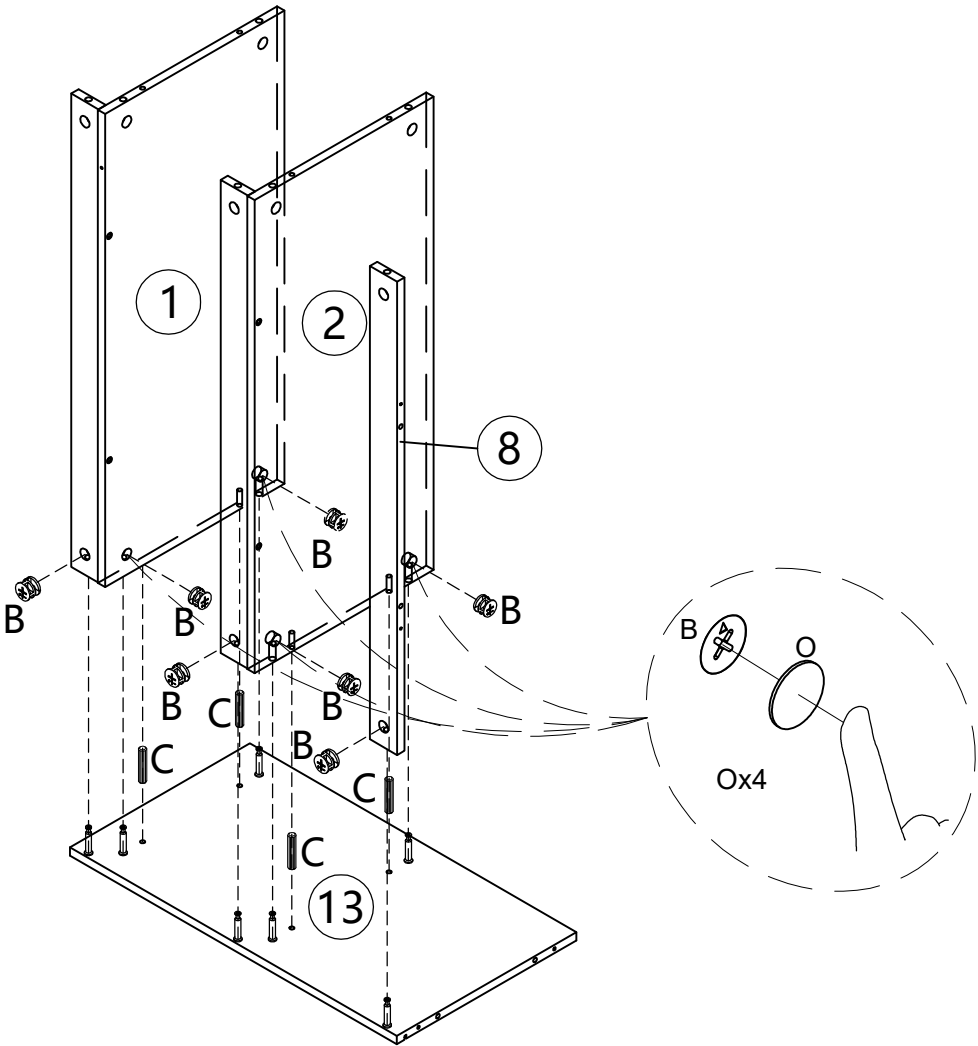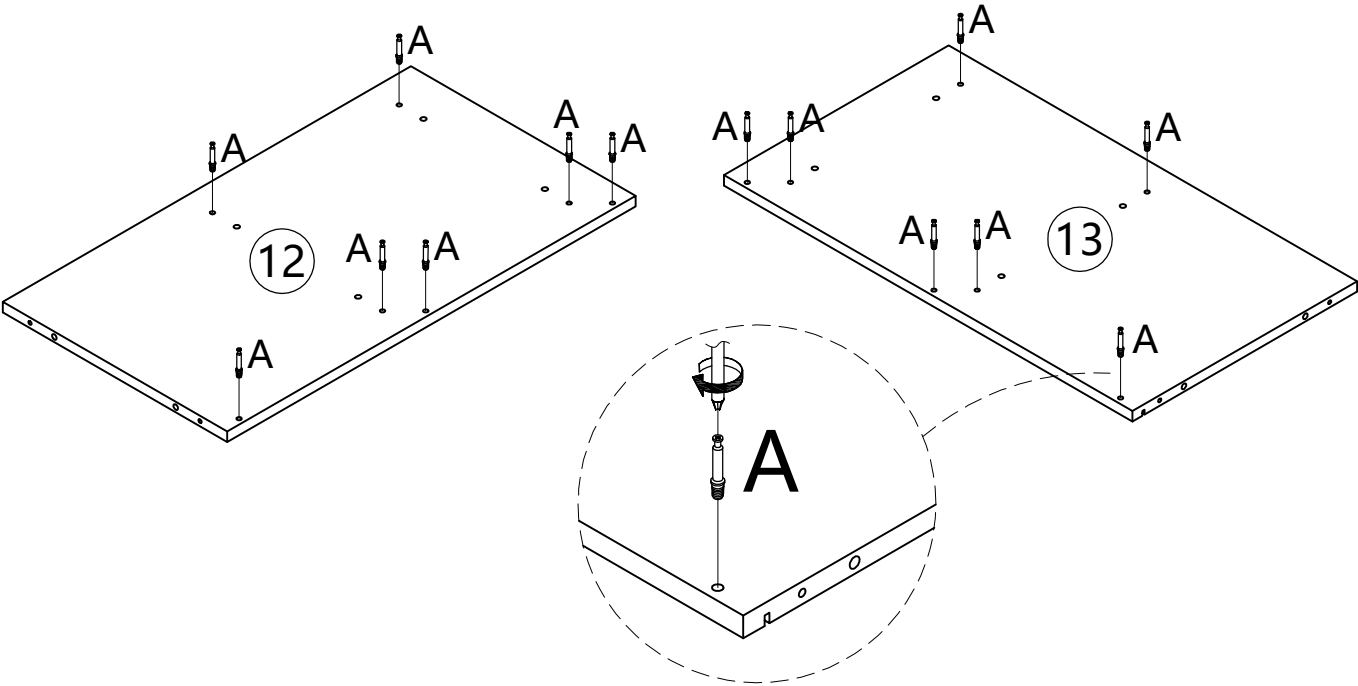


Step 3.



B x7




C x4





R x1







O x4

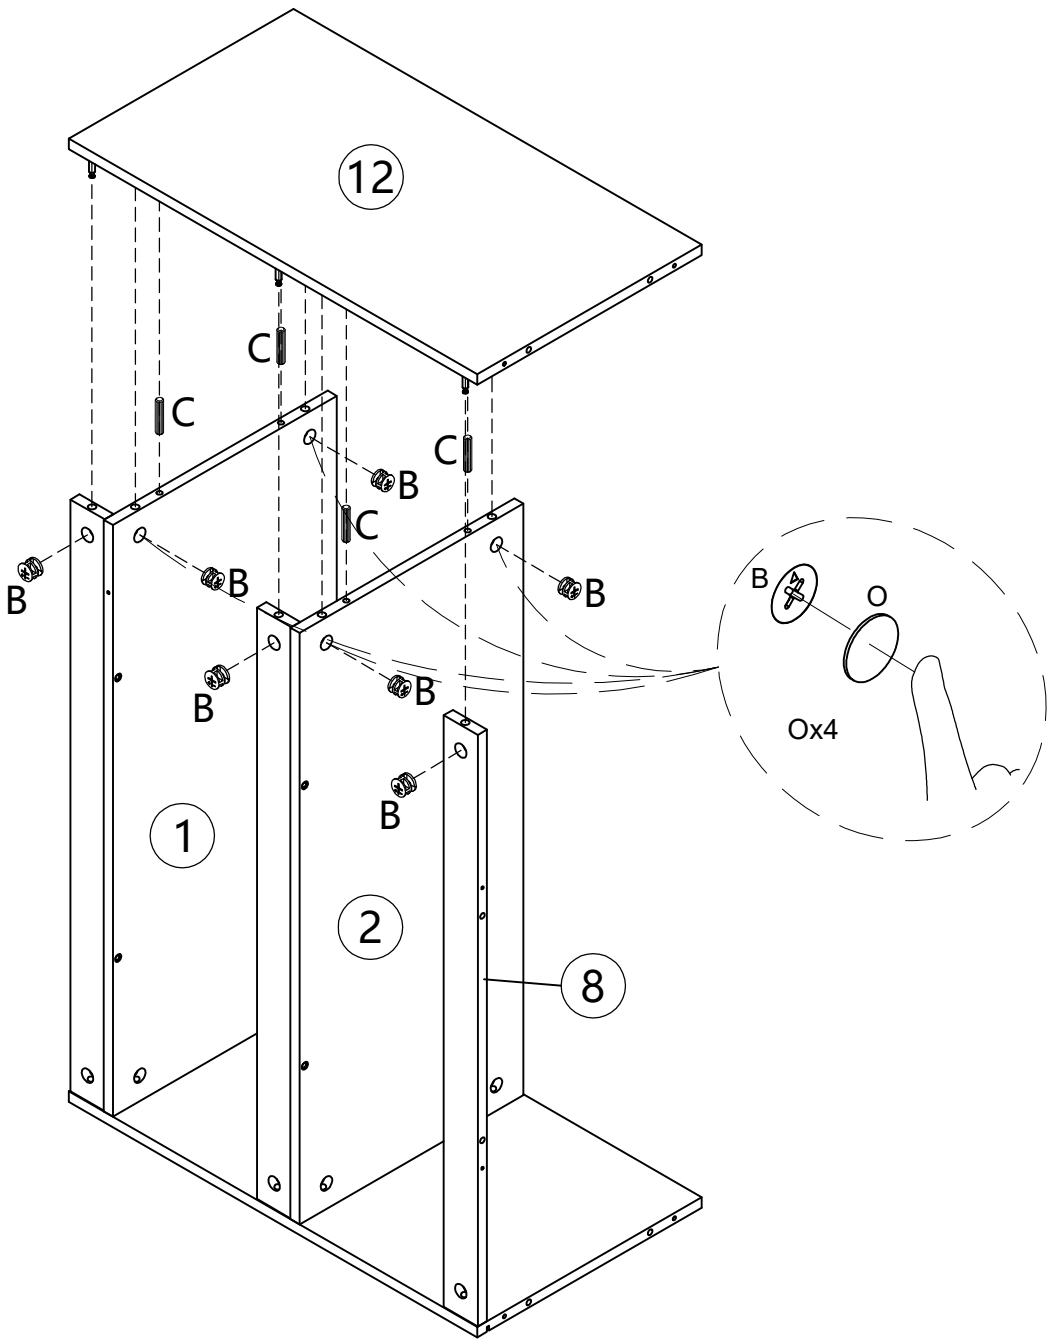


Step 4.

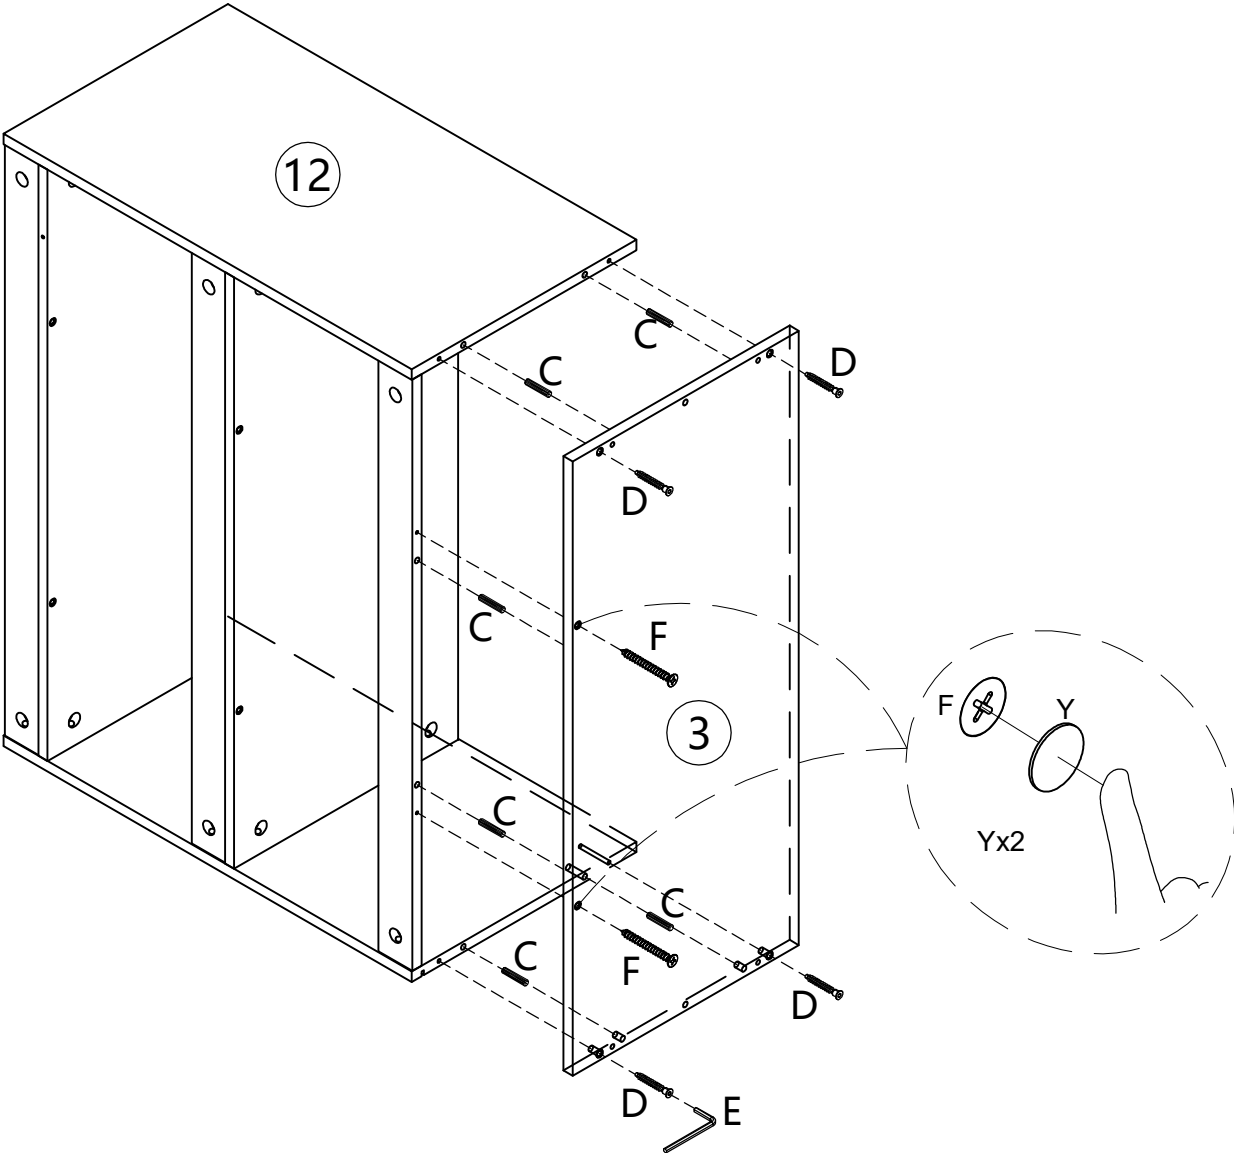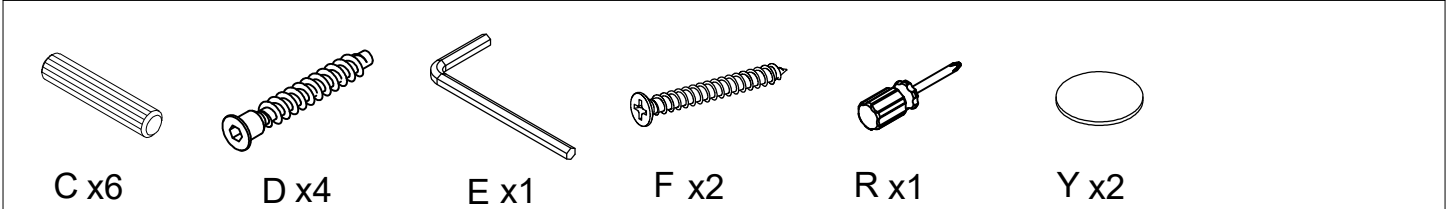


Step 5.



			
A x4	Q x4	V x2	R x1

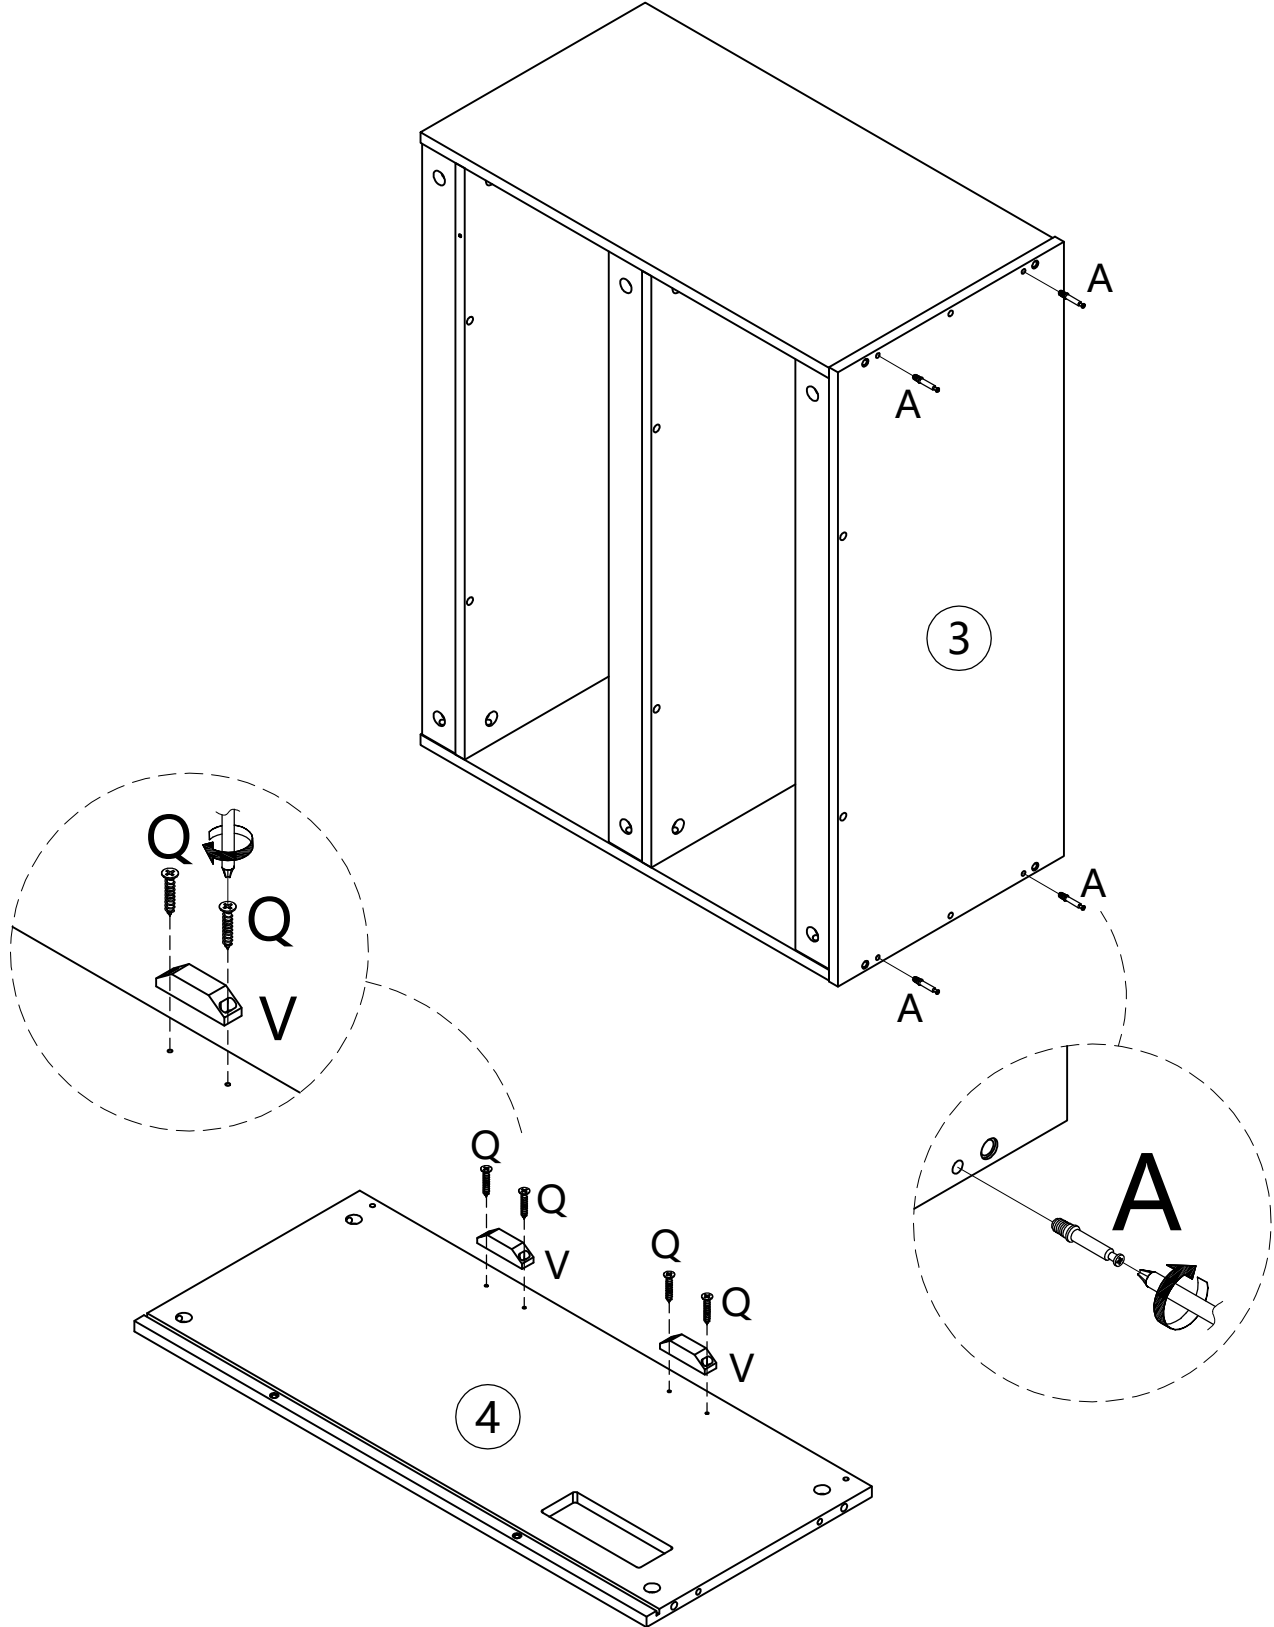

Step 6.

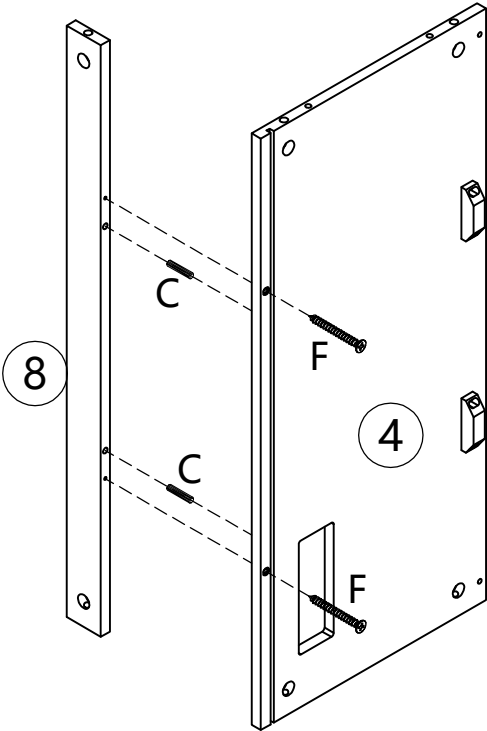


Step 7.

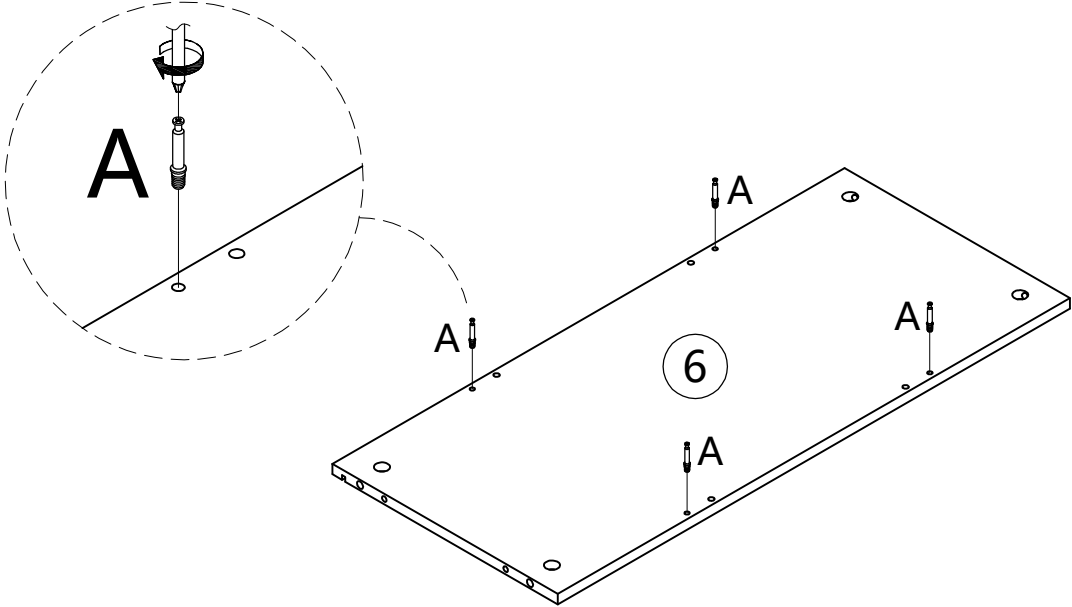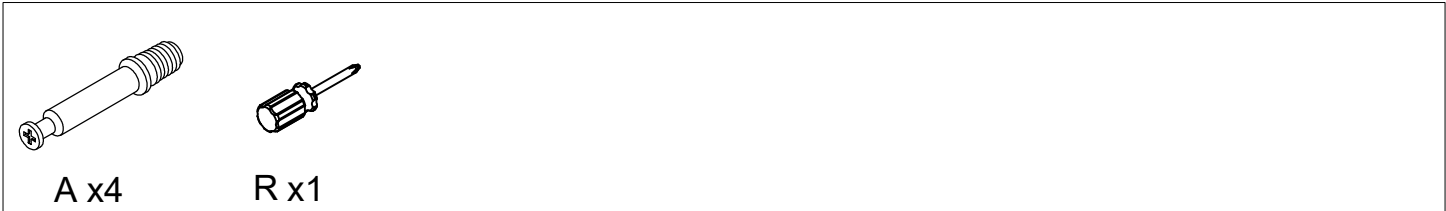


Step 8.




B x4




C x4




R x1

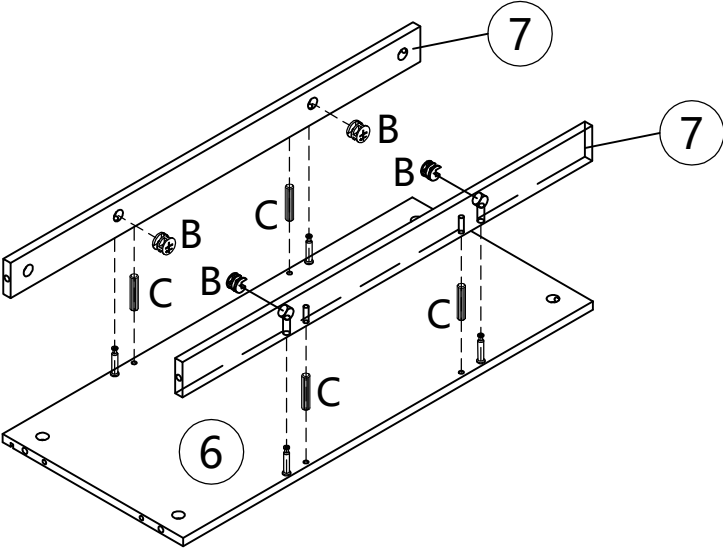


Step 9.



A x14




R x1

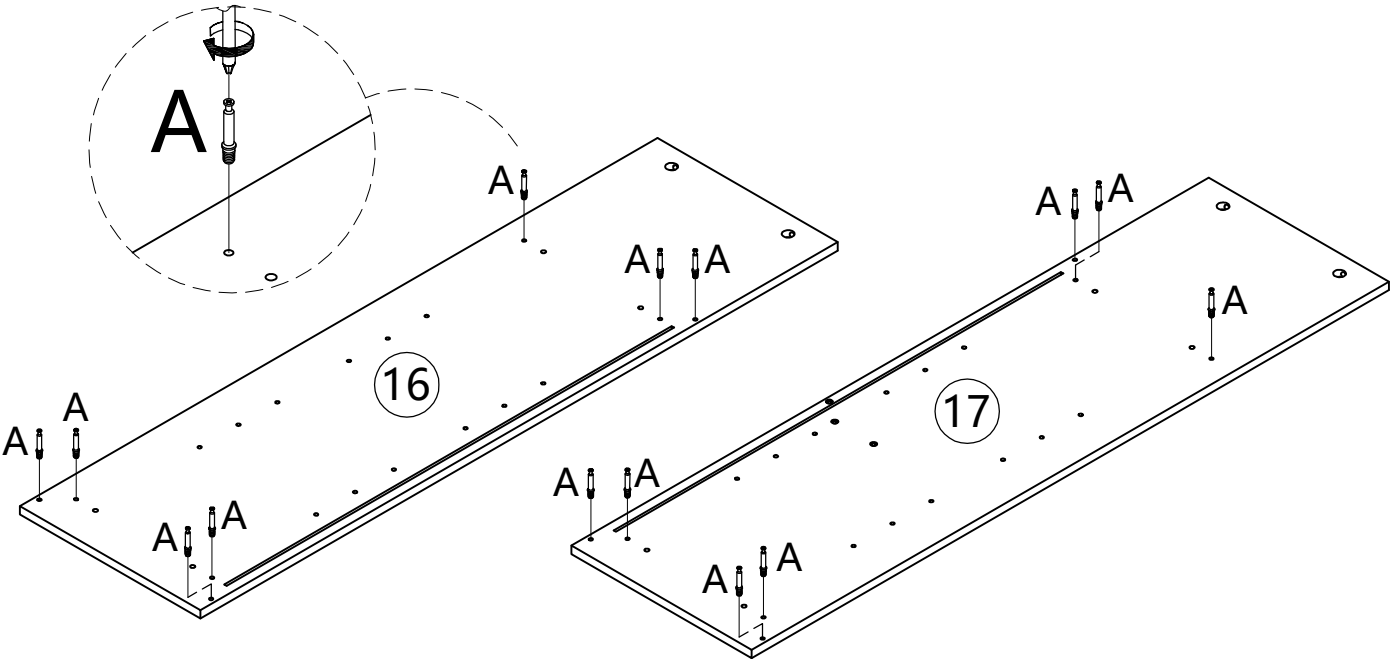


Step 10.




B x7




C x4



R x1

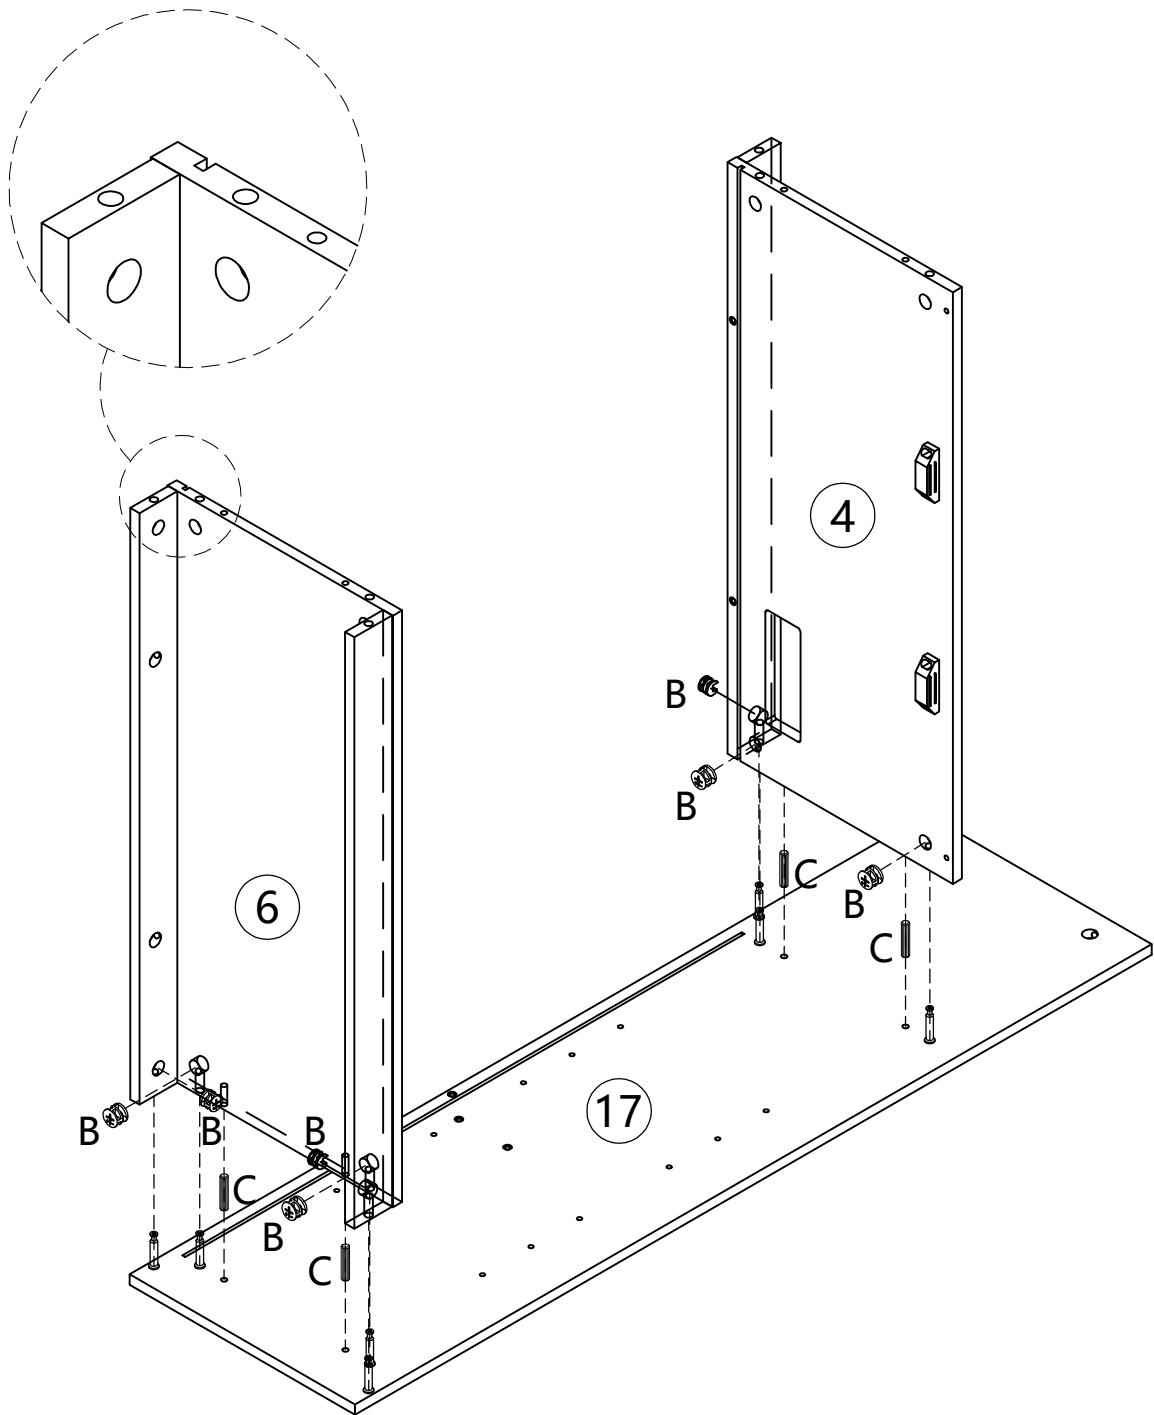


Step 11.

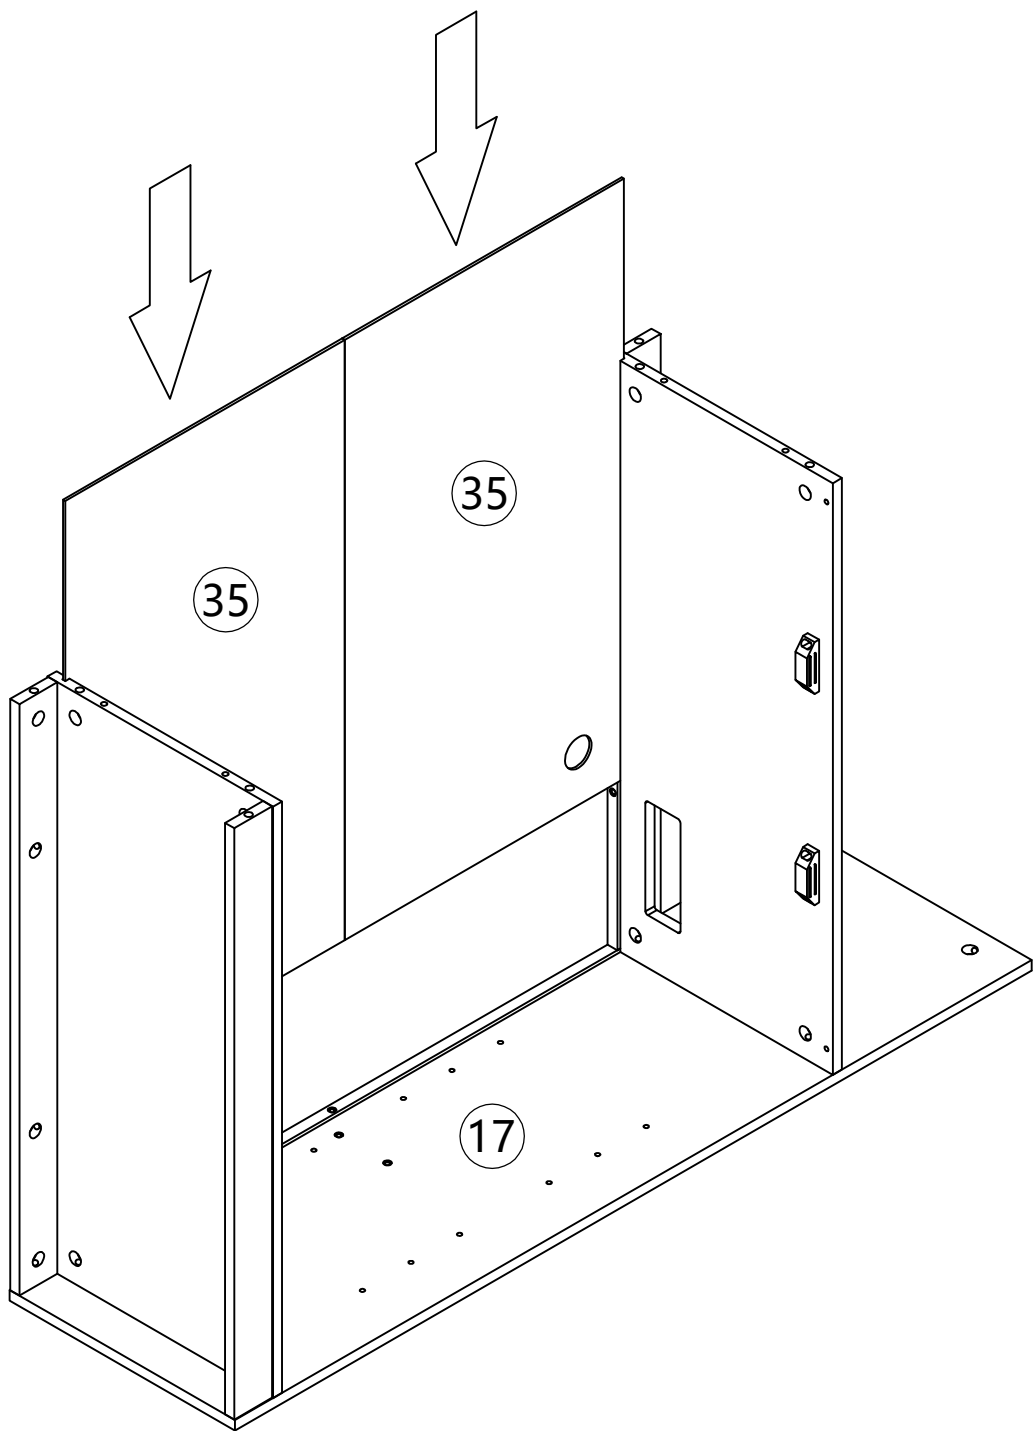


Step 12.




B x7



C x4




R x1

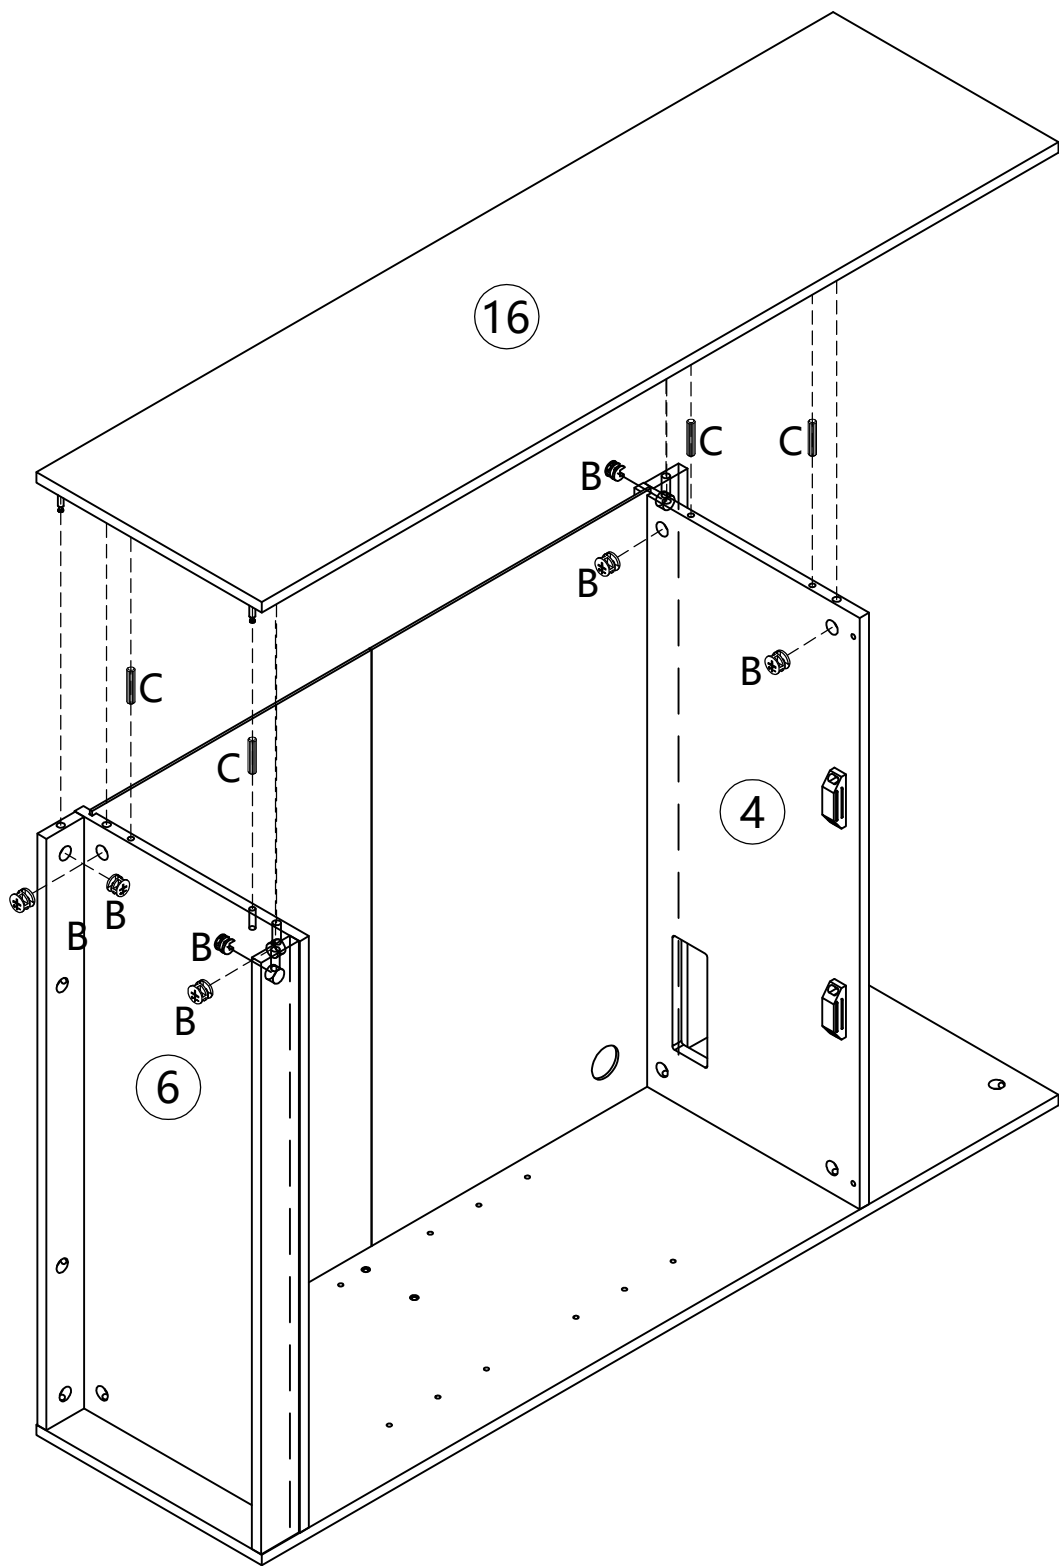


Step 13.



B x4




C x2




R x1




O x4

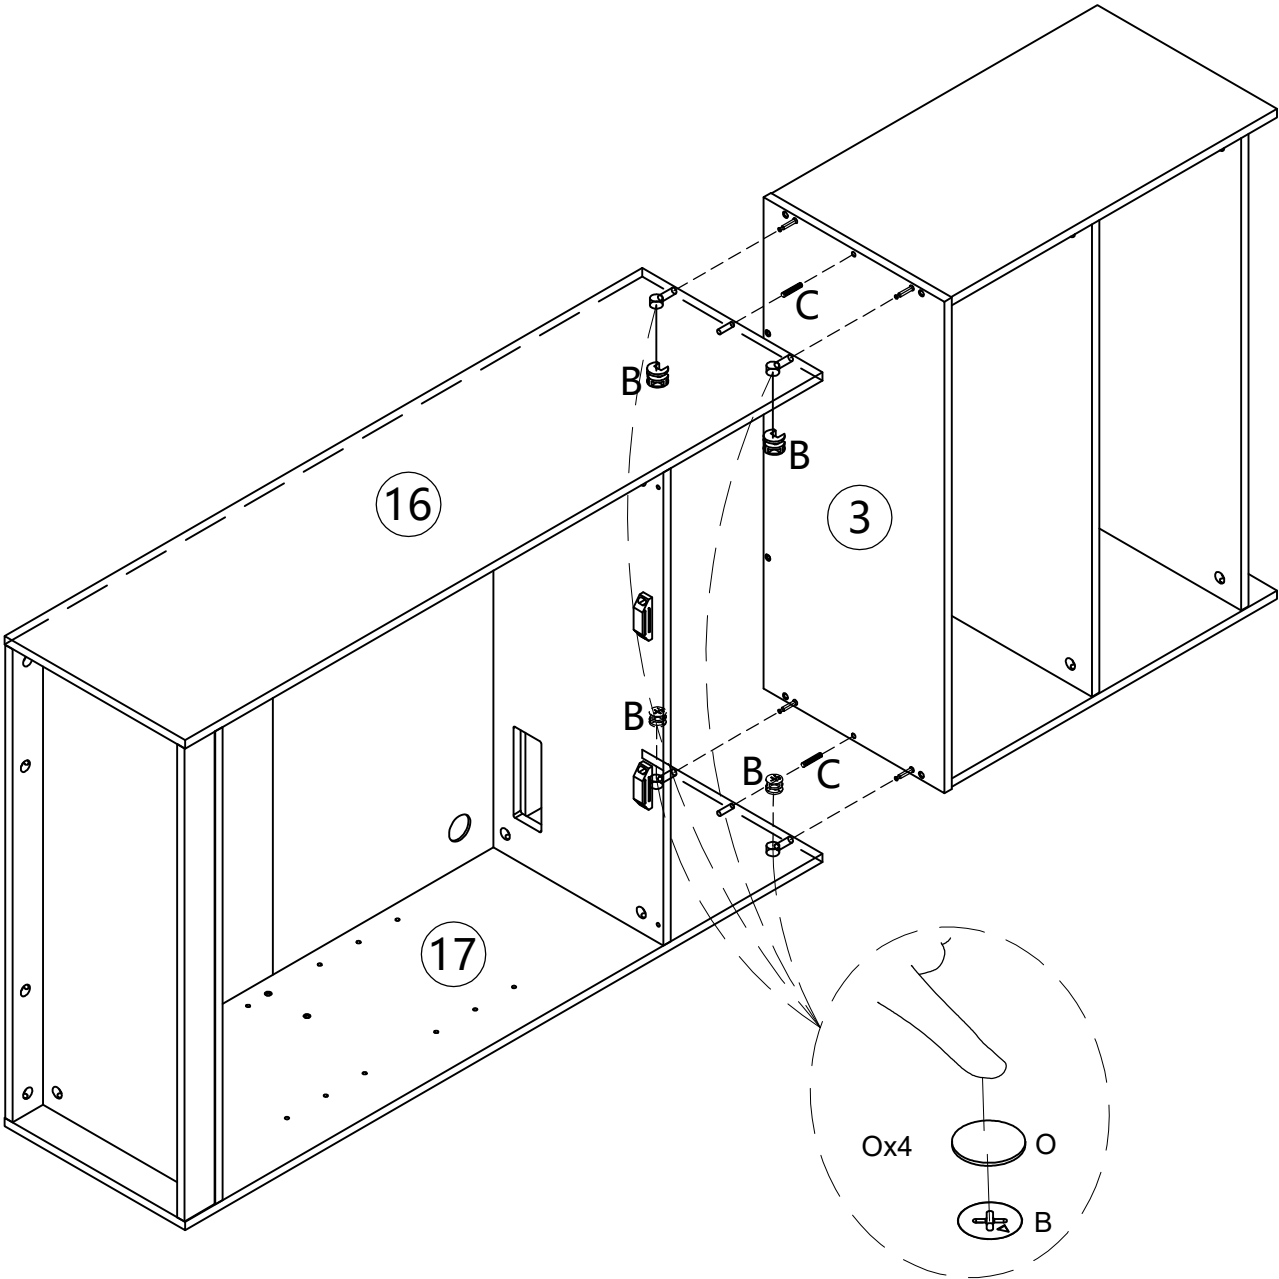


Step 14.




A x7





R x1

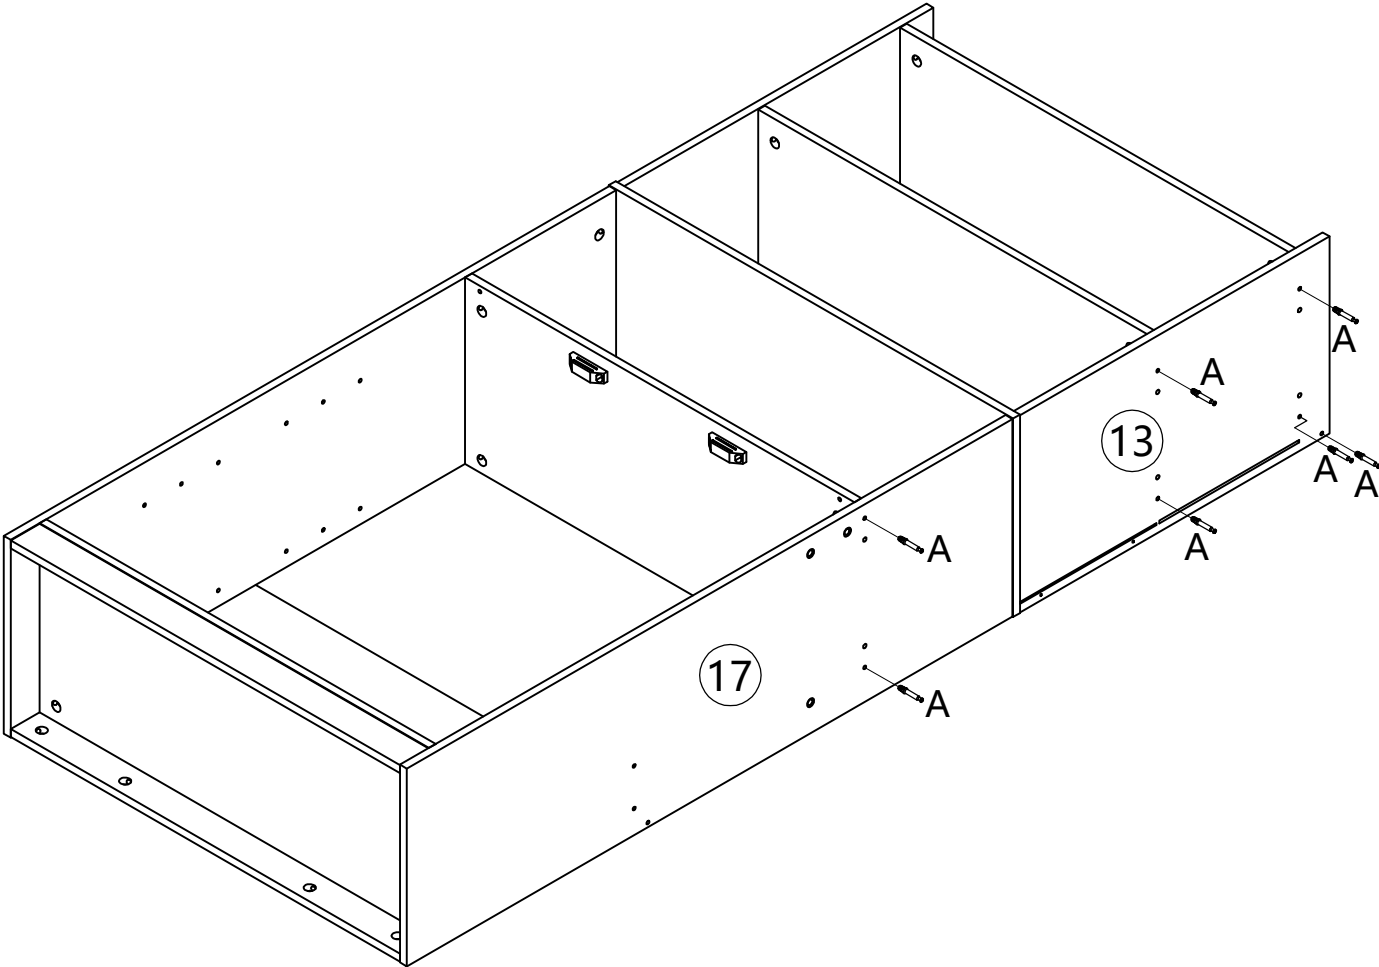


Step 15.




Mx16


$$W_{x2}$$



R x1

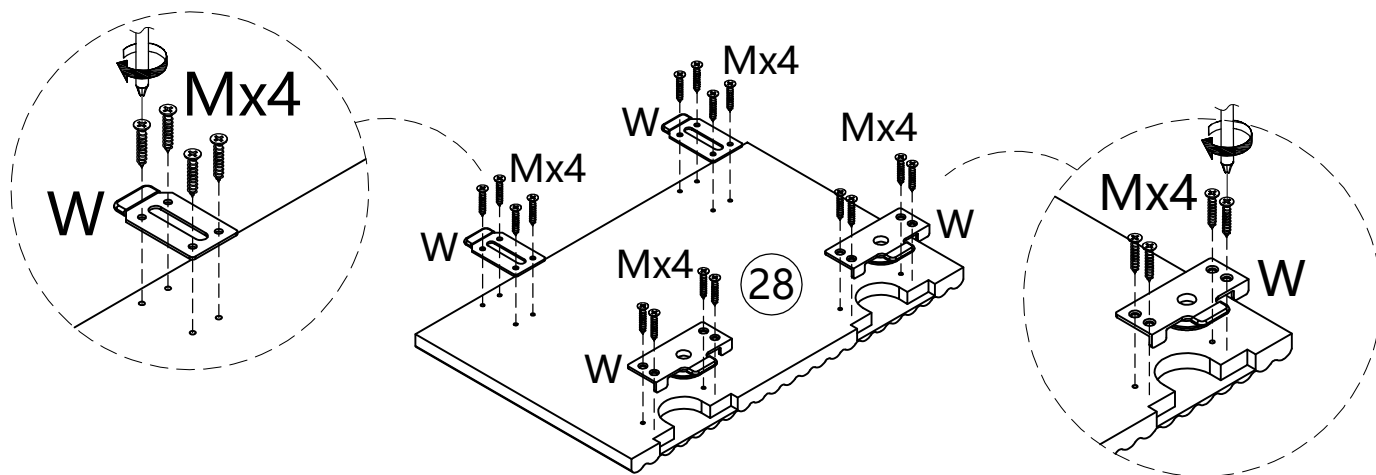


Step 16.





$A \times 2$





R x1

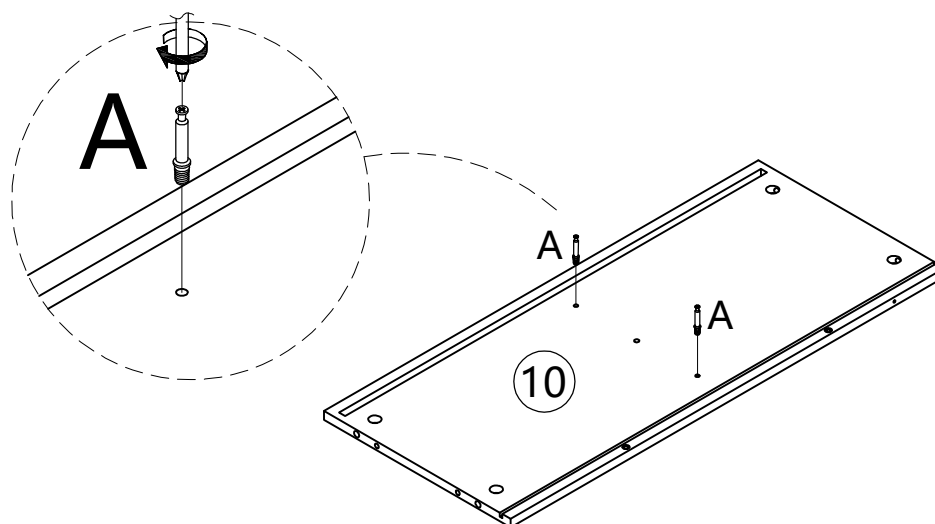



Step 17.

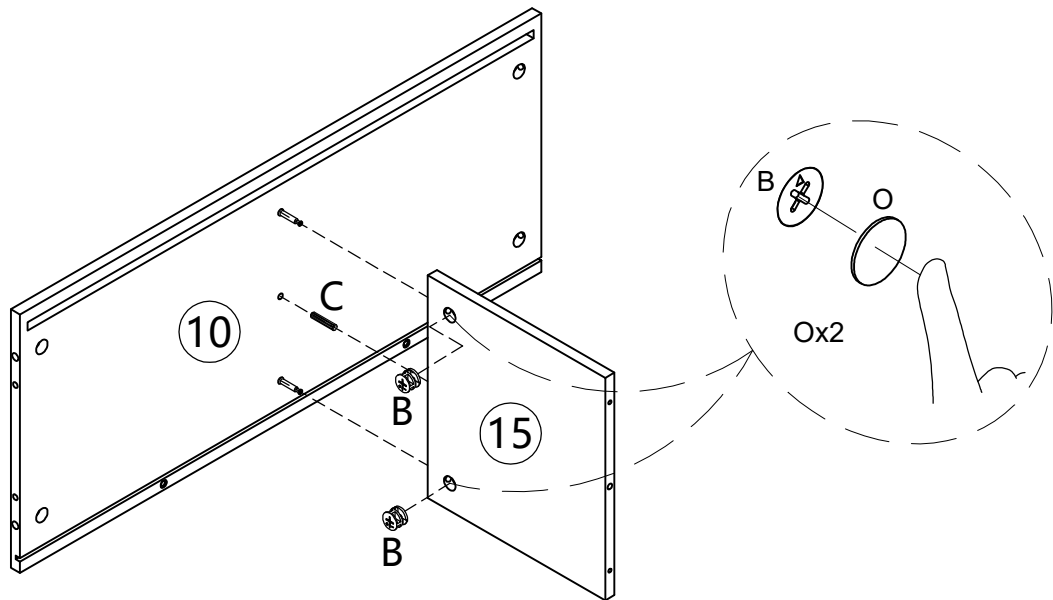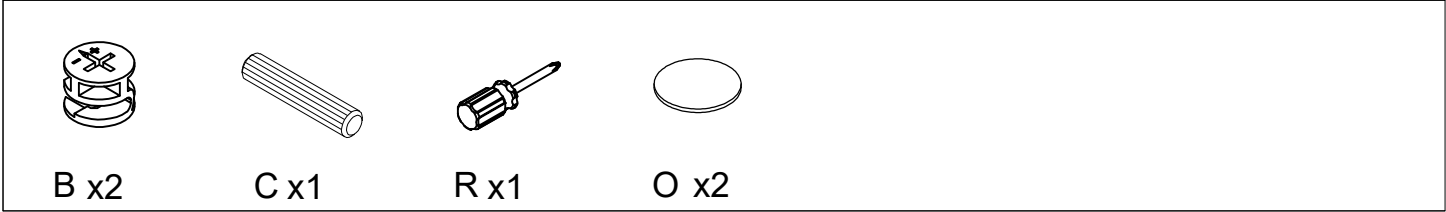


Step 18.

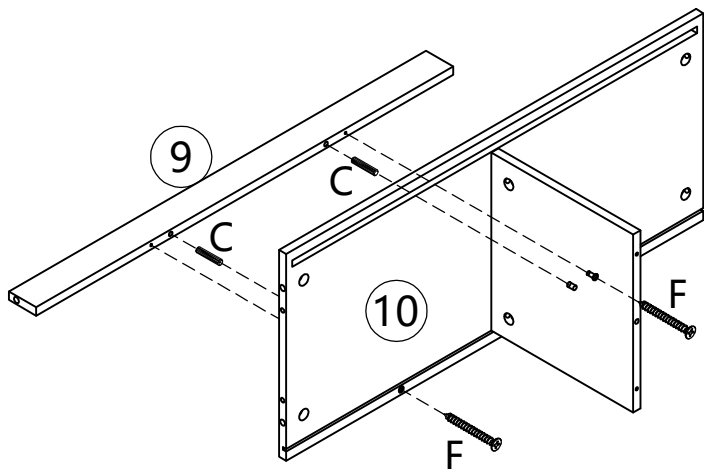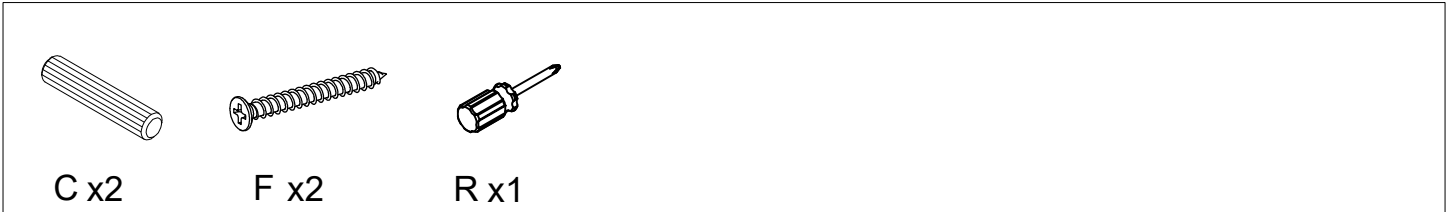


Step 19.

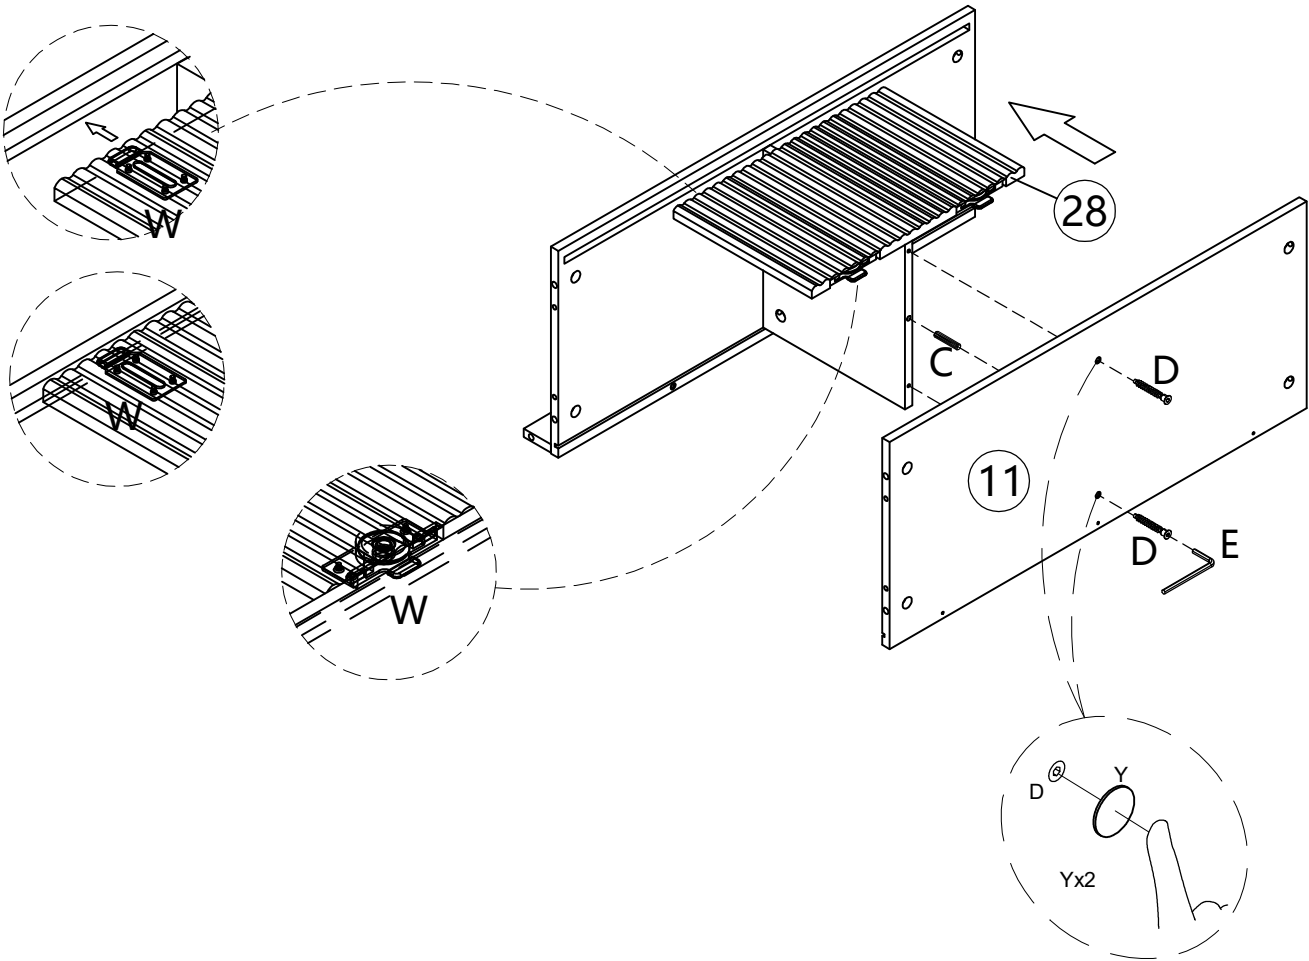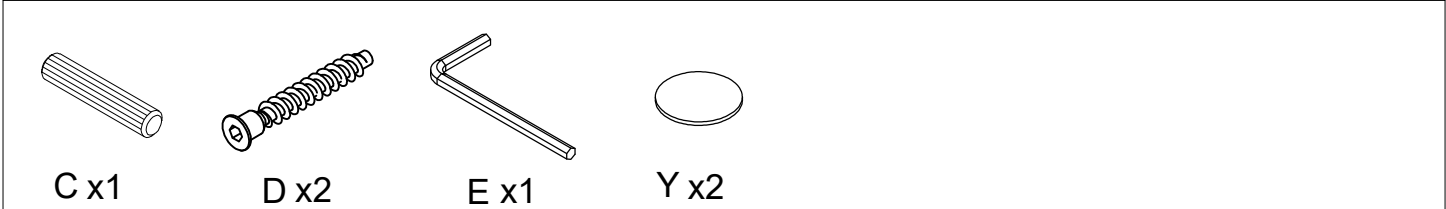


Step 20.



A x5




R x1

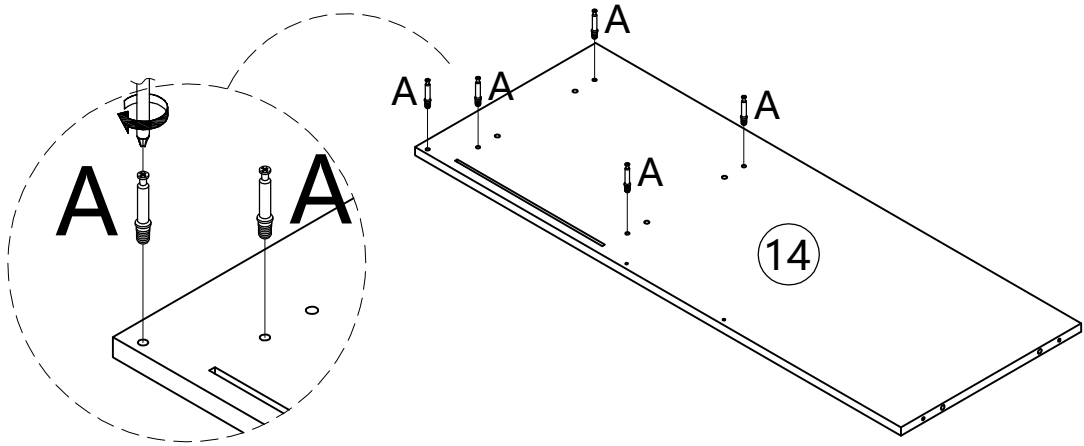


Step 21.



B x4




C x4





R x1



O x4

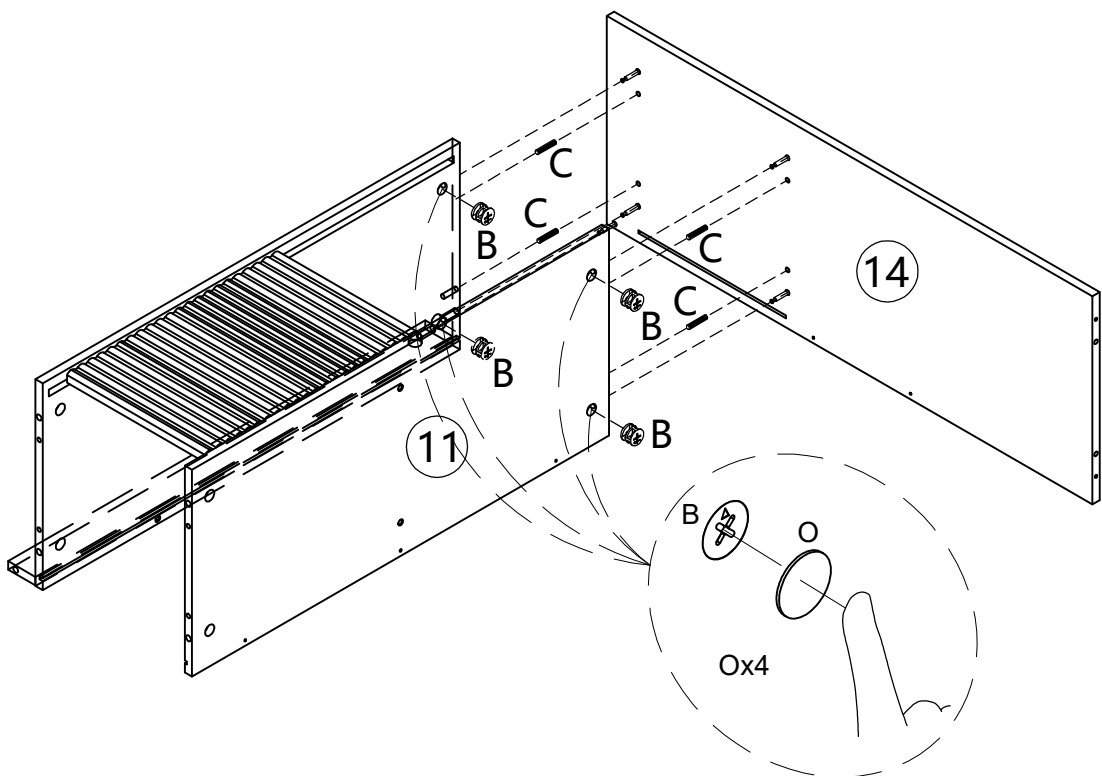


Step 22.

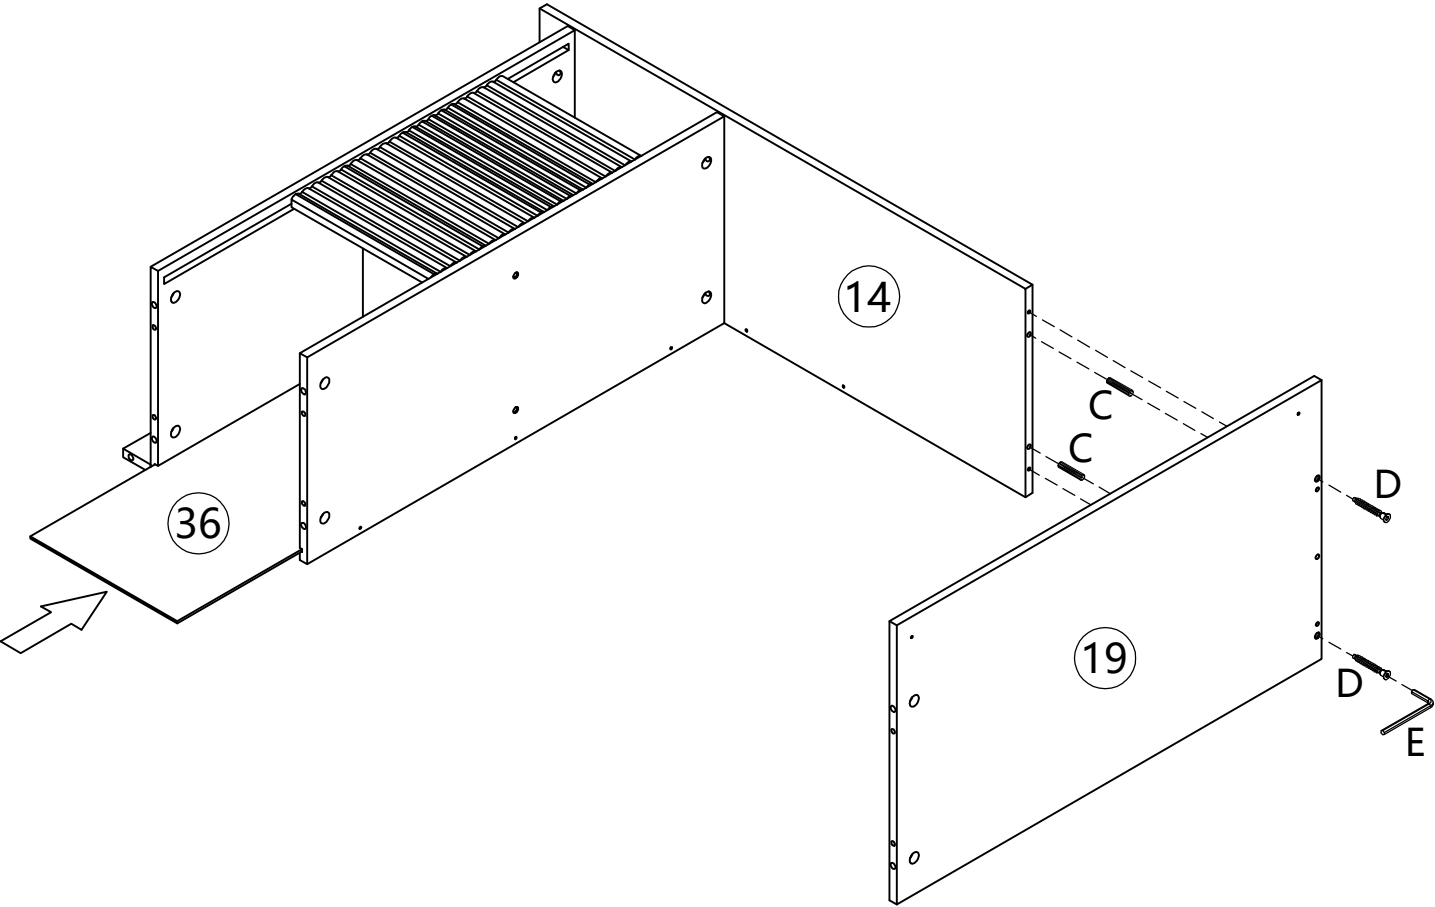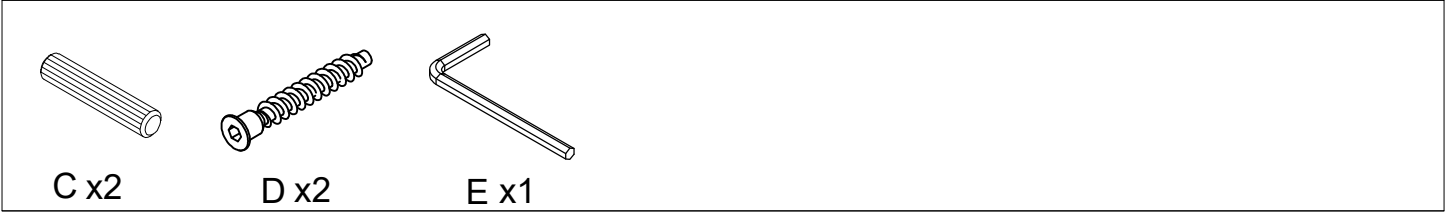


Step 23.



B x6



C x6





R x1




O x4

2-Person
Assembly

Please note that this step requires two -
person cooperation for installation.

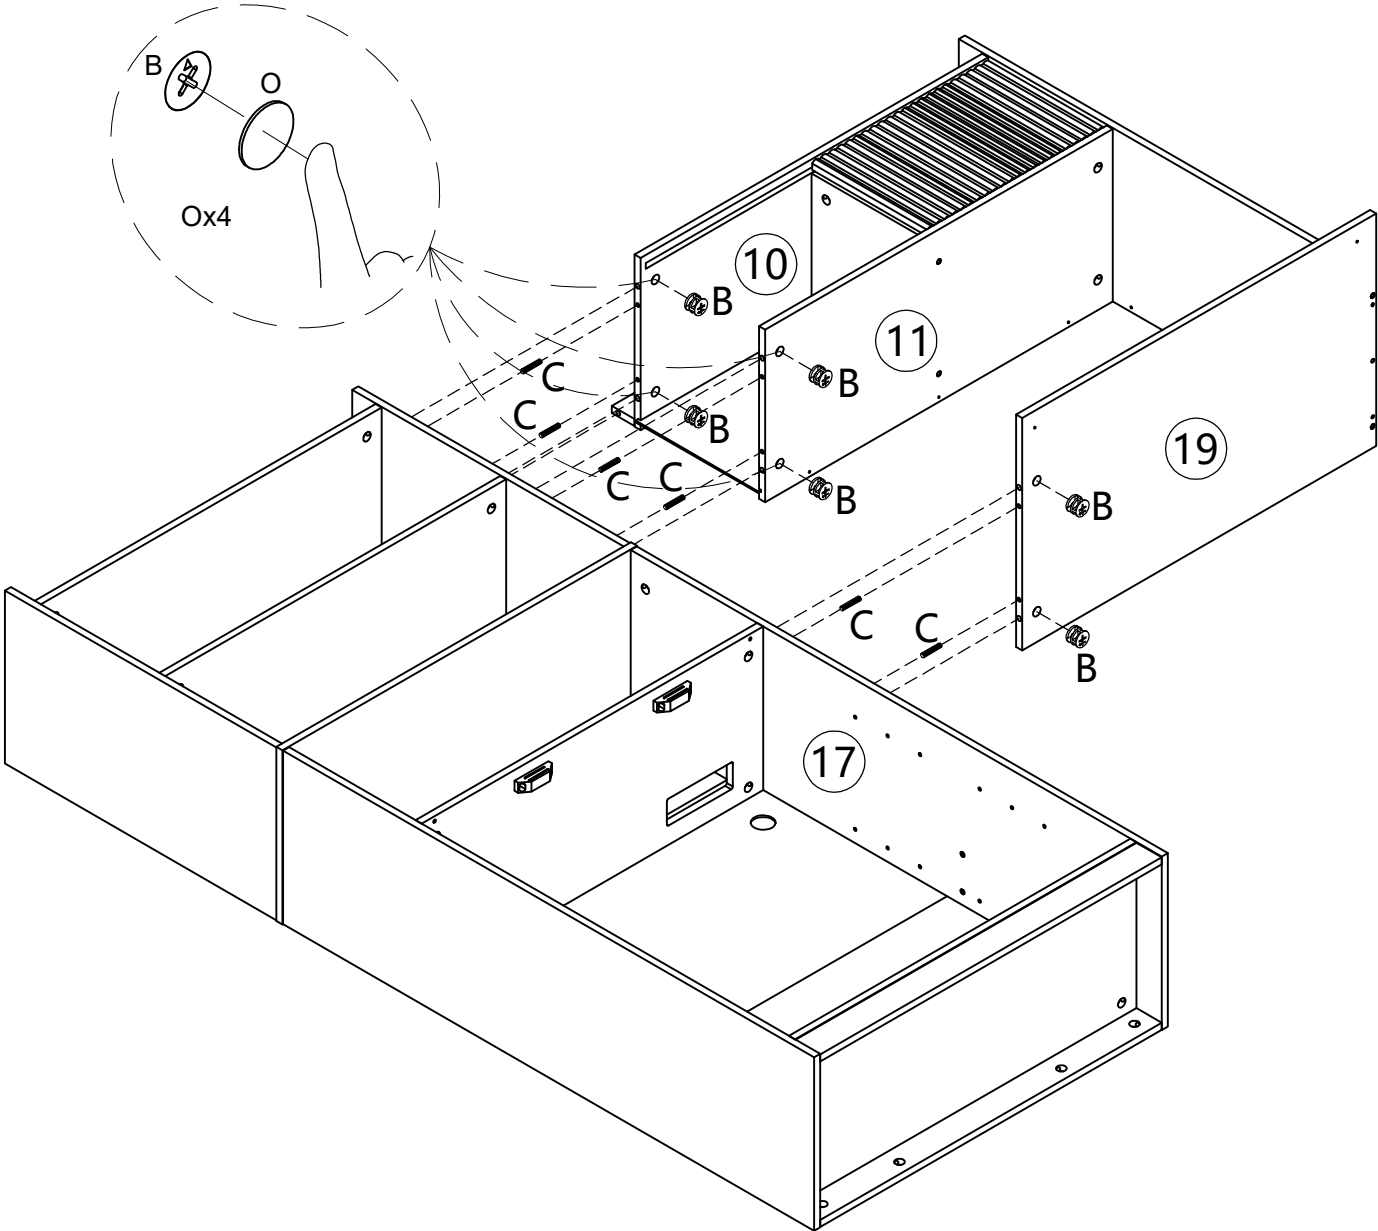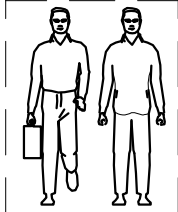


Step 24.

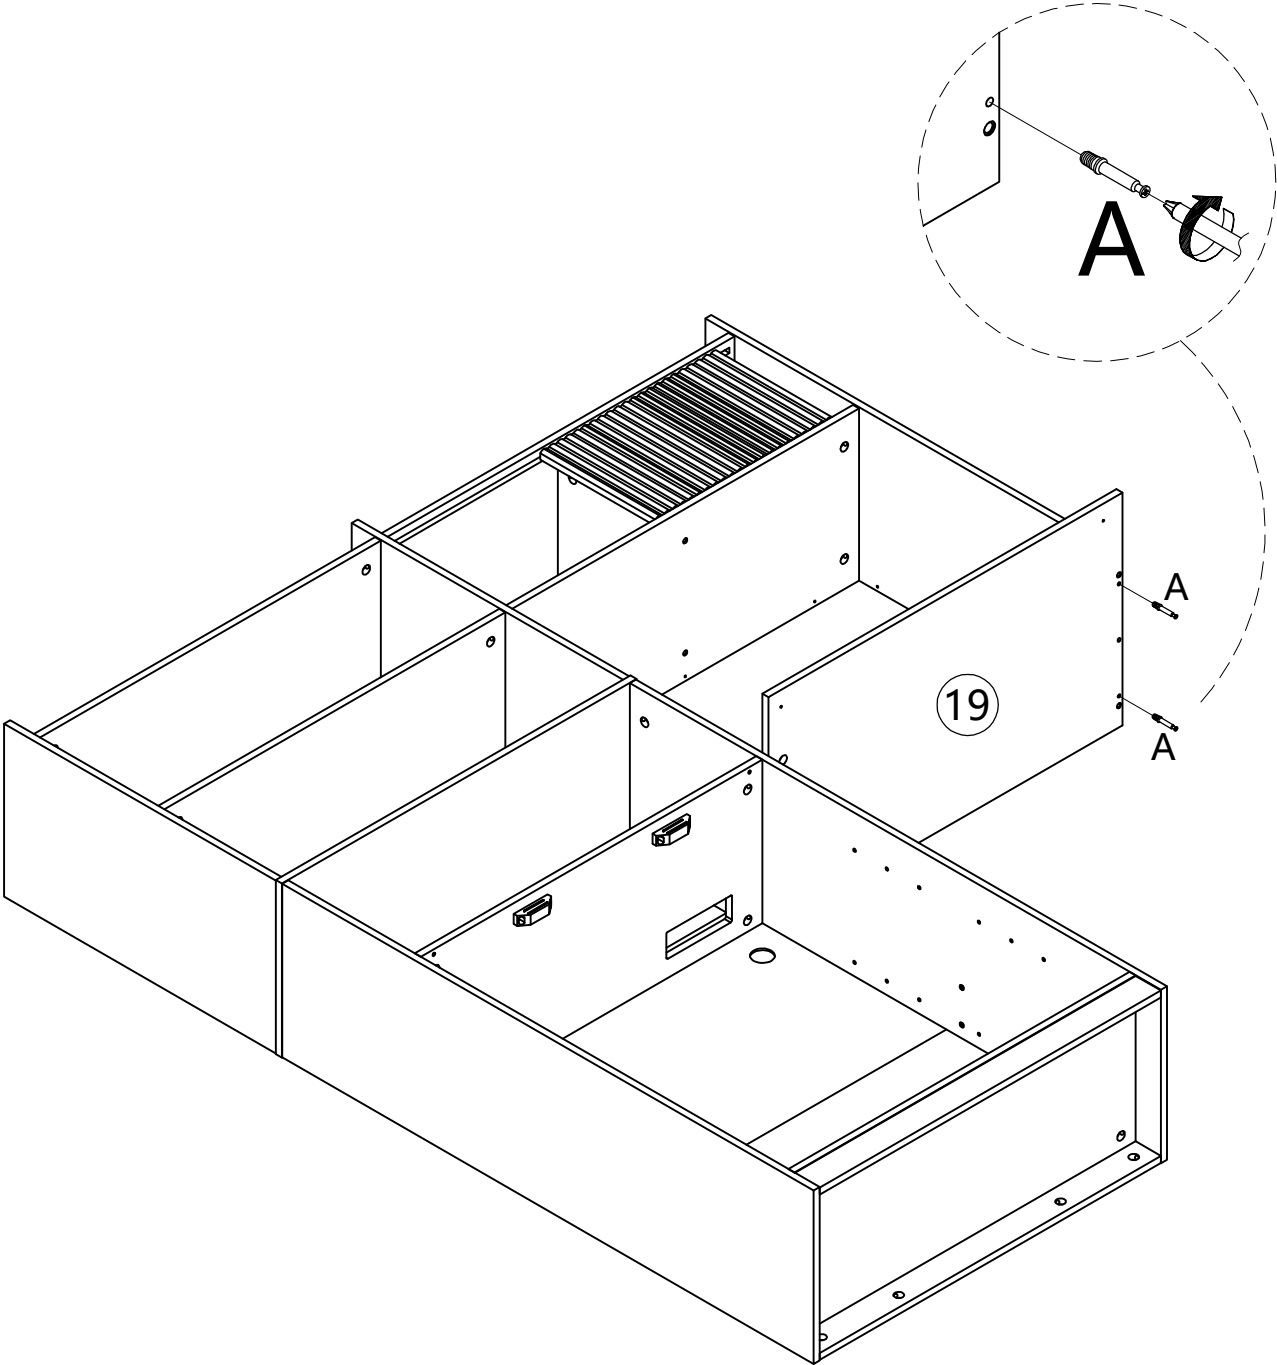


Step 25.




B x2







C x1



R x1

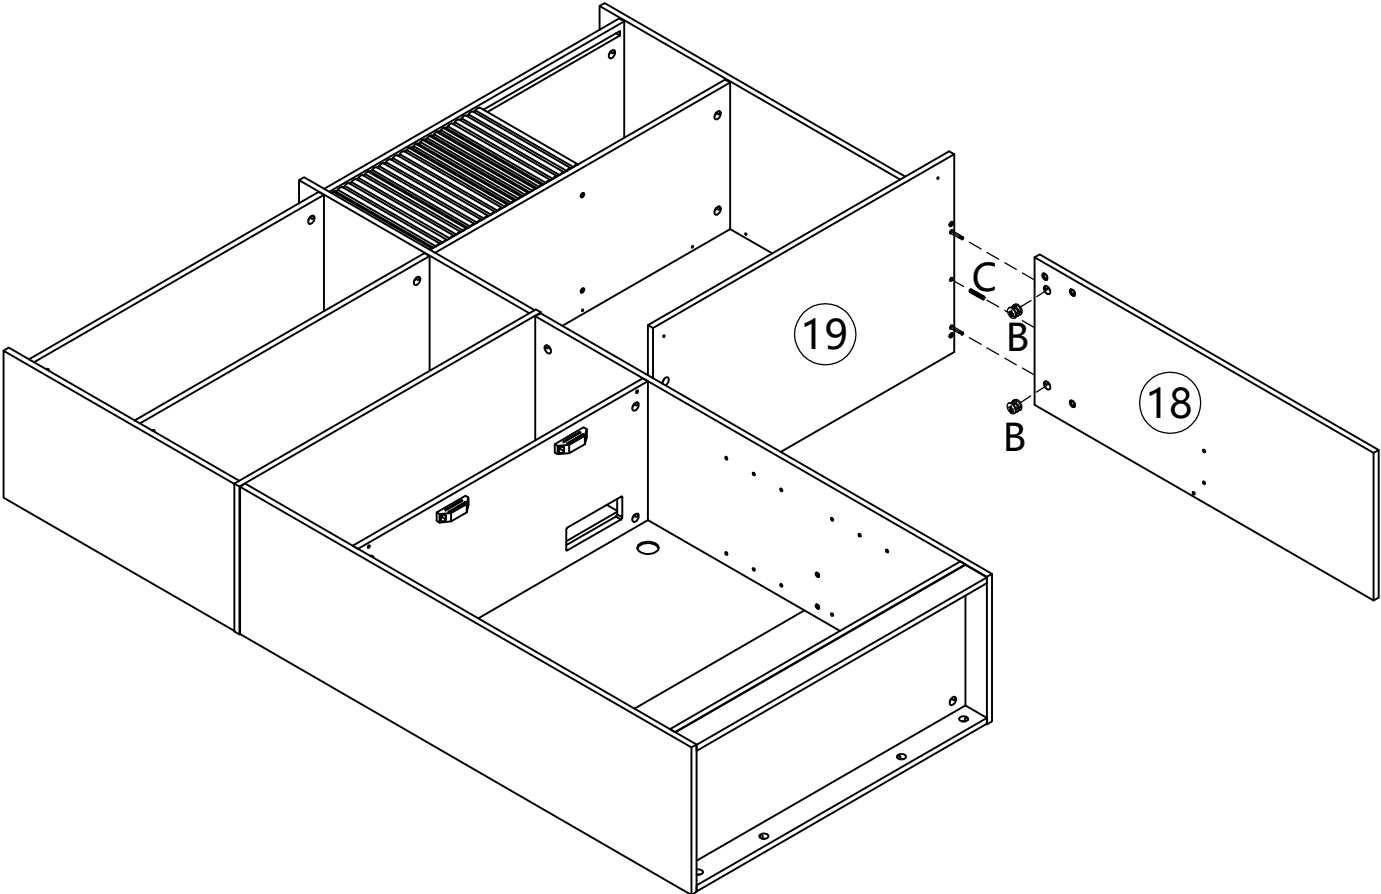

Step 26.

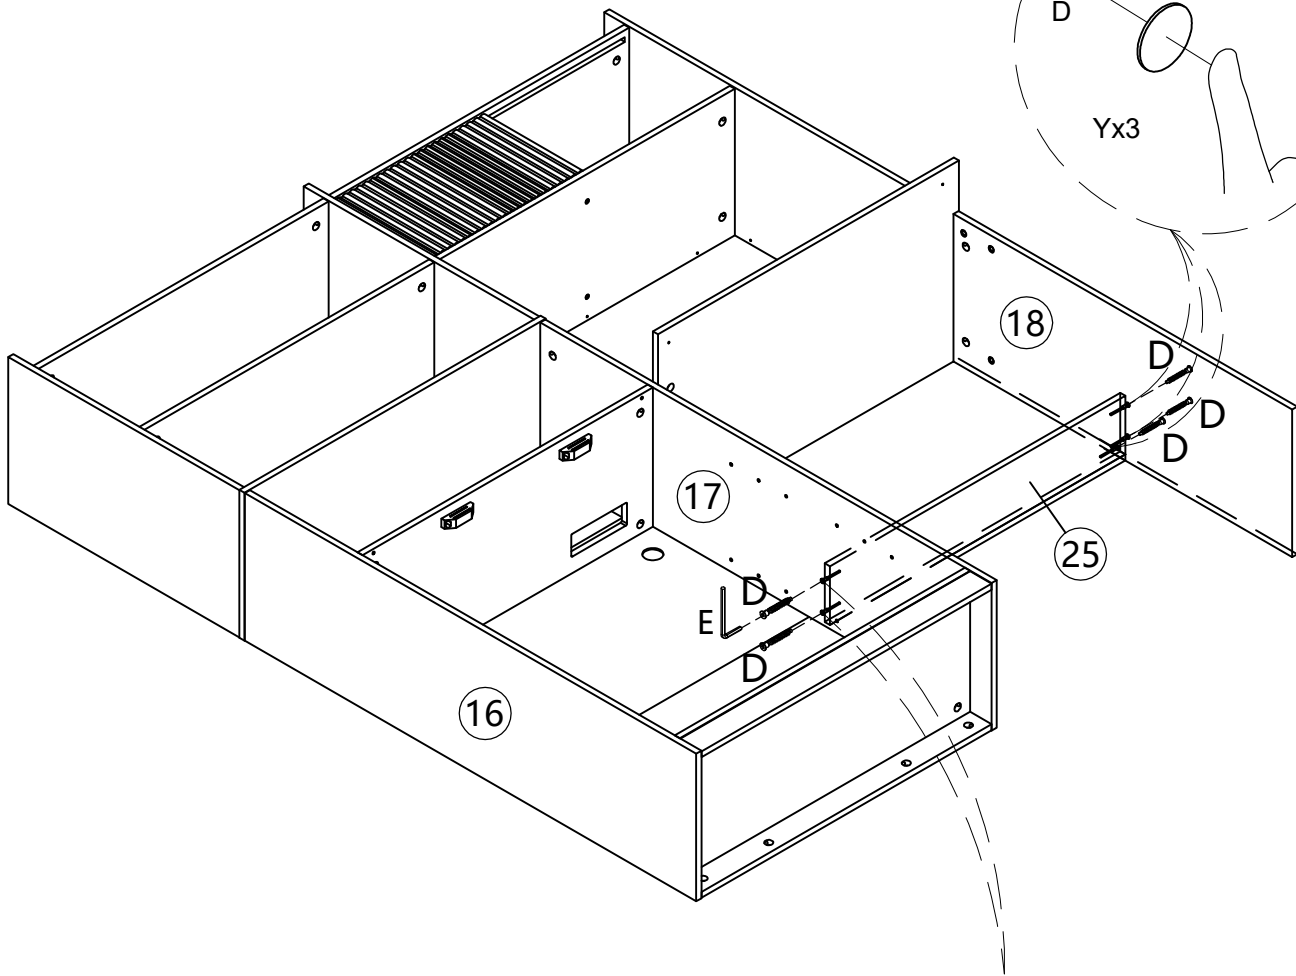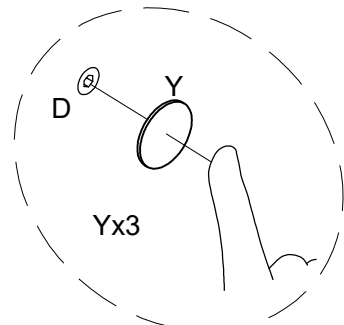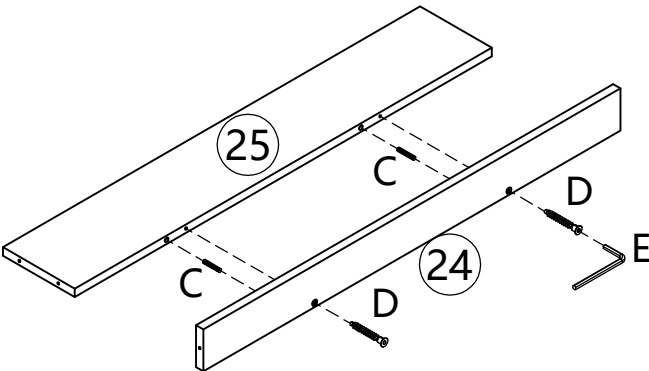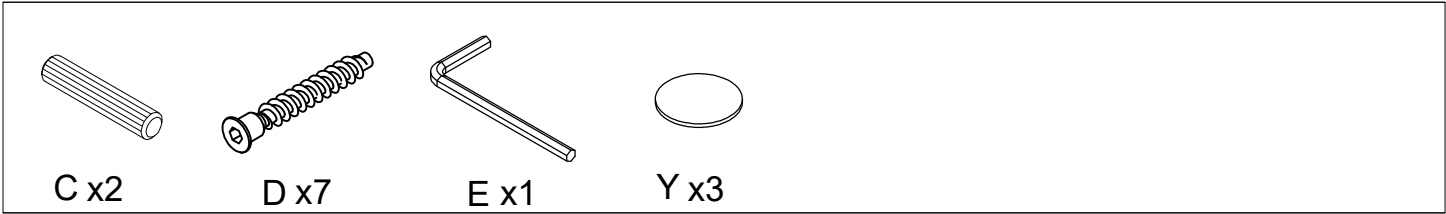


Installation Instruction




Please don't tighten the screws completely and go back later for a final tightening of all the screws after pieces are aligned with each other.

Step 27.

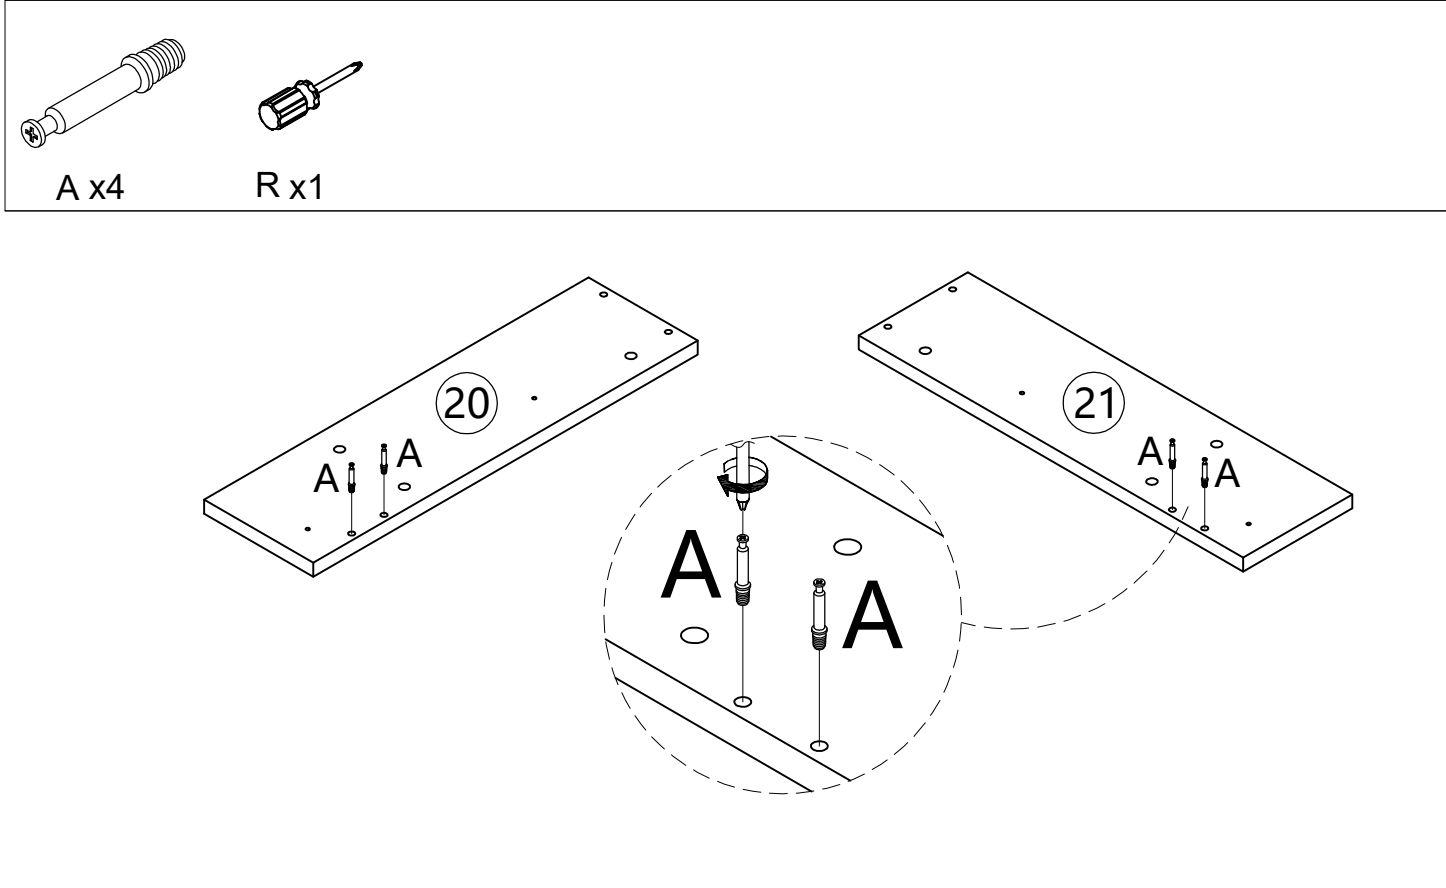


Step 28.

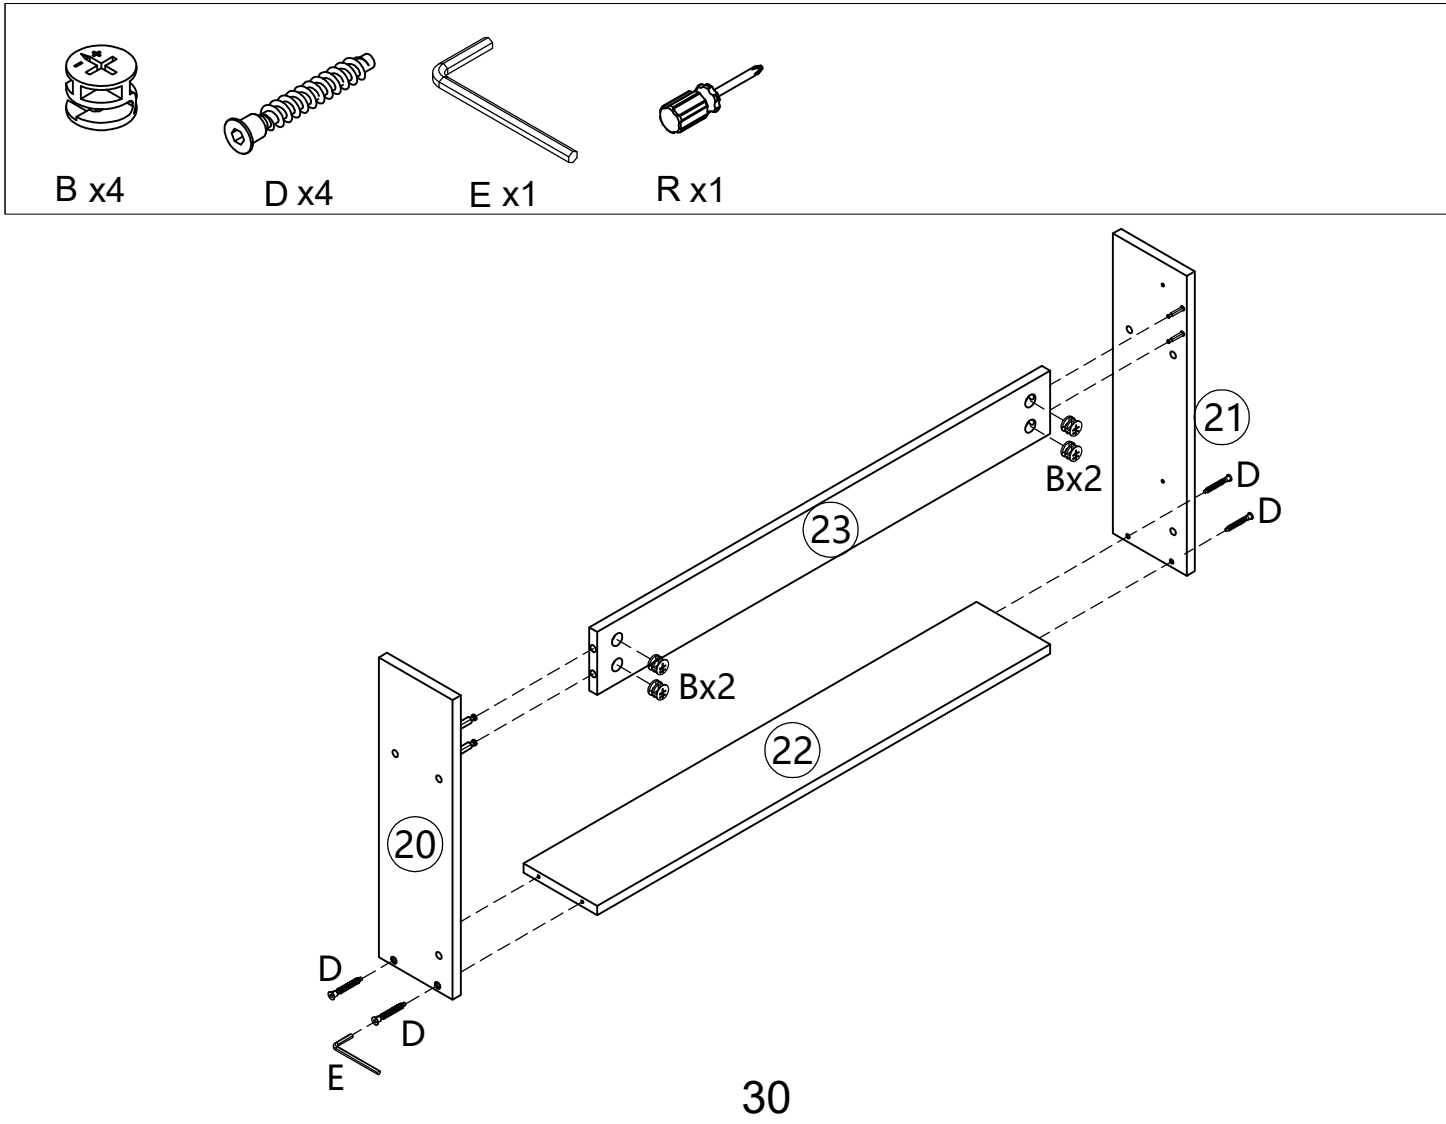


Step 29.



H x6

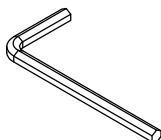


I x1

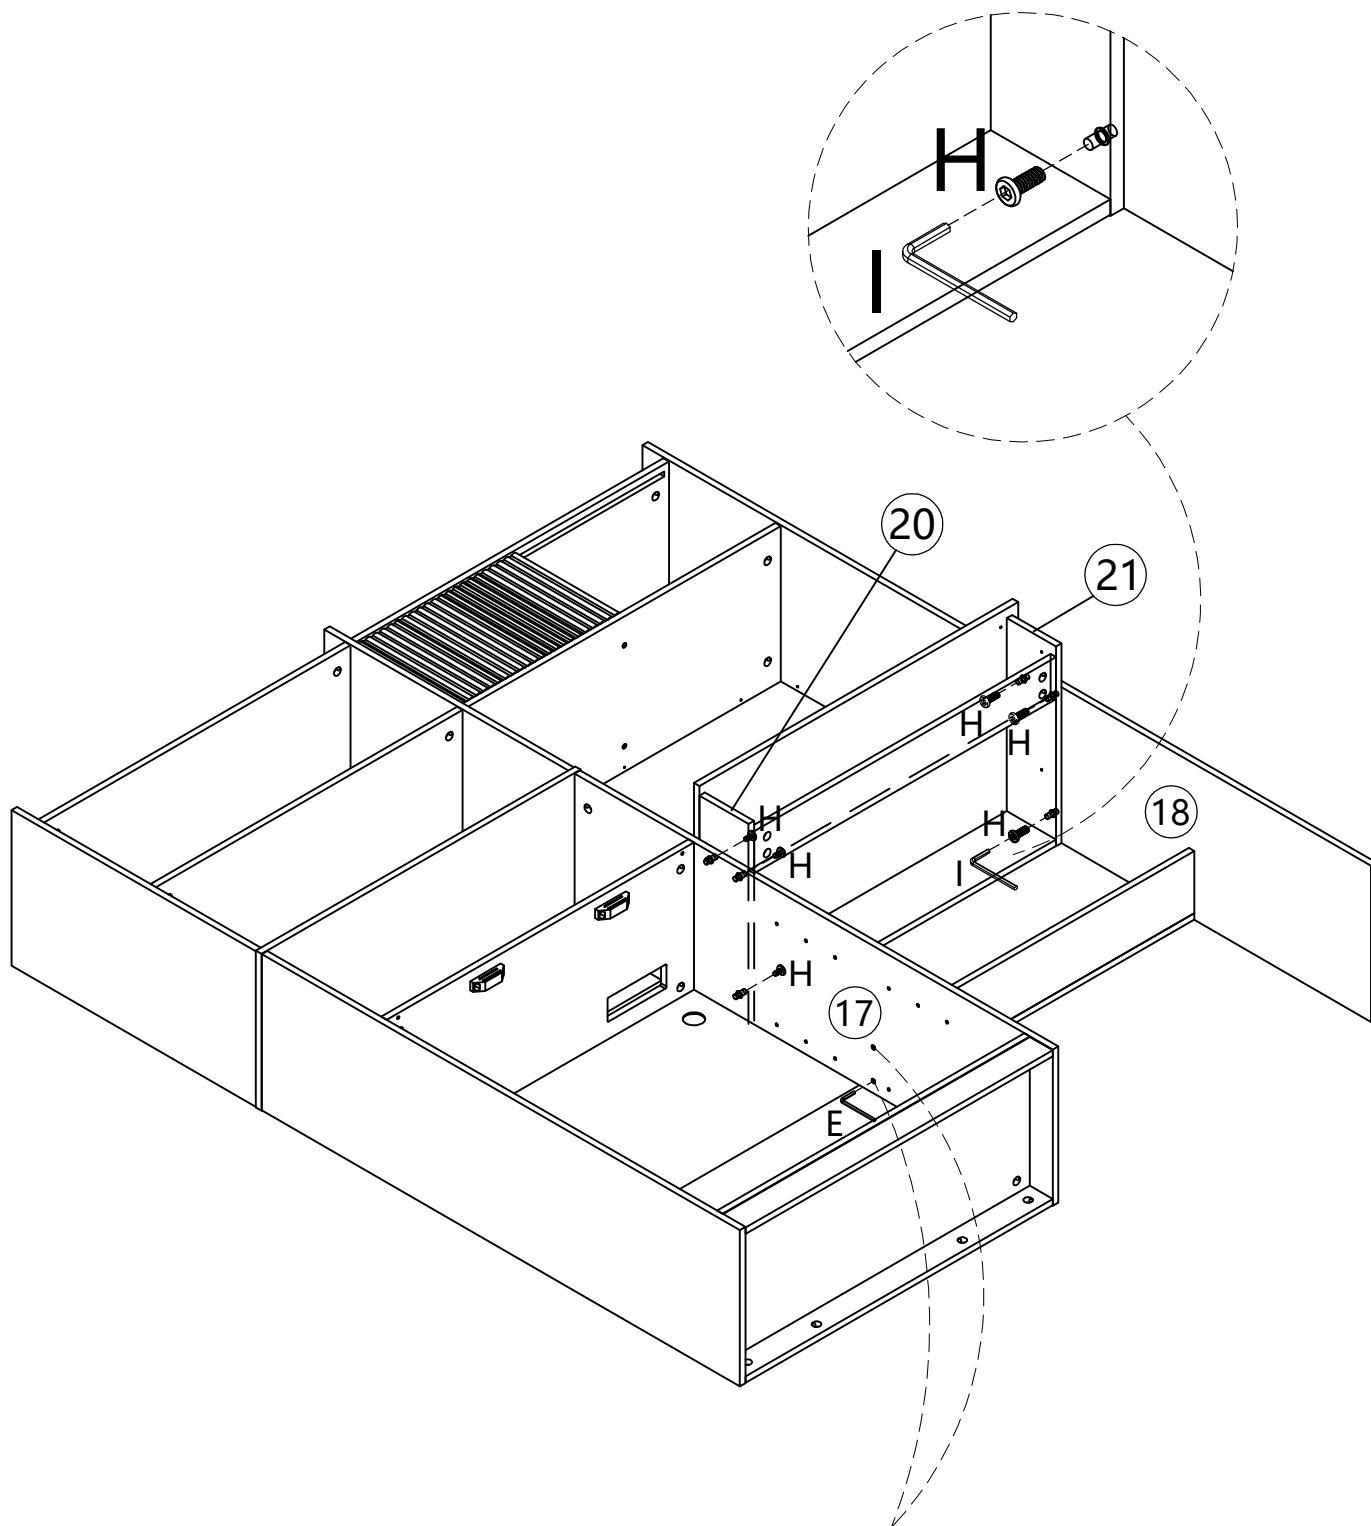

Attention: After installing component No.20/No.21, the screws here can be tightened.


Step 30.



M x 4




X x 2





R x 1


Step 1

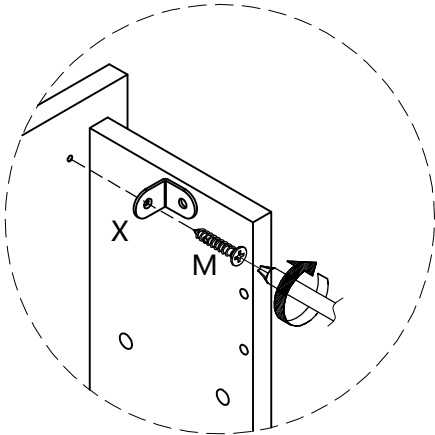


Step 2

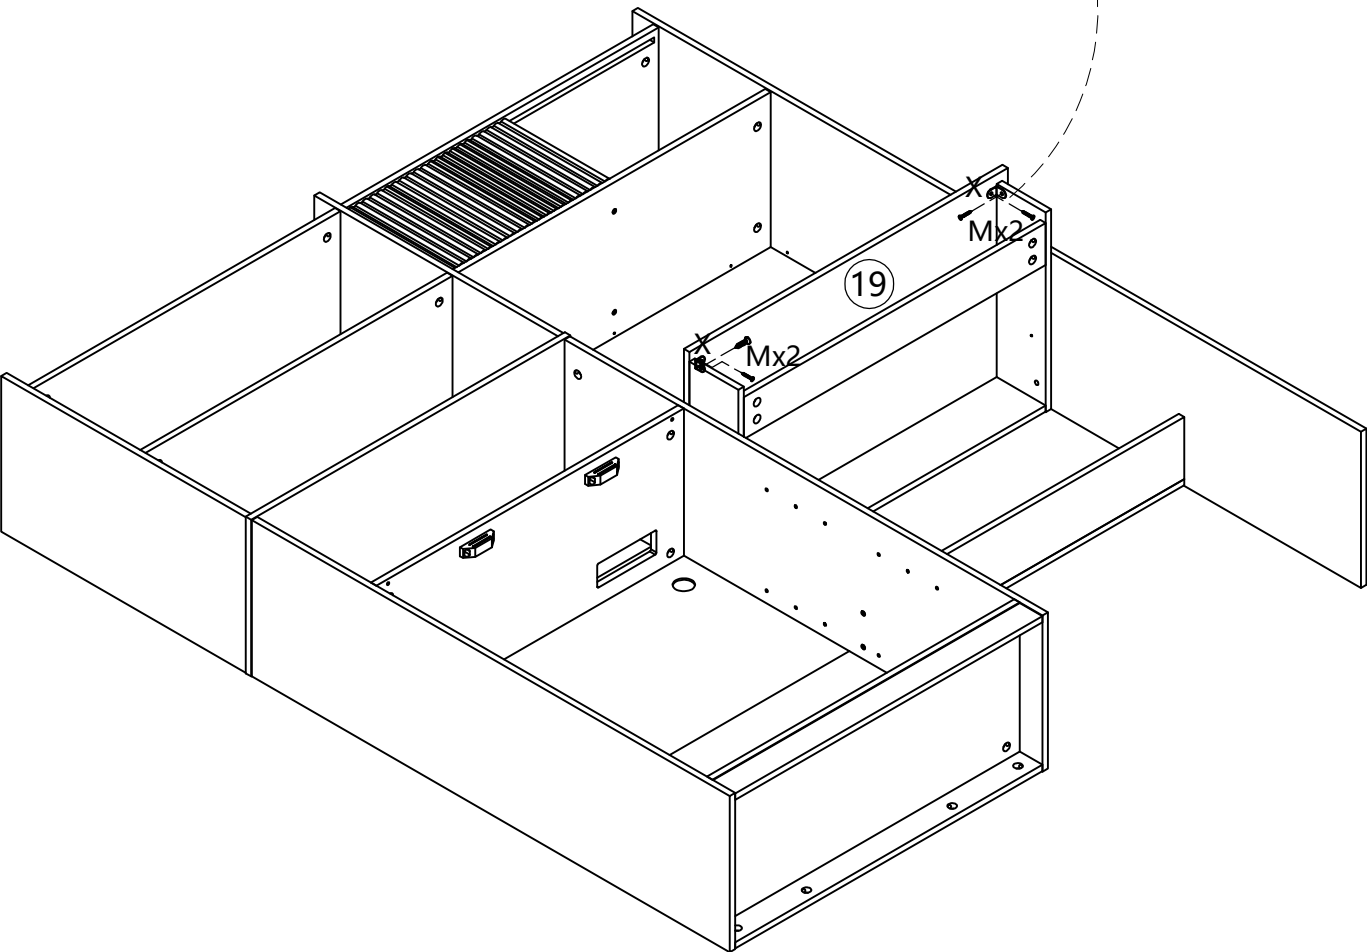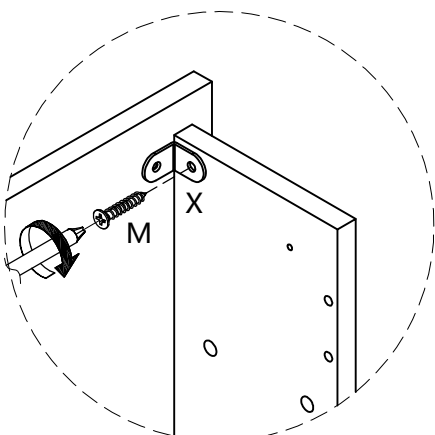


Step 31.



M x6

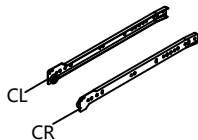

N x1



P x8





R x1



N-CL




N-CR

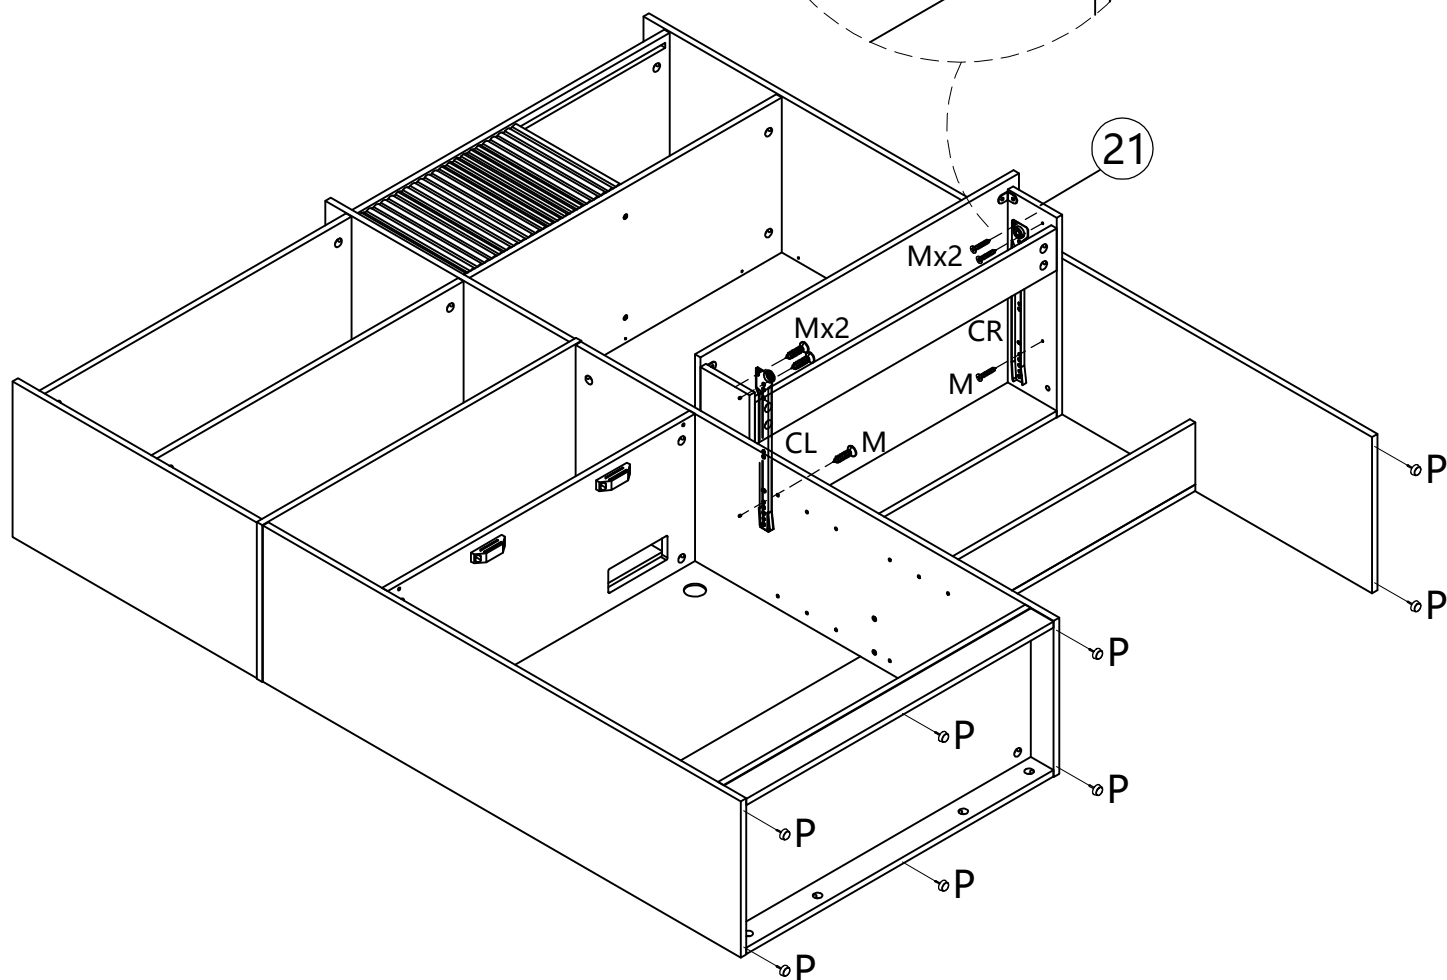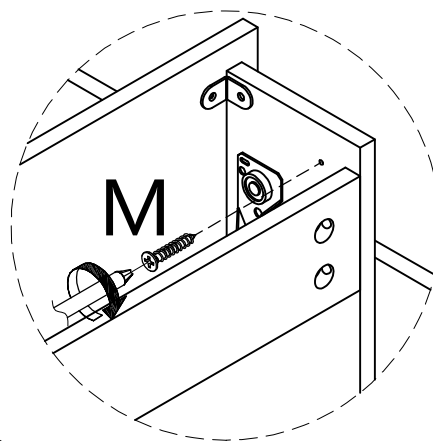


Step 32.




B x2




D x1

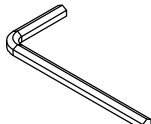


E x1




R x1

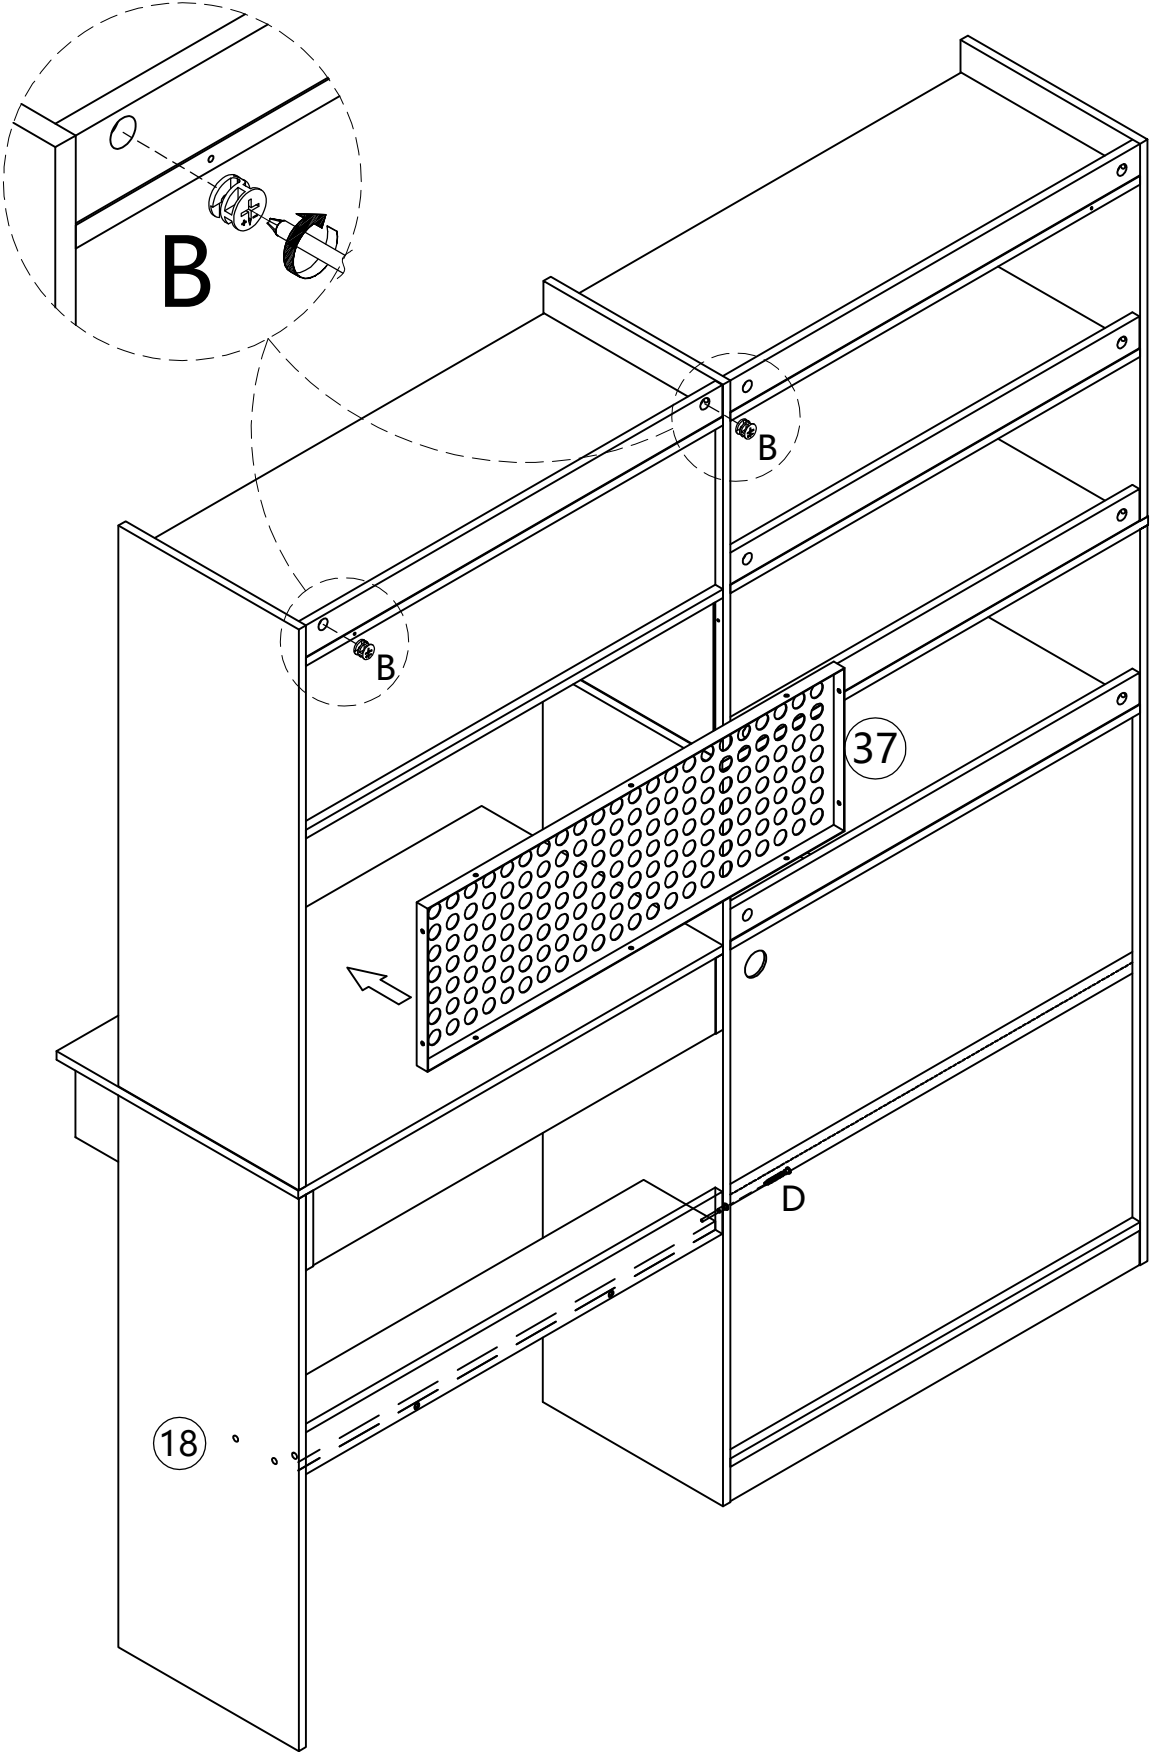

Step 33.




AAx7





R x1


2-Person
Assembly

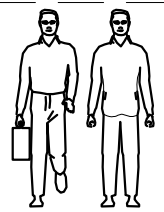


Please note that this step requires two -
person cooperation for installation.

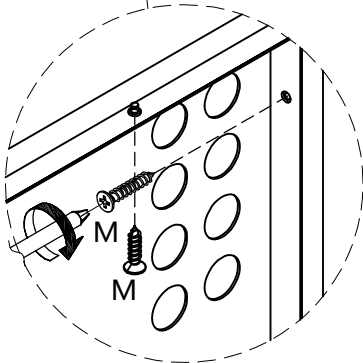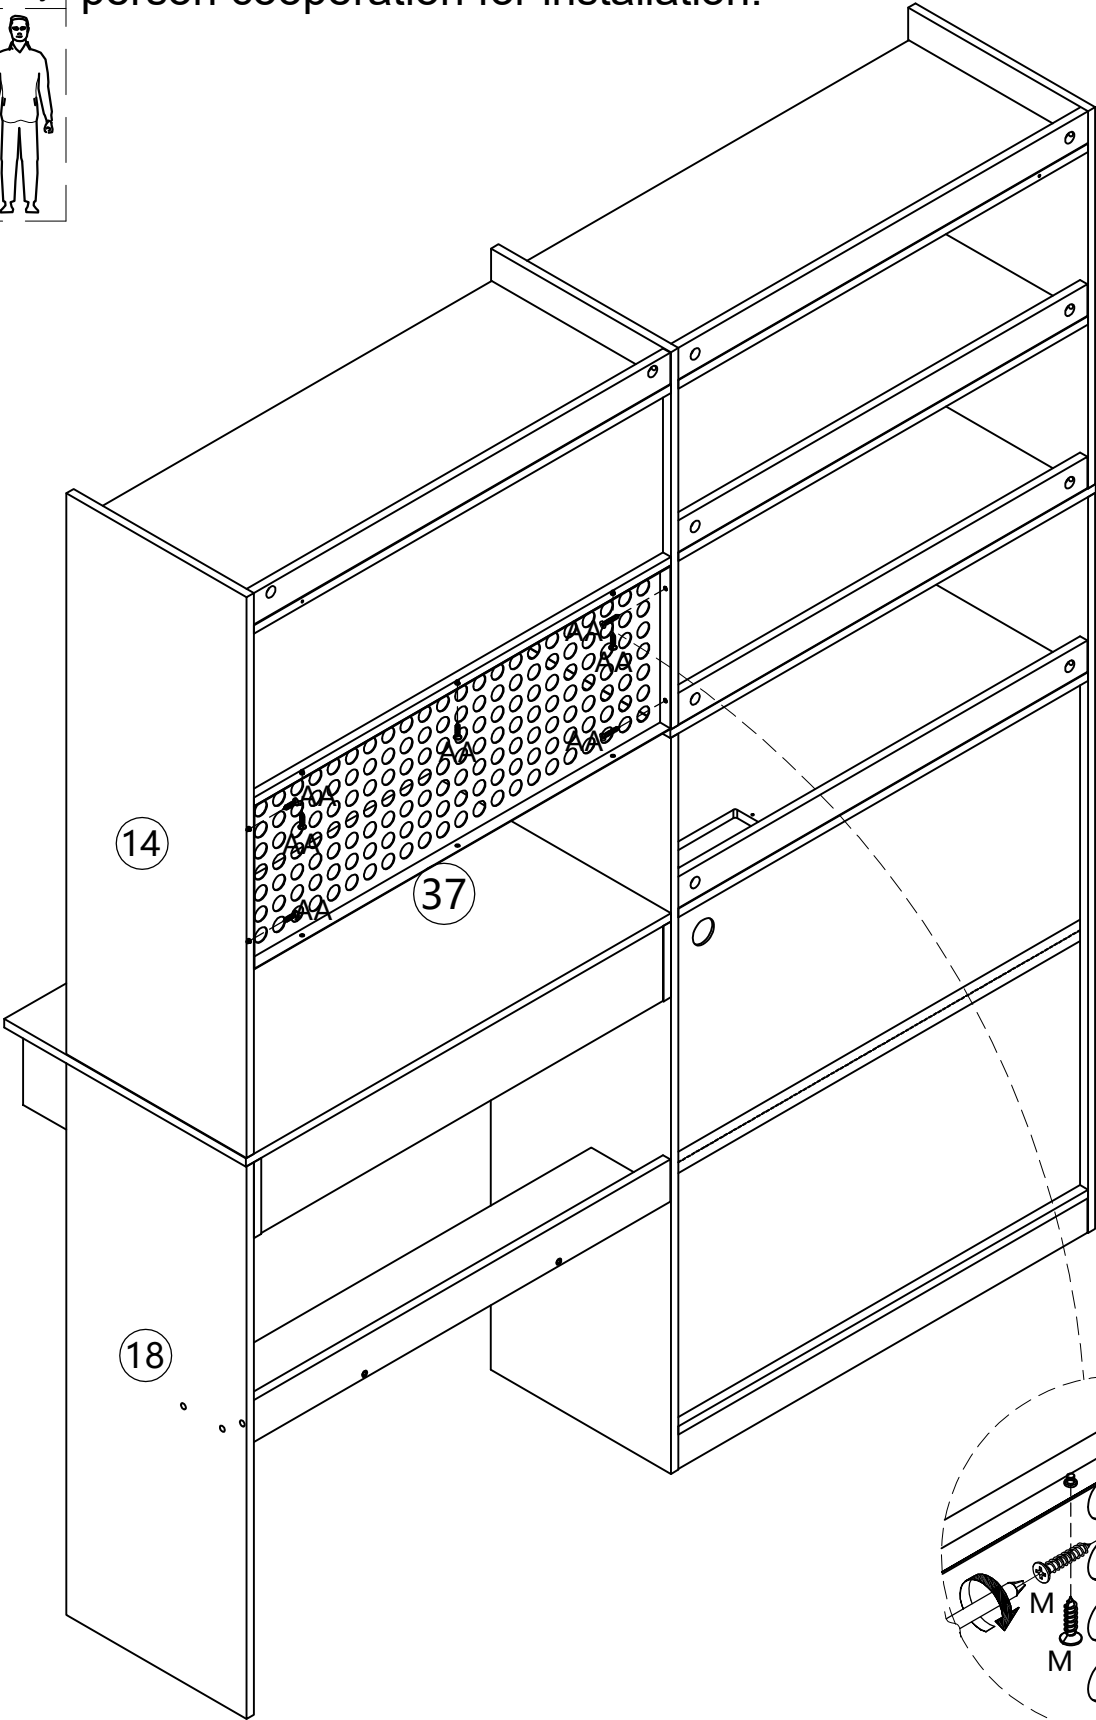

Step 34.




K x12




L x12




U x1





AA x2




R x1

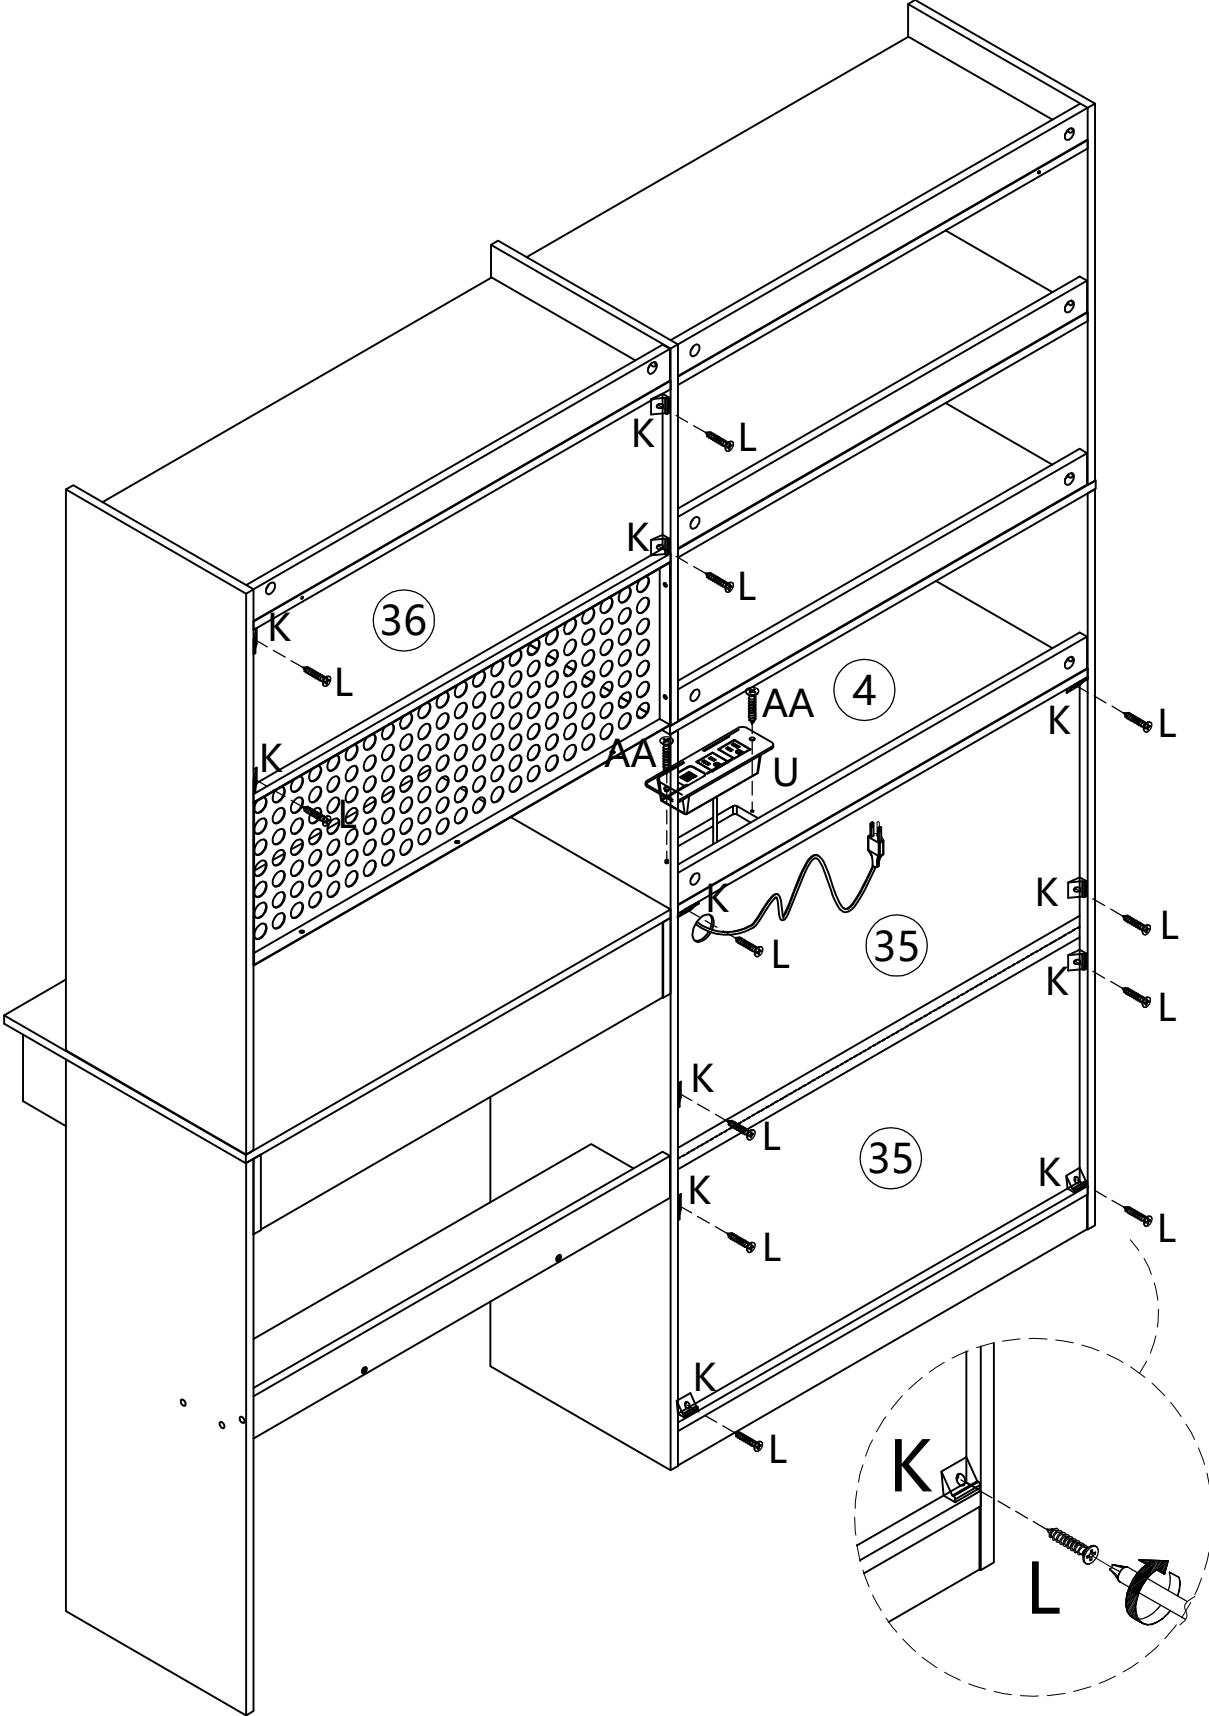


Step 35.

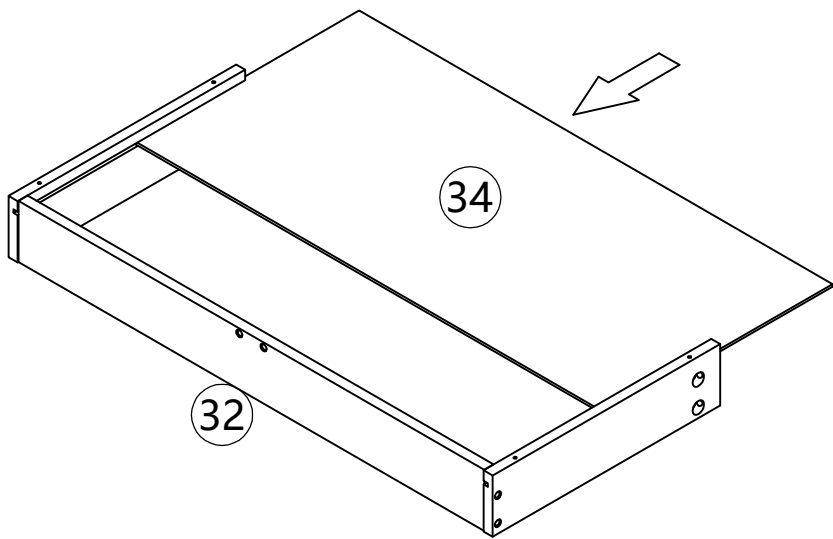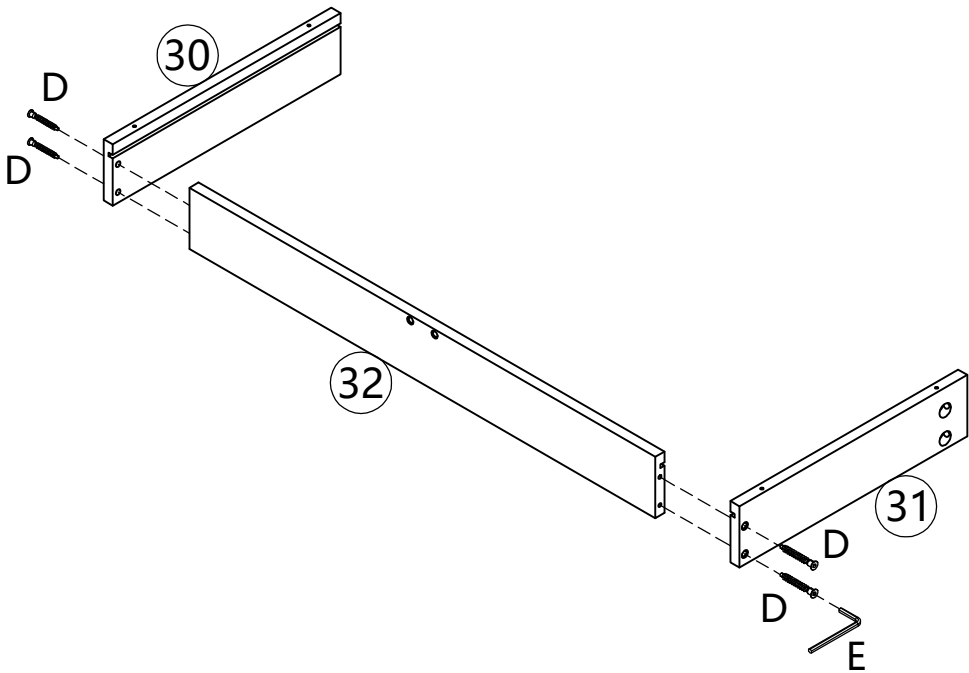


Step 36.

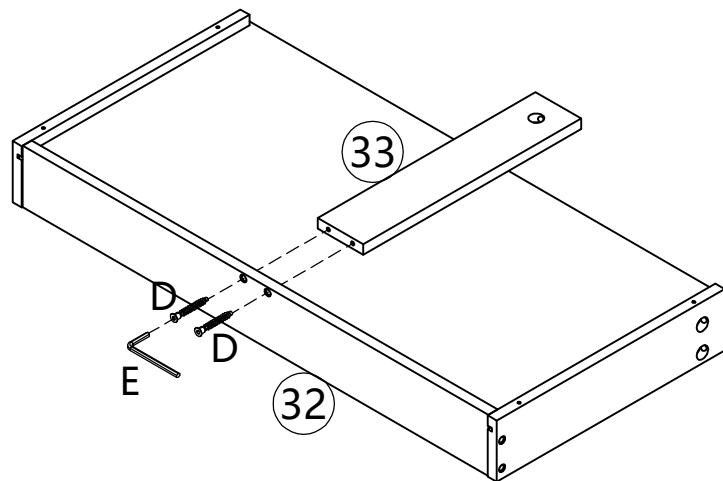


Step 37.

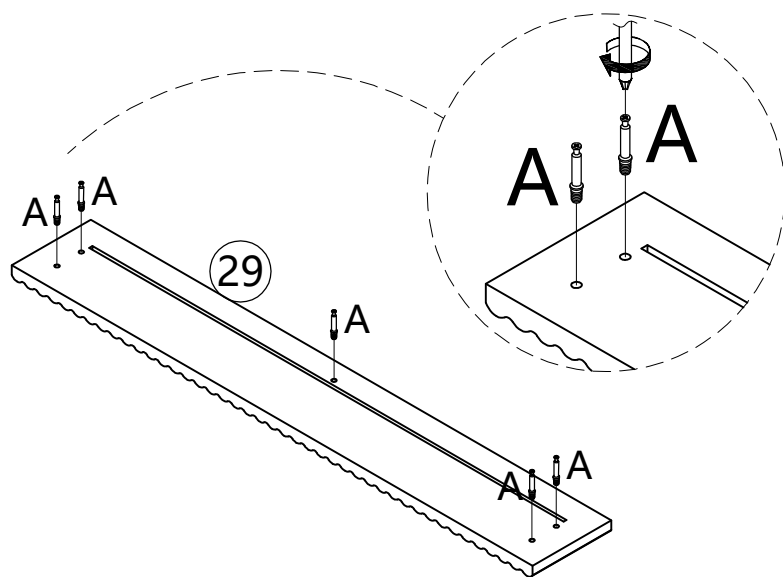



Step 38.

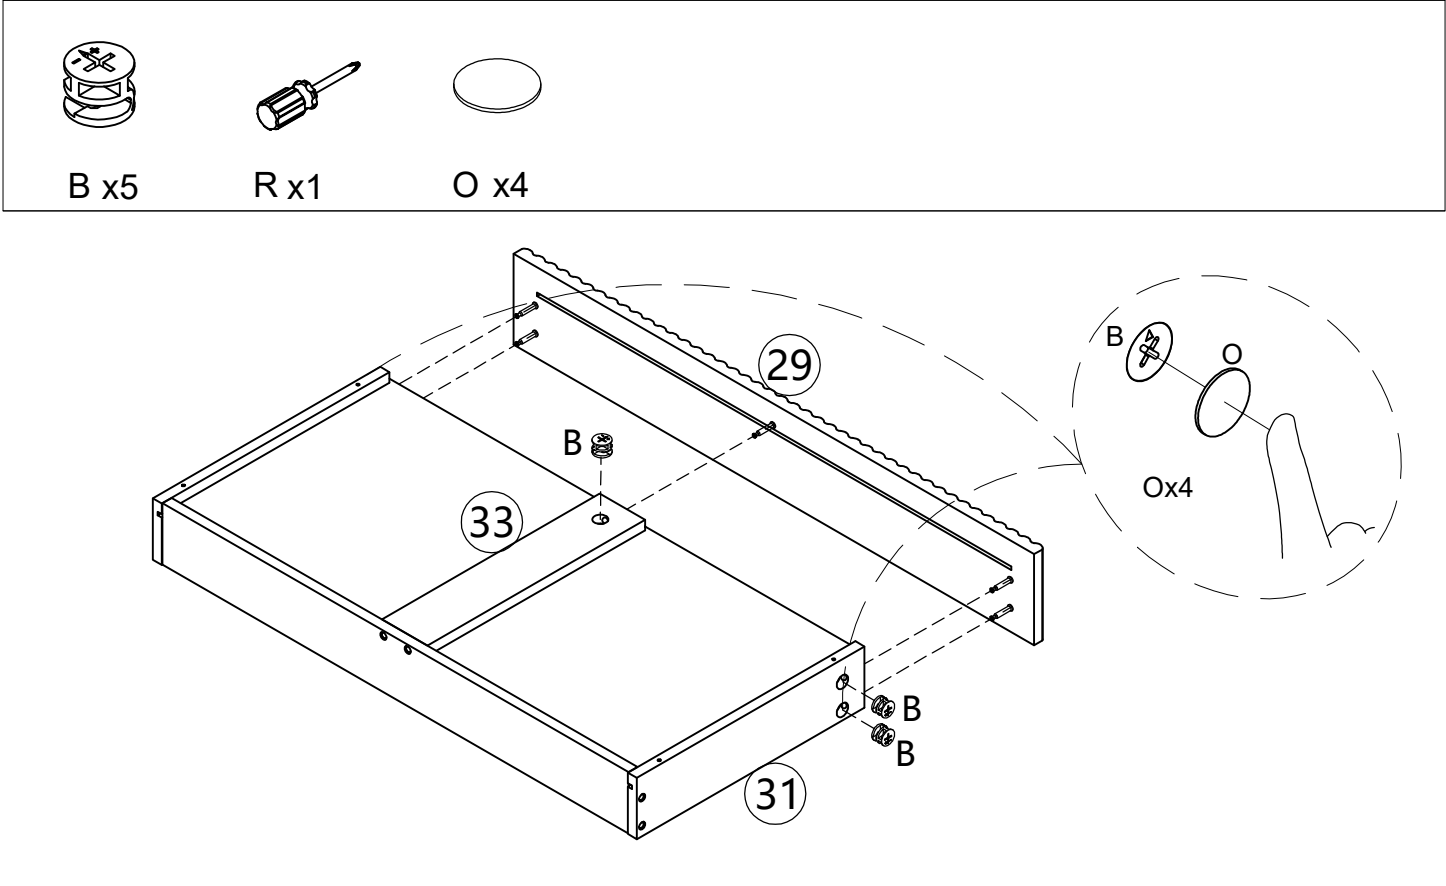



Step 39.

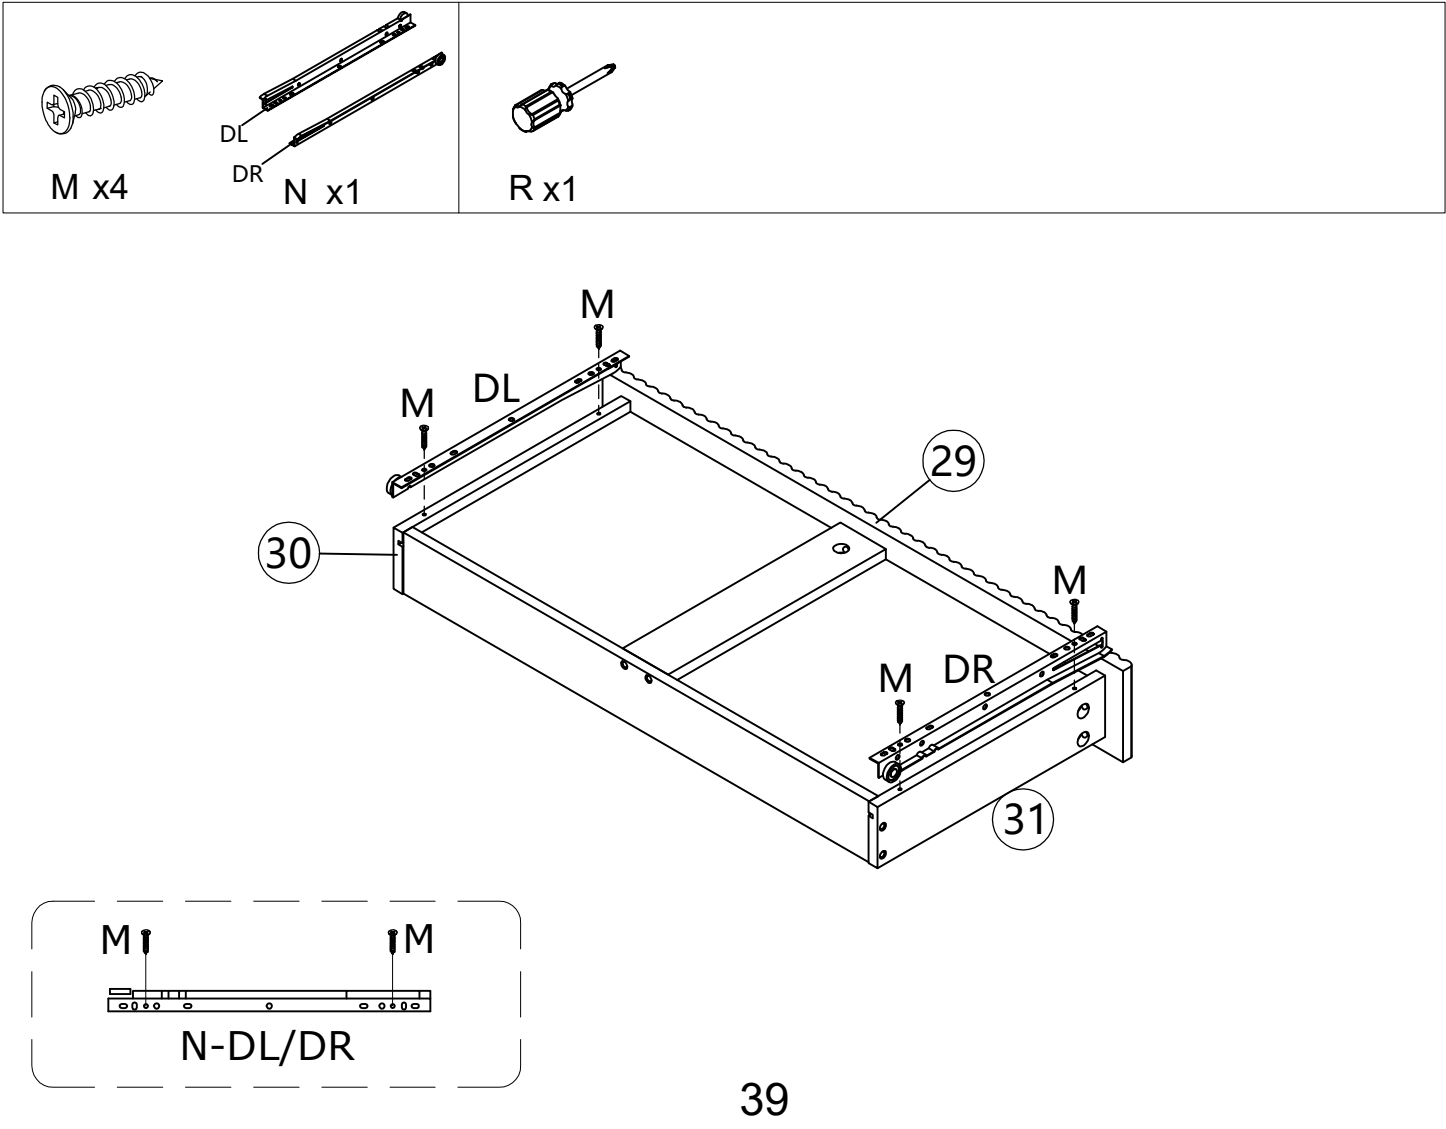


Step 40.

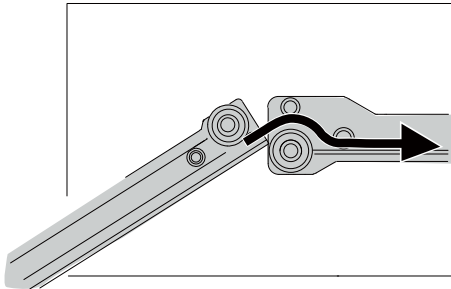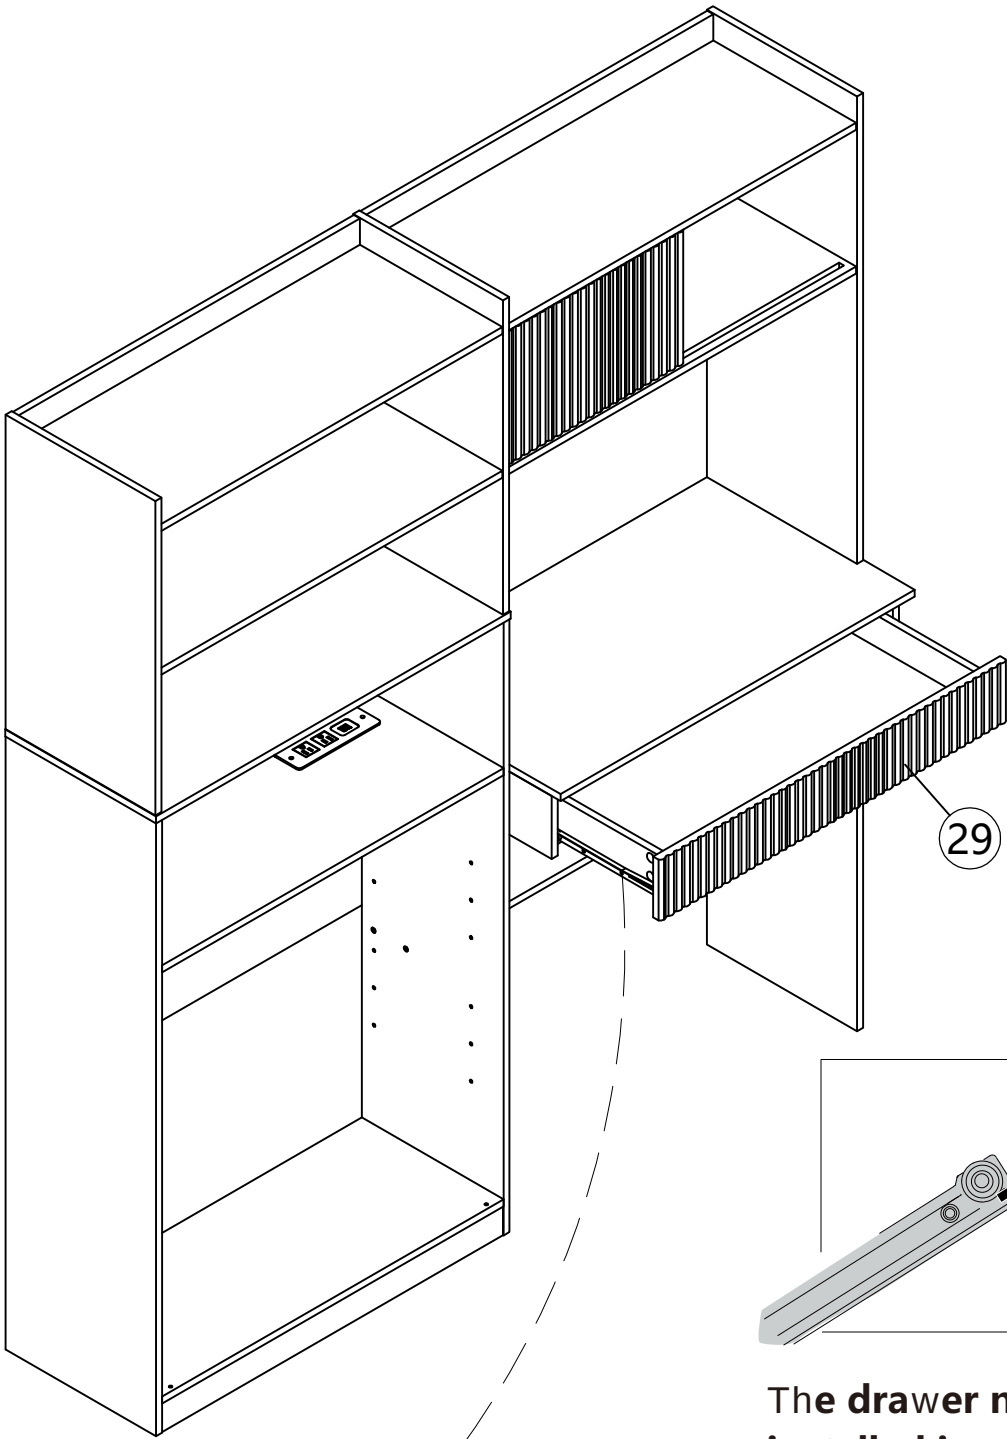

The drawer needs to be installed in a tilted manner.

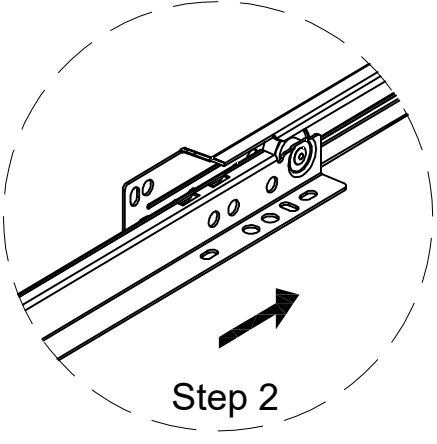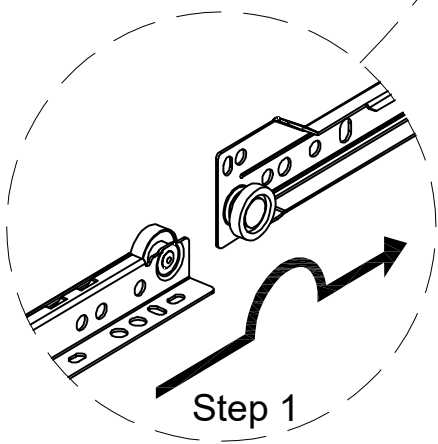


Step 41.




J x8



Step 1

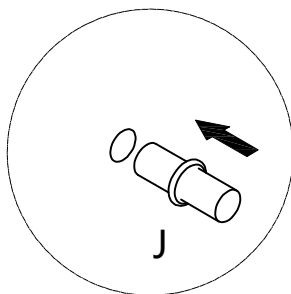


Step 2

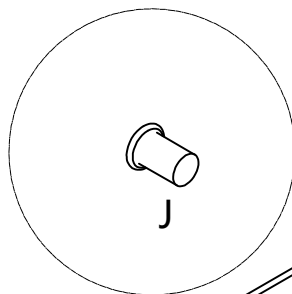


Step 3

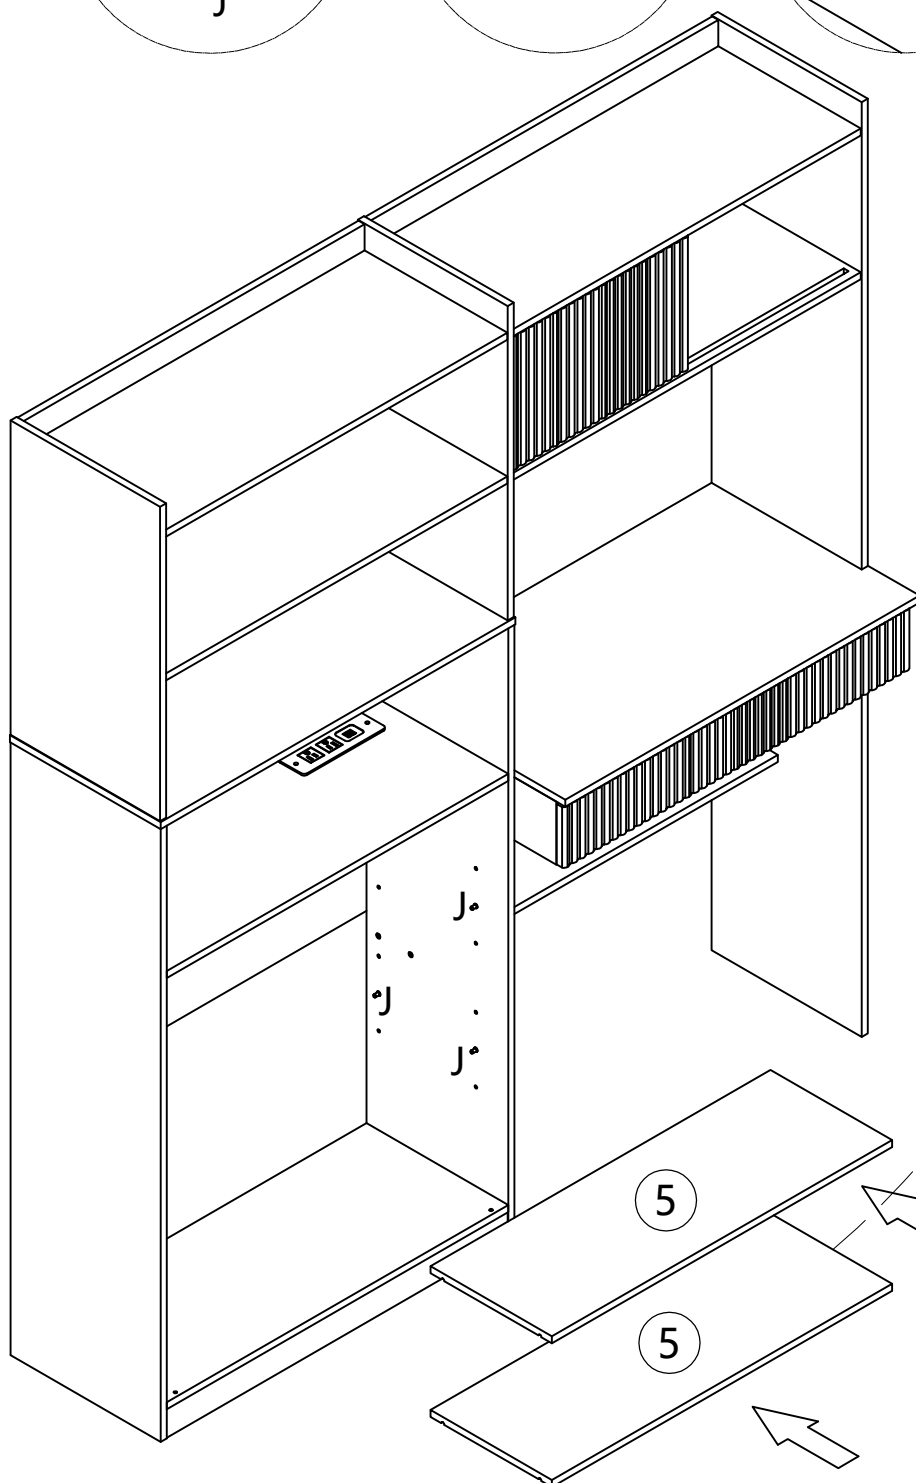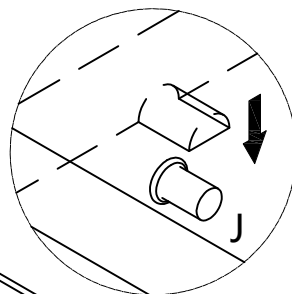


Step 42.




M x4





V x2




R x1




Z x4

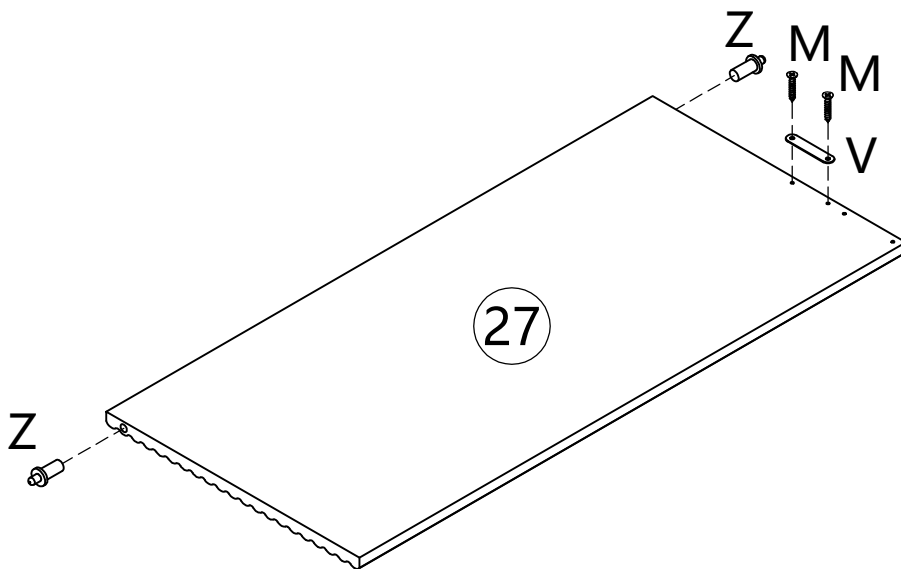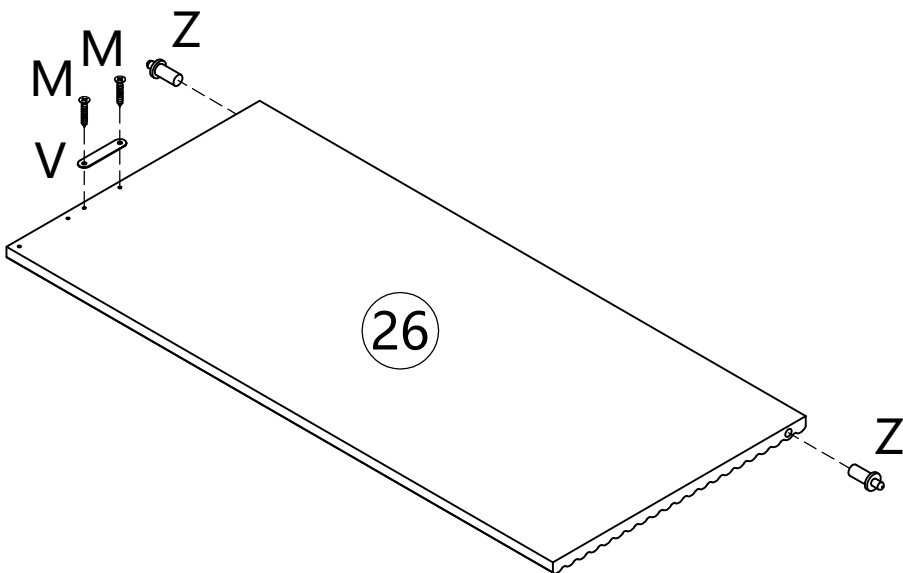


Step 43.









G x2




M x4



R x1

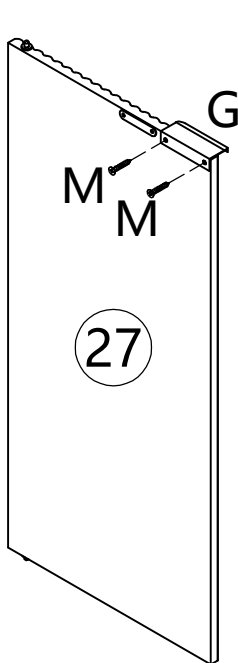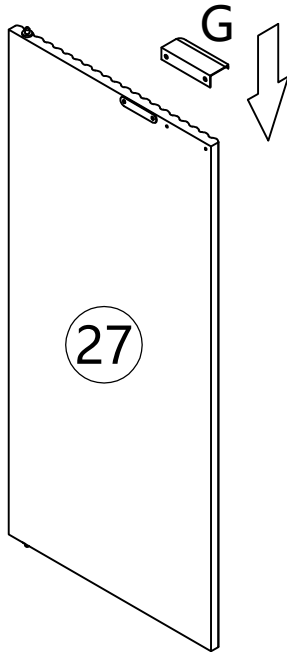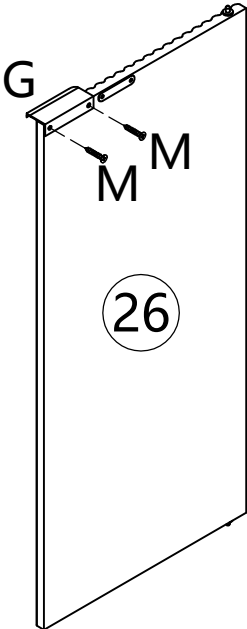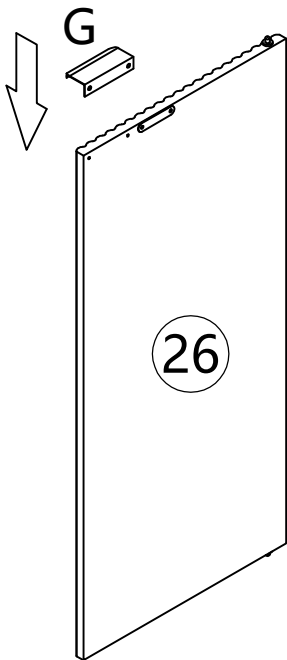

Step 44.

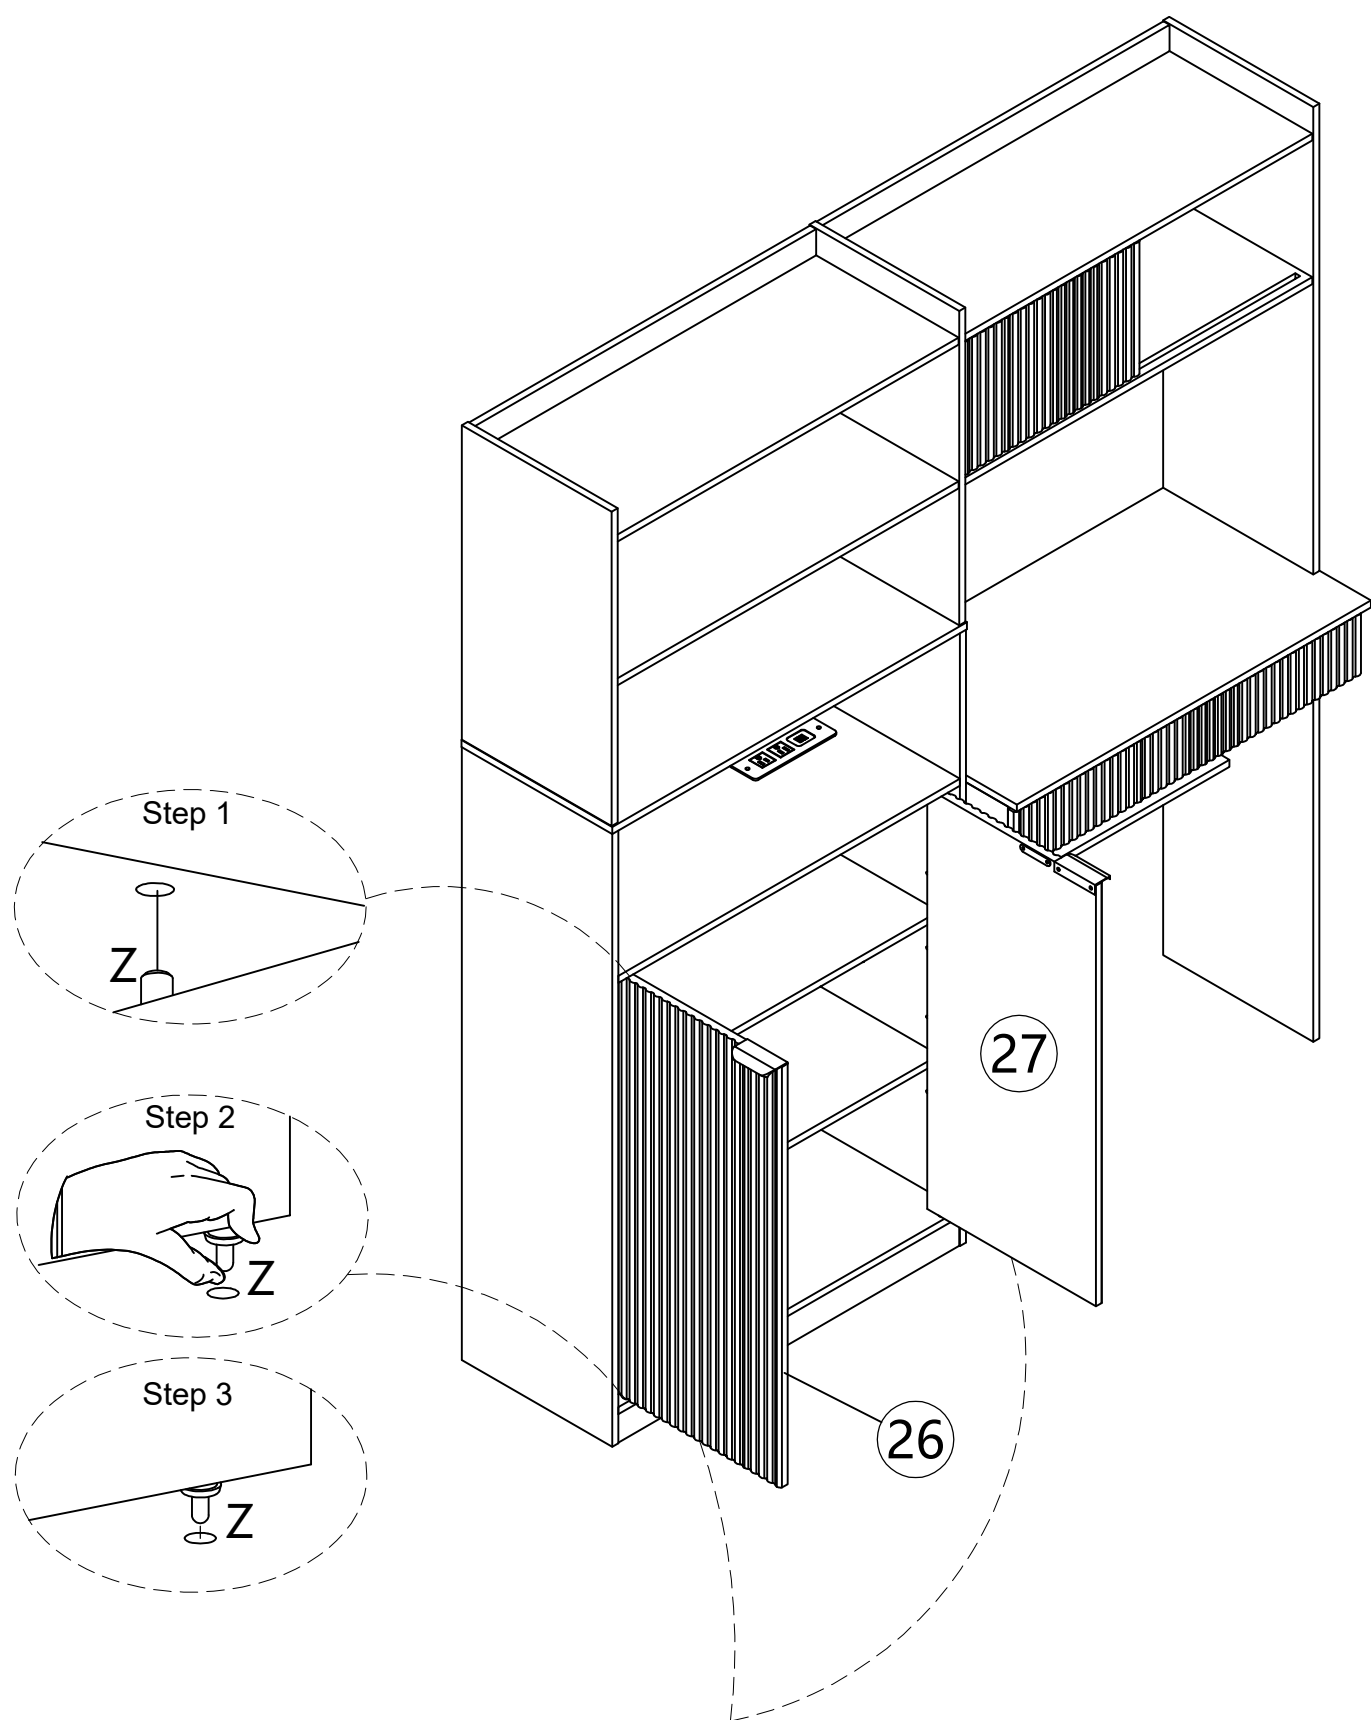


Tip! Before proceeding to the next installation step, pay attention to the left and right door panels to avoid installation errors.


Step 45.




T x5

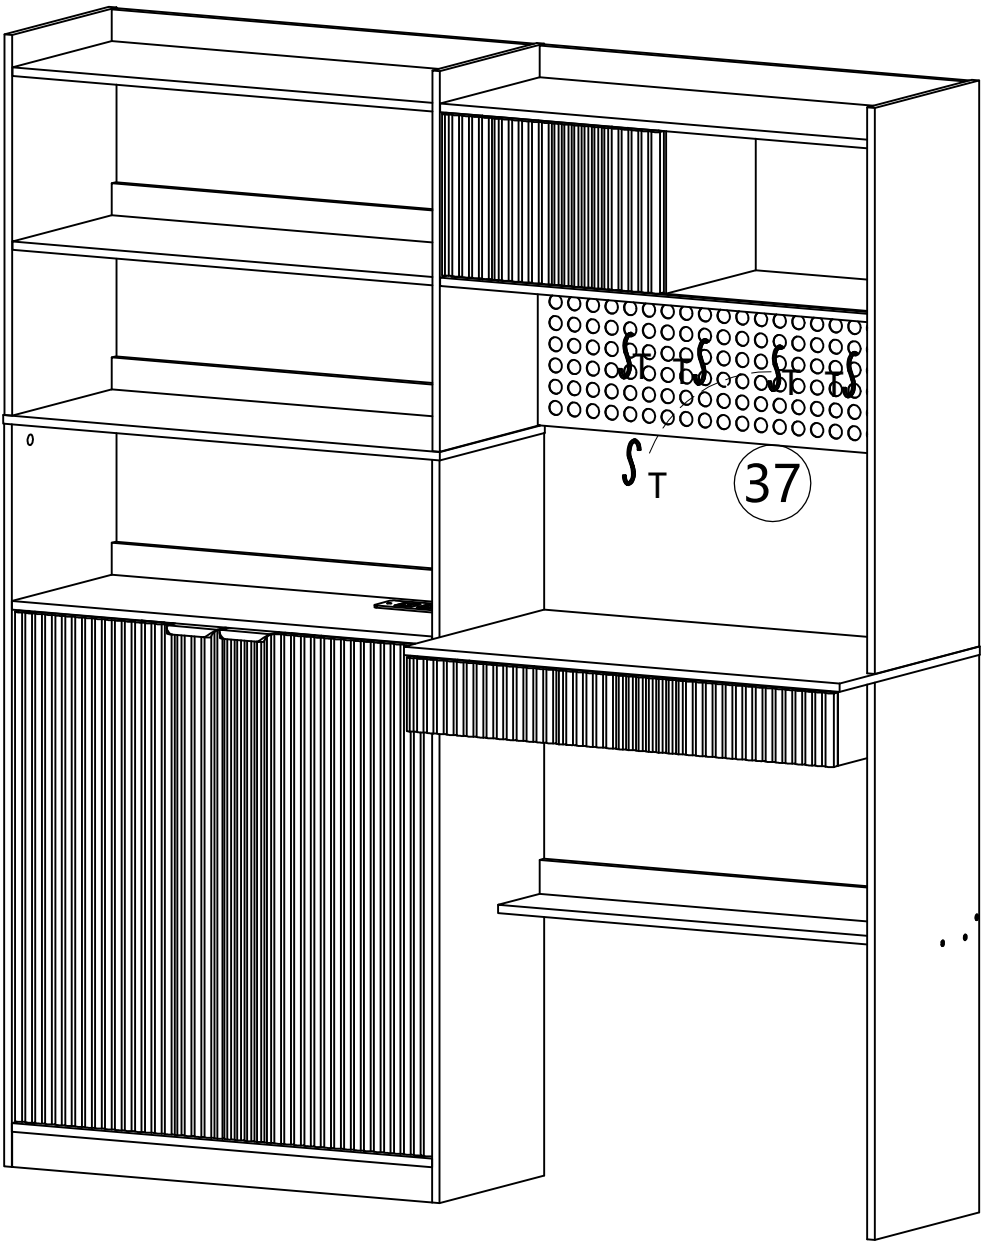




Step 46.

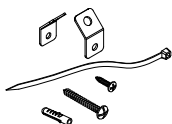


S x2




R x1

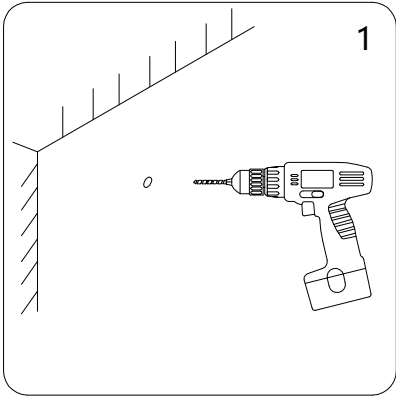


1

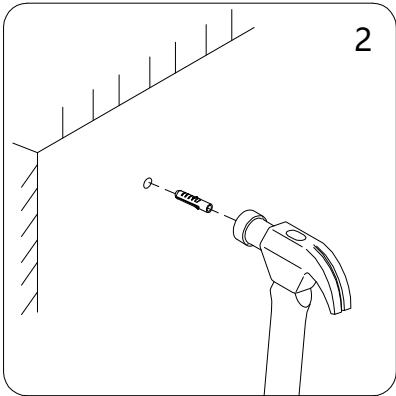

2

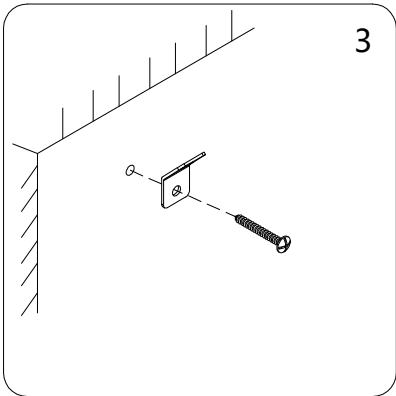

3

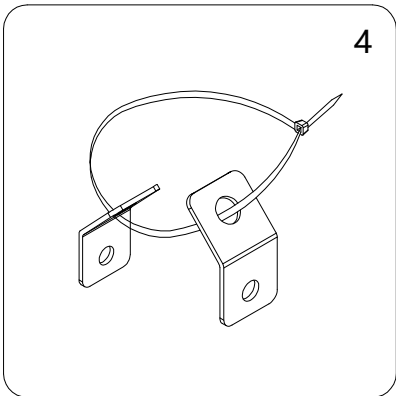

4

