





SOFT, DRY CLOTH



CHEMICAL



HEAT



KEEP DRY



HANDLE WITH CARE



DO NOT USE KNIFE

ASSEMBLY INSTRUCTION

DESCRIPTION : 4 DOOR SHOE CABINET


HARDWARE

AWOOD DOWEL
8 X 25
1X4**B**CB SCREW
M3.5X16MM
1X24**C**CB SCREW
M4X38MM
1X8**D**NAIL 6/8
1X25**E**PVC SHELF
SUPPORT
1X16**F**DOOR
SUPPORT
SPRING
1X2**G**3.5KG MAGNET
(1 HOLE)**G2**3.5KG MAGNET
(1 HOLE)**G3**CB SCREW
M3X12MM


4 SETS

HMAS L4
1X1**H2**MAS R4
1X1**I**MAS L2
1X1**I2**MAS R2
1X1**J**ROUND
PLASTIC
LEG (PVC)
1X4**K**MINIFIX 5654+5546
4 SETS**K1**MINIFIX 5654+5546
4 SETS**L**L-KEY
1X1**M**QUICKFIT
CAP
1X4


PART LIST

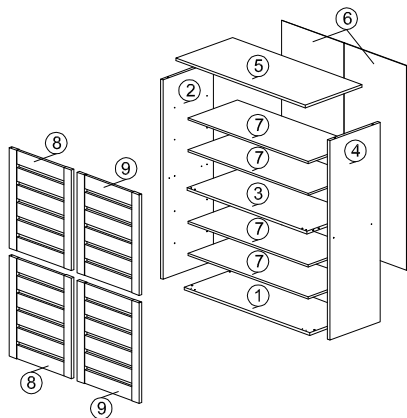


STEP 1

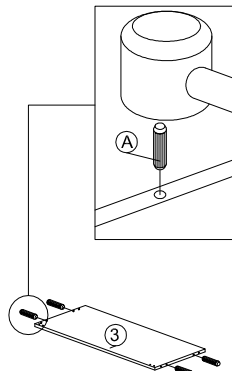


STEP 2

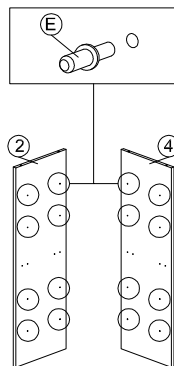


STEP 3

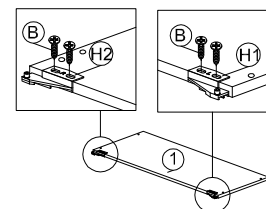


STEP 4

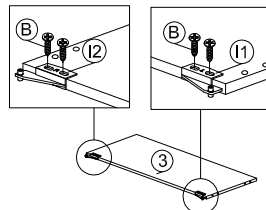


STEP 5

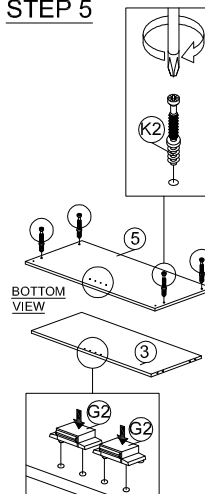


STEP 6

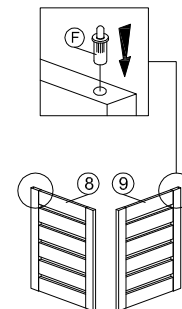


STEP 7

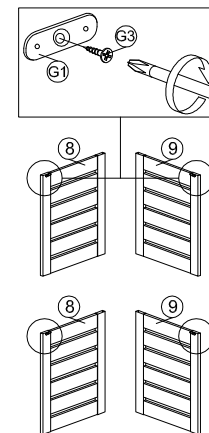


STEP 8

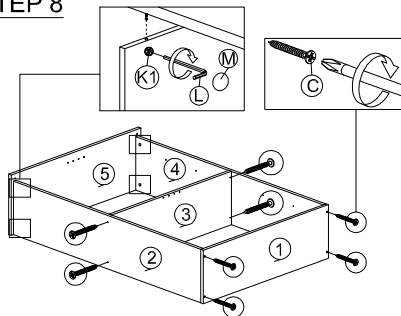


STEP 9

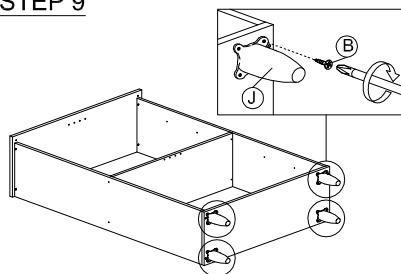


STEP 10

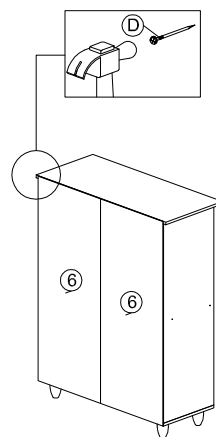

STEP 11

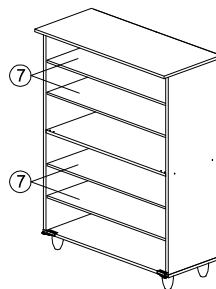

STEP 12

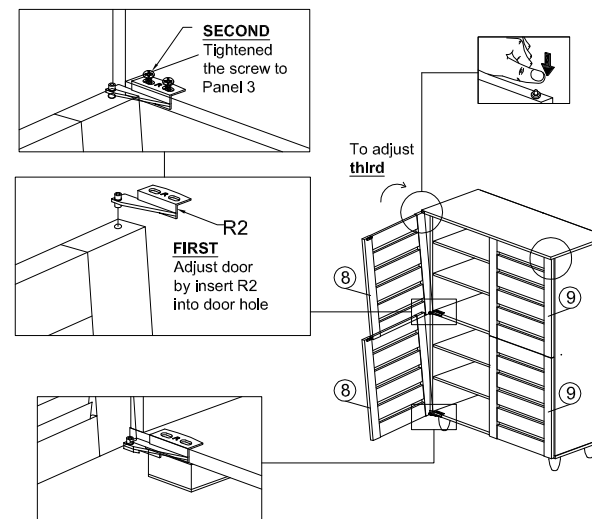

COMPLETED

