
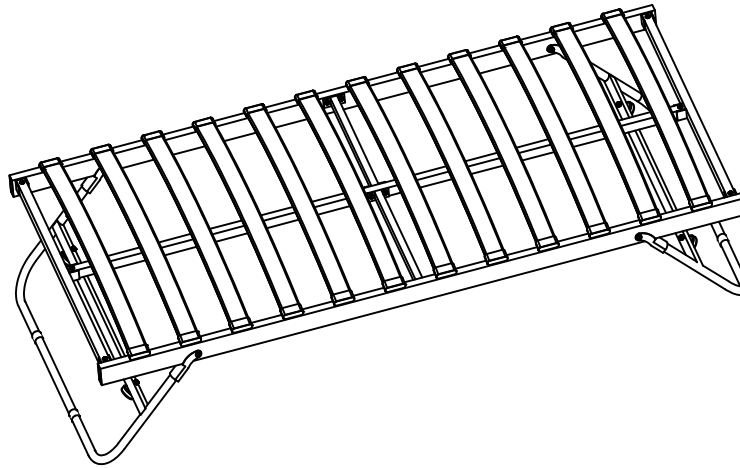
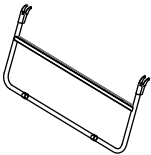
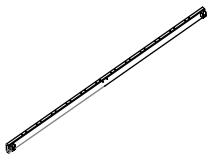
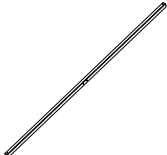
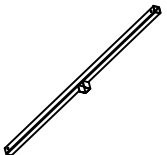
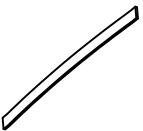






ASSEMBLY INSTRUCTIONS



1. Feet 2 pcs 	2. Siderails 2 pcs 	3. Centre bar 1 pc 	4. Cross bar 2 pcs 
5. Connect tube 2 pcs 	6. Slat 12 pcs 	7. Wheel 4 pcs 	A. M6 x 12mm 4pcs 
B. M6 x 35mm 6pcs 	C. M6 x 40mm 2pcs 	D. M8 x 50mm 4pcs 	E. Nut 8pcs  M6
F. Nut 4pcs  M8	G. Plastic cap 24pcs 	H. M6 Spanner 1pc 	I. M8 Spanner 1pc 
J. M6 Allen Key 2pcs 	K. M8 Allen Key 2pcs 		

Please find in this pack our FAQ guide for this bed should you need it.

We would like to take this time to thank you for choosing Crazy Price Beds, we would love to hear back from you about your experience with us so please leave us a review.

When it comes to assembling we recommend to check that you have the correct amount of parts against the bed breakdown before starting the frame.


Step by Step Guide to help build your Bed:

(NOTE: You may find the steps below do not follow the actual instructions. This is a universal guide for our Trundles and may not match the steps provided within the instruction pack)


1. Firstly we are going to look into attaching your cross support bars to the Side Rails. The cross bars will have a small lip in the middle which need to have the slot facing upwards. These cross bars will bolt into place. Please note that it is normal for part of the bolt to be left uncovered underneath the frame.
2. Once both cross bars are in place we can insert the central support bar and bolt into place just as we did with the above stage. Make sure these are bolted in tightly.
3. Now we need to attach the small support bars that are placed in between the Rails of the bed. You will find we attach to the side of the frame using the smaller bolts while they attach through the middle of the central support bar using the larger 40mm bolt. It is best here to attach loosely into the side rails then loosely through the middle and then tighten up.
4. Our attention will now move to attaching your feet to the frame. We now use the thicker of the bolts. There may be some clearance where the feet attach. Please do not worry about this. When tightening up this gap will decrease until both metal parts are touching.
5. Once this stage is complete you need to add the wheels to your frame.
6. Finally we add the slats. Simply slot over the Caps on both sides and push into place.
7. Your trundle is now completed.

STEP 1


INSTRUCTION

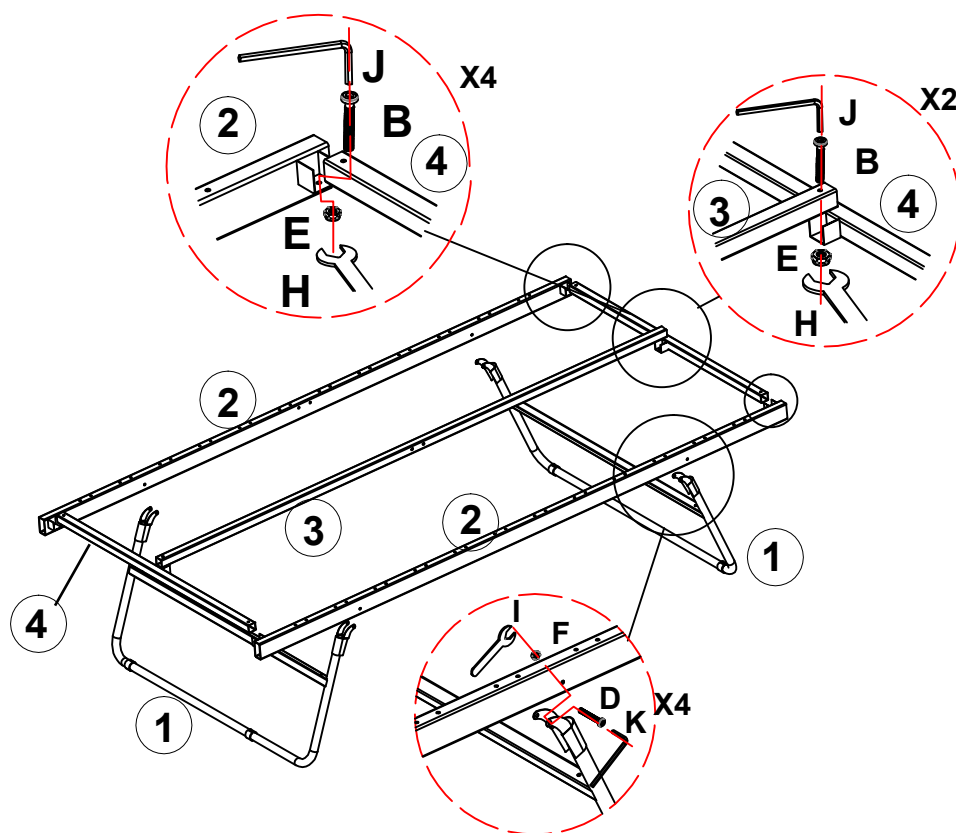

STEP 2

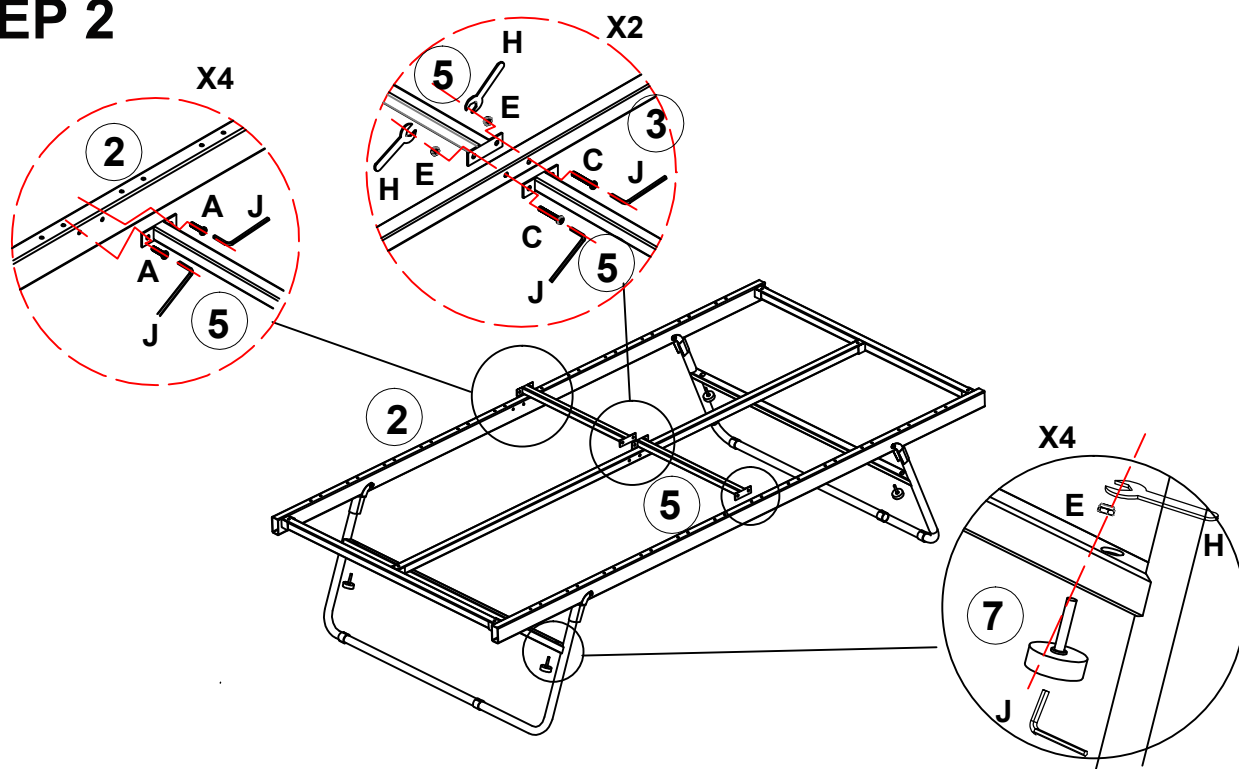

STEP 3

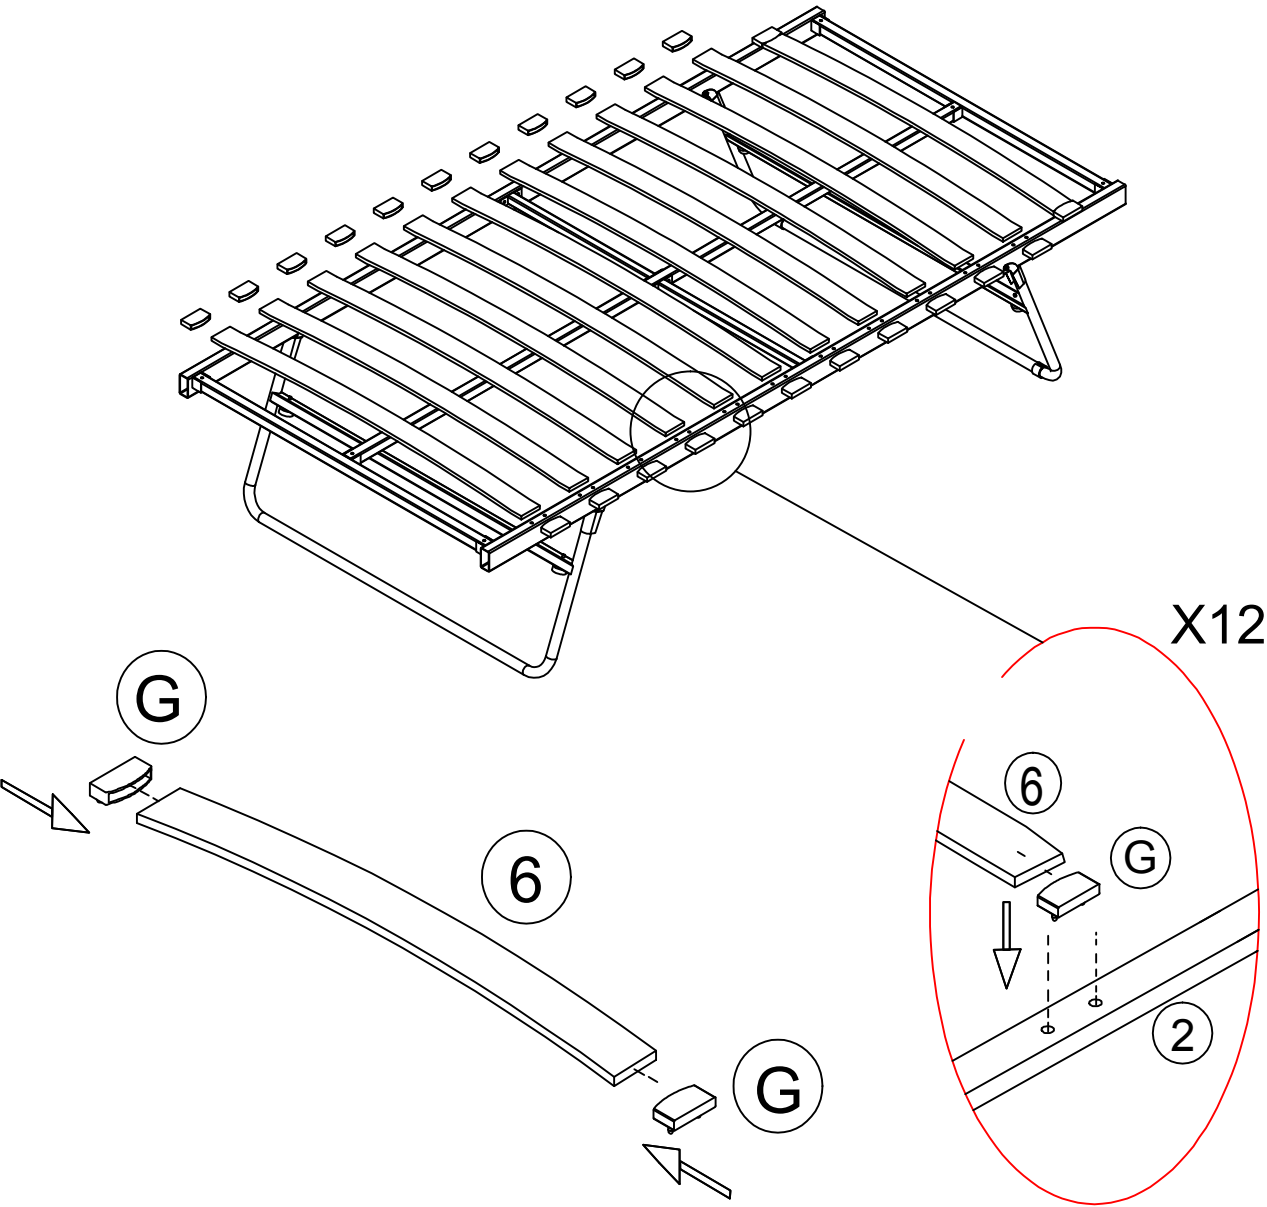

FAQ:

Q. How long does this take to build?

- A. We do recommend a 2 person build and the build on average takes approx. half an hour

Q. My Hardware Pack Is Missing? What do I do?

- A. Please re-check Box 1, this should be in a small palm sized plastic wrapped pack attached to the box with a piece of red string. If it is still missing please contact us and one of our team will send you a new pack out as soon as possible.

Q. My Central Support Bar does not fit into the metal cross bars?

- A. The most common issue here is a small effort required to push these into place to secure them into place before being bolted down. If this extra force doesn't solve your issue please send us an email with an image of your issue and one of our team will help you resolve the situation.

Q. I have missing parts or not enough parts? What should I do?

- A. Please get in touch, we will want to resolve this issue as soon as possible by sending out replacement parts. Please reference the bed breakdown when contacting us as well as your order number and we will resolve this as quickly as possible.

Q. How do I fit in my Slats?

- A. This frame has Sprung Slats which meet into the central support bar and are fitted in with Black caps. Please construct a complete length of slats. Push in the side sections of the slats then push down the middle cap into place. Your slats should be curved upwards. You should hear them click into place. For a Single this process will be different as they will attach on either side rail of the bed only.

Q. My Central Support Legs are missing?

- A. It is important to note with our trundle we do not supply any Supporting Legs. Most single frames do not have any support legs other than the feet simply because they are strong frames and do not require them.

Q. What Mattress is recommended for this trundle?

- A. If you have purchased one of our mattresses you will find that the 12.5cm Memory foam and the 23cm orthopaedic will fit with no problem. The 25cm pocket sprung mattress will be a very tight fit and you will not be able to keep any bedding on the trundle when rolling underneath. The gap will differ between bed frames so it is best to email or call us for further advice.

Q. Which way do I put in my Central Support Bar?

- A. You may be asking this if you have a single frame. Put simply in the single you can have the support bar either way i.e. pre-drilled holes facing upwards or downward, either way will not affect the structure of the bed. On the Double and King you will need the pre-drilled holes facing upwards as this is where the middle slat caps will be pushed into.

If you do have any further questions or queries we have not covered above please get in touch and we will be happy to help.