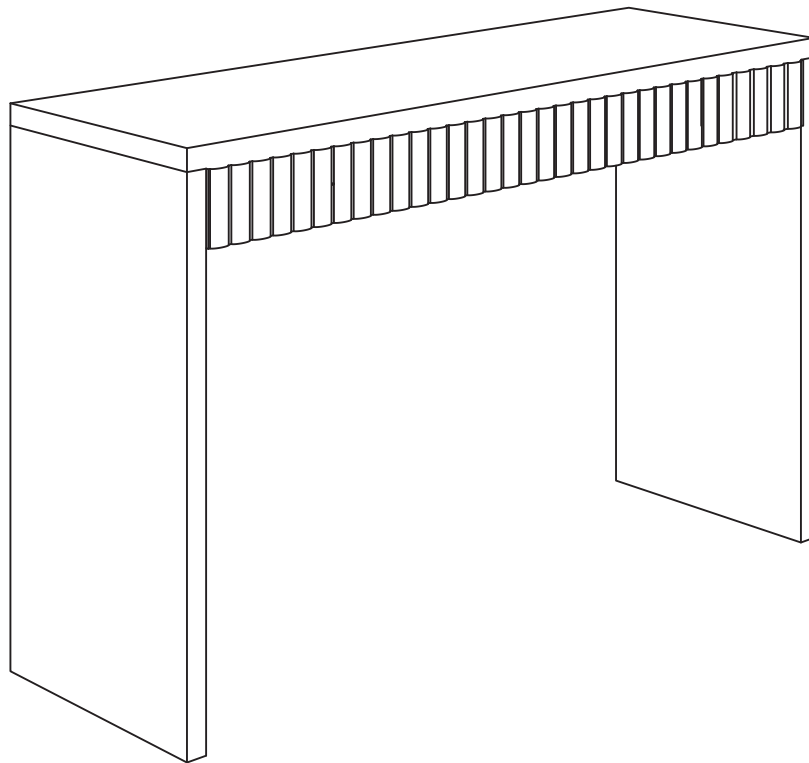


CONVENIENCE CONCEPTS

NORTHFIELD CARMEL CONSOLE TABLE 122092



SCAN QR CODE FOR
E-MANUAL, IF DESIRED

ASSEMBLY INSTRUCTIONS

We have designed our furniture with you , the customer in mind . Our clear , easy to follow , step by step instructions will guide you through the project from start to finish .
Feel confident that this will be a fun and rewarding project . The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment .





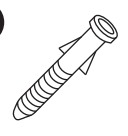
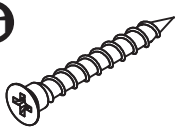
Please do not return to the store
Broken or missing parts?
Need help with assembly?

Our Illinois based customer service team is ready to help with any problems or questions you may have.
Please give us a call (Toll Free) at 1-800-468-6447, or email us at parts@convenience-concepts.com.
Normal hours of Operation: M-F* 8am-4pm CST.


*Excludes Holidays

This product 's warranty is only valid through authorized dealers.


Hardware List

A 	B 	C 	D 	E 
Cam bolt (14pcs)	Camlock (14pcs)	Wood dowel (8pcs)	Glue (1pc)	Safety Wall Strap (2pcs)
F 	G 	H 		
Wall Anchor (2pcs)	Long Flat Screw (2pcs)	Short Flat Screw (2pcs)		

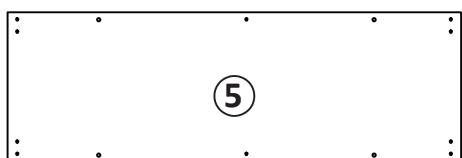
Panel List

1


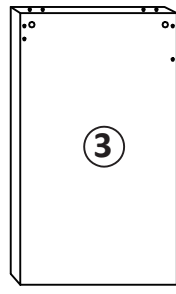
Front support panel (1pc)

2


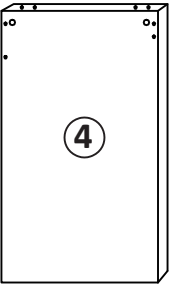
Back support panel (1pc)

5


Top panel (1pc)

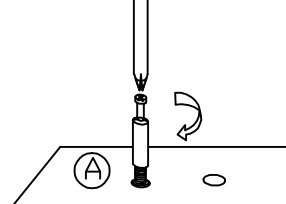
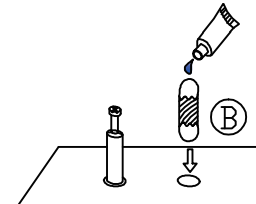
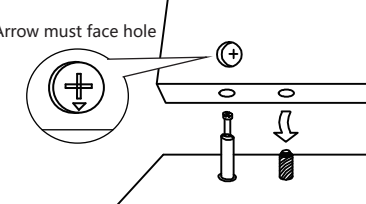
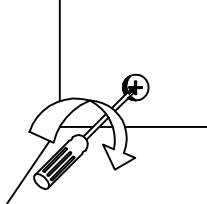
3


Left side panel (1pc)

4


Right side panel (1pc)

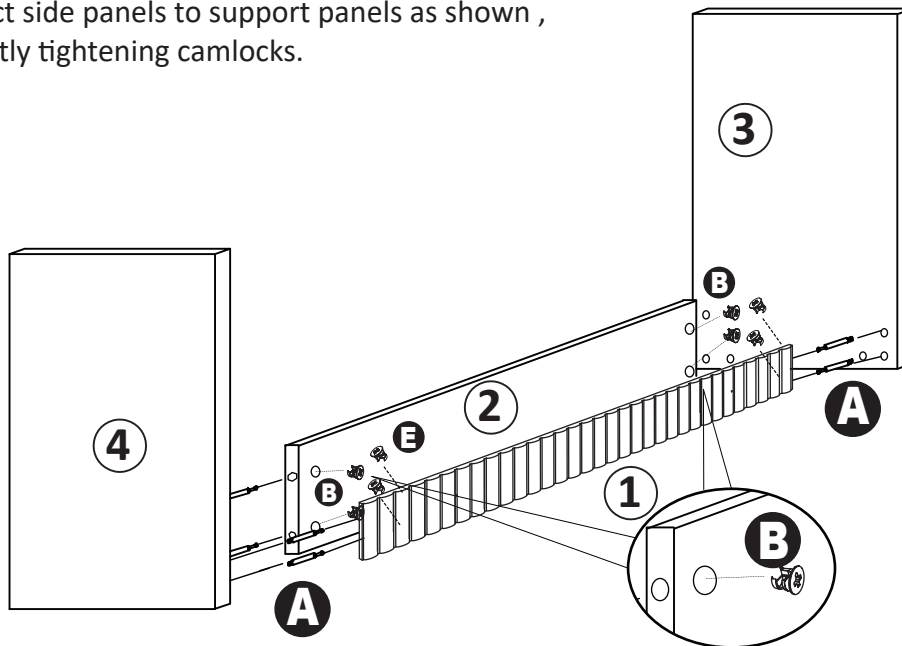
Assembling the unit with camlocks and wood dowels.

			
Gently screw cam bolt into the threaded anchor.	Lightly glue one end of the wood dowel and tap halfway into hole.	Lightly glue wood dowel and connect to second panel by inserting dowels into holes.	Screw the camlock firmly into locked position.

Page 2 of 4

Step 1

1. Screw cam bolts (A) into left side panel (3) and right side panel (4).
2. Insert camlocks (B) into front support panel (1) and back support panel (2).
3. Connect side panels to support panels as shown, by gently tightening camlocks.



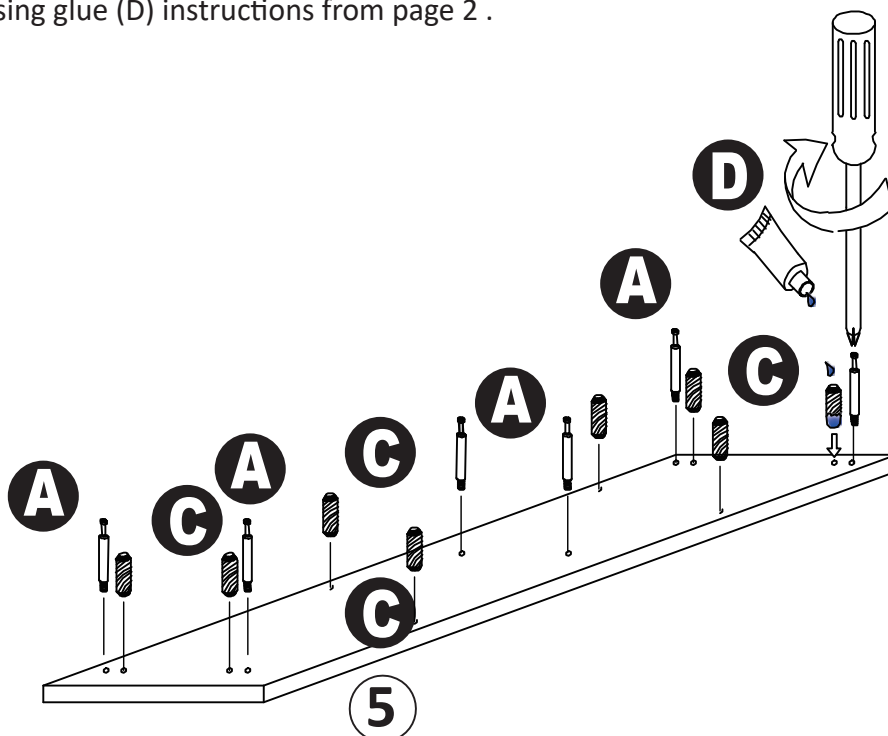
X 8



X 8

Step 2

1. Place top panel (5) upside down on carpet or another soft surface.
2. Screw cam bolts (A) into top panel (5).
3. Insert wood dowels (C) into top panel (5) using glue (D) instructions from page 2.



X 6



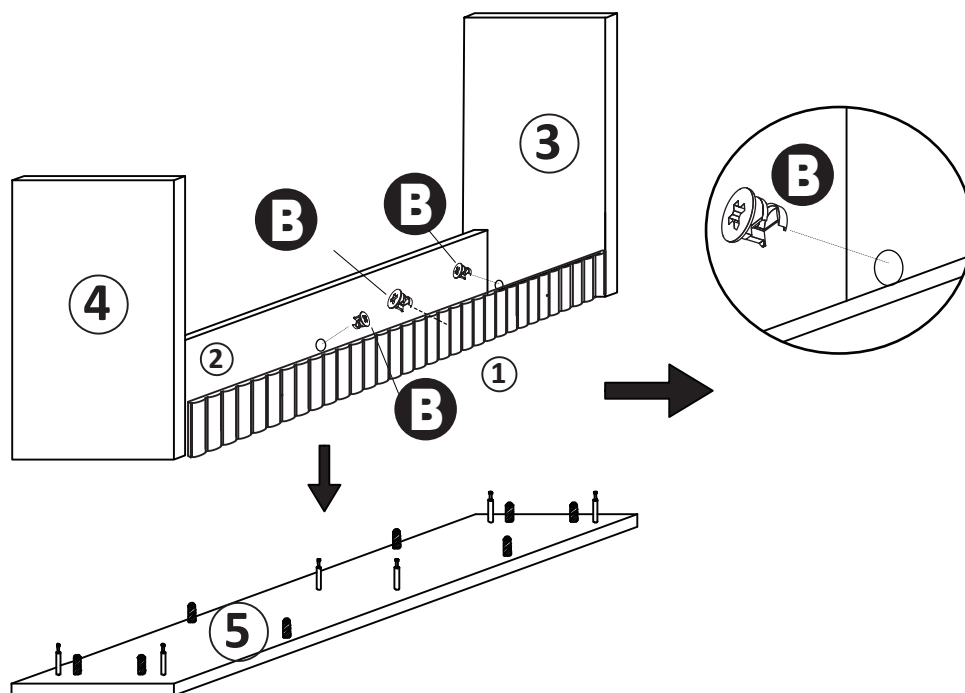

X 8



X 1

Step 3

1. Connect the top panel (5) to unit by gently tightening camlocks .



Step 4

1. Connect the Safety Wall Straps (E) to unit as shown using Short Flat Screws (H).
2. Drill hole slightly smaller than Wall Anchors (F) into drywall and gently tap Wall Anchors into hole.
3. Connect Safety Wall Straps (E) to Wall Anchors (F) as shown using Long Flat Screws (G) .
4. Enjoy !

