



ASSEMBLY INSTRUCTIONS

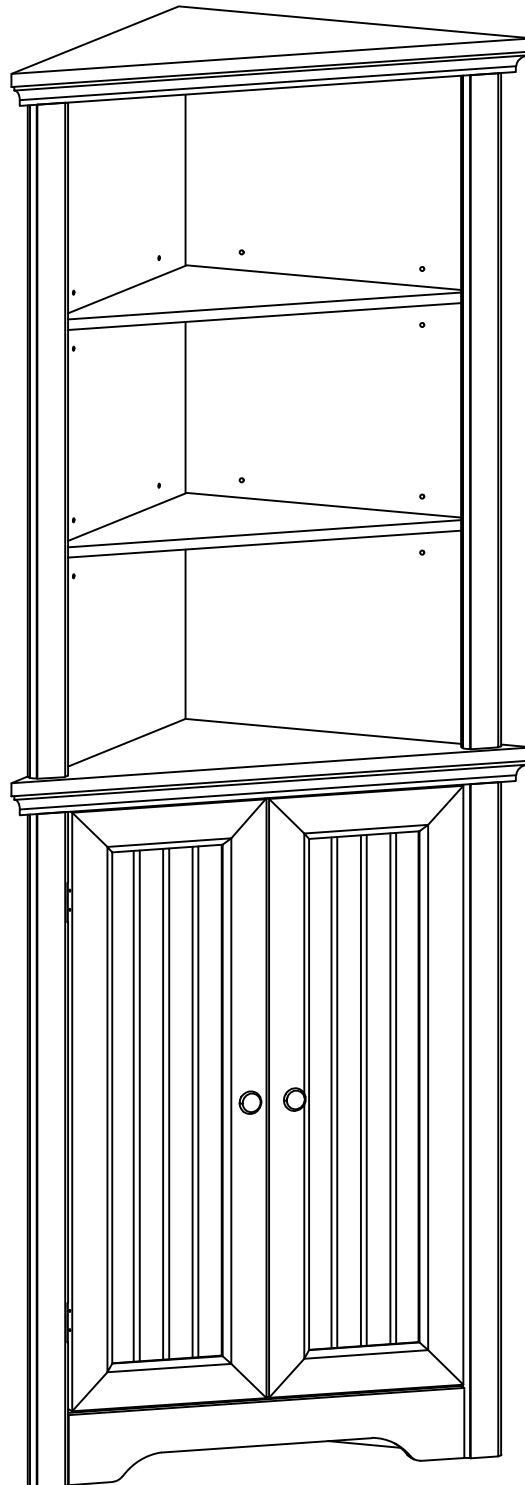

WARNING !




Estimated Time for Assembly


60 mins




Weight Limitation

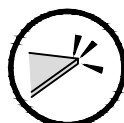

Watch out for collisions

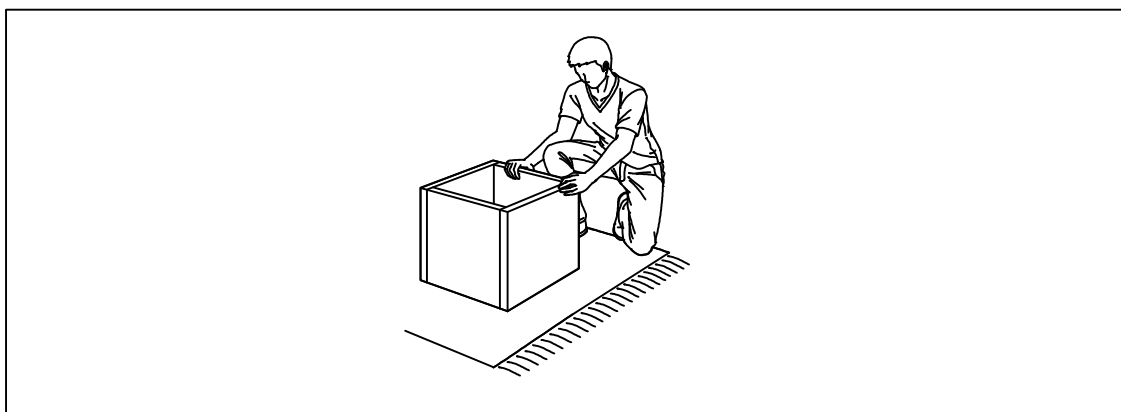


Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

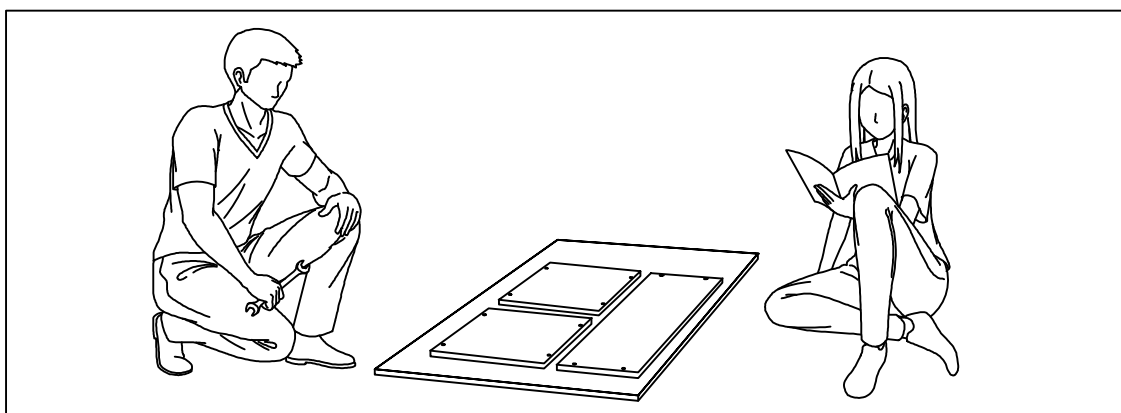

This furniture requires 2 people to assembly.


Make sure no parts are missing or damaged before assembly.

PACKAGE CONTENT

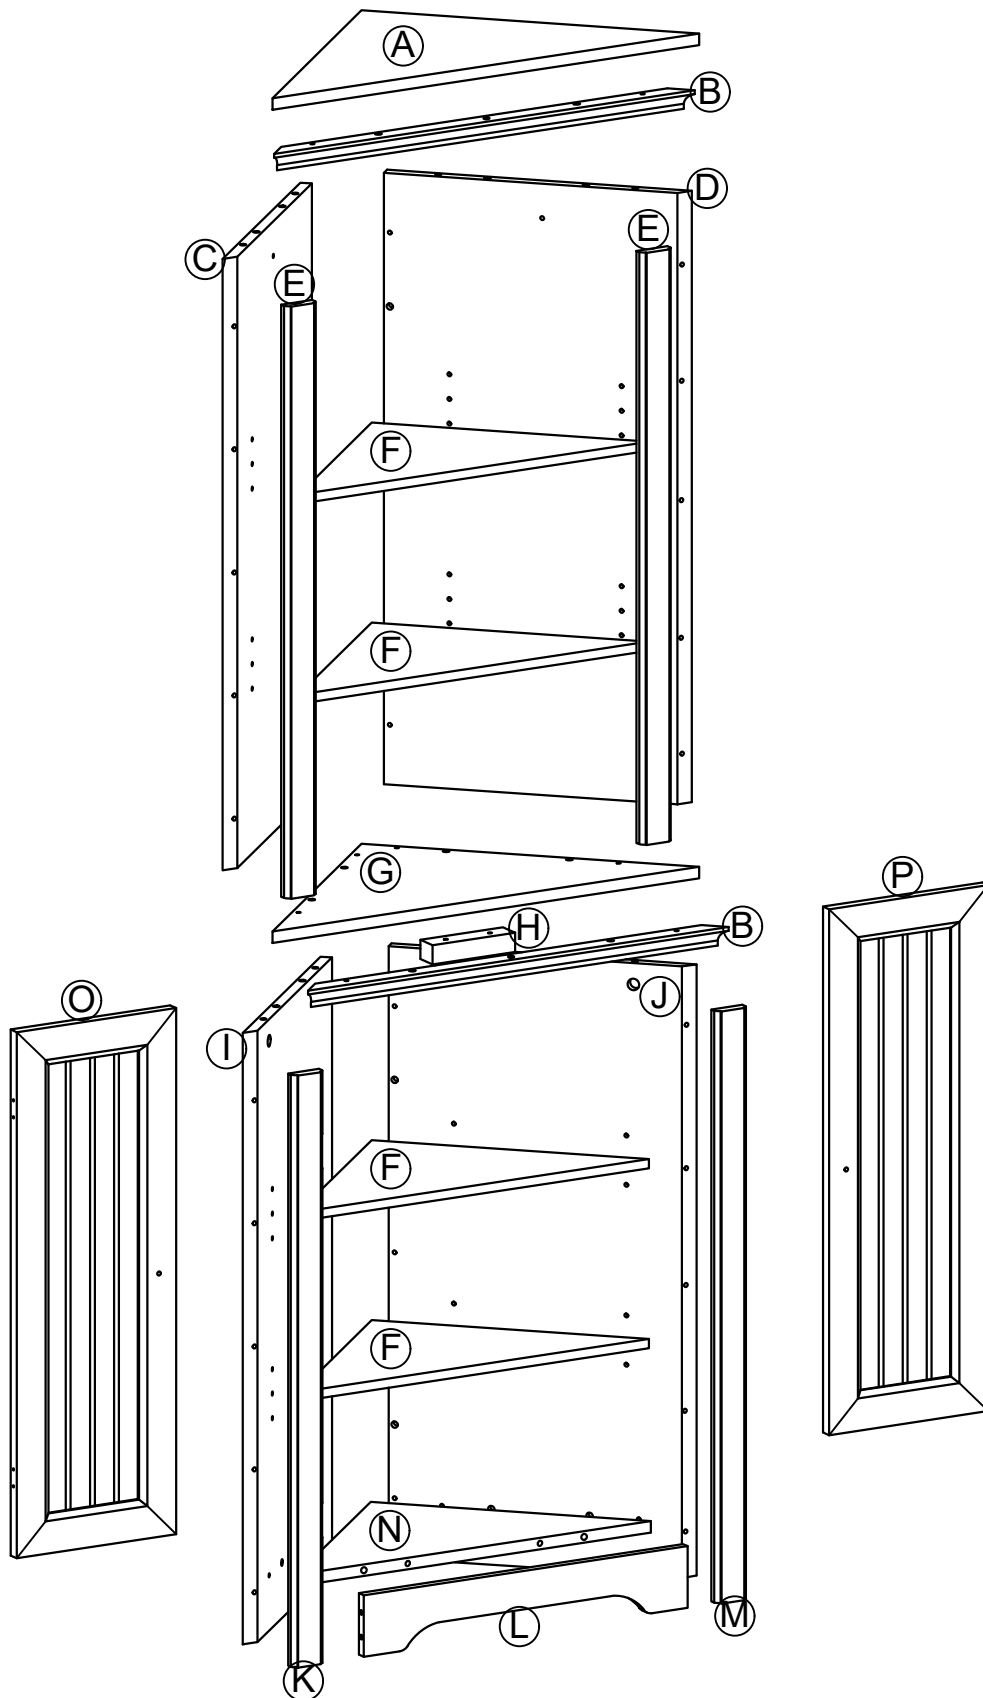


BOARD IDENTIFICATION


Not actual size

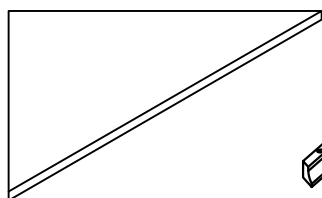


Ⓐ X1

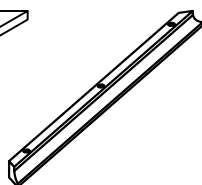


Ⓑ X2

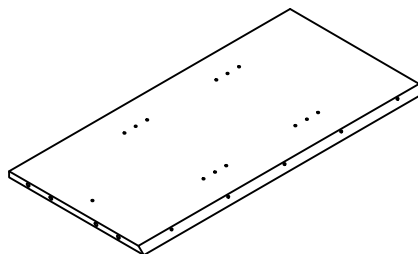


Ⓒ X1

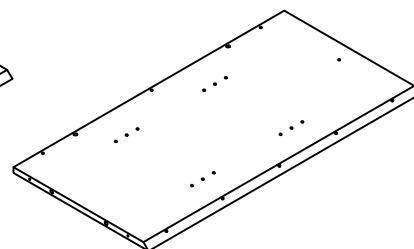


Ⓓ X1

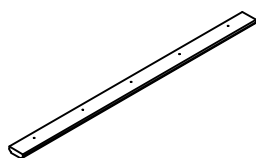


Ⓔ X2

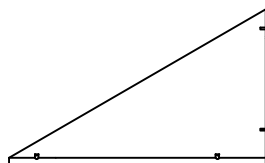


Ⓕ X4

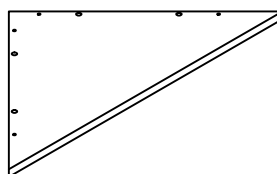


Ⓖ X1




Ⓗ X1

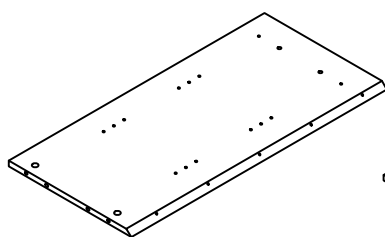


Ⓘ X1

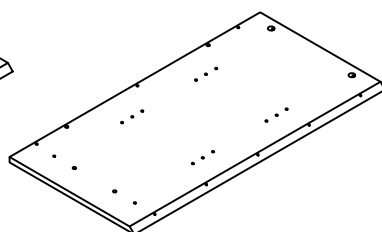


Ⓙ X1

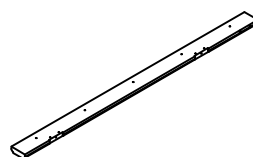


Ⓚ X1

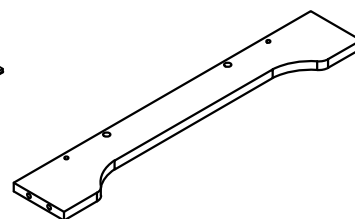


Ⓛ X1

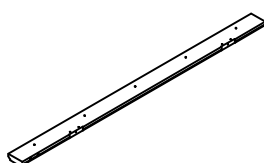


Ⓜ X1

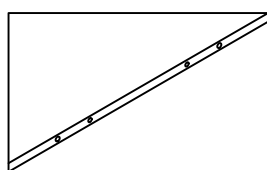

Ⓝ X1















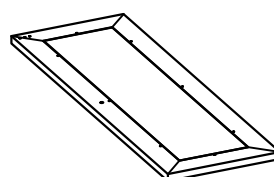


Ⓞ X1

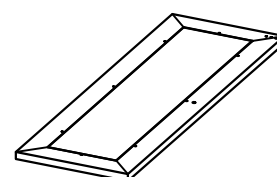


Ⓟ X1

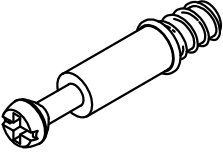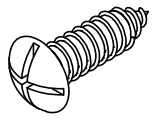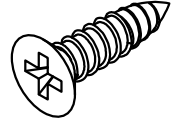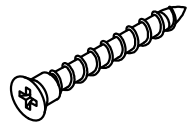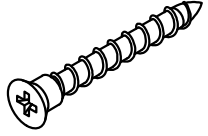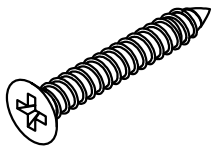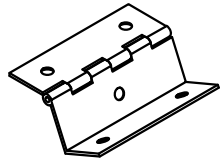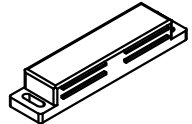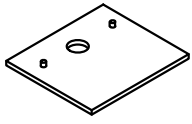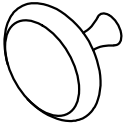


① X14+1  φ15*9.5	② X14+1  φ6*35	③ X26+2  φ8*30	④ X4  φ6*30
⑤ X2  φ3*14	⑥ X22+2  φ3.5*14	⑦ X16+1  φ5*16	⑧ X8  φ4*35
⑨ X10+1  φ4*40	⑩ X20+2  φ4*25	⑪ X4 	⑫ X1 
⑬ X2 	⑭ X2 	⑮ X2  M4*22	⑯ X2 16A 16B
⑰ X1  72*30*5			


STEP 1

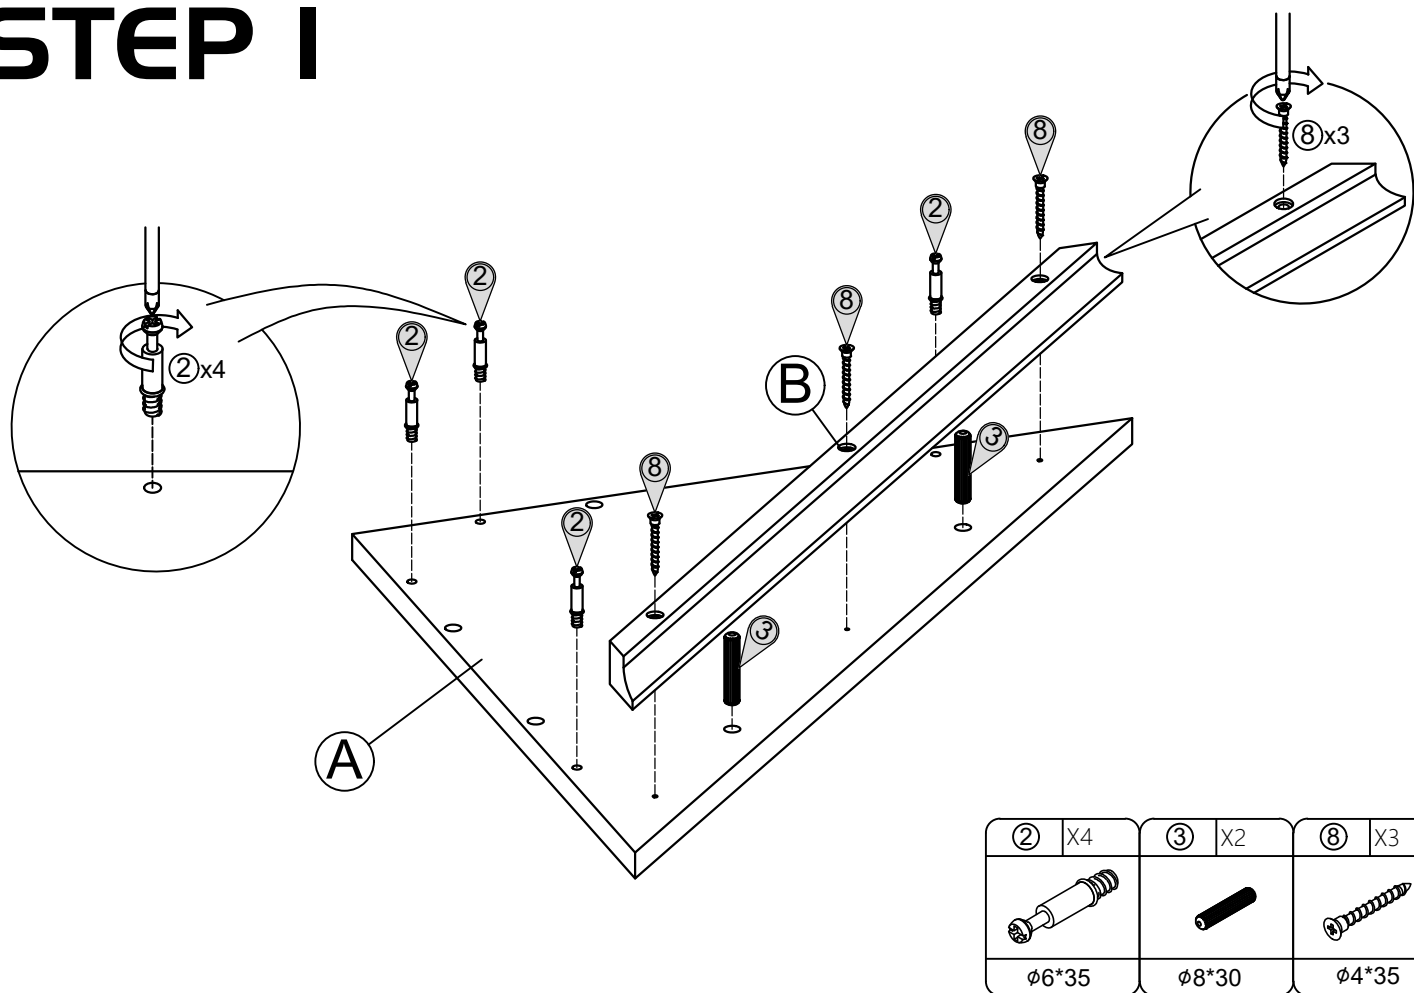


STEP 2

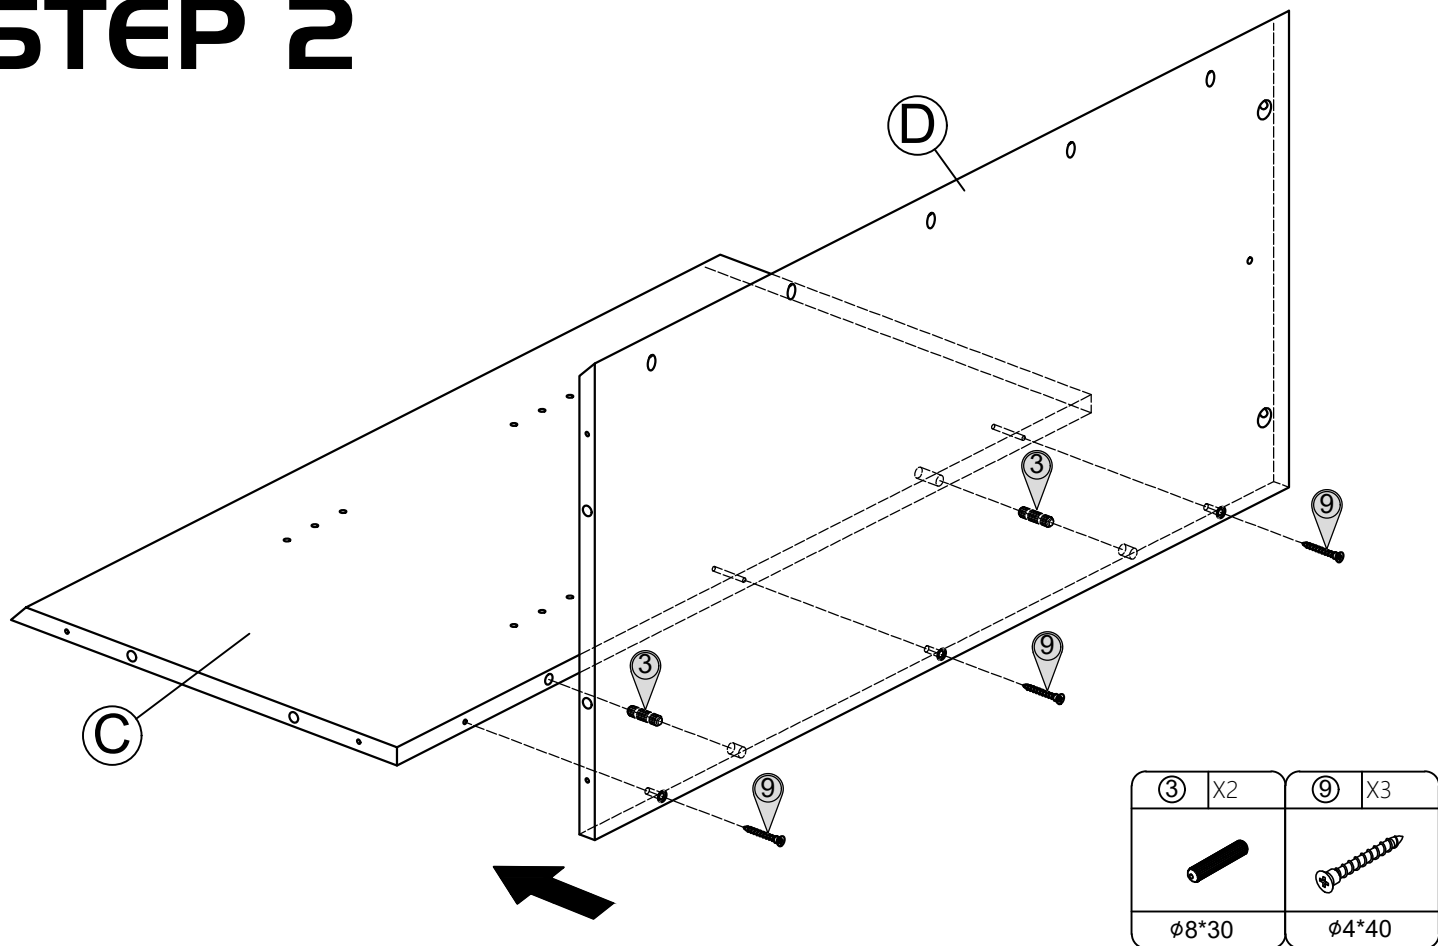


STEP 3

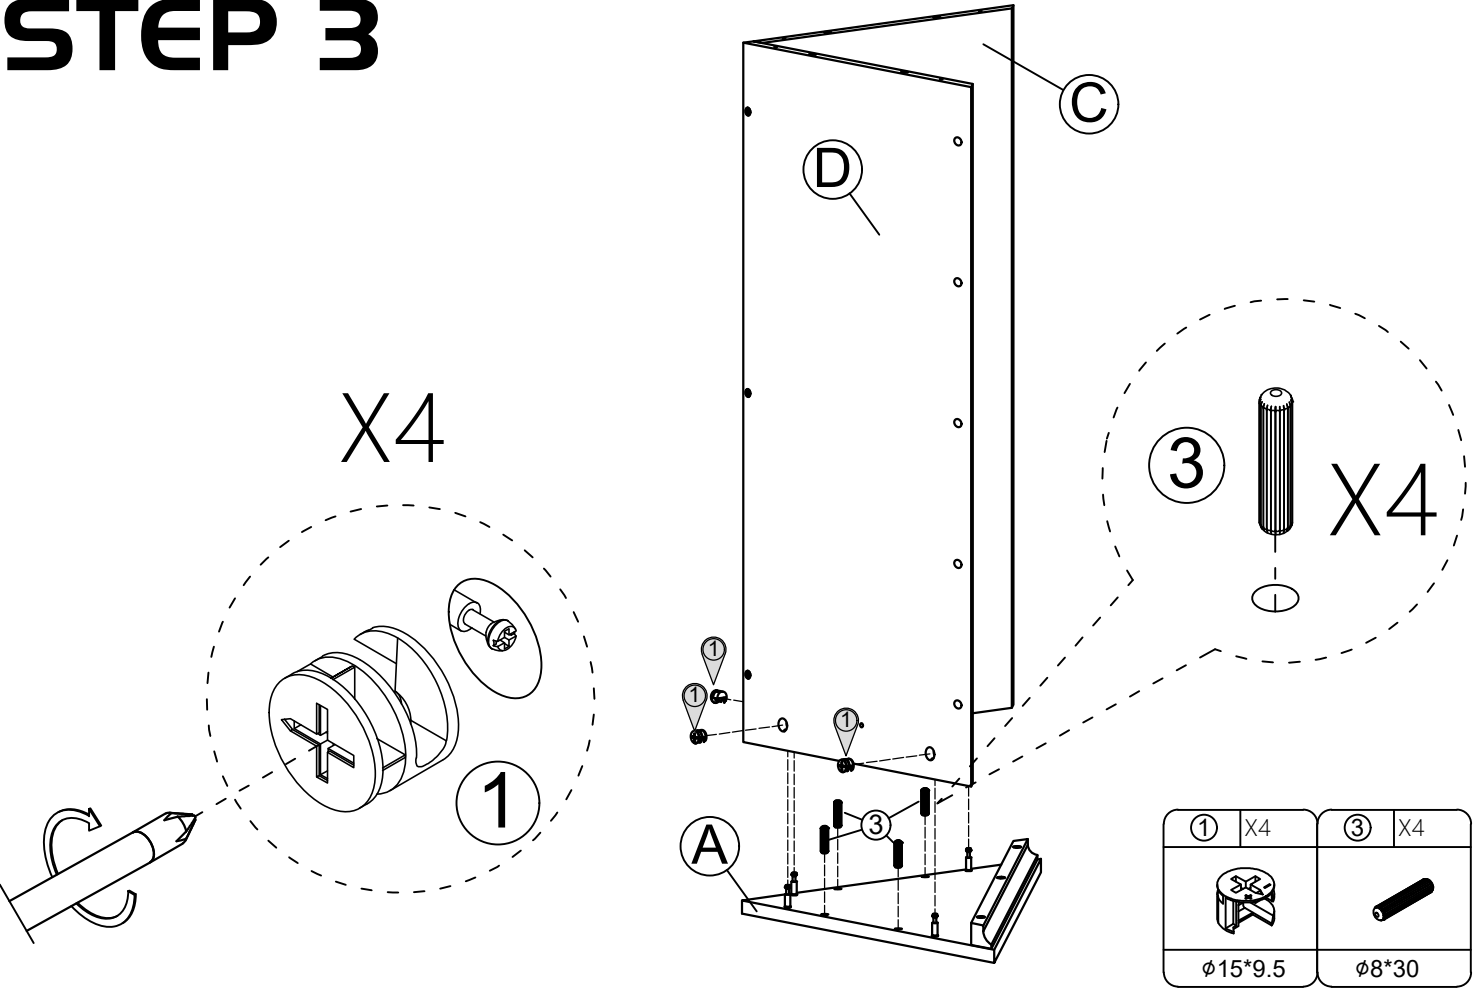

STEP 4

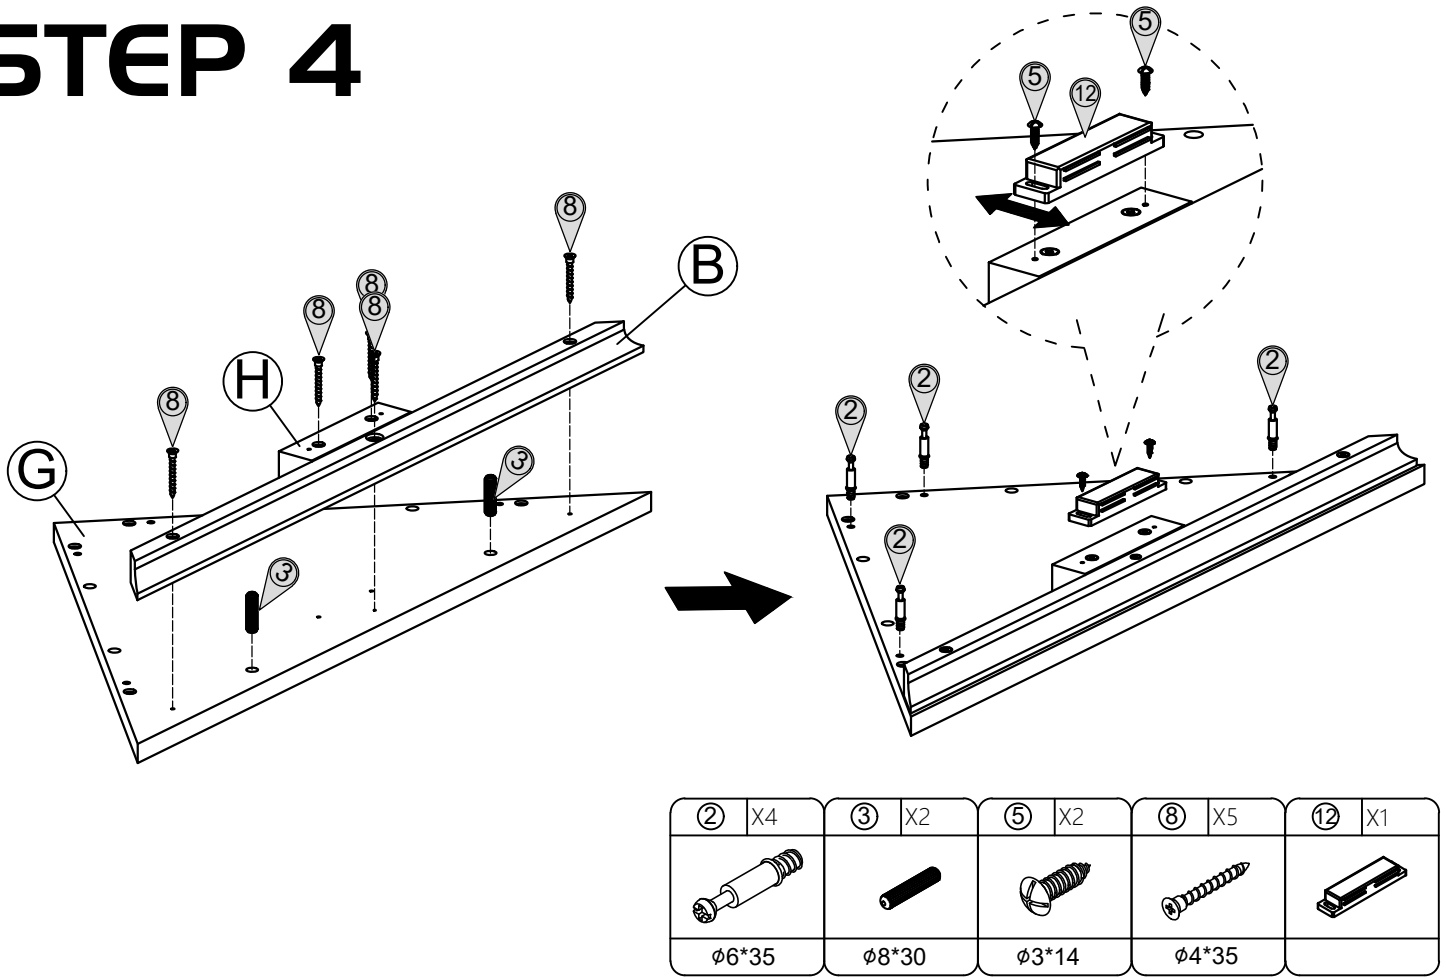



STEP 5

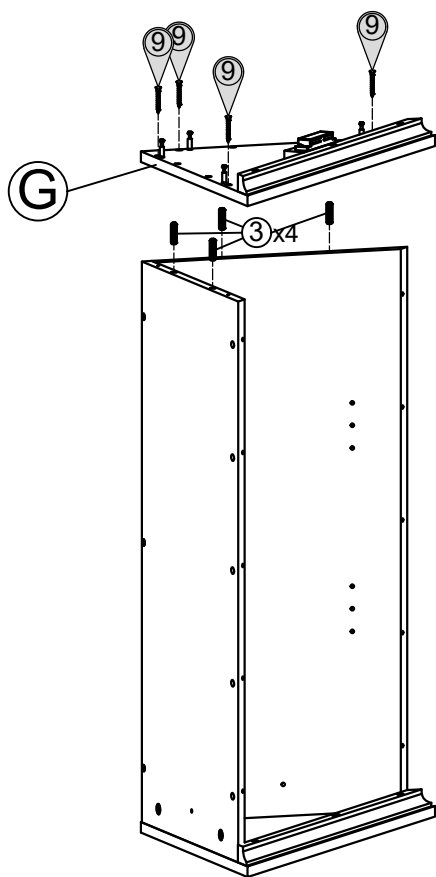


③	X4	⑨	X4
			
ø8*30		ø4*40	

STEP 6

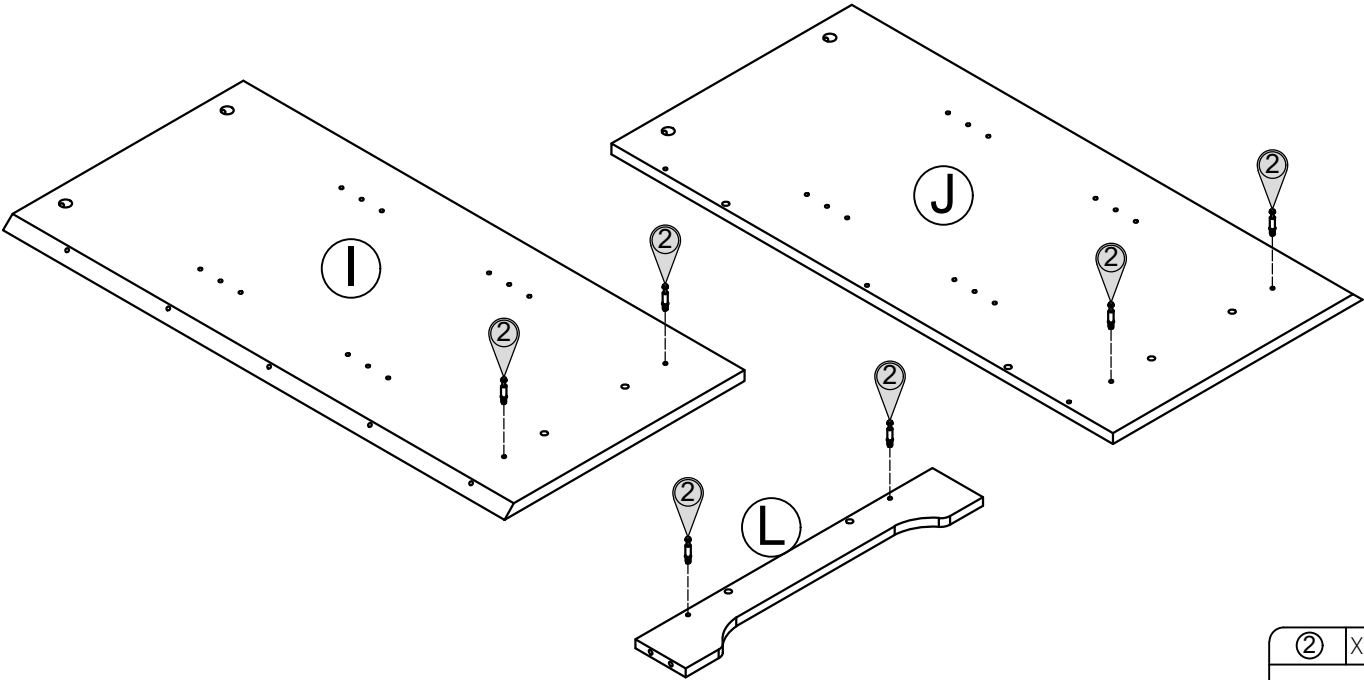


②	X6
	
ø6*35	

STEP 7

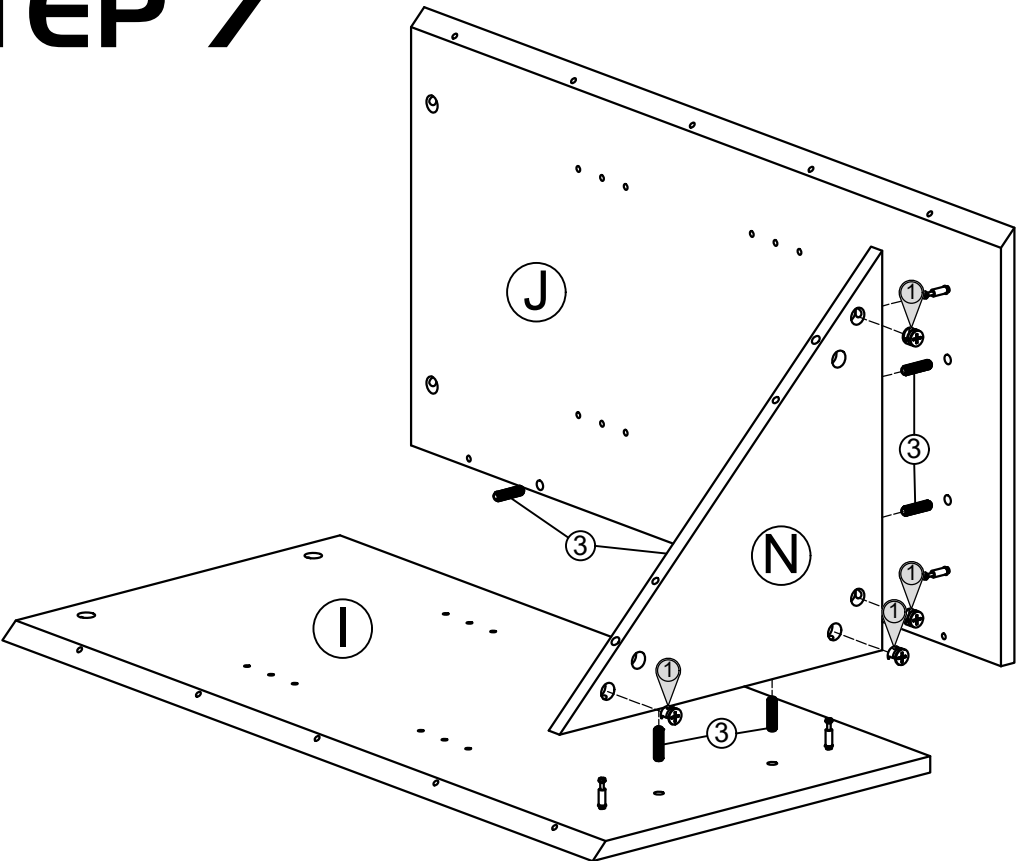


①	X4	③	X6
ø15*9.5		ø8*30	

STEP 8

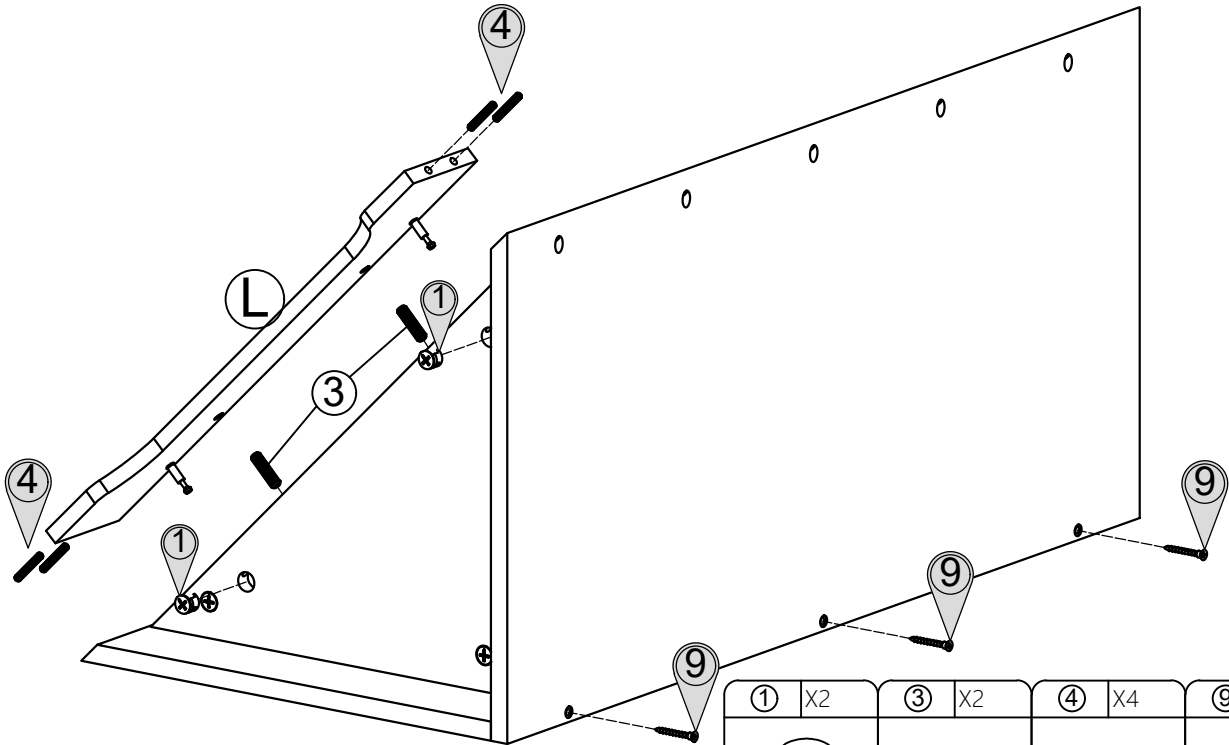


①	X2	③	X2	④	X4	⑨	X3
ø15*9.5		ø8*30		ø6*30		ø4*40	


STEP 9

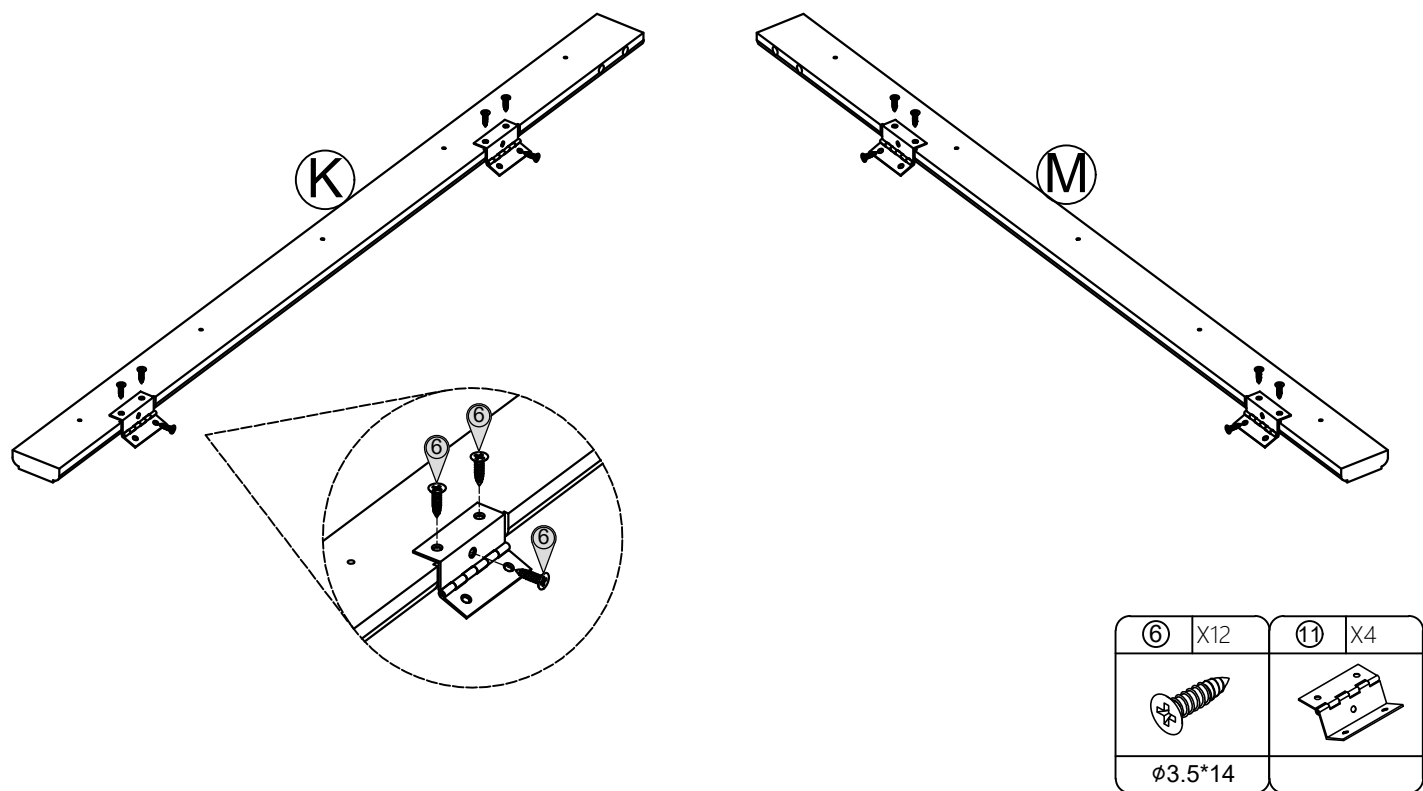

STEP 10

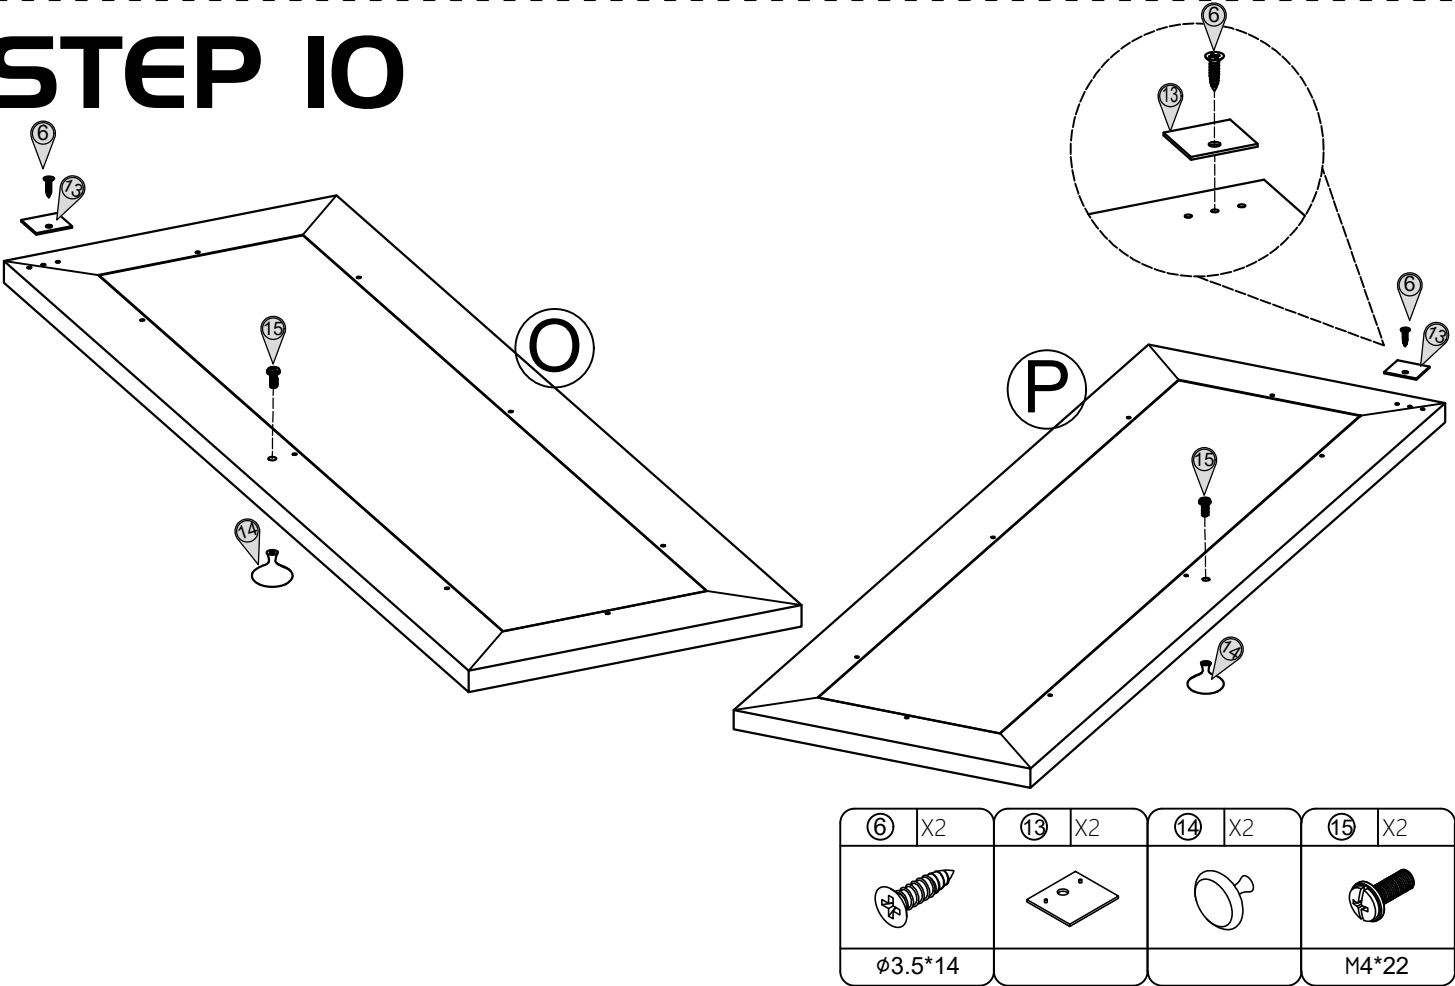


STEP II

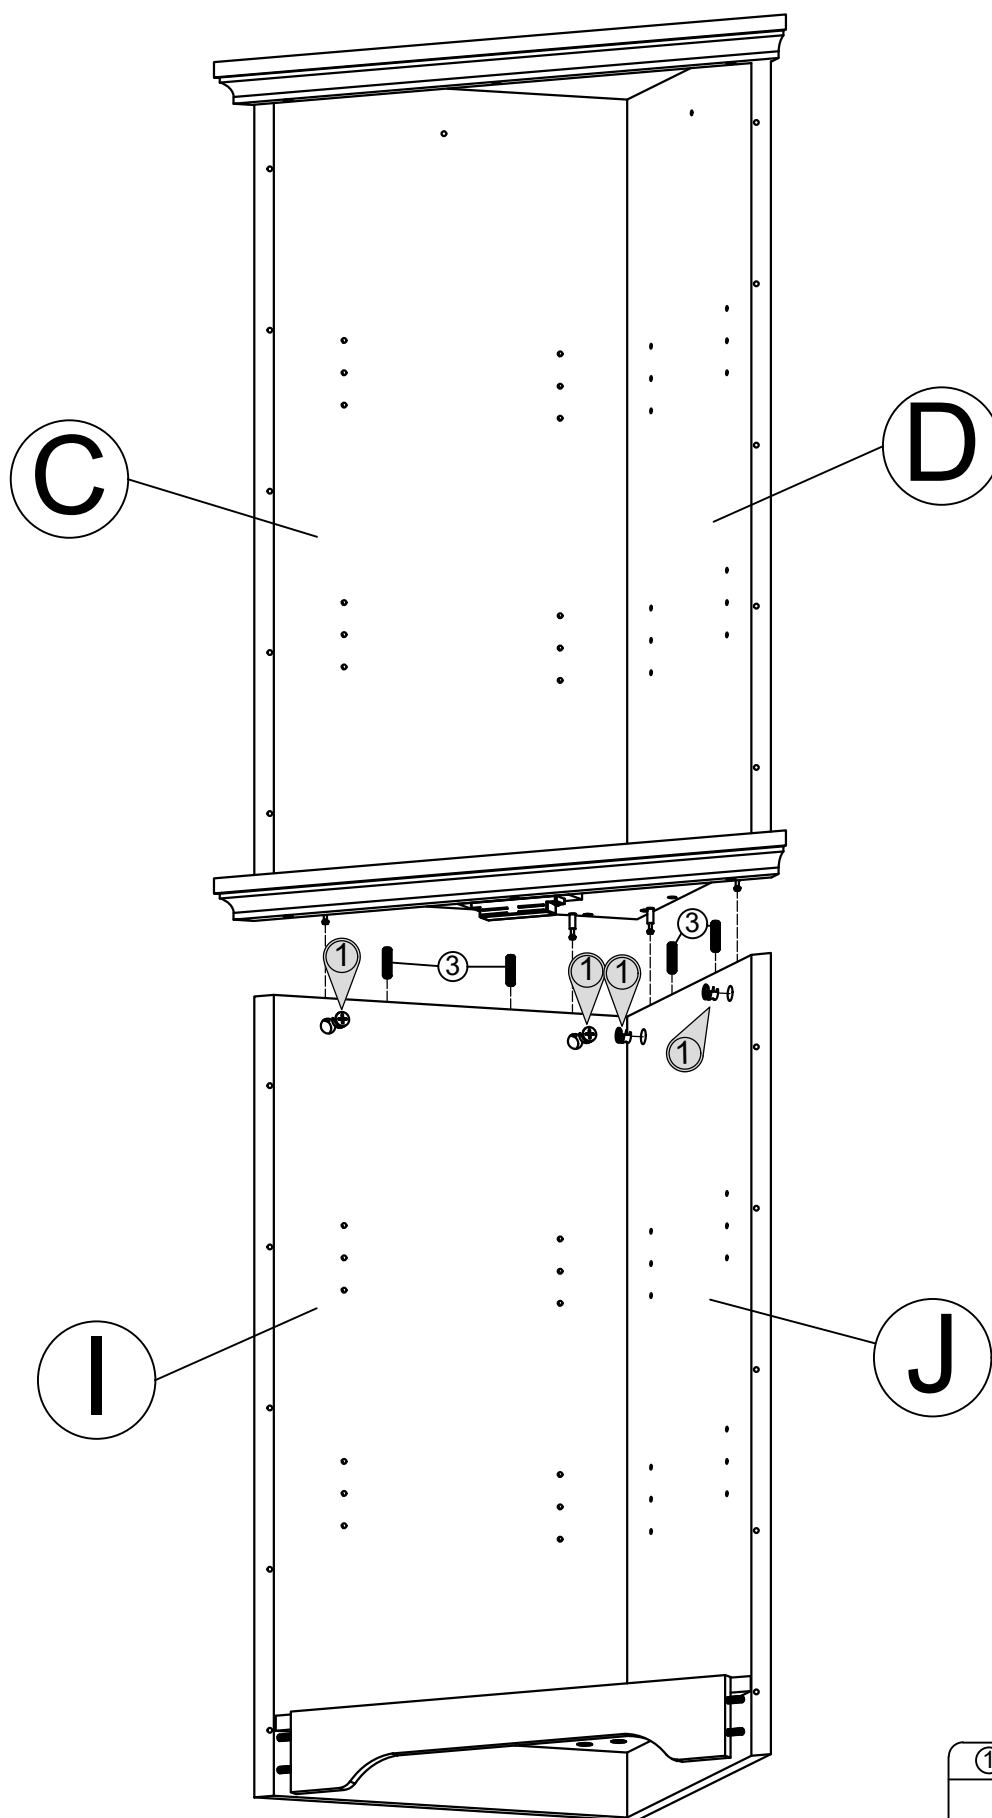


①	X4	③	X4
			
$\phi 15 \times 9.5$		$\phi 8 \times 30$	

STEP 12


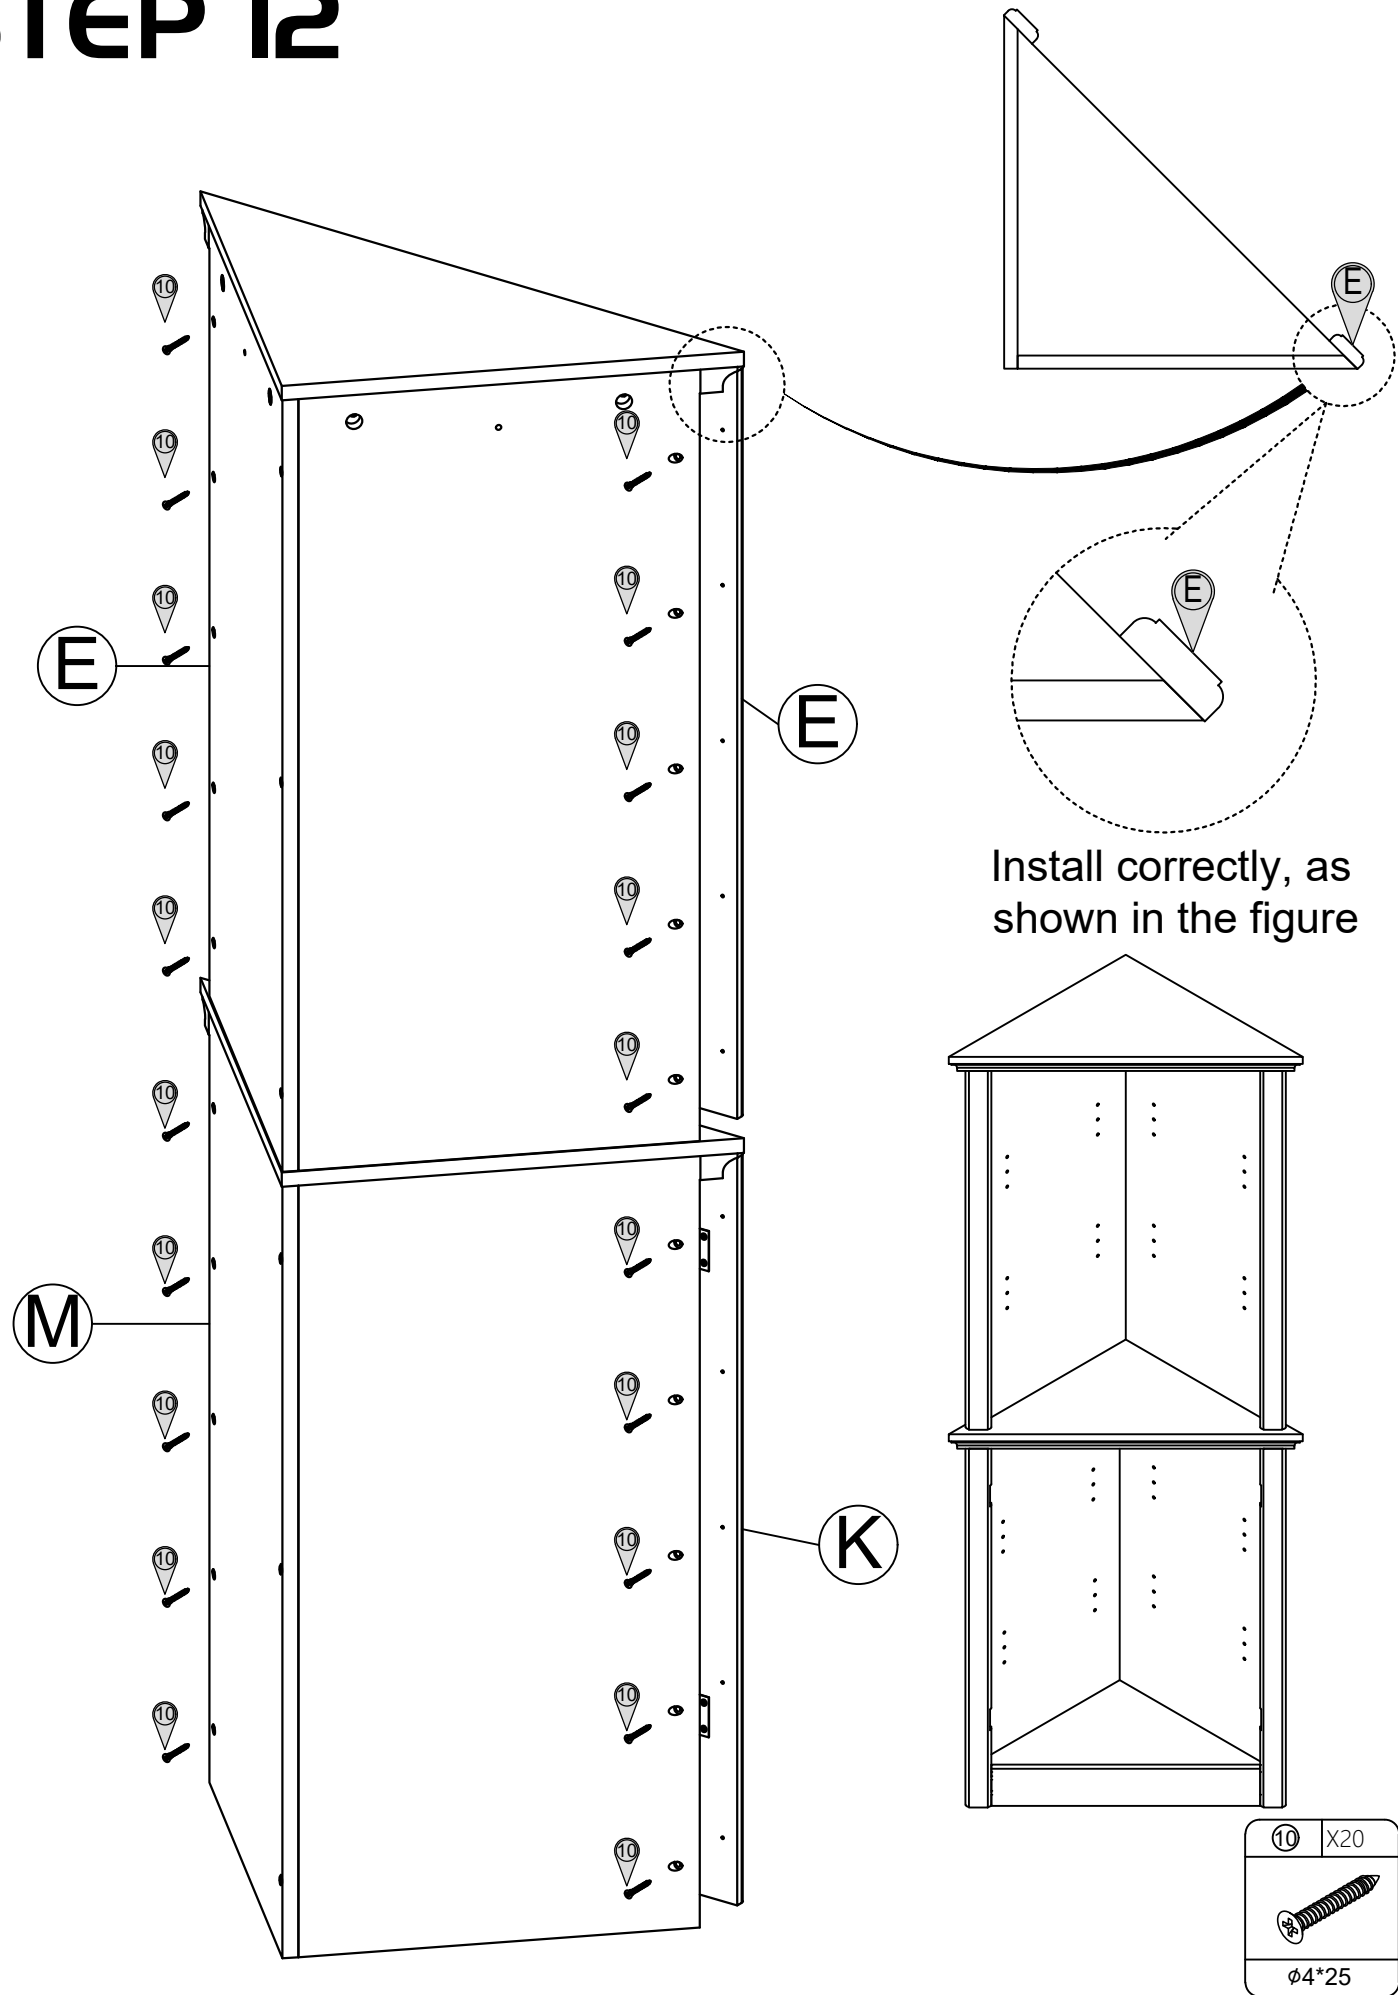


STEP 13

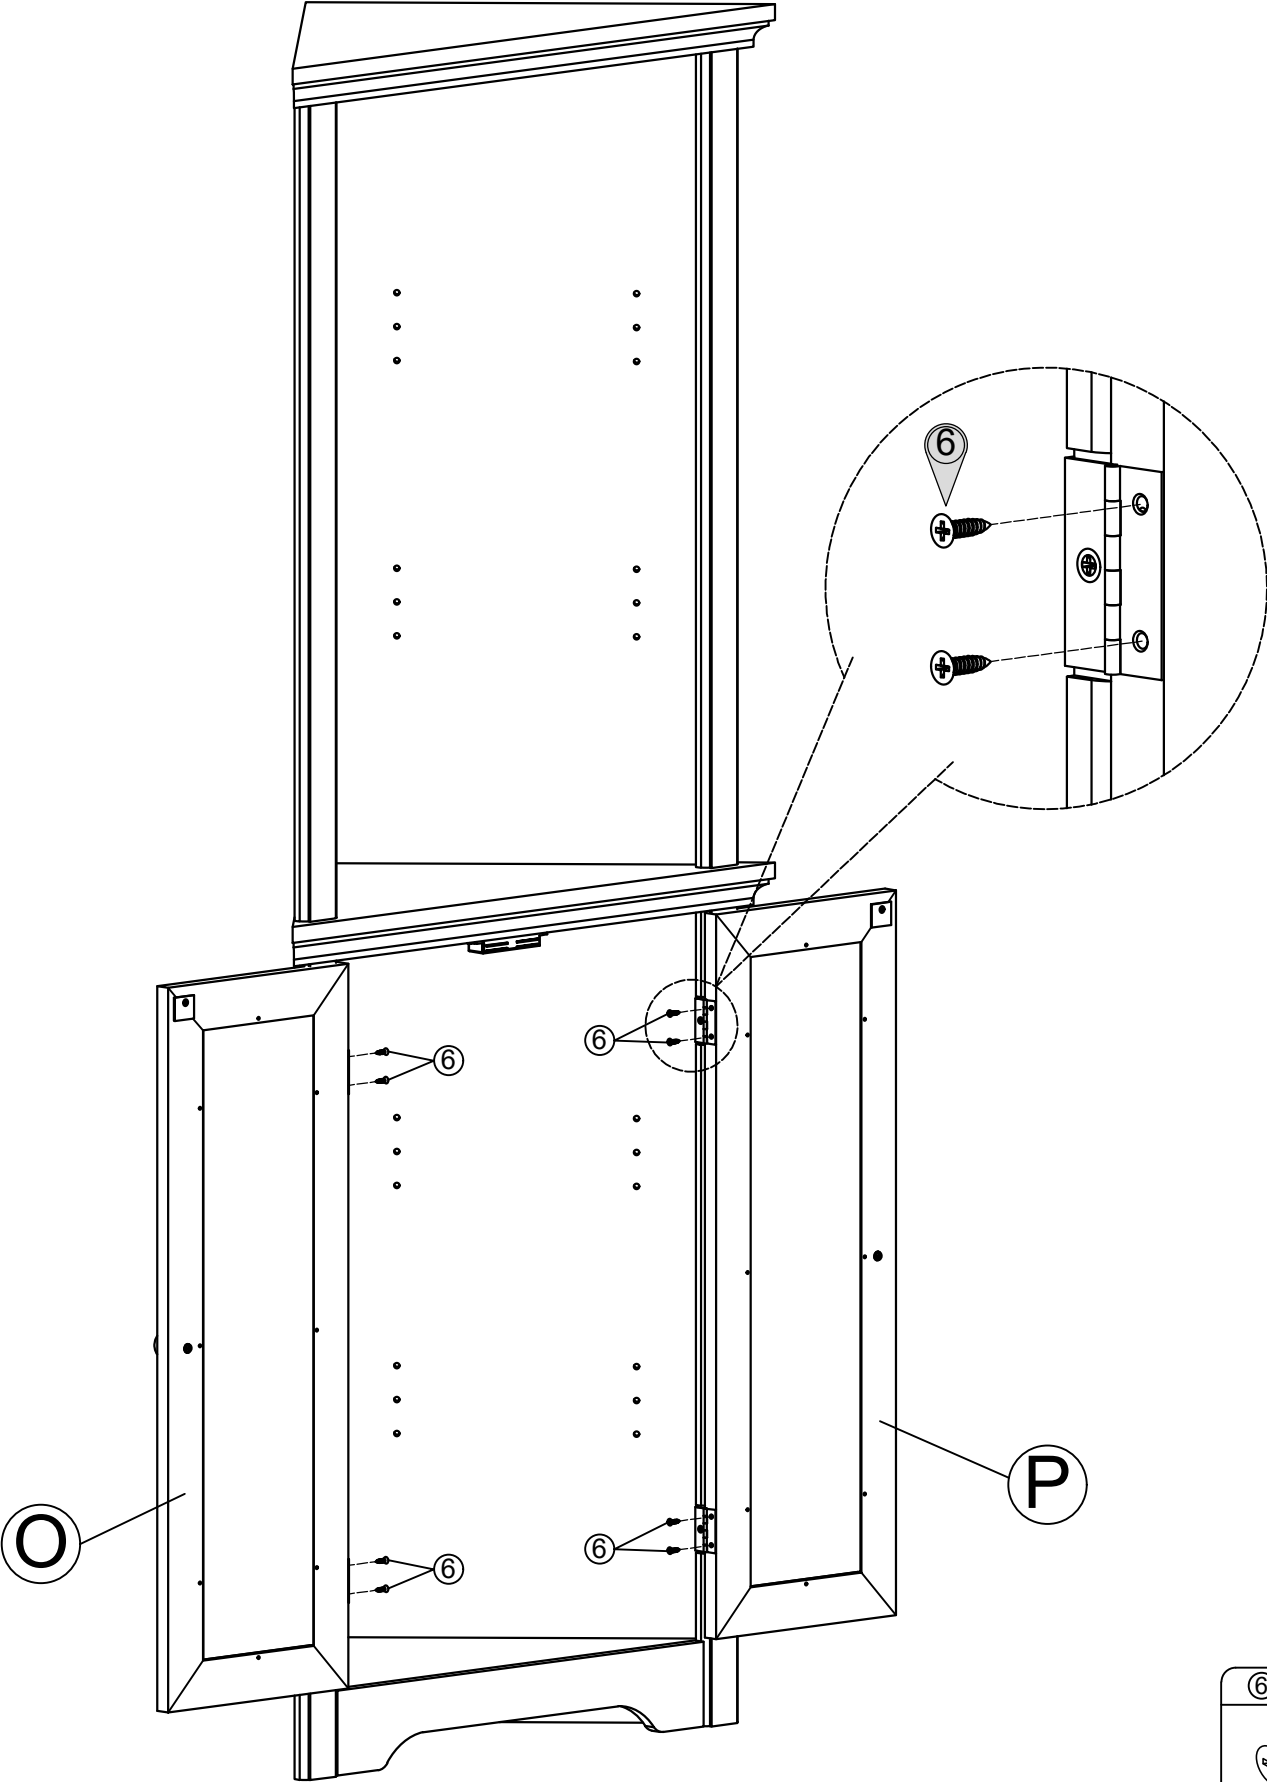

⑥	X8
	
ø3.5*14	

STEP 14

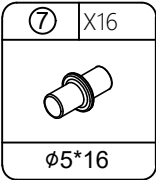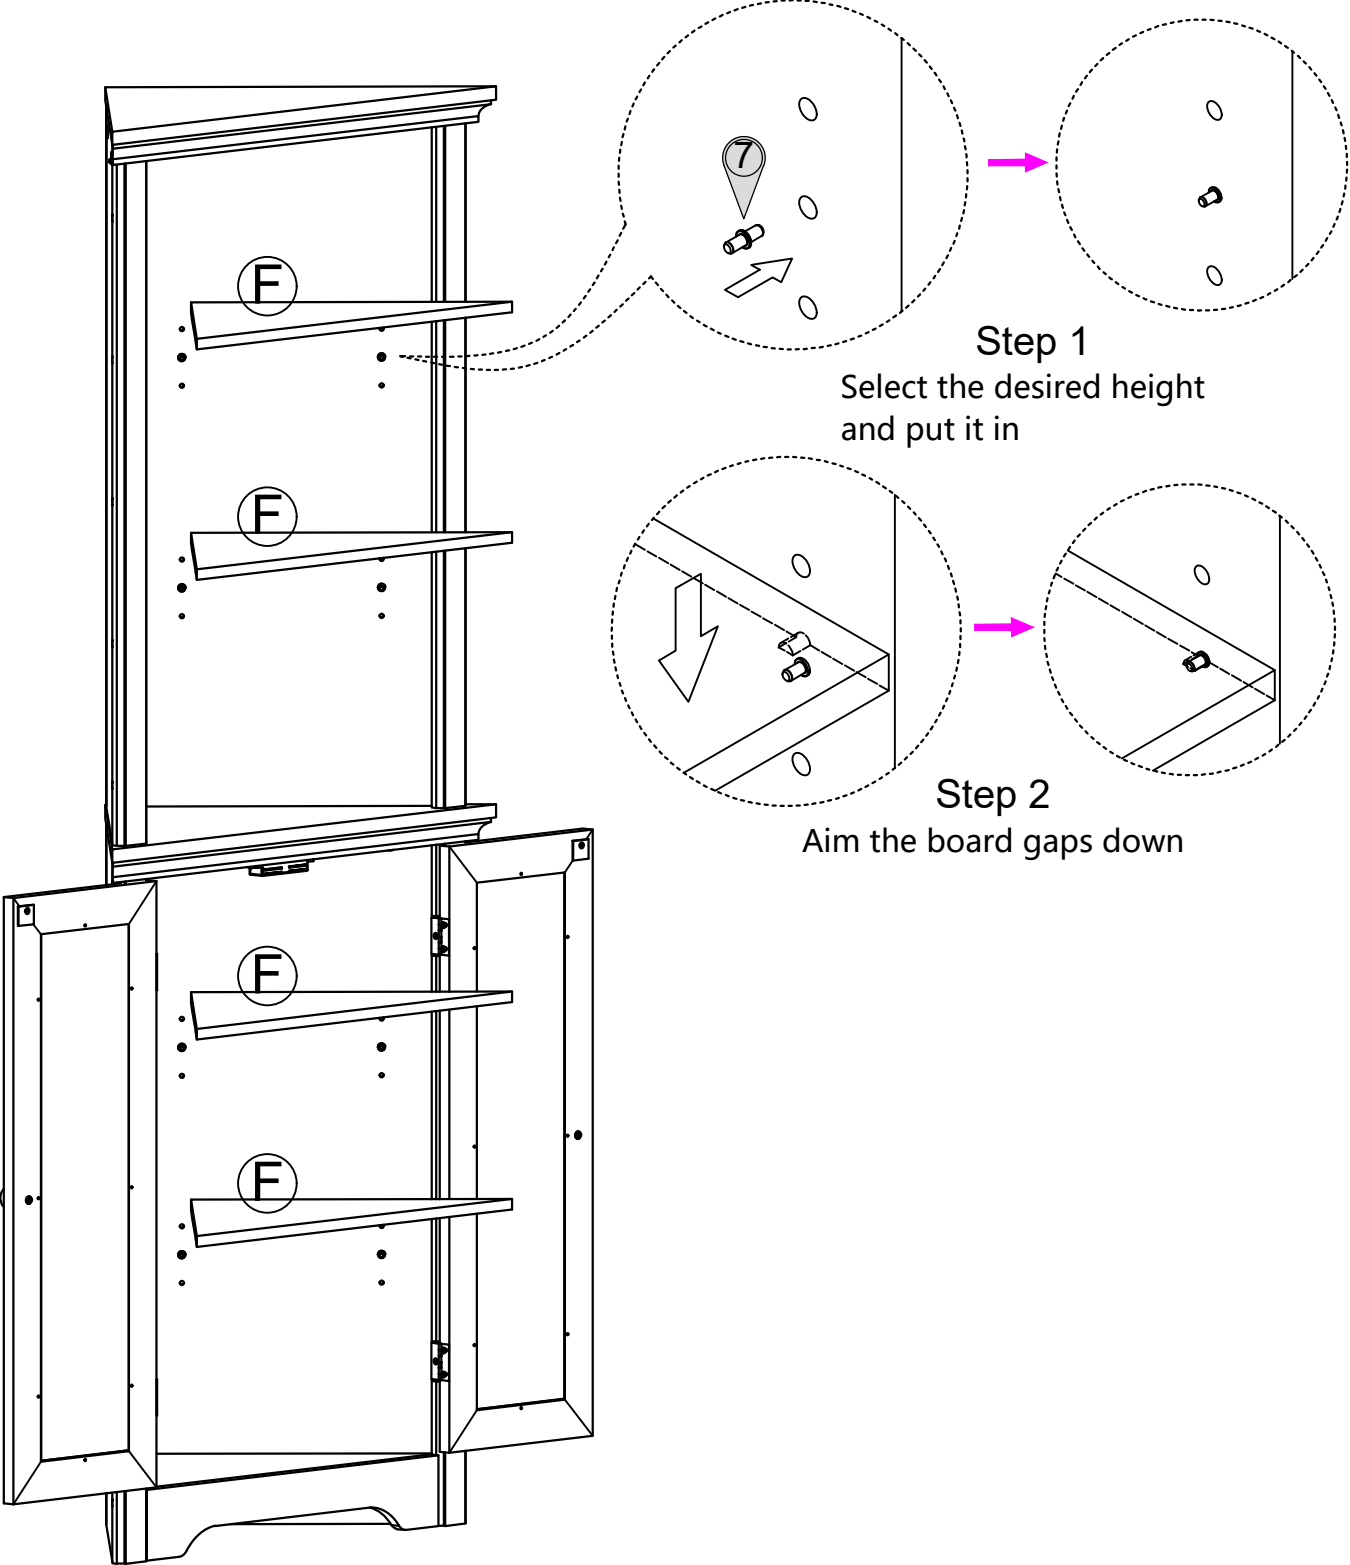


STEP 15

NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware may be required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.




Step 1

Set the hole position near the wall

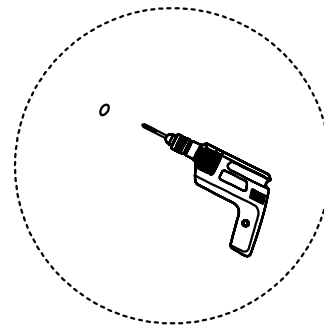


Step 2

Put the embedded part into the hole

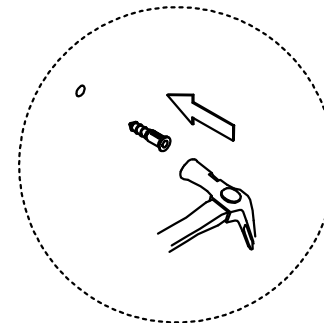

Step 3

Put the embedded part into the hole

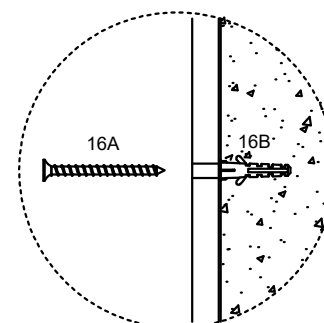

16	X2
16A	16B

